

Manual 26805 (Revision C, 7/2016)
ProAct™ ITB Integrated Actuator and Throttle Body

See manual 26168 for complete installation, operation, maintenance, and certification information. Publications can be found on our website at www.woodward.com/publications.

Important Definitions

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER**—Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING**—Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**—Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE**—Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT**—Designates an operating tip or maintenance suggestion.

 **WARNING**

The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.



Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment. Practice all plant and safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage.



This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, check manual **26455**, *Customer Publication Cross Reference and Revision Status & Distribution Restrictions*, on the *publications* page of the Woodward website: www.woodward.com/publications

The latest version of most publications is available on the *publications* page. If your publication is not there, please contact your customer service representative to get the latest copy.



Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.

NOTICE

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

NOTICE

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual **82715**, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Go to www.woodward.com/publications for complete instructions (manual 26168).

Replacement/Exchange: Replacement/Exchange is a premium program designed for the user who is in need of immediate service. It allows you to request and receive a like-new replacement unit in minimum time (usually within 24 hours of the request), providing a suitable unit is available at the time of the request, thereby minimizing costly downtime.

This option allows you to call your Full-Service Distributor in the event of an unexpected outage, or in advance of a scheduled outage, to request a replacement control unit. If the unit is available at the time of the call, it can usually be shipped out within 24 hours. You replace your field control unit with the like-new replacement and return the field unit to the Full-Service Distributor.

Flat Rate Repair: Flat Rate Repair is available for many of the standard mechanical products and some of the electronic products in the field. This program offers you repair service for your products with the advantage of knowing in advance what the cost will be.

Flat Rate Remanufacture: Flat Rate Remanufacture is very similar to the Flat Rate Repair option, with the exception that the unit will be returned to you in "like-new" condition. This option is applicable to mechanical products only.

Returning Equipment for Repair

If a control (or any part of an electronic control) is to be returned for repair, please contact your Full-Service Distributor in advance to obtain Return Authorization and shipping instructions.

When shipping the item(s), attach a tag with the following information:

- return number;
- name and phone number of contact person;
- description of the problem;
- name and location where the control is installed;
- complete Woodward part number(s) and serial number(s);
- instructions describing the desired type of repair.

Contacting Woodward's Support Organization

For the name of your nearest Woodward Full-Service Distributor or service facility, please consult our worldwide directory published at www.woodward.com/directory.

You can also contact the Woodward Customer Service Department at one of the following Woodward facilities to obtain the address and phone number of the nearest facility at which you can obtain information and service.

Products Used In Electrical Power Systems

Facility ----- Phone Number

Brazil ----- +55 (19) 3708 4800
China ----- +86 (512) 6762 6727
Germany:
 Kempen ---- +49 (0) 21 52 14 51
 Stuttgart - +49 (711) 78954-510
India ----- +91 (129) 4097100
Japan ----- +81 (43) 213-2191
Korea ----- +82 (51) 636-7080
Poland ----- +48 12 295 13 00
United States ----- +1 (970) 482-5811

Products Used In Engine Systems

Facility ----- Phone Number

Brazil ----- +55 (19) 3708 4800
China ----- +86 (512) 6762 6727
Germany ----- +49 (711) 78954-510
India ----- +91 (129) 4097100
Japan ----- +81 (43) 213-2191
Korea ----- +82 (51) 636-7080
The Netherlands -- +31 (23) 5661111
United States ----- +1 (970) 482-5811

Products Used In Industrial Turbomachinery Systems

Facility ----- Phone Number

Brazil ----- +55 (19) 3708 4800
China ----- +86 (512) 6762 6727
India ----- +91 (129) 4097100
Japan ----- +81 (43) 213-2191
Korea ----- +82 (51) 636-7080
The Netherlands -- +31 (23) 5661111
Poland ----- +48 12 295 13 00
United States ----- +1 (970) 482-5811

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

Copyright © Woodward 2014–2016
All Rights Reserved



WOODWARD

PO Box 1519, Fort Collins CO 80522-1519, USA
1000 East Drake Road, Fort Collins CO 80525, USA
Phone +1 (970) 482-5811 • Fax +1 (970) 498-3058

Email and Website—www.woodward.com

Regulatory Compliance & Declarations

General Installation and Operation Notes and Requirements:

Refer to the ProAct Digital Plus manual (26112) or ProAct Analog manual (26147) for complete actuator listing information and regulatory requirements.

Other European Compliance:

Compliance with the following European Directive does not qualify this product for application of the CE Marking:

Pressure Equipment Directive 2014/68/EU:

Exempt per Article 2.j of 2014/68/EU where pressure is not a significant design factor

Machinery Directive:

Compliant as partly completed machinery with Directive 2006/42/EC of the European Parliament and the Council of 17 May 2006 on machinery.



WARNING

EXPLOSION HAZARD—Do not remove covers or connect/disconnect electrical connectors unless power has been switched off or the area is known to be non-hazardous.

Substitution of components may impair suitability for Class I, Division 2.



AVERTISSEMENT

RISQUE D'EXPLOSION—Ne pas enlever les couvercles, ni raccorder / débrancher les prises électriques, sans vous en assurez auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non explosive.

La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2.

**DECLARATION OF INCORPORATION
Of Partly Completed Machinery
2006/42/EC**

File name: 00184-04-EU-MD-02-02
Manufacturer's Name: WOODWARD INC.

Manufacturer's Address: 3800 Wilson Avenue
Loveland, CO 80538 USA

Model Names: 85/95/105/120/135/137/160/180 mm Integrated Throttle Bodies using
the ProAct Actuators

**This product complies, where
applicable, with the following
Essential Requirements of Annex I:** 1.1, 1.2, 1.3, 1.4, 1.5, 1.6, 1.7

The relevant technical documentation is compiled in accordance with part B of Annex VII.
Woodward shall transmit relevant information if required by a reasoned request by the national
authorities. The method of transmittal shall be agreed upon by the applicable parties.

 
The person authorized to compile the technical documentation:

Name: Dominik Kania, Managing Director
Address: Woodward Poland Sp. z o.o., ul. Skarbowa 32, 32-005 Niepolomice, Poland

This product must not be put into service until the final machinery into which it is to be incorporated
has been declared in conformity with the provisions of this Directive, where appropriate.

The undersigned hereby declares, on behalf of Woodward Governor Company of Loveland and
Fort Collins, Colorado that the above referenced product is in conformity with Directive
2006/42/EC as partly completed machinery:

MANUFACTURER

Signature	
Full Name	Christopher Perkins
Position	Engineering Manager
Place	Woodward Inc., Fort Collins, CO, USA
Date	20 - JUL - 2016