



DTSC-50

Automatic Transfer Switch Controller

APPLICATIONS

The DTSC-50 digital transfer switch controller is an economical controller for open-transition (break before make) automatic transfer switch control.

<u>Utility-to-Generator application</u> Utility is preferred with a generator as the emergency source



The DTSC-50 is intended for emergency stand-by applications with a single generator. When it detects a utility failure it commands the generator to start and transfers the load to the emergency source. When utility power is restored it performs an open-transition retransfer and allows the engine to cool-down before stopping. It can be utilized in 1Ph2W, 1Ph3W, 3Ph3W and 3Ph4W Systems.

The DTSC-50 displays voltage and frequency values for each phase, as well as engine hours, maintenance hours and number of transfers. Active alarms are annunciated via the seven segment LED display. Seperate LEDs show breaker status and source availability. Sealed soft-keys enable the user to start the generator and operate the transfer switch manually.

Password-protected programming can be accomplished through the front face or with a PC. Parameter limits and timers for utility and generator monitoring are freely programmable, adding a level of flexibility in the DTSC-50 not found in most lower-end ATS controls.

The unit is fully enclosed in a plastic housing for safety and has removable terminal blocks for easy wiring.

Open-transition transfer switch designs frequently use interposing relay logic to ensure that the utility and generator circuit breakers can't be closed at the same time, adding cost and wiring. The DTSC-50 uses breaker position reply signals to interlock the breakers internally, eliminating the need for external relays. The controller can also be configured to ignore breaker replies if they are unavailable, for instance in retrofit applications.

DESCRIPTION

I/O set

- 1 or 3 phase generator and mains true rms voltage, measuring inputs: rated 480 Vac (max. 600 Vac)
- 2 configurable discrete inputs
- 3 programmable output relays

Protection & Monitoring

Protection

Configurable fail and restore limits/timers for:

- $\circ \ \, \text{Over} \, \text{/} \, \, \text{under voltage}$
- ANSI (59/27) ANSI (810/U)
- Over / under frequency

ANSI (47)

- o Phase rotation
- ANSI (47
- Switch monitoring
- Switch position feedback
- o Transfer failure

Features

- · Open transition transfer
- 6-digit, 7-segment LED for
 - o display of measuring values (V, f)
 - o display of counters
 - $\circ \, \text{display of alarms} \\$
- Configurable trip levels/delays
- · Customizable display using paper-strips
- Counters for:
 - Operation hours
 - Maintenance
 - Number of starts
 - Number of transfers
- · Removable terminal blocks for easy wiring
- Configurable via PC and/or front panel
- Password protection


- AMF/loss of mains auto start/stop
- Open transition transfer
- Auto/manual operation
- Remote Start input
- "Lock in Auto mode" input
- "Lock in Manual mode" input
- Utility-to-Generator applications
- True R.M.S. voltage sensing
- LEDs for source availability and breaker status
- Freely configurable discrete I/O
- Adjustable timers
- Fully-enclosed housing
- Removable terminal blocks
- Internal breaker interlock utilizing discrete inputs for breaker position detection
- PC and/or front display configuration
- Password protection
- Eventlog (15 Events)
- UL/cUL Listed


SPECIFICATIONS

Intrinsic consumption	12/24 Vdc (6.5 to 32.0 Vdc) max. 10 W
Ambient temperature (operation)	20 to 70 °C / -4 to 158 °F
	20 to 85 °C / -4 to 185 °F
	95 %, non-condensing
	(.\/ <u>\</u>
	277/480 Vac
	346/600 Vac
	300 Vac
	4.0 kV
	1.3 x V _{rated}
	40 (mains) or 15 (generator) to 85 Hz
	Class 1
	2.0 MΩ
Max. power consumption per path.	

Discrete innuts	isolated
Input range	12/24 Vdc (6.5 to 32.0 Vdc)
Input raciatores	27 Vac (0.5 to 52.0 Vac)
	approx. 6.7 kΩ
	isolated
	AgCdO
Load (GP)	2.00 Aac@250 Vac
2.00 Adc@24 Vdc	/ 0.36 Adc@125 Vdc / 0.18 Adc@250 Vdc
Pilot duty (PD)	
1.00 Adc@24 Vdc	/ 0.22 Adc@125 Vdc / 0.10 Adc@250 Vdc
Housing	Flush-mountType Woodward
Dimensions	158×158×40 mm
Front cutout	138[+1.0]×138[+1.0] mm
Connection	screw/plug terminals 2.5 mm²
	0.5 Nm
Housing	insulating surface
Protection system	with correct installation
	FrontIP54 pending
Weight	approx. 450 g
	sted according to applicable EN guidelines
	4G, 5 to 100 Hz
Endurance Vibration	4G, 30 Hz, 1.5 h
	1.04Grms, 10 to 500 Hz, 2 h
	40G peak, 11 ms
Lietinge	UL/cUL
go	


DIMENSIONS

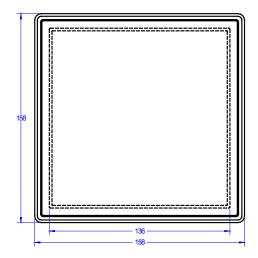

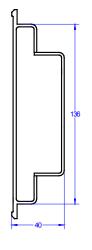





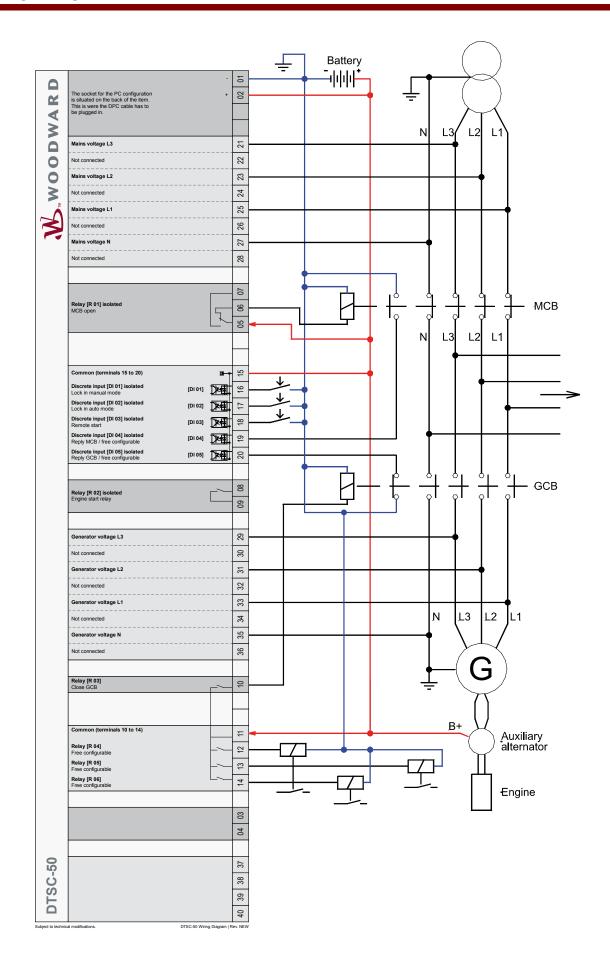



CONTACT

North & Central America

Tel.: +1 970 962 7331 ⊠SalesPGD_NAandCA@woodward.com

South America

Tel.: +55 19 3708 4800 ⊠ SalesPGD SA@woodward.com

Europe

Tel. Stuttgart: +49 711 78954 510
Tel. Kempen: +49 2152 145 331

SalesPGD_EUROPE@woodward.com

Middle East & Africa

Tel.: +971 2 6275185 ☑ SalesPGD_MEA@woodward.com

Russia

Tel.: +7 812 319 3007 ⊠ <u>SalesPGD_RUSSIA@woodward.com</u>

China

Tel.: +86 512 8818 5515 ⊠ SalesPGD CHINA@woodward.com

India

Tel.: +91 124 4399 500 ⊠ <u>SalesPGD INDIA@woodward.com</u>

ASEAN & Oceania

Tel.: +49 711 78954 510 ⊠ SalesPGD ASEAN@woodward.com

www.woodward.com

Subject to alterations, errors excepted.

Subject to technical modifications.

This document is distributed for informational purposes only. It is not to be construed as creating or becoming part of any Woodward Company contractual or warranty obligation unless expressly stated in a written sales contract.

We appreciate your comments about the content of our publications. Please send comments including the document number below to stqt-doc@woodward.com

© Woodward All Rights Reserved

For more information contact:

FEATURES OVERVIEW

Digital Transfer Switch Controller		DTSC-50
Measuring	<u>L</u>	
Source voltage	rated 480 Vac	✓
(1phase/2-wire or 3phase/4-wire configurable)	rated 480 Vac	•
- True R.M.S.	max 600 Vac	✓
Breaker Control	_	
Open transition (break-before-make)		✓
Application	<u> </u>	
Utility to generator		✓
Features		
AMF/loss of utility, auto generator start/stop		√
Display of measuring values (V, f), 6-digit, 7-segment	LED	√
Status LEDs for source availability and breaker state		✓
Configurable trip levels		✓
Adjustable timers		✓
Counters for operation and maintenance hours, numb	er of transfers	✓
Fully-enclosed plastic housing for safety		✓
Removable terminal blocks		✓
Internal interlock prevents breakers from closing simu	Itaneously	✓
Manual operation		✓
Flush-mounting (screw or clamp fastening)		✓
Configurable automatic mains stable timer bypass in	case of a	✓
genset failure.		,
Eventlog (Max. 15 events – Readout via Serial interfa	ace only)	<u> </u>
Accessories	T T	
Soft-keys		<u>√</u>
Configuration via PC #1		√
Password protection		<u> </u>
Monitoring	ANSI#	
Source: voltage	59/27	<u>√</u>
Source: frequency	81O/81U	√
Source: voltage asymmetry	47 47	<u>√</u>
Source: Phase rotation error Switch: Open/close failure detection	41	→
Engine : Start fail monitoring		<u> </u>
Engine: Unintended Stop monitoring		<u> </u>
I/Os	<u></u>	•
"Lock in AUTO mode" input		1
"Lock in MANUAL mode" input		1
Configurable discrete inputs		2
Configurable discrete inputs Configurable discrete outputs		3
Discrete outputs for GCB and MCB control		2
Potential-Free Engine start contact (2 amp)		1
Direct configuration interface #1		<u> </u>
Listings/Approvals	<u> </u>	· ·
UL/cUL Listed		√
NO COLUMN LIGHT	ll l	•
	<u></u>	
Part Numbers Front panel mounting with display	P/N 8440-	1894

^{#1} Configuration software available free at Woodward.com, connection requires Woodward DPC cable P/N 5417-557