

Product Specification 37548B



easYgen-2200/2300/2500

# Genset Control for Multiple Unit Operation

## **DESCRIPTION**

The easYgen-2000 Series is a compact, affordable genset control and protection package for load sharing up to 16 gensets in island operation, or parallel operation of a single unit with a utility. Its integrated load dependent start/stop programming allows you to define how gensets are brought on- and off-line to support changing load demands. It equally works with a mix of different sized engines, so you can maintain the spinning reserve you need while optimizing fuel efficiency.

The easYgen-2000 Series works with many common industrial interfaces: CANopen for peer-to-peer load sharing; J1939 for engine ECU; Modbus RTU for PLC, HMI, and SCADA; and modem for remote control and programming using Woodward ToolKit software.

 $FlexApp^{TM}$  – This feature provides the tools to easily configure the number of operated breakers: None, GCB, GCB and MCB.

**LogicsManager**<sup>™</sup> – Woodward's LogicsManager enables to change the operation sequences and adapt them to specific needs. The LogicsManager accomplishes this by monitoring a range of measuring values and internal states, which are combined logically with Boolean operators and programmable timers. This enables to create and/or modify control and relay functions.

FlexIn<sup>™</sup> – The analog inputs are configurable to operate with VDO, resistive, and/or 0 to 20 mA senders.

**Flexible Outputs** – Speed and voltage bias outputs are configurable to function with all speed governors and voltage regulators. The outputs can also be used as freely scalable outputs (e.g. for driving external meters).

**FlexCAN™** – Flexible and isolated CAN bus providing different protocols: CANopen protocols; coupling of IKD 1 expansion cards (up to 16Dls/16DOs) as well as of 3rd party expansion cards (request more detailed information from our sales department). ECU 1939 communication with start/stop and alarm management.

#### **FEATURES**

- · Operation modes: Auto, Stop, Manual, and Load/No Load test modes via discrete input possible
- Breaker control: Slip frequency / phase matching synchronization, open-close control, breaker monitoring
- Load transfer features: open / closed transition, interchange, soft loading / soft unloading, mains parallel
- Remote control via interface and discrete/analog inputs for adjusting speed, frequency, voltage, power, reactive power, and power factor set points
- Active power and reactive power load sharing with up to 16 units including load-dependent start/stop
- Neutral interlocking function to ensure only one of the running generators is bridged to earth
- Operating hours/start/maintenance counters Operating hours also available from a connected ECU via J1939/CAN
- Supported ECU: Scania EMS/S6, Deutz EMR2, Volvo EMS2, MTU ADEC ECU7/8, Woodward EGS, MAN EDC 7, SISU EEM2/3, Cummins, Perkins and J1939 standard messages
- Event recorder (300 events, FIFO) with real time clock (battery backed; min. 5 years)
- 128x64 dot graphical interactive LC display with soft keys
- · Start/stop logic for Diesel/Gas engines
- Engine pre-glow or purge control
- Warm-up control via timer or coolant temperature
- PC and/or front panel configurable (ToolKit software)
- Multi-level password protection
- Discrete I/O expansion board connectivity (Woodward IKD 1 or Phoenix Contact IL series)
- Multi-lingual capability (11 languages in 1 unit configurable: English, German, French, Spanish, Chinese, Japanese, Italian, Portuguese, Turkish, Russian, Polish)

- Island, mains parallel & AMF operation
- Load sharing and loaddependent start/stop for up to 16 units
- Synchronization with phase matching and slip frequency
- Load transfer programs
- · Soft loading features
- Open/closed transition
- CANopen / J1939 ECU Control
- Freely configurable discrete & analog I/Os
- Multi-lingual display
- Fast configuration by partial setting files
- Modbus RTU Protocol
- Neutral interlocking function
- Generator kWh/kvarh meter
- Dynamic mains stabilization (as per BDEW)
- QV monitoring


# **SPECIFICATIONS**

Power supply	12/24 Vdc (8 to 40 Vdc)
Intrinsic consumption	max.~ 8 W (easYgen-2200)
	max~ 12 W (easYgen-2500)
Ambient temperature (operation)	20 to 70 °C / -4 to 158 °F
Ambient temperature (storage)	
Ambient humidity	
Voltage	
	69/120 Vac
	86/150 Vac
	– ground150 Vac
Surge volt.(V <sub>surge</sub> )	2.5 kV
	277/480 Vac
	346/600 Vac
	– ground300 Vac
	4.0 kV
Accuracy	Class 1
Linear measuring range	1.25×V <sub>rated</sub>
Measuring frequency	
High Impedance Input; Resistance per	
Max. power consumption per path	
Current (Isolated) Rated (I <sub>rated</sub> )	[1]/1 A or [5]/5 A
Linear measuring range	
D 1	Imains/ground = 1.5×Irated
Burden	
Rated short-time current (1 s)	
Discrete inputs	ISOIATED
Input range	12/24 Vdc (8 to 40 Vdc)
Input resistance	approx. 20 kOnms


Contact material  Load (GP)2.00 Add  Pilot duty (PD)	@24 Vdc / 0.22 Adc@125 Vdc / 0.10 Adc@250 Vdc	
Analog inputs (none	isolated)freely scalable	
	0 to 500 Ohms / 0 to 20 mA	
	11 Bit	
	ated)freely scalable± 10 V / ± 20 mA / PWM	
Insulation voltage (co	ntinuously)100 Vac	
	(≤ 5s)1000 Vac	
± 10 V (scalable)	internal resistance ~ 500 Ohms	
± 20 mA (scalable)	maximum load 500 Ohms	
Housing	Front panel flush mountingPlastic housing	
Dimensions	WxHxD219 × 171 × 61 mm (easYgen-2200/2300)	
Front cutout	WxHxD219 × 171 × 98 mm (easYgen-2500) WxH	
	screw/plug terminals 2.5 mm <sup>2</sup>	
	insulating surface	
	Front IP65 (with screw fastening)	
Ü	FrontIP54 (with clamp fastening)	
	Back IP20	
	approx. 800 g (easYgen-2200/2300)	
	approx. 1,100 g (easYgen-2500)	
Listings	LR (Type Approval), ABS (Design Assessment)	
wai 1116		
	)tested according to applicable EN guidelines	

# **DIMENSIONS**

## easYgen-2200/2300

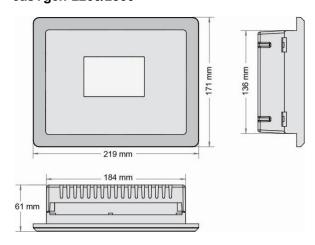

## easYgen-2500

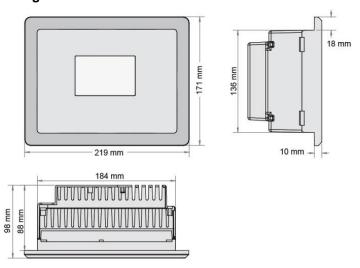

#### TERMINAL DIAGRAM easYgen-2200 FWM, Vide ±10 Vide ±20 mM PWM ANALOG OUTPUT 43 COMMON 10 соммон 0 to 500 0hm 0/4 to 20 mA ANALOG INPUTS R 01 02 + AI 01 31 44 11 → DI01 03 + AI 02 12 45 → DI02 32 04 GND + AI 03 13 33 → DI03 46 05 L1 14 120 Vac 47 DI 04 34 06 12 15 480 Vac 35 48 → DI05 49 07 L3 16 120 Vac 36 → DI06 L2 37 50 08 52 (OR GROUND C.) MAINS CURRENT 17 → DI 07 480 Vac Differences between packages: 09 s1 18 51 → DI08 120 Vac 38 L3 19 39 52 D+ Aux. Excitation 480 Vac easYgen-2200 P1 20 120 Vac 40 53 12/24Vdc 21 480 Vac 41 54 0 Vdc MPU 22 120 Vac 55 H Function Earth L1 23 480 Vac **BUSBAR VOLTAGE** 57 24 120 Vac L2 56 CAN-L 58 CAN-L CAN#2 25 480 Vac CAN#1 59 CAN-H 26 120 Vac 57 L3 27 480 Vac easYgen-2200 P2 28 120 Vac easYgen-2300 43 COMMON ≱ A0 01 01to 500 Ohm 0/4 to 20 mA ANALOG INPUTS ±10 Vdc ±20 mA PWM ANALO OUTPIN 02 44 11 + AI 01 31 → DI 01 03 12 + AI 02 32 45 + AI 03 04 GND 13 33 46 GENERATOR 05 L1 14 34 47 120 Vac DI 04 L1 06 L2 35 48 DI 05 15 480 Vac 07 L3 16 36 49 → DI 06 120 Vac L2 17 37 50 08 480 Vac → DI 07 BIASING OUT Differences between packages: 09 18 51 38 → DI 08 120 Vac L3 19 39 R 05 52 D+ Aux. Excitation 480 Vac 20 40 120 Vac 53 12/24 Vdc POWER easYgen-2300 P1 21 54 0 Vdc 480 Vac 41 56 RS-485-B (RXD+) **≦** 22 120 Vac 55 H Function Earth L1 RS-485-A (RXD-) 🖄 23 480 Vac 56 24 57 120 Vac L2 58 CAN-L 25 480 Vac CAN #1 56 CAN-L CAN#2 59 CAN-H 26 120 Vac 57 L3 27 480 Vac easYgen-2300 P2 28 120 Vac 29 480 Vac easYgen-2500 (P1) COMMON #10/dc PE #20 mA PWM CE PWM CE ANALOG OUTPUT ĕ AO 01 ANALOG INPUTS 02 + AI 01 81 CAN-H CAN bus 2 11 31 44 94 → DI 01 O ON SO ON ANALOG OUTPUTS 03 12 + AI 02 45 → DI 02 62 82 95 GND 32 04 GND 13 + AI 03 33 63 83 Shield 46 → DI 03 96 05 L1 14 120 Vac 47 → DI 04 64 84 97 L1 06 L2 15 480 Vac 35 → DI 05 65 V4 to 20 mA 98 48 85 AO 04 07 цз 49 66 99 16 120 Vac 36 → DI06 86 L2 GND AI 04 90 Ohms + 0 to 200 mA 37 67 87 08 52 17 480 Vac 50 → DI 07 100 09 s1 18 → DI08 68 101 / Function Earth 120 Vac 38 51 L3 102 RS-485-A (RXD-) D+ Aux. Excitation 19 480 Vac 39 52 89 103 RS-485-B (RXD+) 20 70 120 Vac 40 53 12/24 Vdc 90 91 104 71 GND 21 480 Vac 41 54 0 Vdc Function Earth 92 Shield 72 105 22 120 Vac 55 L1 23 480 Vac 73 56 MPU 57 74 107 24

58

CAN-L

59 CAN-H

75

76

77

78

79

COMMON

OI IO O DI SCRETE

120 Vac L2

120 Vac L3

25 480 Vac

26

27 480 Vac 28 120 Vac

29 480 Vac



#### CONTACT

North & Central America Tel.: +1 (208) 278 3370

South America Tel.: +55 19 3708 4800

Europe

Tel.: +49 711 78954 510

Middle East & Africa Tel.: +971 (2) 678 4424

Russia

Tel.: +49 711 78954-515

China

Tel.: +86 512 8818 5515

India

Tel.: +91 124 4399 500

**ASEAN & Oceania** Tel.: +49 711 78954 510

**SALES SUPPORT** 

industrial.salesPG@woodward.com

**TECHNICAL SUPPORT** 

industrial.support@woodward.com

www.woodward.com

Subject to alterations, errors excepted.

Subject to technical modifications.

This document is distributed for informational purposes only. It is not to be construed as creating or becoming part of any Woodward Company contractual or warranty obligation unless expressly stated in a written sales contract.

We appreciate your comments about the content of our publications. Please send comments including the document number below to

stgt-doc@woodward.com

#### © Woodward

#### **All Rights Reserved**

For more information contact:

37548B - 2021/08/Stuttgart

### **FEATURES OVERVIEW**

Ти					
EASY GEN Model / Package	2200 P1	2200 P2	en-2000 I 2300 P1	2300 P2	2500 P1
Measuring	220011	ZZOOTZ	200011	200012	200011
Generator voltage (3-phase/4-wire)	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
Generator current (3x true r.m.s.)	· ✓	· ✓	· ✓	✓ ·	✓ ·
Mains / Bus bar voltage (3-phase/4-wire)	· ✓	· ✓	· ✓	✓ ·	· ✓
Mains or ground current (1x true r.m.s.) #1	✓	✓	-	-	<b>✓</b>
Control					
Different Breaker Operation modes FlexApp™	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
Automatic, Manual, and Stop operating modes		· /	<i>'</i>	· /	· ·
Single unit mains parallel operation	<b>√</b>	· ✓	· ✓	✓	<i>✓</i>
Multiple-unit island parallel operation (up to 16 units)	<b>√</b>	· ✓	· ✓	✓ ·	· ✓
AMF (auto mains failure operation)		· ✓	<b>√</b>	<b>√</b>	✓ ·
Stand-by operation	<b>√</b>	✓	✓	✓	<b>✓</b>
Critical mode operation	✓	✓	✓	✓	<b>✓</b>
GCB and MCB synchronization (slip synchronization / phase matching)	<b>√</b>	✓	✓	✓	✓
Open (break-before-make) and closed (make-before-break) transition	✓	✓	✓	✓	✓
Interchange	✓	✓	<b>√</b> #7	<b>√</b> #7	✓
Load-dependent start/stop	✓	✓	✓	✓	✓
n/f, V, P, Q, and PF remote control via analog input or interface	✓	✓	✓	✓	✓
Load/var sharing for up to 16 gensets	✓	✓	✓	✓	✓
Start/stop logic for Diesel/Gas engines	✓	✓	✓	✓	✓
HMI	! <u> </u>				
Soft keys (advanced LC display)	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
Generator kWh/kvarh meter	✓	✓	· ✓	✓ ·	<i>✓</i>
Operating hours/start/maintenance counter	<b>✓</b>	<b>√</b>	· ✓	✓	✓ ·
Configuration via PC #2	<b>√</b>	✓	<b>√</b>	<b>√</b>	<b>✓</b>
Event recorder entries with real time clock (battery backup)	300	300	300	300	300
Protection ANSI#	<u>.</u>				
Generator: voltage/frequency 59/27/810/81U	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
Generator: overload, reverse/reduced power 32/32R/32F	· /	· /	· ✓	· ✓	· ✓
Generator: unbalanced load 46	· ✓	· ✓	· ✓	√ ·	·
Generator: instantaneous overcurrent 50 / 51V	<b>✓</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>
Generator: time-overcurrent (IEC 255 compliant) 51 / 51V	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	✓ ·
Generator: ground fault 50G	<b>√</b>	✓	<b>√</b> #3	<b>√</b> #3	<b>✓</b>
Generator: power factor 55	✓	✓	✓	✓	✓
Generator: rotation field	✓	✓	✓	✓	✓
	via Speed				via Speed
Engine: overspeed/underspeed 12/14	input		_		input or
Lingine: overspeed/underspeed		via ECU	_	via ECU	ECU
		[CAN/J1939]		[[CAN/J1939]	[CAN/J1939]
Genset: speed/frequency mismatch	<b>√</b>	<b>√</b>	-	<b>√</b>	<b>√</b>
Engine: D+ auxiliary excitation failure	<b>V</b>	✓	✓ ✓	<b>√</b>	✓
Mains: voltage/frequency/phase shift/ROCOF 59/27/810/81U	✓	✓	<b>V</b>	<b>V</b>	✓
Mains: rotation field	<b>✓</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>✓</b>
		<b>V</b>	<u> </u>	, , , , , , , , , , , , , , , , , , ,	<b>V</b>
I/Os					
Speed input (magnetic/switching; Pickup)	<b>√</b>	-	-	-	<b>√</b>
Discrete alarm and control inputs (configurable)	8	8	8	8	10
Discrete outputs (configurable)  LogicsManager™  CAN and a configurable	6	6	6	6	11
External discrete inputs / outputs via CANopen (maximum) #4 Analog inputs (configurable)  FlexIn™	16 / 16	16 / 16	16 / 16	16 / 16	16 / 16
Analog inputs (configurable) FlexIn™  Analog outputs (+/- 10V, +/- 20mA, PWM; configurable)	3	3	3 2 <sup>#6</sup>	2 <sup>#6</sup>	4
CAN bus communication interfaces  FlexCAN <sup>TM</sup>	1	1 2	1	2	2
RS-485Modbus RTU Slave interface	-	-	1	-	1
Service Port (USB or RS-232) - Woodward DPC cable required #2	- -	- ✓		<u>-</u>	
, , , , , , , , , , , , , , , , , , ,		,	,	·	
Listings/Approvals					
UL / cUL listing	<b>√</b>	<b>√</b>	-	-	<b>√</b>
GOST-R	<b>√</b>	<b>√</b>	-	-	<b>√</b>
LR & ABS Marine	<b>√</b>	<b>√</b>	-	-	<b>√</b>
CE Marked	<b>✓</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>
P/Ns	2200 P1	2200 P2	2300 P1	2300 P2	2500 P1
easYgen 1A CT inputs / front panel mounting with display #5 P/N	8440-1856	8440-1858	-	-	8440-1860
easYgen 5A CT inputs / front panel mounting with display #5 P/N	8440-1855	8440-1857	8440-2080	8440-2058	8440-1884
easYgen (5A CT inputs) and EPU-100 as <b>Asynchron KIT</b>			8923-2074		
(see ProductSpec 37568)  #1 mains or ground current selectable	II				

via serial (external Woodward DPC cable required – USB connector: P/N 5417-1251 / RS-232 connector: P/N 5417-557) or CAN connection by ToolKit software calculated ground current

it is possible to connect up to two digital IO expansion boards (P/N 8440-2116), which provide 8 additional DIs and DOs each a screw and a clamp kit are delivered with the unit for fastening

external resistor (500 Ohms) for voltage mode is part of delivery

Soft interchange from generator to mains but hard interchange from mains to generator