



**Product Manual 54007**  
**(Revision A)**  
Original Instructions

**EGB-2P Governor Actuator Installation  
on Detroit Diesel V-71 and V-92 Engines**

**Kit Installation Manual**



### General Precautions

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions.

Failure to follow instructions can cause personal injury and/or property damage.



### Revisions

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, on the *publications page* of the Woodward website:

[www.woodward.com/publications](http://www.woodward.com/publications)

The latest version of most publications is available on the *publications page*. If your publication is not there, please contact your customer service representative to get the latest copy.



### Proper Use

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.



### Translated Publications

If the cover of this publication states "Translation of the Original Instructions" please note:

The original source of this publication may have been updated since this translation was made. Be sure to check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, to verify whether this translation is up to date. Out-of-date translations are marked with . Always compare with the original for technical specifications and for proper and safe installation and operation procedures.

**Revisions**—Changes in this publication since the last revision are indicated by a black line alongside the text.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

## Warnings and Notices

### Important Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER**—Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING**—Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**—Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE**—Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT**—Designates an operating tip or maintenance suggestion.

#### **WARNING**

**Overspeed /  
Overtemperature /  
Overpressure**

The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

#### **WARNING**

**Personal Protective  
Equipment**

The products described in this publication may present risks that could lead to personal injury, loss of life, or property damage. Always wear the appropriate personal protective equipment (PPE) for the job at hand. Equipment that should be considered includes but is not limited to:

- Eye Protection
- Hearing Protection
- Hard Hat
- Gloves
- Safety Boots
- Respirator

Always read the proper Material Safety Data Sheet (MSDS) for any working fluid(s) and comply with recommended safety equipment.

#### **WARNING**

**Start-up**

Be prepared to make an emergency shutdown when starting the engine, turbine, or other type of prime mover, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.

#### **WARNING**

**Automotive  
Applications**

On- and off-highway Mobile Applications: Unless Woodward's control functions as the supervisory control, customer should install a system totally independent of the prime mover control system that monitors for supervisory control of engine (and takes appropriate action if supervisory control is lost) to protect against loss of engine control with possible personal injury, loss of life, or property damage.

**NOTICE****Battery Charging  
Device**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

## Electrostatic Discharge Awareness

**NOTICE****Electrostatic  
Precautions**

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts:

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual **82715**, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Follow these precautions when working with or near the control.

1. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
2. Do not remove the printed circuit board (PCB) from the control cabinet unless absolutely necessary. If you must remove the PCB from the control cabinet, follow these precautions:
  - Do not touch any part of the PCB except the edges.
  - Do not touch the electrical conductors, the connectors, or the components with conductive devices or with your hands.
  - When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.


# EGB-2P Governor Actuator Installation on Detroit Diesel V-71 and V-92 Engines

## Introduction

These instructions are for the conversion from the Woodward SG governor to the Woodward EGB-2P actuator.

For information about electric controls, see manuals:

- 25070, Electronic Control Installation Guide
- 82510, Magnetic Pickups and Proximity Switches for Electronic Controls
- 82570, EGB-2P Governor Actuator
- 82575, EGB-1P/2P Governor Actuator product specification

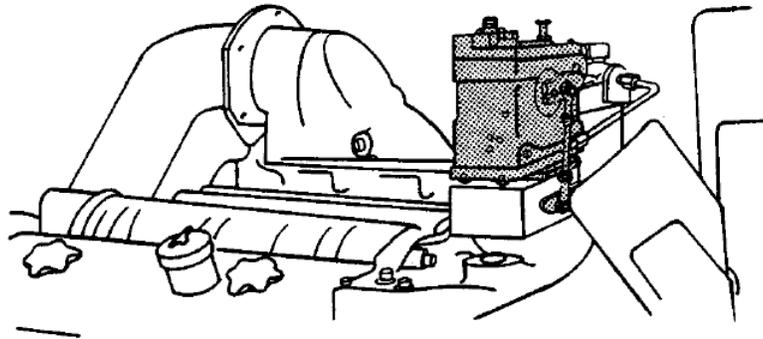

## Parts List

The installation kit is for use on the Detroit Diesel V-71 and V-92 engines with drives designed for the Woodward SG governor. The parts are sold in kit number 8956-163 which includes item 1 through 6. Items may be purchased separately.

When ordering installation replacement parts, give the following information:

- Manual number 54007
- Part reference number, name of part, or description of part

Ref. No.	Part Name .....	Quantity
54007-1	Spacer - 0.344 10 x 562 00 x .500 .....	1
54007-2	Washer - 0.312 Hi Collar Lock .....	1
54007-3	Screw - 0.312 18 x 1.500 Hex Hd. Cap .....	1
54007-4	Rod 0.312-24 R.H.-L.H. x 5.750 .....	1
54007-5	Drain Adapter Gasket .....	1
54007-6	Bushing - Magnetic Pickup .....	1

**IMPORTANT**

Items 7 through 12 are not made available by Woodward. They are normally included by the engine manufacturer as part of the SG governor installation arrangement.

Ref. No.	Part Name	Quantity
54007-7	Lever	1
54007-8	Rod End - Size 5 R. H.	1
54007-9	Jam Nut - .0312-24 RH.	1
54007-10	Jam Nut - 0.312-24 L.H.	1
54007-11	Rod End - Size 5 L.H.	1
54007-12	Lever - Control Link Shaft	1
54007-13-15	NOT USED	

**Optional Parts Available from Woodward**

Ref. No.	Part Name	Quantity
54007-16	Kit - Connector Assembly Clamp and 2 Pin 90° Kit includes the following parts:	1
54007-17	Plug - 2 Contact (socket) 90°	1
54007-18	Cable Clamp - MS 3057-4A	1
54007-19	Cable Clamp Bushing - MS 3420-4	1

Ref. No.	Part Name	Quantity
54007-20	Kit - Connector Assembly 2 Pin Straight Kit includes the following parts:	1
54007-21	Plug - Elect. Conn. Size 12-5 Straight	1
54007-22	Cable Clamp - MS 3057-4A	1
54007-23	Cable Clamp Bushing - MS 3420-4	1

Ref. No.	Part Name	Quantity
54007-29	Magnetic Pickup Assembly Kit includes the following parts which may be ordered separately:	1
54007-30	Plug - MS 3106-A 105-L-45	1
54007-31	Cable Clamp - MS 3057-4A	1
54007-32	Cable Clamp Bushing - MS 3420-4	1
54007-33	Magnetic Pickup	1

**Actuator Installation**

See Figure 1 to install the EGB-2P actuator on engine.

**IMPORTANT**

When converting from the SG governor to the EGB-2P governor actuator, it is necessary to change to a longer vertical drive. See Detroit Diesel Service Bulletin 22-D-75.

1. Remove the SG governor from engine.
2. Install drain adapter gasket (5) and EGB-2P actuator on engine.
3. Install new rod ends (8)-(11) and control rod (4) to actuator output lever (7) using spacer (1), lockwasher (2), and screw (1).
4. Install the actuator on the engine. Linkage must move freely.

5. Attach output lever (7) to actuator output shaft and adjust travel.

**IMPORTANT**

Use approximately 21° actuator output shaft travel from no fuel to full fuel. Adjust linkage so the maximum stop of the actuator will prevent the fuel rack from traveling beyond the full fuel position. The fuel injectors must move freely.

6. Install oil line from the oil reservoir to either of two 1/8" pipe tapped inlet holes in the base of the actuator. A minimum of 5 psi (34 kPa) oil supply pressure is needed. The supply should be filtered engine oil.
7. Include an overspeed shutdown device separate from the speed control governor.

## Magnetic Pickup Installation

1. Remove the pipe plug in the flywheel housing next to the flywheel teeth.
2. Install the 1.000-11 1/2 NPTF magnetic pickup bushing in the flywheel housing.
3. Install the magnetic pickup in the bushing. Magnetic pickup is listed in optional parts list.
4. The distance between the pickup and the outside diameter of the gear should be approximately 0.040" (1.02 mm) at the closest point. This clearance must be kept through one full turn of the flywheel.

**IMPORTANT**

Find the distance by turning the magnetic pickup in until it just touches the gear tooth. Back it out about 3/4 turn (0.0555" [1.410 mm] per one turn ccw).

5. Tighten the jam nut. Be careful not to turn the magnetic pickup.

Figure 1 shows the linkage connections and part reference numbers. The actuator output shaft travels 21° from no load to full load. Figures 2 and 3 show the 90° connector and the straight connector assembly. Figure 4 shows the magnetic pickup assembly.

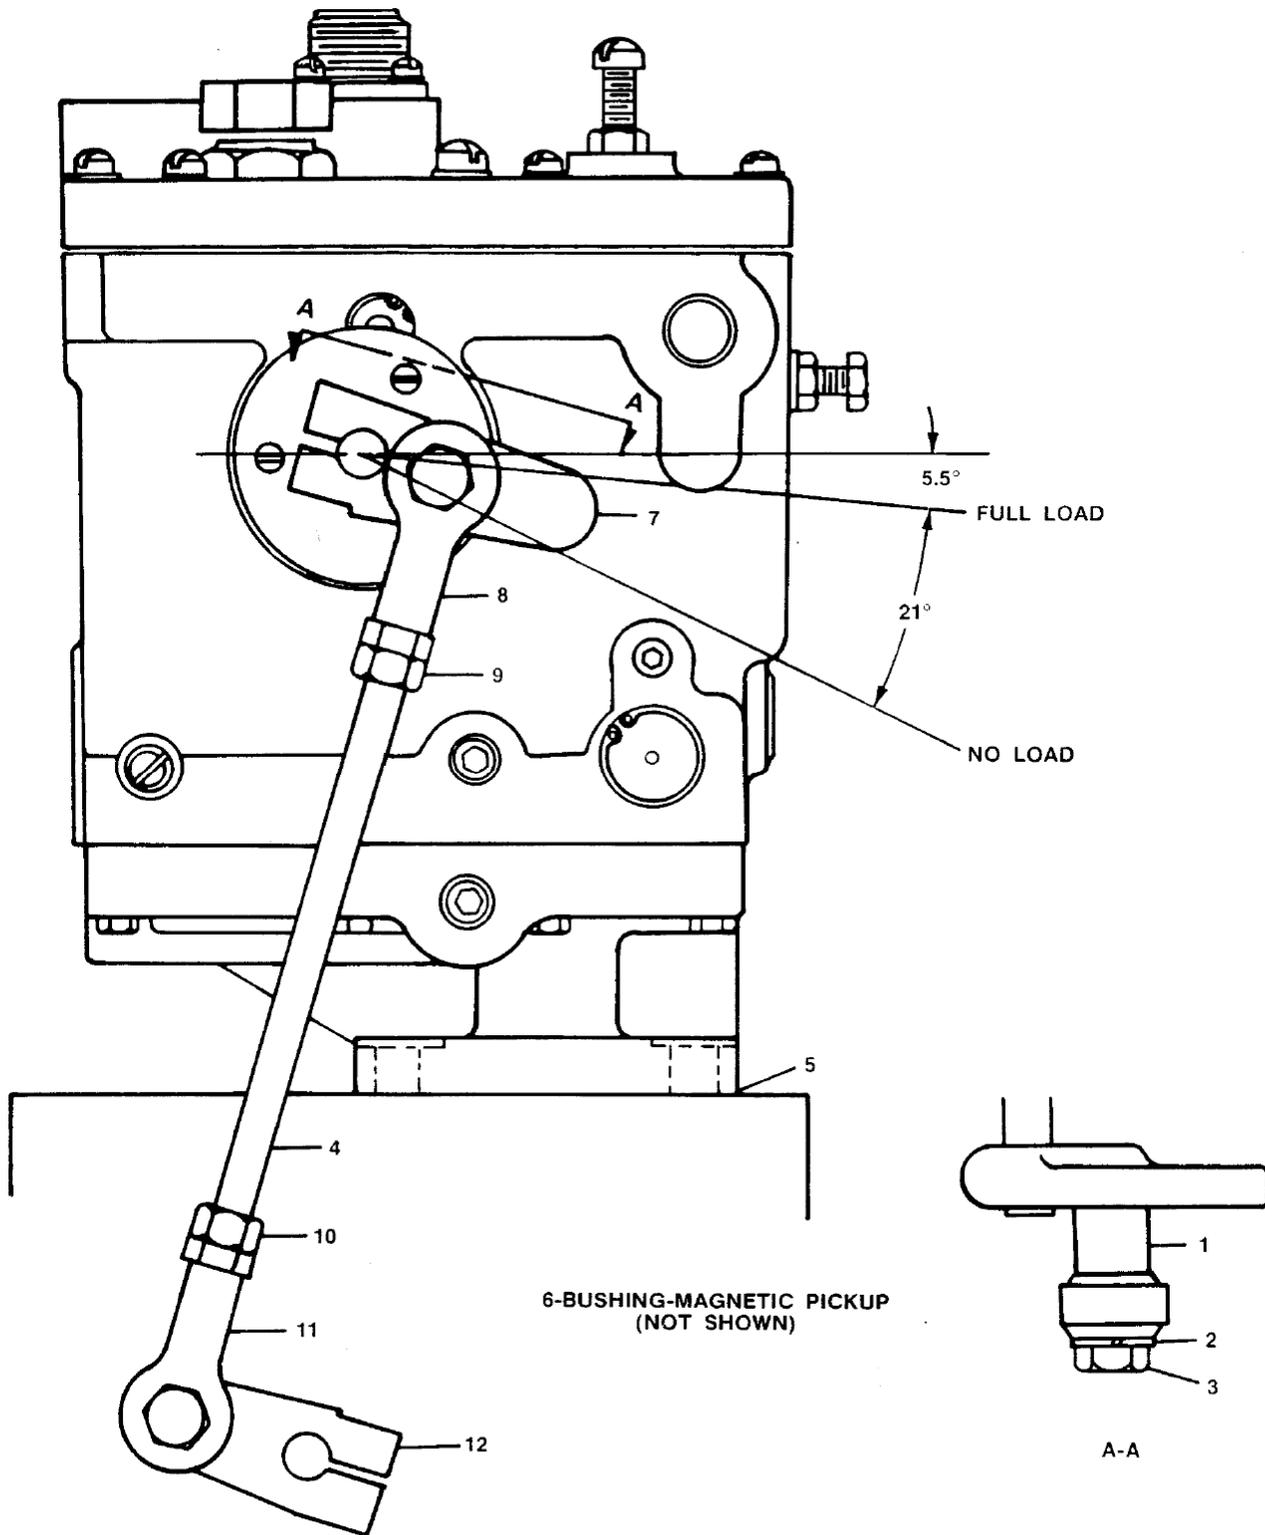


Figure 1. Linkage Connections on EGB-2P Governor Actuator

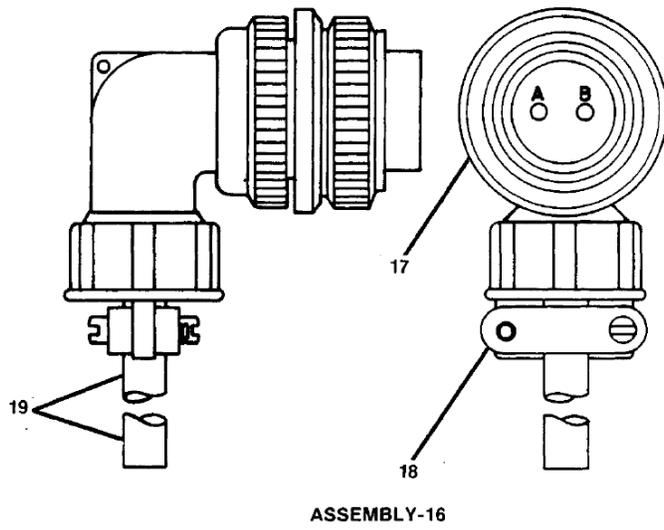


Figure 2. 90° Connector Assembly

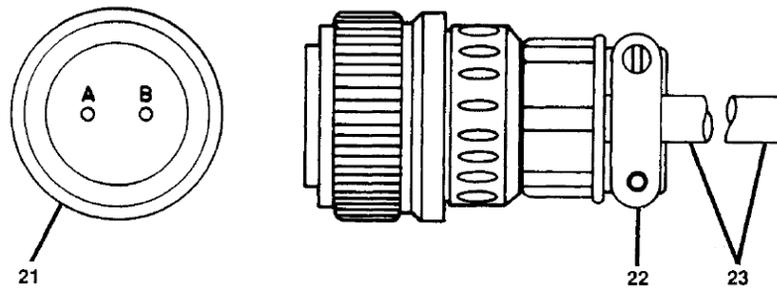


Figure 3. Straight Connector Assembly

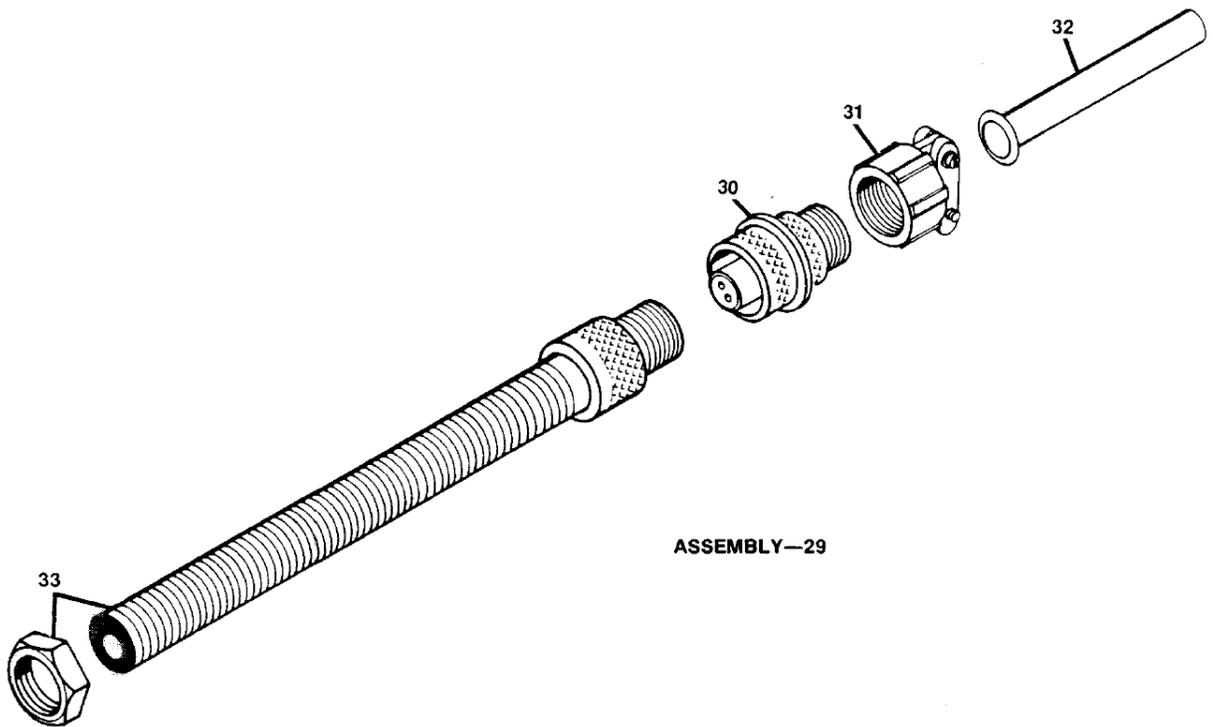


Figure 4. Magnetic Pickup Assembly

We appreciate your comments about the content of our publications.

Send comments to: [icinfo@woodward.com](mailto:icinfo@woodward.com)

Please reference publication **54007A**.



PO Box 1519, Fort Collins CO 80522-1519, USA  
1000 East Drake Road, Fort Collins CO 80525, USA  
Phone +1 (970) 482-5811 • Fax +1 (970) 498-3058

Email and Website—[www.woodward.com](http://www.woodward.com)

Woodward has company-owned plants, subsidiaries, and branches,  
as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.