
Released

easY-I-3000XT Series

Technical Manual | Inverter Control

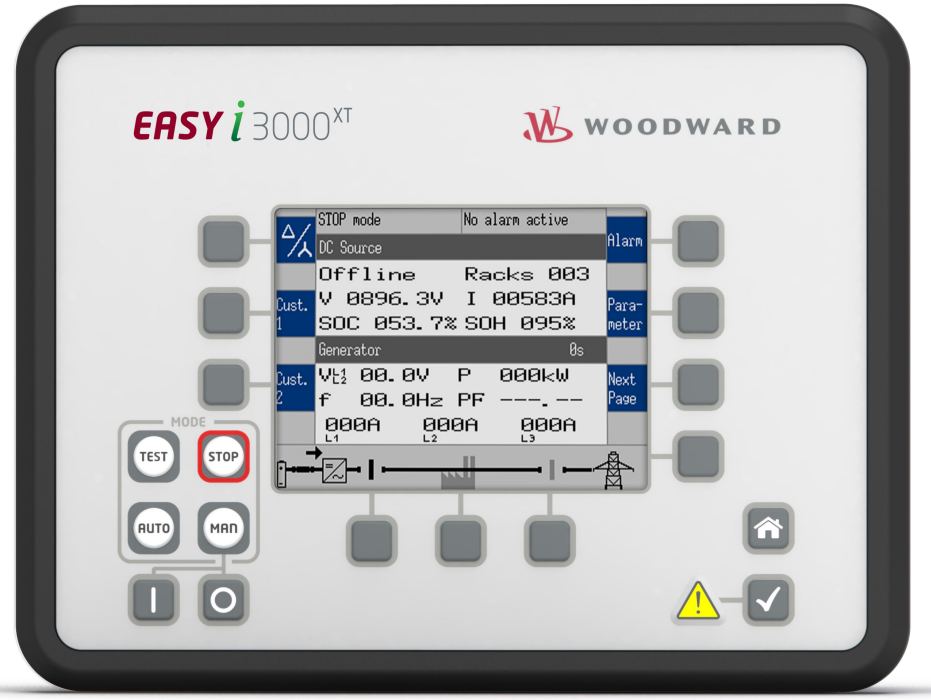

easY-I-3400XT-P1 / 3500XT-P1 / 3500XT-P1-LT

Release 2.13-0

Document ID: 37957, Revision A - Build 52717

Released

Manual (original)

This is no translation but the original Technical Manual in English.

Designed in Germany and Poland.

Woodward GmbH

Handwerkstr. 29

70565 Stuttgart

Germany

Telephone: +49 (0) 711 789 54-510

Fax: +49 (0) 711 789 54-101

E-mail: stgt-info@woodward.com

Internet: https://www.woodward.com

© 2022 Woodward GmbH. All rights reserved.

Released

Brief Overview

The easY-I-3000XT series takes care about a DC/AC Inverter and connected DC source.

The control units can be used in island/mains parallel operation in conjunction with some gensets and is also applicable for stand-by, AMF, peak shaving, import/export or DC charging.

Of course, these functions must also be supported by the inverter used.

Scope of delivery

The following parts are included in the scope of delivery. Please check prior to the installation that all parts are present.

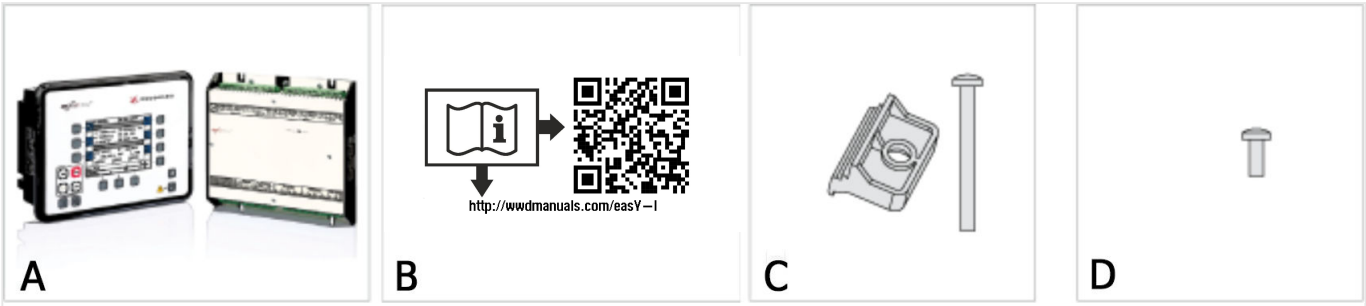


Fig. 1: Scope of delivery

A	Device easY-I-3400XT-P1 (sheet metal housing) or easY-I-3500XT-P1(-LT) control (plastic housing). All screwable terminal connectors are delivered with plug and jack.
B	IPS (Installation Procedure Supplement) and printed QR Code sticker - 2 x
C	Clamp fastener installation material - 4 x (only plastic housing)
D	Screw kit installation material - 12 x (only plastic housing)

Configuration files and Technical Manual are available on device internal memory. Opening USB connection to the easY-I-XT offers read access to the files listed below but with status "delivery" -- please be aware that this files are not updated. The latest versions are available at the Woodward web site.

Files stored at easY-I-XT device:

- Configuration
  - msi-file (installing application files and ToolKit)
  - eds-file (zipped)
- Technical Manual (PDF)

QR Code



To get access to the complete product documentation, scan this QR code or use the following link: ⟹ http://wwdmanuals.com/easY-I.

Sample application setup

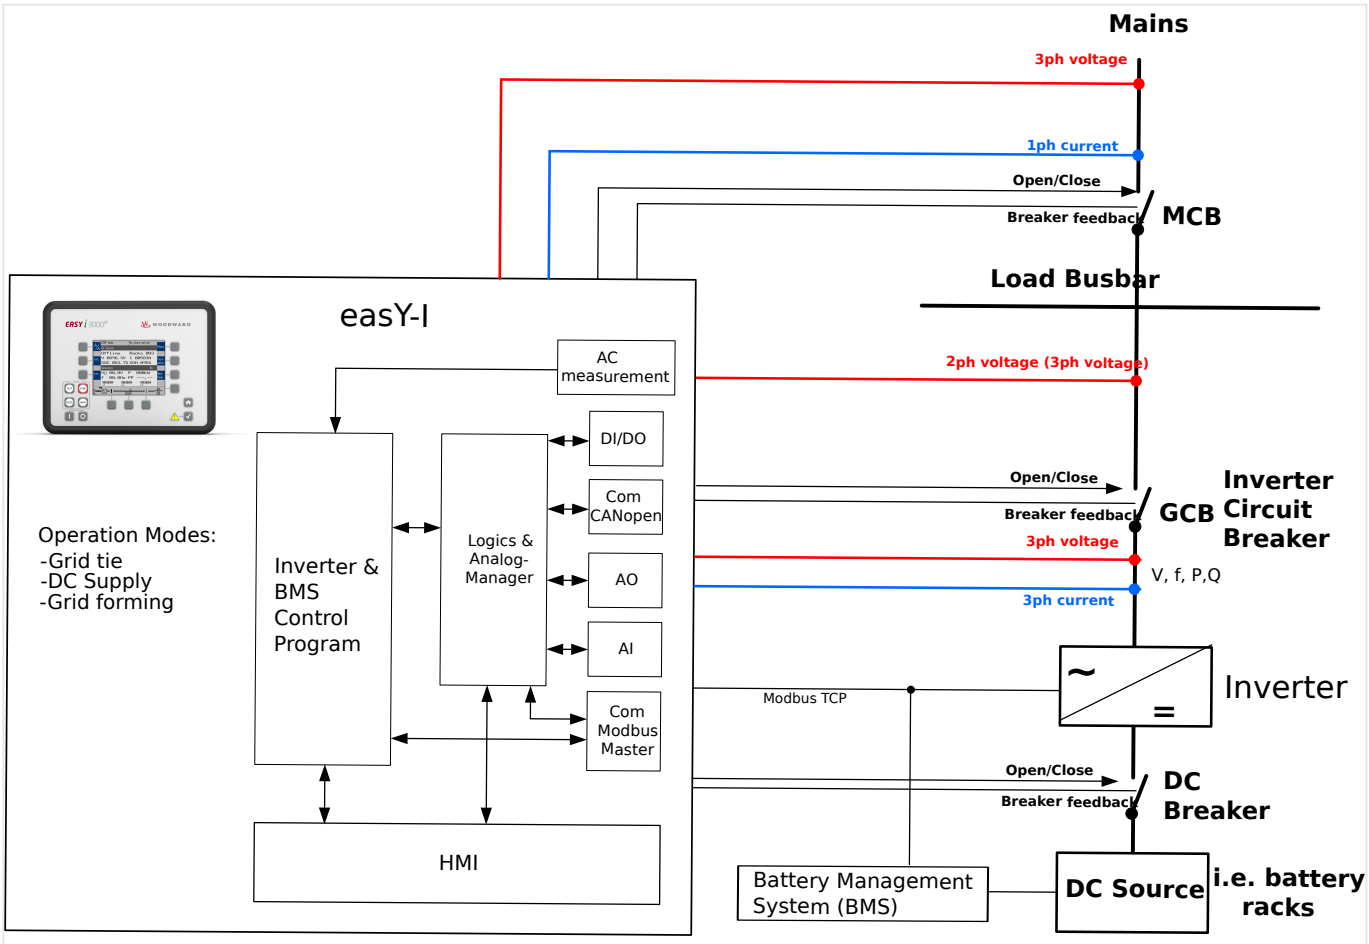


Fig. 2: Sample application setup

A typical application mode for the control unit is the use for mains parallel operation.

- In this case, the easY-I-XT will function as a DC source, inverter, mains control with protection.

Released

- The control unit can open and close the DC breaker, generator circuit breaker (GCB) and the mains circuit breaker (MCB).
- Communication with the inverter and the BMS (Battery Management System) is handled via Modbus. (For this purpose a corresponding mapping file must be created with the ModbusMapper tool.)
- The easY-I-XT are well prepared for system control and management, "talking" with other easYgens-3000XT and/or easY-I-3000XT and/or LSx and/or Group Controller (GC).

  Note: Unless otherwise noted, ”LS-5“, ”LSx“, ”LS -6XT“ and ”easYgen|LS-6XT“ are used interchangeably in this document.

  Since, from the application point of view, the inverter has the same function as a generator, the terms "generator" and "inverter" are used synonymously in this document and in some parameters in the device



For a listing of all available application modes please refer to “6 Application Field”.

Released

Table of Contents

1	**General Information**	**25**
1.1	Revision History	25
1.2	Depiction Of Notes And Instructions	25
1.2.1	Copyright And Disclaimer	26
1.2.2	Service And Warranty	27
1.3	Safety	27
1.3.1	Personnel	28
1.3.2	General Safety Notes	29
1.3.3	Protective Equipment And Tools	32
1.3.4	Intended Use	33
2	**System Overview**	**34**
2.1	Display And Status Indicators	34
2.1.1	HMI: Display and Buttons	35
2.1.2	LEDs Indicate State of Metal Housing Variant	40
2.2	Application Modes Overview	42
2.3	Operation Modes	45
3	**Installation**	**46**
3.1	Mount Unit (Sheet Metal Housing)	46
3.2	Mount Unit (Plastic Housing)	48
3.2.1	Clamp Fastener Installation	49
3.2.2	Screw Kit Installation	51
3.3	Setup Connections	53
3.3.1	Terminal Allocation	54
3.3.2	Wiring Diagram	56
3.3.3	Power Supply	60
3.3.4	Voltage Measuring	62
3.3.4.1	Generator Voltage	62
3.3.4.1.1	Parameter Setting '3Ph 4W OD' (3-phase, 4-wire, Open delta)	63
3.3.4.1.2	Parameter Setting '3Ph 4W' (3-phase, 4-wire)	64
3.3.4.1.3	Parameter Setting '3Ph 3W' (3-phase, 3-wire)	65

Released

3.3.4.1.4 Parameter Setting '1Ph 3W' (1-phase, 3-wire) . . . 66
3.3.4.1.5 Parameter Setting '1Ph 2W' (1-phase, 2-wire) . . . 67
3.3.4.2 Mains Voltage . . . 70
3.3.4.2.1 Parameter Setting '3Ph 4W' (3-phase, 4-wire) . . . 71
3.3.4.2.2 Parameter Setting '3Ph 3W' (3-phase, 3-wire) . . . 72
3.3.4.2.3 Parameter Setting '1Ph 3W' (1-phase, 3-wire) . . . 73
3.3.4.2.4 Parameter Setting '1Ph 2W' (1-phase, 2-wire) . . . 74
3.3.4.3 Busbar Voltage . . . 76
3.3.4.3.1 Parameter Setting '1Ph 2W' (1-phase, 2-wire) . . . 77
3.3.5 Current Measuring . . . 79
3.3.5.1 Generator Current . . . 79
3.3.5.1.1 Parameter Setting 'L1 L2 L3' . . . 81
3.3.5.1.2 Parameter Setting 'Phase L1' 'Phase L2' 'Phase L3' . . . 81
3.3.5.2 Mains Current . . . 82
3.3.5.2.1 Parameter Setting 'Phase L1' 'Phase L2' 'Phase L3' . . . 83
3.3.5.3 Ground Current . . . 84
3.3.6 Power Measuring . . . 85
3.3.7 Power Factor Definition . . . 86
3.3.8 Discrete Inputs . . . 87
3.3.9 Relay Outputs (LogicsManager) . . . 89
3.3.9.1 Connecting 24 V Relays . . . 91
3.3.10 Analog Inputs (0 to 2000 Ohm | 0/4 to 20 mA | 0 to 1 V) . . . 92
3.3.11 Analog Outputs . . . 94
3.3.11.1 Analog Outputs (±20 mA, ± 10 V, PWM) . . . 94
3.4 Setup Interfaces . . . 95
3.4.1 Interfaces overview . . . 95
3.4.2 RS-485 Interface . . . 97
3.4.3 USB (2.0 slave) interface - Service Port . . . 99
3.4.4 CAN Bus Interfaces . . . 100
3.4.5 Ethernet Interface (incl. Remote Panel) . . . 103

4 Configuration . . . 107

4.1 Front Panel Access . . . 110

Released

4.1.1 Basic Navigation . . . 110
4.1.2 The HOME Screen . . . 114
4.1.3 Customer Screens . . . 116
4.1.4 Standard Menu Screens . . . 117
4.1.4.1 Navigation Screens . . . 118
4.1.4.2 Value Setting Screens . . . 118
4.1.4.3 Status/Monitoring Screens . . . 119
4.1.5 Specialized Menu Screens . . . 120
4.1.5.1 HOME Screen Voltage Display . . . 120
4.1.5.2 Alarm List . . . 121
4.1.5.3 Event History . . . 122
4.1.5.4 Sequencing . . . 123
4.1.5.5 States easYgen . . . 124
4.1.5.6 States LSx . . . 125
4.1.5.7 Genset parameter alignment . . . 126
4.1.5.8 Diagnostic devices . . . 126
4.1.5.9 Setpoints generator . . . 127
4.1.5.10 Setpoints PID1 - PID3 . . . 129
4.1.5.11 Synchroscope busbar/mains . . . 130
4.1.5.12 LogicsManager Conditions . . . 131
4.1.5.13 LogicsManager . . . 132
4.1.5.14 Mains decoupling threshold . . . 133
4.1.5.15 Test mains decoupling (VDE AR-N 4105) . . . 134
4.1.5.16 CAN 1 state . . . 136
4.1.5.17 CAN interface 2 state . . . 137
4.1.5.18 CAN 3 state . . . 139
4.1.5.19 Ethernet Network . . . 140
4.1.5.20 USB . . . 143
4.1.5.21 RS-485 . . . 143
4.1.5.22 Time Indication According To Operating Condition . . . 144
4.2 Access Via PC (ToolKit) . . . 144
4.3 Basic Setup . . . 145

Released

4.3.1 Configure Language/Clock . . . 145
4.3.2 Configure HMI . . . 152
4.3.2.1 Configure Customer Screens . . . 152
4.3.2.2 Configure Display . . . 154
4.3.2.3 Screen configuration . . . 156
4.3.3 Lamp Test . . . 157
4.3.4 Enter Password . . . 158
4.3.4.1 Password System - Parameter Overview . . . 172
4.3.4.1.1 Random Number for Password . . . 173
4.3.4.1.2 Change/Reset Alphanumeric Password . . . 173
4.3.5 System Management . . . 176
4.3.5.1 Reboot Function . . . 178
4.3.6 Configure Remote Panel Mode . . . 179
4.3.6.1 Configuration screen Remote Panel Mode . . . 179
4.3.6.2 General notes . . . 179
4.3.6.3 RP-3000XT in Full Mode with Password suppression . . . 180
4.3.6.4 RP-3000XT in Full Mode . . . 181
4.3.6.5 RP-3000XT in Annunciator Mode . . . 182
4.3.6.6 RP-3000XT in Off Mode . . . 183
4.3.6.7 Parameters of RP Modes . . . 184
4.4 Configure Application . . . 185
4.4.1 Configure Inverter/DC source . . . 185
4.4.1.1 Configure inverter . . . 185
4.4.1.2 Configure DC source . . . 189
4.4.1.2.1 DC breaker . . . 189
4.4.1.2.2 DC source . . . 191
4.4.1.3 Configure charging . . . 192
4.4.1.3.1 General notes . . . 192
4.4.1.3.2 Condition for charging ("56.18 Charging allowed") . . . 192
4.4.1.3.3 Charging block diagram . . . 193
4.4.1.3.4 Charging activated by negative kW setpoint "Act.power setpoint" . . . 193
4.4.1.3.5 Charging activated by LogicsManagers . . . 194

Released

4.4.1.3.6 Parameter . . . 194
4.4.1.4 Configure balancing . . . 196
4.4.1.4.1 General notes . . . 196
4.4.1.4.2 Function . . . 196
4.4.1.4.3 Indication . . . 198
4.4.1.4.4 Parameter . . . 199
4.4.1.4.5 Index description . . . 200
4.4.2 Inputs And Outputs . . . 202
4.4.2.1 Function Of Inputs And Outputs . . . 202
4.4.2.1.1 Discrete Inputs . . . 202
4.4.2.1.2 Discrete Outputs . . . 206
4.4.2.2 Discrete Inputs . . . 209
4.4.2.3 Discrete Outputs (LogicsManager) . . . 213
4.4.2.4 Analog Inputs . . . 216
4.4.2.4.1 Analog Inputs (general) . . . 216
4.4.2.4.2 Analog Inputs 1 to 3 (0 to 2000 Ω | 0/4 to 20 m A | 0 to 1 V) . . . 219
4.4.2.5 Analog Outputs . . . 226
4.4.2.5.1 Analog Outputs 1 and 2 . . . 226
4.4.2.6 External Analog Inputs . . . 231
4.4.2.7 External Analog Outputs . . . 234
4.4.2.8 External Discrete Inputs . . . 237
4.4.2.9 External Discrete Outputs . . . 238
4.4.3 Configure Breakers . . . 239
4.4.3.1 Good to know: Actions with Breakers . . . 240
4.4.3.1.1 Dead Bus Closing GCB . . . 240
4.4.3.1.2 Synchronization GCB/MCB . . . 242
4.4.3.1.3 Dead Bus Closing MCB . . . 243
4.4.3.1.4 Open GCB . . . 244
4.4.3.1.5 Open MCB . . . 245
4.4.3.1.6 Transition Modes (Breaker Logic) . . . 245
4.4.3.1.7 GGB Handling . . . 250
4.4.3.2 General Breaker Settings . . . 251

Released

4.4.3.3 Configure Breakers: GCB . . . 257
4.4.3.4 Configure Breakers: GGB . . . 264
4.4.3.5 Configure Breakers: MCB . . . 269
4.4.3.6 Configure Breakers: Synchronization . . . 275
4.4.3.6.1 Independent Sync. Check Function . . . 277
4.4.3.7 Configure Breakers: Neutral Interlocking . . . 278
4.4.4 Configure Controller . . . 279
4.4.4.1 Voltage Control . . . 282
4.4.4.2 Power Factor Control . . . 288
4.4.4.2.1 Control The Power Factor / Reactive Power At The Mains Interchange Point . . . 288
4.4.4.2.2 Configure Power Factor / kvar Control . . . 290
4.4.4.2.3 Power Factor Characteristic . . . 296
4.4.4.2.4 Reactive Power / Power Factor setpoint filter . . . 300
4.4.4.2.5 Reactive Power Characteristic . . . 303
4.4.4.3 Load Share Control . . . 313
4.4.4.3.1 Mains Parallel Operation With Mains Interchange Real Power Control (Import/ Export) . . . 314
4.4.4.3.2 Islanded Operation In Parallel . . . 314
4.4.4.3.3 Re-synchronization Of The Busbar To The Mains . . . 315
4.4.4.3.4 Prerequisites . . . 316
4.4.4.3.5 Load-Share Interface . . . 316
4.4.4.3.6 Load Sharing . . . 316
4.4.4.3.7 Parameters . . . 318
4.4.4.3.8 Load Share Control Grouping . . . 320
4.4.4.3.9 Segment Number in GCB/LSx mode . . . 323
4.4.4.3.10 Droop . . . 325
4.4.4.4 Frequency Control . . . 328
4.4.4.5 Load Control . . . 337
4.4.4.5.1 Configure: Load Control (general) . . . 337
4.4.4.5.2 Configure: Load Setpoints . . . 343
4.4.4.5.3 Derating And Uprating Of Power . . . 347
4.4.4.5.4 Active Power – Frequency Function P(f) . . . 351
4.4.4.5.5 Photovoltaic (PV) load reduction regulated mode . . . 357

Released

4.4.4.6 PID {x} Control . . . 360
4.4.4.7 Discrete Raise/Low Function . . . 364
4.4.5 Configure Operation Modes . . . 365
4.4.5.1 Operation Modes: General . . . 365
4.4.5.2 Operation Mode AUTO - Automatic Run . . . 367
4.4.5.3 Operation Mode TEST . . . 369
4.4.5.4 Critical Mode . . . 372
4.4.5.4.1 Critical Operation At Busbar . . . 372
4.4.5.4.2 Critical Operation At The inverter . . . 374
4.4.5.4.3 Parameters . . . 377
4.4.5.5 Load Dependent Start/Stop (LDSS) . . . 377
4.4.5.5.1 Generator Load . . . 378
4.4.5.5.2 System Reserve Power . . . 380
4.4.5.5.3 Generator Selection . . . 381
4.4.5.5.4 Islanded Parallel Operation (IOP) . . . 388
4.4.5.5.5 Mains Parallel Operation . . . 394
4.4.5.5.6 LDSS with predicted load . . . 399
4.4.6 Emergency Run . . . 402
4.5 Configure Monitoring . . . 406
4.5.1 Configure Generator Monitoring . . . 406
4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar . . . 406
4.5.1.2 Generator Voltage Monitoring . . . 408
4.5.1.2.1 Generator Overvoltage (Level 1 & 2) ANSI# 59 . . . 408
4.5.1.2.2 Generator Undervoltage (Level 1 & 2) ANSI# 27 . . . 410
4.5.1.2.3 Generator Voltage Asymmetry . . . 412
4.5.1.3 Generator Frequency Monitoring . . . 414
4.5.1.3.1 Generator Overfrequency (Level 1 & 2) ANSI# 81O . . . 414
4.5.1.3.2 Generator Underfrequency (Level 1 & 2) ANSI# 81U . . . 416
4.5.1.4 Generator Current Monitoring . . . 417
4.5.1.4.1 Generator Time-Overcurrent (Level 1, 2 & 3) ANSI# 50/51 . . . 417
4.5.1.4.2 Generator Inverse Time-Overcurrent ANSI# IEC 255 . . . 419
4.5.1.4.3 Generator Voltage Restrained Overcurrent Monitoring - ANSI #51V . . . 423

Released

4.5.1.5 Generator Power Monitoring . . . 425
4.5.1.5.1 Generator Overload IOP (Level 1 & 2) ANSI# 32 . . . 425
4.5.1.5.2 Generator Overload MOP (Level 1 & 2) ANSI# 32 . . . 427
4.5.1.5.3 Generator Reverse/Reduced Power (Level 1 & 2) ANSI# 32R/F . . . 429
4.5.1.5.4 Generator Unbalanced Load (Level 1 & 2) ANSI# 46 . . . 431
4.5.1.5.5 Load sharing . . . 434
4.5.1.5.6 Inverter/Generator Active Power Mismatch . . . 437
4.5.1.5.7 Generator Unloading Mismatch . . . 438
4.5.1.6 Other Monitoring . . . 439
4.5.1.6.1 Power Factor - configure generator power factor monitoring . . . 439
4.5.1.6.2 Miscellaneous . . . 444
4.5.1.6.3 Inverter . . . 450
4.5.2 Mains . . . 455
4.5.2.1 General Mains Monitoring . . . 455
4.5.2.2 Blocking of Mains Protection . . . 456
4.5.2.3 Mains Operating Ranges . . . 457
4.5.2.3.1 General Mains Operating Range . . . 457
4.5.2.3.2 Reconnecting Mains Operating Range . . . 459
4.5.2.4 Mains Decoupling . . . 459
4.5.2.4.1 Setup Grid Code AR-–4105 . . . 464
4.5.2.4.2 Setup Grid Code BDEW (medium voltage guideline) . . . 468
4.5.2.5 Mains Overfrequency (Level 1 & 2) ANSI# 81O . . . 469
4.5.2.6 Mains Underfrequency (Level 1 & 2) ANSI# 81U . . . 471
4.5.2.7 Mains Overvoltage (Level 1 & 2) ANSI# 59 . . . 473
4.5.2.8 Mains Undervoltage (Level 1 & 2) ANSI# 27 . . . 475
4.5.2.9 Mains Voltage Increase . . . 477
4.5.2.10 Mains Time-Dependent Voltage . . . 479
4.5.2.10.1 Time Dependent Mains Voltage Monitor 1 . . . 481
4.5.2.10.2 Time Dependent Mains Voltage Monitor 2 . . . 485
4.5.2.10.3 Time Dependent Mains Voltage Monitor 3 . . . 487
4.5.2.10.4 Time dependent voltage monitoring – Decoupling Function . . . 490
4.5.2.11 QV Monitoring . . . 490

Released

4.5.2.12 Change Of Frequency . . . 493
4.5.2.13 Mains Voltage Phase Rotation . . . 498
4.5.2.14 Mains Import Power (Level 1 & 2) . . . 500
4.5.2.15 Mains Export Power (Level 1 & 2) . . . 502
4.5.2.16 Inverter/Mains Active Power Mismatch . . . 503
4.5.2.17 Mains Lagging Power Factor (Level 1 & 2) . . . 505
4.5.2.18 Mains Leading Power Factor (Level 1 & 2) . . . 507
4.5.3 DC Source . . . 509
4.5.3.1 General notes . . . 509
4.5.3.2 Parameter . . . 509
4.5.4 Breaker . . . 512
4.5.4.1 Configure GCB . . . 512
4.5.4.2 Configure GCB 50BF . . . 513
4.5.4.3 Synchronization GCB . . . 515
4.5.4.4 Configure GGB . . . 516
4.5.4.5 Synchronization GGB . . . 517
4.5.4.6 Configure MCB . . . 518
4.5.4.7 Synchronization MCB . . . 520
4.5.4.8 Configure MCB 50BF . . . 521
4.5.4.9 MCB plausibility . . . 522
4.5.4.10 Configure Neutral Contactor . . . 523
4.5.4.11 Configure DC breaker . . . 524
4.5.5 Flexible Limits . . . 525
4.5.6 Miscellaneous . . . 531
4.5.6.1 General monitoring settings . . . 531
4.5.6.2 Free Configurable Alarms . . . 533
4.5.6.3 CAN Interfaces . . . 535
4.5.6.4 CAN Interface 1 . . . 535
4.5.6.5 CAN Interface 2 . . . 536
4.5.6.6 CAN Interface 3 . . . 538
4.5.6.7 Ethernet interfaces . . . 539
4.5.6.8 Battery Overvoltage (Level 1 & 2) . . . 540

Released

4.5.6.9 Battery Undervoltage (Level 1 & 2) . . . 542
4.5.6.10 Monitoring PV load reference . . . 543
4.5.6.11 Multi-Unit Parameter Alignment . . . 544
4.5.6.12 Multi-Unit Missing easY-I . . . 546
4.5.6.13 Multi-Unit Missing LSx . . . 548
4.5.6.14 Multi-Unit System Update . . . 549
4.5.6.15 Operating Range Failure . . . 550
4.5.6.16 Plausibility Check of Voltages' AC Wiring . . . 552
4.5.6.17 Load Share Interface Redundancy is Lost . . . 553
4.6 Configure Measurement . . . 555
4.6.1 General measurement settings . . . 555
4.6.2 Generator . . . 557
4.6.2.1 Configure transformer . . . 560
4.6.3 Busbar . . . 561
4.6.3.1 Configure transformer . . . 562
4.6.4 Mains . . . 563
4.6.4.1 Configure transformer . . . 565
4.6.4.2 External Mains Active Power . . . 566
4.6.4.3 External Mains Reactive Power . . . 568
4.7 Configure Interfaces . . . 569
4.7.1 USB (Service Port) Interface . . . 570
4.7.2 RS-485 Interface . . . 570
4.7.3 Modbus Protocol . . . 571
4.7.4 CAN Interfaces . . . 574
4.7.4.1 CAN Interface 1 . . . 574
4.7.4.1.1 Additional Server SDOs (Service Data Objects) . . . 578
4.7.4.1.2 Receive PDO {x} (Process Data Object) . . . 579
4.7.4.1.3 Transmit PDO {x} (Process Data Object) . . . 582
4.7.4.2 CAN Interface 2 . . . 587
4.7.4.2.1 Expansion Modules at CANopen Interface . . . 588
4.7.4.3 CAN Interface 3 . . . 596
4.7.4.3.1 Receive PDO {x} (Process Data Object) . . . 599

Released

4.7.4.3.2 Transmit PDO {x} (Process Data Object) . . . 603
4.7.4.4 CAN Load Share Parameters . . . 608
4.7.5 Ethernet Interfaces . . . 609
4.7.5.1 General notes “Network address” . . . 609
4.7.5.2 Ethernet Network A . . . 611
4.7.5.3 Ethernet Network B . . . 613
4.7.5.4 Ethernet Network C . . . 614
4.7.5.5 SNTP . . . 615
4.8 Configure LogicsManager . . . 616
4.9 Configure AnalogManager . . . 623
4.9.1 Operations . . . 623
4.9.2 AnalogManager Constants . . . 636
4.10 Configure Counters . . . 637
4.10.1 Generator Preset Values . . . 637
4.10.2 Service Reset Values . . . 638

5 Operation . . . 642
5.1 Power ON . . . 642
5.2 Change Operating Modes . . . 643
5.2.1 Operating Mode STOP . . . 644
5.2.2 Operating Mode MANUAL . . . 645
5.2.3 Operating Mode AUTOMATIC . . . 647
5.2.4 Operating Mode TEST . . . 649
5.3 Restore Language Setting via HMI, Buttons and Softkeys . . . 650

6 Application Field . . . 651
6.1 Basic Applications . . . 651
6.1.1 Application mode A01 (None) . . . 651
6.1.2 Application mode A02 (GCB open) . . . 653
6.1.3 Application mode A03 (GCB) . . . 655
6.1.4 Application mode A04 (GCB/MCB) . . . 657
6.2 Multiple Genset Applications . . . 659
6.2.1 Configuration Example: Multiple Genset . . . 660
6.2.1.1 Configuring Load-Dependent Start/Stop . . . 661

Released

6.2.1.2 Configuring Automatic Operation . . . 664
6.2.1.3 Configuring Emergency Operation . . . 665
6.2.1.4 Configuring Power Control . . . 666
6.2.2 Communication Management . . . 666
6.2.2.1 System Update . . . 666
6.2.2.2 Diagnostic Screens . . . 668
6.2.2.3 Practicing the System Update Functionality . . . 674
6.3 Special Applications . . . 675
6.3.1 Configuring A Setpoint Control Via Analog Input . . . 675
6.3.2 Creating Self-Toggling (Pulsing) Relays . . . 679
6.3.3 Performing Remote Start/Stop And Acknowledgment . . . 680
6.3.3.1 Operating Modes . . . 680
6.3.3.2 Setting Up A Test With Or Without Load . . . 682
6.3.3.3 Remote Start/Stop, Shutdown, And Acknowledgment . . . 684
6.3.4 Connecting IKD 1 on CAN Bus . . . 688
6.3.4.1 IKD Configuration Tool . . . 691
6.3.4.2 Configuration for a second IKD 1 . . . 693
6.3.5 Wiring Self Powered Discrete Inputs . . . 695
6.3.6 Connecting Analog Inputs In Series . . . 695
6.3.7 Setup Expansion Modules at CAN 2 . . . 696
6.3.8 Phase Angle Compensation . . . 705
6.3.9 Ripple Control Receiver . . . 707
6.3.10 Neutral Interlocking . . . 711
6.3.11 LDSS with predicted load . . . 715
6.3.11.1 Introduction . . . 715
6.3.11.2 Internal source mode (EG3500XT only) . . . 716
6.3.11.2.1 General . . . 716
6.3.11.2.2 Example “Emergency power unit” with internal GGB control (only easY-I 3400XT/3500XT) . . . 718
6.3.11.3 External source mode . . . 720
6.3.11.3.1 General . . . 720
6.3.11.3.2 LDSS PL CANopen Handling . . . 722
6.3.11.3.3 Internally provided analog variables . . . 724

Released

6.3.11.4 Tables . . . 725
6.3.12 Derating And Uprating Of Power (Details) . . . 726
6.3.12.1 Direct Derating . . . 726
6.3.12.2 Derating With Characteristic Curve . . . 727
6.3.13 Examples timer configuration . . . 731
6.4 CANopen Applications . . . 732
6.4.1 Remote Control . . . 732
6.4.1.1 Remote Start/Stop, Shutdown, And Acknowledgment . . . 732
6.4.1.1.1 RPDO . . . 733
6.4.1.1.2 Default SDO Communication Channel . . . 734
6.4.1.2 Transmitting A Frequency Setpoint . . . 737
6.4.1.2.1 RPDO . . . 737
6.4.1.2.2 Default SDO Communication Channel . . . 738
6.4.1.3 Transmitting A Voltage Setpoint . . . 739
6.4.1.3.1 RPDO . . . 739
6.4.1.3.2 Default SDO Communication Channel . . . 741
6.4.1.4 Transmitting A Power Factor Setpoint . . . 741
6.4.1.4.1 RPDO . . . 742
6.4.1.4.2 Default SDO Communication Channel . . . 743
6.4.1.5 Transmitting A Power Setpoint . . . 743
6.4.1.5.1 RPDO . . . 744
6.4.1.5.2 Default SDO Communication Channel . . . 745
6.4.1.6 Transmitting Multiple Setpoints . . . 746
6.4.1.7 Remotely Changing The Setpoint . . . 747
6.4.1.7.1 RPDO . . . 748
6.4.1.7.2 Default SDO Communication Channel . . . 749
6.4.1.8 Transmitting A Remote Control Bit . . . 750
6.4.1.8.1 Default SDO Communication Channel . . . 751
6.4.2 Sending A Data Protocol via TPDO . . . 751
6.4.3 Troubleshooting . . . 753
6.5 Modbus Applications . . . 754
6.5.1 Remote Control . . . 754

Released

6.5.1.1 Remote Start/Stop, Shutdown, And Acknowledgment . . . 754
6.5.1.2 Setpoint Setting . . . 757
6.5.1.3 Remotely Changing The Setpoint . . . 761
6.5.2 Changing Parameter Settings . . . 764
6.5.2.1 Parameter Setting . . . 764
6.5.2.2 Configuration Of LogicsManager Functions . . . 765
6.5.2.3 Configuration Of LogicsManager Functions For Remote Access . . . 770
6.5.2.3.1 Basic remote control functions . . . 770
6.5.2.3.2 Configuration of the LogicsManager "Operation mode AUTO" . . . 770
6.5.2.3.3 Configuration Of Remote Start/Stop, Shutdown, And Acknowledgment . . . 772
6.5.2.3.4 Configuration Of LogicsManager Function "Start Request in AUTO" . . . 772
6.5.2.3.5 Configuration Of LogicsManager Function "External Acknowledge" . . . 774
6.5.2.3.6 Configuration Of LogicsManager Function "Start w/o load" . . . 775
6.5.2.4 Remotely Acknowledge Single Alarm Messages . . . 777
6.5.2.5 Remotely Clearing The Event History . . . 778
6.5.2.6 Remotely Resetting The Default Values . . . 779
6.5.2.6.1 Modbus . . . 779
6.5.3 Exception Responses . . . 780
6.5.4 Modbus Telegram Mapper (Customer Written Data Protocols) . . . 781
6.5.4.1 Introduction . . . 781
6.5.4.2 Configuration . . . 781
6.5.4.3 Status/diagnostic Modbus Telegram Mapper . . . 782
6.5.5 Modbus master . . . 783
6.5.5.1 Introduction . . . 783
6.5.5.2 Configuration . . . 783
6.5.5.3 Status/diagnostic Modbus master . . . 784

7 Interfaces And Protocols . . . 787
7.1 CAN Interfaces . . . 787
7.1.1 CAN Interface 1 (Guidance level) . . . 787
7.1.2 CAN Interface 2 ("Engine" level) . . . 787
7.1.3 CAN Interface 3 (System level) . . . 788
7.2 Ethernet Interfaces . . . 788

Released

7.3 Serial Interfaces . . . 790
7.3.1 RS-485 Interface (Serial Interface 2) . . . 790
7.3.2 USB interface (USB 2.0, slave) . . . 790
7.4 CANopen Protocol . . . 790
7.5 Modbus Protocol . . . 793
7.6 Load Sharing . . . 796
7.6.1 Load Share via CAN . . . 799
7.6.2 Load Share via UDP Broadcast Messages (Ethernet) . . . 800

8 Technical Specifications . . . 801
8.1 Technical Data . . . 801
8.1.1 Measuring Values . . . 802
8.1.2 Ambient Variables . . . 803
8.1.3 Inputs/Outputs . . . 803
8.1.4 Interfaces . . . 805
8.1.5 Real Time Clock Battery . . . 806
8.1.6 Display (plastic housing variant, only) . . . 806
8.1.7 Housing . . . 806
8.1.8 Approvals . . . 807
8.2 Environmental Data . . . 807
8.3 Accuracy . . . 808
8.4 Protection (ANSI) . . . 810

9 Appendix . . . 812
9.1 Paper strip (Metal Housing) . . . 812
9.2 Characteristics . . . 813
9.2.1 Triggering Characteristics . . . 813
9.2.2 VDO Inputs Characteristics . . . 818
9.2.2.1 VDO Input "Pressure" . . . 819
9.2.2.2 VDO Input "Temperature" . . . 821
9.2.2.3 Pt100 RTD . . . 824
9.2.2.4 Pt1000 RTD . . . 825
9.2.2.5 NTC-Sender "AB_94099" (AB-Elektronik Sachsen GmbH) . . . 826
9.3 Data Protocols . . . 826

Released

9.3.1 Protocol 5400 (Basic Visualization) . . . 827
9.3.2 Additional Data Identifier . . . 877
9.3.2.1 Receive Data (sent from remote control to the easY-I) . . . 877
9.3.2.2 Transmit Data (sent from easY-I to control external devices) . . . 885
9.3.2.3 Data Receive (interconnectivity) . . . 887
9.3.2.3.1 Introduction . . . 887
9.3.2.3.2 Analog variables CAN1 RPDO . . . 887
9.3.2.3.3 Commnand variables CAN 1 RPDO . . . 888
9.3.2.3.4 Free Analog Values . . . 891
9.3.2.4 Data Identifiers in General . . . 892
9.4 LogicsManager Reference . . . 894
9.4.1 LogicsManager Overview . . . 894
9.4.2 Logical Command Variables . . . 897
9.4.2.1 Group 01: Global alarms . . . 897
9.4.2.2 Group 02: System conditions . . . 897
9.4.2.3 Group 03: General control . . . 900
9.4.2.4 Group 04: Application conditions . . . 900
9.4.2.5 Group 05: General alarms . . . 903
9.4.2.6 Group 06: Generator related alarms . . . 903
9.4.2.7 Group 07: Mains related alarms . . . 904
9.4.2.8 Group 08: Syst. related alarms . . . 906
9.4.2.9 Group 09: Alarms discrete inputs . . . 908
9.4.2.10 Group 10: Alarms analog inputs . . . 908
9.4.2.11 Group 11: Clock and timer . . . 908
9.4.2.12 Group 12: External discrete inputs . . . 909
9.4.2.13 Group 13: Discrete outputs (physical state) . . . 910
9.4.2.14 Group 15: Flexible limits . . . 910
9.4.2.15 Group 16: Free alarms latched . . . 911
9.4.2.16 Group 17: System alarms . . . 912
9.4.2.17 Group 22: GC alarm flags . . . 912
9.4.2.18 Group 25: External analog inputs out of range . . . 914
9.4.2.19 Group 26: Flags from LSx 33-48 (Layer 1) . . . 914

Released

9.4.2.20 Group 27: Flags from LSx 49-64 (Layer 1) . . . 916
9.4.2.21 Group 28: LSx System conditions (Layer 1) . . . 919
9.4.2.22 Group 32: CAN1 Receive PDO1 . . . 919
9.4.2.23 Group 33: CAN1 Receive PDO2 . . . 919
9.4.2.24 Group 34: CAN1 Receive PDO3 . . . 920
9.4.2.25 Group 35: CAN1 Receive PDO4 . . . 921
9.4.2.26 Group 36: CAN1 Receive PDO5 . . . 921
9.4.2.27 Group 54: Modbus Master flags . . . 922
9.4.2.28 Group 55: Modbus master flags 2 (Inverter and DC Source alarms) . . . 924
9.4.2.29 Group 56: Inverter/DC source conditions . . . 927
9.4.2.30 Group 80: AnalogManager boolean results 0 (Inverter/DC source) . . . 928
9.4.2.31 Group 81: AnalogManager boolean results 1 . . . 928
9.4.2.32 Group 82: AnalogManager boolean results 2 (Flexible Limits) . . . 929
9.4.2.33 Group 85: LM results 0 (Inverter/DC source) . . . 930
9.4.2.34 Group 86: LM Results 1 . . . 931
9.4.2.35 Group 87: LM Results 2 . . . 932
9.4.2.36 Group 88: LM Results 3 (Free alarms) . . . 933
9.4.2.37 Group 90: AnalogManager Internal values 0 (Customer screens) . . . 934
9.4.2.38 Group 91: AnalogManager Internal values 1 . . . 934
9.4.2.39 Group 93: AnalogManager Analog outputs 1 . . . 935
9.4.2.40 Group 96: LM Internal flags 1 . . . 935
9.4.2.41 Group 98: LM External DOs 1 . . . 936
9.4.2.42 Group 99: LM Internal DOs 1 . . . 937
9.4.3 Logical Symbols . . . 938
9.4.4 Logical Outputs . . . 939
9.4.5 Factory Settings . . . 949
9.5 AnalogManager Reference . . . 958
9.5.1 AnalogManager Overview . . . 958
9.5.2 Data Sources AM . . . 959
9.5.2.1 Group 01: Generator values . . . 959
9.5.2.2 Group 02: Mains values . . . 961
9.5.2.3 Group 03: Busbar 1 values . . . 963

Released

9.5.2.4 Group 05: Controller setpoints . . . 964
9.5.2.5 Group 06: DC analog inputs . . . 966
9.5.2.6 Group 10: Internal values . . . 967
9.5.2.7 Group 11: General values . . . 968
9.5.2.8 Group 13: Constants . . . 969
9.5.2.9 Group 15: Controller setpoints 2 . . . 969
9.5.2.10 Group 21: CAN1 Receive . . . 969
9.5.2.11 Group 24: Free analog values . . . 970
9.5.2.12 Group 54: Modbus Master pulled flags . . . 970
9.5.2.13 GROUP: 55: Modbus Master flags2 (Inverter and DC source) . . . 973
9.5.2.14 GROUP: 56: (Inverter/DC source) . . . 976
9.5.2.15 GROUP: 80: Results 0 . . . 976
9.5.2.16 Group 81: Results 1 . . . 976
9.5.2.17 Group 82: Results 2 . . . 977
9.5.2.18 Group 90: Internal Values 0 . . . 978
9.5.2.19 Group 91: Internal Values 1 . . . 979
9.5.2.20 Group 93: Analog Outputs 1 . . . 979
9.5.3 Factory Settings . . . 980
9.6 Status, Event And Alarm Reference . . . 989
9.6.1 Status messages . . . 989
9.6.2 Event History . . . 992
9.6.3 Event Message . . . 992
9.6.4 Alarm Classes . . . 994
9.6.5 Alarm Messages . . . 995
9.6.5.1 No alarm . . . 995
9.6.5.2 Generator monitoring . . . 995
9.6.5.3 Busbar monitoring . . . 997
9.6.5.4 Mains monitoring . . . 998
9.6.5.5 Operating Range Monitoring . . . 1000
9.6.5.6 Breaker Monitoring . . . 1002
9.6.5.7 CANopen Monitoring . . . 1004
9.6.5.8 Ethernet Communication Monitoring . . . 1004

Released

9.6.5.9 Multi-unit Monitoring 1004

9.6.5.10 Flexible Limits Monitoring 1005

9.6.5.11 Digital Inputs Monitoring 1006

9.6.5.12 External Digital Inputs Monitoring 1007

9.6.5.13 Wire Break Monitoring (of internal and external analog inputs) 1008

9.6.5.14 Free Configurable Alarms 1009

9.6.5.15 Miscellaneous Monitoring 1009

9.6.5.16 Inverter Monitoring 1010

9.6.5.17 DC Source Monitoring (Individual rack faults) 1011

9.6.5.18 DC Source Monitoring (System alarms) 1012

9.7 Formulas 1013

9.7.1 Conversion Factors 1013

9.7.2 Load Dependent Start Stop (LDSS) Formulas 1013

10 List Of Abbreviations 1016

11 Index 1019

Released

1 General Information

1.1 Revision History

Rev.	Date	Editor	Changes
A	2022-12	Lu	**Technical Manual - 1st release** • Describing device software release 2.13-0

Up to date documentation?

Please check Woodward web site for latest revision of this Technical Manual (search for: “37957”).

The Technical Manual saved inside the device WILL NOT be automatically updated with a device update but manual update can be done on customer’s side using the USB connection.

1.2 Depiction Of Notes And Instructions

Safety instructions

Safety instructions are marked with symbols in these instructions. The safety instructions are always introduced by signal words that express the extent of the danger.

DANGER!

This combination of symbol and signal word indicates an immediately-dangerous situation that could cause death or severe injuries if not avoided.

WARNING!

This combination of symbol and signal word indicates a possibly-dangerous situation that could cause death or severe injuries if it is not avoided.

CAUTION!

This combination of symbol and signal word indicates a possibly-dangerous situation that could cause slight injuries if it is not avoided.

NOTICE!

This combination of symbol and signal word indicates a possibly-dangerous situation that could cause property and environmental damage if it is not avoided.

Released


Tips and recommendations



This symbol indicates useful tips and recommendations as well as information for efficient and trouble-free operation.

Additional markings

To emphasize instructions, results, lists, references, and other elements, the following markings are used in these instructions:

Marking	Explanation
⚙	Start of a procedure list
>	Prerequisite for a procedure list
▷	Step-by-step instructions
▶	Results of action steps
	References to sections of these instructions and to other relevant documents
•	Listing without fixed sequence
☼	Example
»Buttons«	Operating elements (e.g. buttons, switches), display elements (e.g. signal lamps)
»Display«	Screen elements (e.g. buttons, programming of function keys)
[Screen xx / Screen xy / Screen xz] ...	Menu path. The following information and setting refer to a page on HMI screen or ToolKit located as described here.
	Some parameters/settings/screens are available only either in ToolKit **or** in HMI/display.



Dimensions in Figures

All dimensions shown with no units specified are in **mm**.

1.2.1 Copyright And Disclaimer

Disclaimer

All information and instructions in this manual have been provided under due consideration of applicable guidelines and regulations, the current and known state of the art, as well as our many years of in-house experience. Woodward assumes no liability for any damages due to:

- Failure to comply with the instructions in this manual
- Improper use / misuse
- Willful operation by non-authorized persons
- Unauthorized conversions or non-approved technical modifications

Released

- Use of non-approved spare parts

The originator is solely liable for the full extent for damages caused by such conduct. The obligations agreed-upon in the delivery contract, the general terms and conditions, the manufacturer's delivery conditions, and the statutory regulations valid at the time the contract was concluded, apply.

Copyright

This manual is protected by copyright. No part of this manual may be reproduced in any form or incorporated into any information retrieval system without written permission of Woodward GmbH.

Delivery of this manual to third parties, duplication in any form - including excerpts - as well as exploitation and/or communication of the content, are not permitted without a written declaration of release by Woodward GmbH.

Actions to the contrary will entitle us to claim compensation for damages. We expressly reserve the right to raise any further accessory claims.

1.2.2 Service And Warranty

Our Customer Service is available for technical information.

For regional support, please refer to: ⟹ http://www.woodward.com/Support_pgd.aspx.

In addition, our employees are constantly interested in new information and experiences that arise from usage and could be valuable for the improvement of our products.

Warranty terms



Please enquire about the terms of warranty from your nearest Woodward representative.

For our contact search webpage please go to: ⟹ http://www.woodward.com/Directory.aspx

1.3 Safety

NOTICE!



Damage due to improper use!

Improper use of the device may cause damage to the device as well as connected components.

Improper use includes, but is not limited to:

- Storage, transport, and operation outside the specified conditions.

Released

1.3.1 Personnel

WARNING!



Hazards due to insufficiently qualified personnel!

If unqualified personnel perform work on or with the control unit hazards may arise which can cause serious injury and substantial damage to property.

- Therefore, all work must only be carried out by appropriately qualified personnel.

This manual specifies the personnel qualifications required for the different areas of work, listed below:

Personnel:

- **Qualified electrician**

  The qualified electrician is able to execute tasks on electrical equipment and independently detect and avoid any possible dangers due to his training, expertise and experience, as well as knowledge of all applicable regulations.

  The qualified electrician has been specially trained for the work environment in which he is active and is familiar with all relevant standards and regulations.

- **User**

  The user operates the device within the limits of its intended use, without additional previous knowledge but according to the instructions and safety notes in this manual.

The workforce must only consist of persons who can be expected to carry out their work reliably. Persons with impaired reactions due to, for example, the consumption of drugs, alcohol, or medication are prohibited.

When selecting personnel, the age-related and occupation-related regulations governing the usage location must be observed.

Released

1.3.2 General Safety Notes

Electrical hazards

DANGER!



Life-threatening hazard from electric shock!

There is an imminent life-threatening hazard from electric shocks from live parts. Damage to insulation or to specific components can pose a life-threatening hazard.

- Only a qualified electrician should perform work on the electrical equipment.
- Immediately switch off the power supply and have it repaired if there is damage to the insulation.
- Before beginning work at live parts of electrical systems and resources, cut the electricity and ensure it remains off for the duration of the work. Comply with the five safety rules in the process:
  - cut electricity;
  - safeguard against restart;
  - ensure electricity is not flowing;
  - earth and short-circuit; and
  - cover or shield neighboring live parts.
- Never bypass a fuse or render it inoperable. Always use the correct amperage when changing a fuse.
- Keep moisture away from live parts. Moisture can cause short circuits.

Prime mover safety

WARNING!



Hazards due to insufficient prime mover protection ??

The engine, turbine, or other type of prime mover should be equipped with an overspeed (over-temperature, or over-pressure, where applicable) shutdown device(s), that operates totally independently of the prime mover control device(s) to protect against runaway or damage to the engine, turbine, or other type of prime mover with possible personal injury or loss of life should the mechanical-hydraulic governor(s) or electric control(s), the actuator(s), fuel control(s), the driving mechanism(s), the linkage(s), or the controlled device(s) fail.

Device implemented self test

this Woodward device has a self test check implemented. Permanently under control are:

- processor function and
- supply voltage.

The internal signal "self check" is aligned in series with the inverse signal »Ready for op. OFF« parameter 12580. Per default (factory settings) discrete output R01 is energized/closed if device itself is OK.

LogicsManager (LM) equation parameter ⮡ 12580 allows to customize this safety relay. You can use the result of this equation: LM command variable "99.01 LM: Ready for op. OFF".

Be careful in changing safety relevant settings!

CAUTION!

Uncontrolled operation due to faulty configuration

The discrete output "Ready for operation" must be wired in series with an emergency stop function.

This means that it must be ensured that the generator circuit breaker is opened and the sytem is stopped if this discrete output is de-energized.

If the availability of the plant is important, this fault must be signaled independently from the unit.

Modifications

WARNING!

Hazards due to unauthorized modifications

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment.

Any unauthorized modifications:

- constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage
- invalidate product certifications or listings.

Use of batteries/alternators

NOTICE!

Damage to the control system due to improper handling

Disconnecting a battery from a control system that uses an alternator or battery-charging device whilst the charging device is still connected causes damage to the control system.

- Make sure the charging device is turned off before disconnecting the battery from the system.

Released

Unit includes a lithium backup battery for Real Time Clock. Field replacement of the battery is not allowed.

In case of battery replacement please contact your Woodward service partner.

Electrostatic discharge

⚙

>

- Protective equipment: ESD wrist band

NOTICE!

Damage from electrostatic discharge

All electronic equipment sensitive to damage from electrostatic discharge, which can cause the control unit to malfunction or fail.

- To protect electronic components from static damage, take the precautions listed below.

1. ▷ Avoid build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as easily as synthetics.

2. ▷ 

Before working on terminals on the control unit, ground yourself by touching and holding a grounded metal object (pipes, cabinets, equipment, etc.) to discharge any static electricity.

Alternatively wear an ESD wrist band connected to ground.

3. ▷ 

Before any maintenance work on the control unit, ground yourself by touching and holding a grounded metal object (pipes, cabinets, equipment, etc.) to discharge any static electricity.

Alternatively wear an ESD wrist band connected to ground.

4. ▷ Keep plastic, vinyl, and Styrofoam materials (such as plastic or Styrofoam cups, cigarette packages, cellophane wrappers, vinyl books or folders, plastic bottles, etc.) away from the control unit, modules and work area.

5. ▷ Opening the control cover may void the unit warranty. Do not remove the printed circuit board (PCB) from the control cabinet unless instructed by this manual.

Released

If instructed by this manual to remove the PCB from the control cabinet, follow these precautions:

- Ensure that the device is completely voltage-free (all connectors have to be disconnected).
- Do not touch any part of the PCB except the edges.
- Do not touch the electrical conductors, connectors, or components with conductive devices or with bare hands.
- When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.

For additional information on how to prevent damage to electronic components caused by improper handling, read and observe the precautions in:

- "Woodward manual 82715, Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules".

Notes on marine usage

Marine usage of the easY-I genset control requires additional precautions as listed below:

The specified marine approvals are initially only valid for metal housing units. They are only valid for plastic housing units, if they are installed using the screw kit .

- Use all 12 screws and tighten accordingly.

- The easY-I-3000XT Series has an internally isolated power supply.

Some additional, independent safety and protection devices are necessary to meet safety requirements of Rules and Regulations of marine Classification Societies.

- Please refer to the corresponding documents issued by marine Classification Societies for the applicable requirements.

The easY-I is type approved by LR Lloyd's Register.

- Please consider for final functional arrangements to comply with appropriate Lloyd's Register Rules as subject of the Plan Approval process.

1.3.3 Protective Equipment And Tools

Protective gear

Personal protective equipment serves to protect risks to the safety and health of persons as well as to protect delicate components during work.

Released

Certain tasks presented in this manual require the personnel to wear protective equipment. Specific required equipment is listed in each individual set of instructions.

The cumulative required personal protective equipment is detailed below:

Protective equipment: ESD wrist band

The ESD (**e**lectro**s**tatic **d**ischarge) wrist band keeps the user's body set to ground potential. This measure protects sensitive electronic components from damage due to electrostatic discharge.

Tools

Use of the proper tools ensures successful and safe execution of tasks presented in this manual.

Specific required tools are listed in each individual set of instructions.

The cumulative required tools are detailed below:

Special tool: Torque screwdriver

A torque-screwdriver allow fastening of screws to a precisely specified torque.

- Note the required torque range individually specified in the tasks listed in this manual.

1.3.4 Intended Use

This control unit has been designed and constructed solely for the intended use described in this manual.

The easY-I-... devices are available in two different enclosures. They are designed to be installed either on the back plate of a switch gear cabinet (e.g. easY-I-x100.../...-x400...) or on the front plate of a switch gear panel (e.g. easY-I-x200.../...-x500...).The terminals are always located on the inner side of the housing.

This control unit must be used exclusively for DC source inverter system management applications.

- Intended use requires operation of the control unit within the specifications listed in “8.1 Technical Data”.
- All permissible applications are outlined in “2.2 Application Modes Overview”.
- Intended use also includes compliance with all instructions and safety notes presented in this manual.
- Any use which exceeds or differs from the intended use shall be considered improper use!
- No claims of any kind for damage will be entertained if such claims result from improper use.

Released

2 System Overview

2.1 Display And Status Indicators

HMI and ToolKit are aligned for the same sequence and structure of functions and parameters.

Restrictions

Full access to all parameters and settings with ToolKit only!

Low ambient temperature (LT) ....

easY-I-3x00XT-P1**-LT** - the special version of the plastic housing device with HMI/display - is equipped with a heatable display.

Heater is automatically switched ON when ambient temperature drops below -20 °C and the result »86.34 LM: Enable heater« (11972) of LM »7799 Enable front foil heater« is TRUE. Even if the device has no front foil heater because it is no ...-LT variant, both the LogicsManager and the parameter are available but without function!

During heating period the power consumption is increased by 7.5 W.

WARNING!

HMI buttons can be locked!

HMI buttons can be locked/unlocked with the LogicsManager LM 12978 »Lock keypad«. Check/use with Logical Command Variable 86.30 (11924).

Released

2.1.1 HMI: Display and Buttons

Front Panel Overview

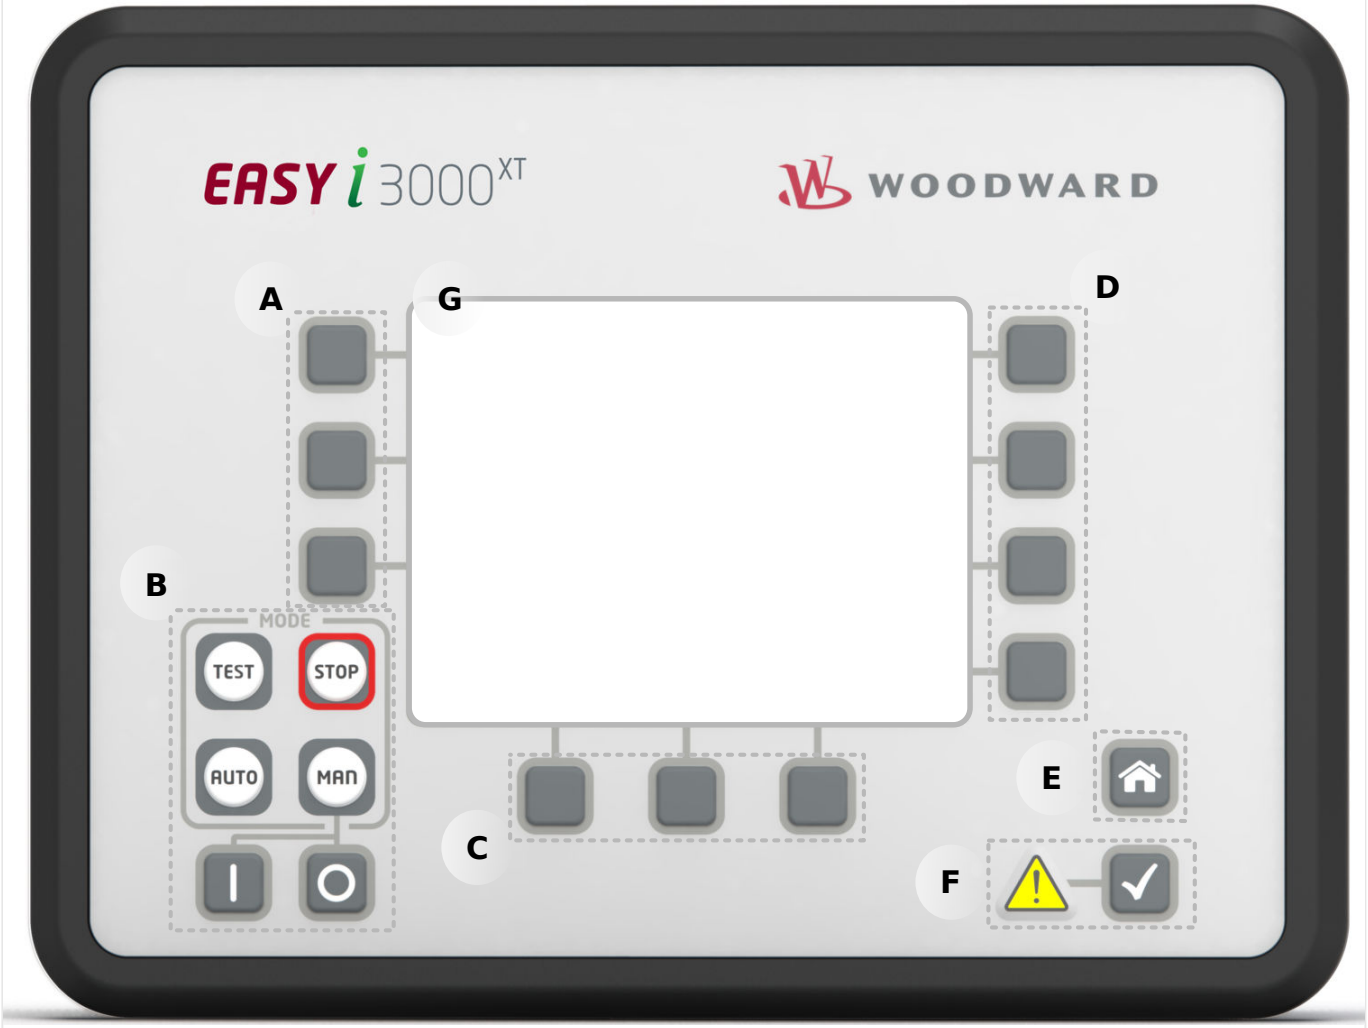


Fig. 3: Front Panel, Overview of Functional Groups of easY-I-3000XT with plastic housing

A	Softbutton Group "Display"
B	Button Group "MODE"
C	Softbutton Group "Operation"
D	Softbutton Group "Navigation"
E	"Home" (screen) button
F	Group "ALARMS" (sign and button)
G	LCD Display (Screen)

A "Display"	Change the method of voltage and power calculations displayed, select Custom Screen, navigate through menu screens.
C "Operation"	Perform manual operation of the genset and the breakers (Single Line Diagram).

Released

	Sometimes used for settings' input.
D "Navigation"	Navigation between system and configuration screens, and alarm list.

Released

Front Panel (HMI) in Detail

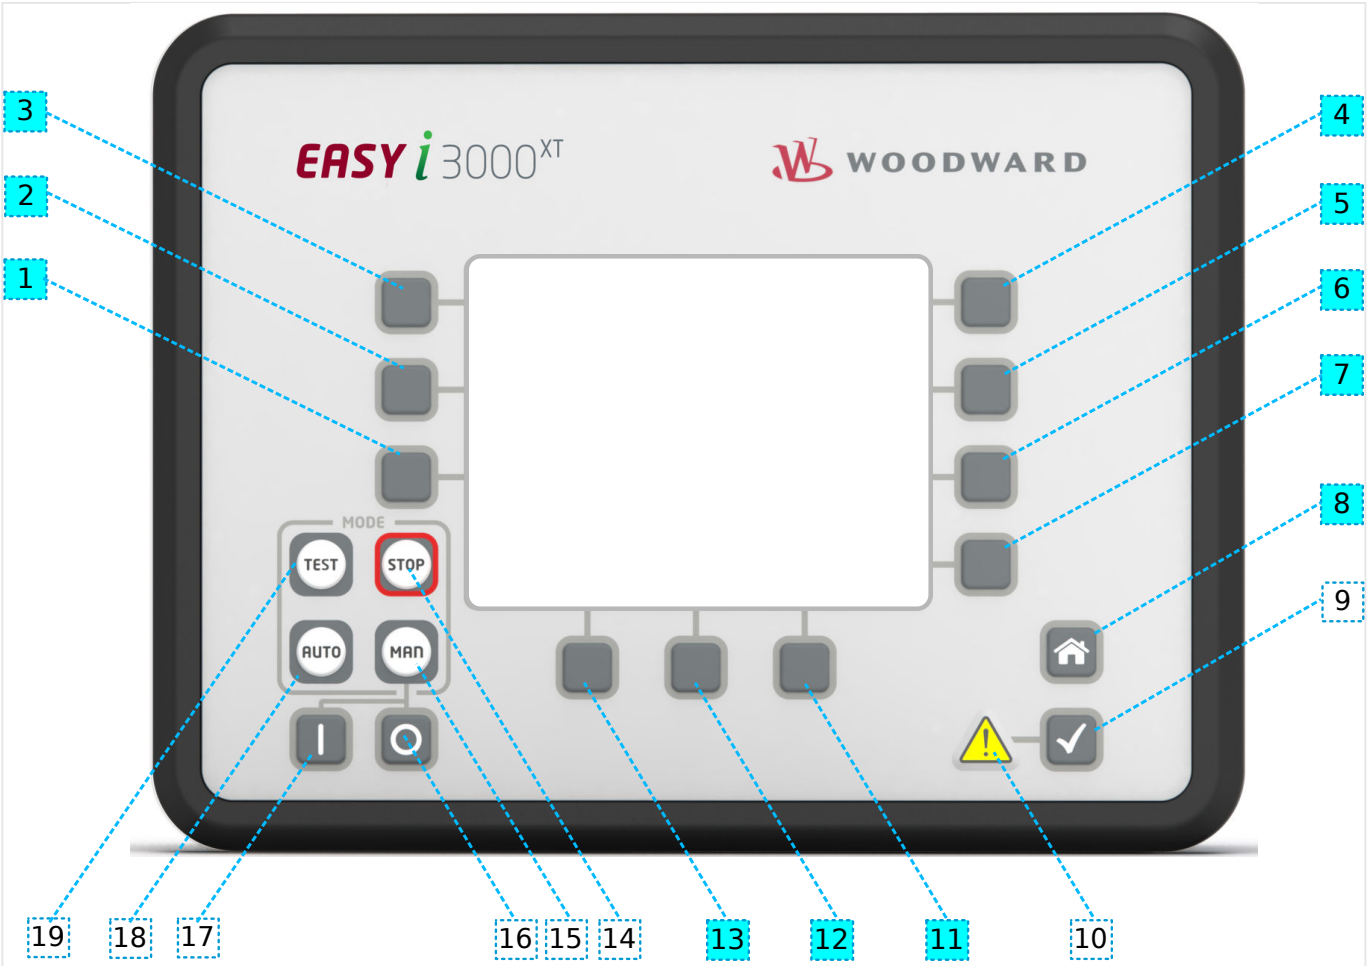


Fig. 4: Front panel of easY-I-3000XT with plastic housing

1..7, 11..13	SoftKey Buttons; momentary function visible in "Display" (20)
11..13	SoftKey Buttons controlling system via Single Line Diagram (if visible)
8	HOME Button: Back to main screen with one click only
9..10	Warning sign (illuminated by warning) and alarm acknowledge button
14..19	Button Group "Modes"
14, 15, 18, 19	MODE selectors, illuminated
14	STOP MODE
15	MANUAL MODE
16	STOP inverter in MANUAL MODE
17	START inverter in MANUAL MODE
18	AUTO MODE
19	TEST MODE
20	Display

Numbers with light blue (grey) background point to directly display related buttons: the softkeys and the home button.

Display

The display shows context-sensitive softkey symbols, the Single Line Diagram, measuring values, monitoring values and graphs, modes of operation, (graphic) equations of LogicsManager (LM) and AnalogManager (AM), and alarms.

Restrictions of Text Length Displayed

Depending on the available free space, at some positions in the display only the following amount of characters is visible:

- the first 20 ASCII characters

  or

- the first 7 Chinese characters

  or

- the first 8 Japanese characters.

- Five “Home Screen” display alternatives are available:
  - Generator (Inverter)
  - Generator (Inverter)/Mains
  - Generator (Inverter)/Busbar
  - Generator (Inverter)/DC
  - Generator (Inverter)/LSx
  - The "selection" of the displayed parameters is depending on softbutton »display mode«
- “Home Screen” Generator values are:
  - Voltage, power, frequency, power factor, and three currents
- “Home Screen” Generator/Mains values are:
  - The mains is indicated with voltage, power, frequency, power factor, and current
  - The inverter is indicated with voltage, power, frequency, power factor, and three currents
- “Home Screen” Generator/Busbar values are:
  - The busbar is indicated with voltage, power, and frequency
  - Additionally the generated active- and reactive power of all easY-Is (in the same segment) are displayed

Released

- “Home Screen” Generator/DC Source values are:
  - DC source "State" (Online,Offline)
  - Number of racks in service
  - DC voltage
  - DC current
  - SOC
  - SOH
- “Home Screen” Generator/LSx/GC values are:
  - The LSx is indicated with voltage, power and frequency
- Two display brightness levels can be switched by LogicsManager. Can be used for e.g.:
  - Key activation determined
  - Brightness reduction on navigation bridge (vessels)
  - Saving energy

    Find menu: [Parameter / Configure HMI / Configure display]
- Lock keypad function is determined by LogicsManager

  Find menu (ToolKit only!): [Parameter / Configure HMI / Configure display]

Illuminated Buttons/Warning

"Buttons"	14: operation mode STOP active (blinking if speed detected) 15: operation mode MANUAL active 18: operation mode AUTOMATIC active 19: operation mode TEST active (starts blinking 5 seconds before TEST mode with timer exceeds)
"ALARMS"	10 (Warning sign triangle): **Slow blinking** (about once per second): Alarm messages are active and **not acknowledged** in the control unit. **Fast blinking** (about 6 times per second): Internal copy process after flashing a software update is still running or load the default settings is initiated. **Permanently illuminated**: Alarm message is acknowledged (horn reset) but still pending.

The HOME Button

NEW and updated features

- The “Home Screen” button provides an one-click-jump back to the overview starting point

STOP Mode button

The "STOP" button is always ready (independent of context) but function depends on operating mode! **It is a "STOP-Mode" button!**

When operating modes are selected externally (via "86.16 LM: Operat. mode AUTO", "86.17 LM: Operat. mode MAN", "86.18 LM: Operat. mode STOP" or "86.29 LM: Operat. mode TEST"), the STOP, AUTO, TEST and MAN Mode buttons are disabled automatically.

This is also the case when "86.30 LM: Lock keypad 1" is active.

Custom. Button



Fig. 5: Softbuttons: Customized screen 1, 2

Two customizable softbuttons »1« and »2«

- allow own indications to display values of the AnalogManager pool.

  Find menu: [Parameter / Configure HMI / Configure customer screen 1],

  and [Parameter / Configure HMI / Configure customer screen 2]

- (full access via ToolKit only; name/description cannot be changed via HMI)

2.1.2 LEDs Indicate State of Metal Housing Variant

The metal housing variant is coming with two DUO LEDs red/green/orange (orange = red/green simultaneously):

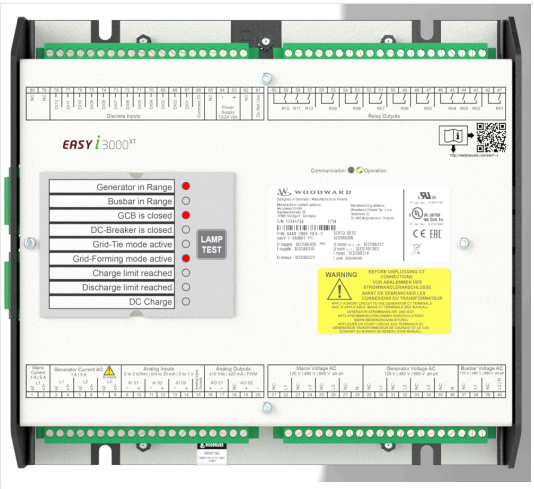


Fig. 6: easY-I-3400XT-P1 with metal housing

Released

LEDS on top view

- »Communication« for visualizing communication state:
  - Off: no data received by any CAN port
  - Toggling green/off: any data is received by any CAN port
  - Red: missing member alarm is active
  - Toggling red/green: missing member is active and data received by any CAN port
- »Operation« for device state indication:
  - Off: the unit is not ready for operation (depending on LogicsManager "Ready for operation)
  - Green: the unit is ready for operation and no alarm is active or latched
  - Toggling green/red: the unit is ready for operation and a warning alarm in the system is active or latched
  - Red: the unit is ready for operation and a shutdown alarm in the system is active or latched.
  - Green blinking fast (about 6 times per second) and red is permanently off: Internal copy process after flashing a software update is still running or "Load default settings" is initiated.

LEDS close to the Paper strip

These nine LEDs can be configured via LogicsManager they are preconfigured as

- Generator in Range
- Busbar in Range
- GCB is closed
- DC-Breaker is closed
- Grid-Tie mode active
- Grid-Forming mode active
- Charge limit reached
- Discharge limit reached
- DC Charge

For configuration refer to ↳ “LEDs (only for metal housing)”.

For paper strip refer to ↳ “9.1 Paper strip (Metal Housing)”.

Released

2.2 Application Modes Overview

The easY-I provides the following basic functions via the application modes listed below.



For detailed information on the application modes and special applications refer to “Device status”.

Application mode	Symbol	Function
None	A01	No breaker control. This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop
GCB open	A02	GCB control (open) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • Mains failure detection with mains decoupling (GCB)
GCB	A03	GCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • Mains failure detection with mains decoupling (GCB)
GCB/MCB	A04	GCB/MCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • MCB operation (relay outputs to open and close MCB) • Mains failure detection with mains decoupling (GCB and/or MCB) • Auto mains failure operation (AMF)
GCB/GGB	A05	GCB/GGB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB)

Released

Application mode	Symbol	Function
		• GGB operation (relay output to open and close the GGB) • Mains failure detection with mains decoupling (GCB)
GCB/GGB/MCB	A06	GCB/GGB/MCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • GGB operation (relay output to open and close the GGB) • MCB operation (relay outputs to open and close the MCB) • Mains failure detection with mains decoupling (GCB/MCB) • Auto mains failure operation (AMF)
GCB/LSx	A07	GCB/LSx control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • Connection to LS-5 system, LS-5 runs as independent unit (Mode “LS5”) • Auto mains failure operation (AMF) guided by LS-5 system **Note** Unless otherwise noted, ”LS-5“, ”LSx“, ”LS -6XT“ and ”easYgen|LS-6XT“ are used interchangeably in this document.
GCB/L-MCB	A08	GCB/L-MCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • MCB operation via LS-5, LS-5 runs as slave unit (Mode “L-MCB”) • Mains failure detection with mains decoupling via GCB or LS-5 (MCB) • Auto mains failure operation (AMF)
GCB/GGB/L-MCB	A09	GCB/GGB/L-MCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • GGB operation (relay output to open and close the GGB) • MCB operation via LS-5, LS-5 runs as slave unit (Mode “L-MCB”) • Mains failure detection with mains decoupling via GCB or LS-5 (MCB) • Auto mains failure operation (AMF)

Released

Application mode	Symbol	Function
GCB/L-GGB	A10	GCB/L-GGB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • GGB operation (relay output to open and close the GGB) • Mains failure detection with mains decoupling via GCB or LS-5 (MCB) • Auto mains failure operation (AMF)
GCB/L-GGB/L-MCB	A11	GCB/L-GGB/L-MCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • GGB operation via LS-5, LS-5 runs as slave unit (Mode “L-GGB”) • MCB operation via LS-5, LS-5 runs as slave unit (Mode “L-MCB”) • Mains failure detection with mains decoupling via GCB or LS-5 (MCB) • Auto mains failure operation (AMF)
GCB/L-GGBMCB	A12	GCB/L-GGBMCB control (open/close) This application mode provides the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • GGB and MCB operation via LS-5x2, LS-5 runs as slave unit (Mode “L-GGBMCB”) • Mains failure detection with mains decoupling via GCB or LS-5x2 (GGB or MCB) • Auto mains failure operation (AMF)
GCB/GC	A13	GCB/GC control (open/close) This application mode provides operation with Group Controller (GC) OR LSx the following functions: • Measuring of inverter/DC source parameters (i.e. voltage, frequency, current, power, DC voltage, state of charge, etc.) • Inverter start/stop • Inverter/DC source protection (relay output to open GCB) • GCB operation (relay output to close GCB) • Connection to LS5 system, LS5 runs as independent unit • Connection to GC system which is supporting different groups of generators • Auto mains failure operation (AMF) guided by LSx OR GC system

Released

2.3 Operation Modes

The easY-I-3000XT offers four operation modes:

- AUTO
- MANUAL (MAN)
- TEST
- STOP
- ... and an internal (non) operating phase during starting the device itself

The plastic housing (HMI) version of the easY-I-3000XT enables to select an operation mode by pressing the according button at the front panel - if current settings allow this function.

For more information about the operation modes please see “5.2 Change Operating Modes”.

Released

3 Installation

NOTICE!

Avoid electrostatic discharge!

Before working with terminals please read and follow the instructions of chapter “Electrostatic discharge”.

For CAN and RS485 shielded cabling, no more than 25 mm wiring exposed without shield coverage are allowed at terminal plug side.

3.1 Mount Unit (Sheet Metal Housing)

Dimensions

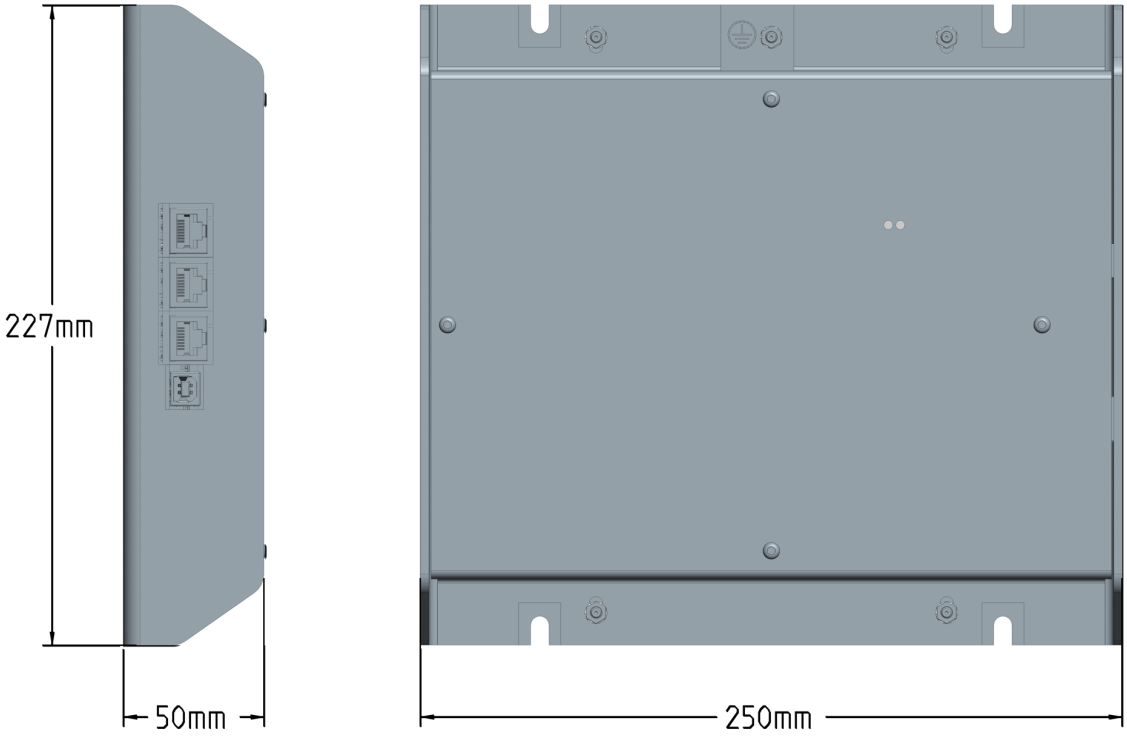


Fig. 7: Sheet metal housing - dimensions

Mounting into a cabinet

⚙

>

- Special tool: Torque screwdriver

Proceed as follows to install the unit using the screw kit:

Released

1. ▷

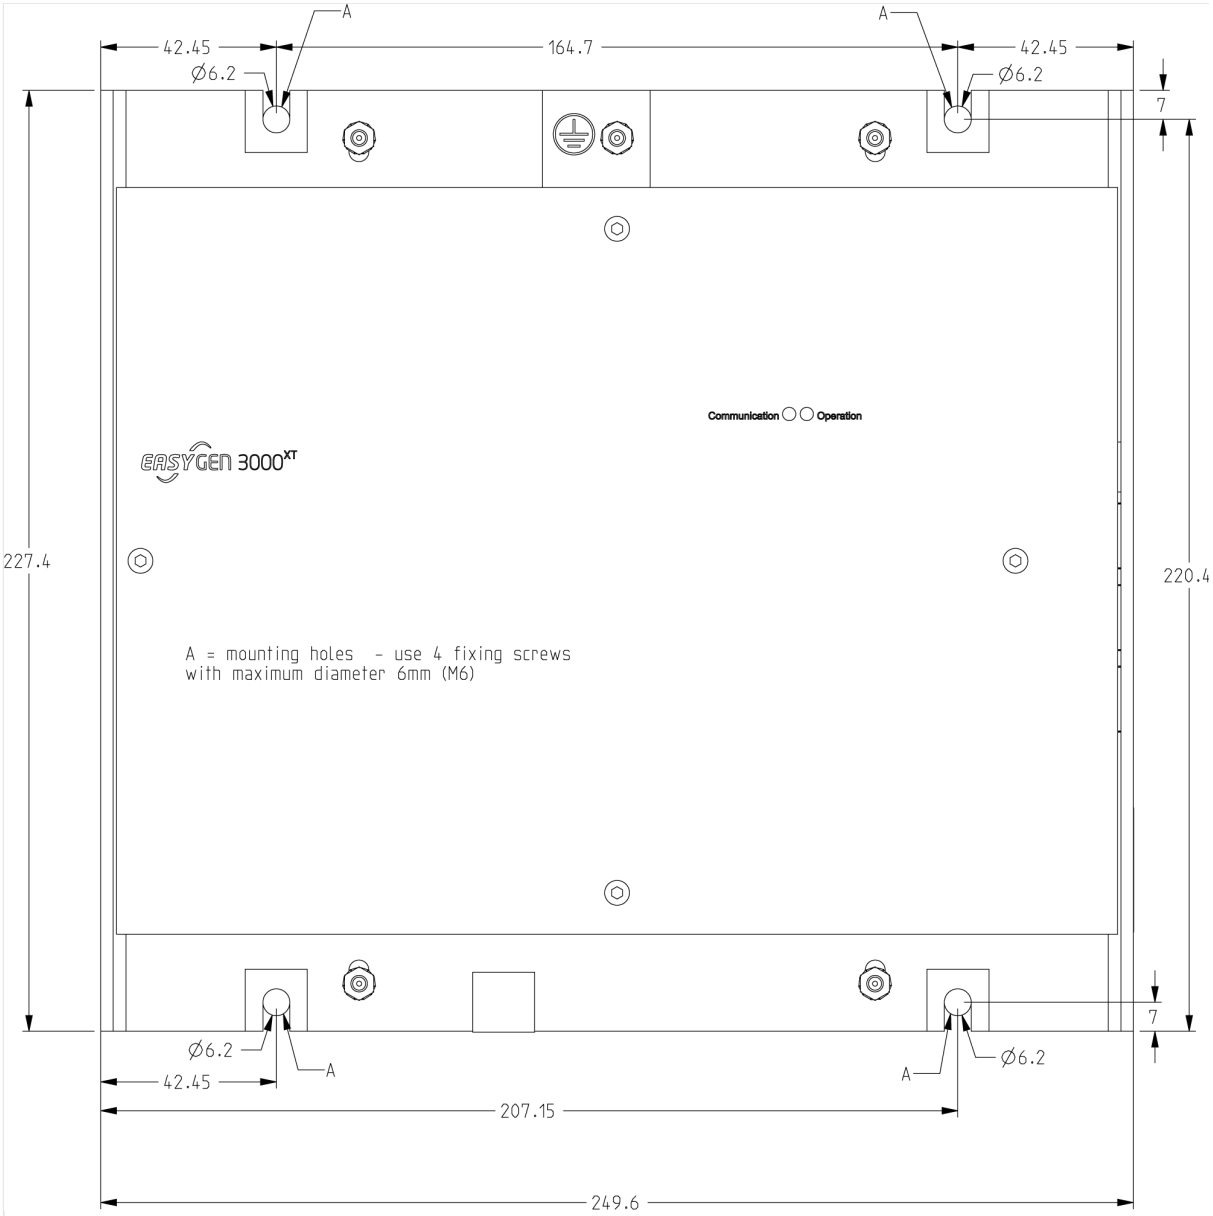


Fig. 8: Sheet metal housing - drill plan

Drill the holes according to the dimensions in ⮡▷ Fig. 8 (dimensions shown in mm).

Ensure sufficient clearance for access to the terminals (top and bottom) and connectors located at the sides.

2. ▷ Mount the unit to the back panel and insert the screws.

3. ▷ Tighten the screws to a torque according to the quality class of the used screws.

Tighten the screws with a crosswise pattern to ensure even pressure distribution.

Released

3.2 Mount Unit (Plastic Housing)

Mount the unit **either** using the clamp fasteners (“3.2.1 Clamp Fastener Installation”) **or** the screw kit (“3.2.2 Screw Kit Installation”).

- Don't drill holes if you want to use the clamp fasteners. If the holes are drilled into the panel, the clamp fasteners cannot be used anymore.
- In order to enhance the protection to IP 66, fasten the unit with the screw kit instead of the clamp fastener hardware.

Dimensions

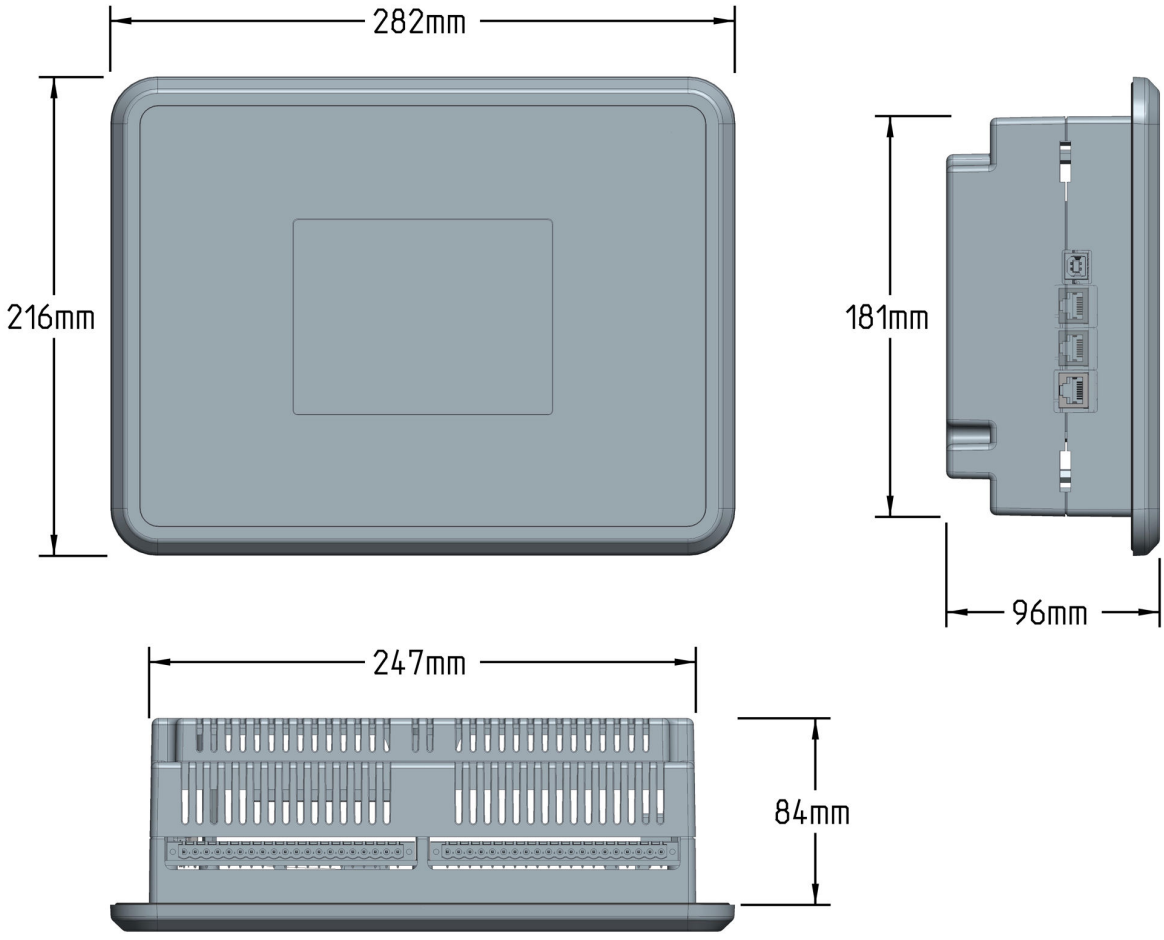


Fig. 9: Plastic housing - dimensions

Released

Panel cutout

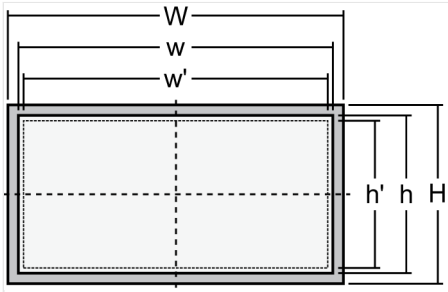


Fig. 10: Cutout schematic

Measure	Description			Tolerance
H	Height	Total	216 mm	—
h		Panel cutout	183 mm	+ 1.0 mm
h'		Housing dimension	181 mm	
W	Width	Total	282 mm	—
w		Panel cutout	249 mm	+ 1.1 mm
w'		Housing dimension	247 mm	
	Depth	Total	96.3 mm	—

The maximum permissible corner radius is 4 mm.

3.2.1 Clamp Fastener Installation

⚙

> For installation into a door panel with the fastening clamps, proceed as follows:

1. ▷ Cut out the panel according to the dimensions in Fig. 10.

Don't drill the holes if you want to use the clamp fasteners. If the holes are drilled into the panel, the clamp fasteners cannot be used anymore!

Released

2. ▷

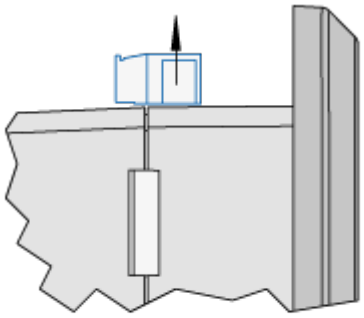


Fig. 11: Remove terminals

Loosen the wire connection terminal screws on the back of the unit and remove the wire connection terminal strip if required.

3. ▷



Fig. 12: Insert screws in clamps

Insert the four clamping screws into the clamp inserts from the shown side (↳▷ Fig. 12; opposite the nut insert) until they are almost flush. Do not completely insert the screws into the clamp inserts.

4. ▷ Insert the unit into the panel cutout. Verify that the unit fits correctly in the cutout. If the panel cutout is not big enough, enlarge it accordingly.

5. ▷

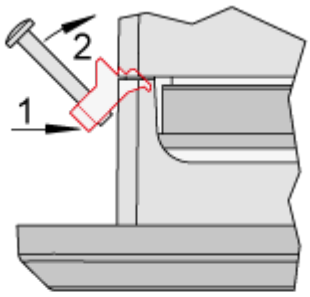


Fig. 13: Attach clamp inserts

Re-install the clamp inserts by tilting the insert to a 45° angle. (↳▷ Fig. 13/1) Insert the nose of the insert into the slot on the side of the housing. (↳▷ Fig. 13/2) Raise the clamp insert so that it is parallel to the control panel.

Released

6. ▷

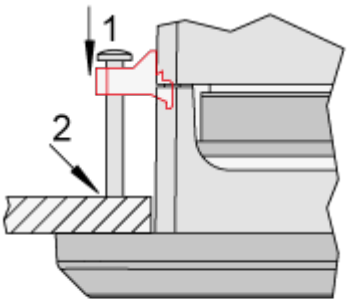


Fig. 14: Tighten clamping screws

Tighten the clamping screws (↳▷ Fig. 14/1) until the control unit is secured to the control panel (↳▷ Fig. 14/2). Over tightening of these screws may result in the clamp inserts or the housing breaking. Do not exceed the recommended tightening torque of 0.1 Nm.

7. ▷

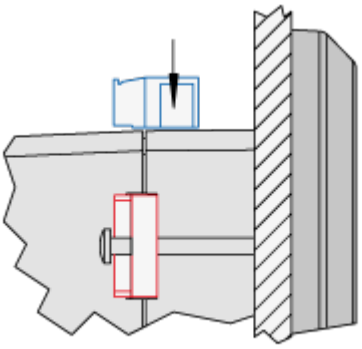


Fig. 15: Reattach terminals

Reattach the wire connection terminal strip (↳▷ Fig. 15) and secure them with the side screws.

3.2.2 Screw Kit Installation

The housing is equipped with 12 nut inserts (↳▷ Fig. 16), which must all be tightened properly to achieve the required degree of protection.

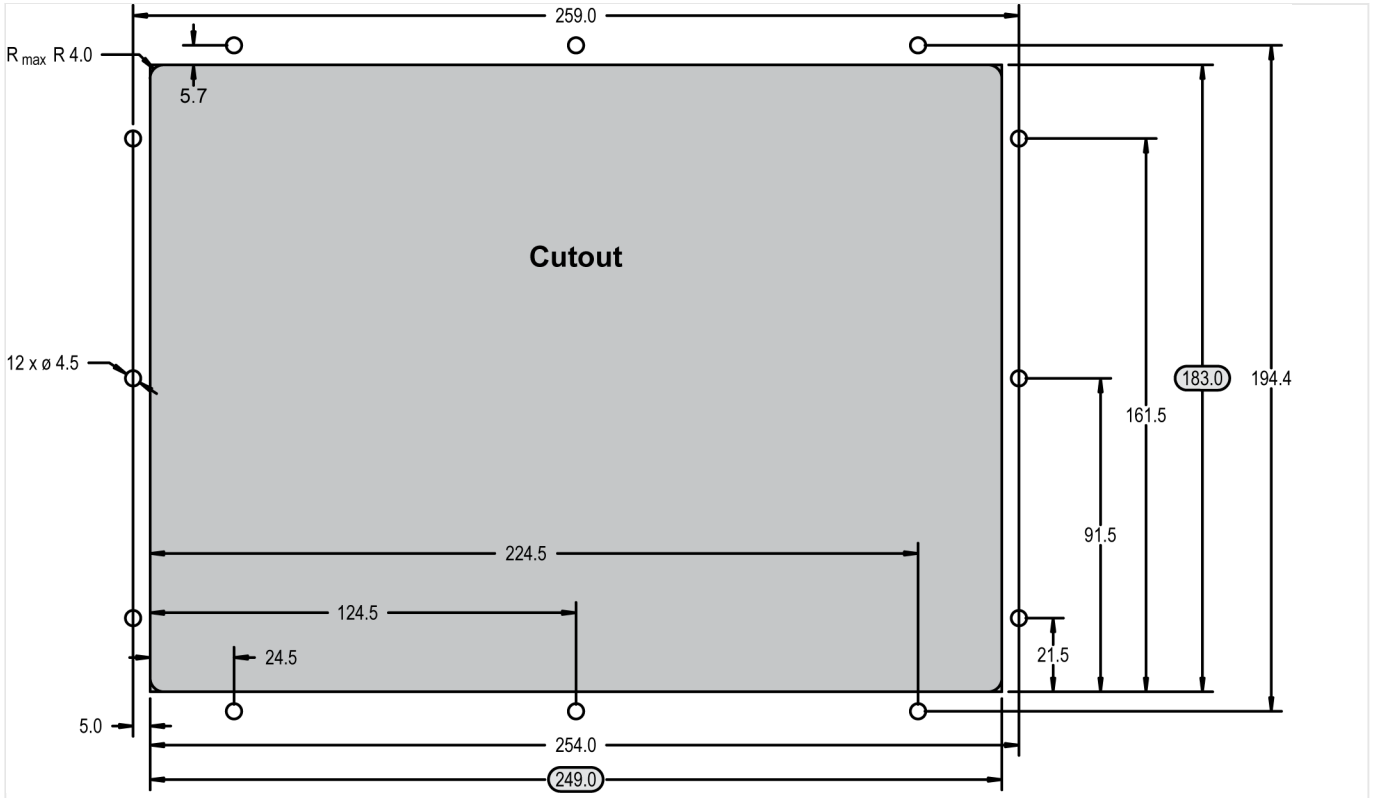


Fig. 16: Plastic housing - drill plan

⚙

>

- Special tool: Torque screwdriver

Proceed as follows to install the unit using the screw kit:

1. ▷ Cut out the panel and drill the holes according to the dimensions in ⮡▷ Fig. 16 (dimensions shown in mm).

2. ▷ Insert the unit into the panel cutout. Verify that the unit fits correctly in the cutout. If the panel cutout is not big enough, enlarge it accordingly.

3. ▷ Insert the screws and tighten to 0.6 Nm (5.3 pound inches) of torque.

Tighten the screws with a crosswise pattern to ensure even pressure distribution.

If the thickness of the panel sheet exceeds 2.5 mm, be sure to use screws with a length exceeding the panel sheet thickness by 4 mm.

Released

3.3 Setup Connections

NOTICE!

Avoid electrostatic discharge!

Before working with terminals please read and follow the instructions of chapter “Electrostatic discharge”.

For CAN and RS485 shielded cabling, no more than 25 mm wiring exposed without shield coverage are allowed at terminal plug side.

General notes

NOTICE!

Malfunctions due to literal use of example values

All technical data and ratings indicated in this chapter are merely listed as examples. Literal use of these values does not take into account all actual specifications of the control unit as delivered.

- For definite values please refer to chapter “8.1 Technical Data”.

Wire sizes

Field wiring shall be made with use of cables which have temperature rating not less than 90 °C.

AWG	mm²	AWG	mm²	AWG	mm²	AWG	mm²	AWG	mm²	AWG	mm²
30	0.05	21	0.38	14	2.5	4	25	3/0	95	600MCM	300
28	0.08	20	0.5	12	4	2	35	4/0	120	750MCM	400
26	0.14	18	0.75	10	6	1	50	300MCM	150	1000MCM	500
24	0.25	17	1.0	8	10	1/0	55	350MCM	185		
22	0.34	16	1.5	6	16	2/0	70	500MCM	240		

Table 1: Conversion chart - wire sizes

Released

3.3.1 Terminal Allocation

NOTICE!

Avoid electrostatic discharge!

Before working with terminals please read and follow the instructions of chapter “Electrostatic discharge”.

For CAN and RS485 shielded cabling, no more than 25 mm wiring exposed without shield coverage are allowed at terminal plug side.

The device terminals are allocated (similarly for all housing variants) as follows:

- Plastic housing - for easY-I-3500XT-P1 and easY-I-3500XT-P1-LT
- Sheet metal housing - for easY-I-3400XT-P1

The max. possible conductor cross-section of the terminals used is A_{max} = 2.5 mm^2!

LT Variant description

The temperature range is the only difference between standard plastic housing and LT variant.

The manual is describing plastic housing and metal housing variant. Describing the plastic housing means both standard and LT variant - if not, it is mentioned!

Released

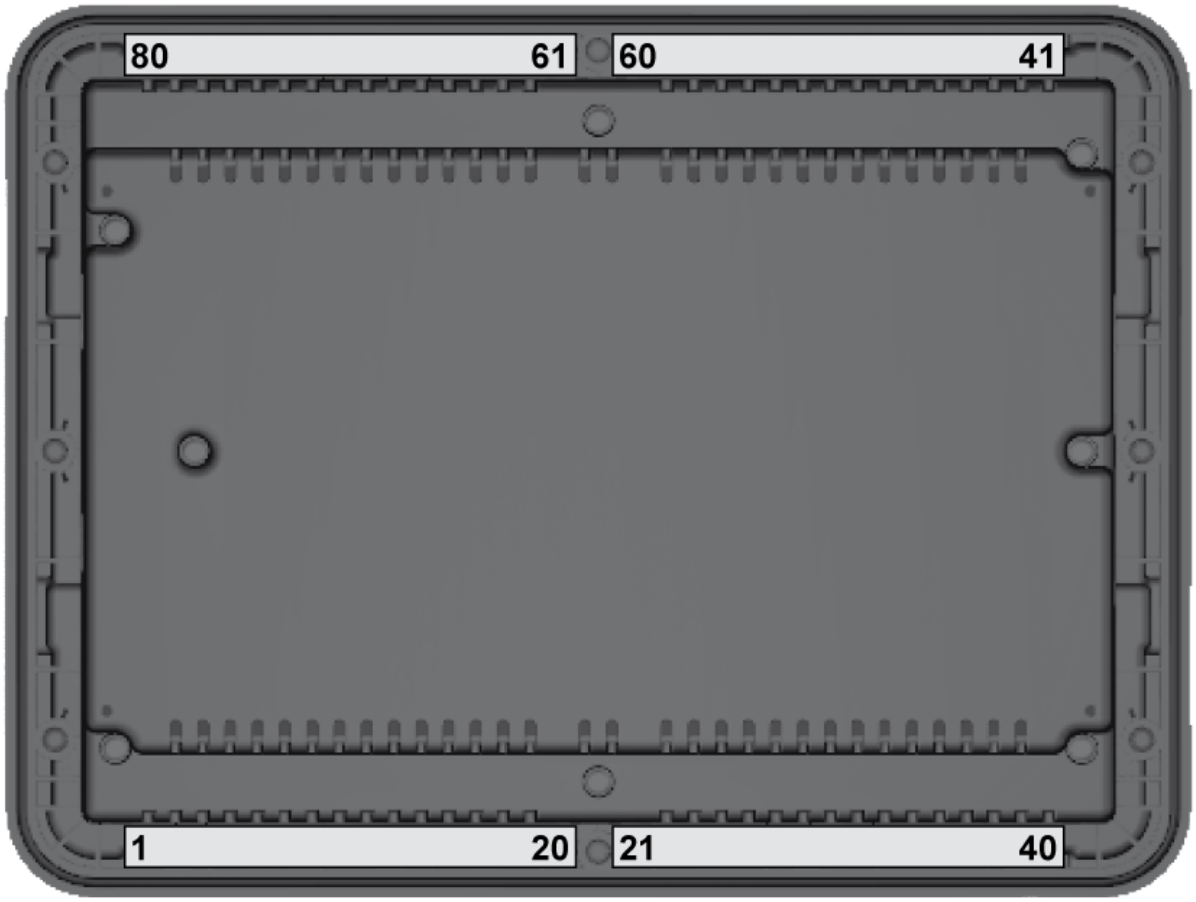


Fig. 17: Terminals easY-I-3000XT-P1(-LT) plastic housing

Released

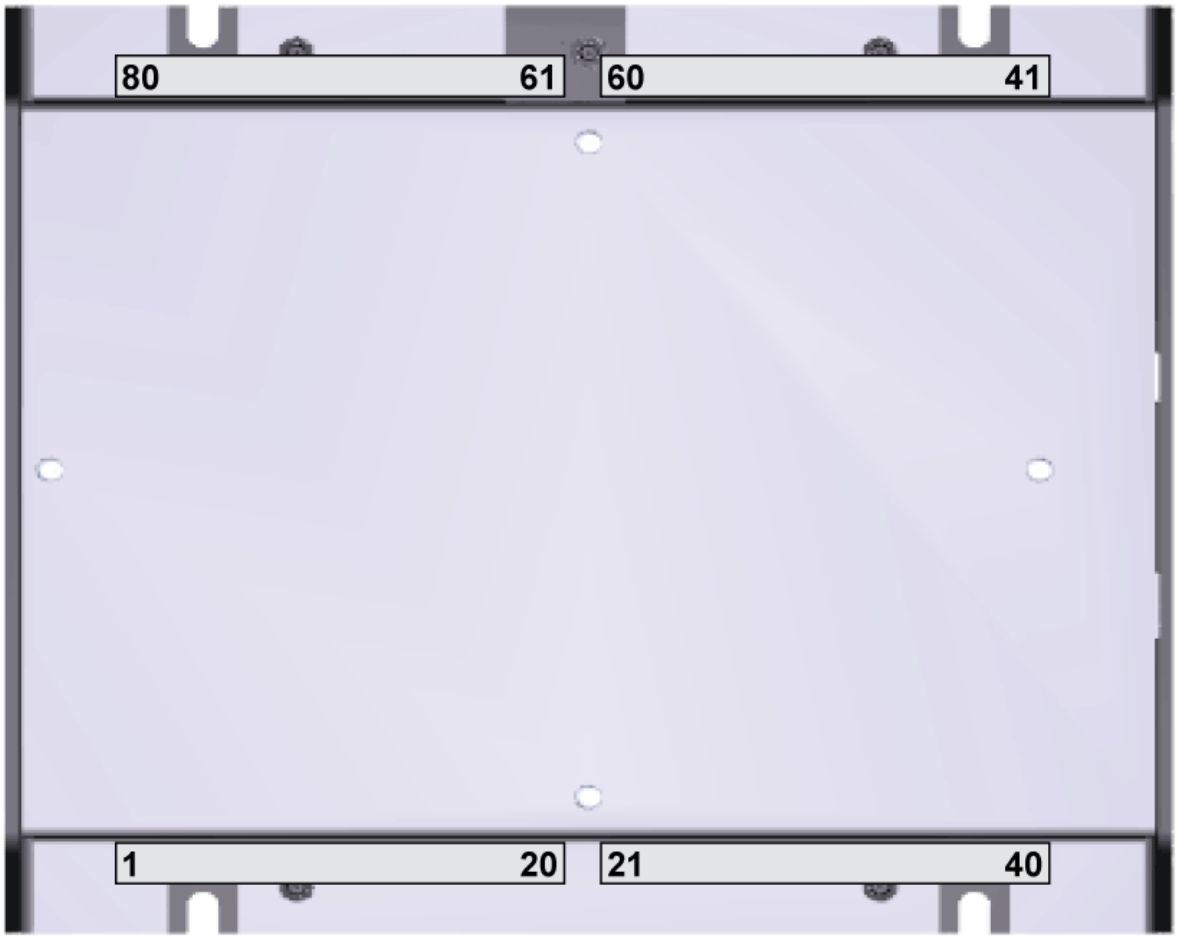


Fig. 18: Terminals easY-I-3000XT-P1 sheet metal housing

3.3.2 Wiring Diagram

The Protective Earth terminal 61 is not connected on the sheet metal housing.

- Use the protective earth (PE) connector located at the bottom center of the sheet metal housing instead.

Common terminal for AC measurement voltages

Mains, generator, and busbar voltage measuring terminals no longer differentiate with separate terminals for each voltage range.

Released



General recommendations

Ensure appropriate cable cross sections following the local standards and restrictions.

The maximum cable cross section of the terminal blocks is 2.5 mm^2.

For every type of signal lines like power supply, DI, DO, AI, AO:

- Return line has to be close to forward signal line.
- Use cables instead of single wires.
  - In case of using single wires please do at least one twist per meter to keep wires together closely.

Plastic housing variants:

- Rout all cables connected to terminal blocks **away** from back cover.

Released

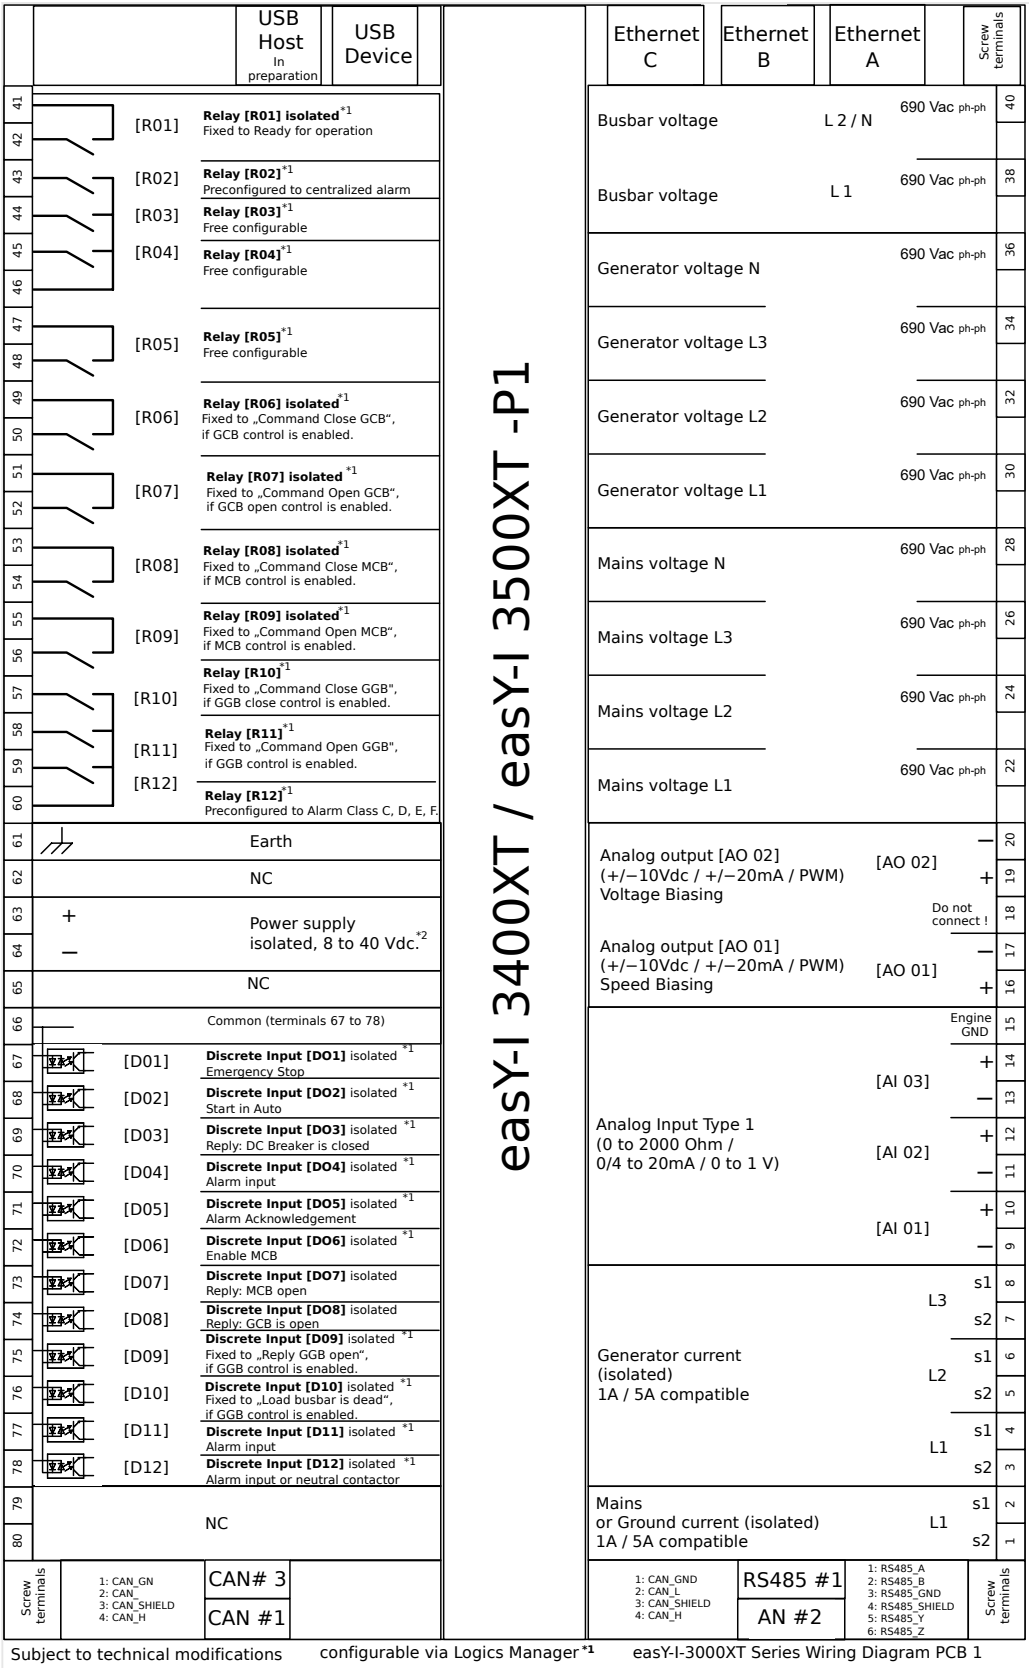


Fig. 19: Wiring diagram easY-I-3400XT/3500XT-P1(-LT)

1) Configurable by LogicsManager

2) V_{nom} = 12/24 V SELV

3) Pin 61: Metal housing: don't use

Plastic housing with HMI/display: Earth/ground

Released

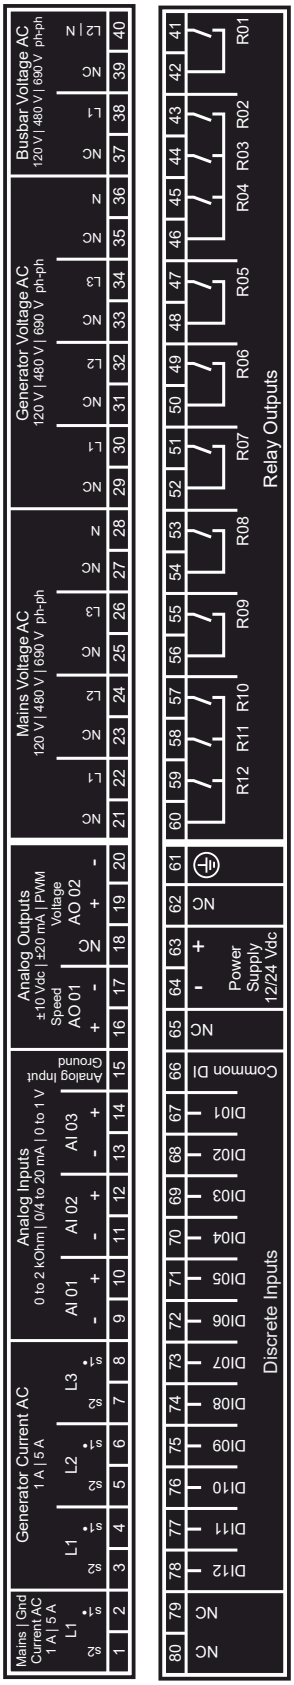


Fig. 20: Label/print easY-I-3400XT/3500XT-P1(-LT) wiring

1) Pin 61: Metal housing: don't use

Plastic housing with HMI/display: Earth/ground

Released

3.3.3 Power Supply

General notes

WARNING!



Risk of electric shock - plastic housing

- Connect Protective Earth (PE) to the unit to avoid the risk of electric shock.

  Setup the connection using screw-plug-terminal 61.

- The conductor providing the connection must have a wire larger than or equal to 2.5 mm² (14 AWG). The connection must be performed properly.

WARNING!



Risk of electric shock - sheet metal housing

- Connect Protective Earth (PE) to the unit to avoid the risk of electric shock.

  Use the protective earth (PE) connector located at the bottom center of the sheet metal housing.

- The conductor providing the connection must have a wire larger than or equal to 2.5 mm² (14 AWG). The cable length should be as short as possible.
- The connection must be performed properly.

WARNING!



Permissible differential voltage

The maximum permissible differential voltage between terminal 64 (B-) and terminal 61 (PE) is 100 V_{RMS}. On engines where a direct connection between battery minus and PE is not possible, it is recommended to use an isolated external power supply if the differential voltage between battery minus and PE exceeds 100 V_{RMS}.



Woodward strictly recommends to use a power supply that is fulfilling the SELV restrictions (SELV = separated or safety extra-low voltage, see IEC)



Woodward recommends to use one of the following slow-acting protective devices in the supply line to terminal 63:

- Fuse NEOZED D01 6A or equivalent **or**
- Miniature Circuit Breaker 6A / Type C

  (for example: ABB type: S271C6 or equivalent)

Released

Power ON

With power ON the easY-I-3000XT device is monitoring self preparation by some display on screen and button illumination. HOME screen shows the device is working.

Schematic and terminals

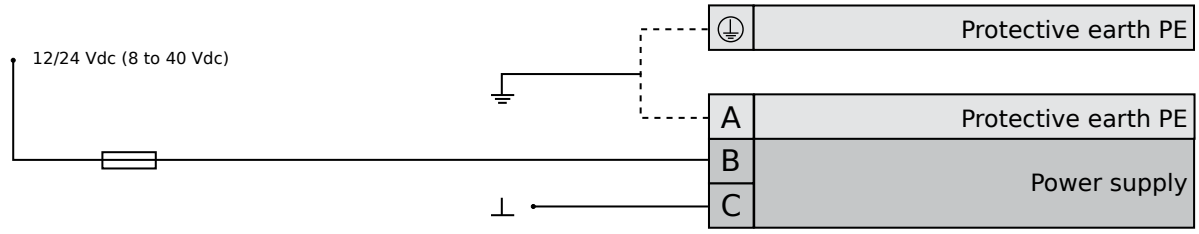


Fig. 21: Power supply – wiring

Terminal		Description
A	61	PE (protective earth) - plastic housing ONLY
B	63	12/24Vdc (8 to 40.0 Vdc)
C	64	0 Vdc

Table 2: Power supply - terminal assignment

Characteristics

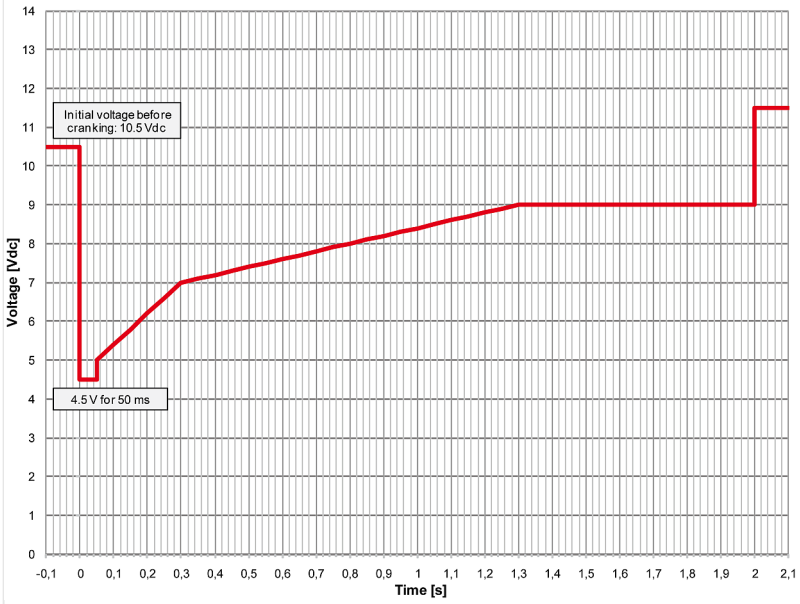


Fig. 22: Power supply – crank waveform

3.3.4 Voltage Measuring

General notes

Woodward recommends protecting the voltage measuring inputs with slow-acting fuses rated for 2 to 6 A.

The wide range terminals allow several voltages. The current voltage (range) of the application must be "told" to the genset controller device. Settings are described in chapter “4.6 Configure Measurement”.

NOTICE!

The maximum permissible voltage against ground connected on the easY-I is 600 Volt. This is to consider if phase voltages are grounded.

3.3.4.1 Generator Voltage

General notes

The voltage measuring inputs for 120 V, 480 V, and 690 V are using the same terminals 30 to 36. The current voltage range must be selected by the corresponding settings via HMI and/or ToolKit.

Parameter 1800 ("Gen. PT secondary rated volt.") must be configured to the correct value to ensure proper measurement.

Schematic and terminals

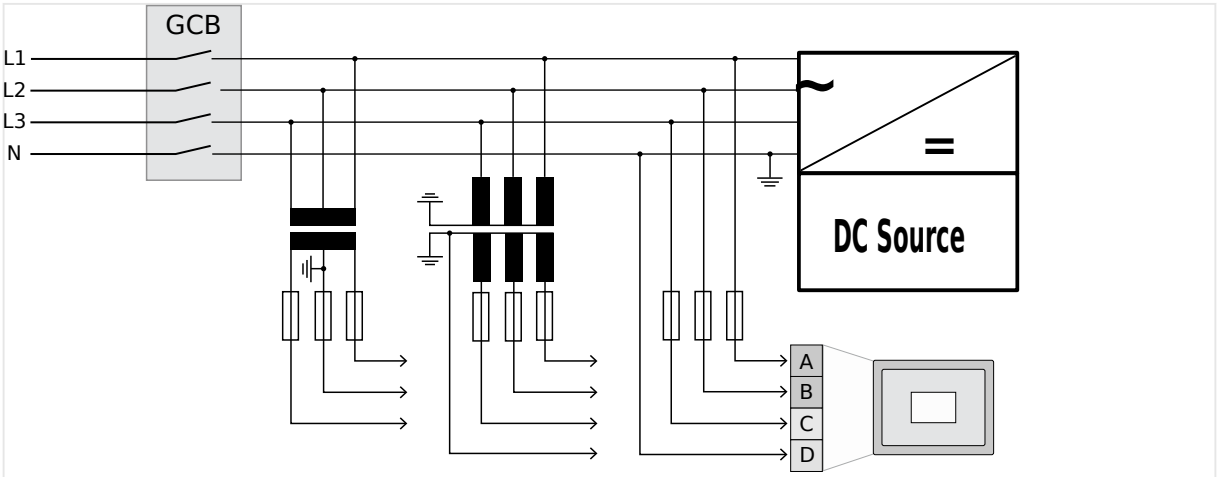


Fig. 23: Voltage measuring - generator - wiring

Released

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L2	B	32
Generator voltage - L3	C	34
Generator voltage - N	D	36

Table 3: Voltage measuring - generator - terminal assignment

3.3.4.1.1 Parameter Setting '3Ph 4W OD' (3-phase, 4-wire, Open delta)

Generator windings

A generator system that is connected to the load through a 3-phase, 4-wire connection but have the device wired for a 3-phase, 3-wire installation may have the L2 phase grounded on the secondary side. In this application the device will be configured for 3-phase, 4-wire OD for correct power measurement.

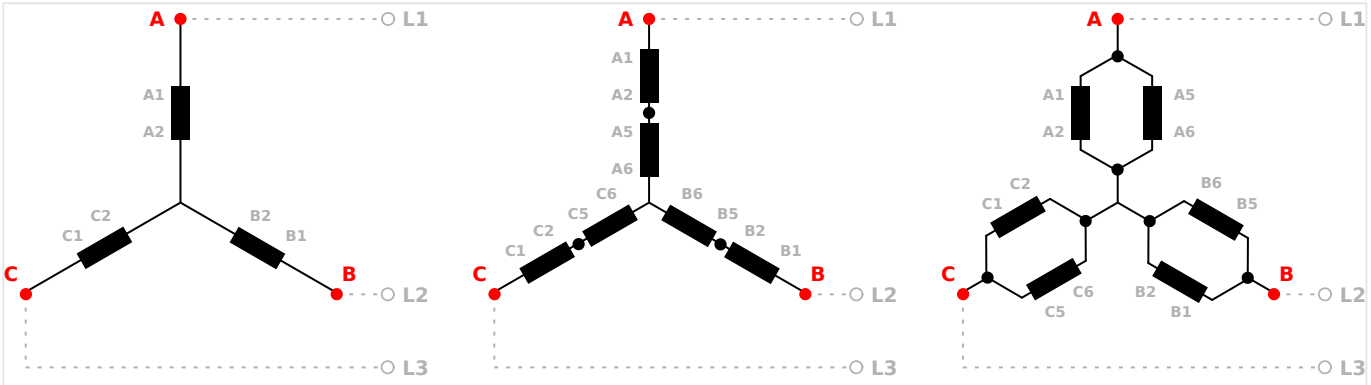


Fig. 24: Generator windings - 3Ph 4W OD

Measuring inputs

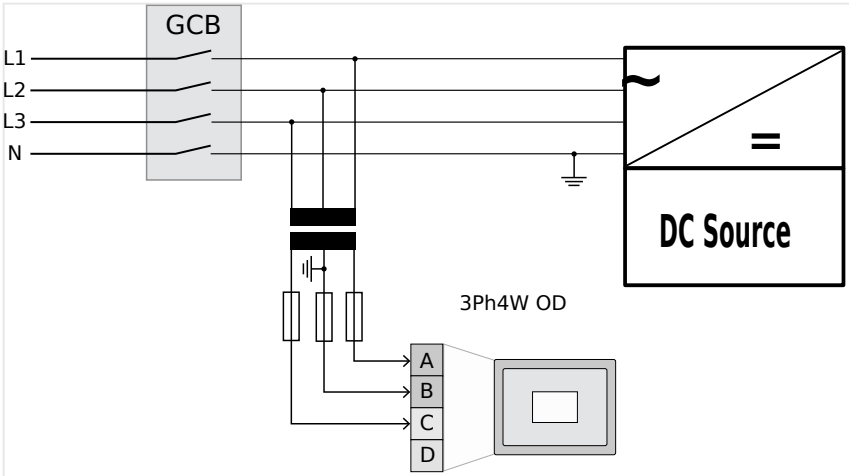


Fig. 25: Measuring inputs - 3Ph 4W OD

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L2	B	32
Generator voltage - L3	C	34
Generator voltage - N	-/-	

Table 4: Generator terminal assignment 3Ph 4W OD

3.3.4.1.2 Parameter Setting '3Ph 4W' (3-phase, 4-wire)

Generator windings

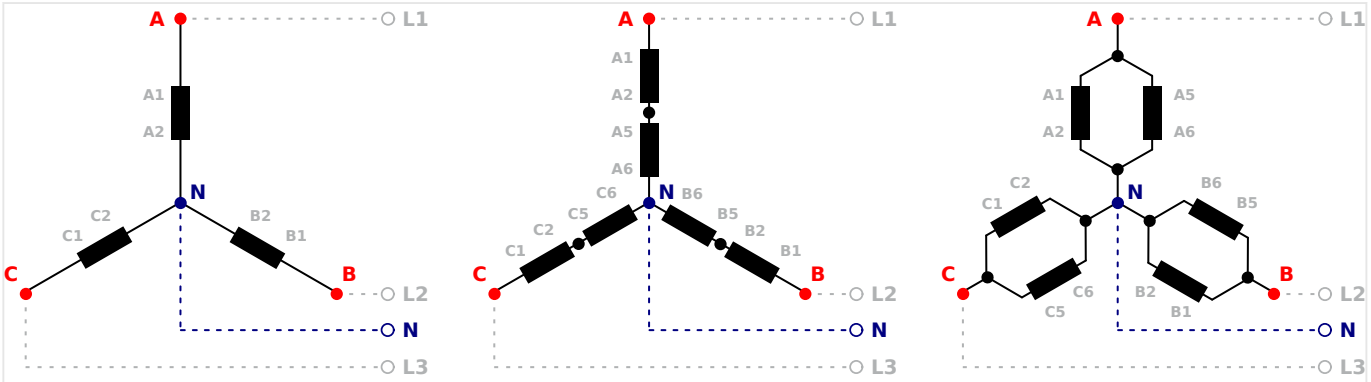


Fig. 26: Generator windings - 3Ph 4W

Measuring inputs

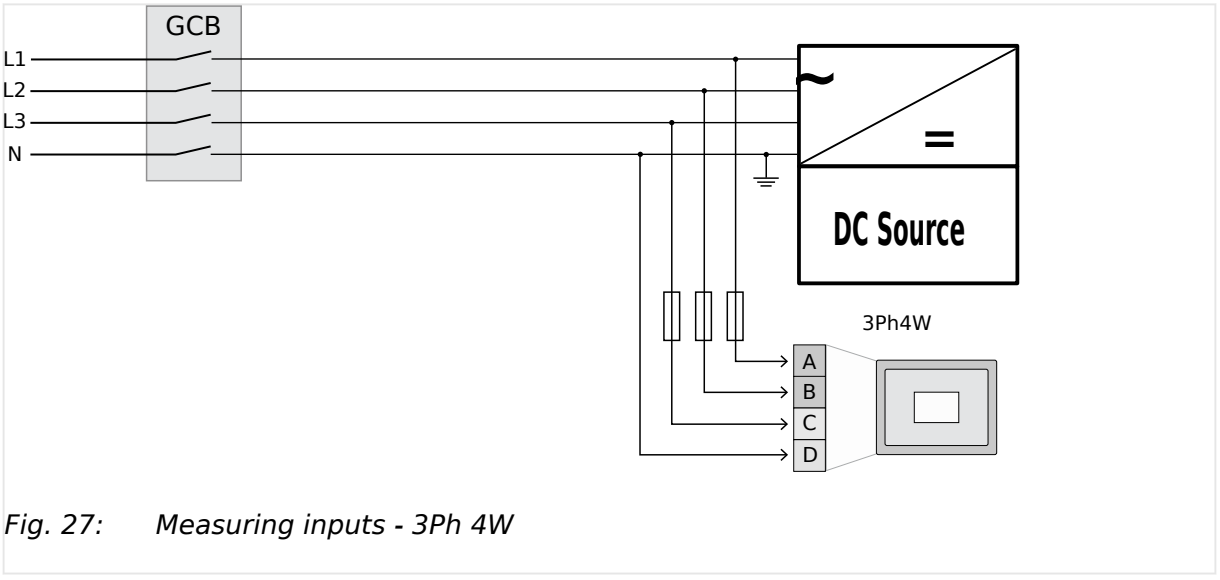


Fig. 27: Measuring inputs - 3Ph 4W

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L2	B	32
Generator voltage - L3	C	34
Generator voltage - N	D	36

Table 5: Generator terminal assignment 3Ph 4W

3.3.4.1.3 Parameter Setting '3Ph 3W' (3-phase, 3-wire)

Generator windings

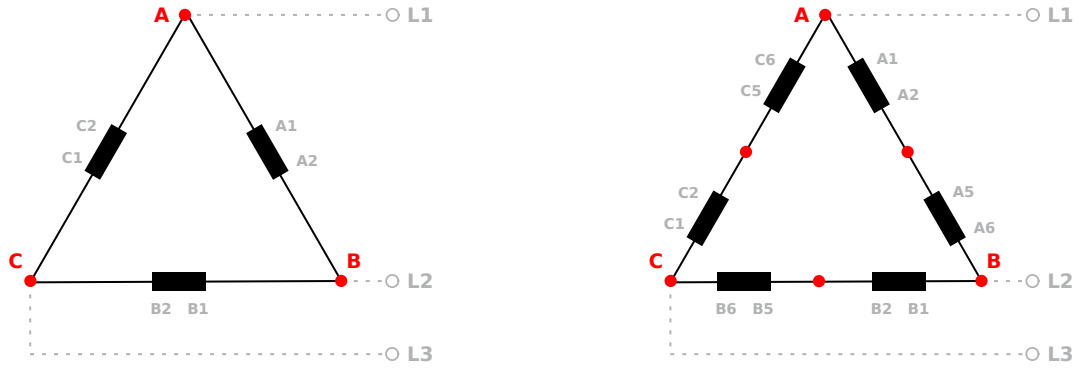


Fig. 28: Generator windings - 3Ph 3W

Measuring inputs

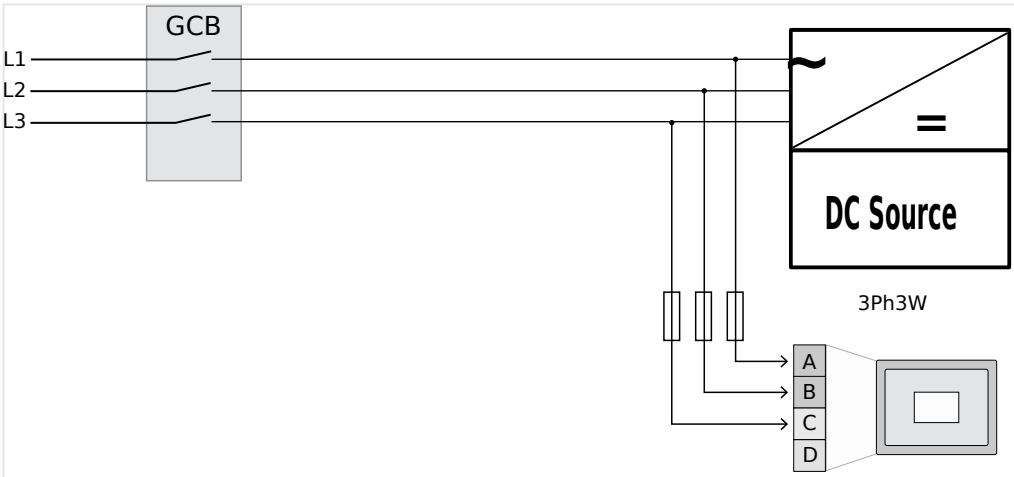


Fig. 29: Measuring inputs - 3Ph 3W

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L2	B	32
Generator voltage - L3	C	34
-/-	-/-	36

Table 6: Generator terminal assignment 3Ph 3W

3.3.4.1.4 Parameter Setting '1Ph 3W' (1-phase, 3-wire)

Generator windings

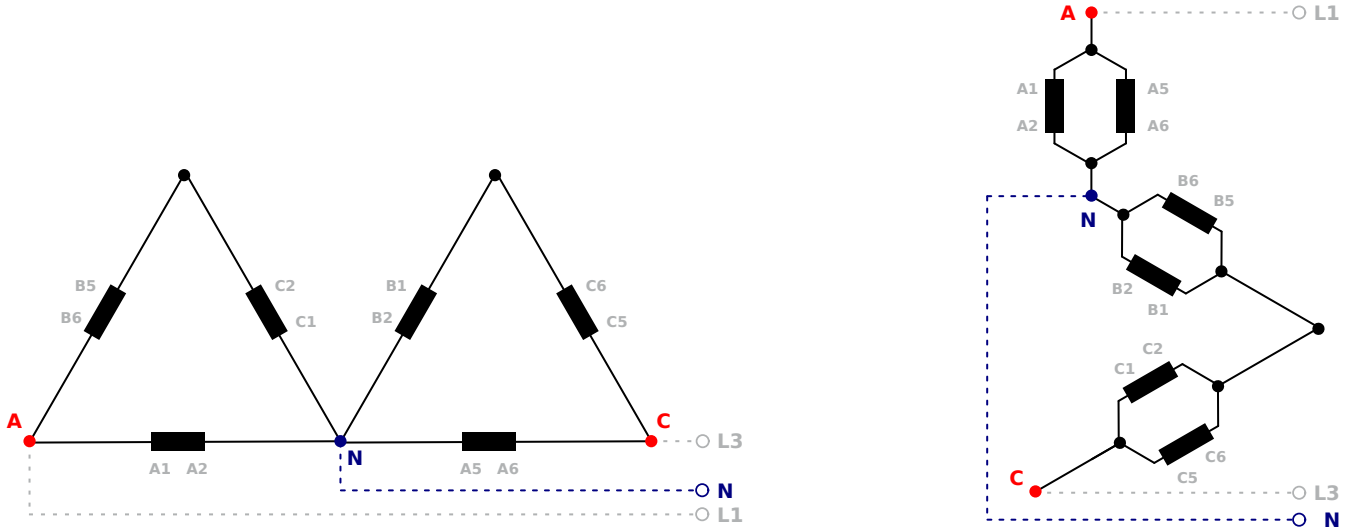


Fig. 30: Generator windings - 1Ph 3W

Measuring inputs

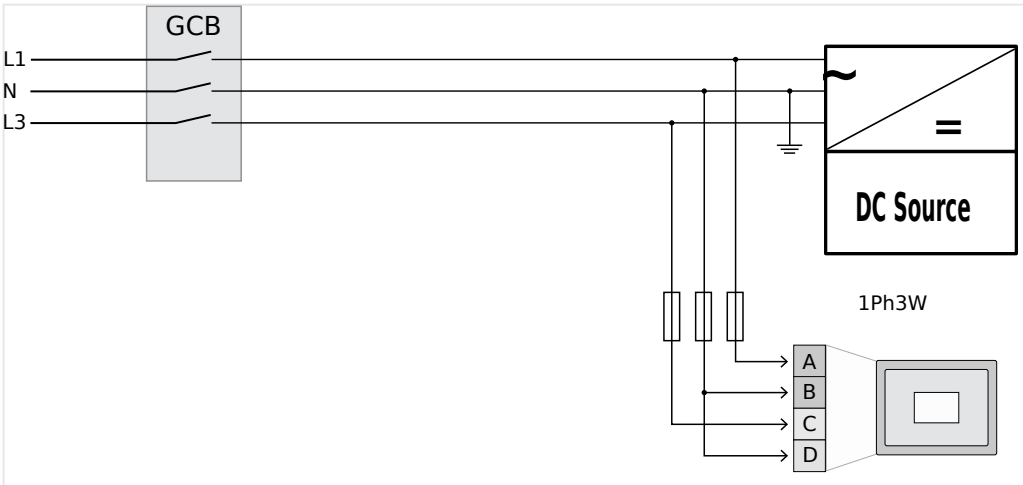


Fig. 31: Measuring inputs - 1Ph 3W

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L3	C	34
Generator voltage - N	D	36
	B	32

Table 7: Generator terminal assignment 1Ph 3W

3.3.4.1.5 Parameter Setting '1Ph 2W' (1-phase, 2-wire)

The 1-phase, 2-wire measurement may be performed **phase-neutral** or **phase-phase**.

- Please note to configure and wire the easY-I consistently.

3.3.4.1.5.1 '1Ph 2W' Phase-Neutral Measuring

Generator windings

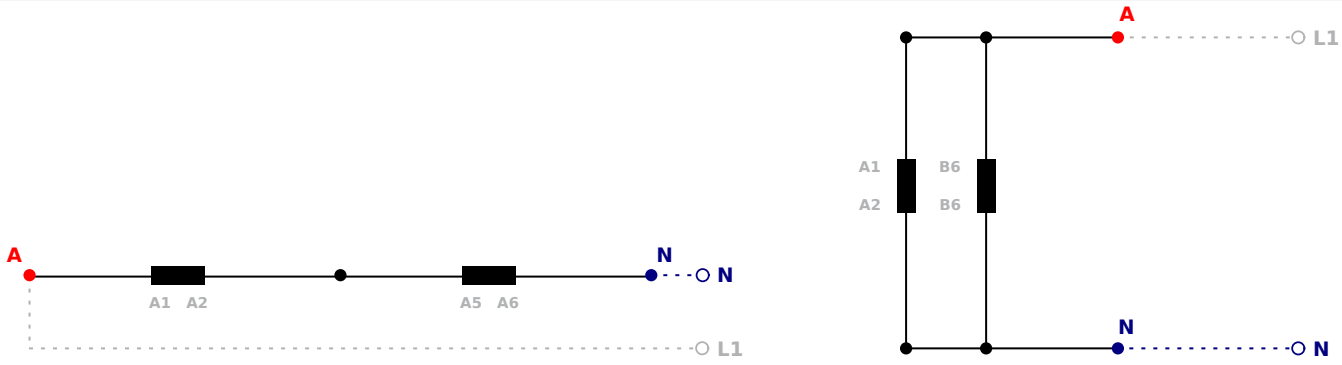


Fig. 32: Generator windings - 1Ph 2W (phase-neutral)

Measuring inputs

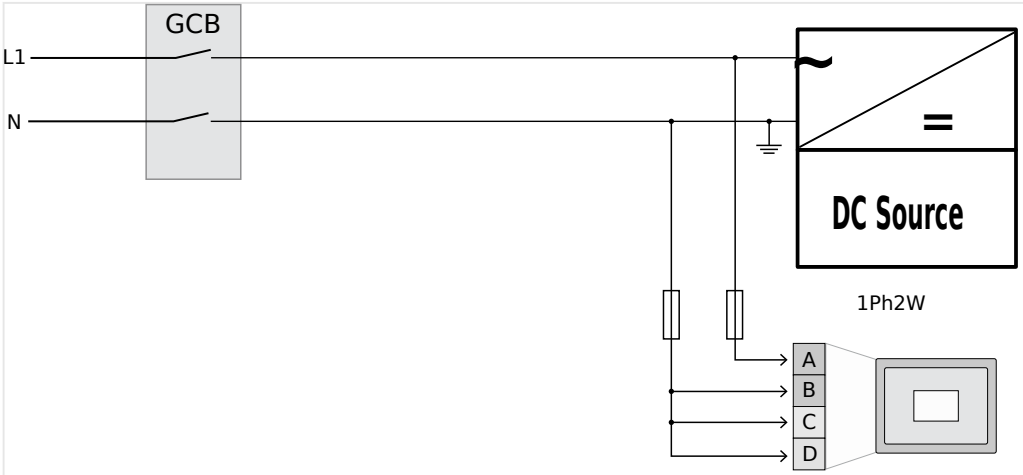


Fig. 33: Measuring inputs - 1Ph 2W (phase-neutral)

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - N	B	32
	C	34
	D	36

Table 8: Generator terminal assignment 1Ph 2W (phase neutral)

Never configure the busbar measurement for phase-neutral, if the other systems like mains and generator are configured as 3ph 3W or 4ph 4W without being the neutral in the middle of the triangle.

The phase angle for synchronization would be incorrect.

3.3.4.1.5.2 '1Ph 2W' Phase-Phase Measuring

Generator windings

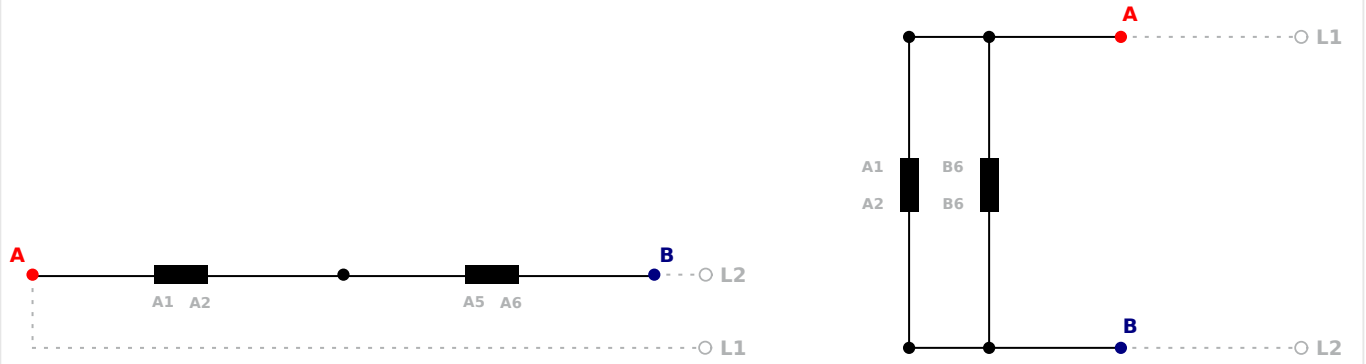


Fig. 34: Generator windings - 1Ph 2W (phase-phase)

Measuring inputs

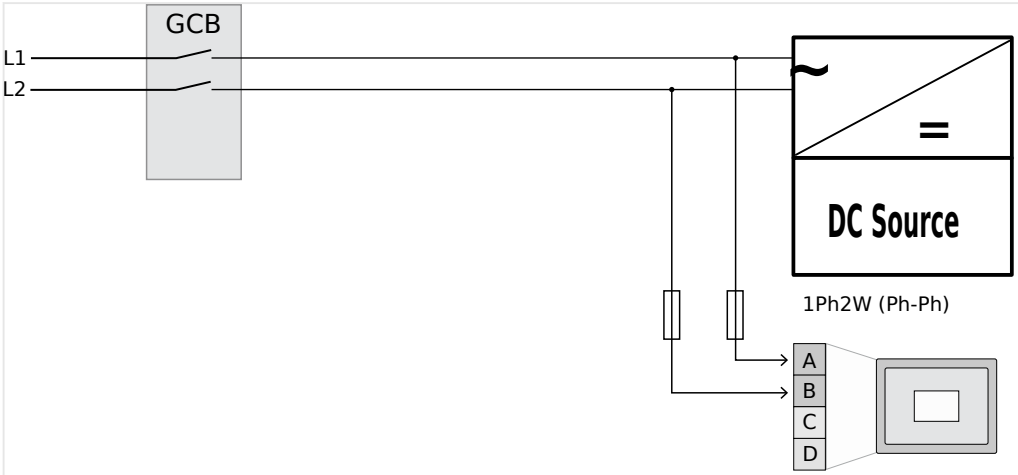


Fig. 35: Measuring inputs - 1Ph 2W (phase-phase)

Terminal assignment

Measuring input / Phase	Terminal	
Generator voltage - L1	A	30
Generator voltage - L2	B	32
Generator voltage - L3	-/-	
-/-	-/-	34, 36

Table 9: Generator terminal assignment 1Ph 2W (phase-phase)

3.3.4.2 Mains Voltage

General notes

The voltage measuring inputs for 120 V, 480 V, and 690 V are using the same terminals 22 to 28. The current voltage range must be selected by the corresponding settings via HMI and/or ToolKit.

Parameter 1803 ("Mains PT secondary rated volt.") must be configured with the correct value to ensure proper measurement.

If the easY-I is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected.

If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

Schematic and terminals

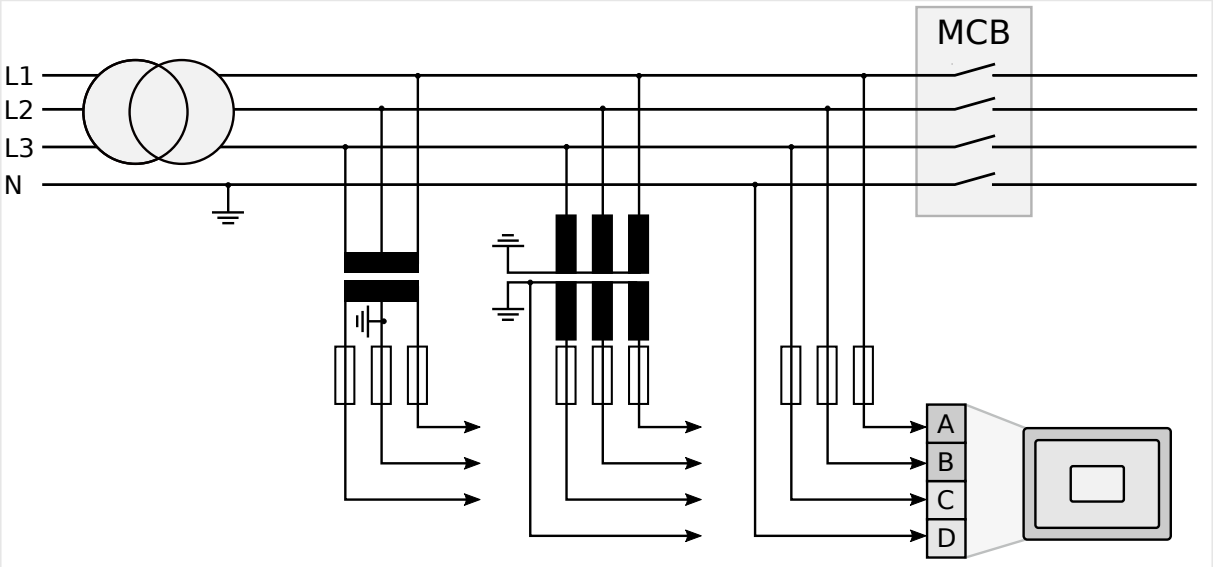


Fig. 36: Voltage measuring - mains - wiring

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - L2	B	24
Mains voltage - L3	C	26
Mains voltage - N	D	28

Table 10: Voltage measuring - mains - terminal assignment

3.3.4.2.1 Parameter Setting '3Ph 4W' (3-phase, 4-wire)

Mains windings

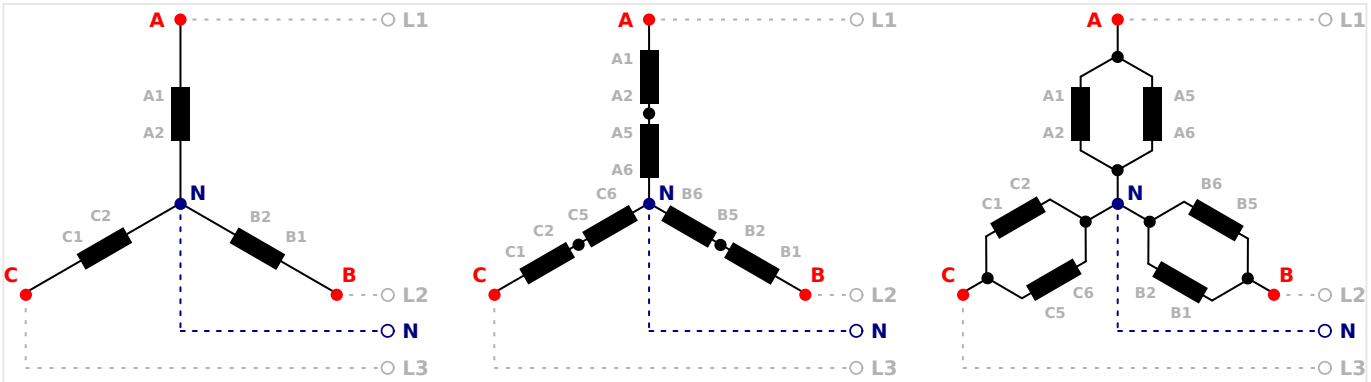


Fig. 37: Mains windings - 3Ph 4W

Measuring inputs

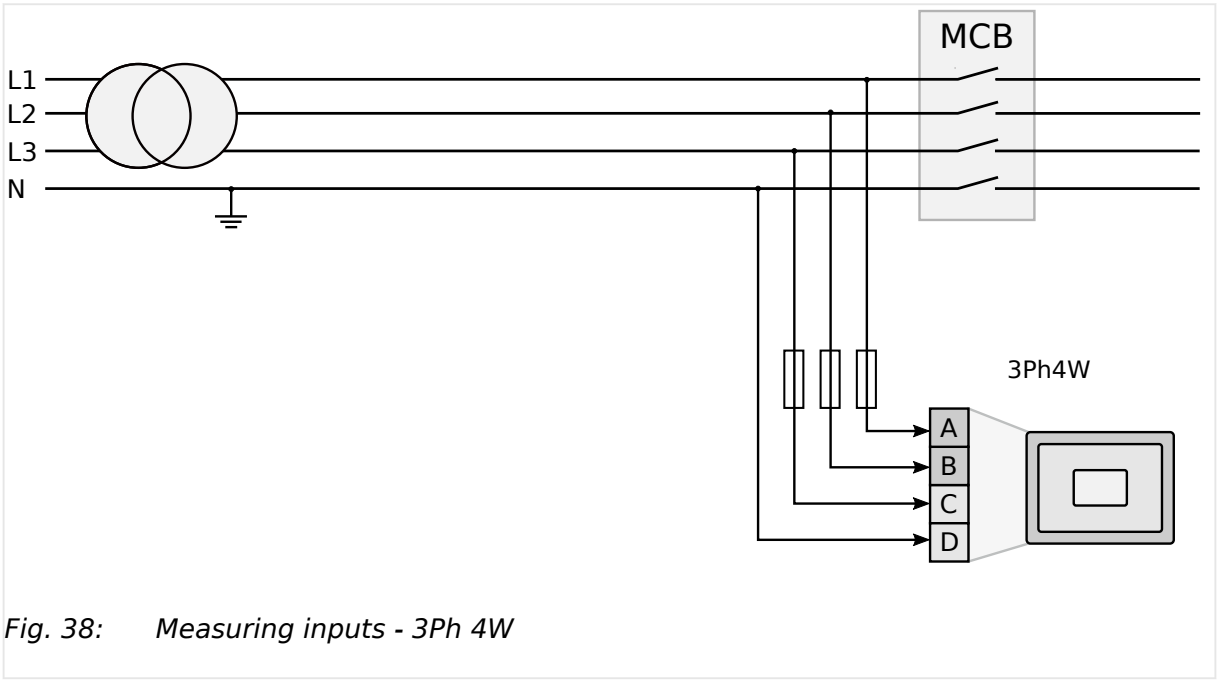


Fig. 38: Measuring inputs - 3Ph 4W

Terminal assignment

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - L2	B	24
Mains voltage - L3	C	26
Mains voltage - N	D	28

Table 11: Mains terminal assignment 3Ph 4W

3.3.4.2.2 Parameter Setting '3Ph 3W' (3-phase, 3-wire)

Mains windings

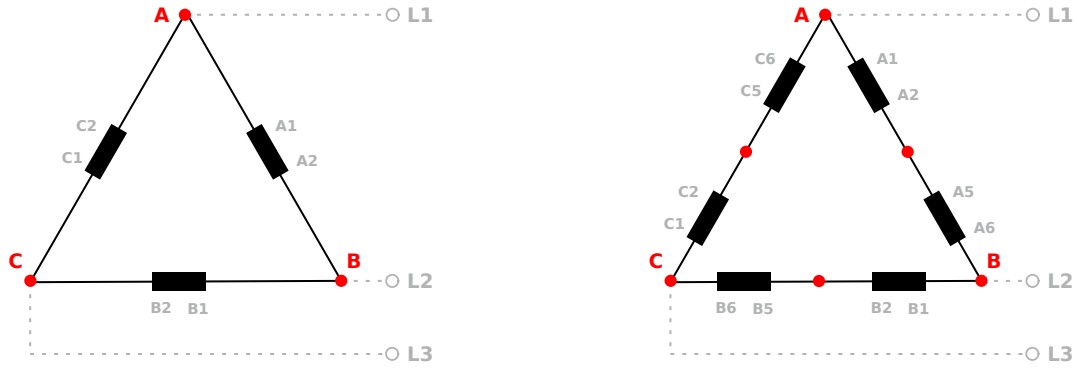


Fig. 39: Mains windings - 3Ph 3W

Measuring inputs

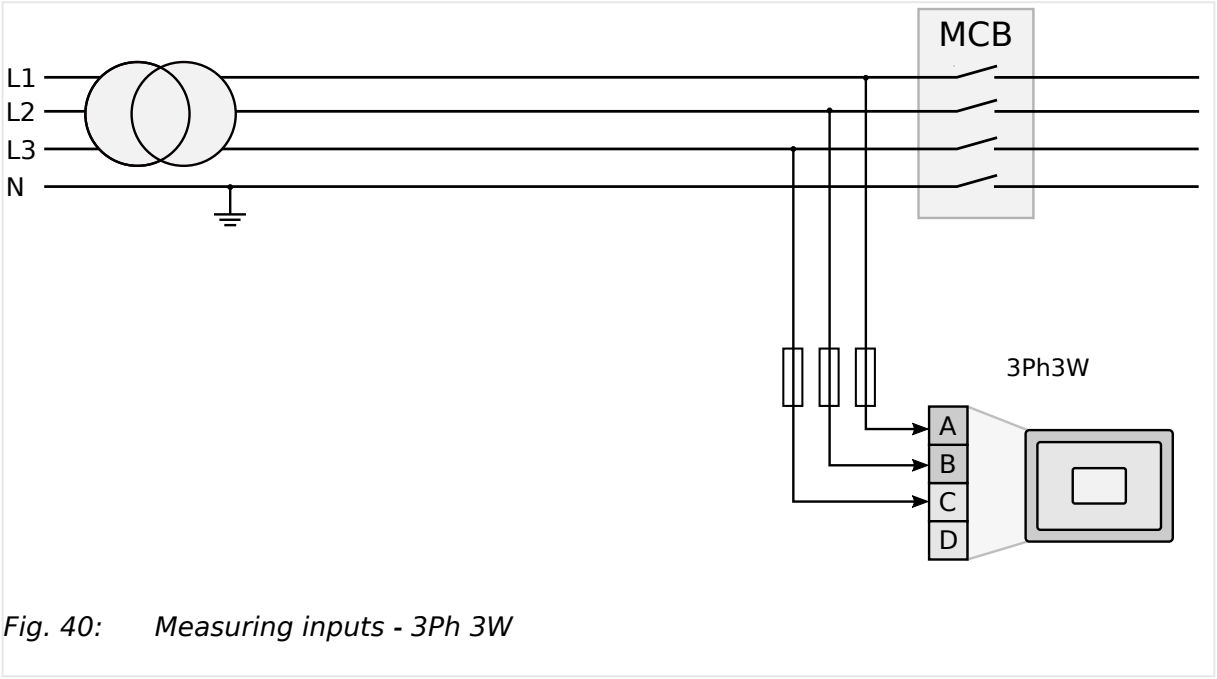


Fig. 40: Measuring inputs - 3Ph 3W

Terminal assignment

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - L2	B	24
Mains voltage - L3	C	26
-/-	-/-	28

Table 12: Mains terminal assignment 3Ph 3W

3.3.4.2.3 Parameter Setting '1Ph 3W' (1-phase, 3-wire)

Mains windings

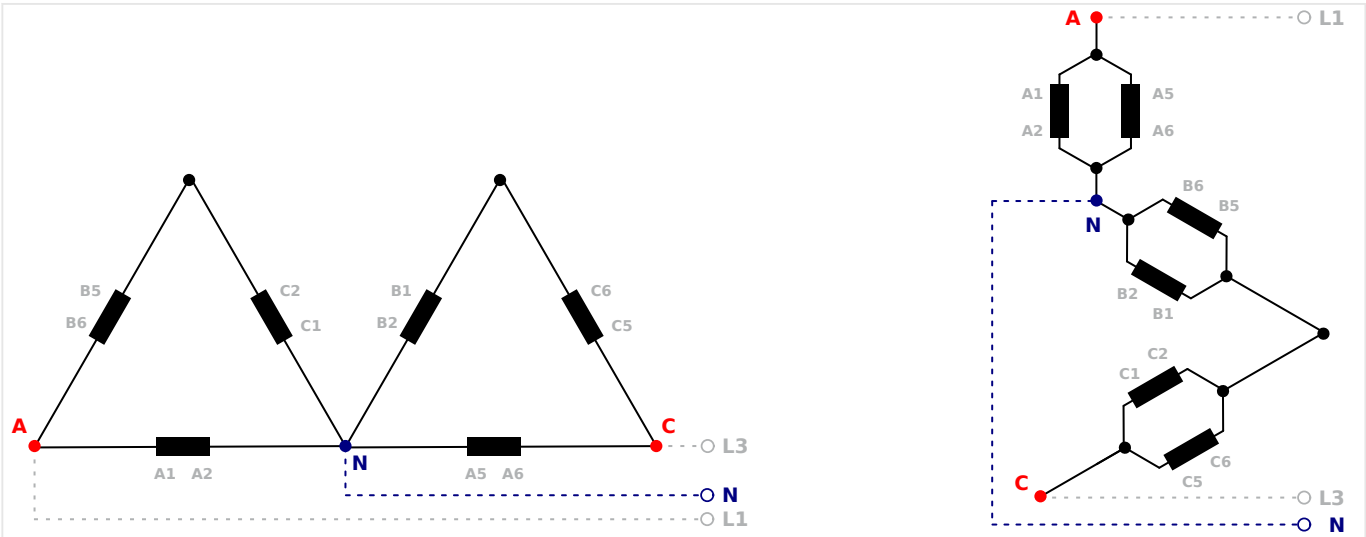


Fig. 41: Mains windings - 1Ph 3W

Measuring inputs

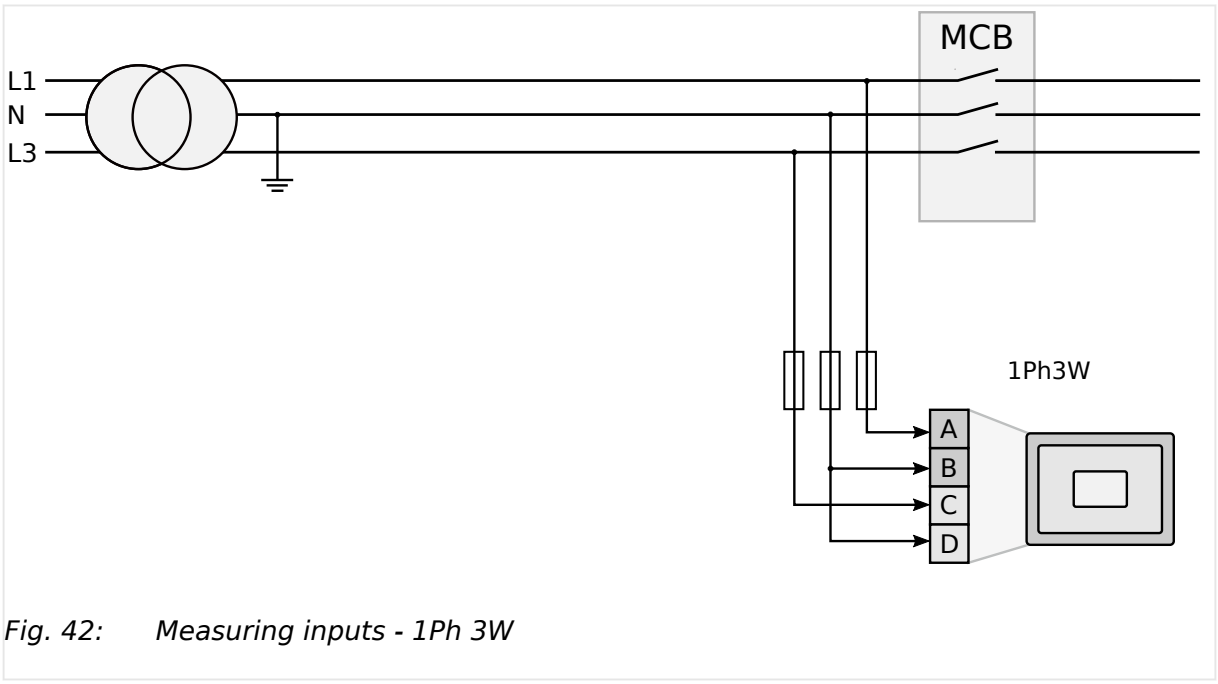


Fig. 42: Measuring inputs - 1Ph 3W

Terminal assignment

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - L3	C	26
Mains voltage - N	B	24

Measuring input / Phase	Terminal	
	D	28

Table 13: Mains terminal assignment 1Ph 3W

3.3.4.2.4 Parameter Setting '1Ph 2W' (1-phase, 2-wire)

The 1-phase, 2-wire measurement may be performed **phase-neutral** or **phase-phase**.

- Please note to configure and wire the easY-I consistently.

3.3.4.2.4.1 '1Ph 2W' Phase-Neutral Measuring

Mains windings

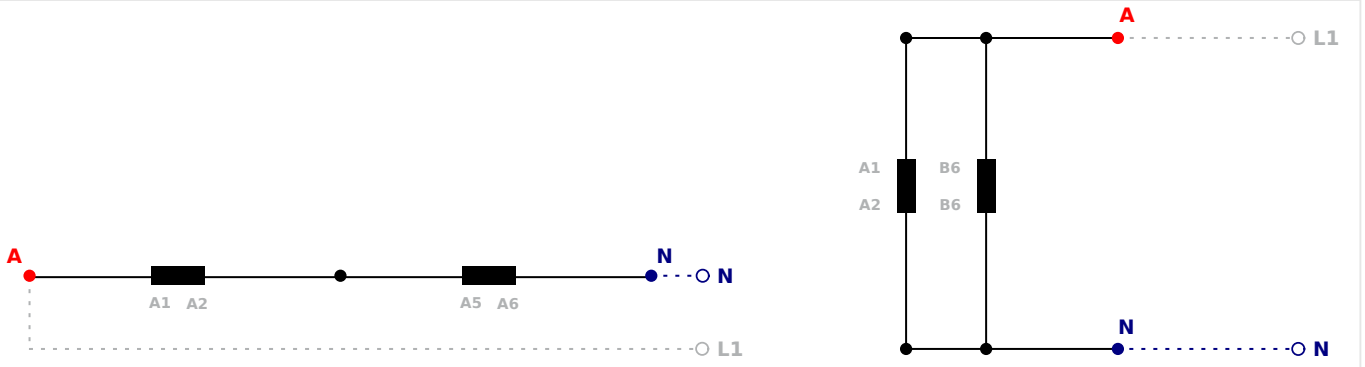


Fig. 43: Mains windings - 1Ph 2W (phase neutral)

Measuring inputs

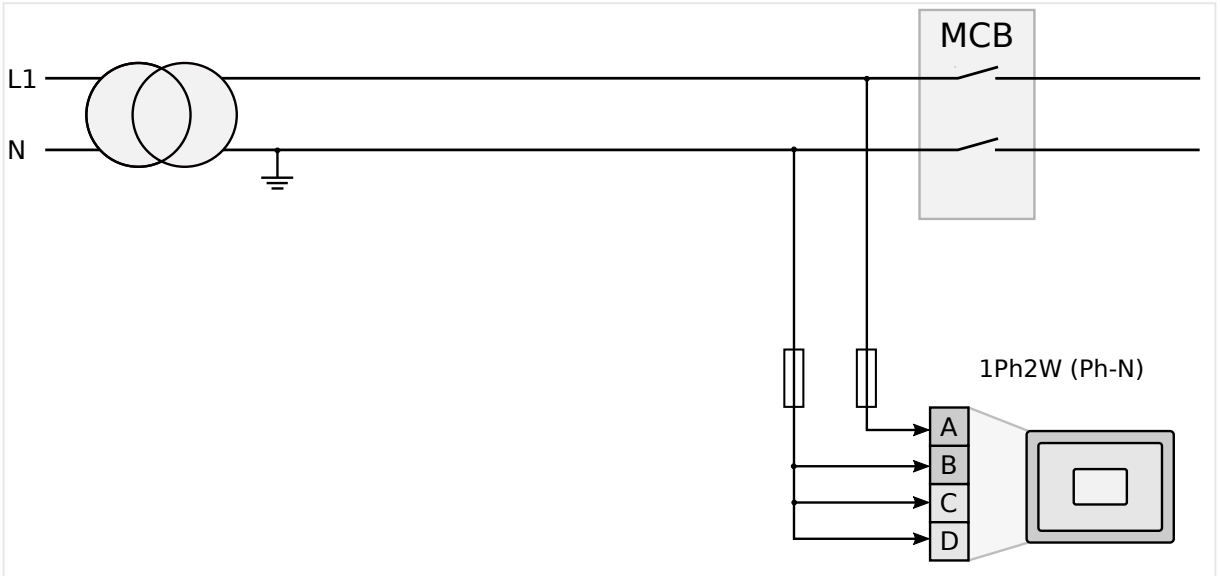


Fig. 44: Measuring inputs - 1Ph 2W (phase neutral)

Released

Terminal assignment

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - N	B	24
	C	26
	D	28

Table 14: Mains terminal assignment 1Ph 2W phase neutral

3.3.4.2.4.2 '1Ph 2W' Phase-Phase Measuring

Mains windings

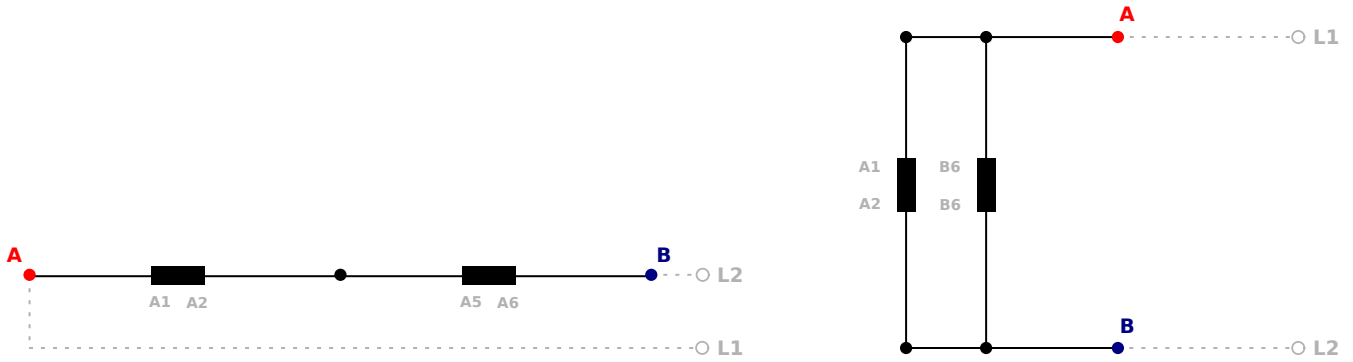


Fig. 45: Mains windings - 1Ph 2W (phase-phase)

Measuring inputs

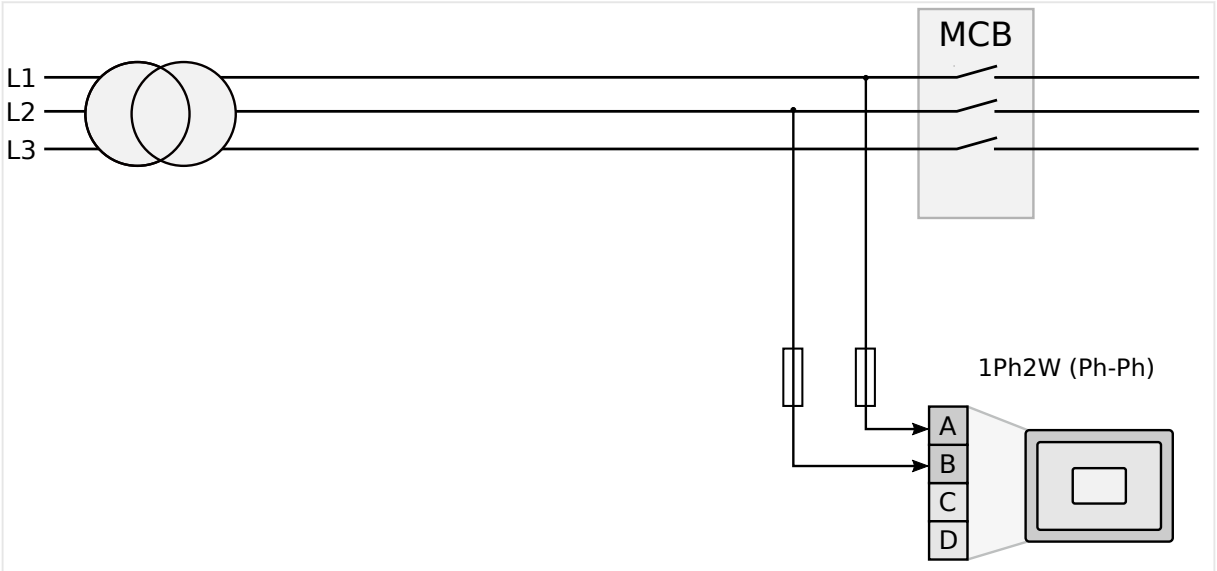


Fig. 46: Measuring inputs - 1Ph 2W (phase-phase)

Released

Terminal assignment

Measuring input / Phase	Terminal	
Mains voltage - L1	A	22
Mains voltage - L2	B	24
Mains voltage - L3	-/-	-/-
-/-	-/-	26, 28

Table 15: Mains terminal assignment 1Ph 2W phase-phase

3.3.4.3 Busbar Voltage

General notes

The voltage measuring inputs for 120 V, 480 V, and 690 V are using the same terminals 38 to 40. The current voltage range must be selected by the corresponding settings via HMI and/or ToolKit.

Parameter 1812 ("Busb1 PT secondary rated volt.") must be configured to the correct value to ensure proper measurement.

Schematic and terminals

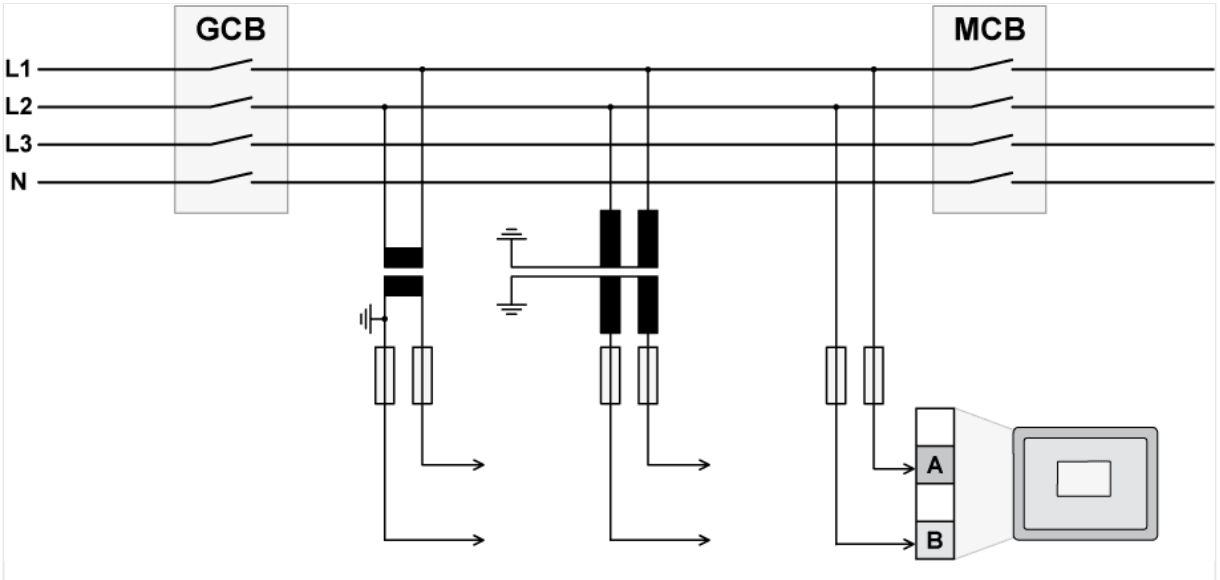


Fig. 47: Voltage measuring - busbar - wiring

Measuring input / Phase	Terminal		A_{max}
Busbar voltage (system 1) - L1	A	38	2.5 mm²

Measuring input / Phase	Terminal		A_{max}
Busbar voltage (system 1) - L2/N	B	40	2.5 mm²

Table 16: Voltage measuring - busbar - terminal assignment

3.3.4.3.1 Parameter Setting '1Ph 2W' (1-phase, 2-wire)

The 1-phase, 2-wire measurement may be performed **phase-neutral** or **phase-phase**.

- Please note to configure and wire the easY-I consistently.

3.3.4.3.1.1 '1Ph 2W' Phase-Neutral Measuring

Busbar windings

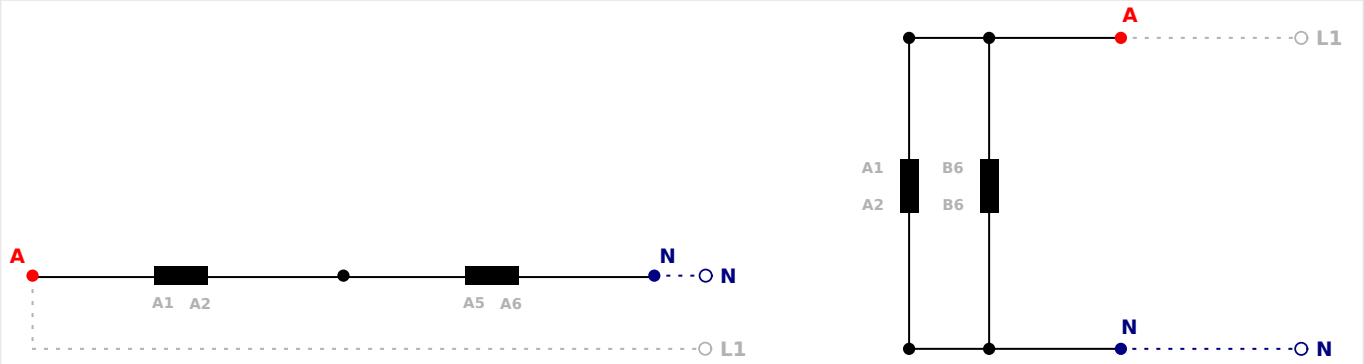


Fig. 48: Busbar windings - 1Ph 2W (phase-neutral)

Measuring inputs

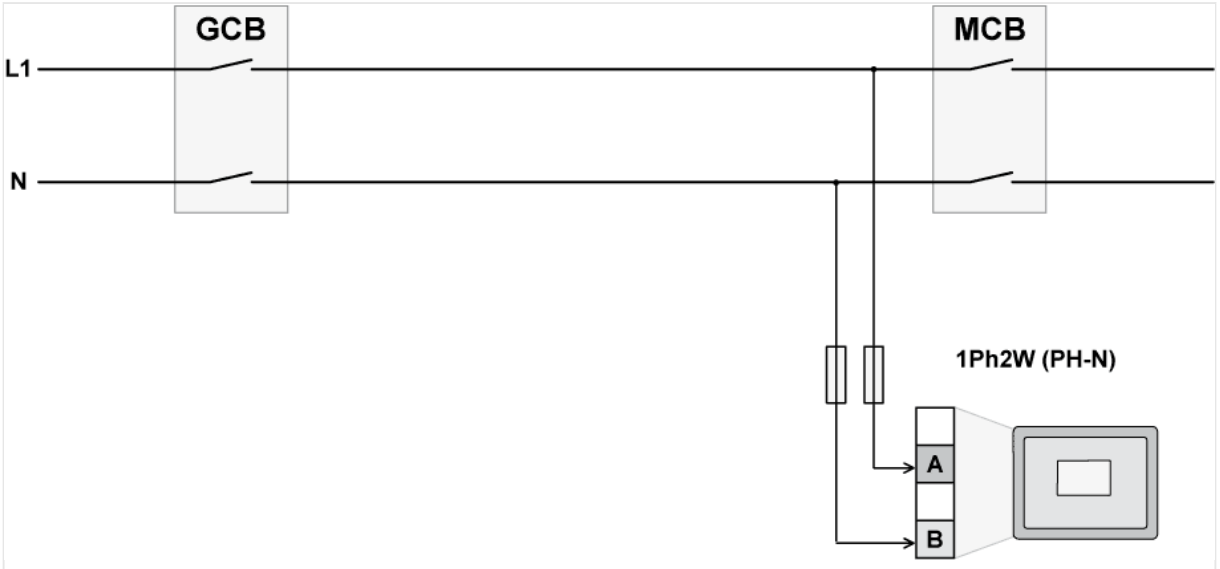


Fig. 49: Measuring inputs - 1Ph 2W (phase neutral)

Terminal assignment

Measuring input / Phase	Terminal	
Busbar voltage - phaseL1	A	38
Busbar voltage - N	B	40

Table 17: Busbar terminal assignment 1Ph 2W phase neutral

3.3.4.3.1.2 '1Ph 2W' Phase-Phase Measuring

Busbar windings

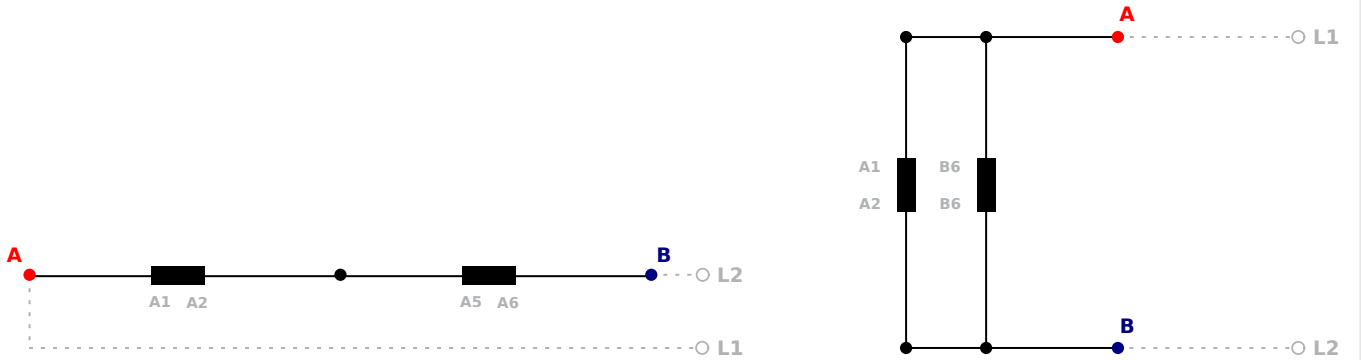


Fig. 50: Busbar windings - 1Ph 2W (phase-phase)

Measuring inputs

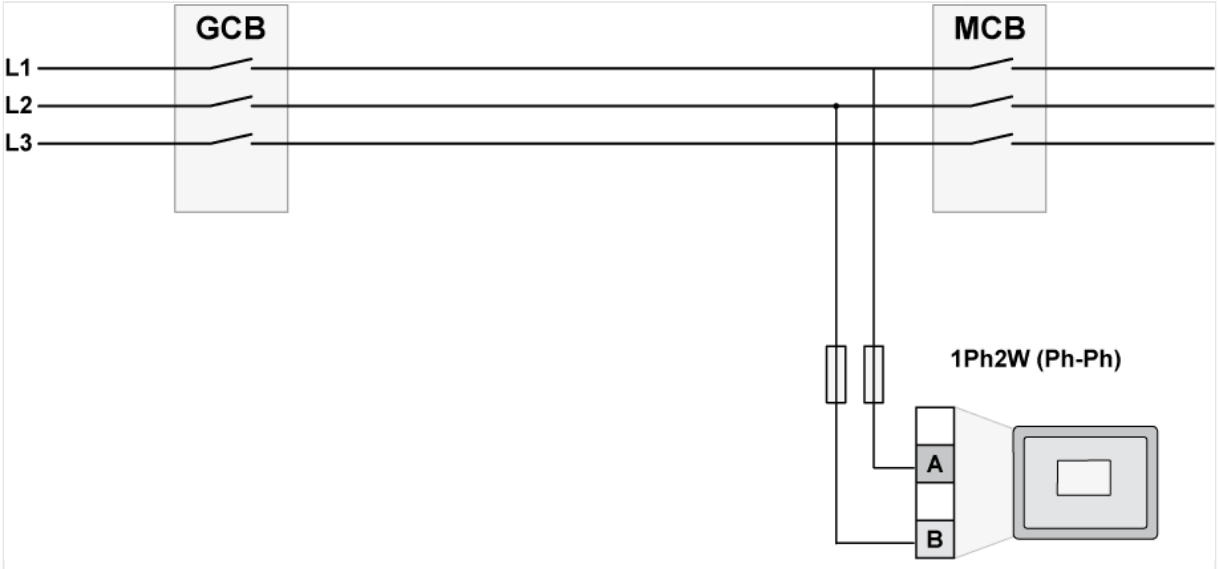


Fig. 51: Measuring inputs - 1Ph 2W (phase-phase)

Terminal assignment

Measuring input / Phase	Terminal	
Busbar voltage - phase L1	A	38

Released

Measuring input / Phase	Terminal	
Busbar voltage - phase L2	B	40
Busbar voltage - phase L3	-/-	

Table 18: Busbar terminal assignment 1Ph 2W phase-phase

3.3.5 Current Measuring

3.3.5.1 Generator Current

General notes

WARNING!

Dangerous voltages due to missing load

- Before disconnecting the device, ensure that the current transformer (CT) is short-circuited.

The current measuring inputs for 1 A and 5 A are using the same terminals 3 to 8. The current range must be selected by the corresponding settings via HMI and/or ToolKit.

Generally, one line of the current transformers secondary must be grounded close to the CT.

CAUTION!

External current transformers shall provide insulation adequate to system voltage to which unit is connected.

Released

Schematic and terminals

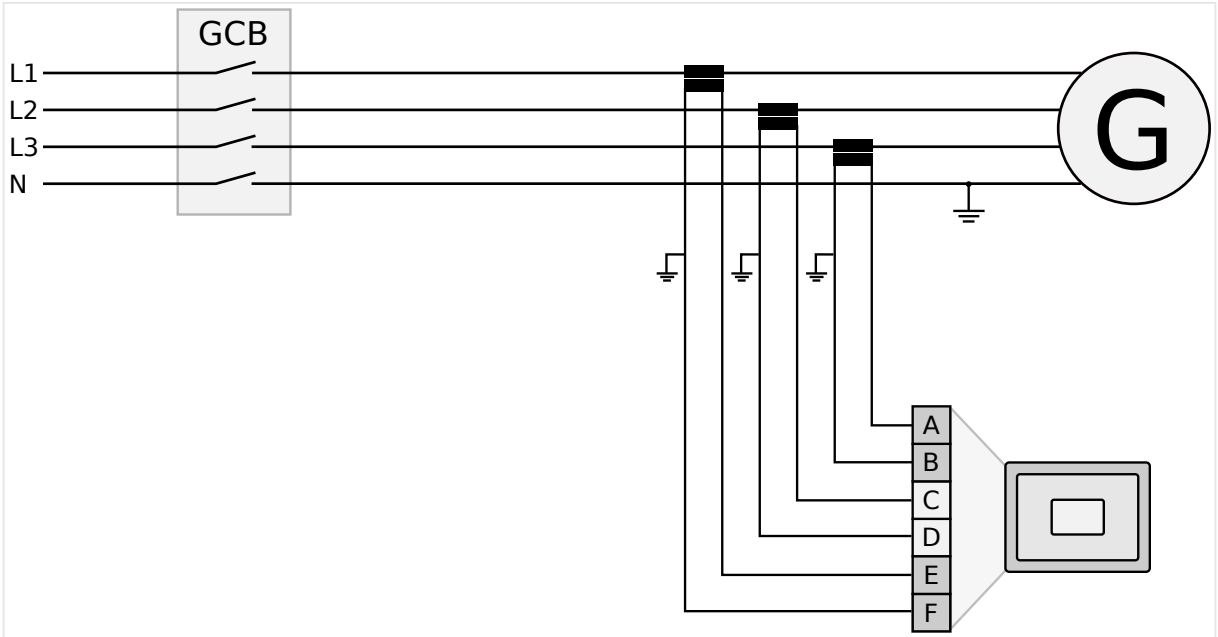


Fig. 52: Current measuring - generator - wiring

Terminal		Description
A	8	Generator current - L3 - transformer terminal s1 (k)
B	7	Generator current - L3 - transformer terminal s2 (l)
C	6	Generator current - L2 - transformer terminal s1 (k)
D	5	Generator current - L2 - transformer terminal s2 (l)
E	4	Generator current - L1 - transformer terminal s1 (k)
F	3	Generator current - L1 - transformer terminal s2 (l)

Table 19: Current measuring - generator - terminal assignment

3.3.5.1.1 Parameter Setting 'L1 L2 L3'

Schematic and terminals

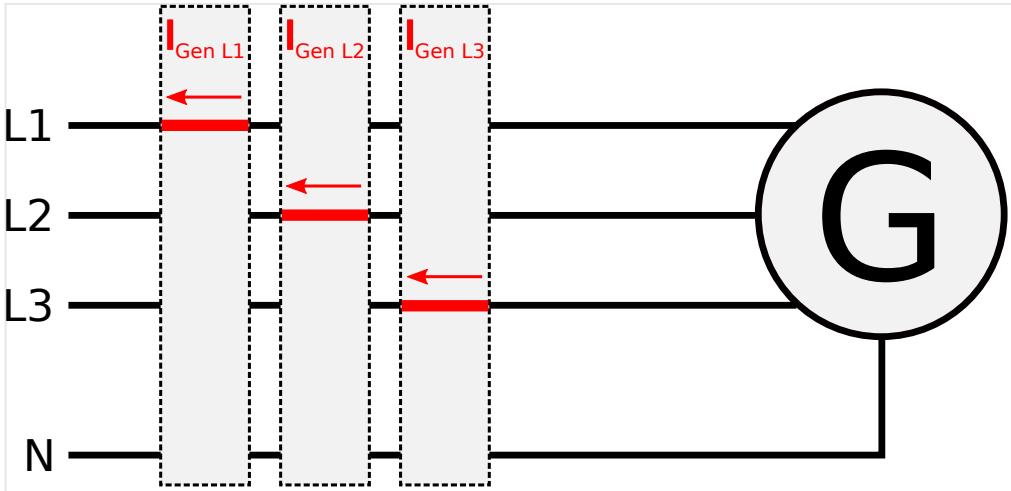


Fig. 53: Current measuring - generator, L1 L2 L3

	Wiring terminals					
	F	E	D	C	B	A
L1 L2 L3						
Terminal	3	4	5	6	7	8
Phase	s2 (l) L1	s1 (k) L1	s2 (l) L2	s1 (k) L2	s2 (l) L3	s1 (k) L3
Phase L1 and L3						
Terminal	3	4	5	6	7	8
Phase	s2 (l) L1	s1 (k) L1	—	—	s2 (l) L3	s1 (k) L3

"Phase L1 and L3" applies if the generator voltage measurement is configured to 1Ph 3W (“3.3.4.1 Generator Voltage”).

3.3.5.1.2 Parameter Setting 'Phase L1' 'Phase L2' 'Phase L3'

Schematic and terminals

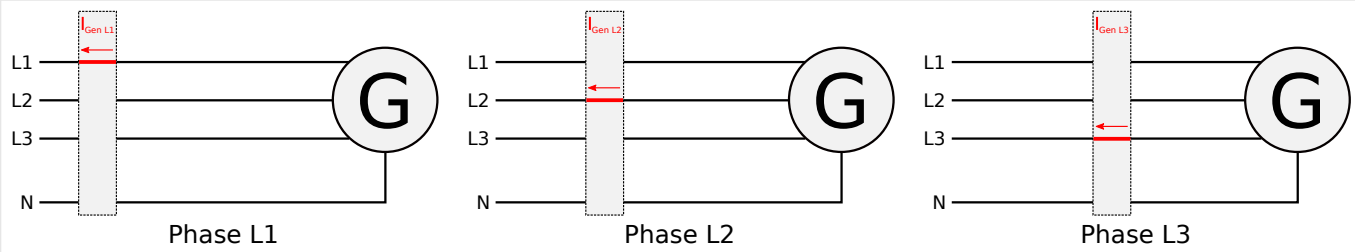


Fig. 54: Current measuring - generator, 'Phase L1' 'Phase L2' 'Phase L3'

Released

	Wiring terminals					
	F	E	D	C	B	A
Phase L1						
Terminal	3	4	5	6	7	8
Phase	s2 (l) L1	s1 (k) L1	—	—	—	—
Phase L2						
Terminal	3	4	5	6	7	8
Phase	—	—	s2 (l) L2	s1 (k) L2	—	—
Phase L3						
Terminal	3	4	5	6	7	8
Phase	—	—	—	—	s2 (l) L3	s1 (k) L3

3.3.5.2 Mains Current

General notes

WARNING!



Dangerous voltages due to missing load

- Before disconnecting the device, ensure that the current transformer (CT) is short-circuited.



The current measuring inputs for 1 A and 5 A are using the same terminals 1 to 2. The current range must be selected by the corresponding settings via HMI and/or ToolKit.



Generally, one line of the current transformers secondary must be grounded close to the CT.

Released

Schematic and terminals

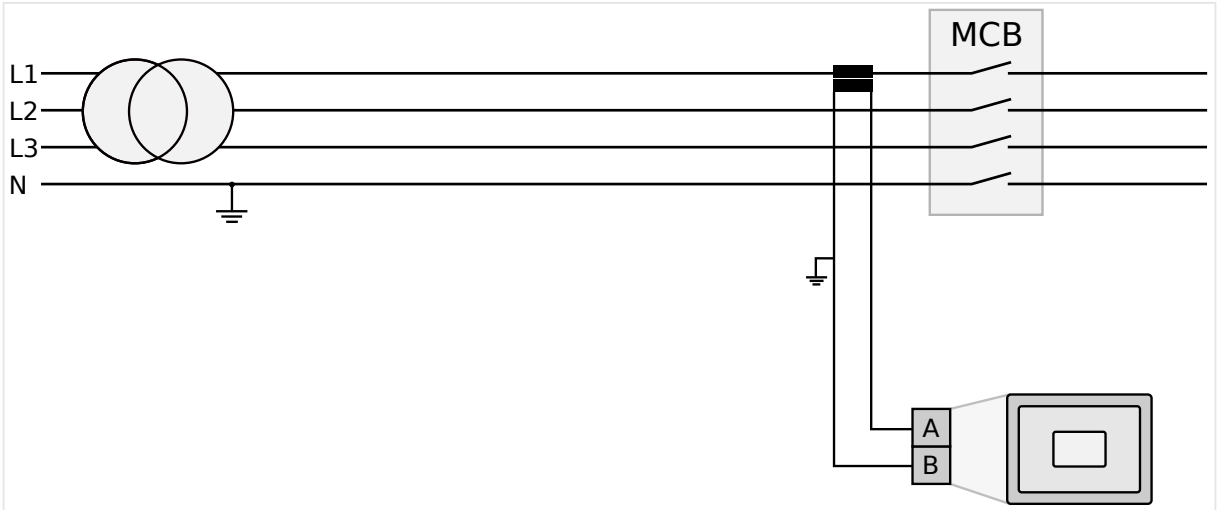


Fig. 55: Current measuring - mains - wiring

Terminal		Description
A	2	Mains current - transformer terminal s1 (k)
B	1	Mains current - transformer terminal s2 (l)

Table 20: Current measuring - mains - terminal assignment

3.3.5.2.1 Parameter Setting 'Phase L1' 'Phase L2' 'Phase L3'

Schematic and terminals

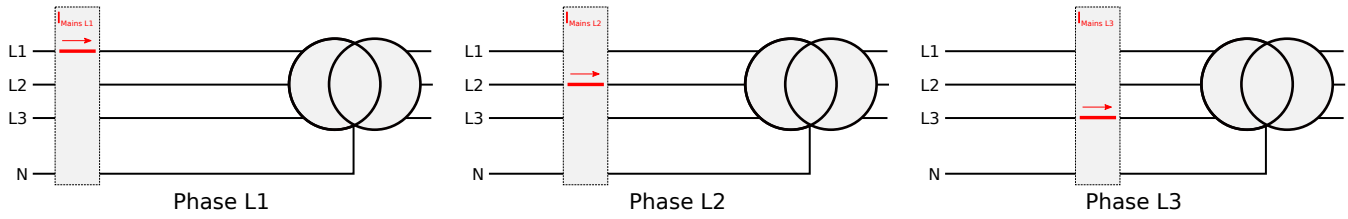


Fig. 56: Current measuring - mains, 'Phase L1' 'Phase L2' 'Phase L3'

	Wiring terminals	
	B	A
Phase L1		
Terminal	1	2
Phase	s2 (l) - L1	s1 (k) - L1
Phase L2		
Terminal	1	2
Phase	s2 (l) - L2	s1 (k) - L2
Phase L3		

	Wiring terminals	
Terminal	1	2
Phase	s2 (l) - L3	s1 (k) - L3

3.3.5.3 Ground Current

General notes

WARNING!

Dangerous voltages due to missing load

- Before disconnecting the device, ensure that the current transformer (CT) is short-circuited.

The current measuring inputs for 1 A and 5 A are using the same terminals 1 to 2. The current range must be selected by the corresponding settings via HMI and/or ToolKit.

The mains current input can be configured to measure the mains current or ground current. The parameter 'Mains current input' determines, if this input will measure the mains current (default) or the ground current.

Generally, one line of the current transformers secondary must be grounded close to the CT.

Schematic and terminals

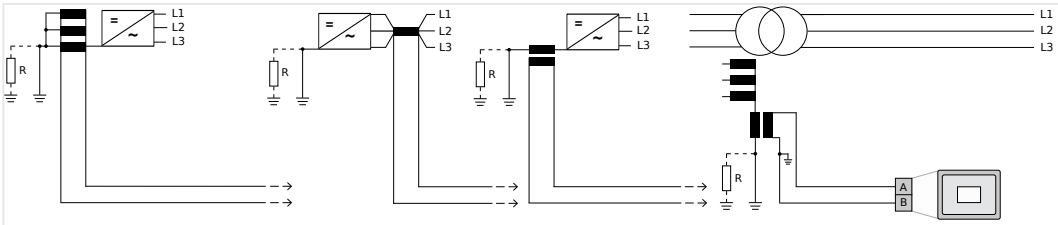


Fig. 57: Current measuring - ground current - wiring

Terminal		Description
A	2	Ground current - transformer terminal s1 (k)

Released

Terminal		Description
B	1	Ground current - transformer terminal s2 (I)

Table 21: Current measuring - ground current - terminal assignment

3.3.6 Power Measuring

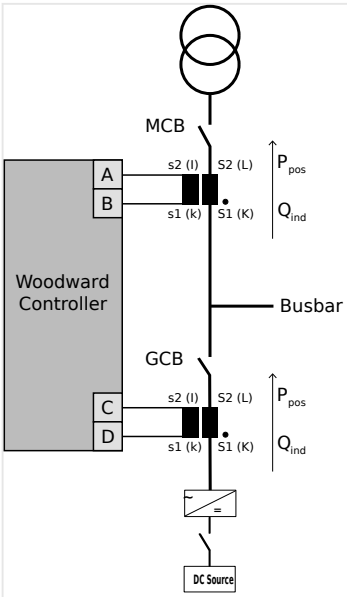


Fig. 58: Power measuring - wiring

If the unit's current transformers are wired according to the diagram (↳ Fig. 58), the following values are displayed.

Terminal				Description
A	1			Mains or ground current
B	2			
C	3	5	7	Generator current
D	4	6	8	

Parameter	Description	Sign displayed
Generator real power	Genset generating kW	+ Positive
Generator real power	Genset in reverse power	- Negative
Generator power factor (cos φ)	Inductive / lagging	+ Positive
Generator power factor (cos φ)	Capacitive / leading	- Negative
Mains real power	Plant exporting kW +	+ Positive
Mains real power	Plant importing kW -	- Negative

Released

Parameter	Description	Sign displayed
Mains power factor (cos φ)	Inductive / lagging	+ Positive
Mains power factor (cos φ)	Capacitive / leading	- Negative

Measuring 3PH 3W

The values of single active power, reactive power, and power factor in L1, L2 and L3 are not displayed. This values can not be determined through this connection type.

3.3.7 Power Factor Definition

Definition

Power Factor is defined as a ratio of the real power to apparent power. In a purely resistive circuit, the voltage and current waveforms are instep resulting in a ratio or power factor of 1.00 (often referred to as unity).

In an inductive circuit the current lags behind the voltage waveform resulting in usable power (real power) and unusable power (reactive power). This results in a positive ratio or lagging power factor (i.e. 0.85 lagging).

In a capacitive circuit the current waveform leads the voltage waveform resulting in usable power (real power) and unusable power (reactive power). This results in a negative ratio or a leading power factor (i.e. 0.85 leading).

Properties

	Inductive	Capacitive
Load type	Electrical load whose current waveform lags the voltage waveform thus having a lagging power factor. Some inductive loads such as electric motors have a large startup current requirement resulting in lagging power factors.	Electrical load whose current waveform leads the voltage waveform thus having a leading power factor. Some capacitive loads such as capacitor banks or buried cable result in leading power factors.
Different power factor display on the unit	i0.91 (inductive) lg.91 (lagging)	c0.93 (capacitive) ld.93 (leading)
Reactive power display on the unit	70 kvar (positive)	-60 kvar (negative)
Output of the interface	+ (positive)	- (negative)
Current relation to voltage	Lagging	Leading
Generator state	Overexcited	Underexcited
Control signal	If the control unit is equipped with a power factor controller while in parallel with the utility:	
	A voltage lower "-" signal is output as long as the measured value is "more inductive" than the reference setpoint	A voltage raise "+" signal is output as long as the measured value is "more capacitive" than the reference setpoint

	Inductive	Capacitive
	Example: measured = i0.91; setpoint = i0.95	Example: measured = c0.91; setpoint = c0.95

Phasor diagram

The phasor diagram is used from the generator's view.

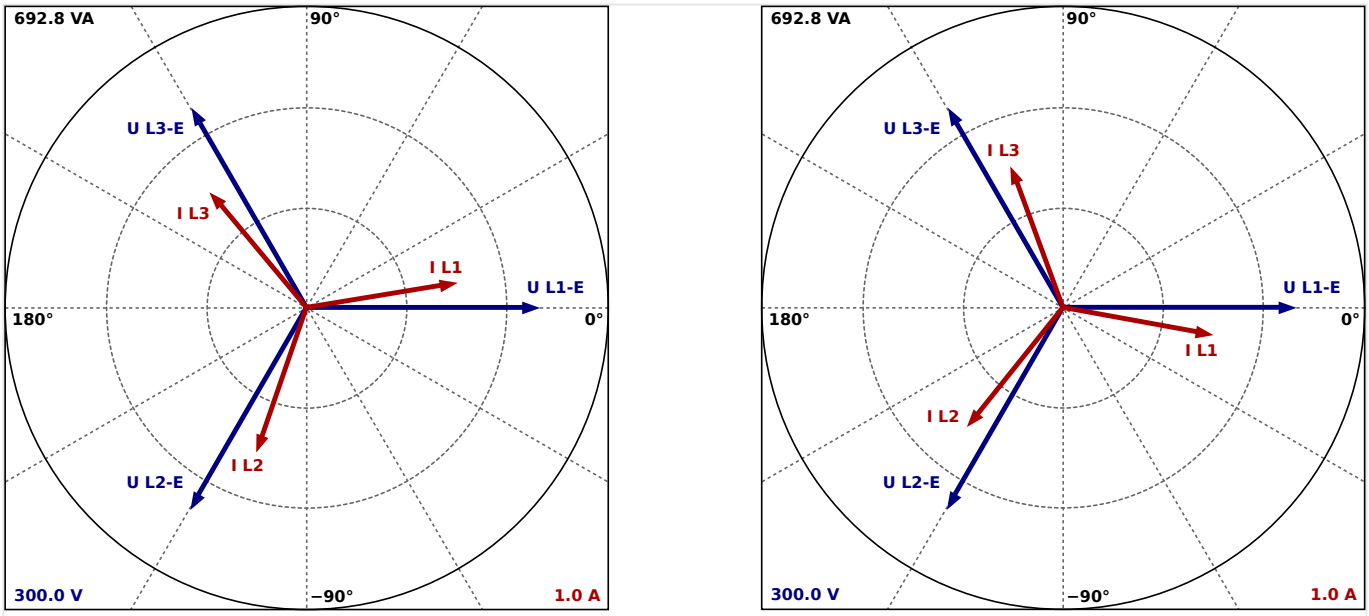


Fig. 59: Phasor diagram: capacitive load (left) and inductive load (right)

3.3.8 Discrete Inputs

General notes

WARNING!

Hazards due to improper implementation of emergency stop

Discrete input [DI 01] "Emergency Stop" is only a signaling input. This input may only be used to signal that an external emergency stop button has been actuated.

According to EN 60204, this input is not approved to be used as the emergency stop function.

- The emergency stop function must be implemented external to the control and cannot rely on the control to function properly.

The discrete inputs are electrically isolated which permits the polarity of the connections to be either positive or negative.

- All discrete inputs must use the same polarity, either positive or negative signals, due to the common ground.

Schematic and terminal assignment




Fig. 60: Discrete input - positive polarity signal




Fig. 61: Discrete input - negative polarity signal

Terminal		Description	
A	**B**		
66 GND Common ground	67	Discrete Input [DI 01]	Preconfigured to "Emergency stop"[1]
	68	Discrete Input [DI 02]	Preconfigured to "Start in AUTO"[1]
	69	Discrete Input [DI 03]	Preconfigured to "DC breaker is closed"[1]
	70	Discrete Input [DI 04]	LogicsManager[1]
	71	Discrete Input [DI 05]	Preconfigured to "Alarm acknowledge"[1]
	72	Discrete Input [DI 06]	Preconfigured to "Enable MCB"[1]
	73	Discrete Input [DI 07]	Fixed to "Reply: MCB open"
	74	Discrete Input [DI 08]	Fixed to "Reply: GCB open"
	75	Discrete Input [DI 09]	Preconfigured to "Reply GGB open", if application mode contains a GGB control.[1]
	76	Discrete Input [DI 10]	Preconfigured to "'Load busbar is dead", if application mode contains a GGB control.[1]
	77	Discrete Input [DI 11]	LogicsManager[1]
	78	Discrete Input [DI 12]	Preconfigured to "Alarm input or Neutral Contactor"[1]

Table 22: DI 01-12

Released

[1] configurable via LogicsManager

Operation logic

Discrete inputs may be configured to normally open (N.O.) or normally closed (N.C.) states.




Fig. 62: Discrete inputs - state N.O.

In the state N.O., no potential is present during normal operation; if an alarm is issued or control operation is performed, the input is energized.




Fig. 63: Discrete inputs - state N.C.

In the state N.C., a potential is continuously present during normal operation; if an alarm is issued or control operation is performed, the input is de-energized.

The N.O. or N.C. contacts may be connected to the signal terminal as well as to the ground terminal of the discrete input (“Schematic and terminal assignment”).#

3.3.9 Relay Outputs (LogicsManager)

General notes

CAUTION!

The relay output "Ready for operation" must be wired in series with an emergency stop function. This means that it must be ensured that the generator circuit breaker is opened and the system is stopped if this relay output is de-energize.

- We recommend to signal this fault independently from the unit if the availability of the plant is important.

For information on interference suppressing circuits when connecting 24 V relays, please refer to “3.3.9.1 Connecting 24 V Relays”.

Released

Schematic and terminals

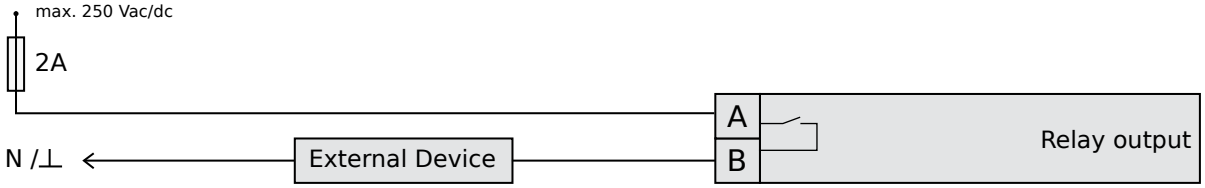


Fig. 64: Relay outputs - schematic

Terminal		Description		
N.O.	**Common**			
A	**B**	**Form A**		
42	41	Relay output [R 01]	All	Fixed to "Ready for operation"[1]
43	46	Relay output [R 02]	All	Preconfigured to "Centralized alarm"[1]
44		Relay output [R 03]	All	LogicsManager[1]
45		Relay output [R 04]	All	LogicsManager[1]
48	47	Relay output [R 05]	All	LogicsManager[1]
50	49	Relay output [R 06]	A01 A02	LogicsManager[1]
			A03 to A11	Fixed to "Command: close GCB""[1]
52	51	Relay output [R 07]	A01	Preconfigured to "Mains decoupling"[1]
			A02 to A11	Fixed to "Command: open GCB" if parameter 3403 "GCB open relay" is not configured to "Not used[1]
54	53	Relay output [R 08]	A01 A02 A03 A05 A07 A08 A09 A10 A11	LogicsManager[1]
			A04 A06	Fixed to "Command: close MCB"[1]
56	55	Relay output [R 09]	A01 A02 A03 A05 A07 A08 A09 A10 A11	Preconfigured to "Mains decoupling"[1]
			A04 A06	Fixed to "Command: open MCB" if parameter 3398 "MCB open relay" is not configured to "Not used"[1]
57	60	Relay output [R 10]	A01 A02 A03 A04 A07 A08 A10 A11	LogicsManager[1]
			A05 A06 A09	Fixed to "Command: close GGB"[1]
58		Relay output [R 11]	A01 A02 A03 A04 A07 A08 A10 A11	Preconfigured to "Alarm class A and B"[1]
			A05 A06 A09	Fixed to "Command: open GGB"[1]

Released

Terminal		Description			
N.O.	Common				
A	B	Form A			
59		Relay output [R 12]	All	Preconfigured to "Alarm class C, D, E or F"[1]	

[1] configurable via LogicsManager

3.3.9.1 Connecting 24 V Relays

NOTICE!

Damage to adjacent electronic components due to induced voltages

- Implement protection circuits as detailed below.

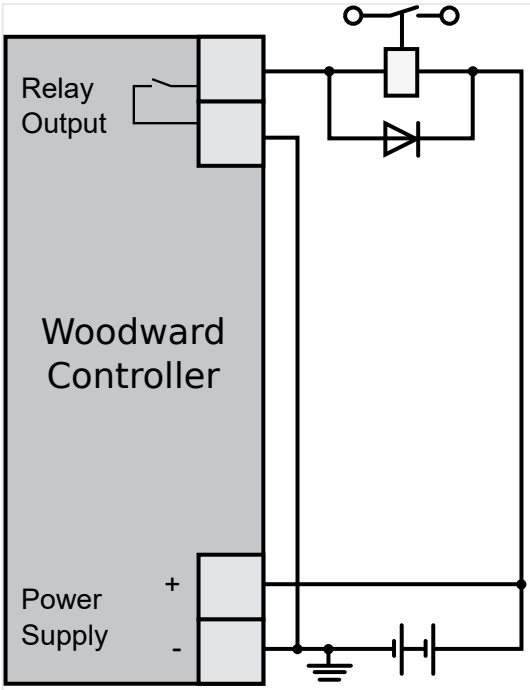


Fig. 65: Protection circuit (example)

Interferences in the interaction of all components may affect the function of electronic devices. One interference factor is disabling inductive loads, like coils of electromagnetic switching devices.

When disabling such a device, high switch-off induced voltages may occur, which might destroy adjacent electronic devices or result interference voltage pulses, which lead to functional faults, by capacitive coupling mechanisms.







Since an interference-free switch-off is not possible without additional equipment, the relay coil is connected with an interference suppressing circuit.

If 24 V (coupling) relays are used in an application, it is required to connect a protection circuit to avoid interferences.



Fig. 65 shows the exemplary connection of a diode as an interference suppressing circuit.

Advantages and disadvantages of different interference suppressing circuits are as follows:

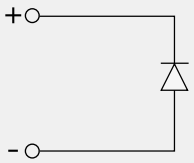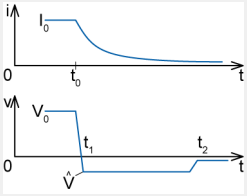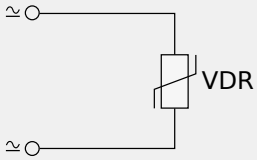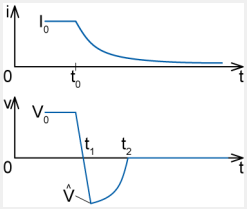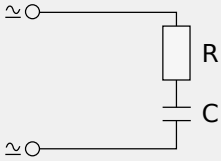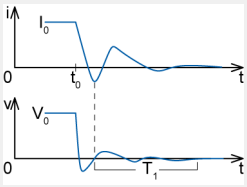Connection diagram	Load current / voltage curve	Advantages	Disadvantages
		Uncritical dimensioning Lowest possible induced voltage Very simple and reliable	High release delay
		Uncritical dimensioning High energy absorption Very simple setup Suitable for AC voltage Reverse polarity protected	No attenuation below VVDR
		HF attenuation by energy storage Immediate shut-off limiting Attenuation below limiting voltage Very suitable for AC voltage Reverse polarity protected	Exact dimensioning required

3.3.10 Analog Inputs (0 to 2000 Ohm | 0/4 to 20 mA | 0 to 1 V)

It is recommended to use two-pole analog senders for best possible accuracy.



Connect the **resistive** analog input's return wires (GND) always to Engine Ground (terminal 15) and as close to the easY-I terminals as possible.

For two pole senders of **0/4 to 20 mA** or **0 to 1 V** sensors Engine Ground is no "must have".

The following curves may be used for the analog inputs:

- Table A
- Table B
- Linear

Released

- Pt100
- Pt1000
- AB 94099
- VDO 120° C
- VDO 150° C
- VDO 10 bar
- VDO 5 bar

The 9 setpoints of the free configurable Tables A and B can be selected for Type definition (parameters 1000, 1050, and 1100).

A catalog of all available VDO sensors is available for download at the VDO homepage (⟹ https://www.vdo.com)

Wiring senders

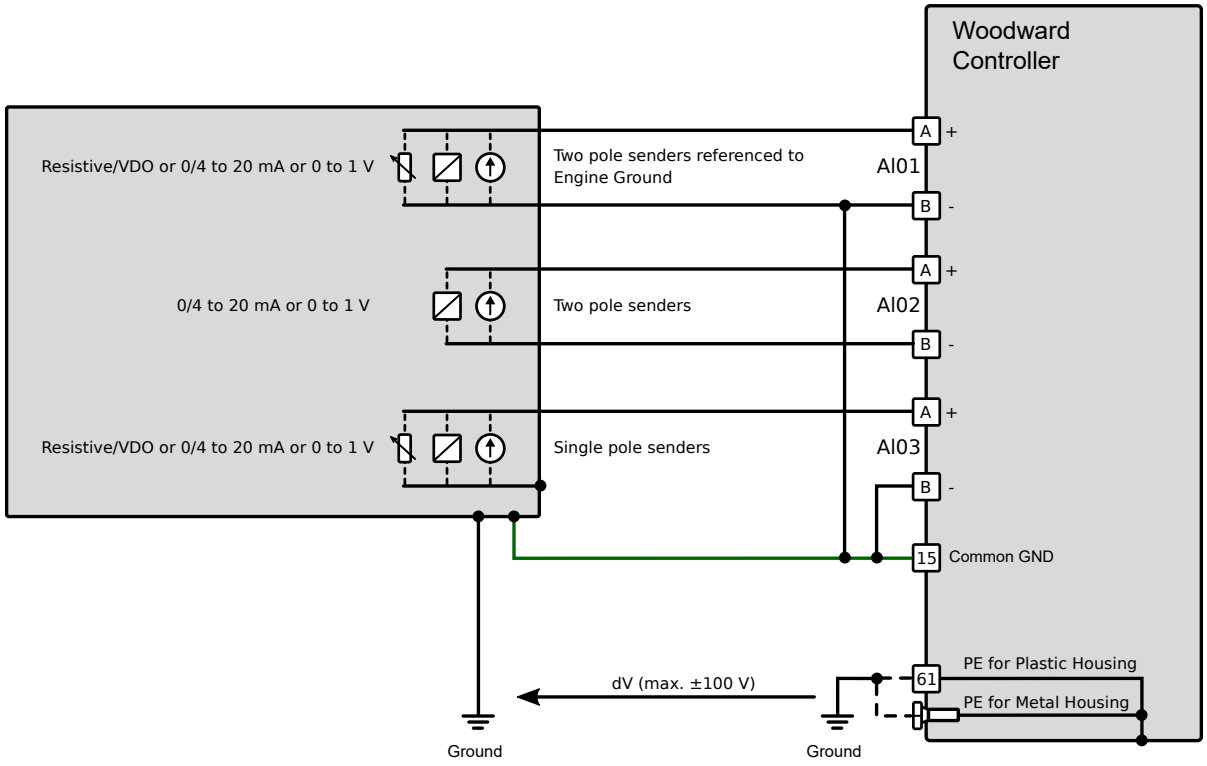


Fig. 66: Analog inputs - wiring senders

Terminal			Description
AI01	A	10	Analog input [AI 01 +]
	B	9	Analog input [AI 01 -] ground, connect with Engine ground terminal 15
AI02	A	12	Analog input [AI 02 +]
	B	11	Analog input [AI 02 -]

Terminal			Description
AI03	A	14	Analog input [AI 03 +]
	B	13	Analog input [AI 03 -] ground, connect with Engine ground terminal 15

CAUTION!

Mixed senders

When both types resistive sender **and** single pole sender are connected to the device, connection from *minus* (pins 9, 11, 13) should be made with short wire to the Engine Ground (pin 15) on input connector.

Wiring single and two-pole senders simultaneously

It is possible to combine single- and two-pole senders but with the lower accuracy.

3.3.11 Analog Outputs

The easY-I offers current, voltage or PWM analog outputs for different applications. Most commonly they are used for speed and voltage biasing.

Controller configuration can change the multifunction controller bias output signals. The analog outputs are galvanically isolated.

3.3.11.1 Analog Outputs (±20 mA, ± 10 V, PWM)

Controller wiring - two wires



Fig. 67: Analog controller output - two wires

CAUTION!

Connecting external power sources to the analog outputs may damage the device.

In case that higher permanent insulation voltages are required than described in the technical data, please install isolation equipment (isolation amplifier) for proper and safe operation.

Released

Type	Terminal			Description
I Current **or** V* Voltage	A	16	+	Analog output [AO 01]
	B	17	GND	
		(Don't connect terminal 18!)		
I Current **or** V* Voltage	A	19	+	Analog output [AO 02]
	B	20	GND	

*) Internal shunt (resistor) is managed automatically.

3.4 Setup Interfaces

NOTICE!

Avoid electrostatic discharge!

Before working with terminals please read and follow the instructions of chapter “Electrostatic discharge”.

For CAN and RS485 shielded cabling, no more than 25 mm wiring exposed without shield coverage are allowed at terminal plug side.

3.4.1 Interfaces overview

Unshielded cable length

For CAN and RS-485:

- Cabling without shield coverage should be less than 25 mm.

The following drawing shows all available interfaces of the device:

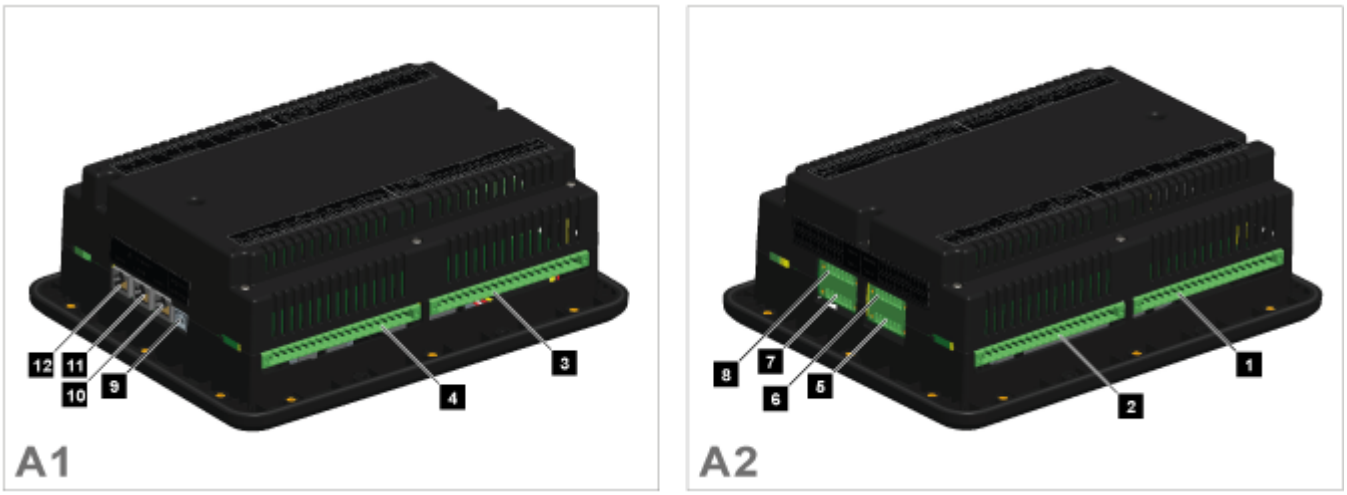


Fig. 68: easY-I-3500XT-P1 Series

Released

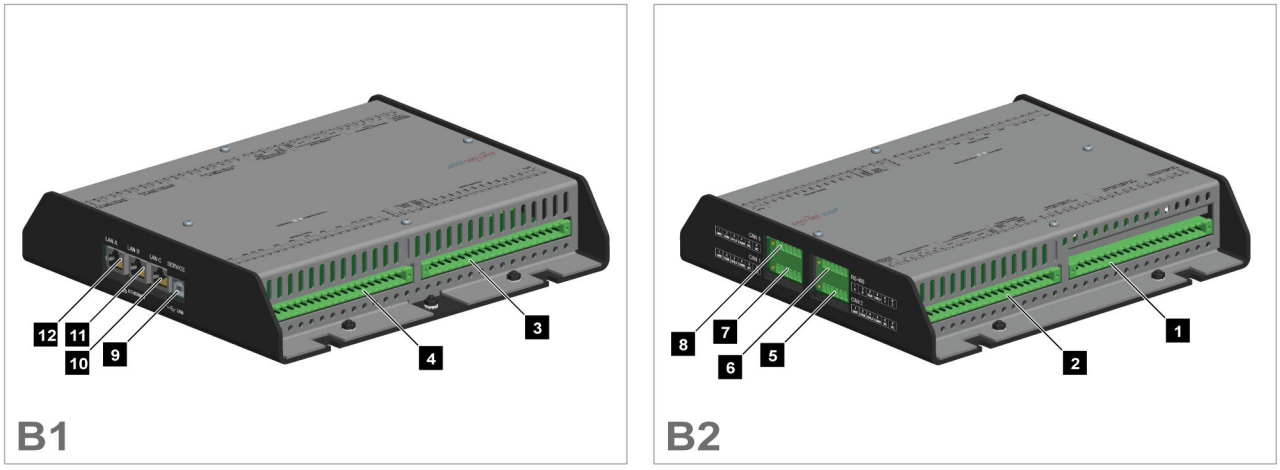


Fig. 69: easY-I-3400XT-P1 Series

A	easY-I-3500XT-P1(-LT) (plastic housing with display)
B	easY-I-3400XT-P1 (sheet metal housing)
1	Mains/generator/busbar PT terminal
2	Analog inputs/outputs, generator CT, and mains/GND current terminal
3	Discrete inputs and power supply
4	Relay outputs terminal
5	CAN bus interface connector CAN #2
6	RS-485 interface connector RS-485 #1
7	CAN bus interface connector CAN #1
8	CAN bus interface connector CAN #3
9	USB interface connector (2.0, slave) SERVICE port
10	ETHERNET interface connector (RJ-45) LAN C
11	ETHERNET interface connector (RJ-45) LAN B
12	ETHERNET interface connector (RJ-45) LAN A

3.4.2 RS-485 Interface

General notes

The easY-I must be configured for half- or full-duplex configuration.

Pin assignment

For location of interface 6 see “3.4.1 Interfaces overview”.

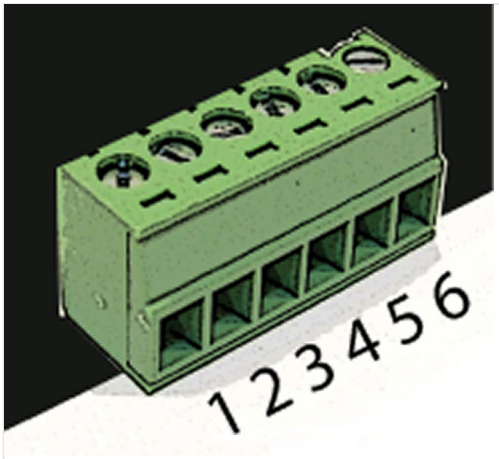


Fig. 70: screwable 6-terminal connector - RS-485

Terminal	Description	.. used for FULL duplex mode	... used for HALF duplex mode	A_{max}
1	A	A (RxD+)		1.5 mm^2
2	B	B (RxD-)		1.5 mm^2
3	GND	GND - local galvanically isolated		1.5 mm^2
4	SHLD	Shield connected to earth via RC element		1.5 mm^2
5	Y	Y (TxD+)	Y (TxD+ / RxD+)	1.5 mm^2
6	Z	Z (TxD-)	Z (TxD- / RxD-)	1.5 mm^2

Table 23: Pin assignment

RS-485 half-duplex

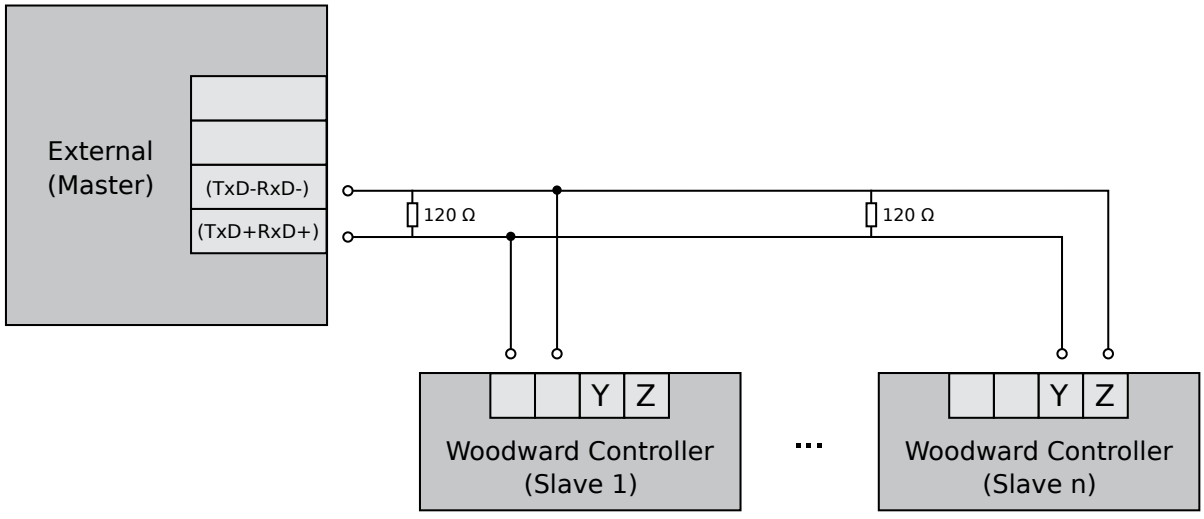


Fig. 71: RS-485 - connection for half-duplex operation (120 Ohms termination resistor at both ends)

Released

RS-485 full-duplex

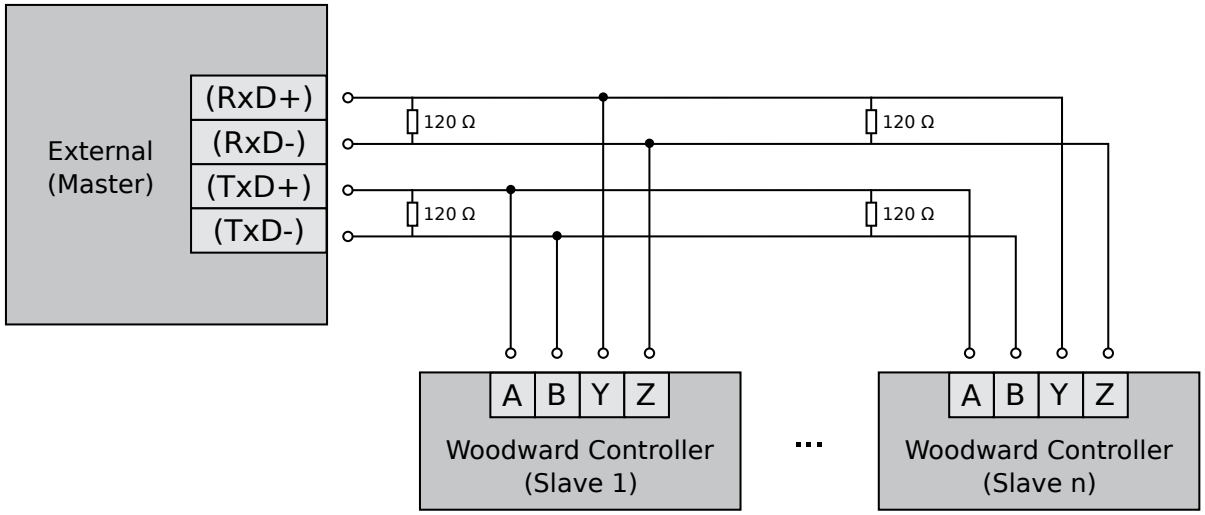


Fig. 72: RS-485 - connection for full-duplex operation

Shielding

easY-I-3000XT is prepared for shielding: Terminal 4 and the connector housing are internally grounded via an RC element. Therefore, they may either be grounded directly (recommended) or also via an RC element on the opposite connection.

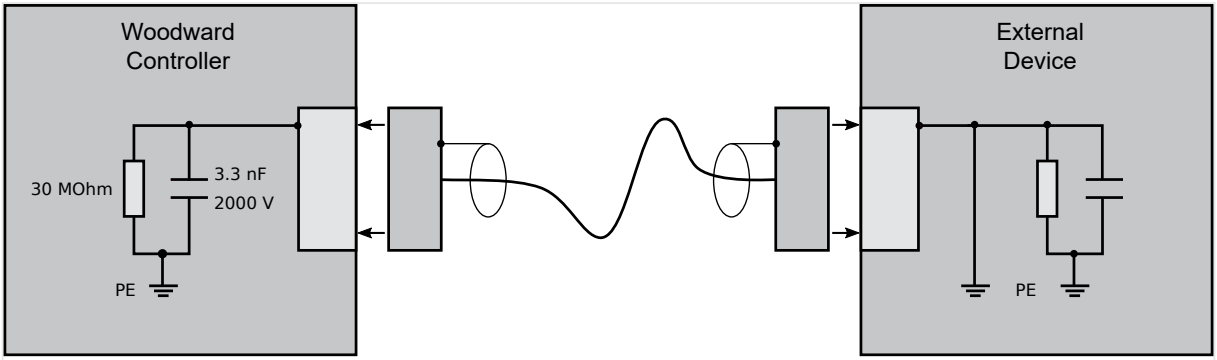


Fig. 73: Shielding preparation (internal RC element)

3.4.3 USB (2.0 slave) interface - Service Port

General notes

Avoid electrostatic discharge!

Avoid electrostatic discharge during USB cable connection to the unit.

To connect this USB 2.0 (slave) device a USB cable with USB Type A (PC/laptop side) and Type B (Woodward device side) connectors is necessary.

USB cable length shall be limited up to 3 m. It is recommended to use professional (high quality) USB cable: 28AWG/1P+24AWG/2C with good shielding.

Use USB service port for ToolKit connection

The USB interface is a service port and the preferred ToolKit connection!

'Read only' USB interface

For location see “3.4.1 Interfaces overview”.

For others than ToolKit connection the USB interface is read-only!

It can be used for further service tasks from manufacturer's side.

Connecting it to a PC/laptop will display the USB interface available and all files prepared from Woodward manufacturing side. Read/write attributes of this service port are restricted to read only.

3.4.4 CAN Bus Interfaces

Avoid electrostatic discharge!

Avoid electrostatic discharge during cable connection to the unit.

Pin assignment

For location of interface 5, 7, and 8 see “3.4.1 Interfaces overview”.

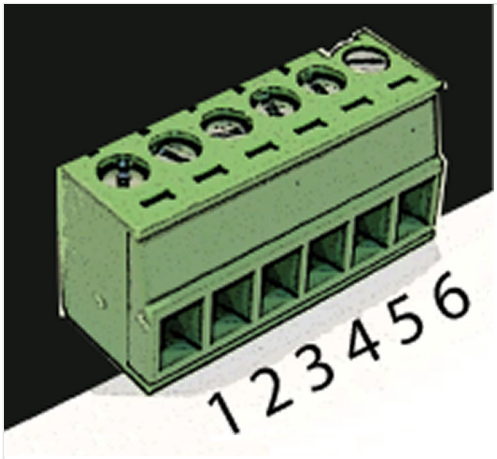


Fig. 74: screwable 6-terminal connector - CAN bus

Terminal	Description	A_{max}
1	GND - local galvanically isolated	1.5 mm^2

Released

Terminal	Description	A_{max}
2	CAN-L	1.5 mm^2
3	Shield	1.5 mm^2
4	CAN-H	1.5 mm^2
5	Not connected	1.5 mm^2
6	Not connected	1.5 mm^2

Table 24: Pin assignment

Topology

Please note that the CAN bus must be terminated with a resistor, which corresponds to the impedance of the cable (e.g. 120 Ω, 1/4 W) at both ends.

The termination resistor is connected between CAN-H and CAN-L.

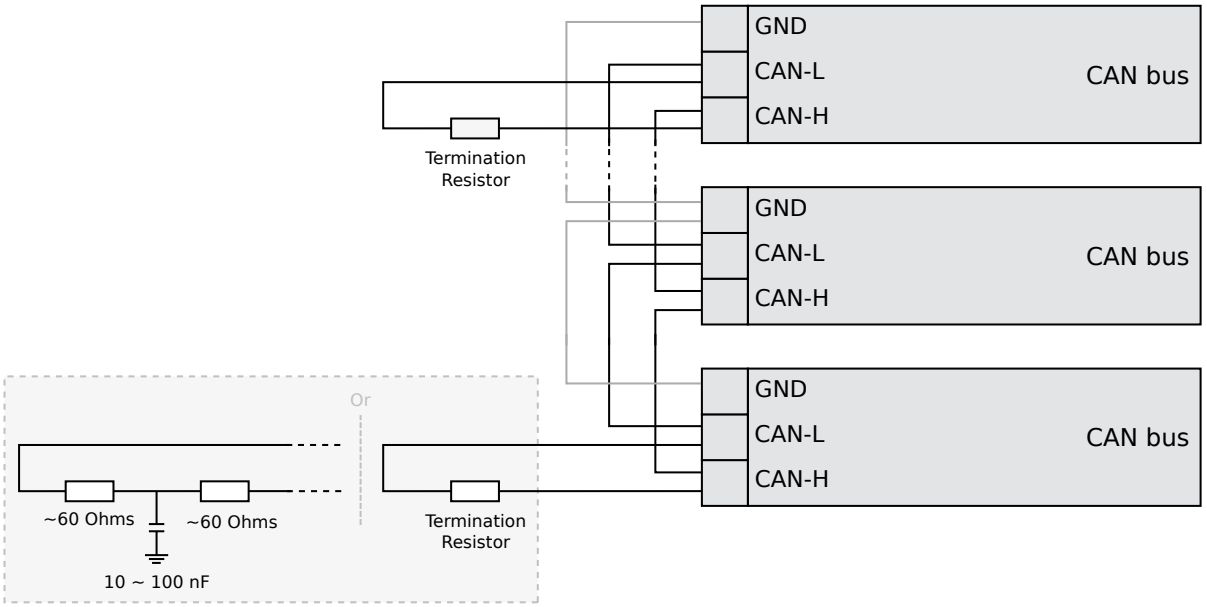


Fig. 75: CAN bus - termination

For very critical EMC conditions (many noise sources with high noise levels) and for high transmission rates we recommend to use the 'Split termination concept' as shown.

- Divide the termination resistance into 2x60 Ohms with a center tap connected to ground via a capacitor of 10 to 100 nF.

Maximum CAN bus length

The maximum length of the communication bus wiring is dependent on the configured baud rate. Observe the maximum bus length.

(Source: CANopen; Holger Zeltwanger (Hrsg.); 2001 VDE VERLAG GMBH, Berlin und Offenbach; ISBN 3-8007-2448-0).

Baud rate	Max. length
1000 kBd	25 m
800 kBd	50 m
500 kBd	100 m
250 kBd	250 m
125 kBd	500 m
50 kBd	1000 m
20 kBd	2500 m

Bus shielding

All bus connections of the easY-I are internally grounded via an RC element. Therefore, they may either be grounded directly (recommended) or also via an RC element on the opposite bus connection.

A shielded cable with shielded plug is required.

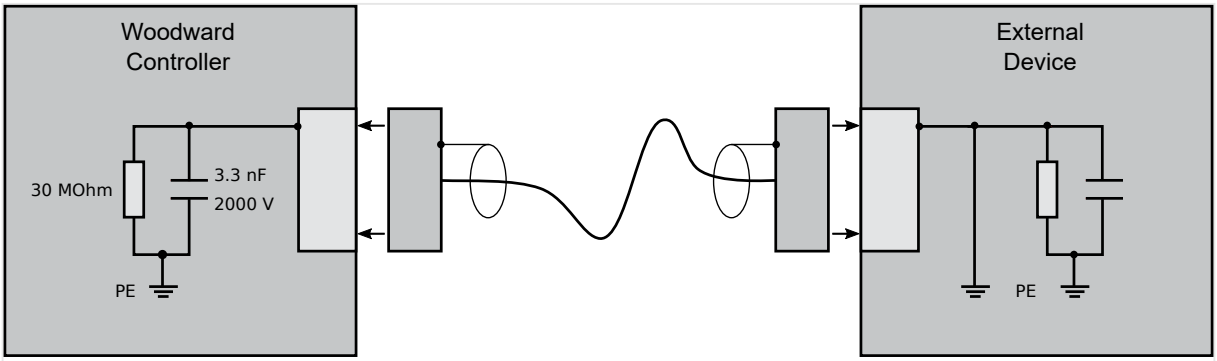


Fig. 76: Bus shielding (internal RC element)

Troubleshooting

If there is no data transmission on the CAN bus, check for the following common CAN bus communication problems:

- A T-structure bus is utilized
- CAN-L and CAN-H are switched
- Not all devices on the bus are using identical baud rates
- Termination resistor(s) are missing
- The configured baud rate is too high for wiring length
- The CAN bus cable is routed in close proximity with power cables

Woodward recommends the use of shielded, twisted-pair cables for the CAN bus (see examples).

- Lappkabel Unitronic Bus CAN UL/CSA
- UNITRONIC-Bus LD 2×2×0.22

3.4.5 Ethernet Interface (incl. Remote Panel)

This Ethernet interface 10/100Base-T/-XT complies with the IEEE 802.3 specifications.

Avoid electrostatic discharge!

Avoid electrostatic discharge during Ethernet cable connection to the unit.

Pin assignment

For location of interfaces 10, 11, and 12 see “3.4.1 Interfaces overview”.

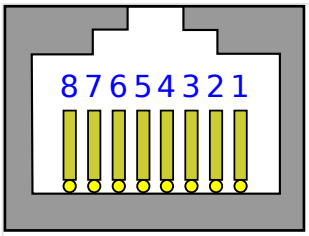


Fig. 77: RJ-45 connector - Ethernet

Pin	Description	10Base-T	100Base-T
1	Transmit Data+	TX+	TX+
2	Transmit Data-	TX-	TX-
3	Receive Data+	RX+	RX+
4	Not connected	NC	NC
5	Not connected	NC	NC
6	Receive Data-	RX-	RX-
7	Not connected	NC	NC
8	Not connected	NC	NC
		Notes NC: Not connected	

Table 25: Pin assignment

Visualization

Two LEDs (green and yellow) indicate communication status as well known by the standard.

- The green LED indicates the link activity: blinking during data transmission.

- The yellow LED indicates the link (speed) status:
  - 10MB – LED switched-OFF
  - 100MB – LED switched-ON

General notes

Ethernet category 5 (STP CAT 5) shielded cable is required with shielded plug RJ45. The chosen switch shall support a transmission speed of 10/100 Mb/s with a network segment expansion capability of 100 m.

Flexibility

All Ethernet ports have auto MDI/MDI-X functionality what allows to connect straight-through or crossover Ethernet cable.

The Ethernet ports are named twice but mean the same: Ethernet #1 or Ethernet A; Ethernet #2 or B; and Ethernet #3 or C .

Cable length / distance

The maximum length from connection to connection is 100 m. Some third party suppliers offer technology to expand the connection.

Topology

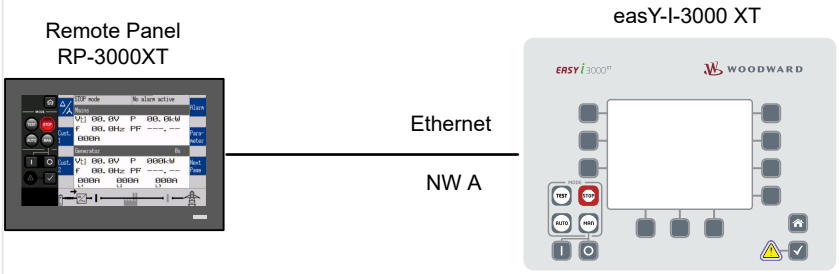


Fig. 78: Application Example: Simple constellation with easY-I-3000XT and RP-3000XT

Remote Control

The Woodward Remote Control is able to visualize the display of the remotely controlled device and to make front button and soft key related functionality available.

Access via Remote Panel PR-3000XT is described in chapter “4.3.6 Configure Remote Panel Mode” and the Technical Manual »37593 RP-3000XT«.

Released

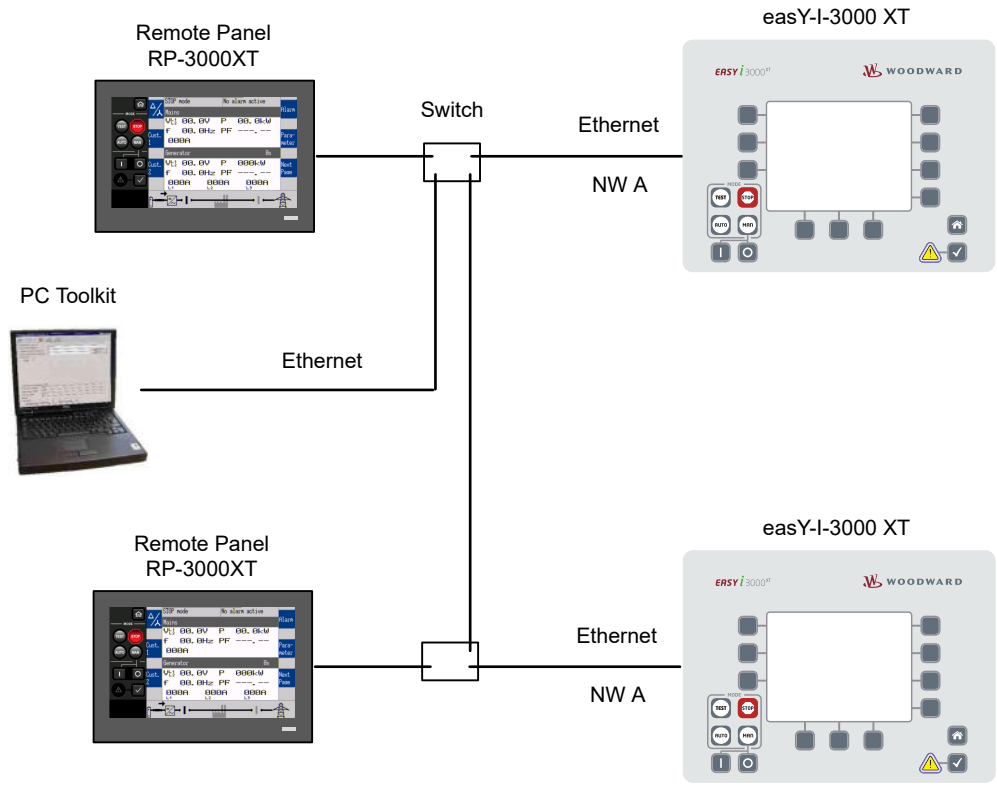


Fig. 79: Application Example: Multiple Inverter/Generator operation with a ToolKit access point (A)

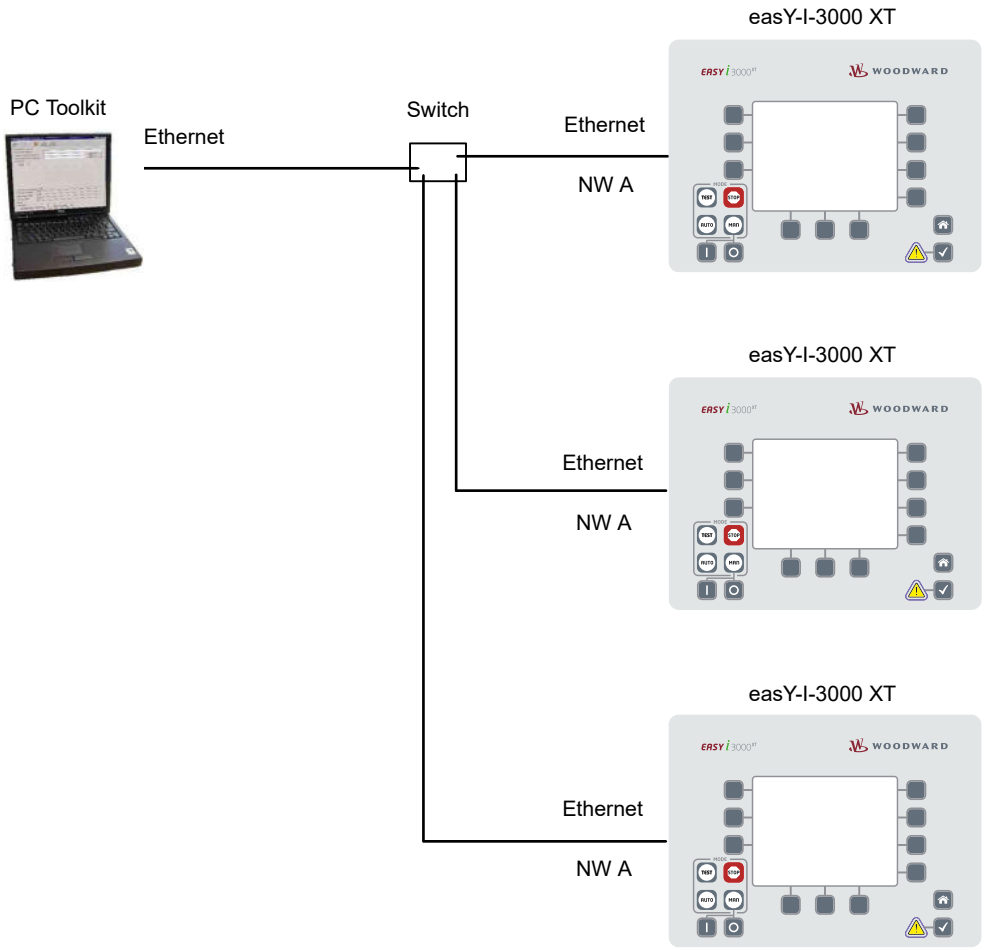


Fig. 80: Application Example: Multiple Inverter/Generator operation with a ToolKit access point (B)

Troubleshooting

Check first the power supply of the switches.

Check the IP addressed of the single devices. See chapter “4.7.5 Ethernet Interfaces” for details.

Released

4 Configuration

Parameter Numbers

All parameters are assigned a unique parameter identification number.

The parameter identification number may be used to reference individual parameters listed in this manual.



This parameter identification number

- is also displayed in the ToolKit configuration screens next to the respective parameter
- can be used with ToolKit "search" functionality
  - to find all ToolKit screen this parameter appears
  - to directly jump to the preferred ToolKit screen

Values of variables and parameters

This device is working with variables and values in FLOAT format. This allows to handle values by number and exponent.

There is a need to convert FLOAT to INTEGER (32 bit) for common Data Protocols, communication with some PLCs, and for some display restrictions.



Rounding error

Numbers higher than 8388608 come with an rounding error of 0.005% of the number itself.



Displayed restrictions sample

Values of user defined tables ([Parameter / Configuration / Configure application / Configure inputs/outputs / Configure analog inputs / General analog inputs / User defined table A (or User defined table B)]) have an input range from -900000.000 to 900000.000.

Type 12345.678 and ...

- ToolKit display will immediately change to 12345.680 for rounding error
- HMI/display shows 12345.678
- ... independent from where value is typed in (ToolKit or HMI/display)

Handle value and unit separately

Some parameters have a separate definition of value and unit. This flexibility comes with the need to take additional care for factorized units like "k..., M..., m..., µ..." multiplying or dividing the number of the value.

Released

Values and units must fit

Device and software offer a very flexible handling of values with well defined selectable rules. It is on customers responsibility to combine what fits.

From device side it is neither restricted nor controlled to use values in a wrong way.

Configuration and Rebooting

Wait before rebooting

Changing configuration/parameters becomes effective immediately. **To be sure that the changes have been saved internally, wait about 20 seconds before rebooting or disconnecting the power.**

Menu structure (menu tree)

The menu structure of HMI/display and ToolKit is aligned.

Exceptions

- The well introduced HMI/display softbutton »Next Page« is continued but in ToolKit named »STATUS MENU«.

  (In ToolKit »Next Page« is used to go to the next page.)

- Some monitoring parameters in HMI/display are in ToolKit placed directly with it's settings e.g.: find 10341 »Freq. dep. derating of power« at

  [Next Page / Setpoints / Derating] in HMI/display but

  [PARAMETER / Configuration / Configure application / Configure controller / Configure load control / General load control] in ToolKit

- »Sequencing« in HMI/display comes with a separate softbutton - ToolKit offers the information together with others as part of the »States easY-I/Sequencing« screen.

The following drawing shows the first three (major) levels of easY-I-3400XT-P1/3500XT-P1 menu structure:

Released

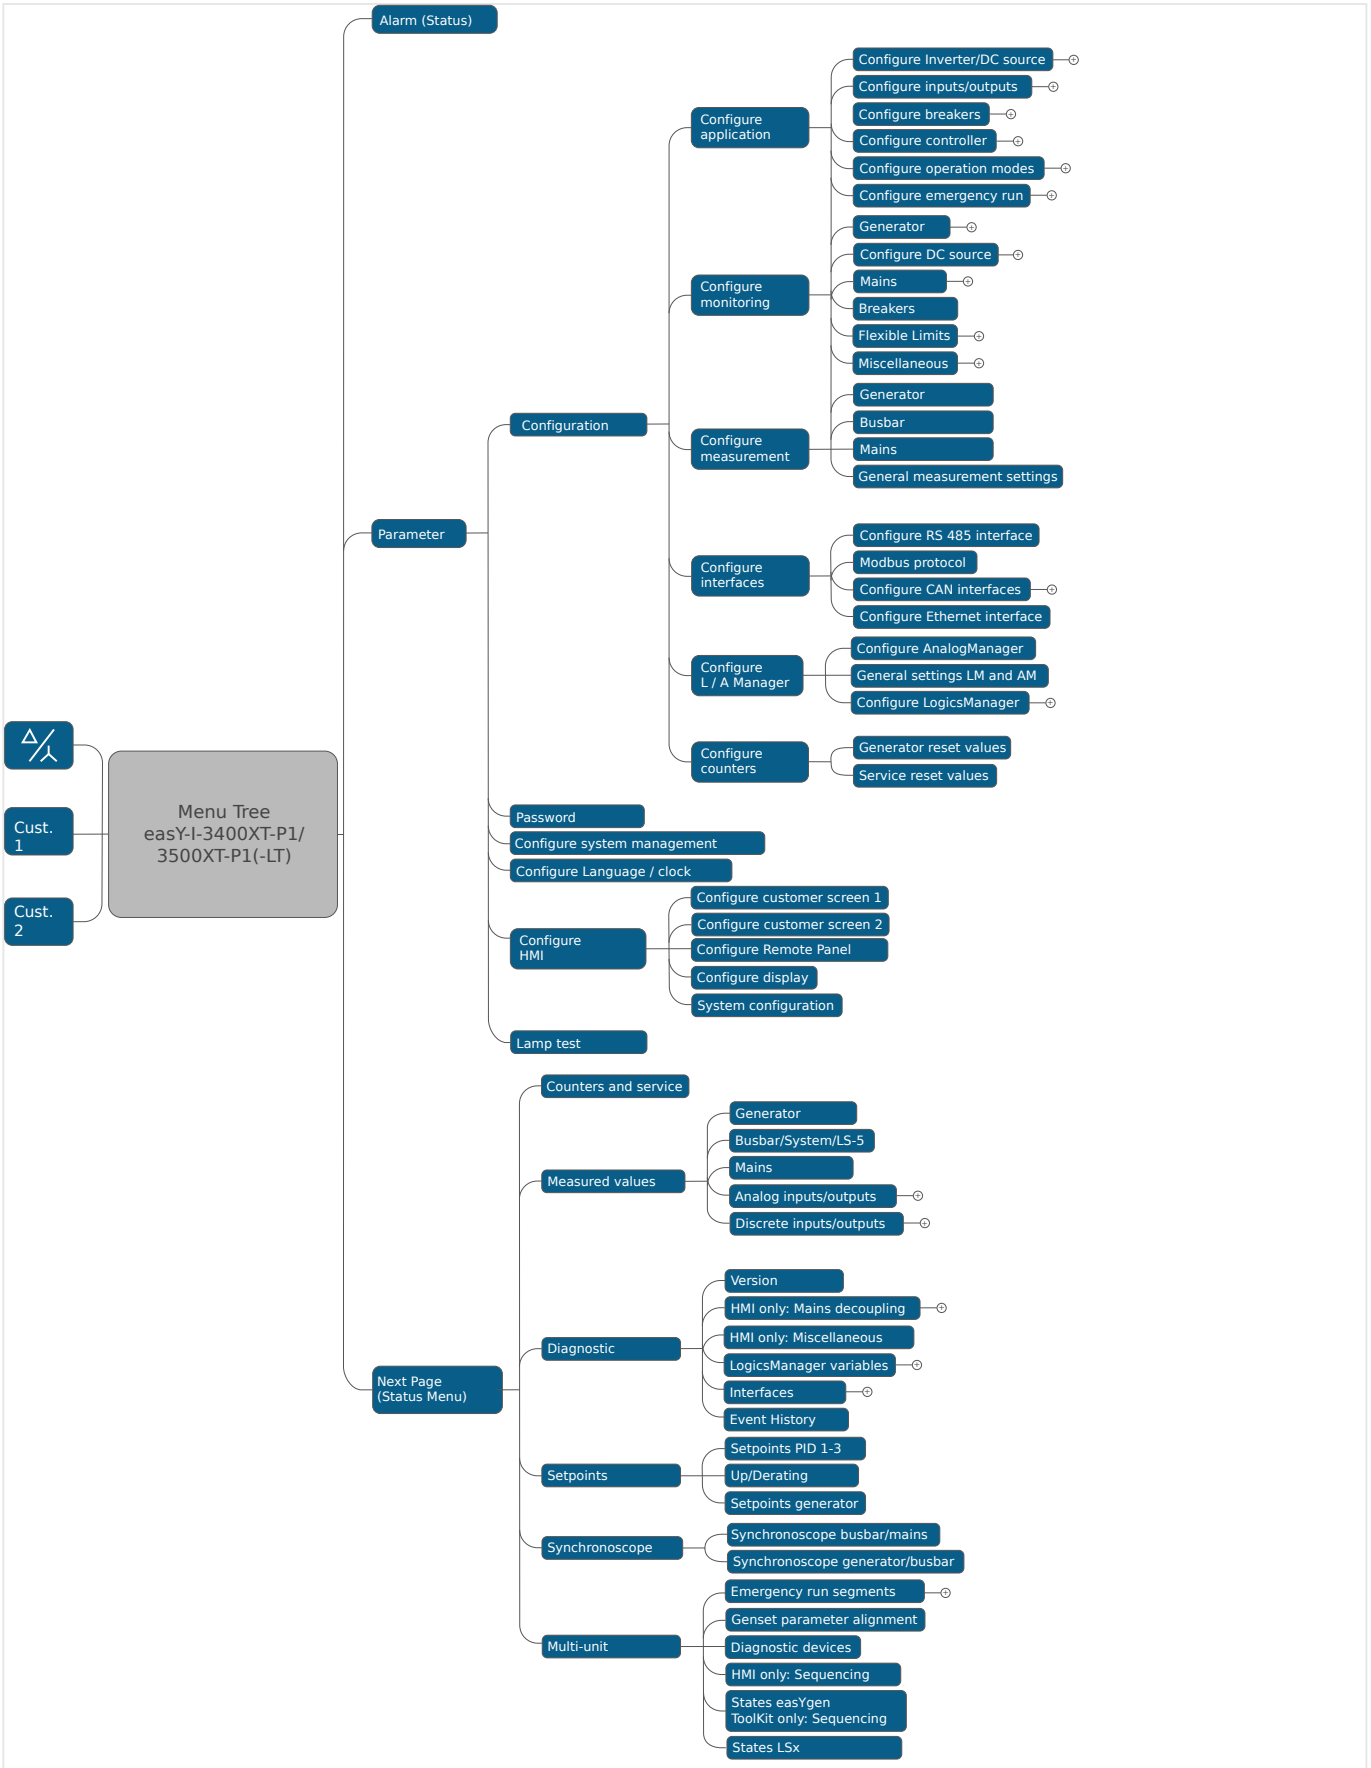


Fig. 81: Menu structure (menu tree) easY-I-3400XT-P1/3500XT-P1

Released

4.1 Front Panel Access

The following chapters only apply to model with front panel and display.

Front Panel / HMI / display

Buttons can be disabled by ToolKit with parameter 12978 »Lock keypad«.

4.1.1 Basic Navigation

Main screen

After power-up the control unit displays the main screen / HOME screen (Fig. 82).

The main screen can be divided into the following basic sections:

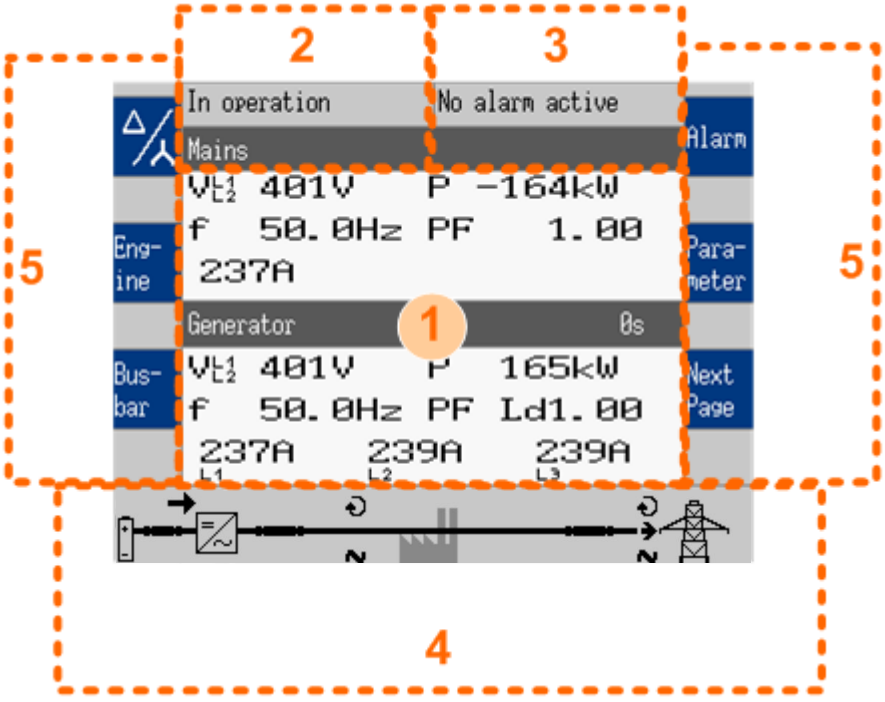


Fig. 82: Main screen (shown with default settings for screen configuration)

1 Values

2 Status Messages

3 Alarm Messages

4 Single Line Diagram

5 Current Softkey Functions

Released

Values »1«

The "values" section (↳ Fig. 82/1) of the screen illustrates all measured power related information including voltages, currents, frequencies, power, and power factor values.

If the mains data display is disabled, the main screen will only show generator data with bigger digits.

The section's content changes based on the selected sub-menu screen.

For information on specialized menu screens refer to ↳ “4.1.5 Specialized Menu Screens”

Status messages »2«

The "status message" section (↳ Fig. 82/2) of the screen shows the actual operating information.

For a list of all operation states refer to ↳ “9.6.1 Status messages”.

Alarm messages »3«

The "alarm message" section (↳ Fig. 82/3) of the screen shows the last alarm message that is occurred and not yet acknowledged.

For a list of all alarm messages refer to ↳ “9.6.5 Alarm Messages”.

Single line diagram »4«

The single line diagram (↳ Fig. 82/4) shows the current status of the DC source, inverter and power circuit breakers.

This section is also used for manual operation of the genset.

For additional information refer to ↳ “5.2.2 Operating Mode MANUAL”.

Softkeys »5«

The softkeys (↳ Fig. 82/5) permit navigation between screens, levels and functions as well as configuration and operation.

Group	Softkey	Caption	Description
Display		Display Mode	Next step to display all measured (delta/wye) voltages one after the other.
		Customer configurable screen 1 (and 2)	Change to "customer specific screen 1 (or 2)" **Notes**

Released

Group	Softkey	Caption	Description
			The name of this softbuttons is configurable, too.
	CAN 1	CAN 1	Change to "CAN interface 1 state" screen.
	CAN 2	CAN 2	Change to "CAN interface 2 state" screen.
	Ext. I/O	Ext. I/O	Change to external discrete I/Os screen.
	Int. I/O	Int. I/O	Change to internal discrete I/Os screen.
		Reset Value Display Reset Maintenance	Reset the maximum value display. Reset the maintenance counter.
Operation		Increase Value	Increase selected value.
		Decrease Value	Decrease selected value.
		Confirm Input	Confirm and store changed value.
		Acknowledge Message	Acknowledge/Delete message/event.
		Open Breaker	Open mains/generator breaker (MANUAL mode).
		Close Breaker	Close mains/generator breaker (MANUAL mode).
Navigation		Move Up	Select previous value/entry.
		Move Down	Select next value/entry.
		Move Cursor Position	Move cursor position
		Return	Return to previous menu.
	Next Page	Next Page	Go to following page/screen of the current menu.
	Para-meter	Parameter Screen	Show parameter screen.
	Alarm	Alarm Screen	Show alarm screen.

Status symbols

Menu screen	Symbol	Caption	Description
Main Screen	$V_{L1}V_{L2}V_{L3}$ $V_{N1}V_{N2}V_{N3}$	Voltage Display Mode	The index of the symbol indicates whether delta or wye voltage is displayed and which phases are displayed.
Single Line Diagram		Rotating Field CW	Generator, mains or busbar rotating field moves clockwise.
		Rotating Field CCW	Generator, mains or busbar rotating field moves counter-clockwise.
		Power Detected	Power is detected at the respective measuring point (generator, busbar or mains).
		Monitoring Enabled	Indicates that the delayed monitoring has expired and the monitoring functions are enabled.

Released

Menu screen	Symbol	Caption	Description
		Power Imported	Power is imported (at mains interchange).
		Power Exported	Power is exported (at mains interchange).
Alarm List		Alarm Condition Present	Indicates that corresponding alarm condition is still present.
		Alarm Class A - Class F present	Symbol with "!" indicates that an alarm of Class A - Class F is present.
		Alarm Class A - Class F not present	Symbol without "!" indicates that an alarm of Class A - Class F is not present.
Setpoints		Generator Power	Indicates the generator power (actual value).
		Mains Power	Indicates the mains power (actual value).
Synchroscope		Phase Angle	Indicates the actual phase angle between busbar and mains or busbar and generator.
Sequencing		Breaker Closed	GCB of respective genset in sequence is closed.
		Breaker Open	GCB of respective genset in sequence is open.
		Add-on	Generator is becoming "Add-on" to the (multiple) genset system.
		Add-off	Generator is going "Add-off" from the (multiple) genset system.
LogicsManager		Delay ON	Delay before output becomes TRUE.
		Delay OFF	Delay before output becomes FALSE.
		TRUE/enabled	Variable is TRUE (LogicsManager). The bit is enabled (CAN Interface). Relay activated (Discrete Outputs)
		FALSE/disabled	Variable is FALSE (LogicsManager). The bit is disabled (CAN Interface). Relay deactivated (Discrete Outputs)

The following chapters list notes related to the specific menu screens.

For information on standard softkeys and status symbols refer to “4.1.1 Basic Navigation”.

Released

4.1.2 The HOME Screen

General notes

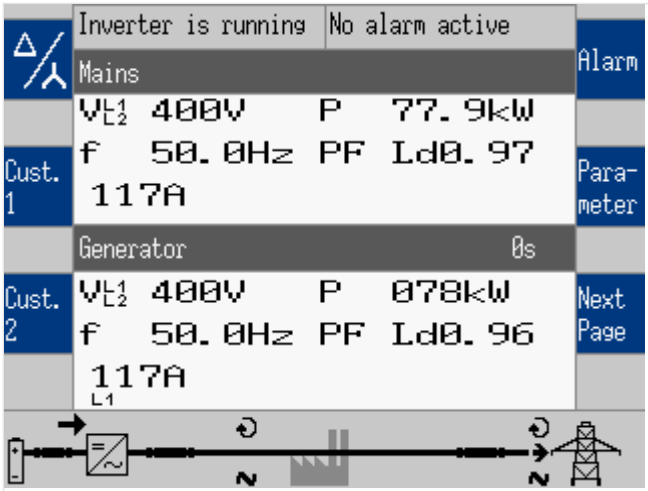


Fig. 83: HOME page/screen

- The “Home” button is a one-click way back to the overview starting point: the HOME page / HOME screen
- The “Home Screen” offers display alternatives via parameter 4103» Home screen data«
  - Generator
  - Generator/Mains
  - Generator/Busbar
  - Generator/DC-Source
  - Generator/LSx/GC
- To display the single line diagram with/without mains is selectable via parameter 4129 »Oneline diagram with mains«
- **Two customizable buttons** enable selection of indications to display analog values (full access via ToolKit, name/description cannot be changed via HMI)

  Find menu: [Parameter / Configure HMI / Configure customer screen 1] and [Parameter / Configure HMI / Configure customer screen 2]
- Two display brightness levels can be switched by LogicsManager. Can be used for e.g.:
  - Key activation determined
  - Brightness reduction on navigation bridge (vessels)
  - Saving energy

    Find menu: [Parameter / Configure HMI / Configure display]

Released

- Lock keypad function is determined by LogicsManager ⮡ 12978. Result is available as logical command variable 86.30.

  Find menu (ToolKit only!): [Parameter / Configure HMI / Configure display]

Display alternatives

The HOME screen allows a number of pre-selectable and softbutton controlled display variants.

- Generator
  - Voltages (pp - pn) - selectable via softbutton »1«
  - Power
  - Power Factor PF
  - Frequency
  - Currents (L1, L2, L3)
- Generator/Mains
  - Generator values as described above

    and additionally for Mains
  - Voltage
  - Frequency
  - Current
  - Power
  - Power factor
- Generator/Busbar
  - Generator values as described above

    and additionally for Busbar
  - Voltage
  - Power
  - Frequency
- Generator/DC Source
- Generator/LSx/GC
  - Generator values as described above

    and additionally for mains values mearured by LSx or GC, according to application mode (parameter ⮡ 3444).
  - Voltage
  - Power

Released

- Frequency

4.1.3 Customer Screens

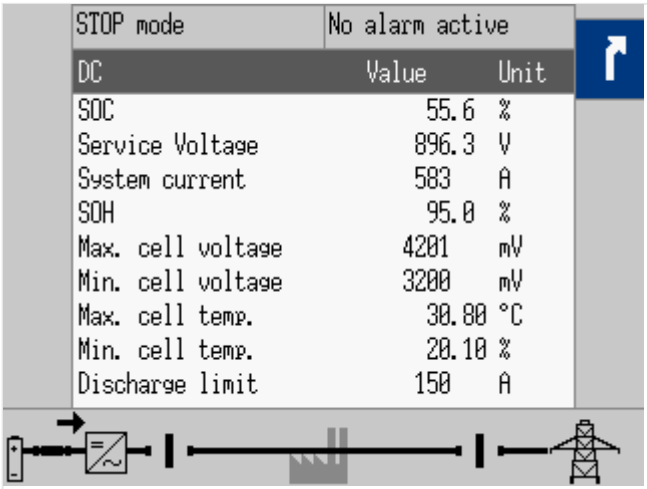


Fig. 84: Customer Screen sample: "DC"

Available at HOME page, two softbuttons give one-click access to customer specific (monitoring) screens.

The complete configuration is only possible via ToolKit. HMI allows access to the AnalogManager and "Decimal points" but not to the text fields »Description« and »Unit«.

Find menu: [Parameter / Configure HMI / Configure customer screen 1 / AM Customer screen 1.1 - AM Customer screen 1.9],

and [Parameter / Configure HMI / Configure customer screen 2 / AM Customer screen 2.1 - AM Customer screen 2.9],

Released

How to customize screens via ToolKit

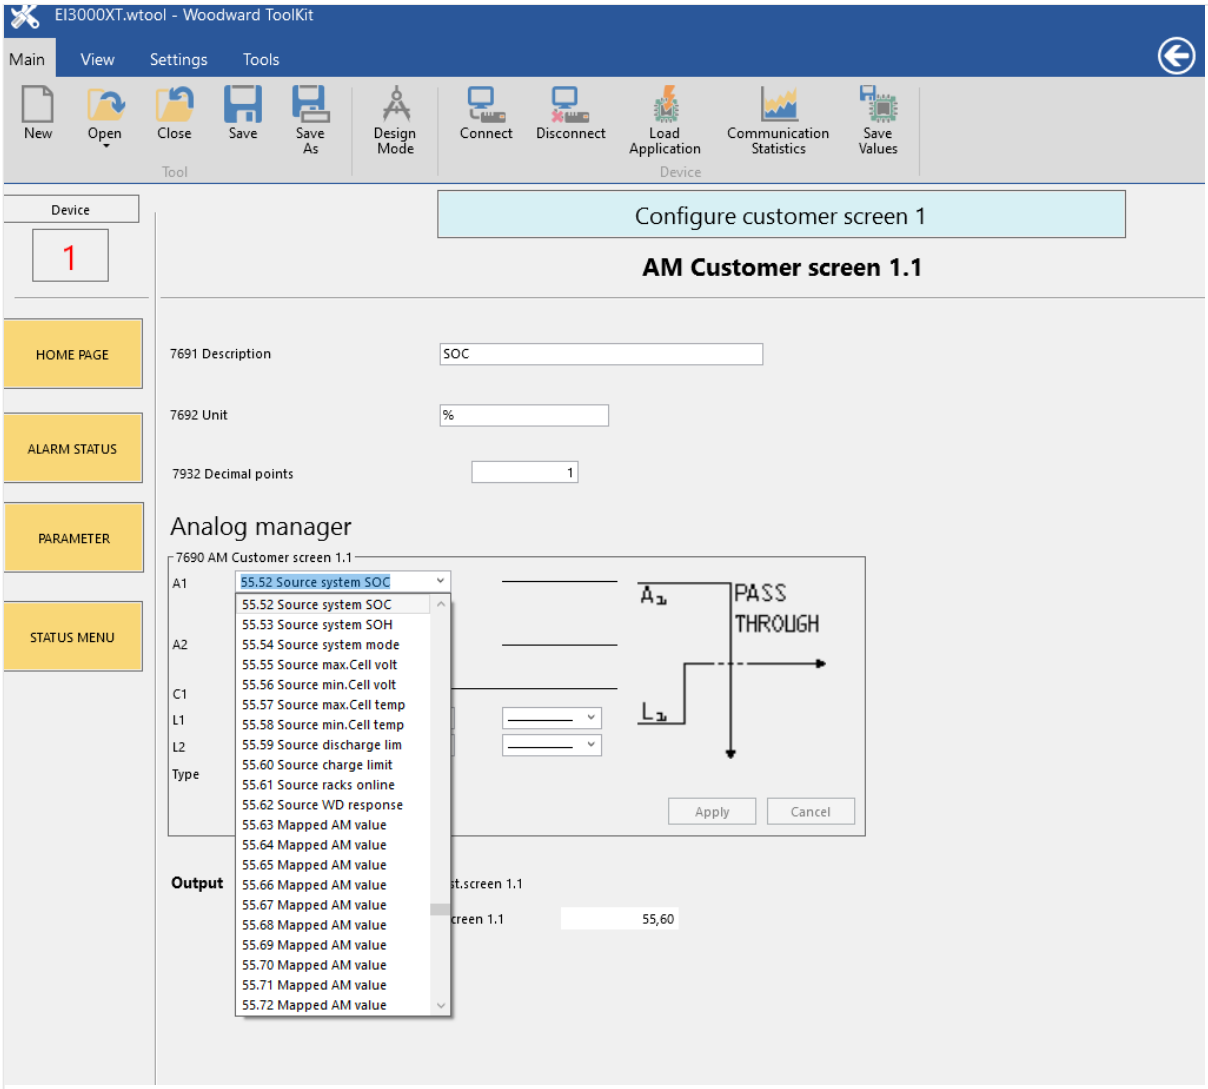


Fig. 85: Customer screen: setting sample

Two customer specific named screens enable flexible configuration of up to 18 values. Each displayed with "Description" (customer specific text), the result of a free configurable AM, "Unit" (a customer specific text) and "Decimal points".

For the complete parameter set refer to “4.3.2.1 Configure Customer Screens”.

4.1.4 Standard Menu Screens

The following chapters list standard menu screens, where all user input is handled similarly.

For information on standard softkeys and status symbols refer to “4.1.1 Basic Navigation”.

For information on all other menu screens refer to “4.1.5 Specialized Menu Screens”.

Released

4.1.4.1 Navigation Screens

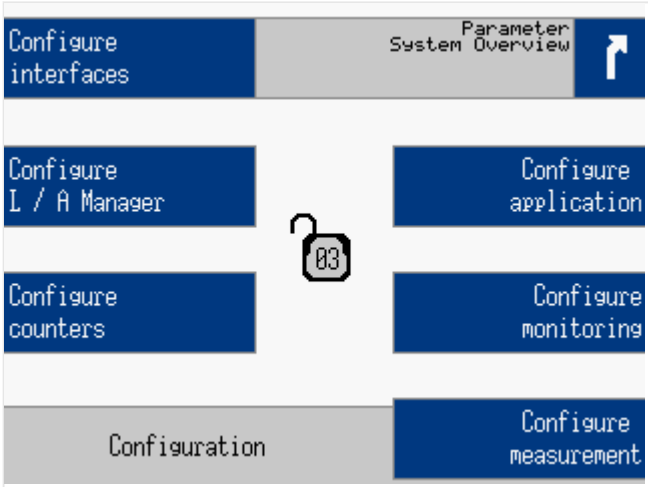


Fig. 86: Navigation screen (example)

Navigation screens offer access to sub-menu screens via the displayed softkey.

Navigation screens samples:

Parameter, Configuration, Measured values, Synchroscope, Diagnostic ...

⚙

1. ▷ Press the desired softkey to change to a sub-menu screen.

Sub-menu entries are only displayed if the code level needed to access them is the same/or higher than the displayed code level in the center of the navigation screen.

4.1.4.2 Value Setting Screens

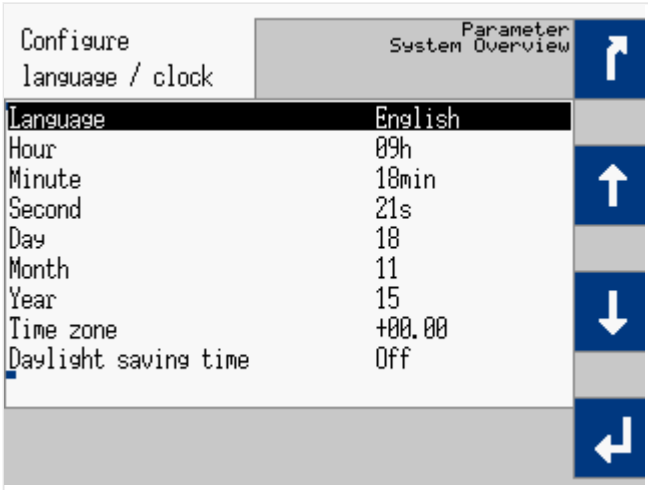


Fig. 87: Value setting screen (example)

Released

At value setting screens the settings of the parameters can be changed.

Value setting screens samples:

Configure language / clock, Configure display, Password, Configure application ...

⚙

1. ▷ Use the following softkeys in a value setting screen to select, change and confirm a setting.

Softkey	Description
↑	Select previous value/entry.
↓	Select next value/entry.
+	Increase selected value.
−	Decrease selected value.
↵	Confirm and store changed value.

4.1.4.3 Status/Monitoring Screens

Status/Monitoring screens display monitored values or set parameters.

Status/Monitoring screen	Notes
Generator	Which values are shown in the display and whether they are correct depends on the measurement type.
Busbar/System/LS-5	Which values are shown in the display and whether they are correct depends on the measurement type.
Mains	Which values are shown in the display and whether they are correct depends on the measurement type.
Analog inputs/outputs	The analog outputs are displayed as a percentage of the selected hardware range, i.e. 50% of a 0 to 20 mA output refer to 10 mA or alternatively as absolute values (depending on selected parameters).
Discrete inputs/outputs	The configured logic for the discrete input "N.O./N.C." will determine how the easY-I reacts to the state of the discrete input. If the respective DI is configured to N.O., the unit reacts on the energized state, if it is configured to N.C., it reacts on the de-energized state.
Counters and service	For additional information on setting/resetting counters refer to “4.10 Configure Counters”.
Actual date and time	—
Version	—
Load diagnostic	—

Table 26: Status/Monitoring screens samples

Released

4.1.5 Specialized Menu Screens

4.1.5.1 HOME Screen Voltage Display

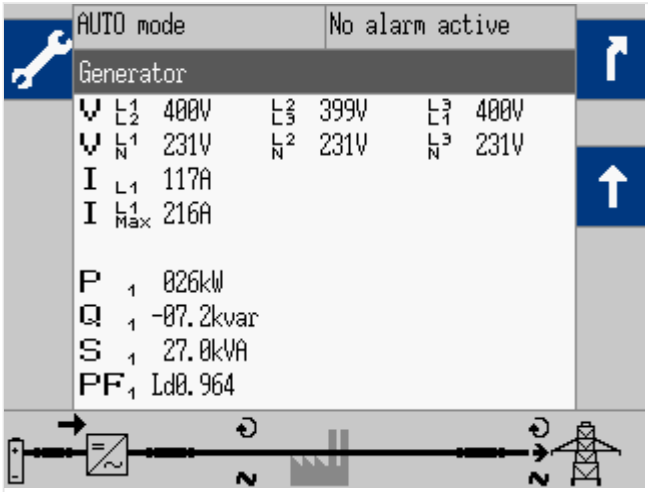


Fig. 88: Monitoring screen 2nd page (example)

If a softkey appears with a wrench symbol  it is possible to reset the peak hold value(s).

The softkey  »Display mode« on the main screen "HOME" changes the type of voltage display.

The amount of information available from the system depends on how the measuring is configured in the control unit.

The following tables illustrate what values are available depending on the configured measurement type:

	The displayed voltages ...			Displayed at parameter setting			
Press 	Symbol	Type	Measure	3Ph4W	3Ph3W	1Ph2W	1Ph3W
0× (6×)	V_{L2}^{L1}	Delta	L1-L2	Yes	Yes	Yes[1]	—
1×	V_{L3}^{L2}	Delta	L2-L3	Yes	Yes	—	—
2×	V_{L1}^{L3}	Delta	L3-L1	Yes	Yes	—	Yes
3×	V_{N}^{L1}	Wye	L1-N	Yes	—	Yes[1]	Yes
4×	V_{N}^{L2}	Wye	L2-N	Yes	—	—	—
5×	V_{N}^{L3}	Wye	L3-N	Yes	—	—	Yes

Table 27: Measuring point - generator

Released

[1] Depends on setting of parameter ↳ 1858.

	The displayed voltages ...			Displayed at parameter setting			
Press Δ/Y	Symbol	Type	Measure	3Ph4W	3Ph3W	1Ph2W	1Ph3W
0× (6×)	V_{L2}^{1}	Delta	L1-L2	Yes	Yes	Yes[1]	—
1×	V_{L3}^{2}	Delta	L2-L3	Yes	Yes	—	—
2×	V_{L1}^{3}	Delta	L3-L1	Yes	Yes	—	Yes
3×	V_{N}^{1}	Wye	L1-N	Yes	—	Yes[1]	Yes
4×	V_{N}^{2}	Wye	L2-N	Yes	—	—	—
5×	V_{N}^{3}	Wye	L3-N	Yes	—	—	Yes

Table 28: Measuring point - mains

[1] Depends on setting of parameter ↳ 1858.

4.1.5.2 Alarm List

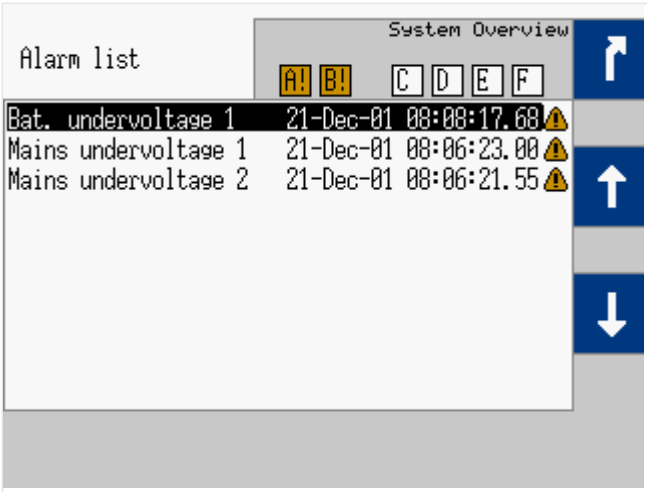


Fig. 89: Alarm List screen

All alarm messages, which have not been acknowledged and cleared, are displayed. Each alarm is displayed with the alarm message and the date and time of the alarm occurred in the format `yy-mon-dd hh:mm:ss.ss`.

Self-acknowledging alarm messages get a new timestamp when initializing the unit (switching on).

Released

Symbol/Softkey	Description
⚠	Indicates that corresponding alarm condition (Class A/Class B) is still present.
△	Indicates that corresponding alarm condition (Class A/Class B) is no longer present.
ⓘ	Indicates that corresponding alarm condition (Class C - Class F) is still present.
○	Indicates that corresponding alarm condition (Class C - Class F) is no longer present.
A!	Symbol with "!" indicates that an alarm of Class A - Class F is present. • Amber color = alarm Class A/Class B • Red color = alarm Class C/Class D/Class E/Class F
D	Symbol without "!" indicates that an alarm of Class A - Class F is not present.
✓	Acknowledge the selected alarm message (displayed inverted).

Acknowledgment is only possible, if the alarm condition is no longer present. If the Alarm LED is still flashing (an alarm is present, which has not yet been acknowledged as 'Seen'), this softkey resets the horn and acknowledges the alarm as 'Seen'.

4.1.5.3 Event History

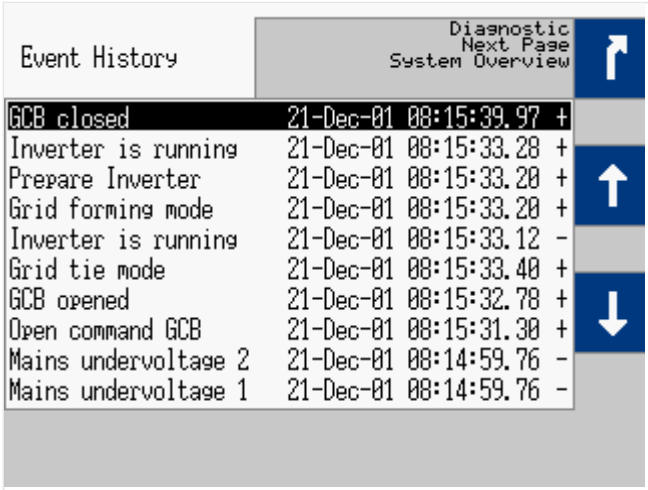


Fig. 90: Event History screen

This screen displays system events. A date/time stamp is added to each entry!

Symbol/Softkey	Description
+	Indicates when a condition was activated
-	Indicates when a condition was de-activated

Released

4.1.5.4 Sequencing

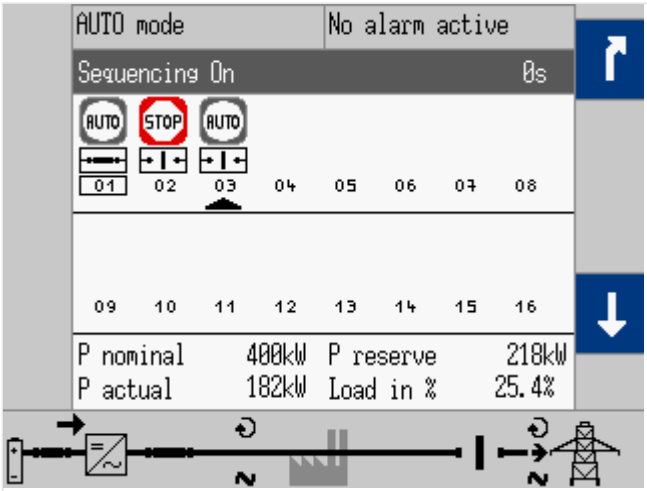


Fig. 91: Sequencing screen

The sequencing screen shows all gensets participating in load sharing. The operation mode of each genset as well as the state of its GCB is shown on this screen.

Symbol	Description
	AUTOMATIC Mode is active
	MANUAL Mode is active
	STOP Mode is active
	TEST Mode is active
	GCB of respective genset in sequence is closed.
	GCB of respective genset in sequence is open.
	Own easY-I device number
Sequence is running with respect to the settings e.g., the sequencing timing - see table below:	
	Generator is becoming "Add-on" to the (multiple) genset system.
	Generator is going "Add-off" from the (multiple) genset system.

The remaining time is displayed on the upper right side on the grey bar "Sequencing ...", see table below:

"..." text on the grey bar	Description	Parameter / ID
Sequencing Add-on delay ... s	Shows the remaining time until the own generator is add-on	Add-on delay: IOP 5764 MOP 5762
Sequencing Minimum run time ... s	Shows the remaining time the own generator is running at minimum	Minimum run time, 5759
Sequencing Add-off delay ...s	Shows the remaining time until the own generator is add-off	Add-off delay:

Released

"..." text on the grey bar	Description	Parameter / ID
		IOP 5766 MOP 5773

The bottom field displays the actual load sharing values. If this device is not participating in load sharing, "LD start stop Off" is displayed here.

4.1.5.5 States easYgen

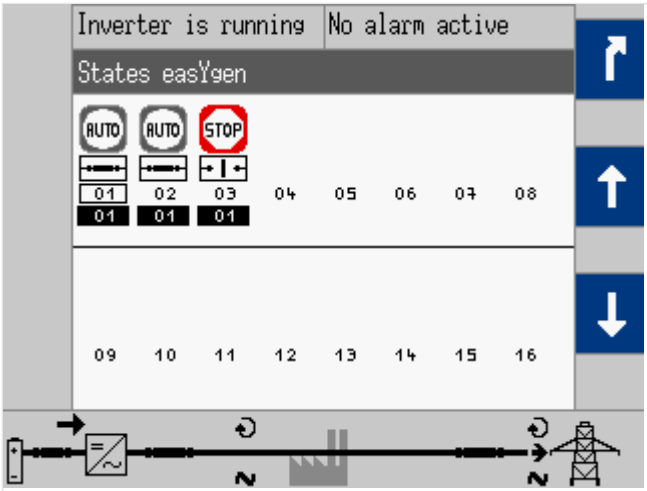


Fig. 92: States easYgen screen

The states of the easY-I devices are displayed. The operation mode of each genset as well as the state of its GCB is shown on this screen.

Symbol/Softkey	Description
AUTO	AUTOMATIC Mode is active
MAN	MANUAL Mode is active
STOP	STOP Mode is active
TEST	TEST Mode is active
	GCB of respective genset in sequence is closed.
	GCB of respective genset in sequence is open.
01	Own easY-I device number
02	Other easY-I device numbers
04	Segment number

Released

4.1.5.6 States LSx

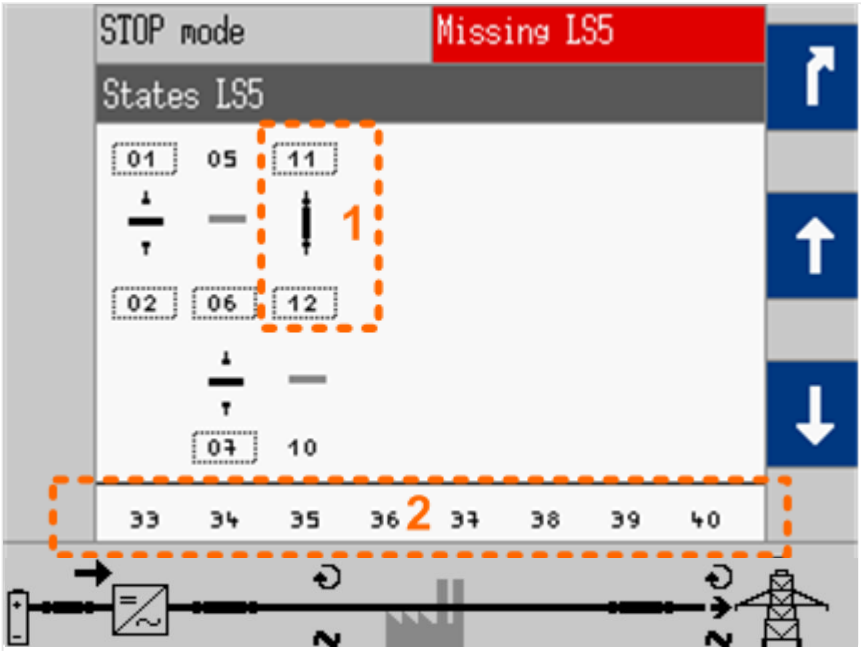


Fig. 93: States LSx screen

The states of the LSx devices are displayed.

Symbol/Softkey	Description
1: Segment numbers with switch in between	
	Segment numbers and breaker switch: opened/closed
	Segment numbers and isolation switch: opened/closed
06	Frame around number indicates voltage and frequency are in range
06	Dotted frame around number indicates voltage or frequency are not in range but even not Dead busbar
06	NO frame around number indicates dead busbar
2: Device numbers (segments above and devices are aligned)	
33	LSx device numbers

Released

4.1.5.7 Genset parameter alignment

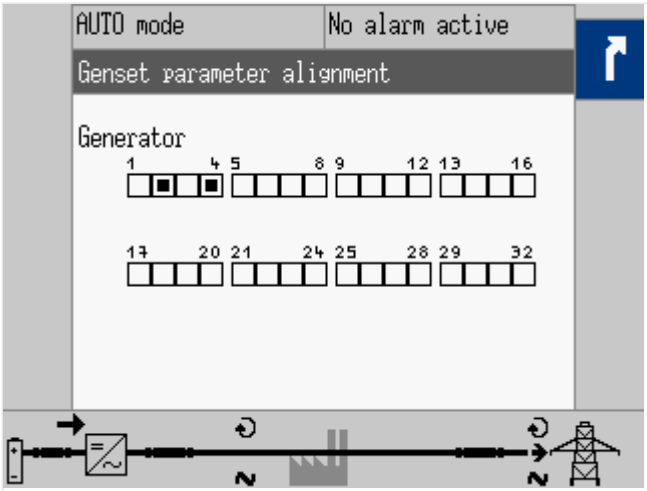


Fig. 94: Genset parameter alignment

This screen displays easY-I devices configured differently than the LDSS setting of your current device.

Symbol	Description
☐	The easY-I uses the same configuration as your current device.
▣	The easY-I uses a different configuration than your current device.

4.1.5.8 Diagnostic devices

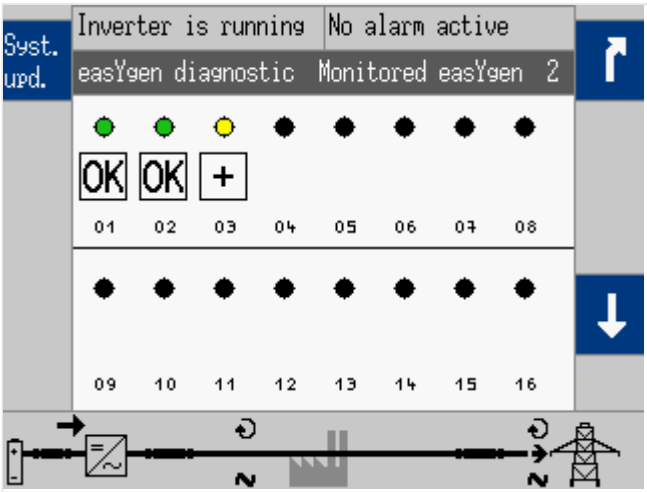


Fig. 95: Diagnostic screen example (HMI)

This screen displays the diagnostic status (the current communication state of the load share and system bus) of the accepted easY-I and/or LS-x devices. Refer to “6.2.2.2 Diagnostic Screens” for details.

Released

4.1.5.9 Setpoints generator

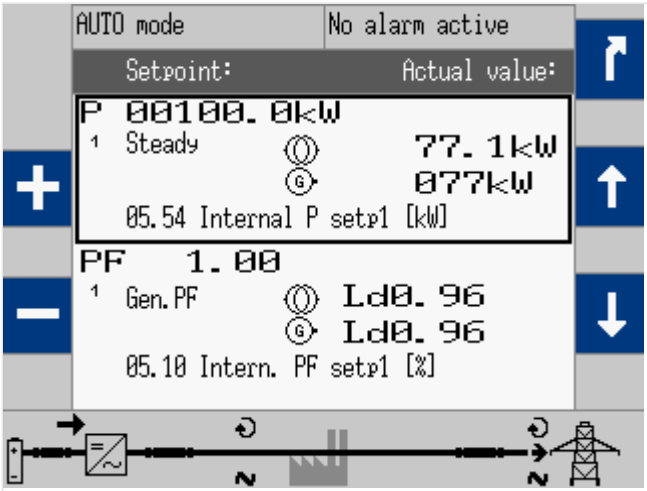


Fig. 96: Setpoints screen 1: P and PF/kvar

The setpoint is displayed on the left and the actual value is displayed on the right half of the screen.

The source, which is used for setpoint 1 or setpoint 2, is displayed with the respective AnalogManager function number.

The setpoints may only be adjusted if the respective controller is enabled. Frequency and voltage may be adjusted within the configured operating limits.

Active power may be adjusted between 0 and the configured load control setpoint maximum. The power factor may be adjusted between 0.71 leading and 0.71 lagging.

The source (e.g. “05.54 Internal P setp1 [kW]” like shown in the screenshots) can only be displayed if the corresponding AnalogManager (e.g. “AM ActPower SP1 [kW]”) is set to type “Pass through”. Otherweise the name of the selected AnalogManager e.g. “AM ActPower SP1 [kW]” will be displayed.

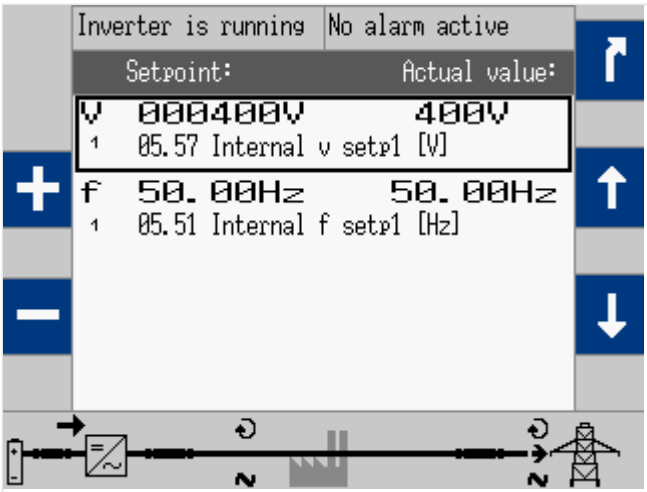


Fig. 97: Setpoints screen 2: V and f

Symbol/Softkey	Description
	Indicates the generator power (actual value).
	Indicates the mains power (actual value).
+	Raise the selected setpoint.
−	Lower the selected setpoint.

It is also possible to to adjust setpoints by the ”Discrete Raise/Low“ function (refer to “4.4.4.7 Discrete Raise/Low Function”. The adjustments via “HMI +/- buttons” or ”Discrete Raise/Low“ are only possible if the corresponding AnalogManager (e.g. “AM ActPower SP1 [kW]”) is set to type “Pass through”.

Possibilities for setpoint adjustment

The table below shows different possibilities for the voltage setpoint as an example how setpoints can be adjusted. (For the other setpoints this applies analogously with the corresponding parameters). In the example setpoint ”5618 AM Voltage SP1 [V]“ is active.

Depending on the assigned analog variable (”05.57 Internal v setp1 [V]“ or ”05.65 Discrete v +/- [V]“), there are several possibilities for setpoint adjustment in operation mode automatic.

(In manual mode the setpoint can always be adjusted via ”Discrete raise/low“ and via the ”HMI +/- buttons“ with configurable rate.)

	5618 AM Voltage SP1 [V] is configured to “AM Voltage SP1 [V]”		**5618 AM Voltage SP1 [V] is configured to“05.65 Discrete v +/- [V]”**	
Setpoint adjustment via	**Discrete raise/low**	**HMI +/- buttons**	**Discrete raise/low**	**HMI +/- buttons**
Operation mode ”AUTO“ or TEST	Not applicable	Fixed ramp rate	Configurable rate “5025 Discr. ramp voltage +/-”	Not applicable
Operation mode ”MANUAL“	Configurable rate “5025 Discr. ramp voltage +/-”	Configurable rate “5025 Discr. ramp voltage +/-”	Configurable rate “5025 Discr. ramp voltage +/-”	Configurable rate “5025 Discr. ramp voltage +/-”

Manual mode and Auto mode do have separate setpoints. The Manual mode setpoints are temporary.

Setpoint for ...	... in AUTO mode	... in MANUAL mode	... in TEST mode
Load	5542	5529	5542
Reactive power	5646		5646
Power factor	5641	5623	5641
Voltage	5640	5605	5640
Frequency	5541	5509	5541

Released

ToolKit's setpoint page "STATUS MENU | Setpoints" gives an overview.

4.1.5.10 Setpoints PID1 - PID3

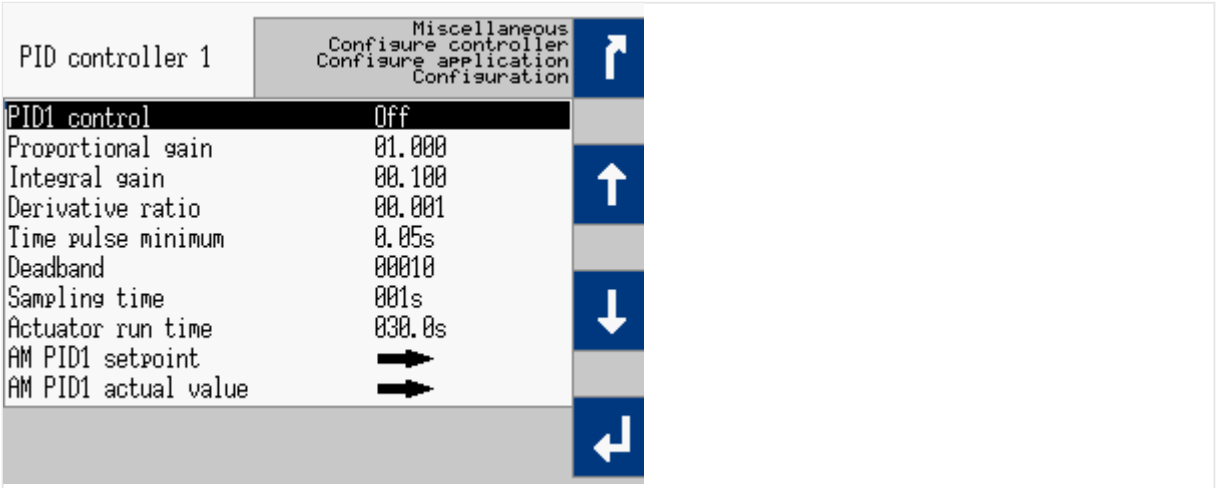


Fig. 98: PID1(-3) screen 1

Menu path for configuration: [Parameter / Configuration / Configure application / Configure controller / Miscellaneous / PID1 control - PID3 control]

The PID screens enable direct access to PID control settings.

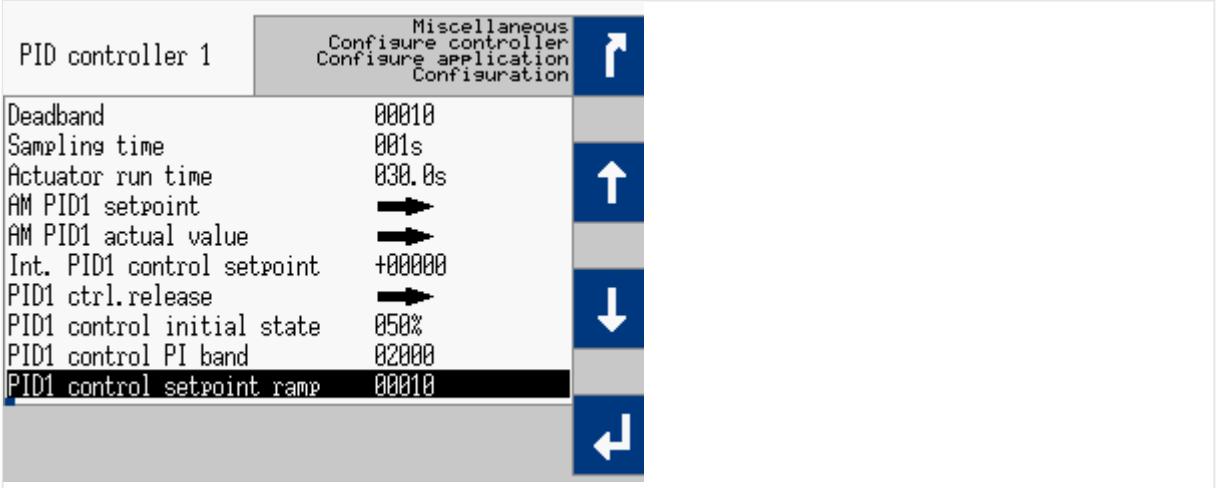


Fig. 99: PID1(-3) screen 2

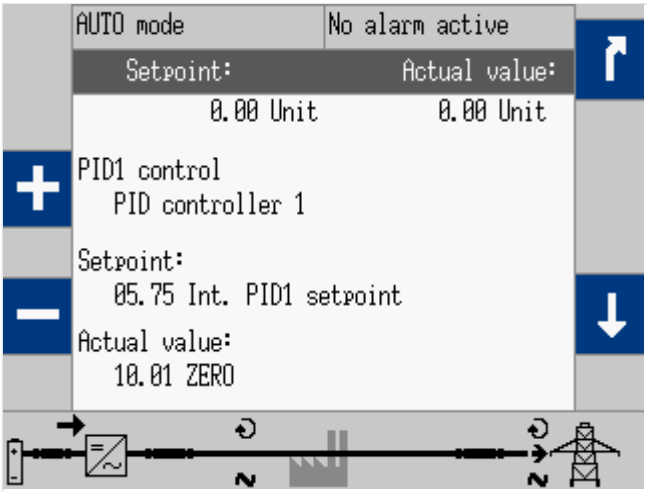


Fig. 100: PID1(-3) visualization screen

Menu path for visualization: [Next Page / Setpoints / Setpoints PID 1-3]

4.1.5.11 Synchroscope busbar/mains

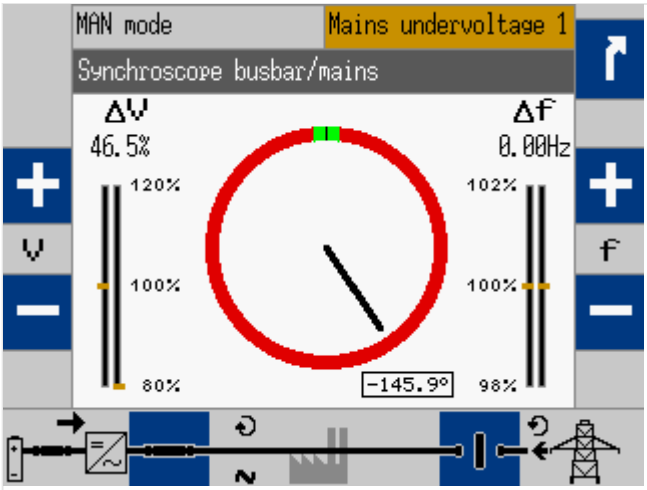


Fig. 101: Synchroscope screen (example)

The needle indicates the actual phase angle between busbar and generator or mains.

WARNING!

Ensure correct synchronization configuration to avoid generator destructive power!

The 12 o'clock position on the top means 0° and the 6 o'clock position on the bottom means 180°.

The actual phase angle is indicated on the bottom of the screen. The maximum positive and negative phase angles are indicated 'green'. The length of the green part changes according to the parameters.

Released

The frequency and voltage differences are indicated on top of the bargraphs.

Symbol/Softkey	Description
+	Operating mode MANUAL: Raise voltage/frequency.
−	Operating mode MANUAL: Lower voltage/frequency.

4.1.5.12 LogicsManager Conditions

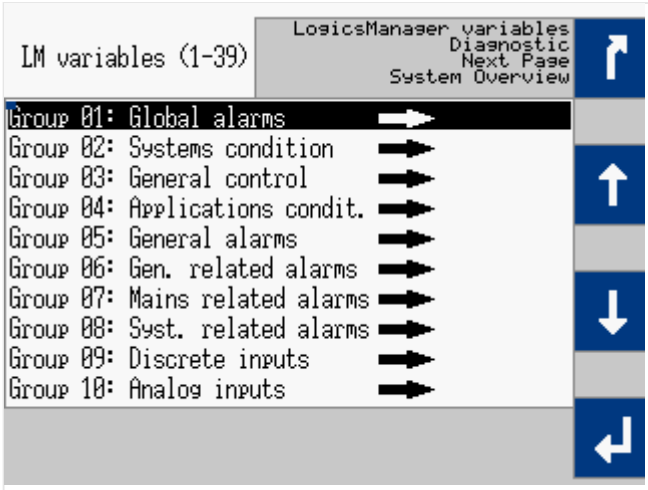


Fig. 102: LogicsManager conditions screen

This screen displays the conditions of all LogicsManager command variables, which are located in their respective groups.

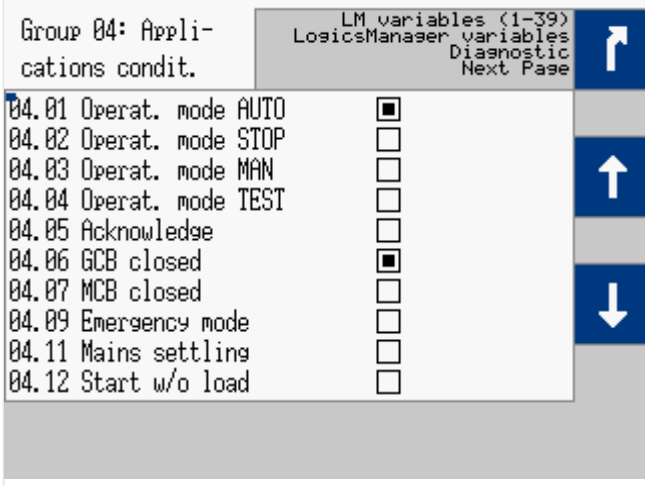


Fig. 103: Command variables screen (example)

Symbol	Description
↵	Select the highlighted command variable group and display the state of the command variables in this group.
▣	Variable is TRUE.

Released

Symbol	Description
□	Variable is FALSE.

4.1.5.13 LogicsManager

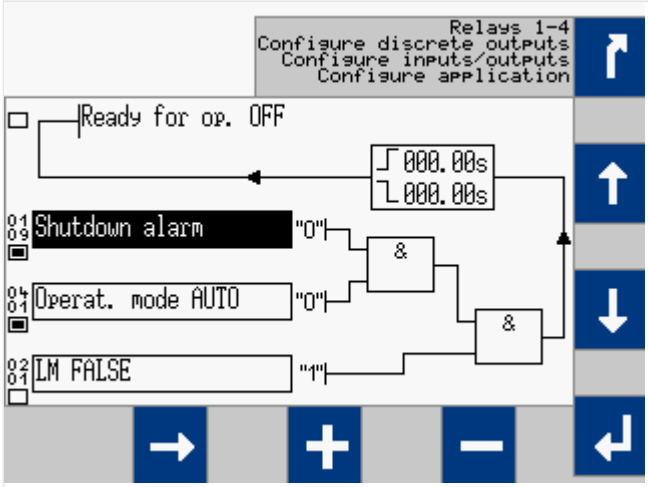


Fig. 104: LogicsManager screen

Some parameters of the easY-I are configured via the LogicsManager.

⚙

1. ▷ Configure a logical operation using various command variables, signs, logical operators, and delay times to achieve the desired logical output.

Symbol/Softkey	Description
⎍	Delay before output becomes TRUE.
⎏	Delay before output becomes FALSE.
▣	State of the command variable is TRUE.
□	State of the command variable is FALSE.
→	Command variable selection field: Change the command variable group. Time delay configuration field: Change the cursor position.

Help screen

Help screen (displays logical operators) can be found at [Parameter / Configuration / Configure L / A Manager / General settings LM and AM / Help for ASA/IEC symbols]

Released

4.1.5.14 Mains decoupling threshold

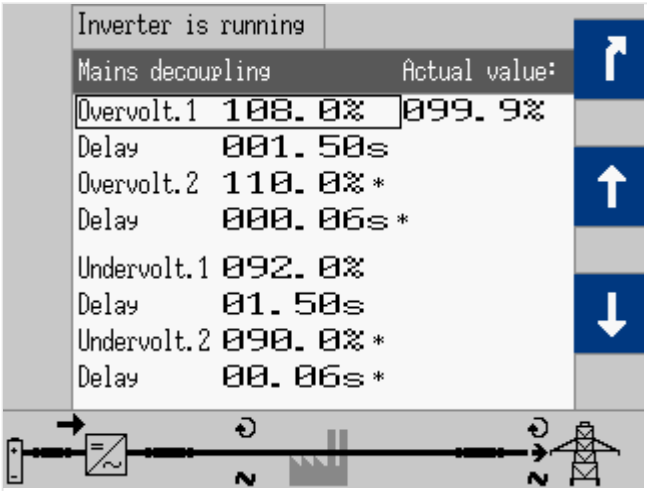


Fig. 105: Mains decoupling screen 1

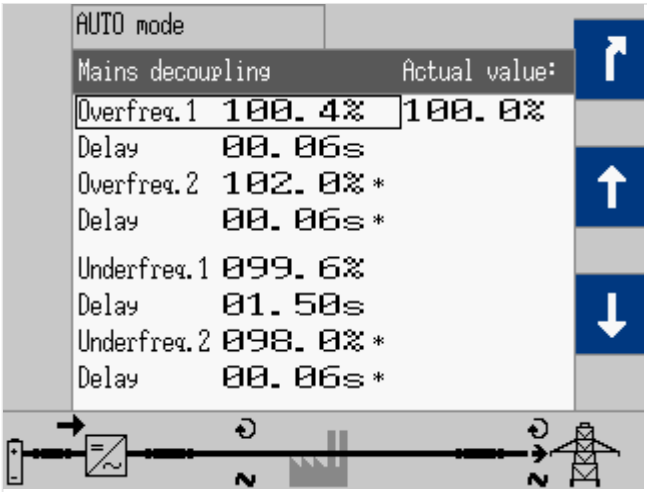


Fig. 106: Mains decoupling screen 2

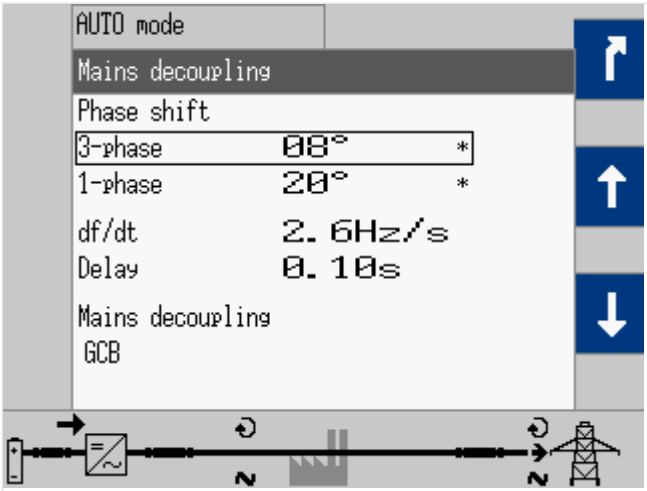


Fig. 107: Mains decoupling screen 3

Released

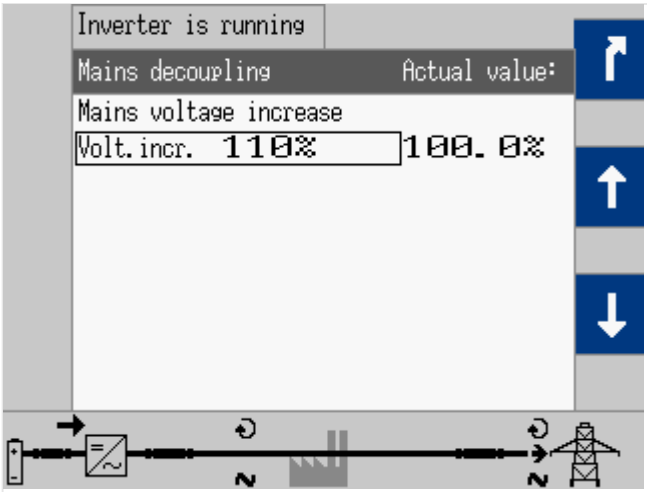


Fig. 108: Mains decoupling screen 4

4.1.5.15 Test mains decoupling (VDE AR-N 4105)

Symbol/Softkey	Description
Test ON	Starts a special TEST mode which allows mains decoupling test independent from breaker status (even if not mains parallel; GCB open, no rotation of prime mover/generator).
Test OFF	Stops the TEST mode so mains decoupling is possible if system is mains parallel only. **Notes:** TEST mode is deactivated not only by this button but too: • ... if firing speed is reached or • ... automatically after 60 minutes
*	Indicates parameters that are part of the mains decoupling configuration.

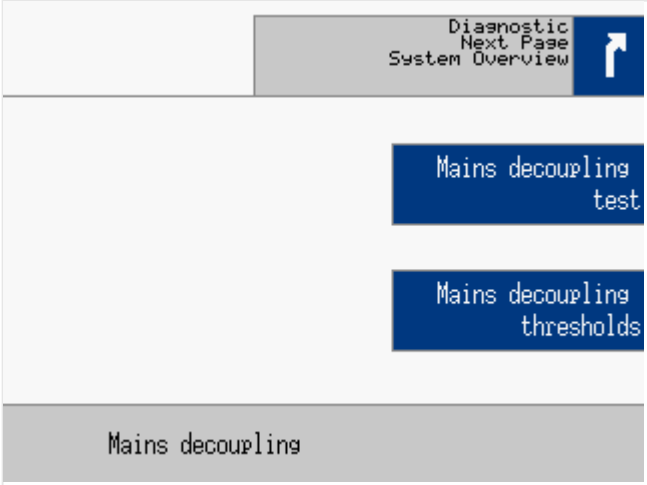


Fig. 109: Test mains decoupling selection screen

Released

VDE AR-N 4105 is asking for a test button.

Restricted Access

The function Mains Decoupling Test is available on Code level CL3. Code levels CL0 to CL2 are intentionally not supported. Refer to “4.3.4 Enter Password” for details.

Mains decoupling test is running after the warning is accepted.

The Mains decoupling test opens the selected breaker for mains decoupling (parameter 3110).

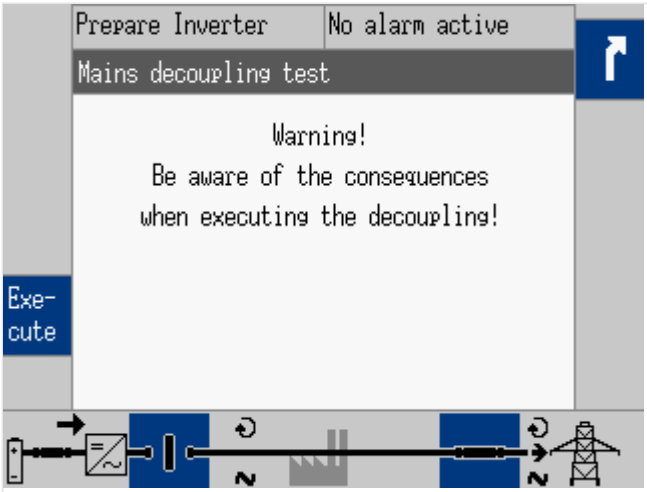


Fig. 110: Security query mains decoupling test

CAUTION!

This function is independent from the breaker status and is active for 1 sec.

No thresholds are considered.

As long as the decoupling function is executed the »Execute« button and the warning text are faded out.

Released

4.1.5.16 CAN 1 state

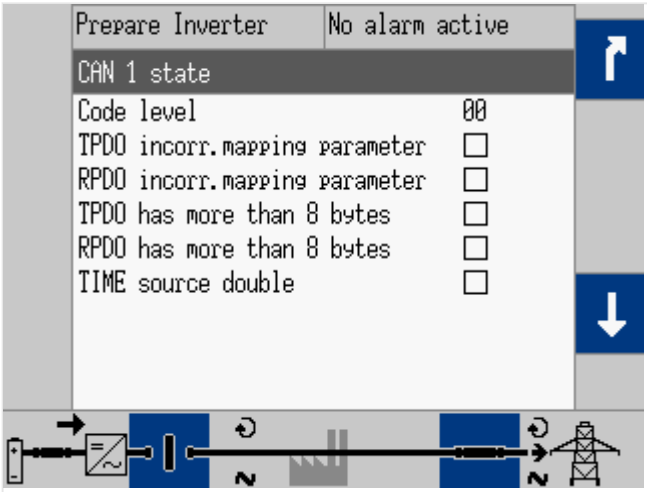


Fig. 111: CAN 1 state screen (example)

Symbol	Description
▣	State is TRUE
□	State is false

Table 29: Graphic assignments

Section		Description
Code level	00	Current code level of CAN1 connection
TPDO has incorrect mapping parameters	▣	State is TRUE/false
RPDO has incorrect mapping parameters	/	
TPDO has more than 8 bytes	□	
RPDO has more than 8 bytes		
TIME source double		

Table 30: Bit assignments

Released

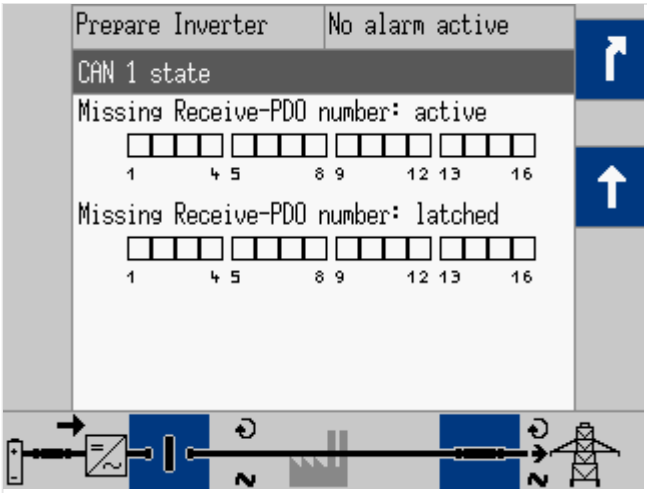


Fig. 112: CAN 1 state screen (example)

Symbol	State	Description
▣	State is TRUE	PDO is missing
□	State is false	PDO is NOT missing

Table 31: Graphic assignments

Section		Assignment
Missing Receive-PDO number: active	{x}	RPDO {x} is not received at the moment
Missing Receive-PDO number: latched	{x}	RPDO {x} has not been received
		Notes CAN 1 monitoring 3150 must be enabled

4.1.5.17 CAN interface 2 state

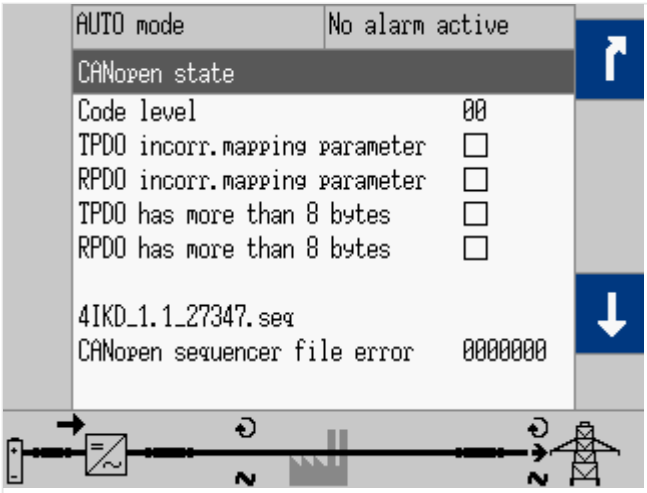


Fig. 113: CAN interface 2 statescreen (example)

Symbol	Description
▣	State is TRUE
□	State is false

Table 32: Graphic assignments

Section		Description
Code level	00	Current code level of CAN2 connection (don't care for the current applications)
TPDO has incorrect mapping parameters	▣	State is TRUE/FALSE (The mapping is done automatically by the parameter 15320 "Select external terminals")
RPDO has incorrect mapping parameters	/	
TPDO has more than 8 bytes	□	
RPDO has more than 8 bytes		
Text "4IKD_1.1_27347.seq"		This example indicates the name of the current selected file for the external terminals inclusive version. If this line shows "---", the file is missing on the device.
		Notes For the different selections of external terminals different files are stored in the device.
Text "CANopen sequencer file error"	0000000	If the value indicated here is not equal "0000000" there is something wrong with the file indicated above.

Table 33: (Bit) assignments

The next screen indicates missing Node-IDs of the external terminals.

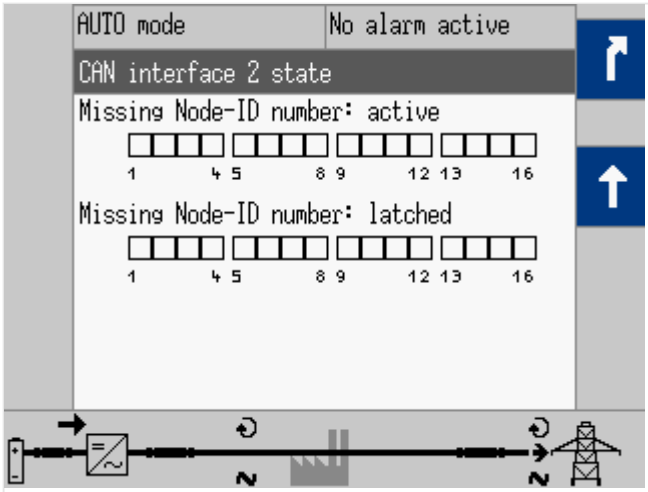


Fig. 114: CAN interface 2 state screen (example)

Symbol	State	Description
▣	State is TRUE	Node-ID is missing

Released

Symbol	State	Description
☐	State is false	Node-ID is NOT missing

Table 34: Graphic assignments

Section		Assignment
Missing Node-ID number: active	{x}	Node {x} is not received at the moment
Missing Node-ID number: latched	{x}	Node {x} has not been received
		Notes CAN 2 monitoring 3150 must be enabled

4.1.5.18 CAN 3 state

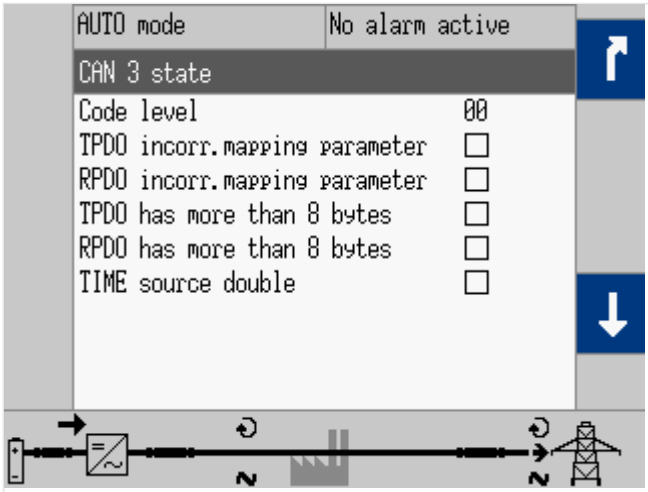


Fig. 115: CAN 3 state screen (example)

Symbol	Description
▣	State is TRUE
☐	State is false

Table 35: Graphic assignments

Section		Description
Code level	00	Current code level of CAN3 connection
TPDO has incorrect mapping parameters	▣	State is TRUE/false
RPDO has incorrect mapping parameters	/	
TPDO has more than 8 bytes	☐	
RPDO has more than 8 bytes		
TIME source double		

Table 36: Bit assignments

Released

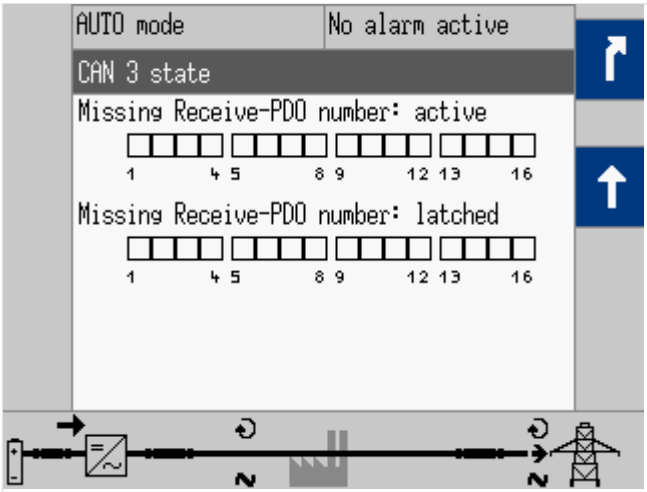


Fig. 116: CAN 3 state screen (example)

Symbol	State	Description
▣	State is TRUE	PDO is missing
□	State is false	PDO is NOT missing

Table 37: Graphic assignments

Section		Assignment
Missing Receive-PDO number: active	{x}	RPDO {x} is not received at the moment
Missing Receive-PDO number: latched	{x}	RPDO {x} has not been received
		Notes CAN 3 monitoring 3165 must be enabled

4.1.5.19 Ethernet Network

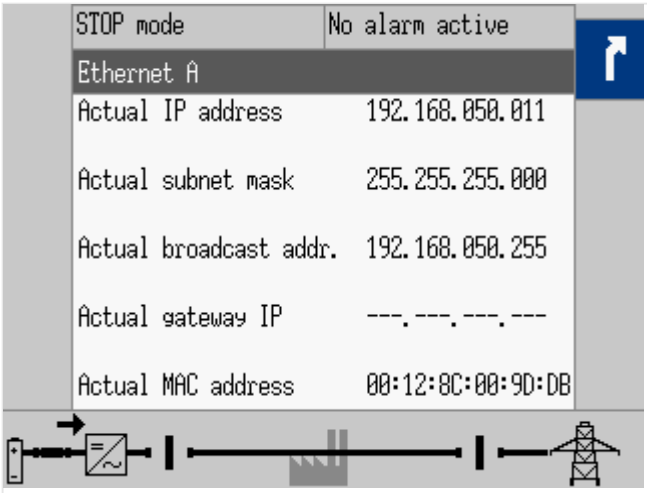


Fig. 117: Ethernet A state screen (example)

Released

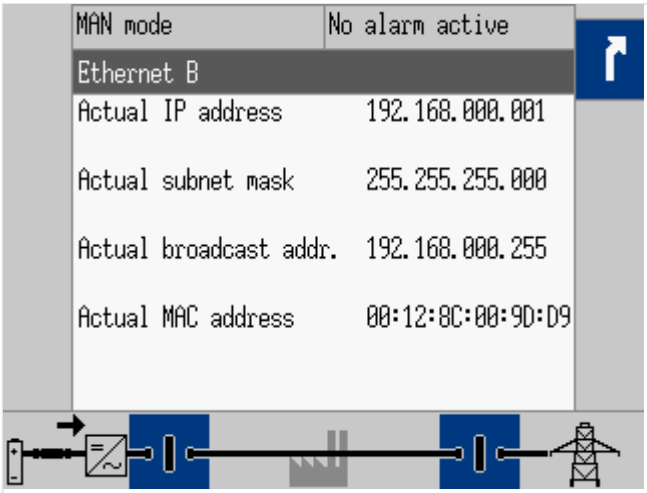


Fig. 118: Ethernet B state screen (example)

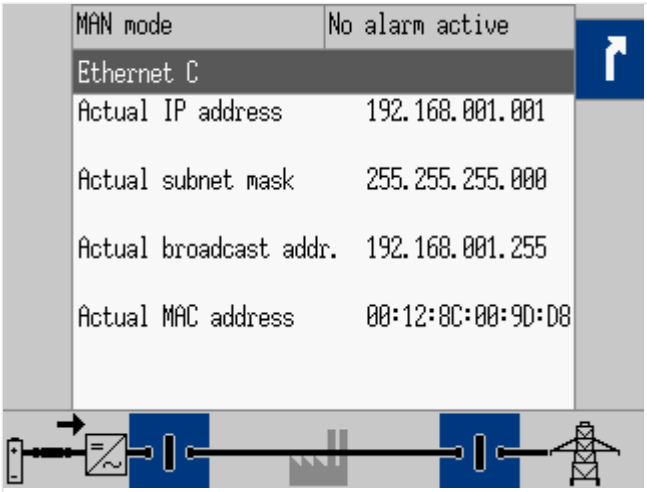


Fig. 119: Ethernet C state screen (example)

Current Ethernet state is displayed. Setting can be found under [Next Page / Diagnostic / Interfaces / Ethernet].

In this menu select:

- »Ethernet A«
- »Ethernet B«
- »Ethernet C«
- »SNTP«
- »Servlink«
- »Modbus TCP/IP«



See chapter “7.2 Ethernet Interfaces” for configuration.

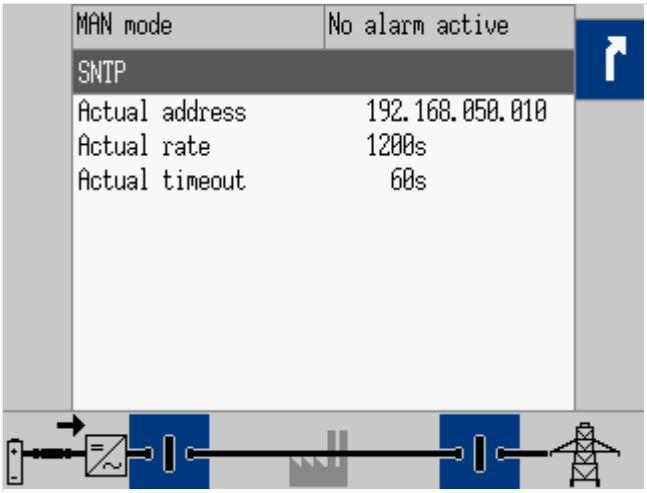


Fig. 120: Ethernet SNTP (example)

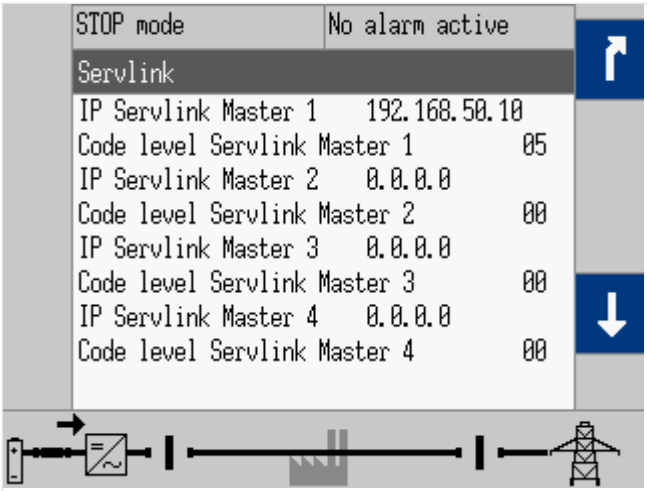


Fig. 121: Ethernet Servlink (example)

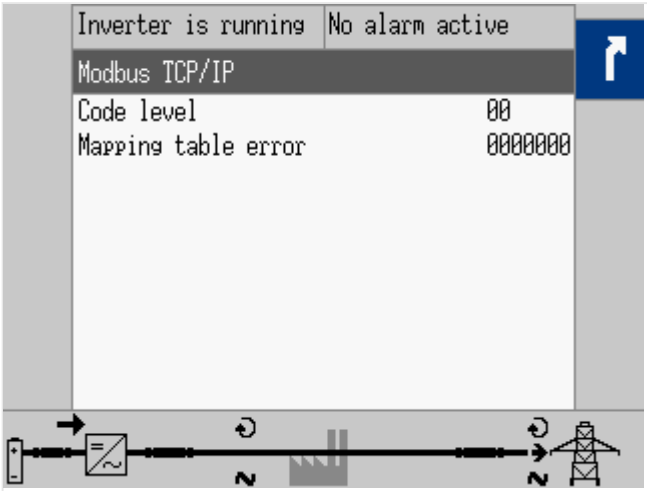


Fig. 122: Modbus TCP/IP diagnostic screen

Released

4.1.5.20 USB

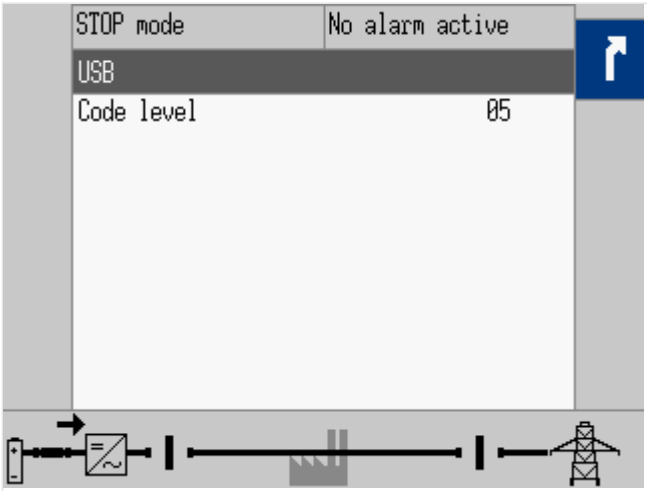


Fig. 123: USB interface

Current USB state is displayed. Setting can be found under [Next Page / Diagnostic / Interfaces / USB].



See chapter Chapter 4.7.1 for configuration.

4.1.5.21 RS-485

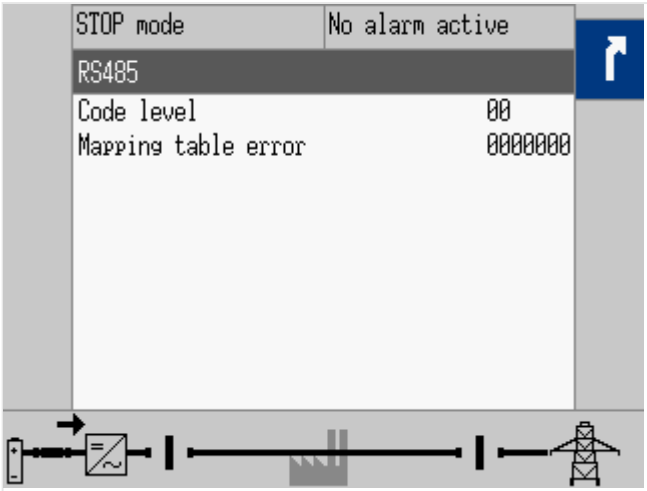


Fig. 124: RS-485 interface

Current RS-485 interface state is displayed. Setting can be found under [Next Page / Diagnostic / Interfaces / RS485].

Released

See chapter ⮡ “4.7.2 RS-485 Interface” for configuration.

4.1.5.22 Time Indication According To Operating Condition

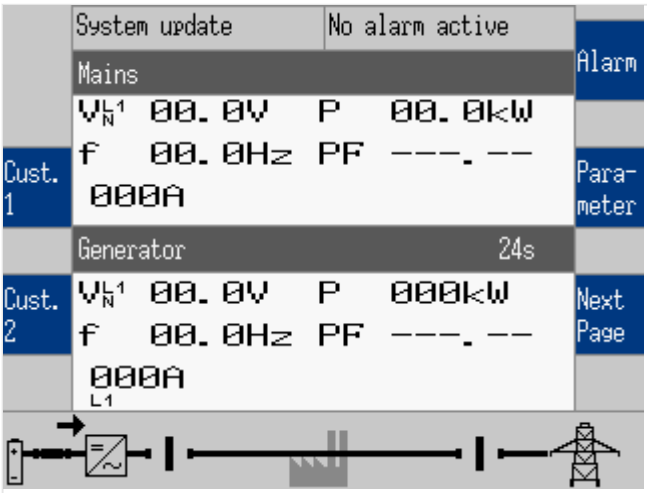


Fig. 125: Time indication according to operating condition

This screen element (on main screen) displays time indications according to the operating condition of the easY-I device. The time indications of the events indicated in the table below are shown in the display. The counter starts with the setting value of the related event and counts down to zero. After that, the status change of another event is shown. The sequence of the events is related on the configuration of the device.

Event	Description
TEST mode time restriction	Refer to parameter ⮡ 4679 for details.
System update	Refer to parameter ⮡ 13356 for details.

4.2 Access Via PC (ToolKit)

Version

Woodward’s ToolKit software is required to access the unit via PC

- Required version: 6.6.2 or higher
- Please use the latest available version!
- To obtain the latest version scan this QR code or use the following link: ⟹ https://wss.woodward.com/manuals/PGC/SW_Tools/ToolKit.

Released

CANopen connection

The CANopen SDO system only allows parameters with an identifier smaller than 16384 (4000hex). This means that all parameters (including visualization parameters) with values greater than 16384 can no longer be supported via ToolKit CANopen.

This completely eliminates the ToolKit capability via CANopen interface and refers to communication via USB or Ethernet interface.

4.3 Basic Setup

The "Basic Setup" describes a collection of configuration sub-menus:

- Configure language/clock
- Configure system management
- Password HMI
- Configure HMI
  - Configure customer screen 1
  - Configure customer screen 2
  - Configure display
  - Screen configuration

(Other configuration is "below" the sub-menu »Configuration«. See following chapters.

4.3.1 Configure Language/Clock

General notes

The following parameters are used to set the unit language, the current date and time, and the daylight saving time feature.

If an Asian language is configured, some parameter screens may be displayed with an empty space at the bottom of the parameter list, which may be interpreted as an end of the list, although more parameters exist and are displayed when scrolling down.

This can easily be checked:

- The list display is a closed loop, so ...
- scrolling UP from first list entry goes to the end of the list and vice versa.

If a custom language is configured, the enumeration text in Toolkit displays "Reserve 1". In the easY-I HMI, the enumeration text is the name of the current custom language.

If the language is set to "Reserve1" without a loaded custom language, the language of the HMI will be set to English.

Update Clock

HMI/display and ToolKit differ in updating the clock settings

- HMI/display shows the actual value and enables direct change of each parameter
- ToolKit displays the »Actual values« (ID 1690 to 1695) besides the parameters. So the time values and date values can be prepared each as a set before transferring.

ID	Parameter	CL	Setting range **[Default]**	Description
1700	**Language** (Set language)	0	selectable languages **[English]**	The desired language for the unit display text is configured here. Available languages are: English, German, Dutch, Spanish, French, Italian, Portugese, Japanese, Chinese, Russian, Turkish, Polish, Slovakian, Finnish, Swedish, Reserve 1.
»Values to be set«				
1710	**Hour**	0	hour 0 to 23 h **[real-time clock]**	The hour of the clock time is set here. **Example** • 0 = 0th hour of the day (midnight). • 23 = 23rd hour of the day (11 pm).
1709	**Minute**	0	0 to 59 min **[real-time clock]**	The minute of the clock time is set here. **Example** • 0 = 0th minute of the hour • 59 = 59th minute of the hour

ID	Parameter	CL	Setting range **[Default]**	Description
1708	**Second**	0	0 to 59 s **[real-time clock]**	The second of the clock time is set here. **Example** • 0 = 0th second of the minute • 59 = 59th second of the minute
1698	**Transfer time to clock** TKit	2	Yes **[No]**	Yes transfers the time values to the clock. **Notes** ALL values are transferred and overwritten - even if you want to change only one.
1711	**Day**	0	day 1 to 31 **[real-time clock]**	The day of the date is set here. **Example** • 1 = 1st day of the month. • 31 = 31st day of the month.
1712	**Month**	0	month 1 to 12 **[real-time clock]**	The month of the date is set here. **Example** • 1 = 1st month of the year. • 12 = 12th month of the year.
1713	**Year**	0	year 0 to 99 **[real-time clock]**	The year of the date is set here. **Example** • 0 = Year 2000 • 99 = Year 2099
1699	**Transfer date to clock** TKit	2	Yes **[No]**	Yes transfers the date values to the clock. **Notes** ALL values are transferred and overwritten - even if you want to change only one.
4589	**Time zone**	2	-12 to 14 **[0.00]**	Time shift in hours between the time zone in which the device is used compared to the absolutely Greenwich Mean Time (GMT). This information is needed to transfer the general time signal into the local real-time clock setting.
»Daylight saving time«				
4591	**Daylight saving time**	2	On **[Off]**	0n enables the Daylight saving time. The daylight saving time feature enables to automatically adjust the real-time clock to local daylight saving time (DST)

ID	Parameter	CL	Setting range [Default]	Description
				provisions. If daylight saving time is enabled, the real-time clock will automatically be advanced by one hour when the configured DST begin date and time is reached and falls back again by one hour when the configured DST end date and time is reached. If the unit is used in the southern hemisphere, the DST function will be inverted automatically, if the DST begin month is later in the year than the DST end month.
				Notes Do not change the time manually during the hour of the automatic time change if DST is enabled to avoid a wrong time setting. Events or alarms, which occur during this hour might have a wrong time stamp.
4594	**DST begin time**	2	0 to 23 h **[2]**	The real-time clock will be advanced by one hour when this time is reached on the DST begin date.
				Example • 0 h = 0th hour of the day (midnight) • 23 h = 23rd hour of the day (11 pm)
				Notes This parameter is only displayed, if Daylight saving time (parameter ↳▷ 4591) is set to "On".
4598	**DST begin weekday**	2	**[Sunday]** Monday Tuesday Wednesday Thursday Friday Saturday	The weekday for the DST begin date is configured here
				Notes This parameter is only displayed, if Daylight saving time (parameter ↳▷ 4591) is set to "On".
4592	**DST begin nth. weekday**	2		The order number of the weekday for the DST begin date is configured here.
			[1st]	DST starts on the 1st configured weekday of the DST begin month.

Released

ID	Parameter	CL	Setting range [Default]	Description
			2nd	DST starts on the 2nd configured weekday of the DST begin month.
			3rd	DST starts on the 3rd configured weekday of the DST begin month.
			4th	DST starts on the 4th configured weekday of the DST begin month.
			Last	DST starts on the last configured weekday of the DST begin month.
			LastButOne	DST starts on the last but one configured weekday of the DST begin month.
			LastButTwo	DST starts on the last but two configured weekday of the DST begin month.
			LastButThree	DST starts on the last but three configured weekday of the DST begin month.
				Notes This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".
4593	**DST begin month**	2	1 to 12 **[3]**	The month for the DST begin date is configured here. **Example** • 1 = 1st month of the year • 12 = 12th month of the year **Notes** This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".
4597	**DST end time**	2	0 to 23 h **[3]**	The real-time clock will fall back by one hour when this time is reached on the DST end date **Example** • 0 h = 0th hour of the day (midnight). • 23 h = 23rd hour of the day (11 pm). **Notes** This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".
4599	**DST end weekday**	2	**[Sunday]** Monday Tuesday	The weekday for the DST end date is configured here **Notes**

Released

ID	Parameter	CL	Setting range **[Default]**	Description
			Wednesday Thursday Friday Saturday	This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".
4595	**DST end nth. weekday**	2		The order number of the weekday for the DST begin date is configured here.
			[1st]	DST ends on the 1st configured weekday of the DST begin month.
			2nd	DST ends on the 2nd configured weekday of the DST begin month.
			3rd	DST ends on the 3rd configured weekday of the DST begin month.
			4th	DST ends on the 4th configured weekday of the DST begin month.
			Last	DST ends on the last configured weekday of the DST begin month.
			LastButOne	DST ends on the last but one configured weekday of the DST begin month.
			LastButTwo	DST ends on the last but two configured weekday of the DST begin month.
			LastButThree	DST ends on the last but three configured weekday of the DST begin month.
				Notes This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".
4596	**DST end month**	2	1 to 12 **[10]**	The month for the DST begin date is configured here.
				Example • 1 = 1st month of the year • 12 = 12th month of the year
				Notes This parameter is only displayed, if Daylight saving time (parameter 4591) is set to "On".

Table 38: Parameters Language/Clock Configuration

Released

Example

If daylight saving time starts at 2:00 am on the 2nd Sunday in March and ends at 2:00 am on the 1st Sunday in November, the unit has to be configured like shown in Table 39 to enable an automatic change to daylight saving time and back to standard time.

ID	Parameter	Setting
4591	Daylight saving time	On
4594	DST begin time	2
4598	DST begin weekday	Sunday
4592	DST begin nth. weekday	2nd
4593	DST begin month	3
4597	DST end time	2
4599	DST end weekday	Sunday
4595	DST end nth. weekday	1st
4596	DST end month	11

Table 39: Daylight saving time - configuration example

	USA, Canada		European Union	
Year	DST Begins 2 a.m. (Second Sunday in March)	DST Ends 2 a.m. (First Sunday in November)	DST Begins 2 a.m. UTC=GMT (Last Sunday in March)	DST Ends 3 a.m. UTC=GMT (Last Sunday in October)
2020	March 8, 2020	November 1, 2020	March 29, 2020	October 25, 2020
2021	March 14, 2021	November 1, 2021	March 28, 2021	October 31, 2021
2022	March 13, 2022	November 6, 2022	March 27, 2022	October 30, 2022

Table 40: Daylight saving time - exemplary dates

Localization Tool (for customized language

☼ **Create a customized localization of an easY-I 3000XT HMI**

The LocalizationTool is a tool which allows the user to create a localization of an easY-I3000XT HMI in a selected language and create from this a package which can be updated to the device. Creating localized text is done using Excel which has to be installed on the PC. The tool will create a basic Excel sheet. The user will translate in Excel and then from the edited Excel sheet will create a resource file which can be uploaded on the easY-I using the Woodward Toolkit tool.

Additionally the tool provides a simulation of the easY-I's HMI to check the translation. It also provides a way to re-use previously translated texts.

The Localization tool software "LocalizationToolInstaller.msi" can be downloaded via the QR Code server or from the Woodward web site (⟹ https://www.woodward.com). It needs to be installed before use at your PC/laptop. After starting the program, the HELP file can guide through the required settings.

Released

4.3.2 Configure HMI

4.3.2.1 Configure Customer Screens

easY-I-3000XT comes with two **fully customizable screens - just one click (one level) from home screen**. Softbutton text and displayed name, values, and units can be defined/selected. The new full-featured AnalogManager 1:1 parameter monitoring but even math. function computing.

There are two configurable customer screens available.

Handling/set-up is similar so described one time only.

The (configurable) names of the customer screens are displayed at HMI home page as softbutton text. Pressing one of this softbuttons opens the screen with the configured Names, Values, and Units.

Customer Screen Configuration

Numbering convention

Customer Screen X.Y: Screen #X (1 or 2); Row #Y (1 to 9)

ID	Parameter	CL	Setting range [Default]	Description
AM Customer screen 1.1				
7691	**Description**	2	23 characters **[Cust. Screen row 1]**	Name displayed in row 1 **Notes** The max. number of characters is higher but will not be displayed correctly on HMI/display. The row is hidden if description is empty (no character, not even a blank)!
7692	**Unit**	2	6 characters **[Unit]**	Unit displayed in row 1 **Notes** The max. number of characters is higher but will not be displayed correctly on HMI/display. **Notes** If »°C« or »bar« is assigned the unit will be converted into "°F" or "psi" automatically if the corresponding parameter for conversion ↳ 3630 and/or ↳ 3631 is configured to YES.
7690	**AM Customer screen 1.1**	2	Determined by AnalogManager 90.01	For details see ↳ Fig. 198.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[Pass Through, ...]	
7934	**Decimal points**	2	0 to 2 **[2]**	Number of decimal points for the value in row 1–9 of the customizeable screen 1.

Table 41: Parameters Customer Screen 1.1 Configuration (sample)

AM Customer screen #	ID "Description"	ID "Unit"	ID "Decimal points"	AnalogManager
1.1	7691	7692	7932	7690
1.2	7696	7697	7933	7695
1.3	7701	7702	7934	7700
1.4	7706	7707	7935	7705
1.5	7711	7712	7936	7710
1.6	7716	7717	7937	7715
1.7	7721	7722	7938	7720
1.8	7726	7727	7939	7725
1.9	7731	7732	7940	7730
2.1	7736	7737	7941	7735
2.2	7741	7742	7942	7740
2.3	7746	7747	7943	7745
2.4	7751	7752	7944	7750
2.5	7756	7757	7945	7755
2.6	7761	7762	7946	7760
2.7	7766	7767	7947	7765
2.8	7771	7772	7948	7770
2.9	7776	7777	7949	7775

Table 42: Overview Customer Screens/Rows IDs

Customer Screen Configuration

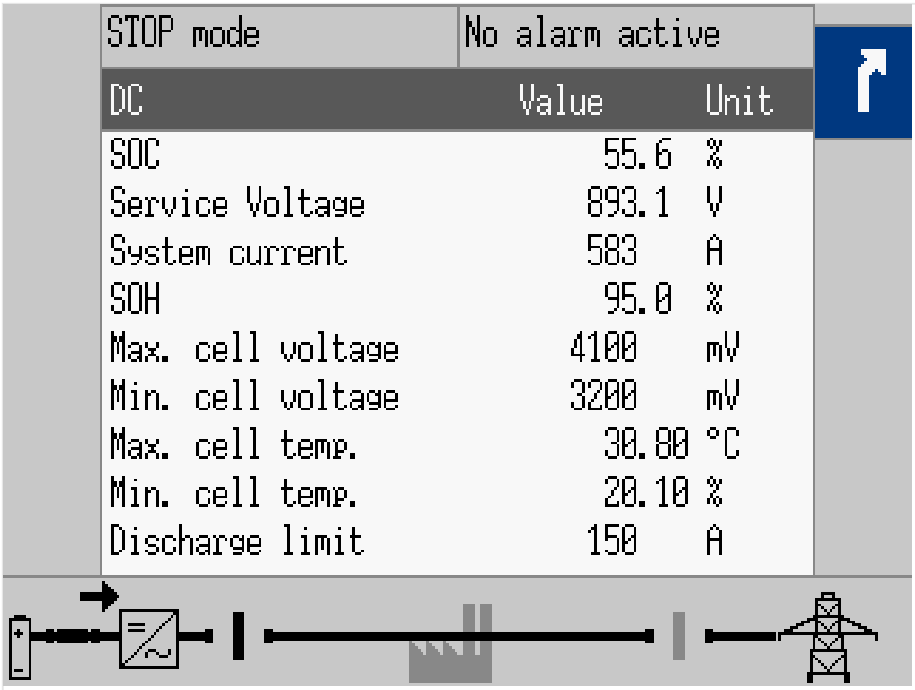


Fig. 126: Customer Screen example: a set of interesting DC values

ID	Parameter	CL	Setting range [Default]	Description
7701	**Description**	2	System current	(Defined by customer)
7702	**Unit**	2	A	(Defined by customer)
7700	**AM Customer screen 1.3**	2	Determined by AnalogManager 55.51: »Pass Through« of »A1= 55.51 Source system curr.«	(Defined by customer)
7934	**Decimal points**	2	0	(Defined by customer)

Table 43: Parameters Customer Screen 1.3 Configuration sample

4.3.2.2 Configure Display

Display Configuration

ID	Parameter	CL	Setting range [Default]	Description
HMI	**Display brightness**	2	0 to 100% **[35%]**	Color bar visualization for immediately displayed selection
7796	**2nd display brightness**	2	1 to 100% **[5%]**	Level of 2nd brightness. Used if LM 7794 is true.
4557	**Key activation time**	2	1 to 999 min **[120 min]**	If no soft key has been pressed for the time configured here, the 2nd display brightness will be used.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes This parameter is only effective, if LogicsManager 86.33 2nd disp. bright. ↳ 7794 is configured to "04.64 Key activation".
7794	**Enable 2nd display brightness**	2	Determined by LogicsManager 86.33 **[(04.64 NOT& 1) & 1]** = 11971	Once the conditions of the LogicsManager have been fulfilled, the brightness level of the display switches to the 2nd brightness level defined by parameter ↳ 7796. This can save energy and support visualization of device/system state. For information on the LogicsManager and its default settings see ↳ “4.8 Configure LogicsManager” ↳ “9.4.1 LogicsManager Overview”.
7799	**Enable front foil heater**	2	Determined by LogicsManager 86.34 **[(1 & 1) & 1]** = 11972	If this parameter is TRUE and ambient temperature goes below -10° C, the display (front panel) will be heated for seven minutes (and wait further 3minutes). For information on the LogicsManager and its default settings see ↳ “4.8 Configure LogicsManager” ↳ “9.4.1 LogicsManager Overview”. **Notes** This parameter is always visible in HMI and ToolKit, even it is implemented in "-LT" variants for enhanced temperature use only.
12978	**Lock keypad 1** Tkit	2	Determined by LogicsManager 86.30 **[(0 & 1) & 1]** = 11924	Key pad can be locked remotely. This parameter is intentionally not available via HMI/display. For information on the LogicsManager and its default settings see ↳ “4.8 Configure LogicsManager” ↳ “9.4.1 LogicsManager Overview”.

Table 44: Parameters Display Configuration

Released

4.3.2.3 Screen configuration

Screen Configuration

ID	Parameter	CL	Setting range [Default]	Description
4103	**Home screen data**	2		HMI: Home screen can display several pre-defined data collections.
			Generator	Generator relevant information are displayed.
			[Generator/Mains]	Home screen is splitted and displays generator and mains related information.
			Generator/Busbar	Home screen is splitted and displays generator and busbar related information.
			Gen./DC Source	Home screen is splitted and displays generator and DC source related information.
			Generator/LSx/GC	Home screen is splitted and displays generator and LSx related information.
4129	**Oneline diagram with mains**	2	Off **[On]**	HMI: Display of oneline (single line) diagram on home screen can be reduced NOT to show mains symbols.
				Notes Softbutton for MCB is (visible and) valid only if this parameter is TRUE.
4147	**GC Oneline diagram with GGB** (Only visable if "Home screen data" is configured to "Generator/LSx/GC".)	2	Off]	The GGB is faded out.
			[On]	The physical GGB condition is indicated
			Load-linkage	The load-linkage (generator load bus bar) is indicated.

Home screen Generator/DC Source

The home screen data configuration "Gen./DC Source" offers a selection of DC source values.

Released

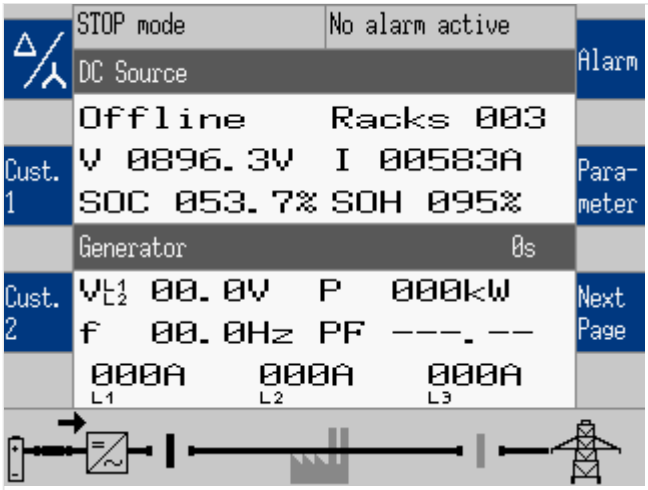


Fig. 127: Home screen "Gen./DC Source"

This screen shows the following DC source values:

- Offline/Online: DC System state (ID 18313)
- Rack: Racks in service (number of racks in service, ID 18338)
- V
  - If no rack connected: System voltage [V] (ID 18309)
  - If at least one rack connected: Service voltage [V] (ID 18336)
- I:System current [A] (ID 18310)
- SOC
  - If no rack connected: System SOC [%] (ID 18311)
  - If at least one rack connected: Service SOC [%] (ID 18337)
- SOH: System SOH [%] (ID 18312)

4.3.3 Lamp Test

All lights on the controller may be tested for correct operation with this function.

[Parameter / Lamp test]

Lamp test is available via HMI/display, ToolKit, and parameter 10773 with logical command variable 04.61.

Released

4.3.4 Enter Password

General notes

The controller utilizes a password protected multi-level access hierarchy to prevent unauthorized access to parameters, configuration and calibration items. This permits varying degrees of access to the parameters being granted by assigning unique passwords to designated personnel.

Password protection covers direct and remote access through all methods and interfaces of interconnectivity of the device.

Personal security

Configure password security before handing over the device to the customer!

Note your password on a secure location. The next higher password level (2 and 4) allows to reset the password of the level below (1 and 3).

To restore the according User Name Account needs support from Woodward (authorized partner).

Access via channel ...

The following table and drawing provide an overview about the possible access channels to the easY-I-XT.

Access to the easY-I-XT by a/an ...	**# used in drawing “Access via channel ...”below**
HMI on the control directly	①
PC running ToolKit servlink, connected over USB	②
Remote Panel with the Woodward screen share concept connected over Ethernet (HMI simulation)	③ = ①
3rd party Remote Panel (i.e. Proface, Sütron, ...) running Modbus TCP	④
PLC running Modbus TCP	④
PC running ToolKit servlink, connected over Ethernet	⑤
Netbiter® Easy Connect gateway running Servlink TCP (ToolKit via internet)	⑤
PLC running Modbus RTU via RS-485	⑥
PLC running CANopen	⑦
PLC running CANopen via Profibus DP	⑦

Each channel has its own independent access level.

The according password handling for each of this access is defined afterwards.

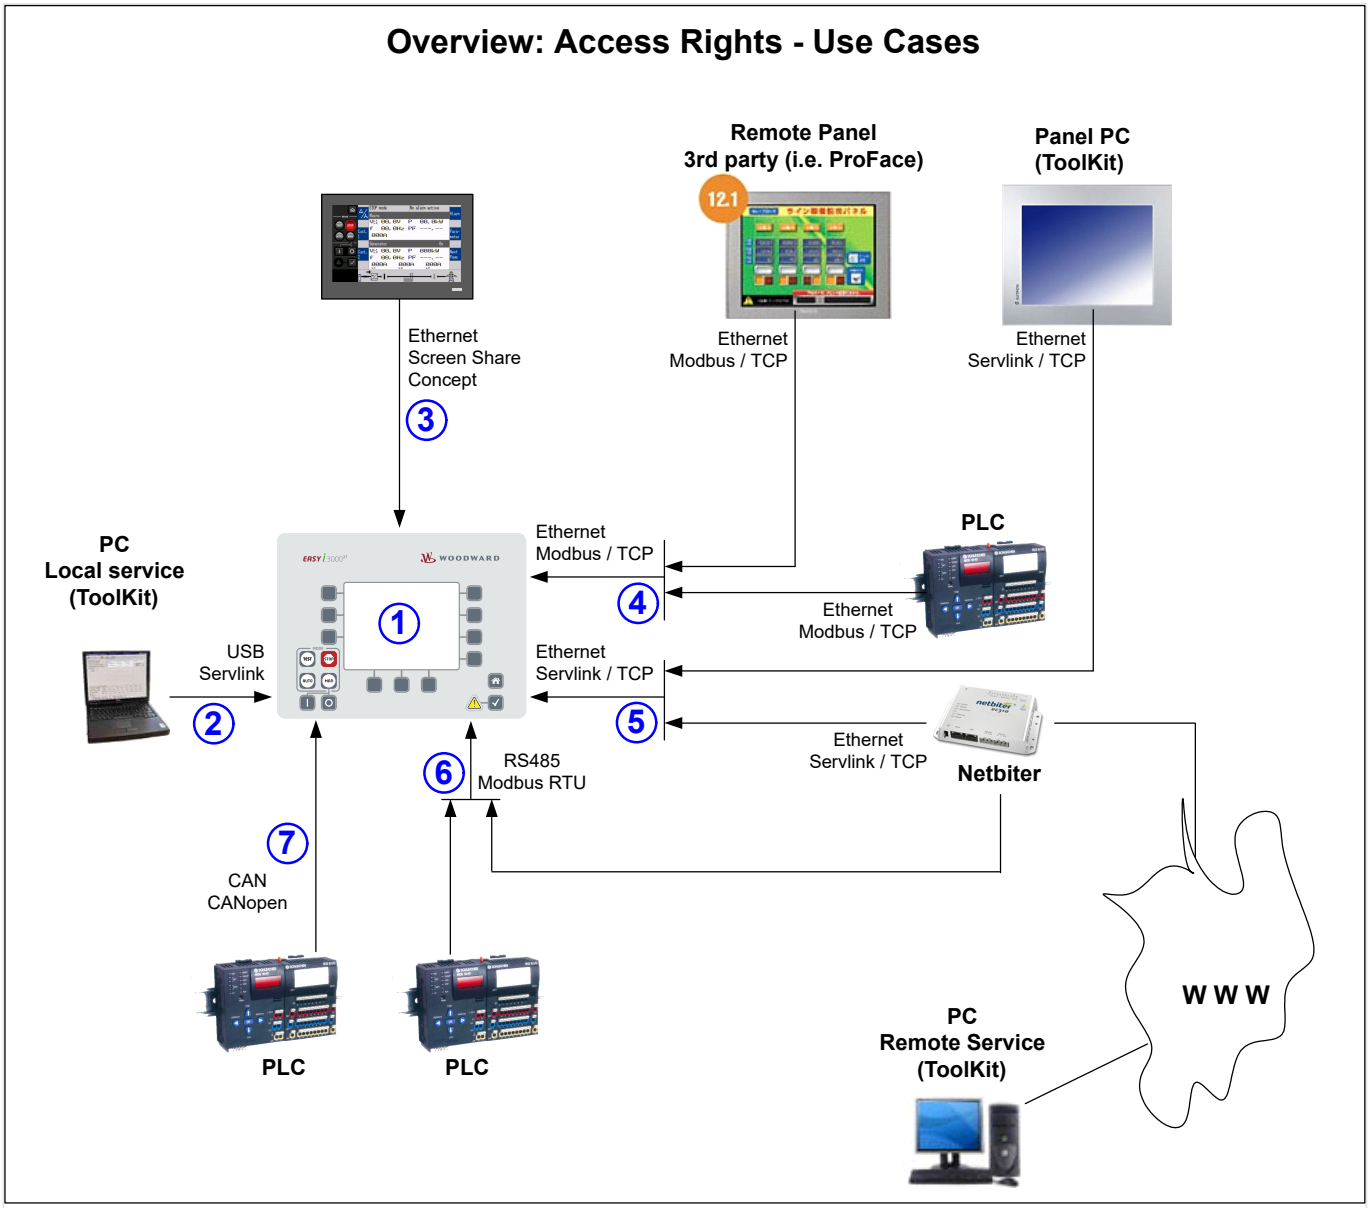


Fig. 128: Access to the easY-I-XT device - Overview

Two login procedures cover all access channel variants: The ...

- Basic Code Entry
- User Account Entry

Hidden entry for more security

The currently selected entry number is visible only - all other numbers are hidden and a "*" asterisk is displayed instead.

LOGIN procedure "Basic Code Entry"

The Basic Code Entry is valid for access ①, ③, ⑥, and ⑦.

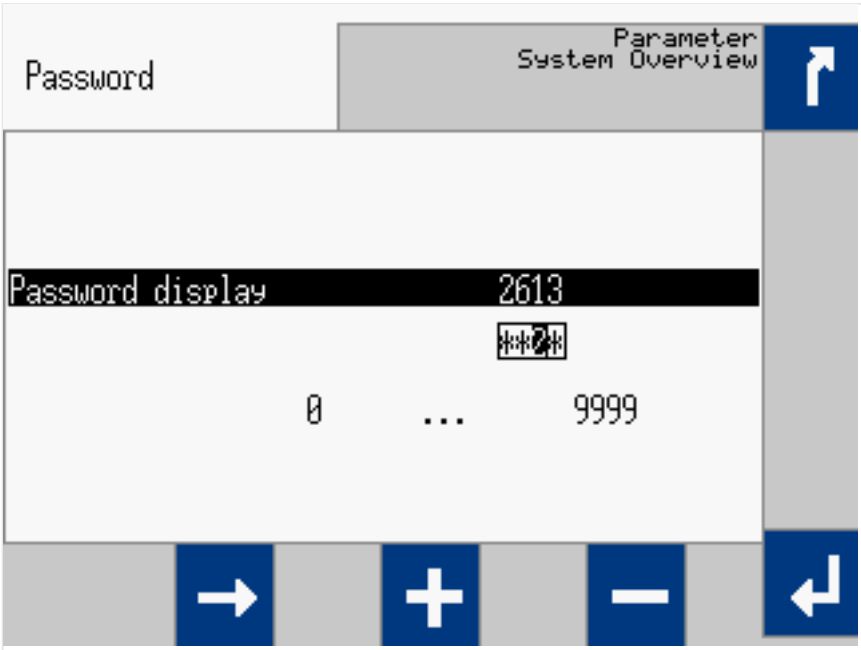


Fig. 129: Password entry: HMI

The Basic Code Entry asks for four numbers to open the related password level. It starts with the default value of parameter 10416 »Random number for password«.

LOGIN procedure "User Account Entry"

The User Account Entry is valid for access ②, ④, and ⑤.

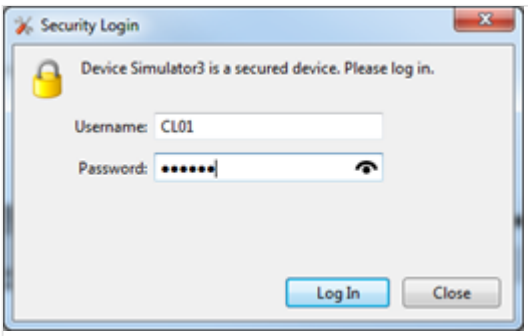


Fig. 130: Password entry: ToolKit

The User Account Entry comes with more security as requested for internet access. It asks for »Username:« **and** »Password:« ("Alphanumeric Password"). To open the related password level, both rows entries need the correct alphanumeric strings.

The already existing User names cannot be changed. They are fixed for the desired code level, which shall be entered.

Check you Password entry

View hidden password entry by pushing the symbol on the right side of the »Password:« box.

Released

Enter Password for level ... (Overview)

A distinction is made between the access levels as follows:

Code Level	User Account Entry		Basic Code Entry	Comment
	User Name (fix)	**Password (default)**	**Password (default)**	
5	CL05	CL0500	500	**The Super Commissioning Level** Access to nearly all parameters and configurations, except calibration and super user items. The firmware updating is released. The own code level and the levels below can be indicated and configured.
4	AC04	Algorithm Code	Algorithm Code	**The temporary Super Commissioning Level** The same access rights like in the Super Commissioning Level but with the following exceptions: • The password for this level is not visible. • The access is dismissed afterwards.
3	CL03	CL0003	3	**The Commissioning Level** Access to well defined parameters and configurations, which are usually needed on a commissioning level. The own code level and the levels below can be indicated and configured.
2	AC02	Algorithm Code	Algorithm Code	**The temporary Commissioning Level** The same access rights like in the Commission Level. The Code level is entered in an algorithm code. The access is dismissed afterwards. Only the code levels below can be indicated and configured.
1	CL01	CL0001	1	**The Basic Level** Access to a limited number of parameters and configurations. The own code level can be indicated and configured.
0				No access rights to change, even viewed information is restricted.

Active Code Level

A code level always belongs to an access channel. Each access channel has its own password level. This password level can be different to others (other channels) at the same time.

The access related code level is available and visible beside the access related interface settings.

No direct access as expected?

Please check: LogicsManager 86.30 Parameter ↳ 12978 "Lock keypad 1" = TRUE?

The Algorithm Code

The "Algorithm Code" is an implemented procedure to give an external user temporarily access to the device but without being able to see or change the according passwords. This temporary access needs a random number produced by the device. The actual password then is calculated from this random number using a secret formula. The secret formula is provided by a higher instance.

Access Channels

Maximum Security

Each of these channels have their own independent access level. That has the advantage that e.g. a HMI channel password level opens not automatically the access rights for the other channels.

Maximum Flexibility

The device offers the capability to disable the password protection for the individual interface communication channels RS485, Ethernet, CAN 1 and CAN 3. If the password level is disabled the access level is set on code level 5.

The device provides different access channels via ...	Remarks
HMI directly or by WW Remote Panel	screen share concept
USB	ToolKit Servlink
RS485	Modbus RTU
Ethernet	Modbus TCP
	ToolKit Servlink TCP, 8 sub channels are possible **Note:** Each of the 8 sub channels has its own independent password access level!
CAN1	CANopen
CAN2	
CAN3	

Released

The different Password Code Levels

This chapter defines the properties of the single password code levels. The device differentiates several password levels. Generally with a higher reached password level the access rights increases.

Code Level 0

The Level 0 means there are no access rights enabled. All configurations are blocked.

Code Level 1 - The Basic Level CL01

- **General:**

  This level releases the access to a limited number of parameters and configurations

- **Basic Code entry:**

  In this and higher levels the password for the Basic Code Level CL01 can be changed

- **User Account Entry:**

  This level is selected with the User Name CL01 and the according password can only be changed being in code level CL01.

  Being in code level AC02 or higher the password of the Basic Level CL01 can be reset to its default by the Yes/No parameter 10434.

Code Level	User Account Entry		Basic Code Entry
	User Name (fix)	Password (default)	Password (default)
1	CL01	CL0001	0001

Code Level 2 - The temporary Commissioning Level AC02

- **General:**

  This Level allows temporary access to parameters of the Commission Level.

  The access is dismissed automatically (see “Automatic Logout from Password level (Fall into level 0)”).

- **Basic Code Entry:**

  In this and higher Levels, the password for the Basic Code Level CL01 can be changed.

- **User Account Entry:**

  This level is selected with the User Name AC02 and the according algorithm for the password can only be changed being in the Commissioning code level CL03.

  Being in code level AC02 or higher the password of the Basic Level CL01 can be reset to its default by the Yes/No parameter 10434.

Code Level	User Account Entry		Basic Code Entry
	User Name (fix)	**Password**	**Password**
2	AC02	The entry procedure: The operator connects ToolKit with the device and closes the upcoming security login window **without entering** username and password (Code level 0). The operator navigates with ToolKit to the page [Parameter / Configure system management]. The operator reads on that page 10416 »Random number for password«. He tells it to a higher instance. The higher instance calculates: (10414 »Code temp. commissioning« + 10416 »Random Number«) x 3. The higher instance takes the lower four digits of the result and puts the according algorithm string 10437 »Alphanumeric code temp. comm.« as prefix in front. The higher instance tells the result to the operator, who enters the result as password into the control.	The entry procedure: The operator navigates on the easY-I-XT HMI or on RP-3000XT to the screen[Parameter / Password / Password display]. The operator reads the indicated random number. He tells it to a higher instance. The higher instance calculates: (10414 »Code temp. commissioning« + 10416 »Random Number«) x 3. The higher instance takes the lower four digits of the result and tells it the operator. The operator enters the result as password into the control.

Code Level 3 - The Commissioning Level CL03

- **General:**

  In this Level, the operator has access to all parameters and configurations, which are usually needed on a commissioning level

- **Basic Code Entry:**

  In this and higher levels the password for the Commissioning Level CL03 can be changed

- **User Account Entry:**

  This level is selected with the User name CL03 and the according password can only be changed being in the Commissioning Level CL03

  Being in code level AC04 or higher the password of the Commissioning Level CL03 can be reset to its default by the Yes/No parameter ID 10435

Level	User Account Entry		Basic Code Entry
	User Name (fix)	**Password (default)**	**Password (default)**
3	CL03	CL0003	0003

Released

Code Level 4 - The temporary Super Commissioning Level

- **General:**

  This Level allows temporary access to nearly all parameters and configurations, except calibration and super user items.

  The access is dismissed automatically

- **Basic Code Entry:**

  In this and higher levels the passwords for the Commissioning Level CL04 can be changed

- **User Account Entry:**

  This level is selected with the User name AC03 and the according algorithm for the password can only be changed being in the Super Commissioning Level CL05

  Being in code level AC04 or higher the password of the Commissioning Level CL03 can be reset to its default by the Yes/No parameter ID ⮡ 10435

Level	User Account Entry		Basic Code Entry
	User Name	Password	Password
4	AC04	The entry procedure: The operator connects ToolKit with the device and closes the upcoming security login window **without entering** username and password (Code level 0). The operator navigates with ToolKit to the page [Parameter / Configure system management]. The operator reads on that page ⮡ 10416 »Random number for password«. He tells it to a higher instance. The higher instance calculates: (10412 »Code temp. commissioning« + 10416 »Random Number«) x 5. The higher instance takes the lower four digits of the result and puts the according algorithm string 10438 »Alphanumeric code super temp. comm.« as prefix in front. The higher instance tells the result to the operator, who enters the result as password into the control.	The entry procedure: The operator navigates on the easY-I-XT HMI or on RP-3000XT to the screen[Parameter / Password / Password display]. The operator reads the indicated random number. He tells it to a higher instance. The higher instance calculates: (10412 »Code temp. commissioning« + 10416 »Random Number«) x 5. The higher instance takes the lower four digits of the result and tells it the operator. The operator enters the result as password into the control.

Code Level 5 - The Super Commissioning Level CL05

- **General:**

In this Level, the operator has access to nearly all parameters and configurations, except calibration items

The firmware updating is released


- **Basic Code Entry:**

  In this and higher Levels the password fro the Super Commissioning Level CL05 can be changed

- **User Account Entry:**

  This level is selected with the User name CL05 and the according password can only be changed being in the Super Commissioning Level CL05

  Being in a higher level as CL05 the password of the Super Commissioning Level CL05 can be reset to its default by the Yes/No parameter ID 10436



If you have forgotten your password for the Super Commissioning Level, please contact Woodward or a representative for help.

Level	User Account Entry		Basic Code Entry
	User Name (fix)	Password (default)	Password (default)
5	CL05	CL0500	0500

Automatic Logout from Password level (Fall into level 0)

All basic code entry channels deny after 2h

The Modbus TCP access channel denies after 2h

Generally with power supply cycling the password level is denied.

The ToolKit Servlink access never logout

What forces the Logout from Password levels (Fall into level 0)

All basic code entry channels with »0« as password or a wrong password

The ToolKit Servlink access with logout function

The Modbus TCP (in all channels) with wrong password

Definition of the password

Numeric Password of the Basic Code entry

- The range of possible passwords is 1 to 9999

Alpha numeric Password of the User Account entry

- The maximum length of the alpha numeric password is 20 characters

Released

- The maximum length of the alpha numeric prefix (ID 10437; 10438) is 6 characters

The Random Number

Each time a password is entered, the random number is calculated at new. This guarantees max. security.

Password handling on the HMI of the easY-I

The easY-I supports only the Basic Code entry.

The easY-I HMI password level shall be visible in the parameter menu screens.

A dynamic key symbol is visible and displays the currently entered code level number inside:

- code level = 00: locked
- code level > 00: unlocked

In case of a password level time out during configuration over HMI, the HMI display switches back to the main screen.

The Input of the code level number or string contains a disguise function.

Password handling in ToolKit

The ToolKit supports the User Account entry and in case of CANopen connection the Basic Code entry.

Ethernet Connection: The ToolKit password level is visible in the menu [STATUS MENU / Diagnostic / Interfaces / Ethernet / Servlink]. Refer to your IP-address (PC).

USB Connection: The ToolKit password level is visible in the menu [STATUS MENU / Diagnostic / Interfaces / USB].

CAN Connection: The ToolKit password level is visible in the menu [STATUS MENU / Diagnostic / Interfaces / CAN / CAN 1 state - CAN 3 state].

Password handling via Modbus TCP using Ethernet connection

The easY-I must be a member of an Ethernet network and both user name and password have to be transferred (from PLC) to the device.

☼ **Set easY-I-XT to code level CL05 via Modbus TCP**

With factory settings username is expected to be "CL05" and password to be "CL0500" for code level CL05. With setting the Code Level all five communication channels (sockets) are released.

⚙

1. ▷ Write and transfer »CL05« as hex:

43-4C-30-35-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00

for "User name" to parameter ⮡▷ 7490 (40 bytes).

2. ▷ Write and transfer »CL0500« as hex:

43-4C-30-35-30-30-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00

for "Password" to parameter 7491 (40 bytes).

▶ Code level can be read with parameter 10427

The password level is visible in the Ethernet interface diagnostic screen.

Password handling via Modbus using RS-485 connection

The easY-I must be a member of a RS-485 network and the password has to be transferred (from PLC) to the device.

☼ **Set easY-I-XT to code level 5 via Modbus RS-485**

With factory settings the password is expected to be "500" for code level 5.

- Modbus address = 400000 + (Par. ID + 1) = 410431
- Modbus length = 1 (UNSIGNED 16)

Code level state can be read with parameter 10420.
Please find the password level in ToolKit: [STATUS MENU / Diagnostic / Interfaces / RS485].

Password handling via CAN using CANopen connection

The easY-I must be a member of a CANopen network and the password has to be transferred (from PLC) to the device.

The easY-I provides several CAN ports and therefore each port has his own password level. The password is written by a SDO Communication Channel.

☼ **Set easY-I-XT to code level 5 via CANopen**

With factory settings the password is expected to be "500" for code level 5.

Released

Procedure for CAN 1

- CAN interface 1 Parameter ID = 10402 (dec) = 28A2 (hex)
- Incorporate the 2000 (hex) value: 28A2(hex) + 2000 (hex) = 48A2 (hex)
- Identifier: 600 (hex) + Node-ID
- Example Node-ID is 1

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601 (hex)	Password 500 writing on Parameter ID 10402	2B A2 48 01 F4 01 00 00

Code level state can be read with parameter 10407.
Please find the password level in ToolKit: [STATUS MENU / Diagnostic / Interfaces / CAN / CAN 1 state].

Procedure for CAN 2

- CAN interface 2 Parameter ID = 10432 (dec) = 28C0 (hex)
- Incorporate the 2000 (hex) value: 28C0 (hex) + 2000 (hex) = 48C0 (hex)
- Identifier: 600 (hex) + Node-ID
- Example Node-ID is 1

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601 (hex)	Password 500 writing on Parameter ID 10432	2B C0 48 01 F4 01 00 00

Code level state can be read with parameter 10422.
Please find the password level in ToolKit: [STATUS MENU / Diagnostic / Interfaces / CAN / CAN 2 state].

Procedure for CAN 3

- CAN interface 3 Parameter ID = 10433 (dec) = 28C1 (hex)
- Incorporate the 2000 (hex) value: 28C1 (hex) + 2000 (hex) = 48C1 (hex)
- Identifier: 600 (hex) + Node-ID
- Example Node-ID is 1

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601 (hex)	Password 500 writing on Parameter ID 10433	2B C1 48 01 F4 01 00 00

Code level state can be read with parameter 10423.
Please find the password level in ToolKit: [STATUS MENU / Diagnostic / Interfaces / CAN / CAN 3 state].

Released

Code level display

The current code level is indicated by the lock symbol in the configuration menu screens. The lock symbol indicates the number of the code level and appears as "locked" (in code level CL00) or "unlocked" (in higher code levels).

Symbol	Status
	Locked
	Unlocked (Code Level 01)

ID	Parameter	CL	Setting range **[Default]**	Description
10400	**Password display**	0	0000 to 9999 **[random number]**	The password for configuring the control via the front panel must be entered here.
10405	**Code level display**	0	(display only) **[0]**	This value displays the code level which is currently enabled for access via the front panel display or the Woodward Remote Panel with screen share mode.

Code level interfaces

The password and/or User name for access via interface cannot be entered via HMI.

ID	Parameter	CL	Setting range **[Default]**	Description
10402	**Password for CAN interface 1**	0	0000 to 9999 **[random number]**	The password for configuring the control via the CAN interface #1 must be entered here. Not visible but can be accessed by interface!
10407	**Code level**	0	**[0]**	This value displays the code level which is currently enabled for access via the CAN interface #1.
10432	**Password for CAN interface 2**	0	0000 to 9999 **[random number]**	The password for configuring the control via the CAN interface #2 must be entered here. Not visible but can be accessed by interface!
10422	**Code level**	0	**[0]**	This value displays the code level, which is currently enabled for access via the CAN interface #2.
10433	**Password for CAN interface 3**	0	0000 to 9999 **[random number]**	The password for configuring the control via the CAN interface #3 must be entered here. Not visible but can be accessed by interface!

Released

ID	Parameter	CL	Setting range [Default]	Description
10423	**Code level**	0	**[0]**	This value displays the code level, which is currently enabled for access via the CAN interface #3.
7486	**Code level**	0	**[0]**	This value displays the code level, which is currently enabled for access via the USB interface. The password is entered via the ToolKit login window.
10430	**Password for serial interface**	0	0000 to 9999 **[random number]**	The password for configuring the control via the RS485 interface must be entered here. Not visible but can be accessed by interface!
10420	**Code level**	0	**[0]**	This value displays the code level, which is currently enabled for access via the RS485 interface.
7490	**User name Modbus TCP**	0		The user name for configuring the control via the Modbus TCP/IP interface must be entered here. Not visible but can be accessed by interface!
7491	**Password Modbus TCP**	0	0000 to 9999 **[random number]**	The password for configuring the control via the Modbus TCP/IP interface must be entered here. Not visible but can be accessed by interface!
10427	**Code level**	0	**[0]**	This value displays the code level, which is currently enabled for access via the Modbus TCP/IP interface.
7816	**IP Servlink Master 1**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 1.
7824	**Code level Servlink Master 1**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 1.
7817	**IP Servlink Master 2**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 2.
7825	**Code level Servlink Master 2**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 2.
7818	**IP Servlink Master 3**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 3.
7826	**Code level Servlink Master 3**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 3.
7819	**IP Servlink Master 4**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 4.

Released

ID	Parameter	CL	Setting range [Default]	Description
7827	**Code level Servlink Master 4**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 4.
7820	**IP Servlink Master 5**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 5.
7828	**Code level Servlink Master 5**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 5.
7821	**IP Servlink Master 6**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 6.
7829	**Code level Servlink Master 6**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 6.
7822	**IP Servlink Master 7**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 7.
7830	**Code level Servlink Master 7**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 7.
7823	**IP Servlink Master 8**	0	**[0]**	This is the IP address of the PC that is connected via ToolKit with the device as Servlink Master 8.
7831	**Code level Servlink Master 8**	0	**[0]**	This value displays the code level, which is currently enabled for access as Servlink Master 8.

4.3.4.1 Password System - Parameter Overview

General notes



The following passwords grant varying levels of access to the parameters.

Each individual password can be used to access the appropriate configuration level through multiple access methods and communication protocols (via the front panel, via serial RS-485 interface, and via the CAN bus).

ID	Parameter	CL	Setting range [Default]	Description
10415	**Password basic**	1	1 to 9999 **[-]**	The password for the code level "Basic" is defined in this parameter. Refer to “4.3.4 Enter Password” for default values.
10413	**Password commissioning**	3	1 to 9999 **[-]**	The password for the code level "Commissioning" is defined in this parameter. Refer to “4.3.4 Enter Password” for default values.

ID	Parameter	CL	Setting range [Default]	Description
10414	**Code temp. commissioning**	3	1 to 9999 **[200]**	The algorithm for calculating the password for the code level "Temporary Commissioning" is defined in this parameter.
10412	**Code temp. super commissioning**	5	1 to 9999 **[400]**	The algorithm for calculating the password for the code level "Temporary Super commissioning" is defined in this parameter.
10411	**Password super commissioning**	5	1 to 9999 **[500]**	The password for the code level "Super commissioning" is defined in this parameter. Refer to “4.3.4 Enter Password” for default values.
10437	**Alphanumeric code temp. comm.**	3	(up tp 6 characters) **[a9t5]**	Alphanumeric code for temporary commissioning level. This is the alphanumeric algorithm value for the formula to reach the temporary commissioning code level (Level 02), entered as string here.
10438	**Alphan. code temp. super comm.**	5	(up tp 6 characters) **[xk38]**	Alphanumeric code for temporary super commissioning level This is the alphanumeric algorithm value for the formula to reach the temporary commissioning code level (Level 04), entered as string here.

4.3.4.1.1 Random Number for Password

ID	Parameter	CL	Setting range [Default]	Description
10416	**Random number for password**		**[(random four letters number)]**	Random number generated by the easY-I-XT device. Needed to get an alphanumeric password by Woodward support.

4.3.4.1.2 Change/Reset Alphanumeric Password

ID	Parameter	CL	Setting range [Default]	Description
Change password basic level				
10439	**Old password basic level**	1	((empty))	Enter here your old alphanumeric password to release the password change for the basic code level (CL01)
10440	**New password basic level**	1	((empty))	Enter here your new alphanumeric password string for the basic code level (CL01)

Released

ID	Parameter	CL	Setting range [Default]	Description
10441	**Confirm password basic level**	1	((empty))	Repeat here your new alphanumeric password string for the basic code level (CL01)
10442	**Change password basic level**	1	**[No]** Yes	With switching this parameter to yes, the control checks the entries for changing the password and executes the password change, if the entries are correct. The visualization 10443 indicates the successful execution.
				Notes If the parameters 10439, 10440, and 10441 are not correct, the password change is not executed.
10443	**Change passw.error basic level**	0		Flag: illuminated LED
			[green]	Password was not changed or successfully changed
			red	Error: password could not be changed
10434	**Reset password basic level**	2	Yes	The control resets the password of the basic level to "CL0001".
			[No]	
Change password commissioning level				
10444	**Old password commiss. level**	3	((empty))	Enter here your old alphanumeric password to release the password change for the commissioning code level (CL03)
10445	**New password commiss. level**	3	((empty))	Enter here your new alphanumeric password string for the commissioning code level (CL03)
10446	**Confirm password commiss.level**	3	((empty))	Repeat here your new alphanumeric password string for the commiss. code level (CL03)
10447	**Change password commiss. level**	3	**[No]** Yes	With switching this parameter to »Yes«, the control checks the entries for changing the password and executes the password change, if the entries are correct. The visualization 1048 indicates the successful execution.
				Notes If the parameters 10444, 10445, and 1046 are not correct, the password change is not executed.
10448	**Change passw. error comm.level**	0		Flag: illuminated LED
			[green]	Password was not changed or successfully changed
			red	Error: password could not be changed

Released

ID	Parameter	CL	Setting range [Default]	Description
10435	**Reset password commiss. level**	4	Yes	The control resets the password of the commissioning level to "CL0003".
			[No]	
Change password super commissioning level				
10449	**Old passw. super comm. level**	5	((empty))	Enter here your old alphanumeric password to release the password change for the super comm. code level (CL05)
10450	**New passw. super comm. level**	5	((empty))	Enter here your new alphanumeric password string for the super comm. code level (CL05)
10451	**Confirm passw.super comm.level**	5	((empty))	Repeat here your new alphanumeric password string for the super comm. code level (CL05)
10452	**Change passw.super comm. level**	5	**[No]** Yes	With switching this parameter to »Yes«, the control checks the entries for changing the password and executes the password change, if the entries are correct. The visualization 1053 indicates the successful execution.
				Notes If the parameters 10449, 10450, and 1051 are not correct, the password change is not executed.
10453	**Change passw. error super comm.level**	0		Flag: illuminated LED
			[green]	Password was not changed or successfully changed
			red	Error: password could not be changed
10436	**Reset passw. super comm. level**	11	Yes	The control resets the password of the commissioning level to "CL0005" e.g., if you forgot your password.
				Notes The code level to execute the password reset is provided by your Woodward sales support partner.
			[No]	

4.3.5 System Management

CAUTION!

Don't initiate »Set factory default settings« during controlling a genset! This causes easY-I rebooting.

Parameter 1701 »Set factory default values« causes a reboot of the control. During this time the genset system is not controlled by the easY-I! An uncontrolled operation can lead into life-threatening hazard or damage.

After settings changed: Please wait 30 seconds to be sure changes are saved before power cycling the device.

ID	Parameter	CL	Setting range [Default]	Description
1702	**Device number**	2	1 to 32 **[1]** 1 to 31 in GCB/GC mode	A unique address is assigned to the control though this parameter. This unique address permits the controller to be correctly identified on the CAN bus. The address assigned to the controller may only be used once. All other bus addresses are calculated on the number entered in this parameter. The device number is also important for the device assignment in load sharing and load-dependent start/stop. **Notes** The unit must be rebooted after changing the device number to ensure proper operation. For multiple genset applications please make sure to change parameter 8952 as well. In application mode GCB/GC device number 32 is used by the Group Controller.
1889	**Device name preset**	2	**[Device_name]** 12 to 38 characters but varies on font	After set with parameter 1893 this customer specific device name is used e.g. as device name in Ethernet network. **Notes** Recommended are 19 ASCII characters max. Blanks and special characters will be replaced.
1890	**Device name**	2	**["displayable characters of parameter 1889"]** up to 38 characters but varies on font	(Pre)view of device name.

Released

ID	Parameter	CL	Setting range [Default]	Description
1893	**Set device name**	2	**[No]** Yes	YES: Device name typed in as value of parameter 1889 taken, processed, and displayable characters saved as parameter 1890.
				Note Reboot device to apply changed device name on network!
10419	**REBOOT**	2	**[No]**	Yes: Reboot will be initiated.
			Yes	**Notes** Some parameters require a reboot to take effect. Reboot is only possible in operation mode STOP!
10417	**Factory default settings**	0	Yes	The following three parameters are visible and restoring the configured parameters to factory default values is enabled.
			[No]	The following three parameters are invisible and restoring the configured parameters to factory default values is not enabled.
1701	**Set factory default values**	4	Yes	All parameters, with the exception of customer defined passwords, will be restored to factory default values. If the default setting is initiated the alarm LED starts twinkling with a higher rate (ca. 5 Hz).
				Notes The device is power cycled and rebooting after approx. 20 seconds! In case of ToolKit connected via USB service port: USB connection will be lost!
			[No]	All parameters will remain as currently configured.
				Notes This parameter is only displayed, if factory default settings (parameter ↳ 10417) is set to "Yes".
1896	**Parameter update rate**	4	3 - 7200 s **[3 s]**	This parameter defines the time for cyclical saving of changed parameters in the non voluntary memory. (Only accessible in ToolKit.)
				Notes To ensure that parameter changes are saved, wait at least this time after parameter changes before

Released

ID	Parameter	CL	Setting range [Default]	Description
				removing the power supply or reboot. Since memories only allow a limited number of write cycles (about 100000), set this value to a longer time if, for example, you write parameters cyclically via a PLC. **Otherwise, the lifetime of the memory is shortened.**

4.3.5.1 Reboot Function

The reboot of the device can be initiated by operating a Yes/No switch in ToolKit. This is beneficial because some parameters, like

- 1893 Set device name,
- 3184 Modbus protocol number,
- 15320 Select external terminals and

need a reboot procedure to become effective.



Please be careful with this setting because the device goes off and reboots at new with all its consequences. It's the same like power off/on cycle.

The parameter is located on different ToolKit pages:

- Configure system management
- Modbus protocol
- CANopen

Released

4.3.6 Configure Remote Panel Mode

4.3.6.1 Configuration screen Remote Panel Mode

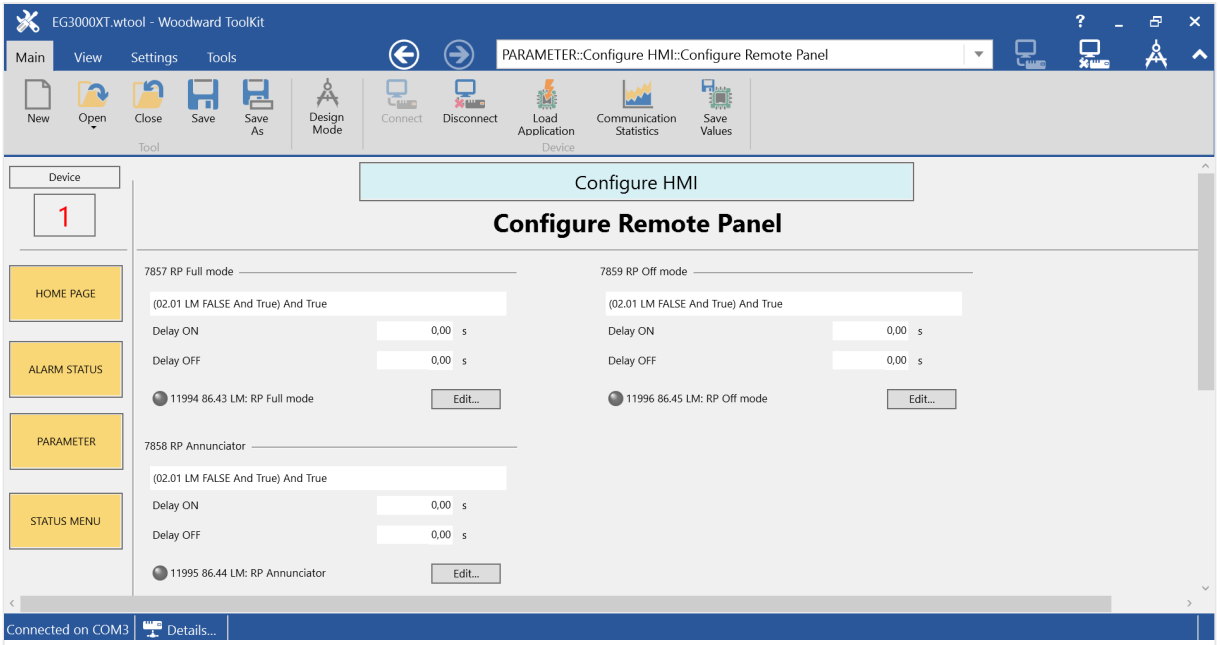


Fig. 131: Configure Remote Panel

4.3.6.2 General notes

General notes

If the remote panel interacts with an easY-I, different use cases could be desired. So the remote panel runs usually without any restrictions, if it is connected with an easY-I-3100XT or easY-I-3400XT. This mode is called Full Access Mode.

But if the remote panel runs with an easY-I-3200XT or easY-I-3500XT, it is not always allowed that both HMI have full control access rights to the genset. Here it is desired to either restrict the control rights for the remote panel (Annunciator Mode) or for the local HMI (Local Keylock). And finally it will be desired to switch off the remote panel completely.

To maintain the different operating modes in the remote panel the easY-I has to determine with LogicsManagers in which operation mode the Remote Panel RP-3000XT shall run. If no LogicsManager is true, full mode with password suppression is active.

Following operation modes are defined (in order of the LogicsManager priority):

- RP-3000XT Full mode with password suppression (no LM true)
- RP-3000XT Full mode
- RP-3000XT Annunciator mode
- RP-3000XT Off mode (highest priority)

Released

4.3.6.3 RP-3000XT in Full Mode with Password suppression

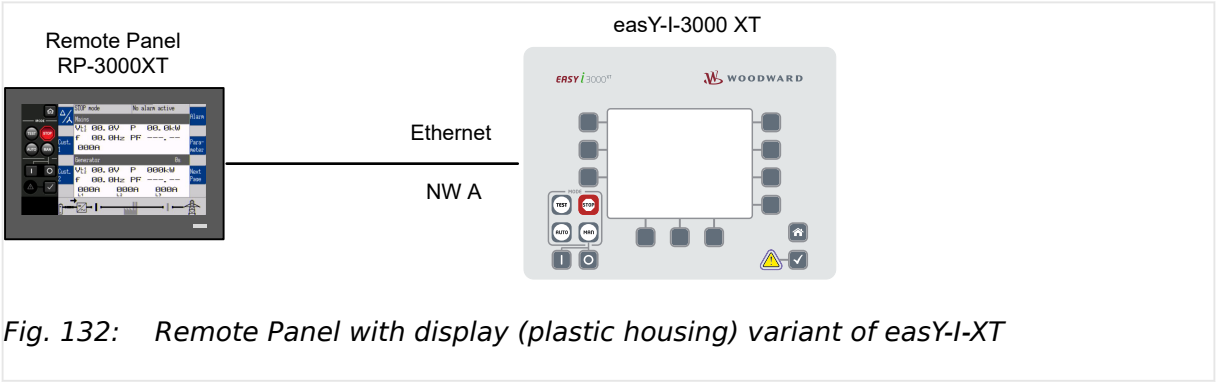


Fig. 132: Remote Panel with display (plastic housing) variant of easY-I-XT

The RP-3000XT represents full the easY-I-3000XT (with Password suppression)

- All Operating Mode buttons are indicated and active
- The MAN Start Stop buttons are indicated and active
- The Acknowledge button is indicated and active
- The Alarm Symbol is indicated and active
- The “Home” button is indicated and active
- The Configuration capability is activated
- No suppress of any screen
- Password Screen is suppressed in the RP, if operated by easY-I-3000XT
- Password entry field of the Password Screen in the easY-I is suppressed, if operated by RP-3000XT

The password suppressed Full Mode becomes active, if there is no mode selected via LogicsManager.

If "Password display" entry field is operated in the RP-3000XT:

- "Password display" entry field in the easY-I is suppressed
- Buttons on the bottom (surrounded by blue dotted line) of the easY-I-3500XT display are blocked
- Button BACK on the upper right is still active (leave password screen)

Released

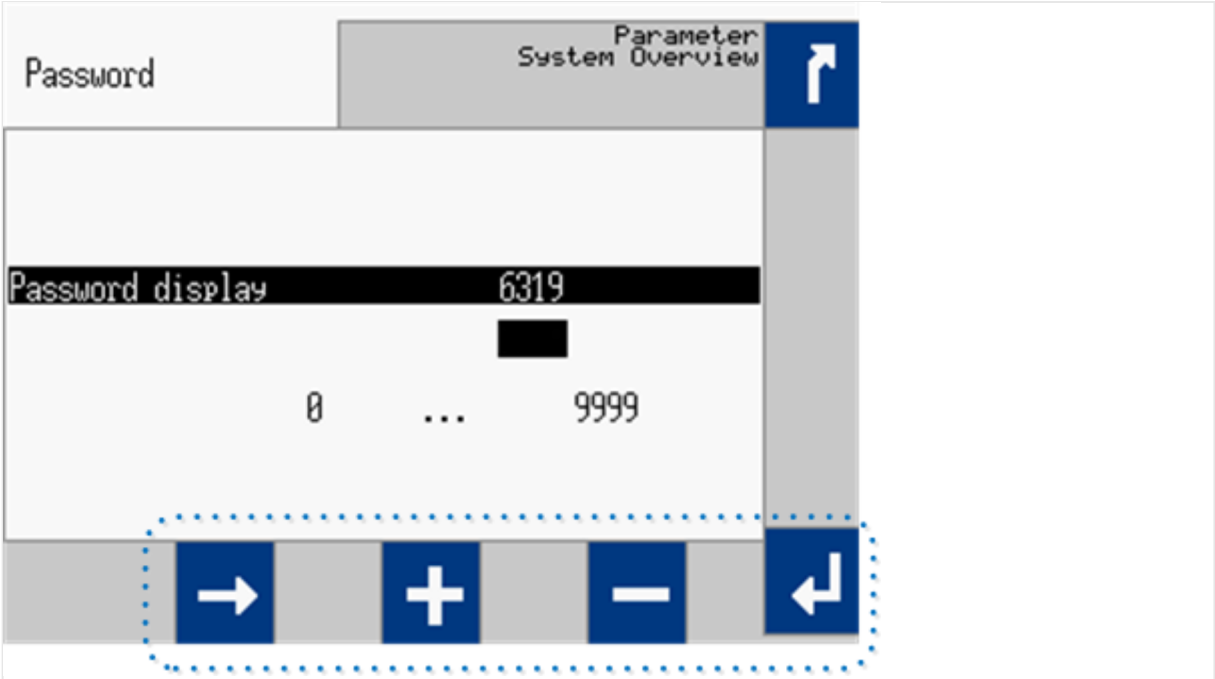


Fig. 133: Password display on easY-I screen

If "Password display" entry field is operated in the easY-I-3000XT:

- Password Screen in the RP-3000XT (VNC viewer) is suppressed
- All buttons of the password screen in the RP-3000XT are blocked

4.3.6.4 RP-3000XT in Full Mode

The RP-3000XT represents full the easY-I-3000XT

- All Operating Mode buttons are indicated and active
- The MAN Start Stop buttons are indicated and active
- The Acknowledge button is indicated and active
- The Alarm Symbol is indicated and active
- The “Home” button is indicated and active
- The Configuration capability is activated
- No suppress of any screen
- No suppress of Password Screen

The Full Mode becomes active, if the easY-I-XT is configured as follows:

- LM "RP-3000XT Full mode" is TRUE

  AND

- LM "RP-3000XT Annunciator mode" is FALSE

Released

AND

- LM "RP-3000XT Off mode" is FALSE

4.3.6.5 RP-3000XT in Annunciator Mode

The RP-3000XT shows measurement, condition, and alarm data of the easY-I-3000XT. Data in regards to configuration and parameter are faded out and a "disabled" screen (crossed out Fig. 136) is displayed instead.

- All Operating Mode buttons are not visible, but the current operation is indicated
- The MAN Start/Stop buttons and the breaker soft key buttons are not indicated
- The Acknowledge button is not indicated
- The Alarm Symbol is indicated and active
- The “Home” button is indicated and active
- The Configuration capability is deactivated (according soft key buttons are not indicated or not active)
- All configuration screens of the easY-I are suppressed in the RP-3000XT (disabled screen)

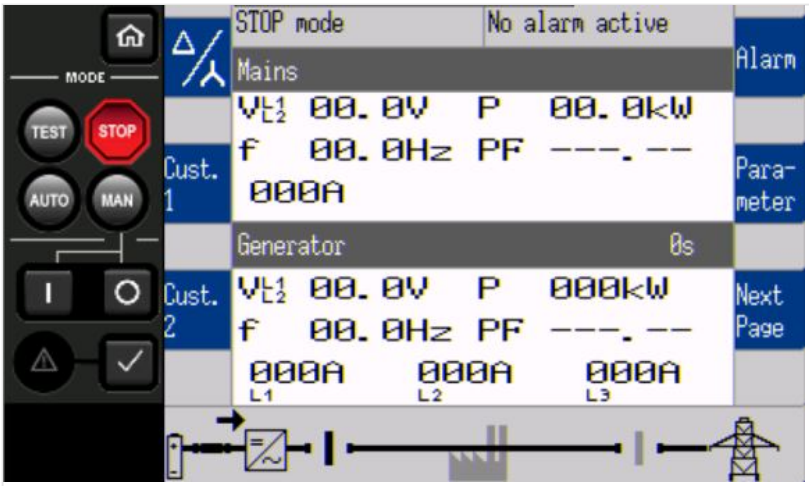


Fig. 134: RP in Annunciator mode - Home screen

The Annunciator mode becomes active, if the easY-I-XT is configured as follows:

- LM "RP-3000XT Annunciator mode" is TRUE

  AND

- LM "RP-3000XT Off mode" is FALSE

Released

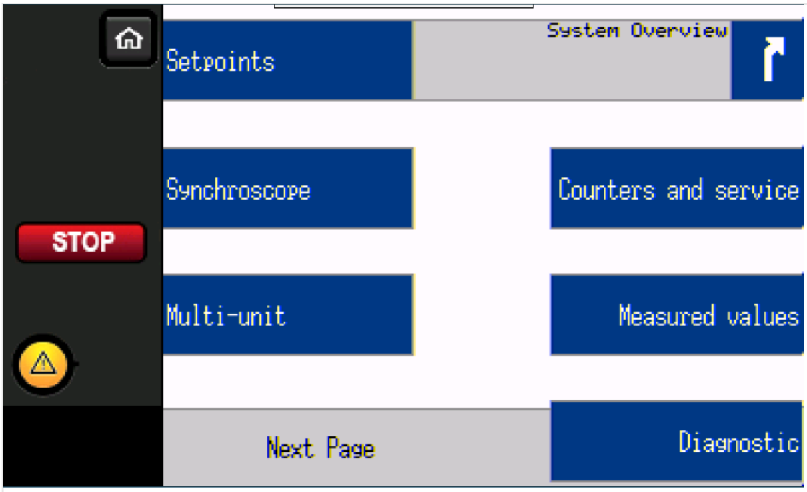


Fig. 135: RP in Annunciator mode - access to menu

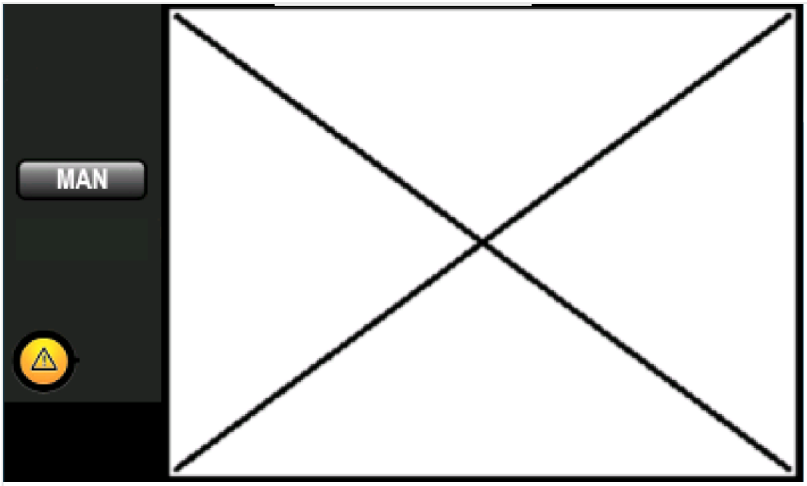


Fig. 136: RP in Annunciator mode - "disabled"screen

4.3.6.6 RP-3000XT in Off Mode

The RP-3000XT supports no screen of the easY-I-3000XT.

Released

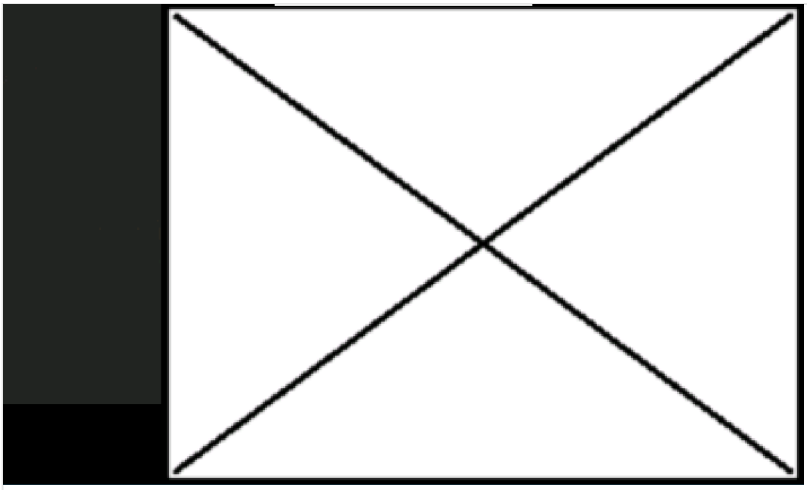


Fig. 137: RP in OFF mode

The Off Mode becomes active, if the easY-I-XT is configured as follows

- LM "RP-3000XT Off mode" is TRUE

4.3.6.7 Parameters of RP Modes

Priority of RP Modes

»RP Off mode« higher than »RP Annunciator« higher than »RP Full mode«.

If no mode is selected via LogicsManager »Full mode with Password suppression« is active!

ID	Parameter	CL	Setting range **[Default]**	Description
7857	**RP Full mode**	2	Determined by LogicsManager 86.43 **[(02.01 LM FALSE & 02.02 LM TRUE) & 02.02 LM TRUE]** = 11994	Once the conditions of the LogicsManager have been fulfilled the unit will empower the RP-3000XT into Full mode described above.
7858	**RP Annunciator**	2	Determined by LogicsManager 86.44 **[(02.01 LM FALSE & 02.02 LM TRUE) & 02.02 LM TRUE]** = 11995	Once the conditions of the LogicsManager have been fulfilled the unit will empower the RP-3000XT into Annunciator mode described above.
7859	**RP Off mode**	2	Determined by LogicsManager 86.45 **[(02.01 LM FALSE & 02.02 LM TRUE) & 02.02 LM TRUE]**	Once the conditions of the LogicsManager have been fulfilled the unit will downgrade the RP-3000XT to Off mode described above.

Released

ID	Parameter	CL	Setting range [Default]	Description
			= 11996	

4.4 Configure Application

4.4.1 Configure Inverter/DC source

4.4.1.1 Configure inverter

General notes

An inverter is connected between DC source and AC source (utility or generator). The inverter can operate in two different directions and transform the DC current to the AC busbar or transform the AC current to the DC source.

Communication to inverter

The easY-I communicates via the Modbus TCP interface with the inverter and all necessary data for the communication are specified in the Modbus Master control file. For details refer to chapter “6.5.5 Modbus master”.

The Modbus Master initialize all values with "Zero" and data from the inverter with contains "Zero" as a status indication can be misleading in case of a communication problem.

Following data are available/usable for the interconnectivity between easY-I and inverter.

Values from the inverter (read)

- Actual measured values
- Status from the inverter
- Active Alarms

Values to the inverter (write)

- Frequency, Voltage, Active power, Reactive power and DC voltage setpoints.
- Operation mode selection
- Alarm acknowledge
- Watchdog (heartbeat)

Inverter modes

An inverter can be switched into different operation modes. These modes will be determined in regards to the configuration from the LogicsManager "Grid tie mode", "Grid forming mode" or "DC supply mode".

- Grid Tie mode

In Grid-Tie mode, the inverter controls the flow of active and reactive power to and from the grid within its rated capability limits.

The inverter operation starts when the GCB breaker is closed. The inverter recognizes a AC voltage and synchronizes its power source onto the load busbar. From there on it ramps a constant active and reactive power onto the load busbar. Different active and reactive power setpoints are selectable. This mode is doable in conjunction with the utility or with neighbor gensets in multiple island operation.

- Grid Forming mode (Stand-Alone mode)

  In this mode, the inverter acts an AC voltage source to provide power to an island network. A suitable DC source is required to start the inverter and to exchange power with the local network.

  The inverter operation can be started if the grid-forming mode is currently active and the GCB is closed or if the GCB is open and no voltage on the load busbar is recognized.

- DC Supply mode

  In DC supply mode, the inverter acts as a bidirectional DC source connected to the grid. In this mode, only the DC voltage of the inverter can be controlled by the user while the reactive power is internally controlled to zero (Unity power factor).

  The inverter goes into a special mode in which he drives a charging current into the batteries. The loading is done in conjunction with the battery controls. The reverse power flow is a special inverter mode.

Parameter

Navigate to [Parameter / Configuration / Configure application / Config. Inverter/DC source / Configure Inverter].

ID	Parameter	CL	Setting range [Default]	Description
16931	**Grid Tie mode**	2	Determined by LogicsManager 85.03 **[(04.07 MCB closed & 04.16 GGB closed) OR 04.86 Other GCB closed]** = 16932	If this LogicsManager condition is TRUE the inverter operates in Grid tie mode. The easY-I controls active-/ reactive power from the inverter in conjunction with the utility or with neighbor generator in multiple island operation. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
16933	**Grid Forming mode**	2	Determined by LogicsManager 85.04 **[Not (85.03 LM: Grid Tie mode & 1) & 1]** = 16934	If this LogicsManager condition is TRUE the inverter operates in Grid forming mode. The easY-I controls frequency and voltage from the inverter in single island operation. **Notes**

Released

ID	Parameter	CL	Setting range [Default]	Description
				For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
16935	**DC Supply mode**	2	Determined by LogicsManager 85.05 **[(02.01 LM FALSE & 1) & 1]** = 16936	If this LogicsManager condition is TRUE the inverter operates in DC supply mode. In this mode the inverter charges the battery and the easY-I controls the DC voltage. This inverter mode requires an AC source like utility or generator. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

There is a priority selection between the three LogicsManager.

- **DC Supply mode** -> Highest priority
- **Grid Forming mode**
- **Grid Tie mode** -> Lowest priority

ID	Parameter	CL	Setting range [Default]	Description
16927	**Inv. ready for operation**	2	Determined by LogicsManager 85.01 **[Not (56.06 Status ALARM & 1) & 1]** = 16928	If this LogicsManager condition is TRUE the inverter is ready for operation. For the easY-I start-up sequence "Prepare inverter" it's necessary that the inverter is "ready for operation" (for example, no alarm is active) **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
16929	**Inv. start operation**	2	Determined by LogicsManager 85.02 **[(56.10 Status READY & 1) & 1]** = 16930	If this LogicsManager condition is TRUE the inverter starts operation. With this condition the easY-I activates "Inverter in operation" and starts the inverter control. **Notes** For information on the LogicsManager and its default

Released

ID	Parameter	CL	Setting range [Default]	Description
				settings see “9.4.1 LogicsManager Overview”.
16956	**Acknowledge Inverter**	2	Determined by LogicsManager 85.08 **[(02.01 LM FALSE & 1) & 1]** = 16957	If this LogicsManager condition is TRUE the easY-I sends the acknowledge command to the inverter. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12970	**MAN inverter start**	2	Determined by LogicsManager 87.50 **[(0 & 1) &1]** = 11439	With the rising edge of this LogicsManager equation an inverter start command in operating mode MANUAL is initiated.
12971	**MAN inverter stop**	2	Determined by LogicsManager 87.59 **[(0 & 1) &1]** =11448	With the rising edge of this LogicsManager equation an inverter stop command in operating mode MANUAL is initiated. The state TRUE of this LM inhibits the start command in MANUAL.
16979	**Watchdog cycle time**	2	1 to 10 s **[1 s]**	The watchdog signal increases (+1) after the configured cycle time.
16980	**Watchdog max.value**	2	1 to 255 **[3]**	Maximum watchdog value. The watchdog value resets to 0 after the next cycle time. Example: If the max. value is configure to 10, the watchdog increases from 0 to 10 with the configured cycle time and restarts after that. **Notes** The AM value 56.54 Inverter watchdog is the resulting watchdog signal .

ToolKit: find settings screen

Analog Managers to define input signal of DC voltage setpoint and maximum discharge power are available in ToolKit by

- a click from screen/page "Configure Inverter"
  - on the button "Analog manager" in the left sidebar (below permanent buttons) or
  - on "next page", or
- search (for parameter)

Released

ID	Parameter	CL	Setting range [Default]	Description
16909	**AM DC voltage setp. [V]**	2	Determined by AnalogManager 80.01 **[A1 = 56.57 DC SP Charging [V]]**	The DC voltage setpoint source may be selected from the available data sources. **Notes** The DC voltage setpoint for the inverter is only usable if the DC supply mode is active (parameter 16935).
16917	**Max.discharge power [kW]**	2	Determined by AnalogManager 80.03 **[C1 = 200 kW]**	The maximum discharge power source may be selected from the available data sources. This value defines the max. available power from the DC source if the Grid tie mode is active (parameter 16931). **Notes** The AnalogManager 56.53 56.53 Max.discharge P [kW] is prepared and can be selected if the DC source provides the maximum discharge current.

4.4.1.2 Configure DC source

4.4.1.2.1 DC breaker

General notes

The DC breaker is located between the DC source and the inverter. The intention from the breaker is to isolated the DC source from other devices.

Function

Instead of a fixed internal logic the open/close condition from the DC breaker depends only from the status/configuration of the LogicManager. This allows a flexible handling from the DC breaker, but please be aware that the start sequence from the inverter and DC source requires a closed DC breaker.

Closing the DC breaker

- LM "Enable DC breaker" is TRUE (16940)
- LM "Open DC breaker" is FALSE (16942)
- LM "DC breaker is open" is TRUE (16976)

Opening the DC breaker

- LM "Open DC breaker" is TRUE (16942)
- LM "DC breaker is open" is FALSE (16976)

Released

In application without a DC breaker the LM "DC breaker is open" should be configured to FALSE.

Parameter

Navigate to [Parameter / Configuration / Configure application / Config. Inverter/DC source / Configure DC source].

ID	Parameter	CL	Setting range [Default]	Description
16937	**DC breaker close command**	2	**[Impulse]**	The "Command: Closing DC breaker" issues an add-on pulse for the configured breaker time pulse (parameter (↳ 16938).
			Steady	The "Command: Closing DC breaker" is a constant signal and may be wired directly into the holding circuit for the power circuit breaker.
16938	**DC breaker time pulse**	2	0.1 to 9.9 s **[1.0]**	The time of the pulse output may be adjusted to the breaker being utilized.
16940	**Enable DC breaker**	2	Determined by LogicsManager 85.06 **[(02.01 LM FALSE & 1) & 1]**	If this LogicsManager condition is TRUE the closing from the DC breaker is enabled. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
16942	**Open DC breaker**	2	Determined by LogicsManager 85.07 **[(02.01 LM FALSE & 1) & 1]**	If this LogicsManager condition is TRUE the DC breaker will be opened. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
16976	**DC breaker is open**	2	Determined by LogicsManager 85.11 **[Not (09.03 Discrete input 3 & 1) & 1]**	If this LogicsManager condition is TRUE the DC breaker is recognized as open. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.

Released

4.4.1.2.2 DC source

General notes

With DC source in the easY-I device is mainly meant an energy storage system based on battery racks and their controller technology.

Communication to DC source

The easY-I reads out their status and gives eventually some commands and setpoints. This gives the possibility to control the charging/discharging of these batteries, visualize data and monitors alarms flags from the DC Source controller.

The communication uses the Modbus TCP interface and all necessary data are specified in the Modbus Master control file. For details refer to chapter “6.5.5 Modbus master”.



The Modbus Master initialize all values with "Zero" and data from the DC source with contains "Zero" as a status indication can be misleading in case of a communication problem.

Following data are available/usable for the interconnectivity between easY-I and DC source.

Values from the DC source (read)

- Actual measured values
- Status from the DC source
- Active Alarms

Values to the DC source (write)

- Racks switch On/Off commands
- Alarm acknowledge
- Watchdog (heartbeat)

Parameter

ID	Parameter	CL	Setting range **[Default]**	Description
16947	**Min.discharge capacity**	2	0.0 to 100.0 % **[0.0]**	"56.17 Discharging allowed" is FALSE if service SOC is lower than the configured capacity.
16948	**Min.discharge voltage**	2	0 to 1500 V **[0.0]**	"56.17 Discharging allowed" is FALSE if service voltage is lower than the configured voltage.
16949	**Min.discharge cell voltage**	2	0 to 9999 mV **[0.0]**	"56.17 Discharging allowed" is FALSE if system cell voltage is lower than the configure cell voltage.
16958	**Acknowledge DC source**	2	Determined by LogicsManager 85.09	If this LogicsManager condition is TRUE the easY-I sends the acknowledge command to the DC source.

ID	Parameter	CL	Setting range **[Default]**	Description
			[(02.01 LM FALSE & 1) & 1]	**Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
18356	**Present racks**	2	0000hex to 00FFhex **[0001hex]**	This parameter defines which racks are present. In HMI the entry is a hexadecimal value. (Each bit represents one rack.) In ToolKit there are individual check-boxes for every 8 possible racks. For example, if only racks 1, 3, 4 are present, 000Dhex must be configured in the HMI.

4.4.1.3 Configure charging

4.4.1.3.1 General notes

Battery charging is possible in Grid Tie mode. The charging power is determined by a kW setpoint which is transmitted to the inverter via Modbus TCP. For charging to be allowed, certain conditions must be met that set flag "56.18 Charging allowed" . The state of this flag depends on some parameters and measured battery values.

There are two different charging modes possible:

- Charging via negative kW setpoint "Act.power setpoint" ↳ “4.4.1.3.4 Charging activated by negative kW setpoint "Act.power setpoint"” and
- Charging activated by LogicsManagers ↳ 16982, ↳ 16983 and dedictated charging kW setpoint ↳ 16913. ↳ “4.4.1.3.5 Charging activated by LogicsManagers”

In both cases charging is only possible if flag "56.18 Charging allowed" is true. ↳ “4.4.1.3.2 Condition for charging ("56.18 Charging allowed")”

4.4.1.3.2 Condition for charging ("56.18 Charging allowed")

Flag "56.18 Charging allowed" becomes true as soon as certain conditions are met.

There are some fixed conditions:

- No Alarm higher than alarm class B active
- At least one rack is in service (connected)

and some conditions calculated by values from the system corresponding to parameters:

Released

4.4.1.3.3 Charging block diagram

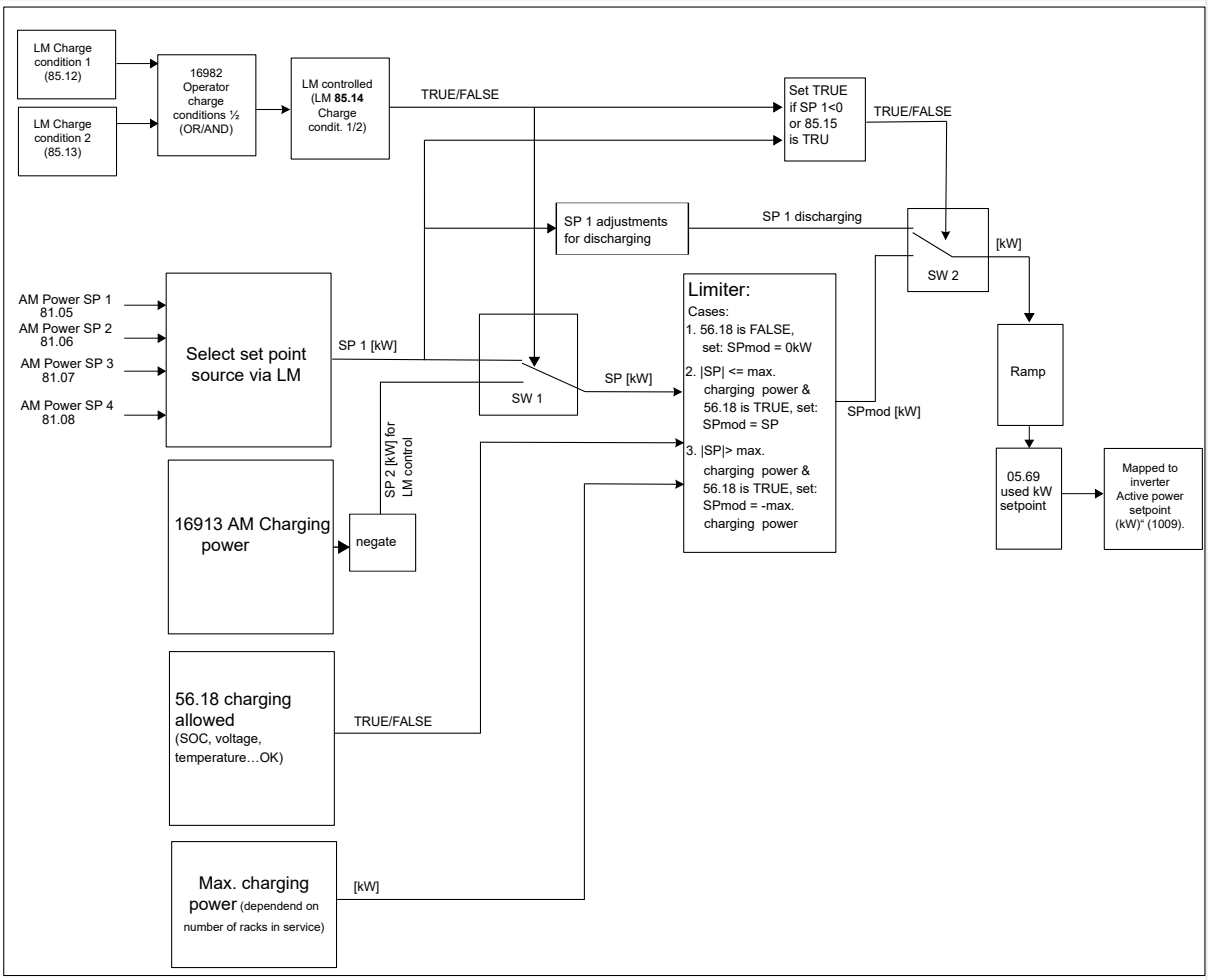


Fig. 138: Charging block diagram

4.4.1.3.4 Charging activated by negative kW setpoint "Act.power setpoint"

In this mode charging is starting if "56.18 Charging allowed" is TRUE and the kW setpoint becomes negative. ("85.14 LM: Charge condit.1/2" is **FALSE**.)

The setpoint is defined by "Act.power setpoint" (according to AnalogManagers e.g. ↳ 5540 and LogicsManagers e.g. ↳ 12919).

Charging procedure: (refer to "Charging block diagram")

- As long as selected kW setpoint "SP 1" is positive, "SP 1 discharging" will be passed to the inverter. (SW 1 is in position "SP 1", SW 2 is in position "SP 1 discharging".) The unit is **discharging** the battery.
- If selected kW setpoint "SP 1" becomes negative, SW 2 switches in position "SPmod" and SW 1 stays in position "SP 1".

  SPmod "05.69 Used P setp. [kW]" will be ramped (with 10 kW/s) to SP which is equal (negative) SP 1 in this case. The unit is **charging** the battery.

Released

- If selected kW setpoint "SP 1" becomes positive, SW 2 switches back to position "SP 1" and SW 1 stays in position "SP 1".

  SPmod "05.69 Used P setp. [kW]" will be ramped (with 10 kW/s) to SP which is equal (positive) SP 1 in this case. The unit is **charging** the battery.

The "Limiter" takes care that active setpoint not become negative if "56.18 Charging allowed" is FALSE and that negative setpoint not exceed "Max. charging power."

4.4.1.3.5 Charging activated by LogicsManagers

In this mode charging is starting if "56.18 Charging allowed" is TRUE, "85.14 LM: Charge condit.1/2" (↳ 16987) is **TRUE** and value of "AM Charging power [kW]" (↳ 16913) is higher than 0 kW.

Charging procedure: (refer to "Charging block diagram")

- As long as "85.14 LM: Charge condit.1/2" is FALSE and selected kW setpoint "SP 1" is positive, "SP 1 discharging" will be passed to the inverter. (SW 1 is in position "SP 1", SW 2 is in position "SP 1 discharging".) The unit is **discharging** the battery.
- If "85.14 LM: Charge condit.1/2" becomes TRUE, SW 1 switches to position SP 2 and SW 2 switches to position "SPmod".

  SPmod "05.69 Used P setp. [kW]" will be ramped (with 10 kW/s) to SP which is equal SP 2 in this case. The unit is **charging** the battery.
- If "85.14 LM: Charge condit.1/2" becomes FALSE and selected kW setpoint "SP 1" is positive, SW 2 switches back to position "SP 1" and SW 1 back to position "SP 1".

  SPmod "05.69 Used P setp. [kW]" will be ramped (with 10 kW/s) to SP which is equal (positive) SP 1 in this case. The unit is **charging** the battery.

The "Limiter" takes care that active setpoint not become negative if "56.18 Charging allowed" is FALSE and that negative setpoint not exceed "Max. charging power."

4.4.1.3.6 Parameter

Navigate to [Parameter / Configuration / Configure application / Config. Inverter/DC source / Configure charging].

ID	Parameter	CL	Setting range [Default]	Description
16951	**SOC charge maximum**	2	0.0 to 100 % **[90.0]**	"56.18 Charging allowed" is FALSE if SOC is higher than configure here.
16952	**Max.charge voltage**	2	0.0 to 1500 V **[940.0]**	"56.18 Charging allowed" is FALSE if service voltage is higher than configure here.
16953	**Max.charge cell voltage**	2	0 to 9999 mV **[4100]**	56.18 Charging allowed" is FALSE if cell voltage is higher than configure here.

Released

ID	Parameter	CL	Setting range [Default]	Description
16989	**Min.charge cell voltage**	2	0 to 5000 mV **[3200]**	56.18 Charging allowed" is FALSE if cell voltage is lower than configure here.
16990	**Max. charge cell temp.**	2	0.0 to 100 °C **[40]**	"56.18 Charging allowed" is FALSE if cell temperature is higher than configure here.
16991	**Min. charge cell temp.**	2	0.0 to 100 °C **[0]**	"56.18 Charging allowed" is FALSE if cell temperature is lower than configure here.
16988	**SOC charge threshold**	2	0.0 to 100 % **[90]**	This parameter defines the SOC threshold for charging. If the SOC is higher than configured here, "56.18 Charging allowed" remains false. But if "56.18 Charging allowed has become TRUE, this parameter does not care anymore until other parameters do not match anymore. Note: This is because SOC increases during charging.
16992	**Charge voltage threshold**	2	0.0 to 1500 V **[900]**	This parameter defines the voltage threshold for charging. If the service voltage is higher than configured here, "56.18 Charging allowed" remains false. But if "56.18 Charging allowed" has become TRUE, this parameter does not care anymore until other parameters do not match anymore. Note: This is because voltage increases during charging.
16987	**Operator charg. conditions 1/2**	2	**[AND]** OR	This parameter determines whether the results of the two LogicsManager "Charging conditions 1" and "Charging conditions 2" are linked with "AND" or "OR" to "85.14 LM: Charge condit.1/2".

ID	Parameter	CL	Setting range [Default]	Description
16982	**Charging conditions 1**	2	Determined by LogicsManager 85.12 **[(02.01 LM FALSE & 1) & 1]**	If the conditions are fullfilled 85.12 LM: Charge condit. 1 becomes TRUE. For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
16983	**Charging conditions 2**	2	Determined by LogicsManager 85.13 **[(02.01 LM FALSE & 1) & 1]**	If the conditions are fullfilled 85.13 LM: Charge condit. 2 becomes TRUE.
16913	**AM Charging power [kW]**	2	Determined by AnalogManager 80.02: **[A1 = 10.01 ZERO]**	If "85.14 LM: Charge condit.1/2" is TRUE, this AnalogManager defines the kW setpoint for charging which is passed to the inverter. Note: A positive value must be entered here. (But it will be passed as negative value to the inverter.)

4.4.1.4 Configure balancing

4.4.1.4.1 General notes

Before some racks were connected together (brought in service) it must be checked whether the racks are basically available, that means that they have no alarm. are at a similar voltage level. Furthermore, the racks must be at a similar voltage level. The aim of rack balancing is to bring the voltages and SOC of the racks to the voltage level within a configurable tolerance. This is done by connecting the racks in a defined order.

4.4.1.4.2 Function

Basically the easY-I checks some conditions to connect a rack. If these conditions are fulfilled the "Connecting enabled" flag becomes TRUE. This information is passed to the BMS via Modbus in order to connect the corresponding rack.

Every rack must be recognized as "Rack ok" before it can the "Connecting enabled" flag by the easy-I. For this the following conditions must be fulfilled:

- Rack must be defined as present (according to "Present racks" ↳ 18356)
- Rack has no protection flag active

- Rack Cell voltage is in range (according to "Max. cell voltage" 18359 and "Min. cell voltage " 18360)
- Rack voltage is in range (according to "Max. voltage deviation" 18357)
- Rack SOC is in range (according to "Max. SOC deviation" 18358)



If there is no rack connected, the voltage and SOC of the rack with the highest or lowest voltage (according to LM 18362) will be used as reference. If there is at least one rack connected, the service voltage and SOC will be used as reference.

The service voltage and service SOC is the resulting of all racks which are connected, so the values will change according to the connected racks and during charging and discharging.

In the following descriptions of the sequences, it is assumed that all racks present have no alarm and that the cell voltages are in the specified range. The sequence in which the racks are connected depends on LM "Rack with highest volt. first" 18362 as well as the voltage and SOC values.

Balancing starts as soon as "56.19 Connect DC source" is active.

Sequence for balancing (connecting) racks:

- **Discharging**: LM "Rack with highest volt. first" is **TRUE** 18362
  - Rack with the highest voltage will get "Rack enabled" at first. (If there are racks with the same voltage, rack with the lowest rack number will be connected first.) If the BMS has connected this rack , the voltage of this rack is taken as service voltage and is used as reference.
  - If there is another rack in range ("Rack ok") it gets "Connecting enabled" too after the "Staggering time (balancing)" 18361). If the BMS has connected this rack too, the resulting voltage of these 2 racks is taken as service voltage and is used as reference.
  - After some time of discharging the service voltage has decreased so much that possibly another rack is now in range and gets "Rack ok". After the "Staggering time (balancing)" it gets "Connecting enabled". If the BMS has connected this rack too, the resulting voltage of these 3 racks is taken as service voltage and is used as reference.
  - When other racks come into range it goes like this.
- **Charging**: LM "Rack with highest volt. first" is **FALSE** 18362
  - Rack with the lowest voltage will get "Rack enabled" at first. (If there are racks with the same voltage, rack with the lowest rack number will be connected first.) If the BMS has connected this rack , the voltage of this rack is taken as service voltage and is used as reference.
  - If there is another rack in range ("Rack ok") it gets "Connecting enabled" too after the "Staggering time (balancing)" 18361). If the BMS has connected this rack too, the resulting voltage of these 2 racks is taken as service voltage and is used as reference.
  - After some time of charging the service voltage has increased so much that possibly another rack is now in range and gets "Rack ok". After the "Staggering time (balancing)" it gets "Connecting enabled". If the BMS has connected this

rack too, the resulting voltage of these 3 racks is taken as service voltage and is used as reference.

- When other racks come into range it goes like this.

If "56.19 Connect DC source" becomes inactive, "Connecting enabled" will be taken back.



The final instance for connecting and disconnecting is the BMS itself.

4.4.1.4.3 Indication

The rack balancing status is indicated at ToolKit at Configure balancing:

[Parameter / Configuration / Configure application / Config. Inverter/DC source / Configure balancing]

and at STATUS MENU

[STATUS MENU / Measured values / DC Source]

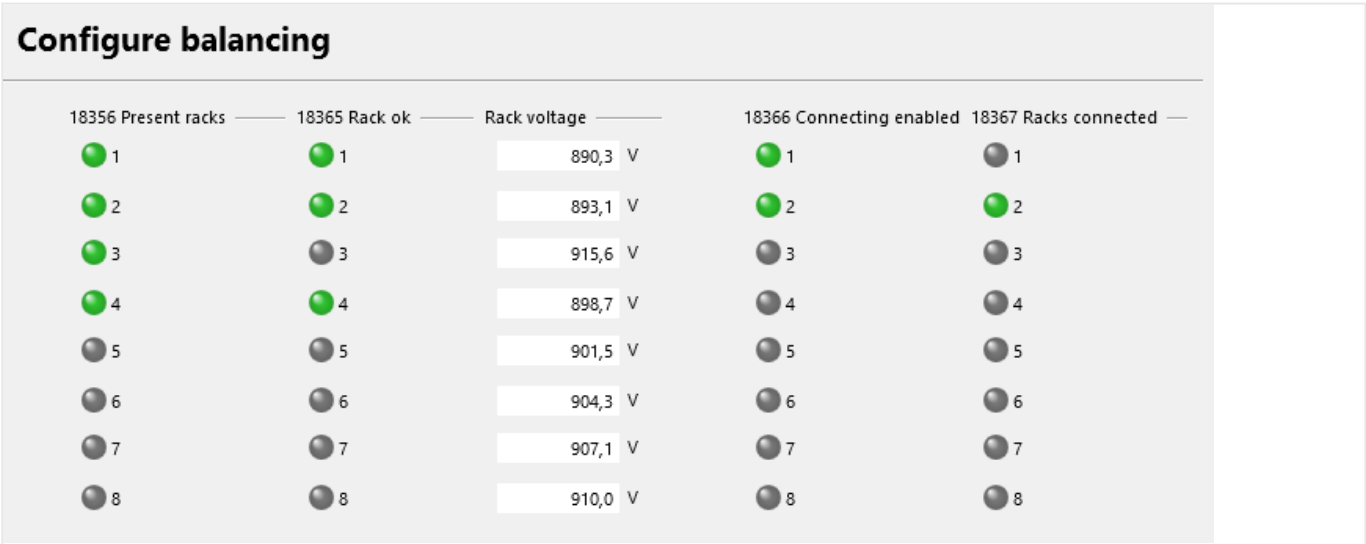


Fig. 139: Example of rack balancing states

The image above shows an example for a balancing state:

- Racks 1 to 4 are present
- Racks 1, 2, 4 are OK. Rack 3 is not OK. (Possibly because of an alarm or because some values are not in the defined range.)
- Racks 1 and 2 are enabled for connecting. (The easY-I transmits the command for connecting them via Modbus TCP to the BMS.)
- Rack 2 is already connected (This is the feedback from the BMS.)

Released

4.4.1.4.4 Parameter

Navigate to [Parameter / Configuration / Configure application / Config. Inverter/DC source / Configure balancing].

ID	Parameter	CL	Setting range **[Default]**	Description
18357	**Max. voltage deviation**	2	0.0 to 100 % **[5]**	This parameter defines the max. voltage deviation to indicate "Rack ok". Connecting a rack is only possible if the voltage of the rack is in this range. Note: If no rack connected, the value is related to the voltage of the rack with the highest or lowest voltage according to LM 18362. If at least one rack is connected, it is related to the service voltage.
18358	**Max. SOC deviation**	2	0 to 100 % **[5]**	This parameter defines the max. SOC deviation to indicate "Rack ok". Connecting a rack is only possible if the SOC of the rack is in this range. Note: If no rack connected, the value is related to the voltage of the rack with the highest or lowest SOC according to LM 18362. If at least one rack is connected, it is related to the service SOC.
18359	**Max. cell voltage**	2	3000 to 5000 mV **[4200]**	This parameter defines the max. cell voltage to indicate "Rack ok". Connecting a rack is only possible if the voltage of the rack is lower or same.
18360	**Min. cell voltage**	2	2000 to 4000 mV **[3200]**	This parameter defines the min. cell voltage to indicate "Rack ok". Connecting a rack is only possible if the voltage of the rack is higher or same.
18361	**Staggering time (balancing)**	2	0 to 999 s **[2]**	This parameter defines the time between connecting the racks.

ID	Parameter	CL	Setting range [Default]	Description
18362	**Rack with highest volt. first**	2	Determined by LogicsManager 85.15 **[(02.01 LM FALSE & 1) & 1]**	If no rack is connected at all, it must be decided which rack should be connected at first. If the system shall discharge, the rack with the highest value shall be connected first (this LM must be TRUE), if charging the rack with the lowest value shall be connected first (this LM must be False).
				For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

4.4.1.4.5 Index description

The list below contains the index numbers of the data necessary for balancing. The corresponding data of the BMS must be mapped to these indices.

Index	Value	Comment
Rack 1		
18370	Rack 1 - Voltage [V]	Rack voltage
18371	Rack 1 - SOC [%]	Rack State of Charge
18372	Rack 1 - Protection #4	Rack binary State / Alarms #4
18373	Rack 1 - Protection #3	Rack binary State / Alarms #3
18374	Rack 1 - Protection #2	Rack binary State / Alarms #2
18375	Rack 1 - Protection #1	Rack binary State / Alarms #1
18376	Rack 1 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18377	Rack 1 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18378	Rack 1 - Rack mode	Mode of the rack
Rack 2		
18380	Rack 2 - Voltage [V]	Rack voltage
18381	Rack 2 - SOC [%]	Rack State of Charge
18382	Rack 2 - Protection #4	Rack binary State / Alarms #4
18383	Rack 2 - Protection #3	Rack binary State / Alarms #3
18384	Rack 2 - Protection #2	Rack binary State / Alarms #2

Released

Index	Value	Comment
18385	Rack 2 - Protection #1	Rack binary State / Alarms #1
18386	Rack 2 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18387	Rack 2 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18388	Rack 2 - Rack mode	Mode of the rack
Rack 3		
18390	Rack 3 - Voltage [V]	Rack voltage
18391	Rack 3 - SOC [%]	Rack State of Charge
18392	Rack 3 - Protection #4	Rack binary State / Alarms #4
18393	Rack 3 - Protection #3	Rack binary State / Alarms #3
18394	Rack 3 - Protection #2	Rack binary State / Alarms #2
18395	Rack 3 - Protection #1	Rack binary State / Alarms #1
18396	Rack 3 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18397	Rack 3 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18398	Rack 3 - Rack mode	Mode of the rack
Rack 4		
18400	Rack 4 - Voltage [V]	Rack voltage
18401	Rack 4 - SOC [%]	Rack State of Charge
18402	Rack 4 - Protection #4	Rack binary State / Alarms #4
18403	Rack 4 - Protection #3	Rack binary State / Alarms #3
18404	Rack 4 - Protection #2	Rack binary State / Alarms #2
18405	Rack 4 - Protection #1	Rack binary State / Alarms #1
18406	Rack 4 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18407	Rack 4 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18408	Rack 4 - Rack mode	Mode of the rack
Rack 5		
18410	Rack 5 - Voltage [V]	Rack voltage
18411	Rack 5 - SOC [%]	Rack State of Charge
18412	Rack 5 - Protection #4	Rack binary State / Alarms #4
18413	Rack 5 - Protection #3	Rack binary State / Alarms #3
18414	Rack 5 - Protection #2	Rack binary State / Alarms #2
18415	Rack 5 - Protection #1	Rack binary State / Alarms #1
18416	Rack 5 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18417	Rack 5 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18418	Rack 5 - Rack mode	Mode of the rack
Rack 6		
18420	Rack 6 - Voltage [V]	Rack voltage

Index	Value	Comment
18421	Rack 6 - SOC [%]	Rack State of Charge
18422	Rack 6 - Protection #4	Rack binary State / Alarms #4
18423	Rack 6 - Protection #3	Rack binary State / Alarms #3
18424	Rack 6 - Protection #2	Rack binary State / Alarms #2
18425	Rack 6 - Protection #1	Rack binary State / Alarms #1
18426	Rack 6 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18427	Rack 6 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18428	Rack 6 - Rack mode	Mode of the rack
Rack 7		
18430	Rack 7 - Voltage [V]	Rack voltage
18431	Rack 7 - SOC [%]	Rack State of Charge
18432	Rack 7 - Protection #4	Rack binary State / Alarms #4
18433	Rack 7 - Protection #3	Rack binary State / Alarms #3
18434	Rack 7 - Protection #2	Rack binary State / Alarms #2
18435	Rack 7 - Protection #1	Rack binary State / Alarms #1
18436	Rack 7 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18437	Rack 7 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18438	Rack 7 - Rack mode	Mode of the rack
Rack 8		
18440	Rack 8 - Voltage [V]	Rack voltage
18441	Rack 8 - SOC [%]	Rack State of Charge
18442	Rack 8 - Protection #4	Rack binary State / Alarms #4
18443	Rack 8 - Protection #3	Rack binary State / Alarms #3
18444	Rack 8 - Protection #2	Rack binary State / Alarms #2
18445	Rack 8 - Protection #1	Rack binary State / Alarms #1
18446	Rack 8 - Max. Cell voltage [mV]	The maximal cell voltage of the rack
18447	Rack 8 - Min. Cell voltage [mV]	The minimal cell voltage of the rack
18448	Rack 8 - Rack mode	Mode of the rack

4.4.2 Inputs And Outputs

4.4.2.1 Function Of Inputs And Outputs

4.4.2.1.1 Discrete Inputs

The discrete inputs may be grouped into two categories:

Released

- Programmable
  - The discrete input has been assigned a default function using either the LogicsManager or preconfigured alarms such as "emergency stop".
  - The following sections describe how these functions are assigned.
  - The function of a discrete input can be changed if required.
  - The following description of the inputs, labeled with "programmable", refers to the preconfiguration.
- Fixed
  - The discrete input has a specific function that cannot be changed depending upon the configured application mode.

Input	Type/Preset	Description
Discrete input [DI 01]	Programmable Preconfigured to "Emergency STOP"	This discrete input is configured as alarm class F and is always enabled.
Discrete input [DI 02]	Programmable Preconfigured to "Startrequest in AUTO"	Enabled in the AUTOMATIC operation mode This discrete input is configured as a Control input in the alarm class and is always enabled. • **Energized** If the unit is in the AUTOMATIC operation mode (selected with the operating mode selection push button on the front panel) the controlled system is started automatically. • **De-energized** The system is stopped.
Discrete input [DI 03]	Programmable Preconfigured to "DC breaker is closed"	The controller utilizes the DC breaker reply contacts into this discrete input to reflect the state of the DC breaker. This discrete input must be energized to show when the breaker is closed and de-energized to show when the breaker is open. This discrete input is configured as a Control input in the alarm class and is always enabled.
Discrete input [DI 04]	Programmable "Discrete Input 4"	Can be set-up with description, delay, operation, alarm class, self acknowledgment, and enable.

Input	Type/Preset	Description
Discrete input [DI 05]	Programmable Preconfigured to "External acknowledgment"	This discrete input is used as a remote acknowledgment for alarms. The input is normally de-energized. When an alarm is to be acknowledged the input is energized. The first time an alarm in acknowledged, the centralized alarm/horn is silenced. When the input is energized a second time, all alarms, which are no longer active, will be acknowledged. This discrete input is configured as a Control input in the alarm class and is always enabled.
Discrete input [DI 06]	Programmable Preconfigured to "Release MCB"	Only applicable for application mode A04 This discrete input is configured as a Control input in the alarm class and is always enabled. • **Energized** The MCB is enabled and closure of the breaker is permitted. • **De-energized** The MCB is not enabled and closure of the breaker is not permitted. This function permits a supervisory control (i.e. a PLC) to allow the closure of the MCB by the genset control.
Discrete input [DI 07]	Fixed to "MCB open reply"	Only applicable for application mode A04 This input implements negative function logic. The controller utilizes the CB auxiliary (B) contacts into this discrete input to reflect the state of the MCB. This discrete input must be energized to show when the breaker is open and de-energized to show when the MCB is closed. The status of the MCB is displayed on the screen. This input is usually used in all breaker modes to change between frequency/voltage and power/power factor control (refer to note below).
Discrete input [DI 08]	Fixed to "GCB open reply"	Only applicable for application modes A03 and A04 This input implements negative function logic. The controller utilizes the CB auxiliary (B) contacts into this discrete input to reflect the

Released

Input	Type/Preset	Description
		state of the GCB. This discrete input must be energized to show when the breaker is open and de-energized to show when the GCB is closed. The status of the GCB is displayed on the screen. This input is usually used in all breaker modes to enable reverse power protection, overload MOP protection, mains decoupling and the activation of the load sharing (refer to note below).
Discrete input [DI 09]	Programmable Fixed to "Reply: GGB open" if GGB control is activated	Only applicable for application mode A05, A06 and A09 This input implements negative function logic. The controller utilizes the CB auxiliary (B) contacts into this discrete input to reflect the state of the GGB. This discrete input must be energized to show when the breaker is open and de-energized to show when the GGB is closed. The status of the GGB is displayed on the screen. This input is usually used in all breaker modes to change between frequency/voltage and power/power factor control (refer to note below).
Discrete input [DI 10]	Programmable Fixed to "Load busbar is dead" if GGB control is activated	Only applicable for application mode A05, A06 and A09 The controller utilizes an external voltage relay output to reflect the condition of the load busbar. The discrete input must be energized to show the load busbar is dead. The status of the load busbar is displayed on the screen.
Discrete input [DI 11]	Programmable "Discrete Input 11"	Can be set-up with description, delay, operation, alarm class, self acknowledgment, and enable.
Discrete input [DI 12]	Programmable Preconfigured to reply "Neutral contactor is closed" if neutral interlocking is enabled.	The neutral contactor logic will take the neutral contactor as closed if this DI is energized.

The genset control usually decides whether it performs voltage and frequency (V/f) control or power and power factor (P/PF) control using the reply of the circuit breakers, i.e. the discrete inputs DI 7 and DI 8.

- If the GCB is open, only V/f control is performed
- If the GCB is closed and the MCB is open, V/f control as well as active and reactive power load sharing is performed
- If the GCB is closed and the MCB is closed, P/PF control or import power control with load sharing and PF control is performed.

A different configuration is possible and depends on the following LogicsManager (parameter 12940 "P control" and parameter 12941 "Q control")

Alarm inputs

All discrete inputs, which are not assigned to a function, can be used as alarm or control inputs. These discrete inputs can be freely configured as such (“4.4.2.2 Discrete Inputs”).

4.4.2.1.2 Discrete Outputs

- Programmable
  - The discrete output has been assigned a default function using the LogicsManager.
  - The following text describes how these functions are assigned using the LogicsManager.
  - It is possible to change the function of the discrete output if required.
  - The following description of the outputs, labeled with "programmable", refers to the preconfiguration.
- Fixed
  - The discrete output has a specific function that cannot be changed depending upon the configured application mode.
  - The discrete output cannot be viewed or changed in the LogicsManager.
  - However, the discrete output may be programmable in some application modes.

The discrete outputs can be "programmable" or "fixed" depending on the application mode (parameter 3444).

For information on the function of the discrete outputs depending on the configured application mode refer to “4.4.2.3 Discrete Outputs (LogicsManager)”.

Released

CAUTION!

Uncontrolled operation due to faulty configuration

The discrete output "Ready for operation" must be wired in series with an emergency stop function.

This means that it must be ensured that the generator circuit breaker is opened and the system is stopped if this discrete output is de-energized.

If the availability of the plant is important, this fault must be signaled independently from the unit.

CAUTION!

Uncontrolled operation due to unknown configuration

The circuit breaker commands must be checked before every commissioning because the relays can be used for different applications and can be assigned to various functions.

- Make sure that all relay outputs are configured correctly.

Output	Type/Preset	Description
Relay output [R 01]	Programmable Fixed to "Ready for operation" **CAUTION!** Only relay [R 01] has an inverse logic. The relay opens (all other relays close), if the logical output of the LogicsManager becomes TRUE.	This discrete output is used to ensure that the internal functions of the controller are operating properly. It is possible to configure additional events, which cause the contacts of this discrete output to open, using the LogicsManager.
Relay output [R 02]	Programmable Preconfigured to "Centralized alarm (horn)"	When a centralized alarm is issued, this discrete output is enabled. A horn or a buzzer maybe activated via this discrete output. Pressing the button with the "✔" symbol will acknowledge the centralized alarm and disable this discrete output. The discrete output will re-enable if a new fault condition resulting in a centralized alarm occurs. The centralized alarm is initiated by class B alarms or higher.
Relay output [R 03]	Programmable	Not preconfigured.
Relay output [R 04]	Programmable	Not preconfigured.
Relay output [R 05]	Programmable	Not preconfigured.
Relay output [R 06]	Fixed to "Command: close GCB"	Only applicable for application modes A03 and A04. The "Command: close GCB" output issues the signal for the GCB to close. This relay may be configured as an impulse or steady output signal depending on parameter 3414. **Impulse** If the output is configured as "Impulse", the discrete output will enable for the time configured in parameter 3416). An external holding coil and sealing contacts must be

Output	Type/Preset	Description
		installed into the GCB closing circuit if this discrete output is configured for an impulse output signal. **Steady** If the relay is configured as "Steady", the relay will energize and remain enabled as long as the discrete input "Reply GCB" remains de-energized and the generator and busbar voltages are identical. If a class C or higher alarm occurs, this discrete will disable and the GCB will open immediately.
Relay output [R 07]	Fixed to "Command: open GCB" if parameter 3403 "GCB open relay" is not configured to "Not used"	Not applicable for application mode **A01** The parameter ↳ 3403 defines how this relay functions. • If this output is configured as "N.O.", the relay contacts close resulting in the GCB opening circuit energizing. • If this output is configured as "N.C.", the relay contacts open resulting in the GCB opening circuit de-energizing. • If this output is configured as "Not used", this relay is freely configurable. The LogicsManager for Relay 7 is preconfigured to "04.70 Opening GCB active" (This pre-configuration is similar to the "N.O." logic). **Application mode A02** The open GCB command remains enabled until the GCB is manually closed and the discrete input "Reply GCB" is energized. The open GCB command will be issued when a fault condition or a shut down occurs. **Application mode A03** or **A04** The controller enables the open GCB command when the GCB is to be opened for switching operations. If the discrete input "Reply GCB" is energized, the open GCB command will be disabled.
Relay output [R 08]	Fixed to "Command: close MCB"	Only applicable for application mode **A04**. The discrete output "Command: close MCB" is an impulse output signal. This discrete output is enabled for the time configured in parameter ↳ 3417. An external holding coil and sealing contacts must be utilized with the MCB closing circuit.
Relay output [R 09]	Fixed to "Command: open MCB" if parameter 3398 "MCB open relay" is not configured to "Not used"	Only applicable for application mode **A04**. The parameter ↳ 3398 defines how this relay functions. • If this output is configured as "N.O.", the controller enables this discrete output when the MCB is to be opened for switching operations. If the discrete input "Reply MCB" is energized, the discrete output "Command: open MCB" is disabled. • If this output is configured as "Not used", this relay is freely configurable. The LogicsManager for Relay 9 is preconfigured to "04.22 Opening MCB active" (This pre-configuration is similar to the "N.O." logic).
Relay output [R 10]	Programmable Fixed to"Command: close GGB" if GGB is activated otherwise configurable.	Only applicable for application mode **A05**, **A06** and **A09**. The discrete output "Command: close GGB" is an impulse output signal.

Released

Output	Type/Preset	Description
		This discrete output is enabled for the time configured in parameter 5726. An external holding coil and sealing contacts must be utilized with the GGB closing circuit.
Relay output [R 11]	Programmable Fixed to"Command: open GGB" if GGB is activated and if parameter 3471 "GGB open relay" is not configured to "Not used"(otherwise preconfigured to "Alarm class A and B")	Only applicable for application mode A05, A06 and A09. The parameter 3471 defines how this relay functions. • If this output is configured as "N.O.", the controller enables this discrete output when the GGB is to be opened for switching operations. If the discrete input "Reply GGB" is energized, the discrete output "Command: open GGB" is disabled. • If this output is configured as "Not used", this relay is freely configurable. The LogicsManager configuration "04.25 Opening GGB active" is similar to the "N.O." logic). Preconfiguration "Alarm class A and B": This discrete output is enabled when a warning alarm (class A or B alarm) is issued (“9.6.4 Alarm Classes”). After all warning alarms have been acknowledged, this discrete output will disable.
Relay output [R 12]	Programmable Preconfigured to "Shutdown alarm"	This discrete output is enabled when a shutdown alarm (class C or higher alarm; refer to “9.6.4 Alarm Classes” for more information) is issued. After all shutdown alarms have been acknowledged, this discrete output will disable.
LogicsManager of DO xx / Relay output [R xx]:		All discrete outputs not assigned to a defined function, may be freely configured via the LogicsManager.

4.4.2.2 Discrete Inputs

General notes

Discrete inputs may be configured to normally open (N.O.) or normally closed (N.C.) states.




Fig. 140: Discrete inputs - alarm/control inputs - operation logic (state N.O.)

In the state N.O.:

- No potential is present during normal operation.
- If an alarm is issued or control operation is performed, the input is energized.




Fig. 141: Discrete inputs - alarm/control inputs - operation logic (state N.C.)

In the state N.C.:

- A potential is continuously present during normal operation
- If an alarm is issued or control operation is performed, the input is de-energized.

All reply messages from breakers are evaluated as N.C.

Alarm inputs may also be configured as control inputs and then be used as command variables in the LogicsManager.

The discrete inputs 1 to 6 are pre-configured to various functions and differ in their default values. However, they may still be configured freely.

The discrete inputs 7 & 8 are always used for the circuit breaker replies and cannot be configured.

If a discrete input has been configured with a shut-down alarm that has been enabled to self-acknowledge, and has been configured as delayed monitoring according to 16971 the following scenario may happen:

- The discrete input shuts down the inverter because of its alarm class.
- Due to the inverter stopping, all delayed alarms are ignored.
- The alarm class is acknowledged automatically.
- The alarm will self-acknowledge and clear the fault message that shut the inverter down. This prevents the fault from being analyzed.
- After a short delay, the inverter will restart.
- After the monitoring delay time 16973 expires, the fault that originally shut down the inverter will do so again. This cycle will continue to repeat until corrected.

Internal discrete inputs - terminal assignment

Number	Terminal	Assignment (all application modes)
[DI 01]	67	Pre-configured for Alarm input 'Emergency Stop'
[DI 02]	68	Pre-configured for Control input 'Start request in AUTO'
[DI 03]	69	Pre-configured for 'DC breaker is closed'
[DI 04]	70	Pre-configured for Alarm input

Released

Number	Terminal	Assignment (all application modes)
[DI 05]	71	Pre-configured for Control input 'External acknowledgment'
[DI 06]	72	Pre-configured for Control input 'Release MCB'
[DI 07]	73	Reply MCB
[DI 08]	74	Reply GCB
[DI 09]	75	Pre-configured for 'Reply GGB open', if application mode contains a GGB control.
[DI 10]	76	Pre-configured for ''Load busbar is dead'', if application mode contains a GGB control.
[DI 11]	77	Pre-configured for Alarm input
[DI 12]	78	Pre-configured for reply 'Neutral contactor is closed', if neutral interlocking is enabled.

Parameter IDs

The following parameters are used to configure the discrete inputs 1 through 12. The parameter IDs refer to discrete input 1.

- Refer to Table 45 for the parameter IDs of the parameters DI 2 through DI 12(23).

	DI 1	DI 2	DI 3	DI 4	DI 5	DI 6	DI 7	DI 8	DI 9	DI 10	DI 11	DI 12
							MCB open only	GCB open only				
Description	1400	1410	1420	1430	1440	1450	1460		1480	1488	1496	1504
Delay	1200	1220	1240	1260	1280	1300	1320		1360	1380	1205	1225
Operation	1201	1221	1241	1261	1281	1301	1321		1361	1381	1206	1226
Alarm class	1202	1222	1242	1262	1282	1302	1322		1362	1382	1207	1227
Self acknowledged	1204	1224	1244	1264	1284	1304	1324		1364	1384	1209	1229
Enabled	1203	1223	1243	1263	1283	1303	1323		1363	1383	1208	1228

Table 45: Discrete inputs - parameter IDs

ID	Parameter	CL	Setting range [Default]	Description
1400	**Description**	2	user defined (up to 39 characters) for default see Table	Tkit If the discrete input is enabled with alarm class, this text is displayed on the control unit screen.

ID	Parameter	CL	Setting range [Default]	Description
				The event history will store this text message as well.
				Notes This parameter may only be configured using ToolKit. 19 characters are best for HMI readability - text strings with 20 and more characters but without a blank in between are NOT visible as headline on DI {x} detail screen. DI selection screen on HMI/display works fine with up to 30 characters; others are overwritten by mandatory screen symbols. Please verify the length on the display for best view. If the DI is used as control input with the alarm class "Control", you may enter here its function (e.g. external acknowledgment) for a better overview within the configuration.
1200	**Delay**	2	0.08 to 650.00 s **[0.20 s]**	A delay time in seconds can be assigned to each alarm or control input. The discrete input must be enabled without interruption for the delay time before the unit reacts. If the discrete input is used within the LogicsManager this delay is taken into account as well.
1201	**Operation**	2		The discrete inputs may be operated by an normally open (N.O.) or normally closed (N.C.) contact. The idle circuit current input can be used to monitor for a wire break. A positive or negative voltage polarity referred to the reference point of the DI may be applied.
			[N.O.]	The discrete input is analyzed as "enabled" by energizing the input (normally open).
			N.C.	The discrete input is analyzed as "enabled" by de-energizing the input (normally closed).
1202	**Alarm class**	2		An alarm class may be assigned to the discrete input. The alarm class is executed when the discrete input is enabled.
			Class A, **[Class B]**	Warning alarm classes
			Class C, Class D, Class E, Class F	Shutdown alarm classes

Released

ID	Parameter	CL	Setting range **[Default]**	Description
			Control	Signal to issue a control command only. If "control" has been configured, there will be no entry in the event history and a function out of the LogicsManager (“9.4.1 LogicsManager Overview”) can be assigned to the discrete input.
1204	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
				Notes If the DI is configured with the alarm class "Control", self acknowledgment is always active.
1203	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until delayed monitoring is enabled. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.4.2.3 Discrete Outputs (LogicsManager)

The discrete outputs are controlled via the LogicsManager.



For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

Some outputs are assigned a function according to the application mode (see following table).

Released

Relay		Application mode										
No.	**Ter-min-al**	**None A01**	**GCB open A02**	**GCB A03**	**GCB / MCB A04**	**GCB / GGB A05**	**GCB / GGB / MCB A06**	**GCB / LS5 A07**	**GCB / L-MCB A08**	**GCB / GGB / L-MCB A09**	**GCB / L-GGB A10**	**GCB / L-GGB / L-MCB A11 and A12, A13**
[R 01]	41/42	'Ready for operation'; additionally programmable with LogicsManager **CAUTION!** Only relay [R 01] has an inverse logic. The relay opens (all other relays close), if the logical output of the LogicsManager becomes TRUE.										
[R 02]	43/46	LogicsManager; pre-assigned with 'Centralized alarm (horn)'										
[R 03]	44/46	LogicsManager; not pre-assigned										
[R 04]	45/46	LogicsManager; not pre-assigned										
[R 05]	47/48	LogicsManager; not pre-assigned										
[R 06]	49/50	Logics-Manager	Command: close GCB									
[R 07]	51/52	Logics-Manager	Command: "open GCB" if parameter 3403 "GCB open relay" is not configured to "Not used".									
[R 08]	53/54	LogicsManager			Com-mand: close MCB	Logics-Manager	Com-mand: close MCB	LogicsManager				
[R 09]	55/56	LogicsManager; pre-assigned with 'Mains decoupling'			Com-mand: open MCB if 3398 is not set to "Not used"	Logics-Manager; pre-assigned with 'Mains decoupling'	Com-mand: open MCB if 3398 is not set to "Not used"	LogicsManager; pre-assigned with 'Mains decoupling'				
[R 10]	57/60	LogicsManager; not pre-assigned				Command: close GGB		LogicsManager; not pre-assigned		Com-mand: close GGB	LogicsManager; not pre-assigned	
[R 11]	58/60	LogicsManager; pre-assigned with 'Alarm class A, B active'				Command: open GGB if 3471 is not set to "Not used"		LogicsManager; pre-assigned with 'Alarm class A, B active'		Com-mand: open GGB if 3471 is not set to "Not used"	LogicsManager; pre-assigned with 'Alarm class A, B active'	
[R 12]	59/60	LogicsManager; pre-assigned with 'Alarm class C, D, E, F active'										

Table 46: Internal relay outputs - assignment

Released

CAUTION!

Uncontrolled operation due to faulty configuration

The discrete output "Ready for operation" must be wired in series with an emergency stop function.

This means that it must be ensured that the generator circuit breaker is opened and the system is stopped if this discrete output is de-energized.

If the availability of the plant is important, this fault must be signaled independently from the unit.

ID	Parameter	CL	Setting range [Default]	Description
12580	**Ready for op. OFF** (Ready for operation OFF)	2	Determined by LogicsManager 99.01 **[(0 & 0) & 1]** = 11870	The "Ready for operation" relay is energized by default if the power supply exceeds 8 V. Once the conditions of the Logics-Manager have been fulfilled, the relay will be de-energized. This LogicsManager output may be configured with additional conditions, which may signal a PLC an "out of operation" condition by de-energizing the relay on terminals 41/42, like "shutdown alarm" or no "AUTO mode" present. **Notes** For information on the Logics-Manager and its default settings see “9.4.1 LogicsManager Overview”.
12110 (See ID table below)	**Relay 2** For (pre-defined) function see assignment table above)	2	Determined by LogicsManager 99.02 **[(03.05 Horn & 1) & 1]** = 11871	Once the conditions of the Logics-Manager have been fulfilled, the relay will be energized. **Notes** For information on the Logics-Manager and its default settings see “9.4.1 LogicsManager Overview”.

Parameter IDs

The parameter IDs above refers to relay 2.

- Refer to Table 47 for the parameter IDs of the parameters for relay 3 to relay 12.

Released

	R 1	R 2	R 3	R 4	R 5	R 6	R 7	R 8	R 9	R 10	R 11	R 12
Parameter ID	12580	12110	12310	12320	12130	12140	12150	12160	12170	12180	12560	12590

Table 47: Discrete outputs - relay parameter IDs

4.4.2.4 Analog Inputs

4.4.2.4.1 Analog Inputs (general)

4.4.2.4.1.1 Displayed units

Conversion restricted to ...

The conversions described below are only active for parameters »Unit« of

- analog inputs which units are configured as »°C« or »bar«.

Exact string mandatory

Type in* the »Unit« string carefully!

For example:

- Temperature works with the exact string»°C« only but not with »°c« or »degC« or »° C« ...
- Pressure needs the exact string »bar« only but don't work with »Bar« or »BAR« ... !

*) Parameters »Unit« are:

AI {x} 1034, 1084, ...; external AI{x} 16208, 16218, ...; PID {x} setpoint 7494, 7495, ...; customer screens {x.y} 7692, 7697, ...

ID	Parameter	CL	Setting range [Default]	Description
3630	**Convert bar to psi**	1	**[No]**	The pressure value is displayed in Bar.
			Yes	The pressure value is converted and then displayed in psi.
3631	**Convert °C to °F**	1	**[No]**	The temperature is displayed in °C (Celsius).
			Yes	The temperature is displayed in °F (Fahrenheit).

4.4.2.4.1.2 User Defined Tables A/B (Characteristic Curves Setup)

General notes

The characteristic curves of "Table A" and "Table B" (freely configurable over 9 defined points) are independently configurable and can be used among other predefined curves

for each of the analog inputs. Each point may be scaled to related values measured from the analog input (0 to 2000 Ohms, 0 to 1 V, or 0 to 20 mA), so that the actual display and monitoring reflects the corresponding values (e.g. 200 to 600 kW).

The created characteristic curves can be used for scaling the analog inputs.

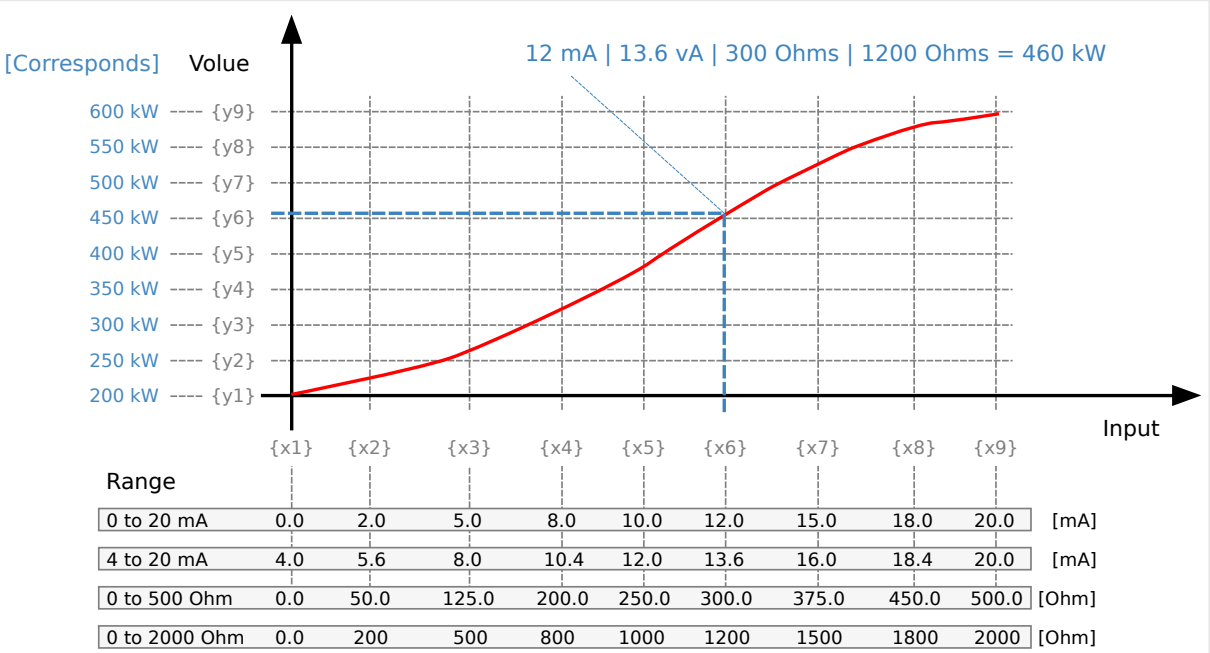


Fig. 142: Characteristic curves (example table)

The X and Y junction may be moved within the range of values and the space between setpoints can be nonuniform.

When configuring the X coordinates, ensure the coordinates always increase in scale continuously.

In the following example the first set of x/y coordinates is correct and the second set of x/y coordinates is wrong:

(correct)									
X-coordinate	0	200	500	800	1000	1200	1500	1800	2000
Y-coordinate	-100	-95	-50	-10	+3	+17	+18	+100	+2000
wrong:									
X-coordinate	0	200	500	800	**400**	900	1500	**1000**	2000
Y-coordinate	-100	-50	-95	+18	+17	+3	-10	+2000	+100

If the first X coordinate is >0, all values smaller than the first X value will be output with the first Y value.

If the last X value is smaller than the maximum of the hardware range, all higher X values will be output with the value of Y9.

All parameters used to configure the characteristic curve follow the samples listed below.

- Refer to “Parameter IDs and default values for all scaling points” for the parameter IDs of the individual parameters for all scaling points of tables 'A' and 'B'.

Scaling points settings

ID	Parameter	CL	Setting range **[Default]**	Description
3560 to 3568 or 3610 to 3618	**Table {A/B} X-value {1..9}**	2	-900000.000 to 900000.000 **[0, … , 20]**	The analog input is assigned to a curve. This parameter defines the actual value assigned to each of the nine points along the X-axis of the total range of the selected hardware for analog input.
				Example If a 0 to 20 mA input is configured and the X1-coordinate = 0, then the value configured for Y1 is output for an input of 0 mA.
3550 to 3558 or 3600 to 3608	**Table {A/B} Y-value {1..9}**	2	-21000000.00 to 21000000.00 **[0, … , 100]**	This parameter defines the Y-coordinate (the displayed and monitored value) at the corresponding X-coordinate.
				Example If a 0 to 20 mA input is configured and the X2-coordinate = 10, then the value configured for the Y2-coordinate is output for an input of 10 mA.

Parameter IDs and default values for all scaling points

Scaling point no.	1	2	3	4	5	6	7	8	9
Table A - X value	3560 **[0]**	3561 **[2.5]**	3562 **[5]**	3563 **[7.5]**	3564 **[10]**	3565 **[12.5]**	3566 **[15]**	3567 **[17.5]**	3568 **[20]**
Table A - Y value	3550 **[0]**	3551 **[10]**	3552 **[20]**	3553 **[30]**	3554 **[45]**	3555 **[60]**	3556 **[70]**	3557 **[85]**	3558 **[100]**
Table B - X value	3610 **[0]**	3611 **[2.5]**	3612 **[5]**	3613 **[7.5]**	3614 **[10]**	3615 **[12.5]**	3616 **[15]**	3617 **[17.5]**	3618 **[20]**
Table B - Y value	3600 **[0]**	3601 **[10]**	3602 **[20]**	3603 **[30]**	3604 **[45]**	3605 **[60]**	3606 **[70]**	3607 **[85]**	3608 **[100]**

Released

4.4.2.4.2 Analog Inputs 1 to 3 (0 to 2000 Ω | 0/4 to 20 m A | 0 to 1 V)

General notes

Monitoring of the analog inputs (overrun/underrun) must be configured manually to the flexible limits (“4.5.5 Flexible Limits”).

ID	Parameter	CL	Setting range [Default]	Description
1025 1075 1125	**Description**	2	user-defined (up to 39 characters) **[Analog input {x}]**	The event history will store this text message and it is also displayed on the visualization screen. If the programmed limit value of the analog input has been reached or exceeded this text is displayed in the control unit screen.
				Notes This parameter may only be configured using ToolKit. 19 characters are best for HMI readability - text strings with 20 and more characters but without a blank in between are NOT visible as headline on AI {x} detail screen. AI selection screen on HMI/display works fine with up to 30 characters; others are overwritten by mandatory screen symbols. The max. number of characters depends on the numbers of Bytes for each character. Please verify the length on the display for best view.
1000 1050 1100	**Type**	2		According to the following parameters different measuring ranges are possible at the analog inputs.
			[Off]	The analog input is switched off.
			VDO 5bar	The value of the analog input is interpreted with the VDO characteristics 0 to 5 bar.
			VDO 10bar	The value of the analog input is interpreted with the VDO characteristics 0 to 10 bar.
			VDO 150°C	The value of the analog input is interpreted with the VDO characteristics 50 to 150 °C.
			VDO 120°C	The value of the analog input is interpreted with the VDO characteristics 40 to 120 °C.

ID	Parameter	CL	Setting range [Default]	Description
			Pt100	The value of the analog input is interpreted with a Pt100 characteristic.
			Pt1000	The value of the analog input is interpreted with a Pt1000 characteristic.
			AB 94099	The value of the analog input is interpreted with a AB 94099 characteristic.
			Linear	Each analog input may be assigned to a linear characteristic curve, which can be only used for the respective defined input [T{x}] (x = 1 to 3). The minimum value refers to the value configured as "Sender value at display min." (parameter 1039, 1089 or 1139). The maximum value refers to the value configured as "Sender value at display max." (parameter 1040, 1090 or 1140).
			Table A Table B	The analog input is assigned to a characteristic curve which is defined over 9 points (stored in a table). Two independent tables (table A and table B) may be allocated to the analog inputs.
				Notes Points of these tables must be programmed into the control unit before use. For the characteristic curves of the inputs refer to "9.2.2 VDO Inputs Characteristics".
1001 1051 1101	**User defined min display value** (User defined minimum display value)	2	-21000000.00 to 21000000.00 **[0.00]**	The value (y-axis) to be displayed for the minimum of the input range must be entered here.
				Notes This parameter is only visible if the parameter "Type" (1000/ 1050/1100) is configured to "Linear".
1002 1052 1102	**User defined max display value** (User defined maximum display value)	2	-21000000.00 to 21000000.00 **[2000.00]**	The value (y-axis) to be displayed for the maximum of the input range must be entered here.
				Notes This parameter is only visible if the parameter "Type" (1000/ 1050/1100) is configured to "Linear".
1039 1089	**Sender value at display min.**	2	0.000 to 2000.000 **[0.000]**	The value (x-axis) of the configured input range, which shall correspond with the minimum value configured for the display, must be entered here.

Released

ID	Parameter	CL	Setting range [Default]	Description
1139	(Sender value at display minimum)			This specifies the lower limit of the hardware range to be measured. **Example** If the input range is 0 to 20 mA and the value configured here is 4, an analog input value of 4 mA would correspond with the minimum value configured for the display. **Notes** This parameter is only visible if the parameter "Type" (↳ 1000/ ↳ 1050/↳ 1100) is configured to "Linear".
1040 1090 1140	**Sender value at display max.** (Sender value at display maximum)	2	0.000 to 2000.000 **[2000.000]**	The value (y-axis) of the configured input range, which shall correspond with the maximum value configured for the display, must be entered here. This specifies the upper limit of the hardware range to be measured. **Example** If the input range is 0 to 20 mA and the value configured here is 20, an analog input value of 20 mA would correspond with the maximum value configured for the display. **Notes** This parameter is only visible if the parameter "Type" (↳ 1000/ ↳ 1050/↳ 1100) is configured to "Linear".

Table 48: Analog Inputs 1 to 3 settings

☼ **Example: Hardware range 4 to 20 mA mapped to 0 to 1000 display value**

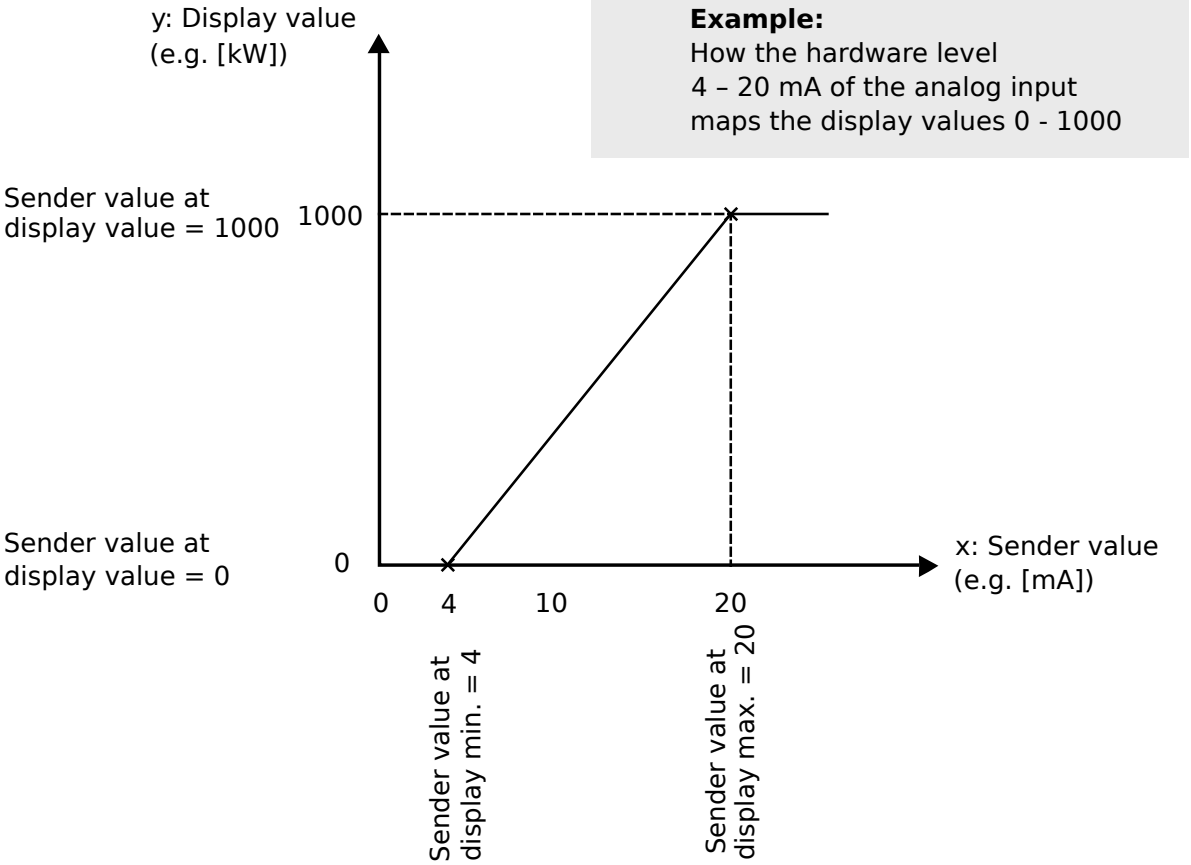


Fig. 143: Analog Input Mapping

ID	Parameter	CL	Setting range [Default]	Description
1020 1070 1120	**Sender type**	2		The software in the control unit may be configured for various types of sensors. The configurable ranges apply to the linear analog input.
			[0 - 2000 Ohm]	The measuring range of the analog input is 0 to 2000 Ohms.
			0 - 20mA	The measuring range of the analog input is 0/4 to 20 mA.
			0-1V	The measuring range of the analog input is 0 to 1 V.
				Notes If parameter "Type" (↳ 1000/ ↳ 1050/↳ 1100) is set to "VDO xx" or "Pt100", this parameter must be configured to "0 to 2000 Ohm"!
1046 1096	**Offset**	2	-20.0 to 20.0 Ohms **[0.0 Ohm]**	The resistive input (the "0 to 2000 Ohms" analog input) may be calculated with a permanent offset to adjust for inaccuracies.

ID	Parameter	CL	Setting range [Default]	Description
1146				If the offset feature is utilized, the value configured in this parameter will be added to/subtracted from the measured resistive value. This has the following effect to the measured values (please note tables in ↳ "9.2.2 VDO Inputs Characteristics"):
				Notes This parameter is only visible if the parameter "Sender type" (↳ 1020/↳ 1070/↳ 1120) is configured to "0 to 2000 Ohms". VDO temperature and pressure senders use the ± range in different ways! Please take care for sender documentation.
1035 1085 1135	**Exponent for protocol**	2	-2 to 3 **[0]**	This is the exponent to adapt the decimal place of the actual value (parameter 1033/1083/1133) for the protocol format.
				Example Exponent is 3: value of analog input {½/3} x 10^3 = value of analog input {½/3} x 1000
1033	**Analog input 1**	(displayed only)		Current scaled value of the AI {X}
1003 1053 1103	**Monitoring wire break**	2		The respective analog input can be monitored for wire breaks. If this protective function is triggered, the display indicates "Wb: {Text of Parameter [Description]}" (parameter ↳ 1025/↳ 1075/↳ 1125). The following configurations are used to monitor for wire breaks:
			[Off]	No wire break monitoring is performed.
			High	If the actual value rises over the maximum value (overshoot), this is identified as a wire break.
			Low	If the actual value falls below the minimum value (undershoot), this is identified as a wire break.
			High/Low	If the actual value rises over the maximum value (overshoot) or falls below the minimum value (undershoot), this is identified as a wire break.
				Notes Monitoring of the analog inputs (overrun/underrun) must be

Released

ID	Parameter	CL	Setting range [Default]	Description
				configured manually to the flexible limits (↳ “4.5.5 Flexible Limits”). If the control unit detects that the measuring range for an analog input has been exceeded and an alarm is issued, the limit value monitoring of this analog input is disabled and an error message is displayed. The measuring range is recognized as being exceeded and an alarm is issued: • 0 to 20 mA: Minimum value 2 mA Undershooting Maximum value 20.5 mA Overshooting • 0 to 2000 Ohms: Minimum value 20 Ohms Undershooting (Offset = 0 Ohm) Maximum value 2040 Ohms Overshooting (Offset = 0 Ohm) • 0 to 1 V: No wire break monitoring
				Resistive sender type only: Depending on what was configured for the offset value (parameter ↳ 1046/↳ 1096/↳ 1146) the displayed value may be shifted. This may result in a broken wire being recognized early or later than the actual value being measured. (An offset of +20 Ohms will recognize a wire break at 40 Ohms instead of 20 Ohms.)
				A wire break is indicated in ToolKit by displaying an analog input value "Error".
1004 1054 1104	**Wire break alarm class**	2		Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
			Class A, **[Class B]**	Warning alarm classes
			Class C, Class D, Class E, Class F	Shutdown alarm classes
			Control	Signal to issue a control command only
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				This parameter is only visible if wire break monitoring (parameter 1003/1053/1103) is not set to "Off" For additional information refer to "9.6.4 Alarm Classes".
1005 1055 1105	**Self acknowledge wire break**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
				Notes This parameter is only visible wire break monitoring (parameter 1003/1053/1103) is not set to "Off"
10113 10114 10116	**Filter time constant** **0/4 to 20 mA and 0 to 1 V**	2	Off, 1 to 5	A low pass filter may be used to reduce the fluctuation of an analog input reading. The cut-off-frequency is defined as usual with 63% (e^{-1}).
			Off	The analog input is displayed without filtering.
			1	Cut-off-frequency = 7.96 Hz (filter time constant = 0.02 s)
			2	Cut-off-frequency = 3.98 Hz (filter time constant = 0.04 s)
			[3]	Cut-off-frequency = 1.99 Hz (filter time constant = 0.08 s)
			4	Cut-off-frequency = 0.99 Hz (filter time constant = 0.16 s)
			5	Cut-off-frequency = 0.50 Hz (filter time constant = 0.32 s)
	Filter time constant for **0 to 2000 Ω**	2	Off, 1 to 5	A low pass filter may be used to reduce the fluctuation of an analog input reading. The cut-off-frequency is defined as usual with 63% (e^{-1}).
			Off	Cut-off-frequency = 0.64 Hz (filter time constant = 0.25 s)
			1	Cut-off-frequency = 0.32 Hz (filter time constant = 0.5 s)

ID	Parameter	CL	Setting range [Default]	Description
			2	Cut-off-frequency = 0.16 Hz (filter time constant = 1.0 s)
			[3]	Cut-off-frequency = 0.08 Hz (filter time constant = 2.0 s)
			4	Cut-off-frequency = 0.04 Hz (filter time constant = 4.0 s)
			5	Cut-off-frequency = 0.02 Hz (filter time constant = 8.0s)
1034 1084 1134	**Unit**	2	up to 6 characters text **[_ _ _ _ _ _]**	This parameter is assigning a unit text to the displayed analog value. **Notes** This parameter may only be configured using ToolKit. If »°C« or »bar« is assigned the unit will be converted into "F" or "psi" automatically if the corresponding parameter for conversion ↳ 3630 and/or ↳ 3631 is configured to YES. The max. number of characters is 39 but depends on numbers of Bytes for each character. The Bytes/character are defined by the font of the currently selected language. HMI Up to six characters are best for display/HMI; more will override screen border/frame. Please verify the length on the display for best view!
3632 3634 3636	**Bargraph minimum**	2	-21000000.00 to 21000000.00 **[0.00]**	The start value for the bar graph display of the analog input is defined here. The value must be entered according to the display format, which refers to the analog input type (parameter ↳ 1000).
3633 3635 3637	**Bargraph maximum**	2	-21000000.00 to 21000000.00 **[2000.00]**	The end value for the bar graph display of the analog input is defined here. The value must be entered according to the display format, which refers to the analog input type (parameter ↳ 1000).

Table 49: Analog Inputs 1 to 3 sender settings

4.4.2.5 Analog Outputs

4.4.2.5.1 Analog Outputs 1 and 2

The analog outputs AO 1 and AO 2 may either be configured as analog or PWM outputs. The analog outputs are prepared for speed and voltage biasing signal for a speed controller and voltage regulator.

Released

- The following table shows two configuration examples with parameters and default values for the analog outputs 1 and 2.
- Example 1 at AO 1 is for a generator active power output at AO 1 with a range of -20 kW to 220 kW via a 4 to 20 mA signal (generator rated power = 200 kW).
- Example 2 at AO 2 is assigning the speed bias signal (0 to 100%) to PWM signal (0 to 100%) with level 6 V.

Configuration examples

Parameter / AnalogManager	Example 1 with AO 1		Example 2 with AO 2	
	ID	Value	ID	Value
Selected hardware type (For details refer to Table)	5201	mA	5215	PWM
Minimum hardware level	5208	4	5222	0.00 (%)
Maximum hardware level	5209	20 (mA)	5223	100.00 (%)
PWM output level (visible only if »PWM« selected)	5210	—	5224	6 V
Source value at minimum level	5204	-20 (kW)	5218	0 (%)
Source value at maximum level	5206	220 (kW)	5220	100 (%)
Filter time constant	5203	3	5217	Off
AM Data source AO1	5200	Type: Pass through A1 = 01.74 Gen.act.power [W]	5214	Type: Pass through A1 = 11.03 Speed bias [%]
Analog output 1	10310	Display of resulting value	10311	Display of resulting value

Released

Settings/setup example

The following drawing shows the relation between the value of the AO signal selected and its corresponding values at the terminal pin. For settings see table below the drawing.

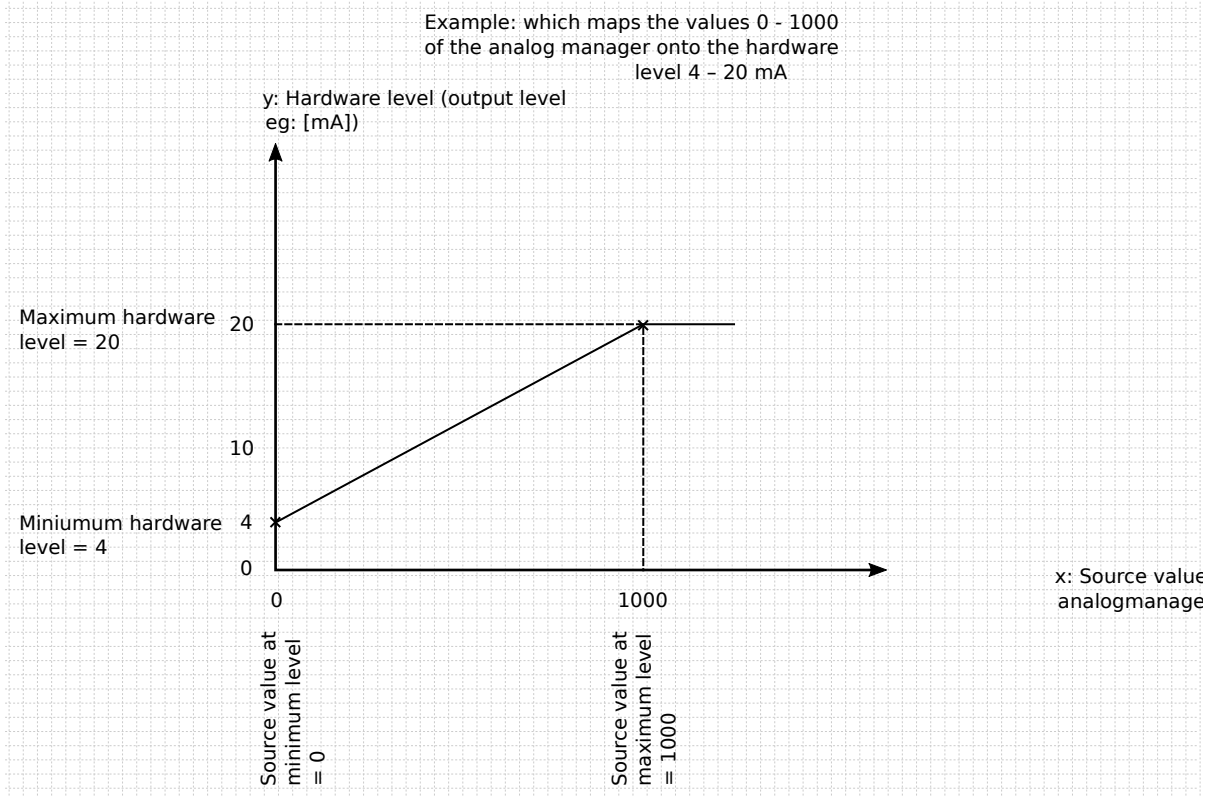


Fig. 144: Example to setup AO for 0 to 1000 IN becomes OUT 4 to 20 mA

Parameter / AnalogManager	Example 3 with AO 1	
	ID	
Selected hardware type (For details refer to ⮑ Table)	5201	mA
Minimum hardware level	5208	4
Maximum hardware level	5209	20 mA
PWM output level (visible only if »PWM« selected)	5210	—
Source value at minimum level	5204	0
Source value at maximum level	5206	1000
Filter time constant	5203	3
AM Data source AO1	5200	Type: Pass through A1 = analog variable with range 0 to 1000
Analog output 1	10310	Display of resulting value

Released

ID	Parameter	CL	Setting range **[Default]**	Description
5200 5214	**AM Data source AO1**	2	Determined by AnalogManager 93.01, 93.02 AO1: **[A1 = 11.03 Speed bias [%]** AO2: **[A1 = 11.02 Voltage bias [%]**	The data source may be selected from the available data sources. **Notes** Refer to ⮡ “9.5.2 Data Sources AM” for a list of all data sources.
5201 5215	**Selected hardware type**	2		This parameter is used to configure the appropriate type of analog controller signal. The range of the analog output is configured here. PMW value is defined in %.
			Off	No analog output signal will be issued.
			[mA]	**Notes** Because of different isolation purposes the two biasing outputs must be clear labeled with their function.
			V	
			PWM	
5208 5222	**Minimum hardware level** (User defined minimum output value)	2	-20.00 to 100.00 **[0.00]**	The value of the configured hardware range, which shall correspond with the configured minimum source value, must be entered here (y-axis). This specifies the minimum limit of the hardware range. **Example** If the value configured here is 2.5, the maximum output range of “+/-20 mA” / “+/-10 V” has a lower limit of 2.5 mA / 2.5 V. **Notes** Value »100« is possible only for PWM.
5209 5223	**Maximum hardware level** (User defined maximum output value)	2	-20.00 to 100.00 **[20.00]**	The value of the configured hardware range, which shall correspond with the configured maximum source value, must be entered here (y-axis). This specifies the maximum limit of the hardware range. **Example** If the value configured here is 7.5, the maximum output range of “+/-20 mA” / “+/-10 V” has a upper limit of 7.5 mA / 7.5 V. **Notes** Value »100« is possible only for PWM.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
5210 5224	**PWM output level**	2	0.00 to 10.00 V **[10.00 V]**	If PWM has been enabled in parameter ↳ 5203/↳ 5217, is defined in %, and the level of the PWM signal (amplitude) may be adjusted here.
5204 5218	**Source value at minimum level**	2	-21000000.00 to 21000000.00 **[0.00]**	The value from the data source must exceed the value configured here to raise the output signal above minimum hardware level. Negative values may be used to change the sign e.g. for power. The entry format of the value depends on the selected data source.
5206 5220	**Source value at maximum level**	2	-21000000.00 to 21000000.00 **[100.00]**	If the value from the data source reaches the value configured here, the output signal will reach maximum hardware level. Negative values may be used to change the sign e.g. for power. The entry format of the value depends on the selected data source.
5203 5217	**Filter time constant** CL05	2	Off, 1 to 7	A filter time constant may be used to reduce the fluctuation of an analog output value.
			[Off]	The analog output is displayed without filtering.
			1	Cut-off-frequency = 3.98 Hz (filter time constant = 0.04 s)
			2	Cut-off-frequency = 1.98 Hz (filter time constant = 0.08 s)
			3	Cut-off-frequency = 0.99 Hz (filter time constant = 0.16 s)
			4	Cut-off-frequency = 0.5 Hz (filter time constant = 0.32 s)
			5	Cut-off-frequency = 0.25 Hz (filter time constant = 0.64 s)
			6	Cut-off-frequency = 0.12 Hz (filter time constant = 1.28 s)
			7	Cut-off-frequency = 0.06 Hz (filter time constant = 2.56 s)
				Notes The filter is not applied to the analog output display value, i.e. the end value of the analog output is displayed immediately.

Released

4.4.2.6 External Analog Inputs

General notes

Configuration of these external analog inputs is performed similarly to the internal analog inputs.

If an external expansion board (e.g. Phoenix Contact or WAGO) is connected to the easY-I via the CAN bus, it is possible to use 16 additional analog inputs.

- Refer to Table for the parameter IDs of the parameters for external analog inputs 1 through 16.

Please note that the available options for the parameters "Type" and "Sender type" differ from the internal analog inputs.

The parameters "Offset" and "Monitoring wire break" are not available for the external analog inputs.

- Refer to the Parameter List for details.

A wire break or sender failure is indicated by a dedicated value sent via the CAN bus (“4.7.4.1 CAN Interface 1”).

For an example for the configuration of external analog inputs refer to “6.3.7 Setup Expansion Modules at CAN 2”.

Monitoring of the analog inputs (overrun/underrun) must be configured manually to the flexible limits (“4.5.5 Flexible Limits”).

External analog inputs - parameter IDs

Parameter external	AI 1	AI 2	AI 3	AI 4	AI 5	AI 6	AI 7	AI 8
Description	16203	16213	16223	16233	16243	16253	16263	16273
Type1	5851	5864	5877	5890	5903	5916	5929	5942
User defined min display value	5852	5865	5878	5891	5904	5917	5930	5943
User defined max display value	5853	5866	5879	5892	5905	5918	5931	5944
Sender value at	5857	5870	5883	5896	5909	5922	5935	5948

Released

Parameter external	AI 1	AI 2	AI 3	AI 4	AI 5	AI 6	AI 7	AI 8
display min.								
Sender value at display max.	5858	5871	5884	5897	5910	5923	5936	5949
Sender type	5856	5869	5882	5895	5908	5921	5934	5947
Sender connection type	5859	5872	5885	5898	5911	5924	5937	5950
Filter time constant	5863	5876	5889	5902	5915	5928	5941	5954
Exponent for protocol	16204	16214	16229	16234	16244	16254	16264	16274
Wire break alarm class	5854	5867	5880	5893	5906	5919	5932	5945
Self acknowledge wire break	5855	5868	5881	5894	5907	5920	5933	5946
Unit	16208	16218	16228	16238	16248	16528	16268	16278
Bargraph minimum	5861	5874	5887	5900	5913	5926	5939	5952
Bargraph maximum	5862	5875	5888	5901	5914	5927	5940	5953

Parameter external	AI 9	AI 10	AI 11	AI 12	AI 13	AI 14	AI 15	AI 16
Description	16283	16293	16303	16313	16323	16333	16343	16353
Type	5955	5968	5981	6930	6943	6956	6969	6982
User defined min display value	5956	5969	5982	6931	6944	6957	6970	6983
User defined max display value	5957	5970	5983	6932	6945	6958	6971	6984
Sender value at display min.	5961	5974	5987	6936	6949	6962	6975	6988
Sender value at display max.	5962	5975	5988	6937	6950	6963	6976	6989
Sender type	5960	5973	5986	6935	6948	6961	6974	6987

Released

Parameter external	AI 9	AI 10	AI 11	AI 12	AI 13	AI 14	AI 15	AI 16
Sender connection type	5963	5976	5989	6938	6951	6964	6977	6990
Filter time constant	5967	5980	5993	6942	6955	6968	6981	6994
Exponent for protocol	16284	16294	16304	16314	16324	16334	16344	16354
Wire break alarm class	5958	5971	5984	6933	6946	6959	6972	6985
Self acknowledge wire break	5959	5972	5985	6934	6947	6960	6973	6986
Unit	16288	16298	16308	16318	10390	10392	10394	10396
Bargraph minimum	5965	5978	5991	6940	6953	6966	6979	6992
Bargraph maximum	5966	5979	5992	6941	6954	6967	6980	6993

External analog inputs – example configuration analog input 1



Please make sure that the selected settings you are using are supported by your external devices.

Available "Type"s (parameters 5851, 5864, ...)		
Off	Table A	Pt DIN(R0)
Linear	Table B	Pt SAMA(R0)
	TC Type K	Ni DIN(R0)
	TC Type J	Ni SAMA(R0)
	TC Type E	Cu10
	TC Type R	Cu50
	TC Type S	Cu53
	TC Type T	Ni 1000(Landis)
	TC Type B	Ni 500(Viessm.)
	TC Type N	KTY 81-110
	TC Type U	KTY 84
	TC Type L	
	TC Type C	
	TC Type W	
	TC Type HK	

Available "Sender type"s (parameters 5856, 5869, ...)		
0 - 10 V		R0=100
±10 V		R0=10
0 - 20 mA		R0=20
±20 mA		R0=30
4 - 20 mA		R0=50
0 - 400 Ohms		R0=120
0 - 4000 Ohms		R0=150
Thermocouple		R0=200
		R0=240
		R0=300
		R0=400
		R0=500
		R0=1000
		R0=1500
		R0=2000
		R0=3000

Available "Sender connection type"s (parameters 5859, 5872, ...)
Two wire
Three wire

4.4.2.7 External Analog Outputs

If an external expansion board (e.g. from Phoenix Contact or WAGO) is connected to the easY-I via the CAN bus, it is possible to use 4 additional analog outputs.



The configuration of these external analog outputs is performed similarly to the internal analog outputs.

Refer to Table 50 for the parameter IDs of the parameters for external analog outputs 1 through 4.

Please note that the available options for the Selected hardware type are limited. Refer to the Parameter List for details.

Parameter	Ext. AO 1	Ext. AO 2	Ext. AO 3	Ext. AO 4
Data source ext. AO {x}	10237	10247	10257	10267
	AnalogManager: **[Pass Through of "11.03 Speed bias [%]"]**			

Released

Parameter	Ext. AO 1	Ext. AO 2	Ext. AO 3	Ext. AO 4
Source value at minimum level	10240	10250	10260	10270
Source value at maximum level	10241	10251	10261	10271
Filter time constant	10239	10249	10259	10269
Selected hardware type	10238	10248	10258	10268
	Setting range: Off; mA; V			
Minimum hardware level	10242	10252	10262	10272
Maximum hardware level	10243	10253	10263	10273
Ext. analog output {x} (displayed in ToolKit only: ON/ OFF)	10245	10255	10265	10275
Notes: Refer to Chapter 4.4.2.7 for details and definition of the parameters.				

Table 50: External analog outputs {1 to 4} - parameter IDs

ID	Parameter	CL	Setting range [Default]	Description
10237 10247 10257 10267	**AM Data source ext.AO1**	2	Determined by AnalogManager 93.21 .. 93.24 AO1 to AO 4: **[A1 = "11.03 Speed bias [%]"]**	The data source may be selected from the available data sources. **Notes** Refer to “9.5.2 Data Sources AM” for a list of all data sources.
10238 10248 10258 10268	**Selected hardware type**	2		This parameter is used to configure the appropriate type of analog controller signal. The range of the analog output is configured here.
			[Off]	No analog output signal will be issued.
			mA	
			V	
10242 20252 10262 10272	**Minimum hardware level** (User defined minimum output value)	2	0.00 to 20.00 **[0.00]**	The value of the configured hardware range, which shall correspond with the configured minimum source value, must be entered here (y-axis). This specifies the minimum limit of the hardware range. **Example** If the value configured here is 2.5, the maximum output range of

Released

ID	Parameter	CL	Setting range [Default]	Description
				+/-20 mA / +/-10 V has a lower limit of 2.5 mA / 2.5 V.
10243 10253 10263 10273	**Maximum hardware level** (User defined maximum output value)	2	0.00 to 20.00 **[20.00]**	The value of the configured hardware range, which shall correspond with the configured maximum source value, must be entered here (y-axis). This specifies the maximum limit of the hardware range.
				Example If the value configured here is 7.5, the maximum output range of +/-20 mA / +/-10 V has a upper limit of 7.5 mA / 7.5 V.
10240 10250 10260 10270	**Source value at minimum level**	2	-21000000.00 to 21000000.00 **[0.00]**	The value from the data source must exceed the value configured here to raise the output signal above minimum hardware level. Negative percentage values may be used to change the sign, e.g. for power. The entry format of the value depends on the selected data source.
10241 10251 10261 10271	**Source value at maximum level**	2	-21000000.00 to 21000000.00 **[10000.00]**	If the value from the data source reaches the value configured here, the output signal will reach maximum hardware level. Negative percentage values may be used to change the sign, e.g. for power. The entry format of the value depends on the selected data source.
10239 10249 10259 10269	**Filter time constant**	2	Off, 1 to 7	A filter time constant may be used to reduce the fluctuation of an analog output value.
			[Off]	The analog output is displayed without filtering.
			1	Cut-off-frequency = 3.98 Hz (filter time constant = 0.04 s)
			2	Cut-off-frequency = 1.98 Hz (filter time constant = 0.08 s)
			3	Cut-off-frequency = 0.99 Hz (filter time constant = 0.16 s)
			4	Cut-off-frequency = 0.5 Hz (filter time constant = 0.32 s)
			5	Cut-off-frequency = 0.25 Hz (filter time constant = 0.64 s)
			6	Cut-off-frequency = 0.12 Hz (filter time constant = 1.28 s)
			7	Cut-off-frequency = 0.06 Hz (filter time constant = 2.56 s)

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes The filter is not applied to the analog output display value, i.e. the end value of the analog output is displayed immediately.

4.4.2.8 External Discrete Inputs

If a Woodward IKD 1 or other external expansion board (e.g. Phoenix Contact or WAGO) is connected to the easY-I via the CAN bus, it is possible to use 32 additional discrete inputs.

- The configuration of these external DIs is performed similarly to the internal DIs (“4.4.2.2 Discrete Inputs”).
- Refer to Table 51 for the parameter IDs of the parameters for external DIs 1 through 32.

External	DI 1	DI 2	DI 3	DI 4	DI 5	DI 6	DI 7	DI 8
Description	16200	16210	16220	16230	16240	16250	16260	16270
Delay	16000	16010	16020	16030	16040	16050	16060	16070
Operation	16001	16011	16021	16031	16041	16051	16061	16071
Alarm class	16002	16012	16022	16032	16042	16052	16062	16072
Self acknowledge	16004	16014	16024	16034	16044	16054	16064	16074
Enabled	16003	16013	16023	16033	16043	16053	16063	16073

Table 51: External discrete inputs - parameter IDs 1..8

External	DI 9	DI 10	DI 11	DI 12	DI 13	DI 14	DI 15	DI 16
Description	16280	16290	16300	16310	16320	16330	16340	16350
Delay	16080	16090	16100	16110	16120	16130	16140	16150
Operation	16081	16091	16101	16111	16121	16131	16141	16151
Alarm class	16082	16092	16102	16112	16122	16132	16142	16152
Self acknowledge	16084	16094	16104	16114	16124	16134	16144	16154
Enabled	16083	16093	16103	16113	16123	16133	16143	16153

Table 52: External discrete inputs - parameter IDs 9..16

External	DI 17	DI 18	DI 19	DI 20	DI 21	DI 22	DI 23	DI 24
Description	16201	16211	16221	16231	16241	16251	16261	16271
Delay	16005	16015	16025	16035	16045	16055	16065	16075
Operation	16006	16016	16026	16036	16046	16056	16066	16076
Alarm class	16007	16017	16027	16037	16047	16057	16067	16077

Released

External	DI 17	DI 18	DI 19	DI 20	DI 21	DI 22	DI 23	DI 24
Self acknowledge	16009	16019	16029	16039	16049	16059	16069	16079
Enabled	16008	16018	16028	16038	16048	16058	16068	16078

Table 53: External discrete inputs - parameter IDs 17..24

External	DI 25	DI 26	DI 27	DI 28	DI 29	DI 30	DI 31	DI 32
Description	16281	16291	16301	16311	16321	16331	16341	16351
Delay	16085	16095	16105	16115	16125	16135	16145	16155
Operation	16086	16096	16106	16116	16126	16136	16146	16156
Alarm class	16087	16097	16107	16117	16127	16137	16147	16157
Self acknowledge	16089	16099	16109	16119	16129	16139	16149	16159
Enabled	16088	16098	16108	16118	16128	16138	16148	16158

Table 54: External discrete inputs - parameter IDs 25..32

4.4.2.9 External Discrete Outputs

If a Woodward IKD 1 or other external expansion board (e.g. Phoenix Contact or WAGO) is connected to the easY-I via the CAN bus, it is possible to use 32 additional discrete outputs.

The configuration of the external DOs is performed in a similar way like for the internal DOs.

Refer to Table 55 for the parameter IDs of the parameters for external discrete outputs 1 through 32.

External	DO 1	DO 2	DO 3	DO 4	DO 5	DO 6	DO 7	DO 8
Parameter ID	12330	12340	12350	12360	12370	12380	12390	12400

Table 55: External discrete outputs - parameter IDs (1 to 8)

External	DO 9	DO 10	DO 11	DO 12	DO 13	DO 14	DO 15	DO 16
Parameter ID	12410	12420	12430	12440	12450	12460	12470	12480

Table 56: External discrete outputs - parameter IDs (9 to 16)

External	DO 17	DO 18	DO 19	DO 20	DO 21	DO 22	DO 23	DO 24
Parameter ID	12331	12332	12333	12334	12335	12336	12337	12338

Table 57: External discrete outputs - parameter IDs (17 to 24)

Released

External	DO 25	DO 26	DO 27	DO 28	DO 29	DO 30	DO 31	DO 32
Parameter ID	12339	12341	12342	12343	12344	12345	12346	12347

Table 58: External discrete outputs - parameter IDs (25 to 32)

4.4.3 Configure Breakers

General notes

The assignment of the defined relays to defined functions occurs by selection of the application mode (i.e. function "Command: Close GCB" on relay [R 6], this relay can no longer be operated via the LogicsManager).

The same way some relays are designated to specific functions, others may be assigned to different functions. These are listed as "programmed" relays. If a relay is "programmable" the function may be assigned to other relays via the LogicsManager by configuration.

For additional information refer to “4.4.2.3 Discrete Outputs (LogicsManager)”.

If the easY-I is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected. If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

Changing the application mode will not change other configured values in the parameters. The application mode parameter is the only one.

Operation of the circuit breakers

The configuration of pulse switching takes place in the following screen and has the described effect on the signal sequence (the MCB cannot be controlled by the continuous pulse for security reasons, because otherwise, the MCB would be opened in case of a failure/exchange of the easY-I).

The parameter "Enable MCB" allows/prevents the closing of the MCB. A closed MCB will not be opened.

If the parameter "Auto unlock" is configured to YES, an open pulse will be issued prior to each close pulse.

External breaker handling

In operation mode AUTO the easY-I operates its breakers automatically according to the configured application and transition modes. Actually the breaker transition mode “external” would only allow the breaker closure from external. On the other hand the easY-I allows in special cases the closure of breaker from external, when the following configurations and modes are fulfilled:

Released

External Breaker Handling	Synchronization Mode	Dead Bus Closure	Condition for the closure acceptance
GCB Synchronization	Off	-	• The start request in automatic is active • Inverter is ready for operation
GCB Dead bus closure	-	Off	• The start request in automatic is active • The generator is in operating range • Inverter is in operation
MCB Synchronization	Off	-	The mains is in operating range
GCB Dead bus closure	-	Off	
... and if GGB is available:			
GGB Synchronization	Off	-	Minimum 1 GCB is closed
GGB Dead bus closure	-	Off	

Interaction with LSx

The easY-I provides some application modes, which contain the handling of the breaker control LSx. According to the application mode a single LSx or a system of LSxs is installed. The LSx technology shall give the designer an instrument to handle more complex breaker applications.

Here are some feature examples of the LSx technology:

- Open/close of individual breakers including synchronization and dead bus closure.
- Determining the generators in load share segments.
- Loading/unloading active and reactive power via the dedicated breaker.
- 3-phase power measurement at the interchange point to the utility.
- Included mains decoupling functions.



See further chapters in this document and in the LSx technical manual for more information.

4.4.3.1 Good to know: Actions with Breakers

4.4.3.1.1 Dead Bus Closing GCB



All parameters listed below only apply to application mode A03 to A11

The unit closes the GCB without synchronization, if the following conditions are met. The display indicates "GCB dead bus close".

Automatic operation

Released

- The operating mode AUTOMATIC has been selected
- No class C alarm or higher is present
- The inverter is in operation.
- The generator voltage and frequency are within the configured operating range (“4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”)
- The MCB has been opened for at least the time configured in "Transfer time GCB↔MCB" (parameter 3400)

  (Mode A04, A06, A08, A09 and A11 with open transition mode only)
- The function "Start without load" (parameter 12540) has been disabled through the LogicsManager
- The busbar voltage is below the dead bus detection limit (parameter 5820)
- There is no other GCB closed in the same segment
- There is no other device with a smaller device ID willing to close its GCB too (Dead busbar closure negotiation)

Manual operation

- The operating mode MANUAL has been selected.
- No class C alarm or higher is present.
- The inverter is in operation.
- The generator voltage and frequency are within the configured operating range (“4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”).
- The button "Close GCB" has been pressed.
- The MCB has been open for at least the time configured in "Transfer time GCB↔MCB" (parameter 3400).

  (Mode A04, A06, A08, A09 and A11 with open transition mode only)
- The busbar voltage is below the dead bus detection limit (parameter 5820).
- There is no other GCB closed in the same segment.
- There is no other device with a smaller device ID willing to close its GCB too (Dead busbar closure negotiation).

Dead Busbar Negotiation

Each easY-I or easYgen, who intends to close its GCB on a dead busbar publishes a “Dead busbar closure request” flag over CANbus and reads back whether there is any other easY-I or easYgen publishing the same intension:

If not, the unit waits an estimated time for security and then closes its breaker.

If yes, the unit compares its own device number with the smallest device number of all others who also intend to close. If the own device number is smaller than the rest, the unit will close its breaker - otherwise it blocks its own closure.

The easY-I or easYgen removes its wish to close its GCB on a dead busbar, if the GCB closure failure occurs in a multiple generator application. So the next easY-I or easYgen with the higher device number gets the permission for closure.

The load sharing messages are monitored. In case of a “missing member” alarm on the load share bus, the single dead bus closures are delayed depending on the own Generator number to avoid simultaneous closure. The delay time is Generator Number multiplied with 500 ms.

The dead busbar negotiation is done over all segments by default (Parameter 3472 is set to On).

If Parameter 3472 is set to Off the dead busbar negotiation is done only for the own segment.

4.4.3.1.2 Synchronization GCB/MCB

All parameters listed below only apply to application mode A03 to A11

With Synchronization GCB there is no inverter adjustment active (frequency or voltage), because the inverter makes the synchronization itself after the GCB is closed (reference voltage available).

The synchronization is active, if the following conditions are met simultaneously.

The display indicates "Synchronization GCB" or "Synchronization MCB".

Automatic operation

- The operating mode AUTOMATIC has been selected
- The mains voltage is available and within the configured operating range (“4.5.2.3 Mains Operating Ranges”)
- Synchronizing the MCB
  - The differential frequency/voltage is within the configured operating range
  - The GCB is closed (or at least one GCB is closed in a multiple genset application)
  - The generator and busbar voltage are available and within the configured operating range (“4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”)
  - The "Enable MCB" (parameter 12923) signal is present, for example discrete input 6 is energized if configured as DI 6
- Synchronizing the GCB
  - The MCB is closed
  - The busbar voltage is within the configured operating range
  - Inverter is ready for operation

Released

Manual operation

- Operating mode MANUAL has been selected
- Synchronizing the MCB
  - The differential frequency/voltage is within the configured operating range
  - The GCB is closed (or at least one GCB is closed in a multiple genset application)
  - The generator and busbar voltage are available and within the configured operating range (↳ “4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”)
  - The "Enable MCB" (parameter ↳ 12923) signal is present, for example discrete input 6 is energized if configured as DI 6
  - The button "Close MCB" has been pressed
- Synchronizing the GCB
  - The MCB is closed
  - The busbar voltage is within the configured operating range
  - Inverter is ready for operation
  - The button "Close GCB" has been pressed

4.4.3.1.3 Dead Bus Closing MCB



The following applies to application mode A04 and A06.

The unit closes the MCB, if the following conditions are met simultaneously.

The display indicates "MCB dead bus close".

Automatic operation

- The operating mode AUTOMATIC has been selected
- The parameter "Dead busbar closure MCB" (parameter ↳ 3431) is configured On
- The mains voltage is available and within the configured operating range (↳ “4.5.2.3 Mains Operating Ranges”)
- The GCB is open or has been opened for at least the "Transfer time GCB↔MCB" (parameter ↳ 3400) (open transition mode only)
- The "Enable MCB" (parameter ↳ 12923) signal is present, for example discrete input 6 is energized if configured as DI 6
- The busbar voltage is below the dead bus detection limit (parameter ↳ 5820)

Manual operation

- Operating mode MANUAL has been selected
- The parameter "Dead busbar closure MCB" (parameter 3431) is configured "On"
- The mains voltage is available and within the configured operating range (“4.5.2.3 Mains Operating Ranges”)
- The GCB is open or has been opened for at least the "Transfer time GCB↔MCB" (parameter 3400) (open transition mode only)
- The "Enable MCB" (parameter 12923) signal is present, for example discrete input 6 is energized if configured so
- The button "Close MCB" has been pressed
- The busbar voltage is below the dead bus detection limit (parameter 5820)

4.4.3.1.4 Open GCB



The following applies to application modes A02 to A11.

The GCB will be opened when the "Command GCB open" is issued. The behavior of the GCB open relay depends on the setting of parameter 3403.

If this parameter is configured as "N.O.", the relay energizes to open the GCB, if it is configured as "N.C.", the relay de-energizes to open the GCB.

The GCB will be opened under the following conditions:

- In STOP operating mode after unloading the generator
- In case of a class C alarm or higher
- By pressing the "GCB" or "MCB" softkey (depending on the CB logic which has been set) in MANUAL operating mode
- By pressing the "0" button in MANUAL operating mode
- In the event of an automatic stopping in the AUTOMATIC operating mode (the start request has been terminated or a stop request has been initiated)
- If "Start without load" has been enabled through the LogicsManager and the breaker was closed
- By pressing the "MCB" softkey (depending on the CB logic which has been set) in MANUAL operating mode



The conditions above are only valid if the GCB is closed, whereas the following conditions are valid regardless of the GCB is open or closed.

- Prior to the MCB closing onto the dead busbar (depending on the CB logic which has been set)

Released

- In case of an alarm of class D or F

4.4.3.1.5 Open MCB

The following applies to application modes A04, A06, A08, A09 and A11.

The MCB will be opened when the relay "Command: MCB open" is energized.

The MCB will be opened under the following conditions if the MCB is closed:

- If an emergency power operation is initiated (mains failure) once the generator voltage is within the permissible limits
- Prior to the closure of the GCB (depending on the CB logic which has been set)
- Upon pressing the "MCB" or "GCB" softkey (dependent upon the configured CB logic) in MANUAL operating mode

4.4.3.1.6 Transition Modes (Breaker Logic)

Breaker logic "PARALLEL"

Parallel operation is enabled by configuring parameter 3411 to "PARALLEL".

Parallel breaker logic must be selected for the following operation modes:

- Isolated operation
- Mains parallel operation

In the event of an inverter start request the following occurs:

- The GCB is synchronized and closed
- The inverter assumes load and the adjusted real power or reactive power setpoints are controlled

Following the stop request the following occurs:

- The inverter sheds load until real power has reached the "Unload limit" (parameter 3125)
- The generator power factor is controlled to "1.00" (unity)
- The GCB is opened
- The inverter stops operation

When a stop command is issued to the inverter, soft loading (power reduction) is carried out before opening the GCB, except an alarm of class D or F is present.

Breaker logic "INTERCHANGE"

The following applies to application modes A04, A06, A08, A09 and A11.

For this breaker logic to function correctly, the mains power measurement must be connected properly.

The following applies for the power display:

- Positive mains power = export power
- Negative mains power = import power

In the event of a start request, a change is made from mains to generator supply.

The following occurs:

- The GCB is synchronized and closed
- The generator assumes load until the imported mains interchange real power has reached 5 % of the "Generator rated active power" (parameter 1752)
- The MCB is opened

When a stop request has been issued, a change is made from generator to mains supply.

The following occurs:

- The MCB is synchronized and closed
- The generator sheds load until real power has reached the "Unload limit" (parameter 3125)
- The generator power factor is controlled to "1.00" (unity)
- The GCB is opened

The limit for opening the MCB during softloading (Unloading mains) is +/- 5% active generator rated power without any delay. In multiple generator applications the 5% limit is calculated out of the current nominal generator power in the system.

Examples:

- An inverter is running with 1000kW rated, the +/-5% limit is a power window at the interchange point from 50kW import up to 50kW export.
- An inverter is running with 500kW rated and one generator with 300kW rated, the +/-5% limit is a power window at the interchange point from 40kW import up to 40kW export.

Hint: The generator rated power is taken into account to find a good compromise between bumpless power transfer and being not too long mains parallel.

Released

Breaker logic "CLOSED TRANSIT."

The following applies to application modes A04, A06, A08, A09 and A11.

Closed transition (make-before-break/overlap synchronization) is enabled by configuring parameter ↳ 3411 to "CLOSED TRANSITION".

In the event of an inverter start request, a change is made from mains to generator supply.

The following occurs:

- The GCB is synchronized and closed.
- The MCB is opened and the generator assumes all loads.

After the inverter stop request has been issued, a change is made from generator to mains supply.

The following occurs:

- The MCB is synchronized and closed.
- The GCB is opened and the mains assume all loads.

The circuit breakers are opened irrespective of the power.

For the application modes A04, A06 and A12 the breaker closed transition can handle a duration time <100 ms and the maximum time between the reply from the CB and the CB open command is 100 ms.

But this depends from the configuration "LM GCB is closed" (↳ 16907). If the configuration includes the breaker feedback from the inverter (internal AC-Contactor) this information should be provided with a hard-wired signal.

In case that the feedback is only available through the interface the duration time <100 ms for the transfer from mains to generator supply is not possible.

Breaker logic "OPEN TRANSIT."

The following applies to application modes A04, A06, A08, A09 and A11.

Open transition (break-before-make/change over logic) is enabled via configuration of parameter ↳ 3411 to "OPEN TRANSITION".

In the event of an inverter start request, a change is made from mains to generator supply.

The following occurs:

- The MCB is opened

- The GCB is closed after the time configured in "Transfer time GCB<->MCB" (parameter 3400) has expired.

The following occurs:

- The GCB is opened
- The MCB is closed after the time configured in "Transfer time GCB<->MCB" (parameter 3400) has expired

Breaker logic "EXTERNAL"

External breaker logic is enabled via configuration of parameter 3411 to "EXTERNAL".

All breaker control (especially the CB closing instructions) must be carried out via master controller (e.g. a PLC).

The easY-I controller always issues additionally the breaker open command under fault conditions and in the breaker unloading states (Unloading GCB) if the stop request is active.

Overview for application mode A04

STOP	MANUAL	AUTOMATIC
EXTERNAL: Breaker logic "External" In a mains parallel operation, decoupling from the mains is carried out via the MCB or the GCB in the event of a mains failure. The breakers will not automatically close in emergency power operation. Emergency power operation in accordance with European Community Specification DIN VDE 0108 is not possible in this power circuit breaker logic.		
The GCB is opened.	The MCB and the GCB may be manually opened. The circuit breakers are opened for decoupling from the mains.	The GCB is opened if the genset is stopped or if decoupling from the mains, but will not close if the inverter is started. The MCB is opened only if decoupling from the mains, and is never closed.
PARALLEL: Breaker logic "Mains parallel operation" The MCB and GCB are synchronized to permit continuous mains parallel operation in this breaker logic mode.		
The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Mains parallel operation can be initiated by pressing the "GCB On" or "MCB On" push-button.	The GCB is synchronized via an add-on request and a mains parallel operation is performed. When a shed-off request is issued, the generator sheds load and opens the GCB and the inverter stops. Emergency power: The emergency power operation is terminated following the expiration of the mains settling time. The MCB is synchronized and closed, putting the system back into a mains parallel operation.
OPEN TRANSIT.: Breaker logic "Open transition / change-over / brake-before-make" The MCB and GCB are never synchronized in this breaker logic mode.		
The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	A change can be made to either generator or mains operation by pressing either the "GCB On" or "MCB On" push-button. The "STOP" push-button opens the GCB and simultaneously stops the inverter.	A change is made to generator operation through an add-on request. Once the add-on request is terminated, the system changes back to mains operation. The MCB is closed when the busbar is dead, even if there has not been an add-on request. Emergency power operations are

Released

STOP	MANUAL	AUTOMATIC
		terminated following the expiration of the mains settling timer. The GCB opens and the MCB closes, transferring all loads to the mains.
CLOSED TRANSIT.: Breaker logic "Closed transition / make-before-brake / overlap synchronization" The MCB and the GCB are synchronized, in order to avoid a dead busbar in this breaker logic mode. Immediately after the synchronization of one breaker, the other is opened. Continuous mains parallel operation is not possible.		
The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Synchronization of either the generator or the mains can be initiated by pressing the "GCB On" or "MCB On" push-button.	The GCB is synchronized via an add-on request. After the GCB closes the MCB is opened. Following the shed-off request being issued, the MCB is synchronized and closed. After the MCB has closed the GCB is opened. Emergency power: The emergency power operation is terminated following the expiration of the mains settling time and the MCB synchronizing to the generator. The MCB closes and the GCB opens immediately afterwards.
INTERCHANGE: Breaker logic "Soft loading / interchange synchronization" The MCB and the GCB are synchronized, in order to avoid a dead busbar in this breaker logic mode. The operation of a breaker under load is avoided by utilizing the ability to soft load. Continuous mains parallel operation is not possible with this breaker logic. Following the shed-off request, the MCB synchronizes and closes, the generator soft unloads to the mains and the GCB opens. After the GCB is open the inverter is stopped.		
The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Synchronization of either the generator or the mains can be initiated by pressing the "GCB On" or "MCB On" push-button.	Via an inverter start request, the GCB is synchronized and the generator power is increased. The MCB is then opened. Following the disabling of the inverter request, the MCB is reverse synchronized and the GCB is then opened. Emergency power: The emergency power operation is terminated following the expiration of the mains settling time. The MCB closes, the load is transferred, and the GCB opens.

Overview for application mode A03

STOP	MANUAL	AUTOMATIC
PARALLEL: Breaker logic "Mains parallel" This operation mode may be used both in the case of an islanded system, an islanded parallel system, and a system that is operated in mains parallel.		
The GCB is opened.	Mains parallel operation can be performed via the "GCB On" push-button.	The GCB is synchronized via an add-on request and mains parallel operation is performed. When a shed-off request is issued, the generator sheds load, the GCB is opened, and the inverter stops.

4.4.3.1.7 GGB Handling

Introduction

Usually the easY-I treats the GGB always so that an open command is issued, if the GCB is opened. This is the GGB open mode.

In some applications this can lead to the issue that the AC power is separated from the generator bar in healthy mains situations. That means in times when the mains is feeding the load (MCB closed), the genset container (generator busbar) is not connected to AC power. But this is needed to support the battery charger and some other single consumers in standby situations. To fix that the GGB close mode is introduced.

The user can configure what adapts at best to his application.

Function

The easY-I3500XT includes a configuration which offers two modes for handling the GGB:

- GGB open mode
- GGB close mode

GGB open mode

AUTOMATIC operation:

The GGB is generally opened, when all GCBs are opened. The closing of the GGB is performed, if the own GCB is closed and enough nominal generator power is available. (refer to parameter ID3440 "Min. gen power"). A LogicsManager equation can be set on TRUE to override this blocking factor.

MANUAL operation:

Generally the GGB holds the last condition of the other operation modes. The GGB is allowed to be closed, if the GCB is closed.

STOP operation:

The GGB is generally opened, when all GCBs are opened. The closing will never be executed.

GGB close mode

AUTOMATIC operation:

The easY-I does not open automatically the GGB, when all GCBs are opened.

- The easY-I opens the GGB, if:
  - an emergency run situation is initiated (gen busbar gets dead)
  - the minimum generator power cannot be reached with a single genset. (Refer to ID 3440 “Min. generator power).

In these cases, the GGB is opened before the first GCB is closed. The first easY-I executes a GCB dead bus closure, others synchronize to generator busbar

- The reclosing of the GGB during standby situation is executed, if:
  - The mains is ok AND

Released

- the MCB is closed AND
- all GCBs are open AND
- no easY-I intends to do a GCB dead bus closure.

The easY-I never closes the GGB, if both sides of the GGB are dead. Exception: Run-up synchronization with GCB/GGB mode.



The closing of the GGB is finally performed, if the own GCB is closed and enough nominal generator power is available. (see parameter ID3440 "Min. gen power"). A LogicsManager equation can be set on TRUE to override this blocking factor.

MANUAL operation:

Generally the GGB holds the last condition of the other operation modes.

- The GGB is allowed to be closed, if the GCB is closed. The GGB is allowed to be closed on a dead generator busbar, if:
  - The mains is ok AND
  - the MCB is closed AND
  - all GCBs are open AND
  - no easY-I intends to do a GCB dead bus closure.

STOP operation:

The GGB is generally not operated.

Minimal Generator Power Consideration (Pmin)

With a GGB installed in the application an available generator power on busbar can be considered.

To ensure that there is enough generator power available before closing the GGB, a minimal generator rated power can be configured. Refer to ID3440 "Min. Generator power". The transfer sequence is delayed until the correct amount of nominal power is available. In special circumstances the Pmin consideration can be bypassed through a LogicsManager equation. Refer to ID12936 "Bypass min. Pgen.".

This consideration is provided in the operation modes AUTOMATIC, MANUAL and TEST and in all breaker transition modes.

4.4.3.2 General Breaker Settings

ID	Parameter	CL	Setting range [Default]	Description
3444	**Application mode**	2		The unit may be configured to different application modes. The discrete inputs and relay outputs are pre-defined dependent upon the selected application mode. Only the screens and functions that pertain to the application

Released

ID	Parameter	CL	Setting range [Default]	Description
				mode selected are displayed. The single line diagram in the main screen will change. Refer to “2.2 Application Modes Overview” for additional information.
			None	**Application mode A01** The control unit will function as an inverter start/stop control with inverter and DC source protection. All necessary inputs and outputs are assigned and pre-defined.
			GCB open	**Application mode A02** The control unit will function as an inverter start/stop control with inverter and DC source protection. The control unit can only open the GCB. All necessary inputs and outputs are assigned and pre-defined.
			GCB	**Application mode A03** The control unit will function as a one-CB unit. The control unit performs full control like synchronizing, opening and closing the GCB with inverter and DC source protection. All necessary inputs and outputs are assigned and pre-defined.
			[GCB/MCB]	**Application mode A04** The control unit will function as a two-CB unit. The control unit performs full control like synchronizing, opening and closing the GCB and the MCB with inverter and DC source protection. The GCB/MCB perform also full load transfer via open/closed transition, interchange and parallel mode. All necessary inputs and outputs are assigned and pre-defined.
			GCB/LSx	**Application mode A07** In this mode the unit operates the GCB with close and open orders. All other breakers in the system are operated by the LSx. The CAN system allows here a maximum 16 LSx and 32 easY-I-3400/3500(XT) devices.
			GCB/L-MCB	**Application mode A08** In this mode the unit operates the breakers like in the mode "GCB/MCB". But instead of operating the MCB directly over relays the unit

Released

ID	Parameter	CL	Setting range [Default]	Description
				commands an LSx to operate the MCB.
			GCB/GGB	**Application mode A05** In this mode the unit operates the GCB and a "Generator Group Breaker" (GGB) with close and open orders.
			GCB/GGB/MCB	**Application mode A06** In this mode the unit operates the GCB, the GGB and the MCB with close and open orders.
			GCB/GGB/L-MCB	**Application mode A09** In this mode the unit operates the breakers like in the mode "GCB/GGB/MCB". But instead of operating the MCB directly over relays the unit commands an LS-5 to operate the MCB.
			GCB/L-GGB	**Application mode A10** In this mode the unit operates the breakers like in the mode "GCB/GGB". But instead of operating the GGB directly over relays the unit commands an LS-5 to operate the GGB. In comparison to the "GCB/GGB" mode, it does not allow a mains parallel operation. So this is a purely islanded operation mode.
			GCB/L-GGB/L-MCB	**Application mode A11** In this mode the unit operates the breakers like in the mode "GCB/GGB/MCB". But instead of operating the MCB and GGB directly over relays the unit commands two single LS-5 to operate the MCB and GGB.
			GCB/L-GGBMCB	**Application mode A12** In this mode the unit operates the breakers like in the mode "GCB/GGB/MCB". But instead of operating the GGB and MCB directly over relays the unit commands the LS-5x2 to operate the GGB and the MCB. The LS-5x2 must be accordingly configured to application mode L-GGBMCB.
			GCB/GC	**GCB/GC Application mode A13** In this mode the unit operates the GCB with close and open orders. All other breakers in the system are operated by the Group Controller and eventually by LS-5. The system allows here a maximum 15 LS-5 and 31

Released

ID	Parameter	CL	Setting range [Default]	Description
				easYgen-3400/3500(XT) devices in one group. **Note:** Because of its load share messages, the Group Controller appears as a LS5 with device number 33 and as an easY-I with device number 32 in the diagnostic screens. For this reason the device number 32 for the easY-I and 33 for the LS5 are not allowed in this mode.
3411	**Breaker transition mode**	2		The control unit automatically controls the two breakers (MCB and GCB).
			External	
			Open Transition	
			Closed Transit.	
			Interchange	
			[Parallel]	
				Notes The following applies to application modes A04, A06, A08, A09, A11, and A12. For a detailed explanation for each mode refer to “4.4.3.1.6 Transition Modes (Breaker Logic)”. The unit provides two alternative transition modes, which may be activated temporarily via the LogicsManager and override the transition mode configured in this parameter.
3412	**Breaker transition mode 1**	2		The control unit automatically controls the two breakers (MCB and GCB).
			External	
			Open Transition	
			Closed Transit.	
			Interchange	
			[Parallel]	
				Notes The following applies to application modes A04, A06, A08, A09, A11, and A12. For a detailed explanation for each mode refer to “4.4.3.1.6 Transition Modes (Breaker Logic)”.

Released

ID	Parameter	CL	Setting range [Default]	Description
12931	**Transition mode 1**	2	Determined by LogicsManager 86.93 **[(0 & 1) & 1]** = 11922	Once the conditions of the LogicsManager have been fulfilled, the transition mode configured in parameter 3412 will be used instead of the standard transition mode configured in parameter 3411. For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
				Notes The following applies to application modes A04, A06, A08, A09, A11, and A12. Alternative transition mode 1 has priority over alternative transition mode 2, i.e. if both LogicsManager functions (parameters 12931 and 12932) are TRUE, breaker transition mode 1 (parameter 3412) will be used.
3413	**Breaker transition mode 2**	2		The control unit automatically controls the two breakers (MCB and GCB).
			External	
			Open Transition	
			Closed Transit.	
			Interchange	
			[Parallel]	
				Notes The following applies to application modes A04, A06, A08, A09, A11, and A12. For a detailed explanation for each mode refer to "4.4.3.1.6 Transition Modes (Breaker Logic)".
12932	**Transition mode 2**	2	Determined by LogicsManager 86.94 **[(0 & 1) & 1]** = 11923	Once the conditions of the LogicsManager have been fulfilled, the transition mode configured in parameter 3412 will be used instead of the standard transition mode configured in parameter 3411.
				Notes Alternative transition mode 1 has priority over alternative transition mode 2, i.e. if both LogicsManager functions (parameters 12931 and 12932) are TRUE, breaker transition mode 1 (parameter 3412) will be used.

Released

ID	Parameter	CL	Setting range [Default]	Description
				For information on the LogicsManager and its default settings see ⮡ “9.4.1 LogicsManager Overview”.
3400	**Transfer time GCB<->MCB**	2	1.00 to 99.99 s **[1.00 s]**	Switching from generator supply to mains supply or from mains supply to generator supply occurs automatically if the operating conditions have been met. The time between the reply "power circuit breaker is open" and a close pulse is set by this parameter. This time applies for both directions. During this time the consumers are de-energized. **Notes** The following applies to application modes A04, A06, A08, A09, A11, and A12. This is only valid, if parameter ⮡ 3411 is configured to OPEN TRANSITION
6676	**LSx slip freq. separate offset**	2	-0.50 to 0.50 Hz **[-0.1 Hz]**	This is a separate slip frequency offset, being executed instead of the "standard slip frequency offset" ⮡ 5502 if the easY-I receives an according flag "Synchronization with separated slip frequency offset". The flag is sent by the LSx (series II) Load share message. **Notes** This is usually receipt from an LSx, which synchronizes a breaker at the interchange point to mains. Here exporting power to mains must be avoided.

Released

4.4.3.3 Configure Breakers: GCB

General notes

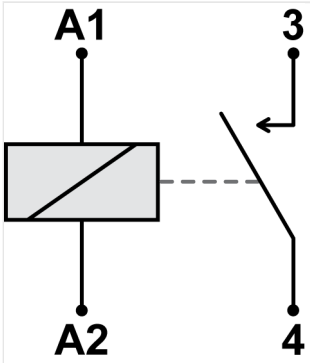


Fig. 145: Normally Open contacts - schematic

Normally Open (N.O.) contacts

The relay (discrete output) must be energized to close the contact.

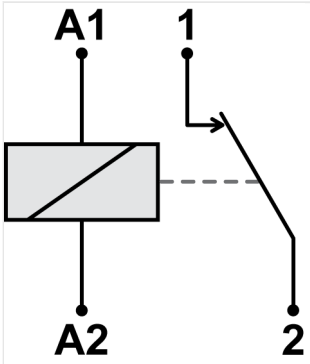


Fig. 146: Normally Closed contacts - schematic

Normally Closed (N.C.) contacts

The relay (discrete output) must be energized to open the contact.

ID	Parameter	CL	Setting range [Default]	Description
16999	**GCB is available**	4	No	Without GCB the inverter has a direct connection to the busbar and there is no difference between the generator and busbar voltage. **Notes**

ID	Parameter	CL	Setting range [Default]	Description
				The GCB feedback is still used and depends from the LogicsManager condition parameter 16907 The GCB open/close commands are not active.
			[Yes]	The GCB is installed and isolated the generator from the busbar.
				Notes The GCB feedback depends from the LogicsManager condition parameter 16907 and should consider the discrete input 8. The devices controls the breaker with the "open/close" commands.

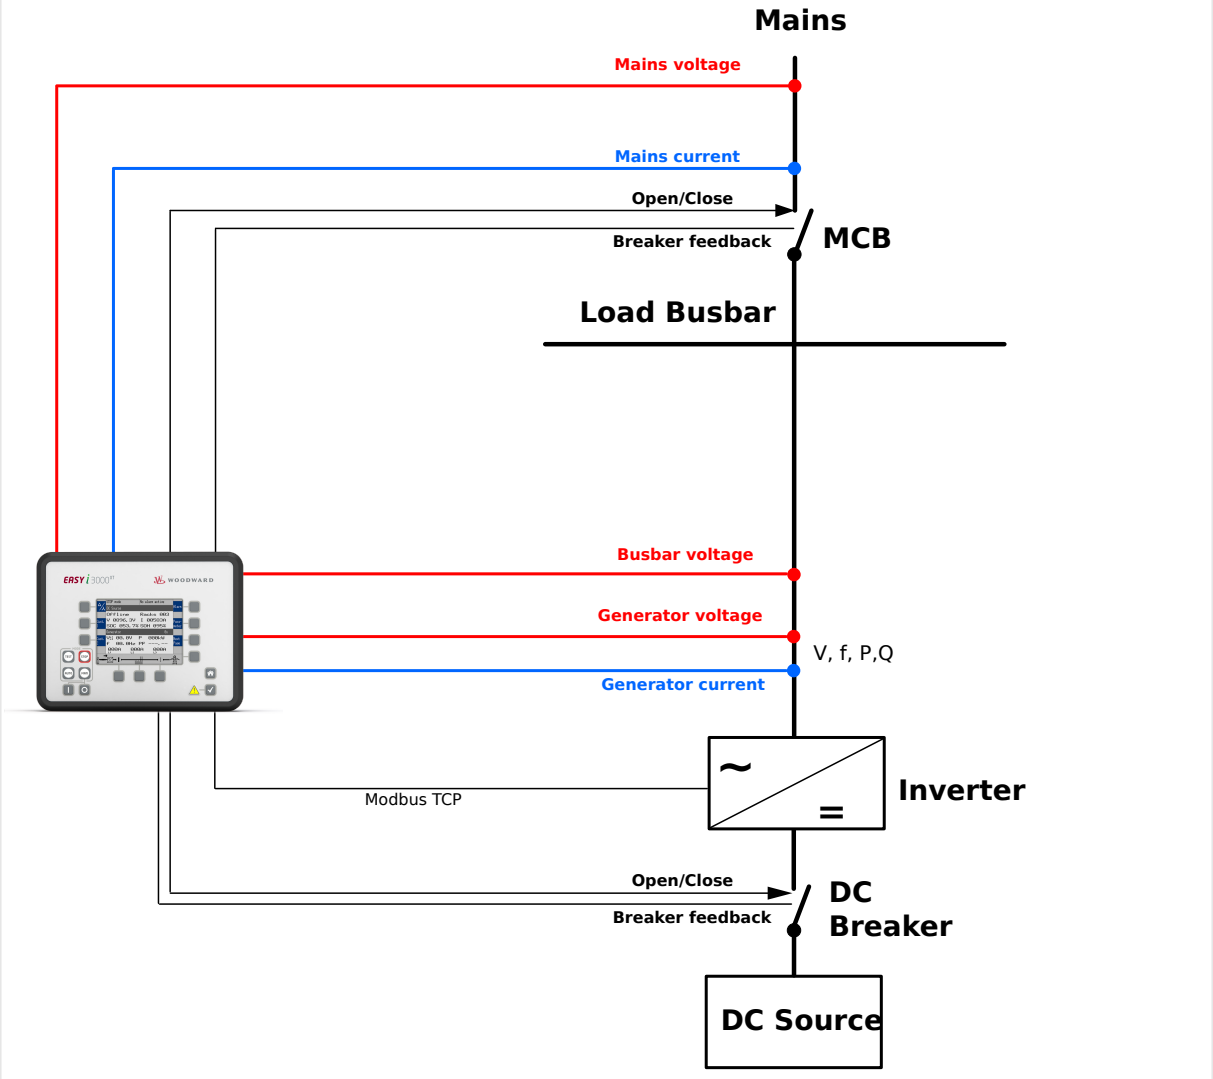


Fig. 147: Application without GCB

Released

ID	Parameter	CL	Setting range [Default]	Description
16907	**LM GCB is closed**	2	Determined by LogicsManager 04.06 **[Not (09.08 Discrete input 8 & 1 56.12 Status RUNNING) & 1]** = 10775	If this LogicsManager condition is TRUE the GCB is recognized as closed. The LogicsManager should consider all condition that can isolated the inverter from the busbar.
				Notes The inverter contains usually an AC-Contactor and the power flow is finally only possible if this breaker is closed. The easY-I needs the information about this technical circumstance to initiate accordingly the control of frequency/voltage respectively active/reactive power. The CLOSED TRANSIT. duration time <100ms is not possible if the AC-Conntactor feedback comes from the interface (Modbus TCP).
3403	**GCB open relay**	2	**[N.O.]**	Normally open: The relay "command: GCB open" will be energized to open the GCB and will be de-energized again after the discrete input "Reply GCB" is energized to signal the control that the GCB is open.
			N.C.	Normally closed: The relay "command: GCB open" will be de-energized to open the GCB and will be energized again after the discrete input "Reply GCB" is energized to signal the control that the GCB is open.
			Not used	A GCB open relay is not used and relay R7 (Command: open GCB) is freely programmable. In this case, parameter 3414 must be configured to "Steady" to open the breaker.
				Notes This parameter **only** applies to application mode A02 to A13. The "command: GCB open" is only active if the GCB is available (parameter 16999).
3414	**GCB close command**	2	Impulse	The relay "Command: GCB close" issues an add-on pulse. If the relay is configured in this manner a holding coil and sealing contacts must be installed externally to the control unit. The DI "Reply GCB" is used to identify closed contacts.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[Steady]	The relay "Command: close GCB" may be wired directly into the holding circuit for the power circuit breaker. If this method is utilized it is recommended that isolation relays are used. After the connect pulse has been issued and the reply of the power circuit breaker has been received, the relay "Command: close GCB" remains energized. If a class C alarm or higher occurs or a GCB open command is issued, this relay de-energizes.
				Notes In both cases the relay "Command: GCB open" energizes to open the GCB if parameter 3403 is not configured as "Not used". This parameter **only** applies to application modes A03 to A13. The "command: GCB close" is only active if the GCB is available (parameter 16999).
3416	**GCB time pulse**	2	0.10 to 1.00 s **[0.50 s]**	The time of the pulse output may be adjusted to the breaker being utilized.
				Notes This parameter **only** applies to application modes A03 to A13.
	Notes Regardless of breaker control, the values of 5700, 5701, 5702, 5703 and 5704 are important to the sync-check relay function.			
5700	**Voltage differential GCB**	2	0.00 to 20.00% **[5.00%]**	The maximum permissible voltage differential for closing the generator circuit breaker is configured here. If the difference between generator and busbar voltage does not exceed the value configured here and the generator voltage is within the operating voltage window (parameters 5800 and 5801), the "Command: GCB close" may be issued.
				Notes This value refers to the generator rated voltage (parameter 1766). This parameter **only** applies to application modes A03 to A13.

Released

ID	Parameter	CL	Setting range [Default]	Description
5701	**Pos. freq. differential GCB**	2	0.00 to 0.49 Hz **[+0.18 Hz]**	The prerequisite for a close command being issued for the GCB is that the differential frequency is below the configured differential frequency. This value specifies the upper frequency (positive value corresponds to positive slip → generator frequency is higher than the busbar frequency).
				Notes This parameter **only** applies to application modes A03 to A13.
5702	**Neg. freq. differential GCB**	2	-0.49 to 0.00 Hz **[-0.10 Hz]**	The prerequisite for a close command being issued for the GCB is that the differential frequency is above the configured differential frequency. This value specifies the lower frequency limit (negative value corresponds to negative slip → generator frequency is less than the busbar frequency).
				Notes This parameter **only** applies to application modes A03 to A13.
5703	**Max. positive phase angle GCB**	2	0.0 to 60.0° **[7.0°]**	The prerequisite for a close command being issued for the GCB is that the leading phase angle between generator and busbar is below the configured maximum permissible angle.
				Notes This parameter **only** applies to application modes A03 to A13.
5704	**Max. negative phase angle GCB**	2	-60.0 to 0.0° **[-7.0°]**	The prerequisite for a close command being issued for the GCB is that the lagging phase angle between generator and busbar is below the configured maximum permissible angle.
				Notes This parameter **only** applies to application modes A03 to A13.
3432	**Dead bus closure GCB**	2	**[On]**	A dead busbar closure is allowed if the required conditions are met.
			Off	A GCB close command to a dead busbar is prevented. Synchronization is still possible.
				Notes

ID	Parameter	CL	Setting range [Default]	Description
				This parameter **only** applies to application modes A03 to A13. For more information about dead busbar closure/negotiation, see “4.4.3.1 Good to know: Actions with Breakers”
3472	**Dead bus closure multi segment**	2	**[On]**	A dead busbar negotiation is done over all segments in the system.
			Off	A dead busbar negotiation is done only in the own segment.
				Notes This parameter **only** applies to application modes A03 to A13. For more information about dead busbar closure/negotiation, see “4.4.3.1 Good to know: Actions with Breakers”
15161	**Inh.dead bus GCB**	2	Determined by LogicsManager 87.74 **[(0 & 1) & 1]** = 11463	If active the dead bus closure of the GCB can be inhibited.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12976	**GCB open in MAN**	2	Determined by LogicsManager 87.46 **[(0 & 1) & 1]** = 11435	With the rising edge of this LogicsManager equation a GCB open command in operating mode MANUAL is initiated. The state TRUE of this LM inhibits the GCB close command in MANUAL.
				Notes This parameter **only** applies to application mode A03 to A13. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12977	**GCB close in MAN**	2	Determined by LogicsManager 87.47 **[(0 & 1) & 1]** = 11436	With the rising edge of this LogicsManager equation a GCB close command in operating mode MANUAL is initiated.Precondition: deactivated "GCB open in MAN"
				Notes This parameter **only** applies to application mode A03 to A13. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

Released

ID	Parameter	CL	Setting range [Default]	Description
5705	**Closing time GCB**	2	40 to 300 ms **[80 ms]**	The inherent closing time of the GCB corresponds to the lead-time of the close command. The close command will be issued independent of the differential frequency at the entered time before the synchronous point.
				Notes This parameter **only** applies to application modes A03 to A13.
3405	**GCB auto unlock**	2		This is used for special circuit breakers to put the GCB into a defined initial state or to enable closing at all.
			Yes	Before every close-pulse, an open-pulse is issued for defined duration (parameter 5708. A CB close pulse is enabled only after the open pulse is issued.
			[No]	The CB close pulse is enabled without being preceded by a CB open pulse.
				Notes This parameter **only** applies to application modes A03 to A13.
5708	**GCB open time pulse**	2	1.00 to 10.00 s **[1.00 s]**	This time defines the length of the GCB open time pulse, if the automatic switch unblocking GCB is activated.
				Notes This parameter **only** applies to application modes A03 to A13.
12887	**Enable GCB**	2	Determined by LogicsManager 86.95 **[(1 & 1) & 1]** = 12051	If active the closure of the GCB is enabled otherwise the GCB closure is disabled
				Notes Changing the state will cause an entry in the event list. If disabled, status "GCB closure disabled" alternating with "Inverter is running" will be indicated.
12886	**Open GCB immediately**	2	Determined by LogicsManager 86.51 **[(0 & 1) & 1]** = 12052	Once the conditions of the LogicsManager have been fulfilled the GCB will be opened immediately.
				Notes The "Open GCB immediately" has a higher priority than the Enable

Released

ID	Parameter	CL	Setting range [Default]	Description
				GCB function and is valid for all application and operating modes.

4.4.3.4 Configure Breakers: GGB

General notes



All of the following Parameters only apply to the application modes:

A05, A06, A09, A10, A11 and A12

ID	Parameter	CL	Setting range [Default]	Description
3440	**Min.Generator power**	2	0.00 to 327.67 MW **[0.10 MW]**	GGB operation - the GGB shall be closed when a minimum of generator rated power is available. Each easY-I adds the nominal power of all active running generators to determine the closing of the GGB. **Notes** This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
12936	**Bypass min. Pgen.**	2	Determined by LogicsManager 87.29 = 11418	This LogicsManager equation can bypass the considered minimal nominal generator power for closing the GGB. If the LogicsManager becomes TRUE the GGB will be closed independent of the current nominal generator power. According to the breaker transfer mode. Precondition: minimum one GGB is closed. **Notes** This parameter is valid for transition modes A05, A06, A09, A10, A11, and A12 now. On lower software versions (> SW 1.2100) this parameter **only** applied to application modes A05 and A06. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
3471	**GGB open relay**	2	**[N.O.]**	The relay "command: GGB open" will be energized to open the GGB and will be de-energized again after the discrete input "Reply

Released

ID	Parameter	CL	Setting range [Default]	Description
				GGB" is energized to signal the control that the GGB is open.
			Not used	The LogicsManager relay R11 is freely programmable. The configuration "04.25 Opening GGB active" works similar to the "N.O." logic.
5726	**GGB time pulse**	2	0.10 to 0.50 s **[0.50 s]**	The time of the pulse output may be adjusted to the breaker being utilized.
5731	**Synchronization GGB**	2	**[Slip frequency]**	The frequency controller adjusts the frequency in a way, that the frequency of the source (generator) is marginal greater than the target (load busbar). When the synchronizing conditions are reached, a close command will be issued. The slipping frequency depends on the setting of "Slip frequency offset" (parameter 5502).
			Phase matching	The frequency controller adjusts the phase angle of the source (generator) to that of the target (load busbar), in view of turning the phase difference to zero.
				Notes Please consider that the "Phase angle compensation MCB" (parameter 8841 influences the GGB synchronization as well. In both synchronisations the phase angle between generator busbar and mains is used. This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
				Notes Regardless of breaker control, the values of 5723, 5724, and 5720 are important to the sync-check relay function.
5720	**Voltage differential GGB**	2	0.50 to 20.00% **[5.00%]**	The maximum permissible voltage differential for closing the generator group breaker is configured here. If the difference between generator busbar and mains voltage does not exceed the value configured here and the mains voltage is within the operating voltage window (parameters 5810 and 5811), the "Command: GGB close" may be issued.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				This value refers to the generator rated voltage (parameter 1766) and mains rated voltage (parameter 1768). This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
5721	**Pos. freq. differential GGB**	2	0.0 to 0.49 Hz **[+0.18 Hz]**	The prerequisite for a close command being issued for the GGB is that the differential frequency is below the configured differential frequency. This value specifies the upper frequency (positive value corresponds to positive slip → generator frequency is higher than the load busbar frequency).
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
5722	**Neg. freq. differential GGB**	2	-0.49 to 0.00 Hz **[-0.10 Hz]**	The prerequisite for a close command being issued for the GGB is that the differential frequency is above the configured differential frequency. This value specifies the lower frequency limit (negative value corresponds to negative slip → generator frequency is less than the load busbar frequency).
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
5723	**Max. positive phase angle GGB**	2	0.0 to 60.0° **[7.0°]**	The prerequisite for a close command being issued for the GGB is that the leading phase angle between generator and load busbar is below the configured maximum permissible angle.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12. This parameter is only displayed, if parameter 5731 is configured to "Phase matching".
5724	**Max. negative phase angle GGB**	2	-60.0 to 0.0° **[-7.0°]**	The prerequisite for a close command being issued for the GGB is that the lagging phase angle between generator and load busbar is below the configured maximum permissible angle.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12. This parameter is only displayed, if parameter 5731 is configured to "Phase matching".
5727	**Dwell time GGB**	2	0.0 to 60.0 s **[3.0 s]**	This is the minimum time that the generator voltage, frequency, and phase angle must be within the configured limits before the breaker will be closed.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12. This parameter is only displayed, if parameter 5731 is configured to "Phase matching".
3422	**GGB mode**	2	**[GGB open mode]**	The GGB opens when the last GCB was opened.
			GGB close mode	The GGB is usually closed.
3445	**Dead bus closure GGB**	2	**[On]**	A dead busbar closure is allowed if the required conditions are met.
			Off	A GGB close command to a dead load busbar is prevented. Synchronization is still possible.
5725	**Closing time GGB**	2	40 to 300 ms **[80 ms]**	The inherent closing time of the GGB corresponds to the lead-time of the close command. The close command will be issued independent of the differential frequency at the entered time before the synchronous point.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
3441	**Voltage monitoring load busbar**	2		The decision to close the GGB or the MCB on a dead load busbar depends on the feedback of the GGB and MCB. To avoid damage because of a wrong breaker feedback the condition of the load busbar can additionally be monitored by a separate voltage relay.
			On	The external load busbar voltage monitoring is enabled and the terminal 76 (input 10) expects a dead load busbar signal according to the breaker feedback GGB and MCB. The signal is usually

Released

ID	Parameter	CL	Setting range [Default]	Description
				provided by an external three phase voltage relay.
			[Off]	The external load busbar voltage monitoring is disabled and the terminal 76 (input 10) is free for other purposes.
3446	**GGB auto unlock**	2		This is used for special circuit breakers to put the GGB into a defined initial state or to enable closing at all.
			Yes	Before every close-pulse, an open-pulse is issued for defined duration (parameter 5719. A CB close pulse is enabled only after the open pulse is issued.
			[No]	The CB close pulse is enabled without being preceded by a CB open pulse.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
5719	**GGB open time pulse**	2	0.10 to 9.90 s **[1.00 s]**	This time defines the length of the GGB open time pulse, if the automatic switch unblocking GGB is activated.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.
12972	**GGB open in MAN**	2	Determined by LogicsManager 87.61 = 11450	With the rising edge of this LogicsManager equation a GGB open command in operating mode MANUAL is initiated. The state TRUE of this LM inhibits the GGB close command in MANUAL.
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12973	**GGB close in MAN**	2	Determined by LogicsManager 87.62 = 11451	With the rising edge of this LogicsManager equation a GGB close command in operating mode MANUAL is initiated.Precondition: deactivated "GGB open in MAN"
				Notes This parameter **only** applies to application mode A05, A06, A09, A10, A11 and A12.

Released

ID	Parameter	CL	Setting range [Default]	Description
				For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12948	**Enable GGB**	2	Determined by LogicsManager 87.37 **[(Not 04.02 Operat. mode STOP & 1) & 1]** = 11426	If active the closure of the GGB is enabled otherwise the GGB closure is disabled **Notes** Changing the state will cause an entry in the event list. If disabled, status "GGB closure disabled" will be indicated.
12947	**Open GGB immediately**	2	Determined by LogicsManager 87.36 **[(0 & 1) & 1]** = 11425	Once the conditions of the LogicsManager have been fulfilled the GGB will be opened immediately. **Notes** The "Open GGB immediately" has a higher priority than the Enable GGB function and is valid for all application and operating modes.

4.4.3.5 Configure Breakers: MCB

General notes

The following parameters are **only** applicable for application modes A04, A06, A08, A09, A11 and A12.

ID	Parameter	CL	Setting range [Default]	Description
3398	**MCB open relay**	2	**[N.O.]**	The relay "command: MCB open" will be energized to open the MCB and will be de-energized again after the discrete input "Reply MCB" is energized to signal the control that the MCB is open.
			Not used	The LogicsManager relay R9 is freely programmable. The pre-configuration "04.22 Opening MCB active" works similar to the "N.O." logic.
3417	**MCB time pulse**	2	0.10 to 0.50 s **[0.50 s]**	Breaker pulse duration to close the MCB The time of the pulse output may be adjusted to the breaker being utilized.

ID	Parameter	CL	Setting range [Default]	Description
5730	**Synchronization MCB**	2	**[Slip frequency]**	The frequency controller adjusts the frequency in a way, that the frequency of the source (busbar) is marginal greater than the target (mains). When the synchronizing conditions are reached, a close command will be issued. The slipping frequency is positive to avoid reverse power.
			Phase matching	The frequency controller adjusts the phase angle of the source (busbar) to that of the target (mains), in view of turning the phase difference to zero.
Notes Regardless of breaker control, the values of the following parameters 5710, 5711, 5712, 5713, 5714, 8841, and 8842 are important to the sync-check relay function.				
5713	**Max. positive phase angle MCB** (Maximum permissible positive phase angle MCB)	2	0.0 to 60.0° **[7.0°]**	The prerequisite for a connect command being issued for the MCB is that the leading phase angle between busbar and mains is below the configured maximum permissible angle.
				Notes This parameter is only displayed, if parameter ↳ 5730 is configured to "Phase matching". This parameter **only** applies to application mode A04 and A06.
5714	**Max. negative phase angle MCB** (Maximum permissible negative phase angle MCB)	2	-60.0 to 0.0° **[-7.0°]**	The prerequisite for a connect command being issued for the MCB is that the lagging phase angle between busbar and mains is below the configured maximum permissible angle.
				Notes This parameter is only displayed, if parameter ↳ 5730 is configured to "Phase matching". This parameter **only** applies to application mode A04 and A06.
5710	**Voltage differential MCB**	2	0.00 to 20.00% **[5.00%]**	The maximum permissible voltage differential for closing the mains circuit breaker is configured here.
				Notes This value refers to the generator rated voltage (parameter ↳ 1766) and mains rated voltage (parameter ↳ 1768). If the difference between mains and busbar voltage does not exceed the value configured here and the mains voltage is within the operating voltage window (parameters ↳ 5810 and ↳

Released

ID	Parameter	CL	Setting range [Default]	Description
				5811), the "Command: MCB close" may be issued. This parameter **only** applies to application mode A04 and A06.
5711	**Pos. freq. differential MCB** (Positive frequency differential MCB)	2	0.02 to 0.49 Hz **[0.18 Hz]**	The prerequisite for a connect command being issued for the MCB is that the differential frequency is below the configured differential frequency. This value specifies the upper frequency (positive value corresponds to positive slip → busbar frequency is higher than the mains frequency).
				Notes This parameter **only** applies to application mode A04 and A06.
5712	**Neg. freq. differential MCB** (Negative frequency differential MCB)	2	-0.49 to 0.00 Hz **[-0.10 Hz]**	The prerequisite for a connect command being issued for the MCB is that the differential frequency is above the configured differential frequency. This value specifies the lower frequency limit (negative value corresponds to negative slip → busbar frequency is less than the mains frequency).
				Notes This parameter **only** applies to application mode A04 and A06.
5709	**MCB sync. with separate slip**	2	On	The MCB is synchronized with an individual slip frequency (also negative).
				Notes The setting for the slipping frequency (parameter 5647) via display is located under 'configure frequency control'.
			[Off]	The MCB is synchronized with the same slip frequency like the GCB (parameter 5502).
				Notes This parameter **only** applies to application mode A04 and A06.
5647	**MCB slip freq. setpoint offset**	2	-0.50 ... 0...50 Hz **[-0.10 Hz]**	Individual frequency offset for the MCB and LS5 synchronization. This value can be a positive or negative offset. The value is valid as long as the parameter 'MCB synchronization with separate slip' On/Off' (parameter 5709) is set to 'On'.

ID	Parameter	CL	Setting range [Default]	Description
8841	**Phase angle compensation MCB**	23		The phase angle between busbar voltage and mains voltage can be compensated according to an installed power transformer between busbar and mains.
			On	The compensation is active. The phase will be compensated according the value configured in parameter 8842.
				Notes Measured values 181 'Ph.ang.busb1-gen.L12' and 184 'Ph.ang.mns.busb1 L12' are not changed but the compensated (8842) values are taken for synchronization control and synchroscope display.
			[Off]	The compensation is inactive. The phase angle is directly taken from the measurement.
				Notes WARNING: Ensure the following parameters are configured correctly to prevent erroneous synchronization settings. Incorrect wiring of the system cannot be compensated for with this parameter! Please check during initial commissioning the phase angle and the synchronization with a zero voltmeter. **Recommendation:** For safety reasons, please mark the easY-I with a label showing the configured phase angle compensation. Refer to "6.3.8 Phase Angle Compensation" for details. This parameter **only** applies to application mode A04 and A06.
8842	**Phase angle MCB**	3	-180 to 180° **[0°]**	The phase angle compensation corrects the degree between busbar voltage and mains voltage. The configured degree is added to the real measured phase angle.
				Notes This parameter **only** applies to application mode A04 and A06. Ensure correct configuration to prevent erroneous synchronization settings to avoid generator **destructive power**. Incorrect wiring cannot be compensated for with this parameter!

Released

ID	Parameter	CL	Setting range [Default]	Description
5717	**Phase matching MCB dwell time**	2	0.0 to 60.0 s **[3.0 s]**	This is the minimum time that the generator/busbar voltage, frequency, and phase angle must be within the configured limits before the breaker will be closed.
				Notes This parameter is only displayed, if parameter 5730 is configured to "Phase matching". This parameter **only** applies to application mode A04 and A06.
3431	**Dead bus closure MCB**	2	**[On]**	A dead busbar closure is allowed if the required conditions are met.
			Off	An MCB close command to a dead busbar is prevented. Synchronization is still possible.
				Notes This parameter **only** applies to application mode A04, A06, A08, A09, A11, and A12.
5715	**Closing time MCB**	2	40 to 300 ms **[80 ms]**	The inherent closing time of the MCB corresponds to the lead-time of the close command. The close command will be issued independent of the differential frequency at the entered time before the synchronous point.
				Notes This parameter **only** applies to application mode A04 and A06.
3407	**MCB auto unlock**	2		This is used for special circuit breakers to put the MCB into a defined initial state or to enable closing at all.
			Yes	Before every close-pulse, an open-pulse is issued for defined duration (parameter 5718. A CB close pulse is enabled only after the open pulse is issued.
			[No]	The CB close pulse is enabled without being preceded by a CB open pulse.
				Notes This parameter **only** applies to application mode A04 and A06.
12923	**Enable MCB**	2	Determined by LogicsManager 86.85 **[(09.06 Discrete input 6 & ! 08.07 MCB fail to close) & ! 07.05 Mns.ph.rot. mismatch]**	Once the conditions of the LogicsManager have been fulfilled the closure of theMCB will be enabled.
				Notes

ID	Parameter	CL	Setting range [Default]	Description
			= 11914	DI 6 is pre-assigned by default to this function, but may be configured freely. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”. This parameter **only** applies to application mode A04, A06, A08, A09, A11, and A12.
5718	**MCB open time pulse**	2	0.10 to 9.90 s **[1.00 s]**	This time defines the length of the MCB open time pulse, if the automatic switch unblocking MCB is activated. **Notes** This parameter **only** applies to application mode A04 and A06.
12974	**MCB open in MAN**	2	Determined by LogicsManager 87.48 **[(0 & 1) & 1]** = 11437	With the rising edge of this LogicsManager equation a MCB open command in operating mode MANUAL is initiated. The state TRUE of this LM inhibits the MCB close command in MANUAL. **Notes** This parameter **only** applies to application mode A04, A06, A08, A09, A11, and A12. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12975	**MCB close in MAN**	2	Determined by LogicsManager 87.49 **[(0 & 1) & 1]** = 11438	With the rising edge of this LogicsManager equation a MCB close command in operating mode MANUAL is initiated.Precondition: deactivated "MCB open in MAN" **Notes** This parameter **only** applies to application mode A04, A06, A08, A09, A11, and A12. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

Released

4.4.3.6 Configure Breakers: Synchronization

General notes

The following parameters are **only** applicable for application modes A03 to A13

ID	Parameter	CL	Setting range [Default]	Description
5728	**Synchronization mode**	2	Off	The synchronization is disabled; the frequency and voltage adaptation for synchronization is not active. In operation mode AUTO the easY-I allows the external GCB closing in synchronization mode “Off” if: • Start request in automatic active • The inverter is ready for operation In operation mode AUTO the easY-I allows the external MCB closing in synchronization mode “Off” if: • Mains is in the operating range In operation mode AUTO the easY-I allows the external GGB closing in synchronization mode “Off” if: • Minimum 1 GCB is closed
			PERMISSIVE	The unit acts as a synch check device. The unit will not issue speed or voltage bias commands to achieve a synchronization, but if phase matching synchronization conditions are matched (frequency, phase, voltage and phase angle), the control will issue a breaker close command. There are two different functionalities of this option depending on the setting of parameter 3414 (GCB close command). • GCB close command set to "Impulse": The GCB close command is pulsed as long as the synchronization conditions are matched. • GCB close command set to "Steady": The GCB close command remains enabled as long as

ID	Parameter	CL	Setting range [Default]	Description
				the synchronization conditions are matched.
			CHECK	Used for checking a synchronizer prior to commissioning. The control actively synchronizes generator(s) by issuing speed and voltage bias commands, but does not issue a breaker closure command for synchronizing.
			[RUN]	Normal operating mode. The control actively synchronizes and issues breaker closure commands.
			Controlled by LM	The synchronization mode may be selected by enabling one of the respective LogicsManager functions (parameters 12907, 12906, or 12908). If none of these parameters is enabled, the synchronization is disabled. If more than one of these parameters is enabled, the following priority is valid: • 1. PERMISSIVE • 2. CHECK • 3. RUN
				Notes The device will still perform a dead busbar closure if the conditions are valid.
12907	**Syn. mode PERMIS.** (Synchronization mode PERMISSIVE)	2	Determined by LogicsManager 86.39 **[(0 & 1) & 1]** = 11618	Once the conditions of the LogicsManager have been fulfilled the PERMISSIVE synchronization mode will be enabled.
				Notes For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
12906	**Syn. mode CHECK** (Synchronization mode CHECK)	2	Determined by LogicsManager 86.38 **[(0 & 1) & 1]** = 11617	Once the conditions of the LogicsManager have been fulfilled the CHECK synchronization mode will be enabled.
				Notes For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
12908	**Syn. mode RUN**	2	Determined by LogicsManager 86.40 **[(0 & 1) & 1]**	Once the conditions of the LogicsManager have been fulfilled the RUN synchronization mode will be enabled.

Released

ID	Parameter	CL	Setting range [Default]	Description
	(Synchronization mode RUN)		= 11619	**Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
15157	**Synchroscope autom. to front** (Synchroscope automatic to front)	2	On	The synchroscope screen automatically appears on the main screen, when the synchronization becomes active.
			[Off]	Functionality deactivated.

4.4.3.6.1 Independent Sync. Check Function

General notes

The device provides two independent "Sync Check" functions for the voltage comparisons generator to busbar and busbar to mains. The criteria are the same like for the according internal self-executed synchronization.

The easY-I provides two command variables available for the LogicsManager input:

- 02.29 Sync.Check gen./busb
- 02.32 Sync.Check mns/busb

WARNING!

No dead bus interlocking

Synch. Check is intended to be a redundant check function enhancing system security.
Don't use for MCB control!

The Sync. Check functionality is available in every application mode. The command variables are independently calculated and depending on the same configurations, like the self-executed GCB and MCB close commands. The sync. Check function has no influence on any frequency or voltage biasing. There is no relationship to the Sync. Check mode for the internal self-executed synchronization.

The Synch. Check command variables do not care about:

- Possible dead busbar closure capabilities
- Internally calculated self-executed circuit breaker close orders
- Synchronization control conditions, like »mains settling time «

Variables and Parameters

»02.29 Sync.Check gen./busb« depends on

- Voltage

Released

- Frequency

  and

- Phase angle

The command variable »02.29 Sync.Check gen./busb« is true if the synchronization conditions are matched according to (GCB) parameters:

- 5701: Pos. freq. differential
- 5702: Neg. freq. differential
- 5700: Voltage differential
- 5703: Max. positive phase angle
- 5704: Max. negative phase angle GCB

»02.32 Sync.Check mns/busb« depends on

- Voltage
- Frequency

  and

- Phase angle

The command variable »02.32 Sync.Check mns/busb« is true, if the synchronization conditions are matched according to parameters:

- 5711: Pos. freq. differential MCB
- 5712: Neg. freq. differential MCB
- 5710: Voltage differential MCB
- 8841,8842: Phase angle compensation MCB
- 5713: Max. positive phase angle MCB
- 5714: Max. negative phase angle MCB

4.4.3.7 Configure Breakers: Neutral Interlocking

General Notes

The Neutral Interlocking feature controls a Neutral Contactor (NC) of each generator. The rule is that only one neutral contactor of all running generators are closed. The Logic ensures that with changing of generators the neutral link is passed over to another running generator. Refer to “6.3.10 Neutral Interlocking” for more information.

ID	Parameter	CL	Setting range [Default]	Description
1840	**Neutral Interlocking**	2	On	Neutral interlocking is enabled. The command variable "03.39

Released

ID	Parameter	CL	Setting range [Default]	Description
				Close neutral cont." is activated and the DI 12 is used for the NC feedback. The unit monitors the NC feedback according to the close order.
			[Off]	Neutral interlocking is disabled. The NC monitoring is disabled.
1841	**Priority**	2	1 ... 32 **[1]**	The priority determines which NC is closed, if multiple gens are running in the same segment. **Notes** The lower the configured number, the higher the priority

To make use of the Close neutral interlocking contactor status, configure a discrete output relay DO x to react for 03.39.

4.4.4 Configure Controller

WARNING!

Hazards due to incorrect settings

The following parameters dictate how the easY-I controls voltage, frequency, load and power factor.

Failure to do so may lead to incorrect measurements and failures within the control unit resulting in damage to or destruction of the generator and/or personal injury or death.

- Always ensure that the correct settings are entered in these parameters.

The Real load, reactive load, and process control all utilize PID controllers. The response of each control loop can be adjusted for optimum response, however it is important to understand what a PID controller is and the effect of each controller adjustment has on the controller response.

Proportional gain, integral gain (stability) and DR (speed derivative ratio) are the adjustable and interacting parameters used to match the response of the control loop with the response of the system.

They correspond to the P (proportional), I (integral), and D (derivative) terms, and are displayed in the easY-I as follows:

P	Proportional gain (%)
I	Integral gain (%)
D	Derivative gain (determined by DR and I)

Proportional control

Proportional response is directly proportional to a process change.

- Analogy: Setting hand throttle to keep constant speed on straight and level road.

Proportional control (using the same analogy) results in a certain speed as long as the car is not subjected to any load change such as a hill. If a throttle is set to any particular setting, the speed of the car will remain constant as long as the car remains straight and level. If the car goes up a hill it will slow down. Of course, going down a hill the car would gain speed.

Integral control

Integral compensates for process and setpoint load changes.

- Analogy: Cruise control maintains constant speed regardless of hills.

Integral, sometimes called reset, provides additional action to the original proportional response as long as the process variable remains away from the setpoint. Integral is a function of the magnitude and duration of the deviation. In this analogy the reset response would keep the car speed constant regardless of the terrain.

Derivative

Derivative provides a temporary over-correction to compensate for long transfer lags and reduce stabilization time on process upsets (momentary disturbances). The behavior of the derivative parameter is shown in Fig. 148.

- Analogy: Accelerating into high speed lane with merging traffic.

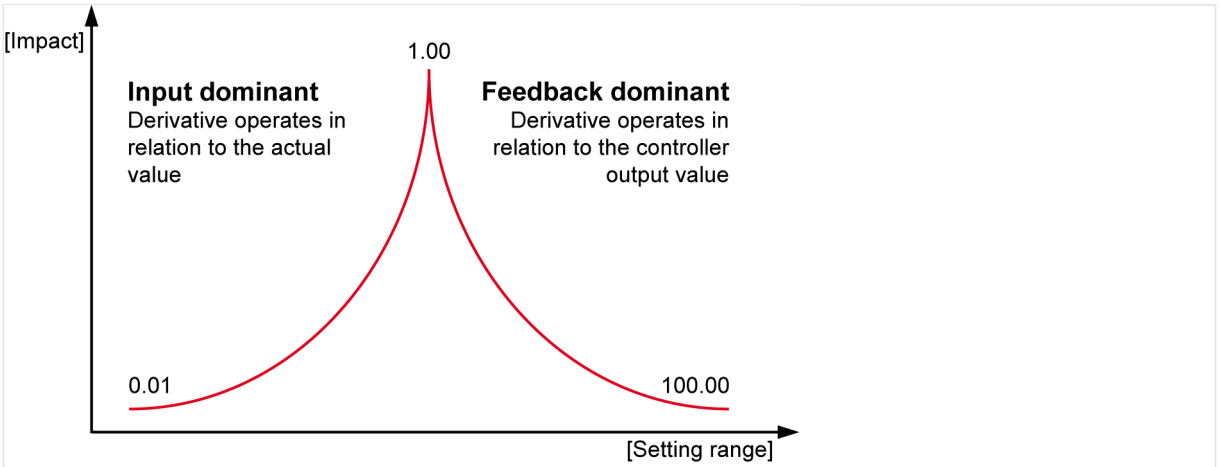


Fig. 148: Behavior of the derivative parameter

Derivative, sometimes called "preact" of "rate", is very difficult to draw an accurate analogy to, because the action takes place only when the process changes and is directly related to the speed at which the process changes.

Merging into high speed traffic of a freeway from an "on" ramp is no easy task and requires accelerated correction (temporary overcorrection) in both increasing and decreasing directions. The application of brakes to fall behind the car in the first continuous lane or passing gear to get ahead of the car in the first continuous lane is a derivative action.

Released

PID tuning example

If the system is unstable, make sure the governor is the cause. This can be checked by closing the valve limiter until it has control of the actuator output. If the governor is causing the oscillation, time the oscillation cycle time. A rule-of- thumb is, if the system's oscillation cycle time is less than 1 second, reduce the Proportional gain term. A rule-of-thumb is, if the system's oscillation cycle time is greater than 1 second, reduce the Integral gain term (proportional gain may need to be increased also).

On an initial startup with the easY-I, all PID dynamic gain terms will require adjustment to match the respective PID's response to that of its control loop. There are multiple dynamic tuning methods available that can be used with the easY-I's PIDs to assist in determining the gain terms that provide optimum control loop response times.

⚙

> The following method can be used to achieve PID gain values that are close to optimum:

1. ▷ Increase Derivative Ratio (DR) to 100.

2. ▷ Reduce integral gain to 0.01.

3. ▷ Increase proportional gain until system just starts to oscillate.

> The optimum gain for this step is when the system just starts to oscillate and maintains a self-sustaining oscillation that does not increase or decrease in magnitude.

4. ▷ Record the control gain (Kc) and oscillation period (T) in seconds.

5. ▷ Set the dynamics as follows:

- For PI control G=P(I/s + 1) set:
  - Proportional gain = 0.45*Kc
  - Integral gain = 1.2/T
  - Derivative ratio = 100
- For PID control G=P(I/s + 1 + Ds) set:
  - Proportional gain = 0.60*Kc
  - Integral gain = 2/T
  - Deriv ratio = 8/(T*Integral Gain) for feedback dominant
  - Deriv ratio = (T*Integral Gain)/8 for input dominant

▶ This method of tuning will get the gain settings close, they can be fine-tuned from this point.

4.4.4.1 Voltage Control

ToolKit: find settings screen

[Parameter / Configuration / Configure application / Configure controller / Configure voltage control]

AnalogManagers to define input signal of voltage setpoint (1, 2) are available in ToolKit by

- a click from screen/page "Configure voltage control"
  - on the button "Analog manager" in the left sidebar (below permanent buttons) or
  - on two times "next page", or
- search for one of the AnalogManagers 5618/5619

ToolKit: Trend chart

ToolKit offers a trend visualization accessible by

- a click from screen/page "Configure voltage control"
  - on the button "Trend chart" in the left sidebar (below permanent buttons) or
  - on "next page", or
- search for one of the voltage controlled value shown at the status screen

ID	Parameter	CL	Setting range **[Default]**	Description
5607	**Voltage control**	2	Off	Voltage control is not carried out.
			[PID analog]	The voltage is controlled using an analog PID controller.
			3pos controller	The voltage is controlled using a three-step controller.
			AVR **Note:** (Accessible only in easY-I 3400XT/3500XT)	The voltage is controlled by using an internal AVR algorithm acting on the “easYgen | exciter-10” (EX-10) or AVRbridge-10-P1 module. **Note:** With enabling the AVR function the power factor control (kvar control) is provided as well over this algorithm. The setting 5625 Power factor control is faded out.
5608	**Voltage control initial state**	2	0.0 to 100.0% **[50.0%]**	The value entered for this parameter is the start reference point for the analog output to the voltage controller. If the output to the voltage control has been disabled, the output will act as a control position reference point.

Released

ID	Parameter	CL	Setting range [Default]	Description
5610	**Proportional gain**	2	0.01 to 100.00 **[1.00]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. **Notes** This parameter is only visible if voltage control (parameter 5607) is configured to "PID analog".
5611	**Integral gain**	2	0.01 to 100.00 **[1.00]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the inverter will continually oscillate. If the integral gain constant is too small, the inverter will take too long to settle at a steady state. **Notes** This parameter is only visible if voltage control (parameter 5607) is configured to "PID analog".
5612	**Derivative ratio**	2	0.01 to 100.00 **[0.01]**	The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset. **Notes** This parameter is only visible if voltage control (parameter

Released

ID	Parameter	CL	Setting range [Default]	Description
				5607) is configured to "PID analog". The default configured controller acts like a PI controller what is the valid D part setting for systems with secondary controllers.
5650	**Deadband**	1	0.1 to 9.9% **[1.0%]**	**islanded operation** The generator voltage is controlled in such a manner that the measured voltage does not deviate from the configured setpoint by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts. **Synchronization** The generator voltage is controlled in such a manner that the measured voltage does not deviate from the monitored reference (mains or busbar) voltage by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts. The value configured for this parameter must be less than the value configured for the dV max (maximum voltage differential) for synchronization (parameters 5700 or 5710). **Notes** This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".
5651	**Time pulse minimum**	1	0.01 to 2.00 s **[0.05 s]**	A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired voltage reference point. **Notes** This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".
5652	**Gain factor**	1	0.1 to 10.0	The gain factor Kp influences the operating time of the relays. By increasing the number configured

Released

ID	Parameter	CL	Setting range [Default]	Description
			[5.0]	in this parameter, the operating time of the relay will be in-creased in response to a deviation from the voltage reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.
				Notes This parameter is only visible if voltage control (parameter ↳ 5607) is configured to "3pos controller".
5659	**Cycle time factor**	1	1.0 to 20.0 **[1.0]**	The cycle time factor adjusts the time between the pulses (pause time). By increasing the cycle time factor, the time between the pulses increases.
				Notes This parameter is only visible if voltage control (parameter ↳ 5607) is configured to "3pos controller".
5653	**Expand deadband factor**	1	1.0 to 9.9 **[1.0]**	If the measured generator voltage is within the deadband range (parameter ↳ 5650) and the configured delay expand deadband time (parameter ↳ 5654) expires, the deadband will be multiplied with the factor configured here.
				Notes This parameter is only visible if voltage control (parameter ↳ 5607) is configured to "3pos controller".
5654	**Delay expand deadband**	1	1.0 to 9.9 s **[2.0 s]**	The measured generator voltage must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter ↳ 5653.
				Notes This parameter is only visible if voltage control (parameter ↳

Released

ID	Parameter	CL	Setting range [Default]	Description
				5607) is configured to "3pos controller".
5618	**AM Voltage SP1 [V]**	2	Determined by AnalogManager 81.09 **[A1 = 05.57 Internal v setp1 [V]]**	The voltage setpoint 1 source may be selected from the available data sources. The internal voltage setpoint 05.57 can be changed manually at the setpoint screen of the display. **Notes** The voltage setpoint may be adjusted within the configured operating limits (↳ “4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”).
5600	**Int.voltage control setpoint 1**	2	50 to 650,000 V **[400 V]**	The internal generator voltage setpoint 1 is defined in this screen. This value is the reference for the voltage controller when performing islanded and/or no-load operations.
5619	**AM Voltage SP2 [V]**	2	Determined by AnalogManager 81.10 **[A1 = 05.58 Internal v setp2 [V]]**	The voltage setpoint 2 source may be selected from the available data sources. The internal voltage setpoint 05.58 can be changed manually at the setpoint screen of the display. **Notes** The voltage setpoint may be adjusted within the configured operating limits (↳ “4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”).
5601	**Int.voltage control setpoint 2**	2	50 to 650,000 V **[400 V]**	The internal generator voltage setpoint 2 is defined in this screen. This value is the reference for the voltage controller when performing islanded and/or no-load operations.
12920	**Setp. 2 voltage**	2	Determined by LogicsManager 86.83 **[(0 & 1) & 1]** = 11912	If this LogicsManager condition is TRUE, the voltage setpoint 2 will be used instead of voltage setpoint 1. The voltage (result of AM) ↳ 5619 instead of ↳ 5618 will be taken into account. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”. Remotely switching the setpoint is possible: Use the LogicsManager command variable for input that is correlating with the dedicated bit of parameter ↳ ⇱.

Released

ID	Parameter	CL	Setting range [Default]	Description
5616	**Start value**	1	0 to 100% **[70%]**	The voltage controller is activated when the monitored generator voltage has exceeded the value configured in this parameter. This prevents the easY-I from attempting to control the voltage while the inverter is completing its start sequence. **Notes** This value refers to the generator voltage setpoint (parameter 5600 or 5601).
5617	**Start delay**	1	0 to 999 s **[5 s]**	The voltage controller is enabled after the configured time for this parameter expires.
5603	**Voltage control setpoint ramp**	2	1.00 to 300.00 %/s **[5.00 %/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be.
5604	**Voltage control droop**	2	0.0 to 20.0% **[5.0%]**	If this control is to be operated on a generator in parallel with other generators and voltage control is enabled, a droop characteristic curve must be used. Each generator in the system will require the same value to be configured for the droop characteristic, so that when the system is stable the reactive power will be distributed proportionally among all generators in relation to their rated reactive power.
12905	**Volt. droop act.** (Voltage droop active)	2	Determined by LogicsManager 86.26 **[(08.17 Missing members OR 08.06 GCB fail to open08.06 GCB fail to open) & 1]** = 11605	If this LogicsManager condition is TRUE, the voltage droop is enabled. **Example** • Rated reactive power: 400 kvar • Rated voltage setpoint: 410 V • Droop 5.0% • Reactive power 0 kvar = 0% of rated power • Voltage is adjusted to (410 V – [5.0% * 0.0 * 410 V]) = 410 V. • Reactive power 400 kvar = 100% of rated reactive power • Voltage is adjusted to (410 V – [5.0% * 1.0 * 410 V]) = 410 V – 20.5 V = 389.5 V.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12938	**Release V-control**	2	Determined by LogicsManager 86.97 **[(1 & 1) & 1]** = 11926	This LogicsManager is used to activate generally the voltage biasing to the sub controller. If the LogicsManager is false the output will be on the initial state (see parameter ↳ 5608). The LogicsManager condition status 'TRUE' is activating the voltage or reactive power regulation according to the LogicsManager 'V/Q control' ID ↳ 12941).
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.

4.4.4.2 Power Factor Control

The easY-I cover a wide range of power factor control tasks:

- Controller type can be selected for an analog PID or a three-step controller (see chapter ↳ “4.4.4.2.2 Configure Power Factor / kvar Control”)
- PF(P) characteristic is available (see chapter ↳ “4.4.4.2 Power Factor Control”)
- Beside PF(P) characteristic, Q(V) characteristic is available too (see chapter ↳ “4.4.4.2 Power Factor Control”).
- Reactive power control at the interchange point offers another opportunity of power factor control (see chapter ↳ “4.4.4.2.1 Control The Power Factor / Reactive Power At The Mains Interchange Point”).

4.4.4.2.1 Control The Power Factor / Reactive Power At The Mains Interchange Point

General notes

Being parallel to the utility, it is desired in some application to control either the power factor or the amount of imported/exported inductive reactive power in kvar at the mains interchange point. Similar to an import/export active power setpoint, all easY-Is can be programmed to the same setpoint and will share between each other the reactive power to reach this setpoint.

The easY-I can work as reactive power control at the interchange point. In this mode the gensets are monitored and restricted in reactive power flow (outcome and income; respectively leading and lagging).

Released

Generator Reactive Power Limitations

A reactive power control (kvar or power factor) can cause an overload or damage of the generator. To avoid this the easY-I provides a 2-step protection:

⚙

1. ▷ The own absolute generator current is monitored with an percentage setting related to rated current input (ID ⮡▷ 1754). The easY-I limits or controls down the excitation that this given level (ID ⮡▷ 5791) is not exceeded.

2. ▷ The inductive reactive power **outcome** of the own generator is limited according to the configuration of ID ⮡▷ 5792.
Or:
The inductive reactive power **income** of the own generator is limited according to the configuration of ID ⮡▷ 5793.

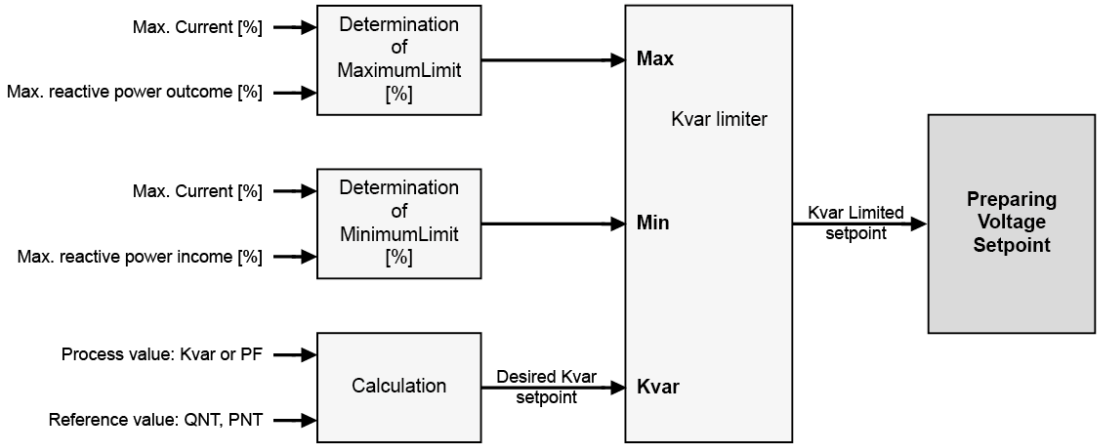


Fig. 149: The kvar setpoint is limited to protect the generator

Tracking of the limitation

An active Limitation is

- indicated as 'Gen excitation lim.' on the display (HMI)
- driving the LogicsManager command variable 02.38 Gen excitation lim. from FALSE to TRUE
- driving an event logger entry

If kvar (Q) control is not used in the easY-I but the LogicsManager ”12941 Q-Control“ is TRUE in mains parallel operation, under some circumstances the message ”Gen excitation lim.“ could be shown. This has no impact on the kvar regulation but it can be prevented if

- ”12941 Q-Control“ is set always to FALSE or
- the kvar setpoint is adapted accordingly.

4.4.4.2.2 Configure Power Factor / kvar Control

ID	Parameter	CL	Setting range **[Default]**	Description
5625	**Power factor control**	2	**[PID analog]**	The power factor is controlled using an analog PID controller.
			3pos controller	The power factor is controlled using a three-step controller.
			Off	Power factor control is not carried out.
5613	**Proportional gain**	2	0.01 to 100.00 **[1.00]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band.
				Notes If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog".
5614	**Integral gain**	2	0.001 to 100.000 **[1.000]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the inverter will continually oscillate. If the integral gain constant is too small, the inverter

Released

ID	Parameter	CL	Setting range [Default]	Description
				will take too long to settle at a steady state.
				Notes This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog".
5615	**Derivative ratio**	2	0.01 to 100.00 **[0.01]**	The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.
				Notes This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog". The default configured controller acts like a PI controller what is the valid D part setting for systems with secondary controllers.
5660	**Deadband**	1	0.001 to 0.300 **[0.010]**	The generator power factor is controlled in such a manner, when paralleled with the mains, so that the monitored power factor does not deviate from the configured power factor setpoint by more than the value configured in this parameter without the controller issuing a raise/lower signal to the voltage regulator. This prevents unneeded wear on the raise/lower relay contacts.
				Notes This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".
5661	**Time pulse minimum**	1	0.01 to 2.00 s **[0.05 s]**	A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired power factor reference point.
				Notes

ID	Parameter	CL	Setting range [Default]	Description
				This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".
5662	**Gain factor**	1	0.1 to 10.0 **[5.0]**	The gain factor K_p influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be in-creased in response to a deviation from the power factor reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.
				Notes This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".
5667	**Cycle time factor**	1	1.0 to 20.0 **[1.0]**	The cycle time factor adjusts the time between the pulses (pause time). By increasing the cycle time factor, the time between the pulses increases.
				Notes This parameter is only visible if voltage control (parameter 5625) is configured to "3pos controller".
5663	**Expand deadband factor**	1	1.0 to 9.9 **[1.0]**	If the measured generator power factor is within the deadband range (parameter 5660) and the configured delay expand deadband time (parameter 5664) expires, the deadband will be multiplied with the factor configured here.
				Notes This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".
5664	**Delay expand deadband**	1	1.0 to 9.9 s	The measured generator power factor must be within the deadband range for the time

Released

ID	Parameter	CL	Setting range [Default]	Description
			[2.0 s]	configured here in order to multiply the deadband with the factor configured in parameter ↳ 5663.
				Notes This parameter is only visible if power factor control (parameter ↳ 5625) is configured to "3pos controller".
5791	**Max. generator current**	2	0 to 150% **[100%]**	This is the maximum generator current during reactive power control. The percentage is related to the rated current setting (ID ↳ 1754).
5792	**Max.react.inductive pwr.gen.**	2	0 to 150% **[80%]**	This is the maximum accepted generator reactive inductive load (outcome) during reactive power control at the interchange point. The percentage is related to the reactive power setting (ID ↳ 1758).
5793	**Max.react.capactive pwr.gen.**	2	0 to 150% **[50%]**	This is the maximum accepted generator reactive capacitive load (income) during reactive power control at the interchange point. The percentage is related to the reactive power setting (ID ↳ 1758).
5638	**AM PF/kvar SP1[-/kvar]**	2	Determined by AnalogManager 81.11 **[A1 = 05.10 Intern. PF setp1 [%]]**	The power factor / reactive power setpoint 1 source can be selected from the available data sources. The internal “05.10 Intern. PF setp1 [%]” can be changed manually at the setpoint screen of the display.
5639	**AM PF/kvar SP2[-/kvar]**	2	Determined by AnalogManager 81.05 **[A1 = 05.11 Intern. PF setp2 [%]]**	The power factor / reactive power setpoint 2 source can be selected from the available data sources. The internal “05.11 Intern. PF setp2 [%]” can be changed manually at the setpoint screen of the display.
5743	**PF/kvar setpoint 1 mode**		**[Gen.PF]** Mns.Export kvar Mns.Import kvar Mains PF Gen.kvar	Determination of the reactive power control argument (Modes) **Gen.PF**: The value entered as PF/kvar setpoint is a generator power factor setpoint. **Mns.Export kvar**: The value entered as PF/kvar setpoint is a mains export power setpoint in kvar. Note: Even the value is also configurable as negative value do not enter a negative value in this mode. **Mns.Import kvar**: The value entered as PF/kvar setpoint is a mains import power setpoint in

ID	Parameter	CL	Setting range **[Default]**	Description
				kvar. Note: Even the value is also configurable as negative value do not enter a negative value in this mode. **Mains PF**: The value entered as PF/kvar setpoint is a mains power factor setpoint at the interchange point to mains. **Gen.kvar**: The value entered as PF/kvar setpoint is a generator kvar power setpoint (-99999.9 to 99999.0 kvar). Note: A negative value is accepted as a capacitive kvar setpoint. A positive value is accepted as inductive setpoint in this mode.
5620	**Int. power factor setpoint 1**	2	-0.999 to +1.000 **[+1.000]**	The desired power factor may be configured here so that the reactive power is regulated in the system. The designations "+" and "-" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power. This setpoint is active only in mains parallel operation.
5744	**PF/kvar setpoint 2 mode**		**[Gen.PF]** Mns.Export kvar Mns.Import kvar Mains PF Gen.kvar	Determination of the reactive power control argument (Modes) **Gen.PF**: The value entered as PF/kvar setpoint is a generator power factor setpoint. **Mns.Export kvar**: The value entered as PF/kvar setpoint is a mains export power setpoint in kvar. Note: Even the value is also configurable as negative value do not enter a negative value in this mode. **Mns.Import kvar**: The value entered as PF/kvar setpoint is a mains import power setpoint in kvar. Note: Even the value is also configurable as negative value do not enter a negative value in this mode. **Mains PF**: The value entered as PF/kvar setpoint is a mains power factor setpoint at the interchange point to mains. **Gen.kvar**: The value entered as PF/kvar setpoint is a generator kvar power setpoint (-99999.9 to 99999.0 kvar). Note: A negative value is accepted as a capacitive kvar setpoint. A positive value is accepted as inductive setpoint in this mode.

ID	Parameter	CL	Setting range [Default]	Description
5745	**Int. kvar setpoint 1**		-99999.9 to +99999.9 **[0.0]**	This setpoint is active only if PF/ kvar setpoint 1 is set to Mns. Export kvar or Mns. Import kvar.
5621	**Int. power factor setpoint 2**	2	-0.999 to +1.000 **[+1.000]**	The desired power factor may be configured here so that the reactive power is regulated in the system. The designations "–" and "+" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power. This setpoint is active only in mains parallel operation.
5746	**Int. kvar setpoint 2**		-0.999 to +1.000 **[0.000]**	This setpoint is active only if PF/ kvar setpoint 2 is set to Mns. Export kvar or Mns. Import kvar.
12921	**Setp.2 pwr.factor**	2	Determined by LogicsManager 86.84 **[(0 & 1) & 1]** = 11913	If this LogicsManager condition is TRUE, the power factor setpoint 2 will be used instead of power factor setpoint 1. The power factor (result of AM) ↳ 5639 instead of ↳ 5638 will be taken into account. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
5622	**React. pwr. ctrl setpoint ramp**	2	0.01 to 100.00 %/s **[3.00 %/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be. **Notes** This ramp is also used in islanded operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.
1884	**Gen. PF setpoint filter**	2	0.0 to 99.9 s **[0.0 s]**	The PT1-filter for the Gen PF or Gen kvar setpoint mode can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Notes**

Released

ID	Parameter	CL	Setting range [Default]	Description
				Input 0.0 s disables the filter influence.
12941	**Q control**	2	Determined by LogicsManager 86.99 **[(04.07 MCB closed & 04.06 GCB closed) & 1]** = 11928	With LogicsManager can be controlled if a voltage control or a reactive power control should be performed. If this LogicsManager condition is TRUE, the reactive power control is performed.

4.4.4.2.3 Power Factor Characteristic

General notes

This feature is related to the former BDEW grid code. For the VDE-AR-N 4110 / 4105 grid code please refer the reactive power characteristics

The Power Factor Characteristic function is adapting the reactive power flow between generator and mains to support a dynamic stabilization of the mains. Some network provider prefer therefore a power factor control over real power PF(P) (see chapter “4.4.4.2.3.1 Power factor characteristic PF(P) ” for more details).

Other provider prefer power factor control over mains voltage Q(V) as described in chapter “4.4.4.2.3.2 Power factor characteristic Q(V) ”. Both methods are configurable alternatively.

Enhanced according BDEW Requirements

Both power factor characteristic curves now offer four point settings.

Factory settings come with backward compatibility.

4.4.4.2.3.1 Power factor characteristic PF(P)

A method to support the mains is to feed different reactive power values into the grid in relation to the own active power value. The reactive power is defined through a power factor setpoint for the generator. This can be defined in characteristic curve.

Released

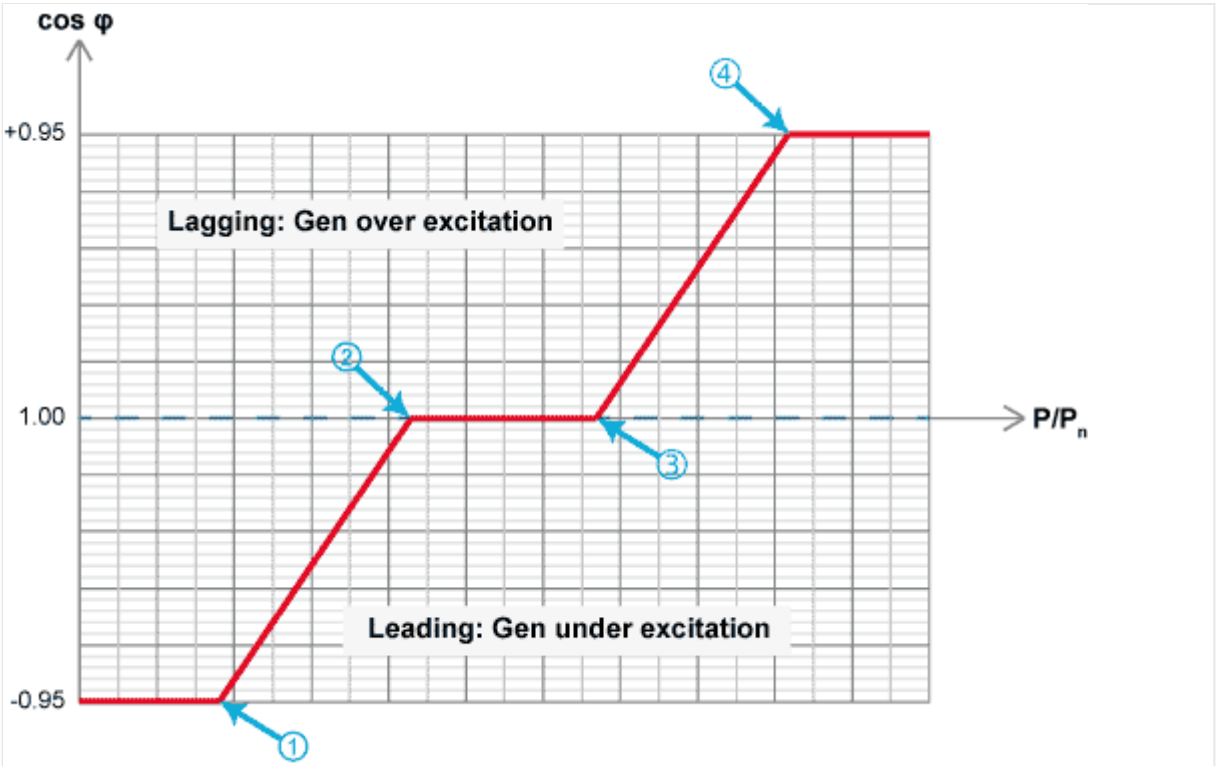


Fig. 150: Power factor characteristic (schematic)

The characteristic is defined by four points (① .. ④). The power factor corresponding to this characteristic is available as data source 05.29 in the AnalogManager.

To use this function, the source (05.29) must be applied as source to one of the setpoints e.g., "Power factor setpoint 1" (parameter 5638).

ID	Parameter	CL	Setting range [Default]	Description
5786	**Power factor characteristic**	2	**[PF(P)]**	A power factor setpoint is determined according to the characteristic curve: Power factor in relation to the actual Generator power.
			Q(V)	A power factor setpoint is calculated according to the characteristic curve: Generator reactive power in relation to the mains voltage.
5787	**Point 1 power**	2	0.00 to 150.00% **[0.00%]**	The value entered into "Point 1 power" defines the cos phi (P) characteristic.
5788	**Point 1 cos phi**	2	-0.999 to 1.000 **[-0.950]**	The desired "Point 1 cos phi" may be configured here which defines the cos phi (P) characteristic. The designations "+" and "-" stand for inductive/lagging (generator overexcited) and

ID	Parameter	CL	Setting range [Default]	Description
				capacitive/leading (generator underexcited) reactive power.
5789	**Point 2 power**	2	0.00 to 150.00% **[100.00%]**	The value entered into "Point 2 power" defines the cos phi (P) characteristic.
5790	**Point 2 cos phi**	2	-0.999 to 1.000 **[0.950]**	The desired "Point 2 cos phi" may be configured here which defines the cos phi (P) characteristic. The designations "+" and "-" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power.
5028	**Point 3 power**	2	0.00 to 150.00% **[100.00%]**	The value entered into "Point 3 power" defines the cos phi (P) characteristic.
5029	**Point 3 cos phi**	2	-0.999 to 1.000 **[0.950]**	The desired "Point 3 cos phi" may be configured here which defines the cos phi (P) characteristic. The designations "+" and "-" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power.
5030	**Point 4 power**	2	0.00 to 150.00% **[100.00%]**	The value entered into "Point 4 power" defines the cos phi (P) characteristic.
5031	**Point 4 cos phi**	2	-0.999 to 1.000 **[0.950]**	The desired "Point 4 cos phi" may be configured here which defines the cos phi (P) characteristic. The designations "+" and "-" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power.

4.4.4.2.3.2 Power factor characteristic Q(V)

Another method to support the mains is to feed different reactive power values into the grid in relation to the mains voltage [parameter ↳ 5786 = Q(V)]. The reactive power is defined through the value Q/S rated over voltage. This can be defined in a characteristic curve. The resulting outcome for the reactive power control is then a power factor setpoint.

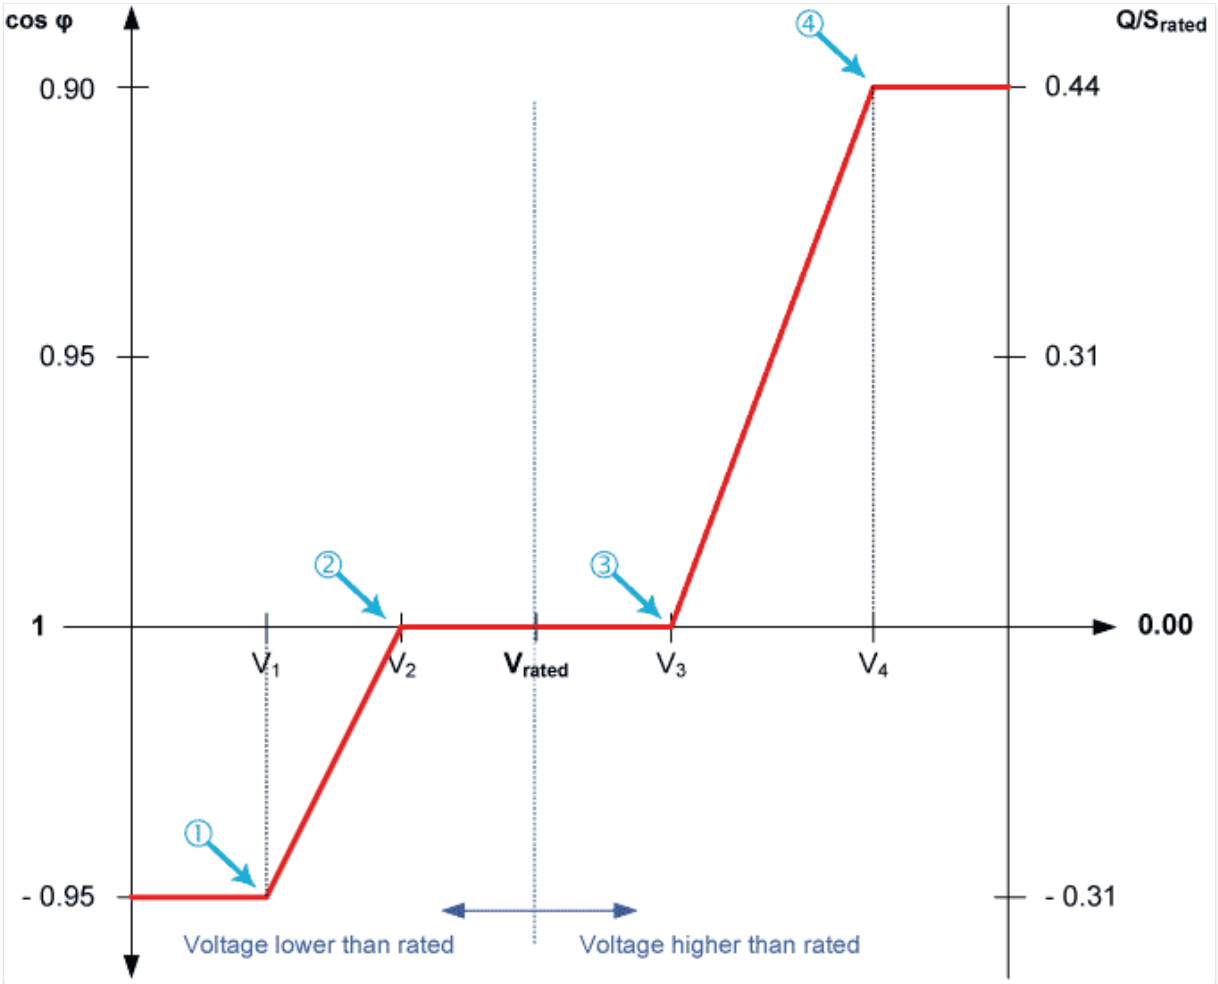


Fig. 151: Power factor characteristic according to the relation Q/S rated over rated voltage

The characteristic is defined by four points (① .. ④). The power factor corresponding to this characteristic is available as data source 05.29 in the AnalogManager.

To use this function, the source (05.29) must be applied as source to one of the setpoints e.g., "Power factor setpoint 1" (parameter 5638).

ID	Parameter	CL	Setting range **[Default]**	Description
5778	**Point 1 voltage**		45.0 to 150.0% **[98.0%]**	The value entered into "Point 1 Voltage" defines the x-coordinate of point 1
5779	**Point 1 Q/S rated**		-0.99 to +0.99 **[-0.31]**	The value entered into "Point 1 Reactive power" defines the y-coordinate of point 1
5797	**Point 2 voltage**		45.0 to 150.0% **[106.0%]**	The value entered into "Point 2 Voltage" defines the x-coordinate of point 2

ID	Parameter	CL	Setting range **[Default]**	Description
5798	**Point 2 Q/S rated**		-0.99 to +0.99 **[+0.31]**	The value entered into "Point 2 Reactive power" defines the y-coordinate of point 2
5032	**Point 3 voltage**		0.0 to 150.0% **[106.0%]**	The value entered into "Point 3 Voltage" defines the x-coordinate of point 3
5033	**Point 3 Q/S rated**		-0.99 to +0.99 **[+0.31]**	The value entered into "Point 3 Reactive power" defines the y-coordinate of point 3
5034	**Point 4 voltage**		0.0 to 150.0% **[106.0%]**	The value entered into "Point 4 Voltage" defines the x-coordinate of point 4
5035	**Point 4 Q/S rated**		-0.99 to +0.99 **[+0.31]**	The value entered into "Point 4 Reactive power" defines the y-coordinate of point 4
5799	**Q(V) response time**		001 to 999 s **[10 s]**	The response with a new reactive power setpoint acting on the analog command variable "05.29 PF characteristic [%]" can be delayed. Q(V) response time is used to calculate the power factor characteristic Q(V), parameter ⮡ 5786. **Notes** The delay is realized with a PT-1 filter. Therefore the reaction times are optimized for the range 10 s until 60 s within a symmetrical characteristic curve. Accuracy of the setup Q(V) response time is given within a symmetrical characteristic curve.
5023	**Q(V) Hysteresis**		0 to 20% **[0%]**	The hysteresis for the Q(V) characteristic acts as a deadband for the selected band. If the Mains voltage is within the hysteresis the resulting power factor characteristic reference doesn't change.

4.4.4.2.4 Reactive Power / Power Factor setpoint filter

Introduction

The FNN VDE-AR-N 4105 / 4110 requests a reactive power control with a setpoint which is leaded over a PT1-element. The PT1-element shall be adjustable with a 3 tau setting. The 3 tau setting defines at what time shall be reached 95% of the original setpoint change. This 3 tau value is configurable.

Function

The reactive power controller PID is always receiving a reactive power setpoint even the setpoint is entered as power factor or as power factor setpoint. The PT1 filter behavior is always included (Refer to drawing) but the filter can configured so that it has no influence.

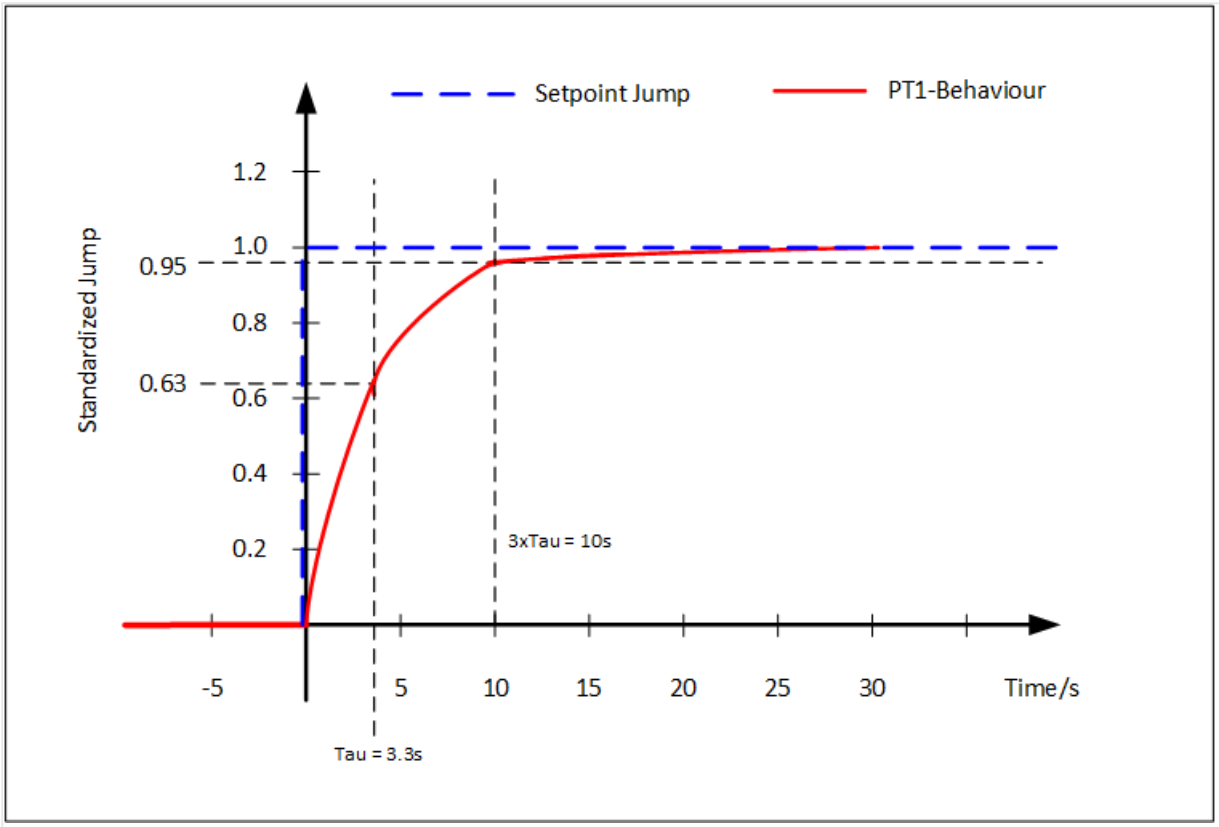


Fig. 152: Setpoint Jump (standardized with height 1) and the resulting PT1 setpoint

Four reactive power setpoint filters are placed in the easY-I in regards to:

- Gen PF setpoint setting
- Reactive power characteristic Q(V)
- Reactive power characteristic Q(P)
- Reactive power characteristic Q(V) limit

Released

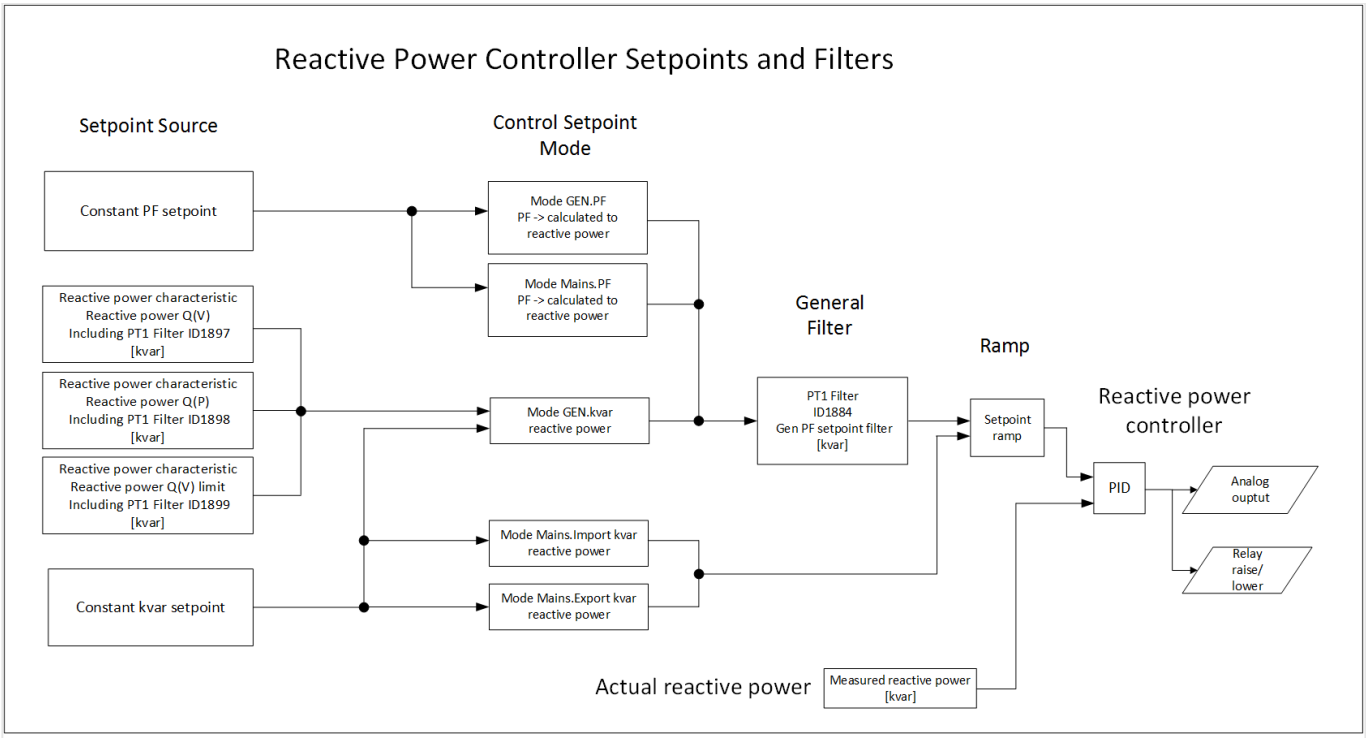


Fig. 153: The allocation of reactive power setpoints and their filters

Configuration

ID	Parameter	Setting range [Default]	Description
1884	**Gen. PF setpoint filter**	0 to 99.9 s **[0.0 s]**	The PT1-filter for the Gen PF setpoint mode can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.
1897	**Q(V) setpoint filter**	0 to 99.9 s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(V) can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.
1898	**Q(P) setpoint filter**	0 to 99.9 s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(P) can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached.

Released

ID	Parameter	Setting range **[Default]**	Description
			Note: Input 0.0s disables the filter influence.
1899	**Q(V) limit setpoint filter**	0 to 99.9 s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(V) limit can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.

4.4.4.2.5 Reactive Power Characteristic

4.4.4.2.5.1 Reactive power Q(V)

General notes



This feature is related to the VDE-AR-N 4110 / 4105 grid code. For BDEW related grid code please refer to “4.4.4.2 Power Factor Control”.

The FNN VDE-AR-N 4105 / 4110 requests different methods for reactive power control during mains faults to stabilize the mains.

This method determines a reactive power setpoint deviation based on the mains voltage deviation from a rated mains voltage value.

The slope follows the formula:

$$\text{Slope}(QV) = \frac{(\text{Qmax} / \text{ Pinst.})}{(\text{Vmax} / \text{ Vc}) - (VQ0 / \text{ Vc})}$$

The formula contains a factor which can shift the curve on the voltage axis. The shift itself can be determined through an analog value “VQ0”. This gives the network provider the capability to change the reactive power influence remotely.

Function

This procedure of running different reactive power values over the voltage is based on two points:

Point 1 is defined as the reference voltage on which the reactive power shall be zero.

Point 2 is defined through the value pair (Vmax/VC ; Qmax/Pinst.). This point defines finally the maximal reactive power, which is allowed to run for the generator. It is valid for leading and lagging reactive power (Under-excitation/Over-excitation).

So if mains voltage exceeds the Vmax/VC point inductive power is absorbed and with surpassed Vmax/VC inductive reactive power is delivered to mains.

Furthermore the function provides the capability to shift point 1 on the x-axis from outside. Through this it can be determined afterwards at what mains voltage level the reactive power flow begins to work.

Through a dead band incorporation into the function the operator can determine to stay on a last calculated reactive power. So as long the mains voltage deviates not again around a dead band width the last setpoint is kept.

And finally through a test function the function gives the operator the opportunity to simulate different mains voltages to observe whether the reactive power flow is maintained properly.

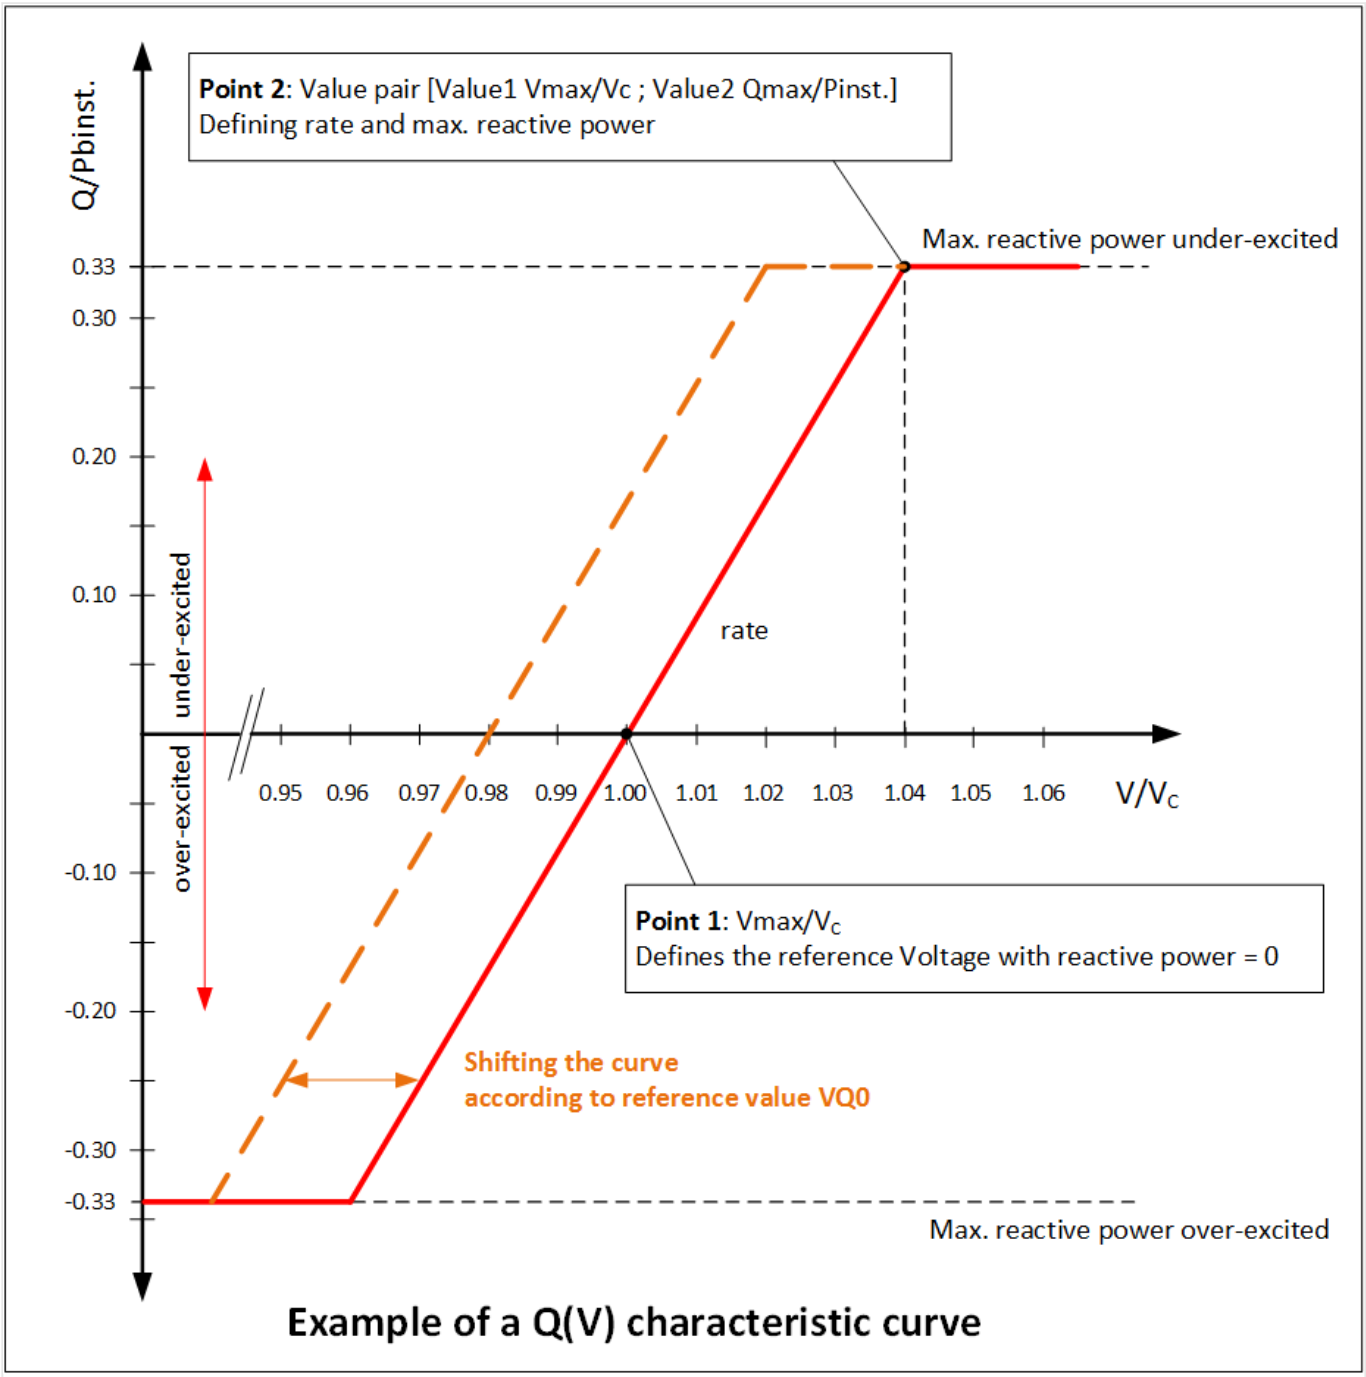


Fig. 154: EGXT_Example_of_a_Q(V)_characteristic

ID	Parameter	Setting range **[Default]**	Description
5823	**Vmax/Vc**	1.00 to 1.20 **[1.04]**	The point 2 defines the maximal allowed reactive power for the generator. The point determines the leading limit as also the lagging limit. Refer to drawing. This value determines the value 1 (Vmax/VC) of the point 2 value pair. This is the maximum voltage which can be transacted. Maximum voltage in relation to the supply voltage (Vc). Mostly the supply voltage is similar to the rated voltage in the system.
5824	**Qmax/Pinst.**	0.00 to 0.50 **[0.33]**	The point 2 defines the maximal allowed reactive power for the generator. The point determines the leading limit as also the lagging limit. Refer to drawing. This value determines the value 2 (Qmax/Pinst.) of the point 2 value pair. Maximum reactive power in relation to the installed active power from the power generation device. The installed active power is usually the rated generator power. The maximum reactive power defines the positive and negative reactive power as well.
5825	**AM Reference VQ0**	AnalogManager 10.02 ONE 10.01 ZERO 0.0 02.01 LM FALSE 02.01 LM FALSE Pass through	AnalogManager which provides the shifting of the x-axis. It is named VQ0. Through this value the reference mains voltage level Point 1 can be shifted. Refer to drawing. The value determines the point where the reactive power setpoint matches 0 kvar. Analog result of AnalogManager **81.31** AM Reference VQ0 Binary result of AnalogManager**81.31** AM Reference VQ0
5827	**Q(V) voltage dead band**	0.00 to 10.00% **[0.00%]**	The dead band for the mains voltage relates to the calculation of a new reactive power reference. If the mains voltage is higher/ lower as the previous mains voltage +/- hysteresis the “new value” will be used for the reactive power calculation.
1897	**Q(V) setpoint filter**	0.0 to 99.9 s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(V) can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time

Released

ID	Parameter	Setting range **[Default]**	Description
			defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.

Interface reference setpoint VQ0

AnalogManager variable “05.46 VQ0 reference”

No.	Description	Value	Meaning
512	Control 10	INT16	Interface reference value VQ0. Resolution (1/100) VQ0: The “starting” value is 1.00. The value is limited according to the configuration setting.

Analog source: Interface reference setpoint VQ0

This can be picked up with the AnalogManager variable “05.46 VQ0 reference”

Visualization Q(V) reactive power characteristic

Actual value V/Vc ID10353

Q/Pinst reference ID 10347

QV reference [kvar] ID 10359

Configuration Test possibility for reactive power Q(V) characteristic

For test purposes it is possible to configure a "Test mains voltage" which is passed to the Q(V) characteristic instead of the real mains voltage measurement.

ID	Parameter	Setting range **[Default]**	Description
5828	**Enable mains test voltage**	On **[Off]**	For test purposes, use the mains test voltage instead of the measured mains voltage. This function is temporarily enabled. **On:** The mains test voltage is used for Q(V) reactive power characteristic. This function is reset after 1 hour automatically. **Off:** The test voltage is disabled and the measured mains voltage is used. **Note: Only in toolkit!**

Released

ID	Parameter	Setting range **[Default]**	Description
5829	**Mains test voltage**	50 to 150% **[100%]**	The Q(V) function uses the mains test voltage for the calculation of the reactive power reference. **Note: Only in toolkit!**

4.4.4.2.5.2 Reactive Power Q(P)

General notes

The FNN VDE-AR-N 4105 / 4110 requests different methods for reactive power control during mains faults to stabilize the mains. This method determines a reactive power based on the actual power output of the generator. The reactive power is controlled in relation to the actual active power. Maximal 10 reference points define the curve. The space between the points are linear interpolated. The tolerance band for the configured curve is +/- 2%

Function

Through the input of up to 10 points a reactive power characteristic can be formed.

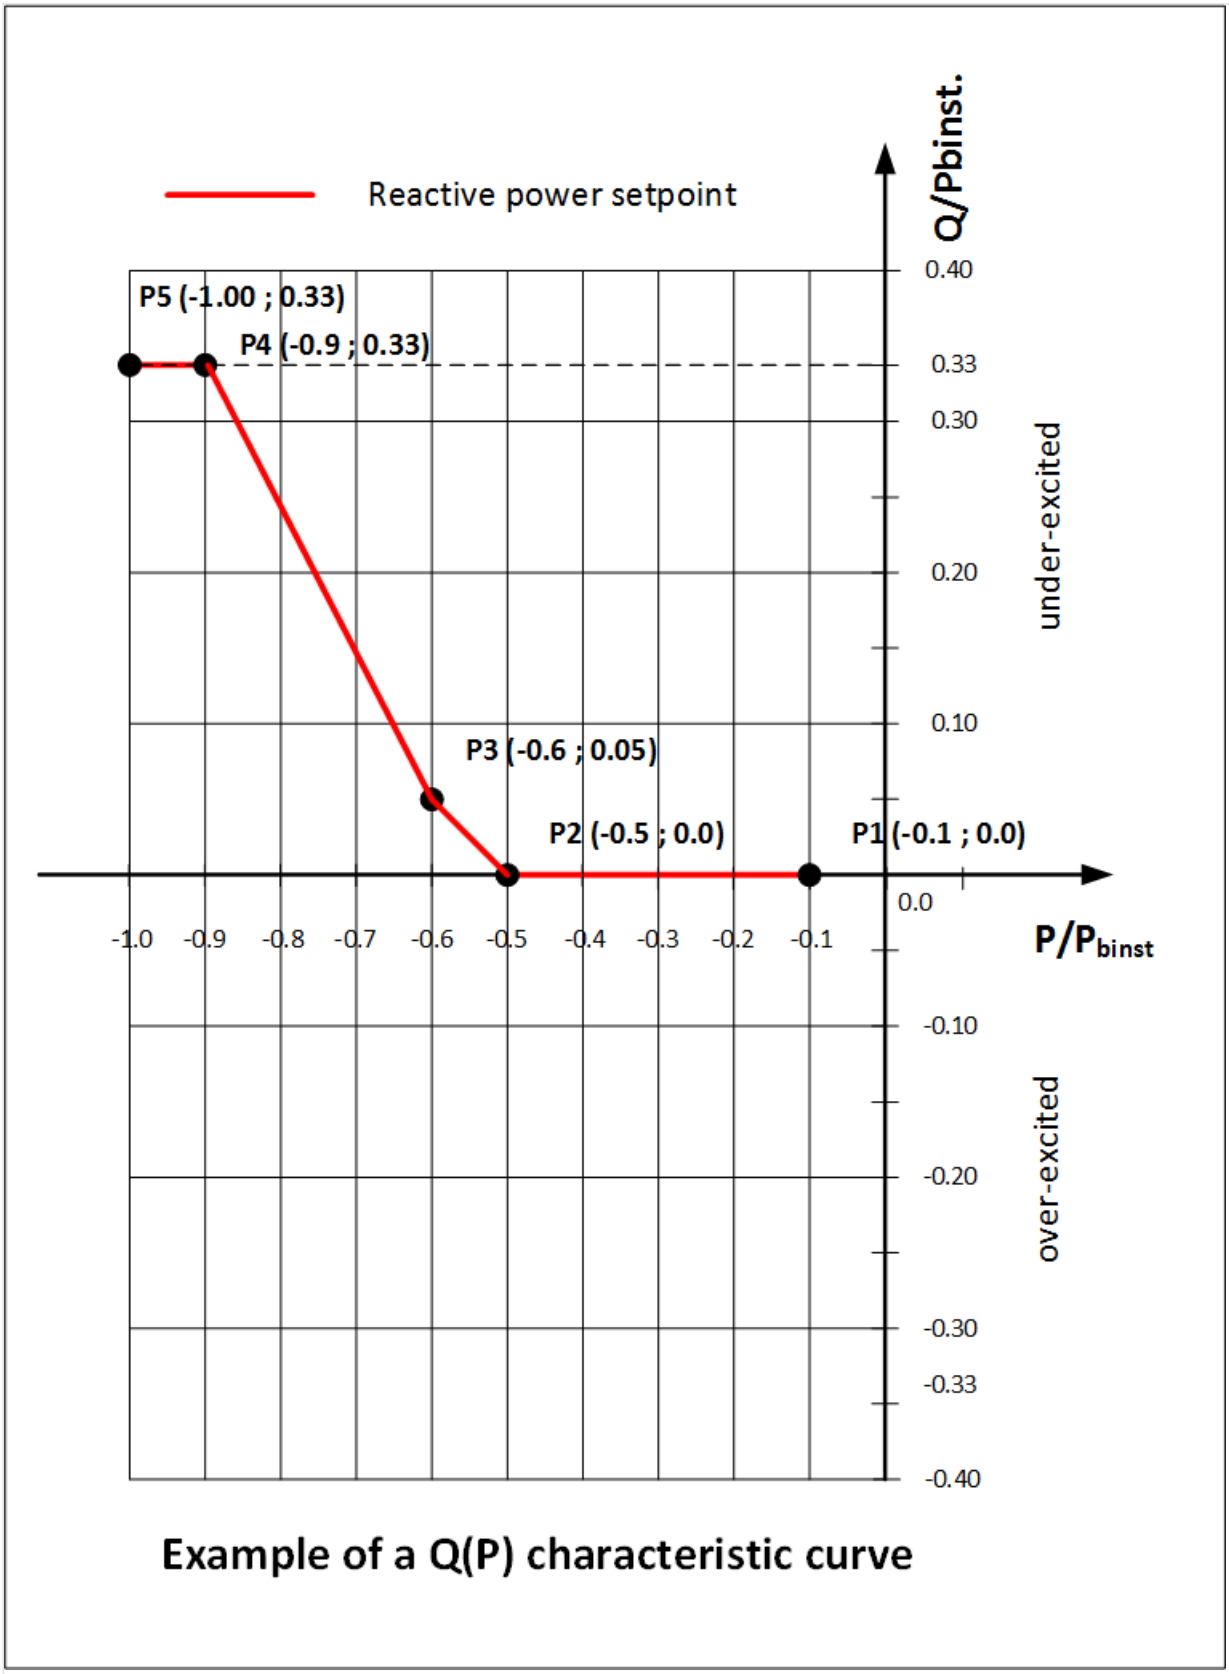


Fig. 155: Example of a Q(P) characteristic with 5 points

Released

ID	Parameter	Setting range [Default]	Description
5831	**P/Pinst. point 1**	0	Configuration points (reference points 1 to 10 with relation active power/active power installed (P/Pinst) and rated reactive power in relation to active power installed (Q/Pinst) P: Range 0.00 .. 1.50 Format 0.00
5832	**Q/Pinst. point 1**	0	
5833	**P/Pinst. point 2**	0.1	
5834	**Q/Pinst. point 2**	0	
5835	**P/Pinst. point 3**	0.2	
5836	**Q/Pinst. point 3**	0	
5837	**P/Pinst. point 4**	0.3	
5838	**Q/Pinst. point 4**	0	
5839	**P/Pinst. point 5**	0	
5840	**Q/Pinst. point 5**	0	
5841	**P/Pinst. point 6**	0.5	
5842	**Q/Pinst. point 6**	0	
5843	**P/Pinst. point 7**	0.6	
5844	**Q/Pinst. point 7**	0.05	
5845	**P/Pinst. point 8**	0.9	
5846	**Q/Pinst. point 8**	0.33	
5847	**P/Pinst. point 9**	1	
5848	**Q/Pinst. point 9**	0.33	
5849	**P/Pinst. point 10**	1.5	
5850	**Q/Pinst. point 10**	0.33	
1898	**Q(P) setpoint filter**	0 to 99.9s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(P) can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.

Visualization Q(P) reactive power characteristic

Actual value P/Pinst ID10354

Q/Pinst reference ID10349

QP reference [kvar] ID10350

Released

4.4.4.2.5.3 Reactive Power Q(V) limit

Introduction

The FNN VDE-AR-N 4105 / 4110 requests different methods for reactive power control during mains faults to stabilize the mains.

This method determines a reactive power setpoint deviation based on the mains voltage. The curve here is defined with four points. The value pairs of point 2 and point 3 can be influenced through an offset value remotely.

This is a way to shift the dead band into a reactive power flow zone. The network provider can influence the basic reactive power flow remotely.

Function

This procedure of running different reactive power values over the voltage is based on four point:

- Point 1 is defined as the reference voltage on which the lagging reactive power flow shall be limited (max. over-excitation). Example in drawing [V/VC 0.94 ; Q/Pbinst -0.33]
- Point 2 is defined as the lowest reference voltage at which the reactive power flow is zero. Example in drawing [V/VC 0.96 ; Q/Pbinst 0.00]
- Point 3 is defined as the highest reference voltage at which the reactive power flow is zero. Example in drawing [V/VC 1.04 ; Q/Pbinst 0.00]
- Point 4 is defined as the reference voltage on which the leading reactive power flow shall be limited (max. under-excitation). Example in drawing [V/VC 1.06 ; Q/Pbinst 0.33]

Furthermore the function provides the capability to shift point 2 and point 3 so that the dead band is shifted into a reactive power flow zone. With this setting the network provider can relative simple shift the reactive power flow (leading or lagging) in the usual voltage range. This helps to compensate any local situations from remote.

Finally, through a test function, the function gives the operator the chance to simulate different mains voltages to observe if the reactive power flow is being maintained properly.

Released

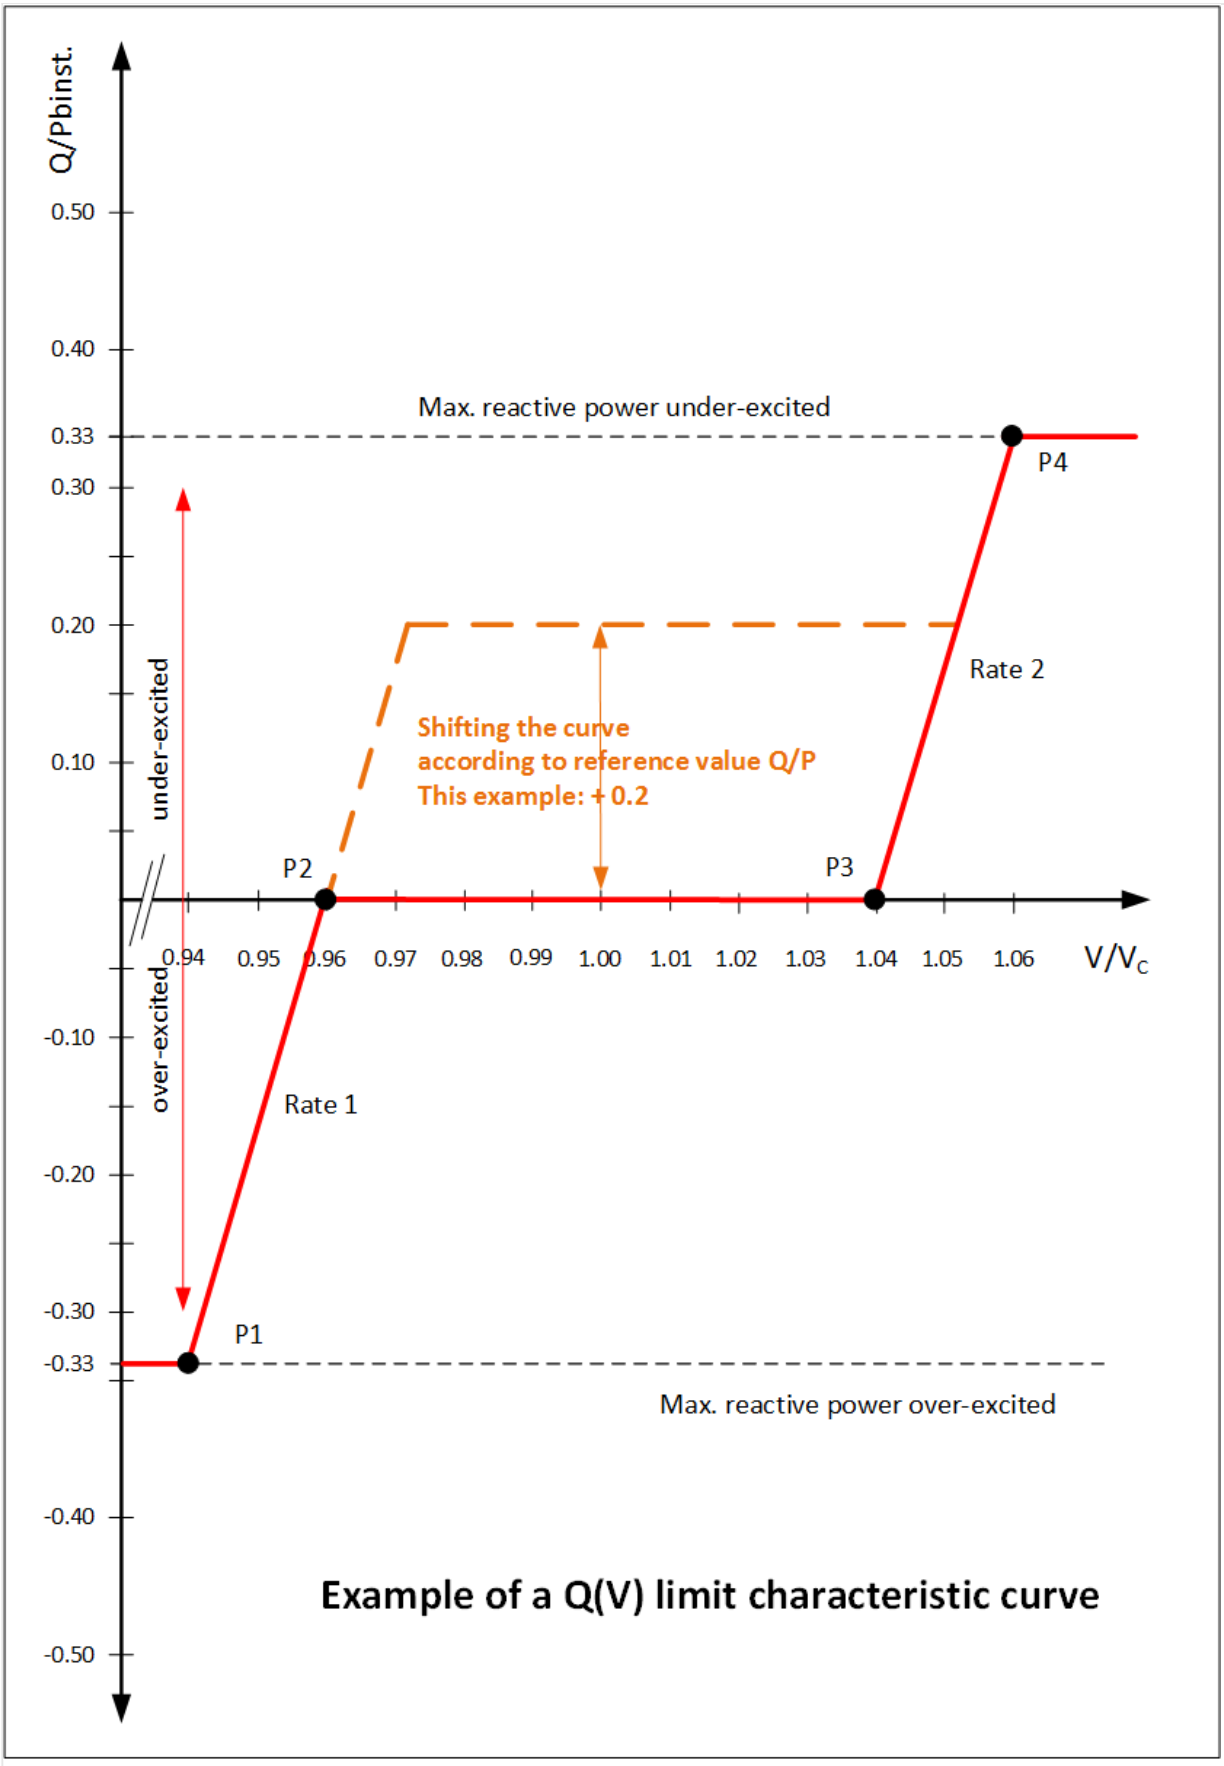


Fig. 156: Example of a Q(V) limit characteristic

ID	Parameter	Setting range [Default]	Description
6912	**V/Vc point 1**	0.94	Configuration points (reference points 1 to 4) with voltage level in relation to the supply voltage (Vc) and the reactive power in relation to the installed active power from the power generation device. The installed active power is normally the rated power. V: Range 0.00 to 1.50 Format 0.00 Q: Range -0.5 to 0.50 Format 00.00
6913	**Q/Pinst. point 1**	-0.33	
6914	**V/Vc point 2**	0.96	
6915	**Q/Pinst. point 2**	0	
6916	**V/Vc point 3**	1.04	
6917	**Q/Pinst. point 3**	0	
6918	**V/Vc point 4**	1.06	
6919	**Q/Pinst. point 4**	0.33	
1899	**Q(V) limit setpoint filter**	0 to 99.9 s **[10.0 s]**	The PT1-filter for the reactive power characteristic Q(V) limit can be configured here. The parameter stands for the 3 times tau value of a PT1 element. (see drawing). That means the configured time defines when 95% of the original setpoint jump is reached. **Note:** Input 0.0s disables the filter influence.
6908	**AM Q/P reference offset**	AnalogManager 10.02 ONE 10.01 ZERO 0.0 02.01 LM FALSE 02.01 LM FALSE Pass through	This value defines the offset for the reference points 2 and 3. AM Q/P reference offset **81.32** Analog result of AnalogManager LM Q/P reference offset **81.32** Binary result of AnalogManager

Interface reference setpoint Q/P limit offset

AnalogManager variable "05.47 Interface QP offset"

No.	Description	Value	Meaning
513	Control 10	INTEGER16	Interface reference value Q/P offset. Resolution (1/100) Q/P offset: The “starting” value is 0. The value is limited according to the configuration setting.

Released

Analog source: Interface reference setpoint Q/P offset

AnalogManager variable "05.47 Interface QP offset"

Visualization Q(V) limit reactive power characteristic

Actual value V/VC ID10355

Q/Pinst reference ID 10351

QV reference [kvar] ID 10352

Configuration Test possibility for reactive power Q(V) limit characteristic

For test purposes it is possible to configure a "Test mains voltage" which is passed to the Q(V) limit characteristic instead the real mains voltage measurement.

The parameter Ids are the same like for the Q(V) reactive power characteristic.

4.4.4.3 Load Share Control

CAUTION!

Load Share Communication

For correct load share communication all load sharing gensets in the system must actively use the same load share communication interface (and network)!

Load share communication is defined by parameter »Load share interface « ↳ 9924 (CAN or Ethernet) and others.

Please see settings at

- [Parameter / Configuration / Configure application / Configure controller / Configure load share]
- Chapter ↳ “4.4.4.3.7 Parameters”

The easY-I performs proportional load and/or var sharing. This means each generator will share the load at the same percentage level of the generator rated power when paralleled against the mains, in an islanded operation with multiple generators paralleled, or when re-synchronizing the common bus to the mains.

Also in islanded operation the load ramp rate parameters ↳ 5522 and ↳ 5622 are used to ramp a new generator onto the other.

If not enough nominal power on the busbar is available, from now on the ramping of an inverter/generator onto others will be interrupted but the load sharing will be executed immediately. This is to avoid overloading of already online inverters/generators.

Proportional load/var sharing will not be performed when the easY-I has the GCB closed and is in the constant power/base load mode.

A system can consist out of 32 gensets which are controlled by a single easY-I.

In GCB/GC mode A13 it is possible to expand the system to more than 32 gensets.

4.4.4.3.1 Mains Parallel Operation With Mains Interchange Real Power Control (Import/Export)

The easY-I controllers maintain the real load level on the individually controlled generators at a level so that the real power setpoint at the mains interchange remains at the configured setpoint. The real power setpoint for the mains interchange must be configured identically for each easY-I.


The easY-I controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor. An example of this would be a 100 kW generator with a configured 1000 kW generator and a mains interchange of 825 kW. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

How the reactive power handling is executed depends the PF/kvar setpoint mode. Two setpoints (↳ 5743 and ↳ 5744) are available. Each setpoint allows the modes:

- Gen PF
- Mains PF
- Mains Import kvar
- Mains export kvar

In PF modes the reactive load sharing is not performed when operating in parallel with the mains. Reactive power control will be defined by the configured power factor setpoints (↳ 5620 or ↳ 5621) of the individual controllers. If the power factor controller setpoint is configured as +0.950, the easY-I will proportionally share the real load with all generators in parallel with the mains while controlling the reactive power at a 0.95 inductive (lagging) power factor regardless of the what power factor the mains is operating at.

The parameter "Active power Load share gain" (parameter ↳ 4522) can be used to define the priority of the reference variable for real power sharing (real power at interchange). A higher configured value influences the control more towards maintaining the real power setpoint for the interchange. A lower configured value influences the control more towards maintaining real power sharing between units.



The parameter "React. power Load share gain" (parameter ↳ 4543) has no influence here.

In kvar modes the reactive load sharing is performed when operating in parallel with the mains. Mains import/export kvar control at the interchange point will be determined by the configured int. kvar setpoints (↳ 5745 or ↳ 5746) of the individual controllers.

4.4.4.3.2 Islanded Operation In Parallel

The easY-I controllers maintain the voltage and frequency of the individually controlled generators at a constant level. This makes it imperative that the voltage and frequency setpoints are configured identically for each easY-I.

Released

The easY-I controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor.

Example

An example of this would be a 100 kW generator and a 1000 kW generator with an 825 kW load. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

The reactive power will be shared proportionally among all generators involved.

The parameter "Active power Load share gain" (parameter 4522) can be used to define the priority of the reference variable for real power sharing. A higher configured value influences the control more towards frequency control. A lower configured value influences the control more towards real power sharing.

The parameter "Active power Load share gain" (parameter 4522) can be used to define the priority of the reference variable for real power sharing. A higher configured value influences the control more towards frequency control. A lower configured value influences the control more towards real power sharing.

4.4.4.3.3 Re-synchronization Of The Busbar To The Mains

The system is operating as an islanded system, for synchronization to be performed the voltage and frequency differentials of the mains and bus must be within the configured windows.

The bus frequency reference point is dictated by the measured mains frequency and the configured frequency differential (+ slip frequency setpoint offset (parameter 5502).

Example

If + slip frequency setpoint offset = 0.2 Hz, the easY-I will calculate the bus frequency reference point as:

- [measured mains frequency] + [slip frequency setpoint offset] = bus frequency reference point

A practical example of this would be:

- The monitored mains frequency is 60 Hz
- Configured + slip frequency setpoint offset = 0.2 Hz
- [60 Hz] + [0.2 Hz] = 60.2 Hz bus frequency reference point

The differential voltage is configured as a window. The monitored voltage from the potential transformers secondary for the mains and the bus must be within the configured voltage differential limit in relation to the rated voltage configuration.

This means that the voltage window dV [%] is in relation to the rated voltage configuration [%].

When the monitored bus frequency and voltage are within the configured differential limits, the "Command: close MCB" relay will enable, closing the MCB, and the system will be paralleled to the mains.

4.4.4.3.4 Prerequisites

All easY-I controllers connected to the system must have rated system frequencies and breaker logic configured identically and the parameter "Active power load share" (parameter 5531) or "Reactive power load share" (parameter 5631) must be enabled.

4.4.4.3.5 Load-Share Interface

The easY-I utilizes a peer relationship between units to control the system. This permits for parallel applications of up to 32 generators.

The current load-share interface is selected by parameters 9924 and 11986 LM 86.13.



For set-up of the load-share communication refer to “3.4.5 Ethernet Interface (incl. Remote Panel)” for information about the CAN bus connection or to “4.7.5 Ethernet Interfaces” for Ethernet

4.4.4.3.6 Load Sharing

The "Active/Reactive power load share" together with the "Active/Reactive power load share gains" determine if and how a generator performs real power or frequency control when paralleled with other generators in an islanded operation.

In the illustrated control system, it must be noted that each control calculates the mean utilization factor of all controls from the data transmitted via the selected bus and then compares this with its own utilization factor. The utilization factor is compared with the reference variable and results in a new reference variable setpoint. Frequency and real power control are carried out simultaneously in these controls (corresponding to the reference variable).

Frequency control is carried out via the measured voltage/frequency of the voltage system. The MPU is used merely for monitoring functions, or is available as a control value to the secondary controller.

Released

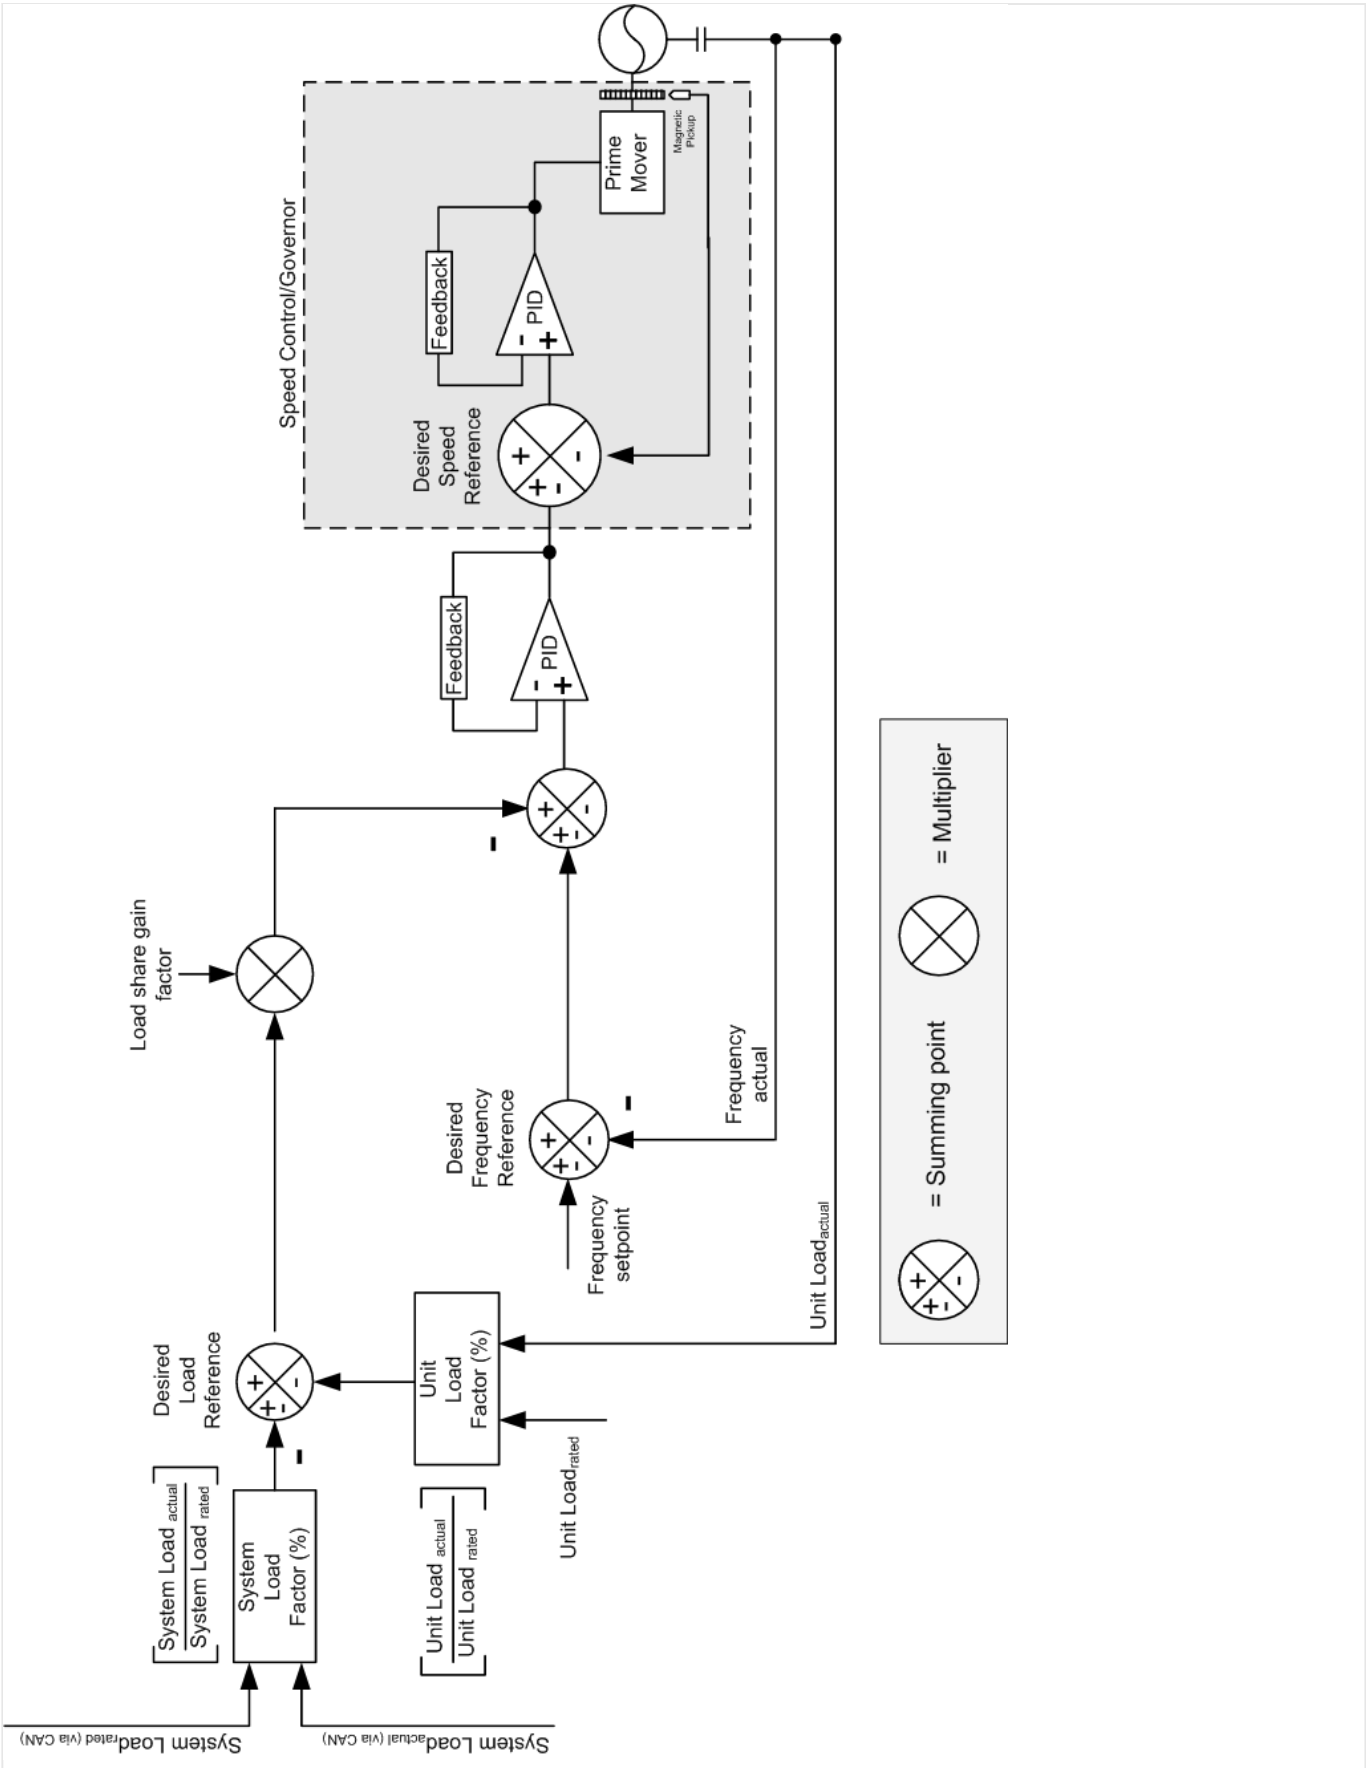


Fig. 157: Load sharing diagram

Released

4.4.4.3.7 Parameters

ID	Parameter	CL	Setting range [Default]	Description
9924	**Load share Interface**	2		The interface, which is used for transmitting the load share data is configured here.
			[CAN]	Use CAN interface 3.
			Ethernet A	Use Ethernet A interface.
			Ethernet B/C	Use Ethernet B or C interface.
			CAN/EthA by LM	Use CAN interface 3 but switch to Ethernet A by TRUE of LM 86.13 (described below).
			CAN/Ethernet A	Use CAN and Ethernet A redundant
			Ethernet B	Use Ethernet B interface.
			Off	Deactivate load share interface.
11986	**LS interface Ethernet A**	2	Determined by LogicsManager 86.13 **[(02.01 & 1) & 1]** = 11987	Load share interface switch if parameter 9924 is configured to "CAN/EthA by LM". TRUE: Use Ethernet A interface **FALSE**: Use CAN interface 1
2442	**Load share timeout event**	2	**[Off]**	Loadshare timeout events are disabled.
			On	Loadshare timeout events are enabled. If a loadshare message was not received within a defined time, a loadshare timeout event will be shown in the Event History.
5531	**Active power load share**	2	**[On]**	Active power load share is enabled. When multiple generators are operating in parallel, the real power is shared proportionally.
			Off	Active power load share is disabled
4522	**Active power load share gain**	2	0.01 to 9.99 **[1.25]**	This parameter defines the impact of the active power load sharing error signal on the frequency/load controller setpoint. The active power load share gain can be adjusted between 0.01 to 9.99. The load controller setpoint is considered, if an export import power control to mains is maintained. With a higher value the active load sharing has a higher correction factor in the regulation.
				Notes This parameter replaces the former existing weighting factor on non-XT easY-I (ID 5530). The

Released

ID	Parameter	CL	Setting range [Default]	Description
				default gain 1.25 relates to the 50% value.
5631	**Reactive power load share**	2	**[On]**	Reactive power load share is enabled. When multiple generators are operating in parallel, the reactive power is shared proportionally.
			Off	Reactive power load share is disabled
4543	**React. power load share gain**	2	0.01 to 9.99 **[1.25]**	This parameter defines the impact of the reactive power load sharing error signal on the voltage/ reactive load controller setpoint. The reactive power load share gain can be adjusted between 0.01 to 9.99. The reactive load controller setpoint is considered, if an export/import reactive power control to mains is maintained. With a higher value the reactive load sharing has a higher correction factor in the regulation.
				Notes This parameter replaces the former existing weighting factor of non-XT easY-I (ID 5630). The default gain 1.25 relates to the 50% value.



High data volume on communication ports can cause low HMI display operation dynamic.

Recommendation:

Reduce data transfer volume on CAN bus. This can be done with parameter ↳ 9921 »Transfer rate LS fast message«.

A general action to reduce data volume on CAN1 is disabling the TPDO1 data protocol if it is not used. Therefore navigate to parameter ↳ 9600 »COB-ID« and enter "80000000" via front panel or "2147483648" via ToolKit.

For more information how to reduce bus load see ↳ “4.4.4.3.6 Load Sharing”.

Relation "... factor" <> "... gain"



This ... gain parameter replaces the former existing (%) ... factor of non-XT easY-I. The table below shows the relation between the old and new values.

The used defaults 1.25 / 50% ensure backward compatibility.

Released

Weighting %	LS Gain
10	2.25
20	2
30	1.75
40	1.5
50	**1.25**
60	1
70	0.75
80	0.5
90	0.25
98	0.05

4.4.4.3.8 Load Share Control Grouping

Load sharing with several gensets is possible for a supply of several split busbars. Each of this individual groups is called a segment.

Up to four segments can be managed easily for load share by LogicsManager!



In the application breaker mode GCB/LSx the LogicsManager equations described below are used to handle even more complex easY-I/LSx applications. Please read general information first and then continue with “4.4.4.3.9 Segment Number in GCB/LSx mode”.

General

A group breaker splits the busbar in a way that some gensets supply one busbar and some supply another one. However, it is necessary to group the gensets/inverters, which supply the same busbar.

The designer of a busbar system gives all individual bus bars an own number: The Segment Number for the easY-I is defined with ID 1723. Each easY-I is connected with its GCB on one of these segments.

The configured segment number can be changed to one of three alternative segment numbers by three LogicsManager equations. These LogicsManager equations stand for the segment numbers 2, 3, or 4. They are usually controlled by circuit breaker reply auxiliary contacts. This is finally the segment number the easY-Is interacts with.

Released

Example

Six gensets (G1 through G6) supply a system with two group breakers (A, B) as shown in . All gensets have the same segment number configured #1 (parameter 1723)

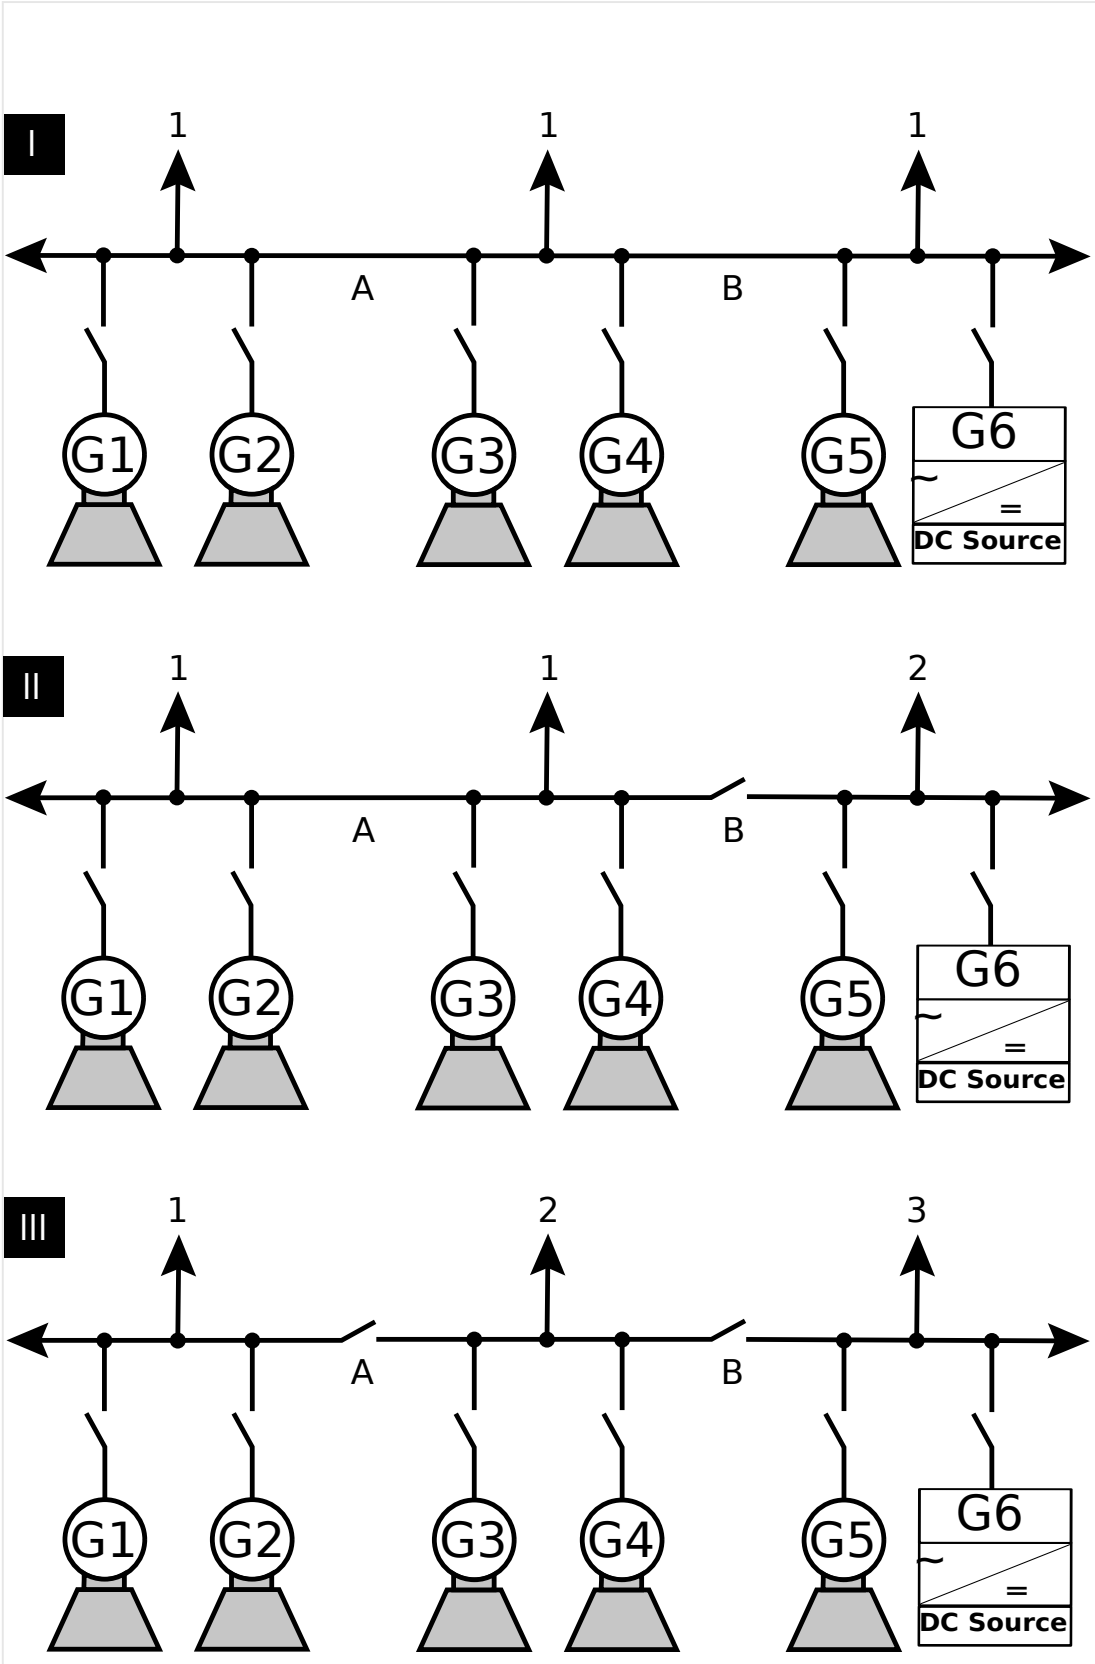


Fig. 158: Load sharing - grouping (G1 - G5 are generators, G6 is an Inverter with DC source in this example.)

Case I Group breakers A and B are closed and G1 through G6 supply th

ID	Parameter	CL	Setting range [Default]	Description
1723	**Segment number**	2	1 to 32 **[1]**	The genset is assigned a load share segment number with this parameter. This segment number may be overridden by the following parameters 12929, 12928, and 12927.
12929	**Segment no.2 act.**	2	Determined by LogicsManager 86.87	Once the conditions of the LogicsManager have been fulfilled, this genset is assigned load share segment number 2 (this parameter has priority over parameters 12928 and 12927).
			[(0 & 1) & 1]	**Notes** For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
12928	**Segment no.3 act.**	2	Determined by LogicsManager 86.88	Once the conditions of the LogicsManager have been fulfilled, this genset is assigned load share segment number 3 (this parameter has priority over parameters 12927).
			[(0 & 1) & 1]	**Notes** For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
12927	**Segment no.4 act.**	2	Determined by LogicsManager 86.89	Once the conditions of the LogicsManager have been fulfilled, this genset is assigned load share segment number 4.
			[(0 & 1) & 1]	**Notes** For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
5568	**Mode ext. load share gateway**	2		The operation mode for the external Woodward Load Share Gateway (LSG) is configured here.
			[0]	Off
			1	*Woodward EGCP-2* RS-485 (P & Q)
			2	*Woodward SPM-D* **R** = 4.99k | **P**: 0 − 4 V (0 to 100%) | **Q**: 0 − 5 V (-85% to +85%)
				Woodward MFR 15 **R** = 4.99k | **P**: 0 − 4 V (0 to 100%)
			3	*Woodward 2301 A*

Released

ID	Parameter	CL	Setting range [Default]	Description
				R = 54.90k | **P**: 0 − 3 V (0 to 100%)
			4	*Caterpillar LSM* **R** = 25.00k | **P**: 0 − 3 V (0 to 100%)
			5	*Cummins PCC 3100, 3200, 3201, 3300* **R** = 5.00k | **P**: 0 − 2.5 V (-14.1 to 121.9%) | **Q**: 0 − 2.5 V (-16.7% to +125.3%)
			6	*POW-R-CON* **R** = 20.67k | **P**: 0 − 5 V (0 to 100%)
			7	Prepared **R** = 25.00k | **P**: -5 − +5 V (0 to 100%)
			8	Prepared **R** = 25.00k | **P**: 0 − 7 V (0 to 100%)
			9	*Woodward GCP/MFR* CAN (**P** & **Q**)1 − easY-Is and GCP/MFR share the same CAN bus
			10 to 16	Not defined
				Notes Refer to the Load Share Gateway (LSG) Manual 37442 for security guidelines and detailed information about the configuration. **R**: Internal resistance **P**: Range for active power **Q**: range for reactive power

4.4.4.3.9 Segment Number in GCB/LSx mode

In the application breaker mode GCB/LSx the Segment Number (ID 1723) informs the LSx algorithm about the dedicated segment of the particular easY-Is. Finally the LSx algorithm determines for each easY-I on which segment number it has to interact with others.

In cases, where different GCBs shall be served, the operator can switch over the Segment LogicsManager equations between up to four dedicated segments, three of them predefined: The Segment Number (ID 1723) or the segment number 2, 3, or 4.

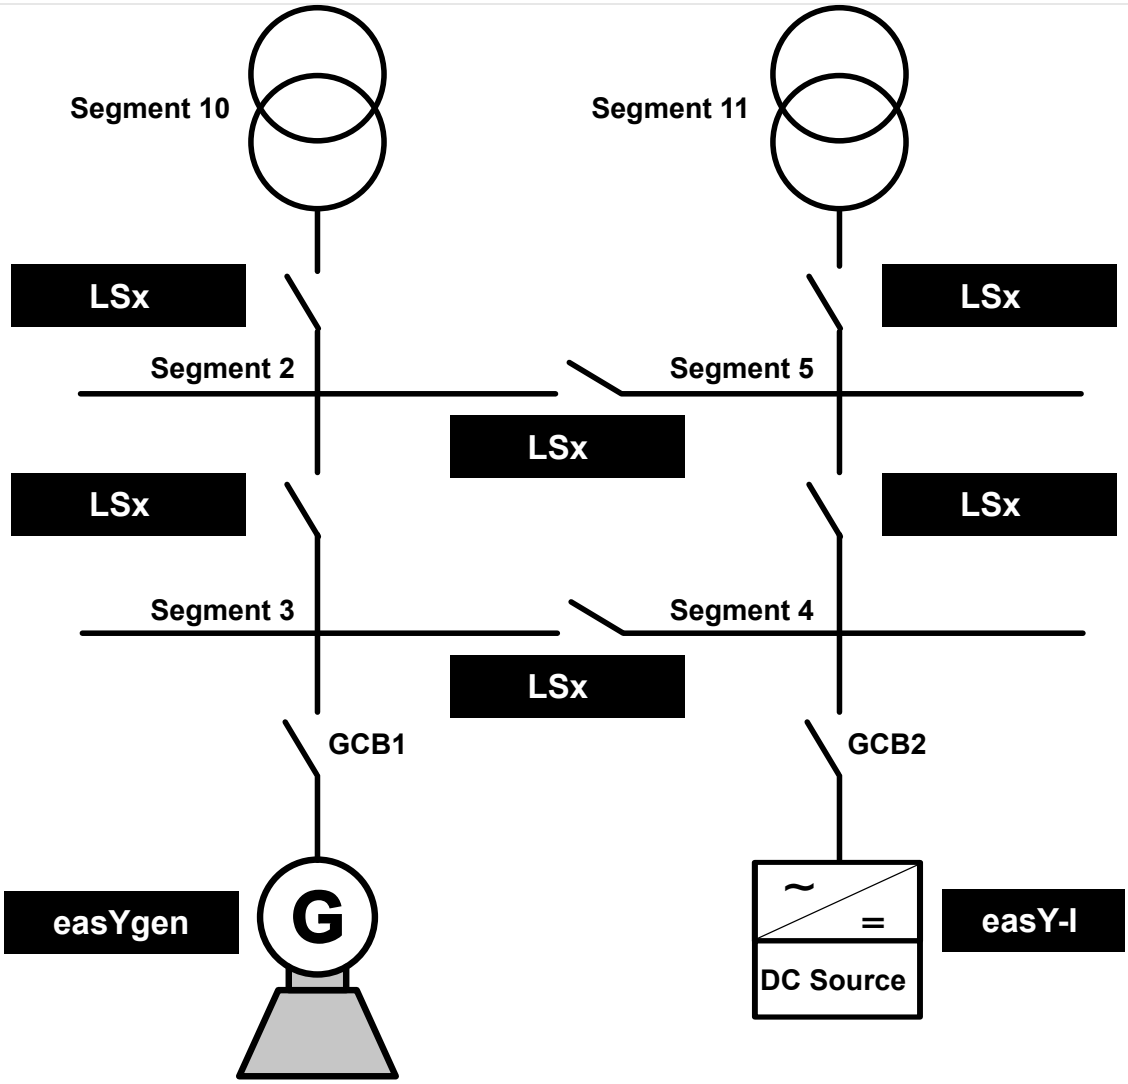


Fig. 159: Example: GCB/LSx application mode with easYgen and easY-I.

In cases, where different GCBs shall be served, the operator has to switch the correct segment number before he is closing the according GCB. Only one GCB per easY-I is allowed to be closed.

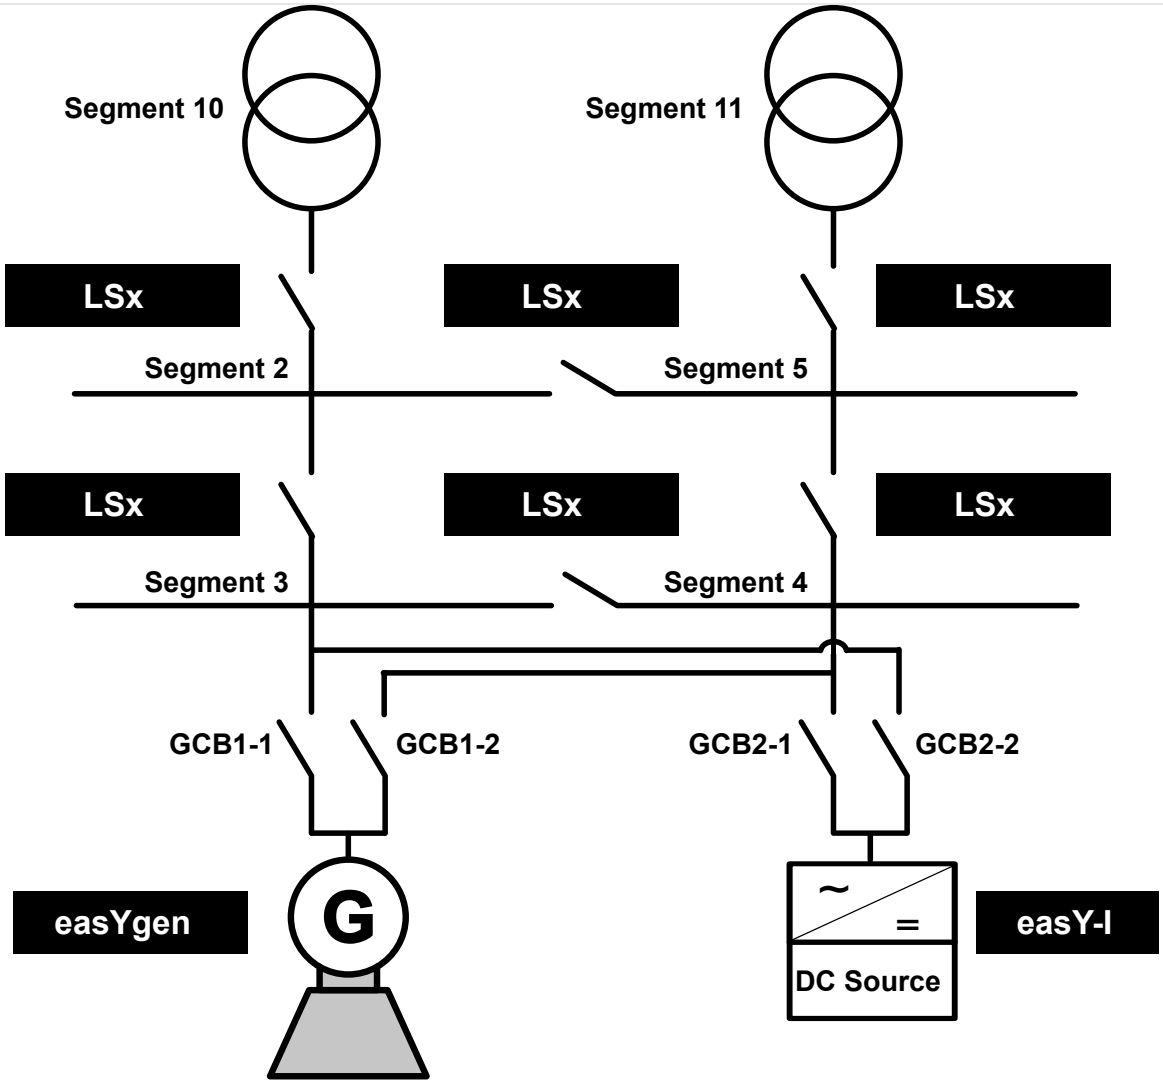


Fig. 160: Example: GCB/LSx application mode with 2 GCBs per easYgen and easY-I.

4.4.4.3.10 Droop

The isochronous running frequency or voltage controllers keep the desired frequency or voltage set point independent on the real or reactive power of the generator.

The **frequency controller** with activated droop behavior (LogicsManager ID 12904) reduces the desired frequency setpoint dependent on the active power of the generator (ID 1752). In case of a full loaded inverter the frequency setpoint will be reduced with the percentage value (ID 5504) related to rated frequency.

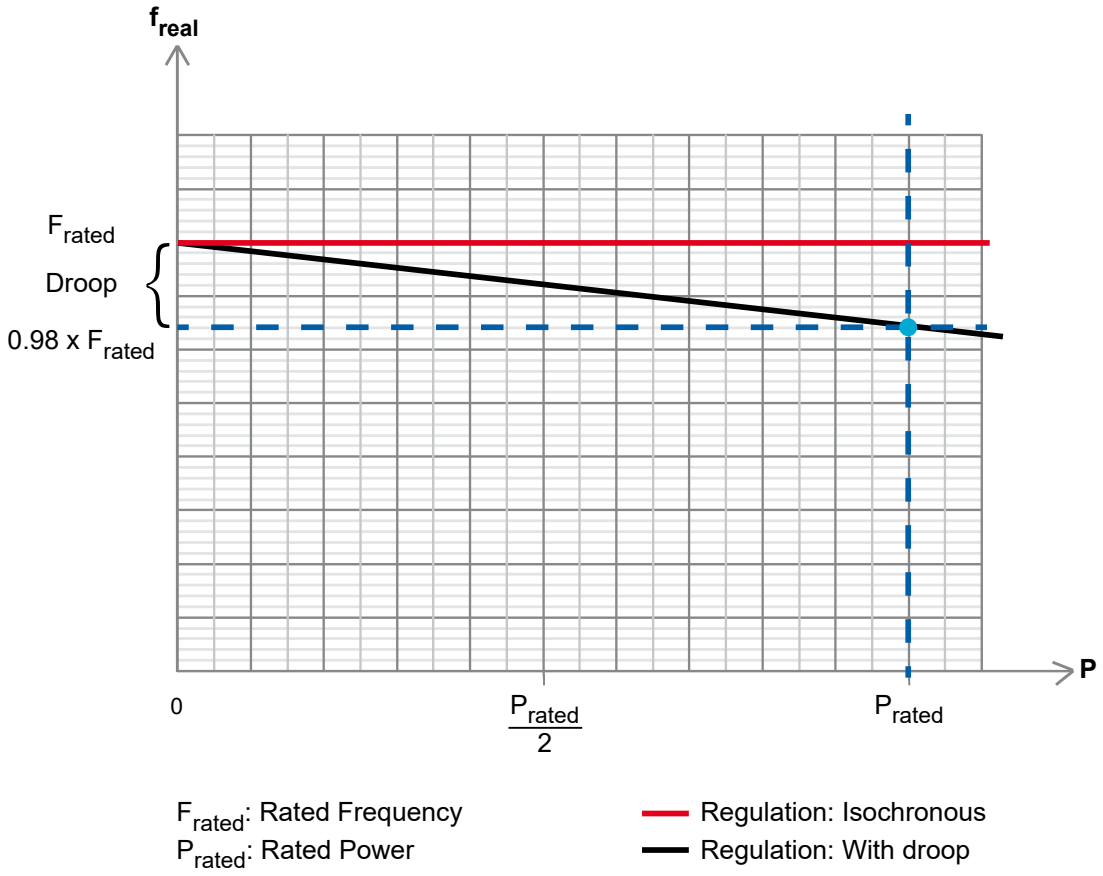


Fig. 161: Frequency controller - behavior with and without droop, diagram

The resulting frequency setpoint is calculated as follows: F'Set = FSet - (Preal * (Frated * droop factor) / Prated)

The **voltage controller** with activated droop behavior (LogicsManager ID 12905) reduces the desired voltage setpoint dependent on the reactive power of the generator (ID 1758). In case of a full reactive loaded generator the voltage will be reduced with the percentage value (ID 5604) of the rated frequency.

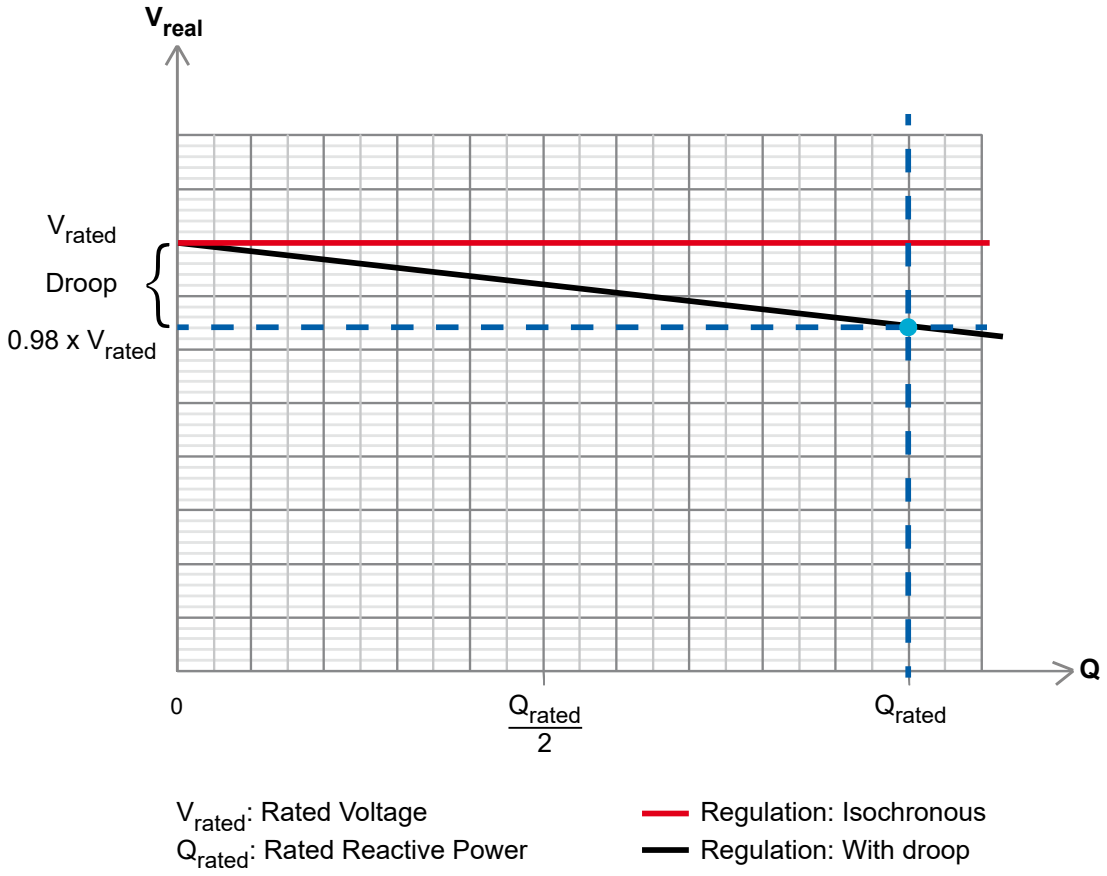


Fig. 162: Voltage controller - behavior with and without droop, diagram

The resulting voltage setpoint is calculated as follows: V'Set = VSet - (Qreal * (Vrated * droop factor) / Qrated)

Function Droop Tracking

The droop tracking for frequency/voltage control is implemented such that when the control is switched to frequency/voltage control with droop the frequency/voltage real value does not change at the current active/reactive load. This is provided by pre-calculating a setpoint offset, which is needed to hold rated frequency/voltage at present load.

This is a feature in applications where for example the load sharing over communication interface gets lost and the number of generators remains the same.

Droop Tracking On/Off

The easY-I allows disabling the droop tracking for frequency and voltage generally. This makes sense in applications where the number of generators can vary during running in droop mode.

Load sharing in Droop mode On/Off

Multiple easY-Is are load sharing under each other, if they run islanded from mains or they control export/import power at a common interchange point. For dynamic reasons it makes sense to disable the load sharing, when the easY-Is running in droop or can fall into droop mode (Missing member case).

Released

ID	Parameter	CL	Setting Range [Default]	Description
5747	Droop tracking	2	**[On]**	The frequency and voltage setpoint offset is pre-calculated to hold the frequency and voltage, when control is switched into droop.
			Off	The setpoint offset is always zero.
5748	Load sharing in droop mode	2	**[On]**	As long the load sharing function is enabled, it is done in droop mode too.
			Off	The load sharing is generally disabled in droop mode.

Table 59: Droop related parameters

4.4.4.4 Frequency Control

Notes on kick impulse function

If there is any raise / lower command output used in conjunction with a frequency three-point-controller this feature may interesting to read. Otherwise it does not play any role in the easY-I device.

Frequency control provides a kick impulse function, which issues a pulse if the frequency control deadband (parameter 5550) is not exceeded and no synchronization could be performed for 20 seconds. The function is enabled, if a synchronization is carried out.

- If the phase angle is between 0° and 180°, a "frequency lower" signal is issued.
- If the phase angle is between 180° and 360°, a "frequency raise" signal is issued.

The pulse duration is 100ms. If the synchronization still fails, another pulse will be issued after 10 seconds.

The following conditions are required for the kick impulse function:

- Frequency control (parameter 5507) is configured to "3pos controller"
- Synchronization mode (parameter 5728) is configured to "RUN" or "CHECK" (or "Controlled by LM" and RUN or CHECK enabled by the LogicsManager)



ToolKit: find settings screen

Analog Managers to define input signal of frequency setpoint (1, 2) are available in ToolKit by

- a click from screen/page "Configure frequency control"
  - on the button "Analog manager" in the left sidebar (below permanent buttons) or
  - on two times "next page", or
- search for one of the frequency controlled value shown at the status screen

Released

ToolKit: Trend chart

ToolKit offers a trend visualization accessible by

- a click from screen/page "Configure frequency control"
  - on the button "Trend chart" in the left sidebar (below permanent buttons) or
  - on "next page", or
- search (for parameter)

ID	Parameter	CL	Setting range **[Default]**	Description
5090	**Proportional gain 2**	2	0.01 to 100.00 **[1.00]**	This parameter defines the proportional coefficient that specifies the gain of the 2nd PID controller. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther outside tolerances the process is, the larger the response action is to return the process to the tolerance band.
5091	**Integral gain 2**	2	0.01 to 100.00 **[1.00]**	This parameter defines the integral gain that identifies the I part of the 2nd PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset.
5092	**Derivative ratio 2**	2	0.01 to 100.00 **[0.01]**	This parameter defines the D part of the 2nd PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.
5507	**Frequency control**	2	**[PID analog]**	The frequency is controlled using an analog PID controller.
			3pos controller	The frequency is controlled using a three-step controller.
			Off	Frequency control is not carried out.
5508	**Freq. control initial state**	2	0.0 to 100.0% **[50.0%]**	The value entered for this parameter is the start reference

ID	Parameter	CL	Setting range [Default]	Description
	(Frequency control initial state)			point for the analog output to the speed controller. **Notes** If the output to the speed control has been disabled, the output will act as a control position reference point.
5510	**Proportional gain**	2	0.01 to 100.00 **[1.00]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther outside tolerances the process is, the larger the response action is to return the process to the tolerance band. **Notes** If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog".
5511	**Integral gain**	2	0.01 to 100.00 **[1.00]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. **Notes** The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the inverter will continually oscillate. If the integral gain constant is too small, the inverter will take too long to settle at a steady state. This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog".
5512	**Derivative ratio**	2	0.01 to 100.00	The derivative ratio identifies the D part of the PID controller.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[0.01]	By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset. **Notes** This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog". The default configured controller acts like a PI controller what is the valid D part setting for systems with secondary controllers.
5550	**Deadband**	1	0.02 to 9.99 Hz **[0.08 Hz]**	**islanded operation** The generator frequency is controlled in such a manner that the measured frequency does not deviate from the configured setpoint by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts. **Example** • If the frequency setpoint is 50 Hz and a deadband of 0.5 Hz is configured, the measured generator frequency must exceed 50.5 Hz (50 + 0.5) to issue a lower pulse or fall below 49.5 Hz (50 - 0.5) to issue a raise pulse. **Synchronization** The generator frequency is controlled in such a manner that the measured frequency does not deviate from the monitored reference (mains or busbar) frequency by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts. The value configured for this

Released

ID	Parameter	CL	Setting range [Default]	Description
				parameter must be less than the value configured for the df max (maximum frequency differential) for synchronization. **Notes** This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".
5551	**Time pulse minimum**	1	0.01 to 2.00 s **[0.05 s]**	A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired speed reference point. **Notes** This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".
5552	**Gain factor**	1	0.1 to 10.0 **[5.0]**	The gain factor K_p influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be in-creased in response to a deviation from the frequency reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. **Notes** If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".
5636	**Cycle time factor**	1	1.0 to 20.0 **[1.0]**	The cycle time factor adjusts the time between the pulses (pause time). By increasing the cycle time factor, the time between the pulses increases. **Notes** This parameter is only visible if voltage control (parameter

Released

ID	Parameter	CL	Setting range [Default]	Description
				5507) is configured to "3pos controller".
5553	**Expand deadband factor**	1	1.0 to 9.9 **[1.0]**	If the measured generator frequency is within the deadband range (parameter ↳ 5550) and the configured delay expand deadband time (parameter ↳ 5554) expires, the deadband will be multiplied with the factor configured here. **Notes** This parameter is only visible if frequency control (parameter ↳ 5507) is configured to "3pos controller".
5554	**Delay expand deadband**	1	1.0 to 9.9 s **[2.0 s]**	The measured generator frequency must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter ↳ 5553. **Notes** This parameter is only visible if frequency control (parameter ↳ 5507) is configured to "3pos controller".
5518	**AM Frequency SP1[Hz]**	2	Determined by AnalogManager 81.03 **[A1 = 05.51 Internal f setp1 [Hz]]**	The Frequency setpoint 1 source may be selected from the available data sources. The internal frequency setpoint 05.51 can be changed manually at the setpoint screen of the display. **Notes** The frequency setpoint may be adjusted within the configured operating limits (↳ “4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”).
5500	**Int. freq. control setpoint 1** (Internal frequency control setpoint 1)	2	15.00 to 85.00 Hz **[50.00 Hz]**	The internal generator frequency setpoint 1 is defined in this screen. This value is the reference for the frequency controller when performing islanded and/or no-load operations. Generally 50 Hz or 60 Hz will be the values entered into this parameter. It is possible to enter a different value here.
5519	**AM Frequency SP2[Hz]**	2	Determined by AnalogManager 81.04	The Frequency setpoint 2 source may be selected from the available data sources.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[A1 = 05.52 Internal f setp2 [Hz]]	The internal frequency setpoint 05.52 can be changed manually at the setpoint screen of the display. **Notes** The frequency setpoint may be adjusted within the configured operating limits (“4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”).
5501	**Int. freq. control setpoint 2** (Internal frequency control setpoint 2)	2	15.00 to 85.00 Hz **[50.00 Hz]**	The internal generator frequency setpoint 2 is defined in this screen. This value is the reference for the frequency controller when performing islanded and/or no-load operations. Generally 50 Hz or 60 Hz will be the values entered into this parameter. It is possible to enter a different value here.
5502	**Slip frequency setpoint offset**	2	0.00 to 0.50 Hz **[0.10 Hz]**	This value is the offset for the synchronization to the busbar/ utility. With this offset, the unit synchronizes with a positive slip. **Example** If this parameter is configured to 0.10 Hz and the busbar/mains frequency is 50.00 Hz, the synchronization setpoint is 50.10 Hz. **Notes** The MCB can be synchronized with an individual slip frequency (also negative). The activation of MCB sync. with separate slip can be selected with parameter 5709 (HMI: configuration | breakers | MCB) hat comes with the MCB slip freq. setpoint offset parameter 5647 (HMI: configuration | application | controller | frequency).
5505	**Phase matching gain**	2	1 to 99 **[5]**	The phase matching gain multiplies the setting of the proportional gain (parameter 5510) for phase matching control.
5506	**Phase matching df-start**	2	0.02 to 0.25 Hz **[0.05 Hz]**	Phase matching will only be enabled if the frequency difference between the systems to be synchronized is below the configured value.

Released

ID	Parameter	CL	Setting range [Default]	Description
12918	**Setpoint 2 freq.** (Setpoint 2 frequency)	2	Determined by LogicsManager 86.81 **[(0 & 1) & 1]**	If this LogicsManager condition is TRUE, the frequency setpoint 2 will be used instead of frequency setpoint 1. The frequency (result of AM) ↳ 5519 instead of ↳ 5518 will be taken into account. **Notes** For information on the LogicsManager and its default settings see ↳ "9.4.1 LogicsManager Overview". Remotely switching the setpoint is possible: Use the LogicsManager command variable for input that is correlating with the dedicated bit of parameter ↳ ⇱.
5516	**Start frequency control level**	1	15.00 to 85.00 Hz **[47.00 Hz]**	The frequency controller is activated when the monitored generator frequency has exceeded the value configured in this parameter. This prevents the easY-I from attempting to control the frequency while the inverter is completing its start sequence.
5517	**Start frequency control delay**	1	0 to 999 s **[5 s]**	The frequency controller is enabled after the configured time for this parameter expires.
5503	**Freq. control setpoint ramp** (Frequency control setpoint ramp)	2	0.10 to 60.00 Hz/s **[2.50 Hz/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be.
5504	**Frequency control droop**	2	0.0 to 20.0% **[2.0%]**	If this control is to be operated on a generator in parallel with other generators and frequency control is enabled, a droop characteristic curve must be used. **Notes** Each generator in the system will require the same value to be configured for the droop characteristic, so that when the system is stable the active power will be distributed proportionally among all generators in relation to their rated power.

ID	Parameter	CL	Setting range [Default]	Description
12904	**Freq. droop act.** (Frequency droop active)	2	Determined by LogicsManager 86.25 **[(08.17 Missing members OR 08.06 GCB fail to open) & 1]**	If this LogicsManager condition is TRUE, the frequency droop is enabled. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”. The active droop will also be sent to an ECU connected to the J1939 interface (CAN interface 2). This information is independent from the breaker states or active controller (frequency or power controller). **Example** • Rated power: 500 kW • Rated frequency setpoint: 50.0 Hz • Droop 5.0% • Active power: 0 kW = 0% of rated power Frequency is adjusted to: (50.0 Hz – [5.0% * 0.0 * 50 Hz]) = 50.0 Hz. • Active power: +250 kW = +50% of rated power Frequency is adjusted to: (50.0Hz – [5% * 0.50 * 50 Hz]) = 50.0 Hz – 1.25 Hz = 48.75 Hz. • Active power: +500 kW = +100% of rated power Frequency is adjusted to: (50.0Hz – [5% * 1.00 * 50 Hz]) = 50.0 Hz – 2.5 Hz = 47.50 Hz.
12909	**Release f-control**	2	Determined by LogicsManager 86.96 **[(1 & 1) & 1]**	This LogicsManager is used to activate generally the frequency biasing to the sub controller. If the LogicsManager is false the output will be on the initial state (see parameter ↳ 5508). The LogicsManager condition status 'TRUE' is activating the frequency or power regulation according to the LogigsManager 'F/P control' ID ↳ 12940). **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.

Released

ID	Parameter	CL	Setting range [Default]	Description
12990	**2nd Frequency PID**	2	**[02.01 LM FALSE And 02.02 LM TRUE And 02.02 LM TRUE]**	This LogicsManager is used to activate the 2nd Frequency PID controller parameter set. If the LogicsManager output is false the 1st Frequency PID controller parameter set is taken. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

4.4.4.5 Load Control

A 2nd ramp is implemented to meet both BDEW and VDE AR-N 4105 decoupling requirements

Additionally to the »Load control setpoint ramp« parameter 5522 there is an alternative (2nd) »Load control ramp decoupling« parameter 5014 available for ramping slower. So it is possible to follow the BDEW/VDE requirements

- after mains decoupling

  and

- after »Frequency depending derating of power« (see chapter “4.4.4.5.3 Derating And Uprating Of Power ”) becomes inactive.

Default ramping is backward compatible because parameter 5015 per default comes with zero.

NEW LogicsManager to disable all load ramps (BDEW)

With LogicsManager 12853 It is possible to activate the fastest load ramp e.g., for test.

4.4.4.5.1 Configure: Load Control (general)

ToolKit: find settings screen

Analog Managers to define input signal of load setpoint (1, 2, 3, 4) are available in ToolKit by

- a click from screen/page "Configure voltage control"
  - on the button "Analog manager" in the left sidebar (below permanent buttons) or
  - on "next page", or
- search for one of the load controlled value shown at the status screen

Released

ToolKit: Trend chart

ToolKit offers a trend visualization accessible by

- a click from screen/page "General load control"
  - on the button "Trend chart" in the left sidebar (below permanent buttons) or
  - on "next page", or

ID	Parameter	CL	Setting range **[Default]**	Description
5525	**Load control**	2	**[PID analog]**	The generator load is controlled using an analog PID controller.
			3pos controller	The generator load is controlled using a three-step controller.
			Off	Load control is not carried out.
5513	**Proportional gain**	2	0.01 to 100.00 **[1.00]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band.
				Notes If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. This parameter is only visible if load control (parameter ⮡ 5525) is configured to "PID analog".
5514	**Integral gain**	2	0.01 to 100.00 **[1.00]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset.
				Notes The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the inverter will continually oscillate.

Released

ID	Parameter	CL	Setting range [Default]	Description
				If the integral gain steady is too small, the inverter will take too long to settle at a steady state. This parameter is only visible if load control (parameter ↳▷ 5525) is configured to "PID analog".
5515	**Derivative ratio**	2	0.01 to 100.00 **[0.01]**	The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.
				Notes This parameter is only visible if load control (parameter ↳▷ 5525) is configured to "PID analog". The default configured controller acts like a PI controller what is the valid D part setting for systems with secondary controllers.
5560	**Deadband**	1	0.10 to 9.99% **[1.00%]**	The generator load is controlled in such a manner, when paralleled with the mains, so that the monitored load does not deviate from the configured load setpoint by more than the value configured in this parameter without the controller issuing a raise/lower signal to the speed control. This prevents unneeded wear on the raise/lower relay contacts. The configured percentage for the dead band refers to the generator rated active power (parameter ↳▷ 1752).
				Notes This parameter is only visible if load control (parameter ↳▷ 5525) is configured to "3pos controller".
5561	**Time pulse minimum**	1	0.01 to 2.00 s **[0.05 s]**	A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired speed reference point.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".
5562	**Gain factor**	1	0.1 to 10.0 **[5.0]**	The gain factor K_p influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be in-creased in response to a deviation from the frequency reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. **Notes** If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value. This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".
5637	**Cycle time factor**	1	1.0 to 20.0 **[1.0]**	The cycle time factor adjusts the time between the pulses (pause time). By increasing the cycle time factor, the time between the pulses increases. **Notes** This parameter is only visible if voltage control (parameter 5525) is configured to "3pos controller".
5563	**Expand deadband factor**	1	1.0 to 9.9 **[1.0]**	If the measured generator load is within the deadband range (parameter 5560) and the configured delay expand deadband time (parameter 5564) expires, the deadband will be multiplied with the factor configured here. **Notes** This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".
5564	**Delay expand deadband**	1	1.0 to 9.9 s **[2.0 s]**	The measured generator load must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter 5563.

ID	Parameter	CL	Setting range [Default]	Description
				Notes This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".
5522	**Load control setpoint ramp 1**	2	0.10 to 100.0%/s **[3.00%/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be.
				Notes This ramp is also used in islanded operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.
5014	**Load control setpoint ramp 2**	2	0.01 to 100.0%/s **[0.15%/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be.
				Notes This ramp is also used in islanded operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.
11978	**2nd load control setpoint ramp**	2	Determined by LogicsManager 87.77 **[(0 & 02.02) & 02.02]**	The LogicsManager can be used to switch from load ramp 1 to load ramp 2 settings. If this LogicsManager condition is TRUE and load ramp will be performed, »Load control setpoint ramp 2« will be used.
5015	**Time until decoupl. ramp reset**	2	0 to 9999 s **[0 s]**	The mains decoupling ramp (2nd load ramp) will be disabled after that time delay.
				Notes This parameter comes with default zero for backward compatibility (2nd load ramp disabled). BDEW prefers 600 s.
5016	**Load control setpoint ramp 3**	2	0.10 to 100.00%/s **[3.00%/s]**	The different setpoint values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out,

ID	Parameter	CL	Setting range [Default]	Description
				the greater the value entered here must be. **Notes** This ramp is also used in islanded operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.
11998	**3rd load control setpoint ramp**	2	Determined by LogicsManger 87.79 **[(02.02 & 02.02) & 02.02]**	The LogicsManager can be used to switch from load ramp 1 or load ramp 2 to load ramp 3 settings. If this LogicsManager condition is TRUE and load ramp will be performed, [Load control setpoint ramp 3] will be used. (3rd load control setpoint ramp has the highest priority.)
12853	**Disable load setpoint ramp**	2	Determined by LogicsManager 87.76 **[(02.01& 1) & 1]**	The LogicsManager can be used to perform fastest possible load ramp independent from load ramp settings. If this LogicsManager condition is TRUE and load ramp will be performed, e.g. a test with different setpoint steps but without any ramping is possible like requested by BDEW.
5569	**Load control unloading ramp**	2	0.10 to 100.00%/sec **[3.00%/sec]**	The ramp rate is used for the unloading in parallel operation or islanded operation.
5523	**Load control setpoint maximum**	2	0 to 150% **[100%]**	If the maximum generator load is to be limited, a percentage based on the rated generator power (parameter ↳ 1752) must be entered here. The controller adjusts the generator in such a manner that this value is not exceeded. This parameter limits the setpoint of the load controller when the generator is in a mains or island parallel operation.
3465	**Min.generator power**	1	0 to 100% **[0%]**	This is the minimum active power setpoint. Any lower other active power setpoint will be ignored! **Notes** For backward compatibility reasons the default value is zero. This min. value is also used for the AnalogManager data sources ↳ “9.5.2 Data Sources AM” • 05.19 Used P setp. [%] and • 05.20 Used P setp.ramp [%]

ID	Parameter	CL	Setting range **[Default]**	Description
5524	**Min.generator import/export**	2	0 to 100% **[0%]**	If the minimum generator load is to be limited, a percentage based on the rated generator power (parameter 1752) must be entered here. The controller will not permit the load to drop below the configured load limit value. This parameter is only functional when the generator is in a mains parallel operation.
12940	**P control**	2	Determined by LogicsManager 86.98 **[(04.07& 04.06) & 1]**	The LogicsManager can be used to control whether frequency control or active power control should be performed. If this LogicsManager condition is TRUE, the active power control is performed.

4.4.4.5.2 Configure: Load Setpoints

ToolKit: find settings screen

Analog Managers to define input signal of load setpoint (1, 2, 3, 4) are available in ToolKit by

- a click from screen/page "Load setpoints"
  - on the button "Analog manager" in the left sidebar (below permanent buttons) or
  - on "next page", or
- search (for parameter)

ID	Parameter	CL	Setting range **[Default]**	Description
5526	**Load setpoint 1**	2	Import	The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.
			Export	The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.
			[Steady]	The generator shall always supply the value entered for the steady

ID	Parameter	CL	Setting range **[Default]**	Description
				power level. All load swings are absorbed by the utility. The generator will always start when a steady power (base load) operation is enabled.
5520	**Int. load control setpoint 1** (Internal load control setpoint 1)	2	-99999.9 to 99999.9 kW **[100.0 kW]**	The load setpoint 1 is defined in this screen. This value is the reference for the load controller when performing parallel operations.
5539	**AM ActPower SP1 [kW]**	2	Determined by AnalogManager 81.05 **[A1 = 05.54 Internal P setp1 [kW]]**	The load setpoint 1 source may be selected from the available data sources. The internal load setpoint 05.54 can be changed manually at the setpoint screen of the display.
				Notes The load setpoint may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523).
5527	**Load setpoint 2**	2	Import	The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.
			Export	The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.
			[Steady]	The generator shall always supply the value entered for the steady power level. All load swings are absorbed by the utility. The generator will always start when a steady power (base load) operation is enabled.
5521	**Int. load control setpoint 2** (Internal load control setpoint 2)	2	-99999.9 to 99999.9 kW **[200.0 kW]**	The load setpoint 2 is defined in this screen. This value is the reference for the load controller when performing parallel operations.
5540	**AM ActPower SP2 [kW]**	2	Determined by AnalogManager 81.06 **[A1 = 05.55 Internal P setp2 [kW]]**	The load setpoint 2 source may be selected from the available data sources. The internal load setpoint 05.55 can be changed manually at the setpoint screen of the display.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes The load setpoint may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523).
12919	**Setp. 2 load** (Setpoint 2 load)	2	Determined by LogicsManager 86.82 **[(0 & 1) & 1]**	If this LogicsManager condition is TRUE, the ActPower setpoint 2 will be used instead of ActPower setpoint 1. The ActPower (result of AM) 5540 instead of 5539 will be taken into account.
				Notes For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview". Remotely switching the setpoint is possible: Use the LogicsManager command variable for input that is correlating with the dedicated bit of parameter .
5796	**Load setpoint 3**	2	Import	The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.
			Export	The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.
			[Steady]	The generator shall always supply the value entered for the steady power level. All load swings are absorbed by the utility. The generator will always start when a steady power (base load) operation is enabled.
5795	**Int. load control setpoint 3** (Internal load control setpoint 2)	2	-99999.9 to 99999.9 kW **[150.0 kW]**	The load setpoint 3 is defined in this screen. This value is the reference for the load controller when performing parallel operations.
5606	**AM ActPower SP3 [kW]**	2	Determined by AnalogManager 81.07 **[A1 = 05.80 Internal P setp3 [kW]]**	The load setpoint 3 source may be selected from the available data sources. The internal load setpoint 05.80 can be changed manually at the setpoint screen of the display.

ID	Parameter	CL	Setting range **[Default]**	Description
				Notes The load setpoint may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523).
12998	**Setp. 3 load** (Setpoint 3 load)	2	Determined by LogicsManager 87.67 **[(0 & 1) & 1]**	If this LogicsManager condition is TRUE and »Setp. 2 load« is not TRUE, the frequency setpoint 3 will be enabled., i.e. the setting of parameter 5606 overrides the setting of parameter 5539. If this LogicsManager condition is TRUE, the frequency setpoint 3 will be used instead of frequency setpoint 2. The ActPower SP3 (result of AM) 5606 instead of 5539 will be taken into account.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”. Remotely switching the setpoint is possible: Use the LogicsManager command variable for input that is correlating with the dedicated bit of parameter ⇱.
5999	**Load setpoint 4**	2	Import	The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.
			Export	The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.
			[Steady]	The generator shall always supply the value entered for the steady power level. All load swings are absorbed by the utility. The generator will always start when a steady power (base load) operation is enabled.
5998	**Int. load control setpoint 4** (Internal load control setpoint 4)	2	-99999.9 to 99999.9 kW **[50.0 kW]**	The load setpoint 4 is defined in this screen. This value is the reference for the load controller when performing parallel operations.

Released

ID	Parameter	CL	Setting range [Default]	Description
5609	**AM ActPower SP4 [kW]**	2	Determined by AnalogManager 81.08 **[A1 = 05.84 Internal P setp4 [kW]]**	The load setpoint 4 source may be selected from the available data sources. The internal load setpoint 05.84 can be changed manually at the setpoint screen of the display. **Notes** The load setpoint may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523).
12269	**Setp. 4 load** (Setpoint 4 load)	2	Determined by LogicsManager 87.75 **[(0 & 1) & 1]**	If this LogicsManager condition is TRUE and neither »Setp. 2 load« nor »Setp. 3 load« is true, the frequency setpoint 4 will be enabled, i.e. the setting of parameter 5609 overrides the setting of parameter 5539. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”. Remotely switching the setpoint is possible: Use the LogicsManager command variable for input that is correlating with the dedicated bit of parameter ⇱.

4.4.4.5.3 Derating And Uprating Of Power

General notes

The current active power setpoint can be derated to a defined value according to the application.

To ensure high flexibility the easY-I-XT offer the following derating functions:

- Direct derating

  (Derating to the value of an analog manager. Refer to “6.3.12.1 Direct Derating”.)

- Derating according to a characteristic curve

  (Derating according to a configured e.g. temperature characteristic. Refer to “6.3.12.2 Derating With Characteristic Curve”.)

- Frequency depending derating

  (Requirement of some grid codes. Refer to “4.4.4.5 Load Control”.)

Application fields

Derating examples:

- An asynchronous load sharing is required. It is possible to operate an inverter with limited power (e.g. if there is a DC source with low SOC).

Uprating example:

- A single inverter shall run with a higher load than the others e.g. for load test.

Block Diagram

This diagram shows the different paths of the selected derating sources:

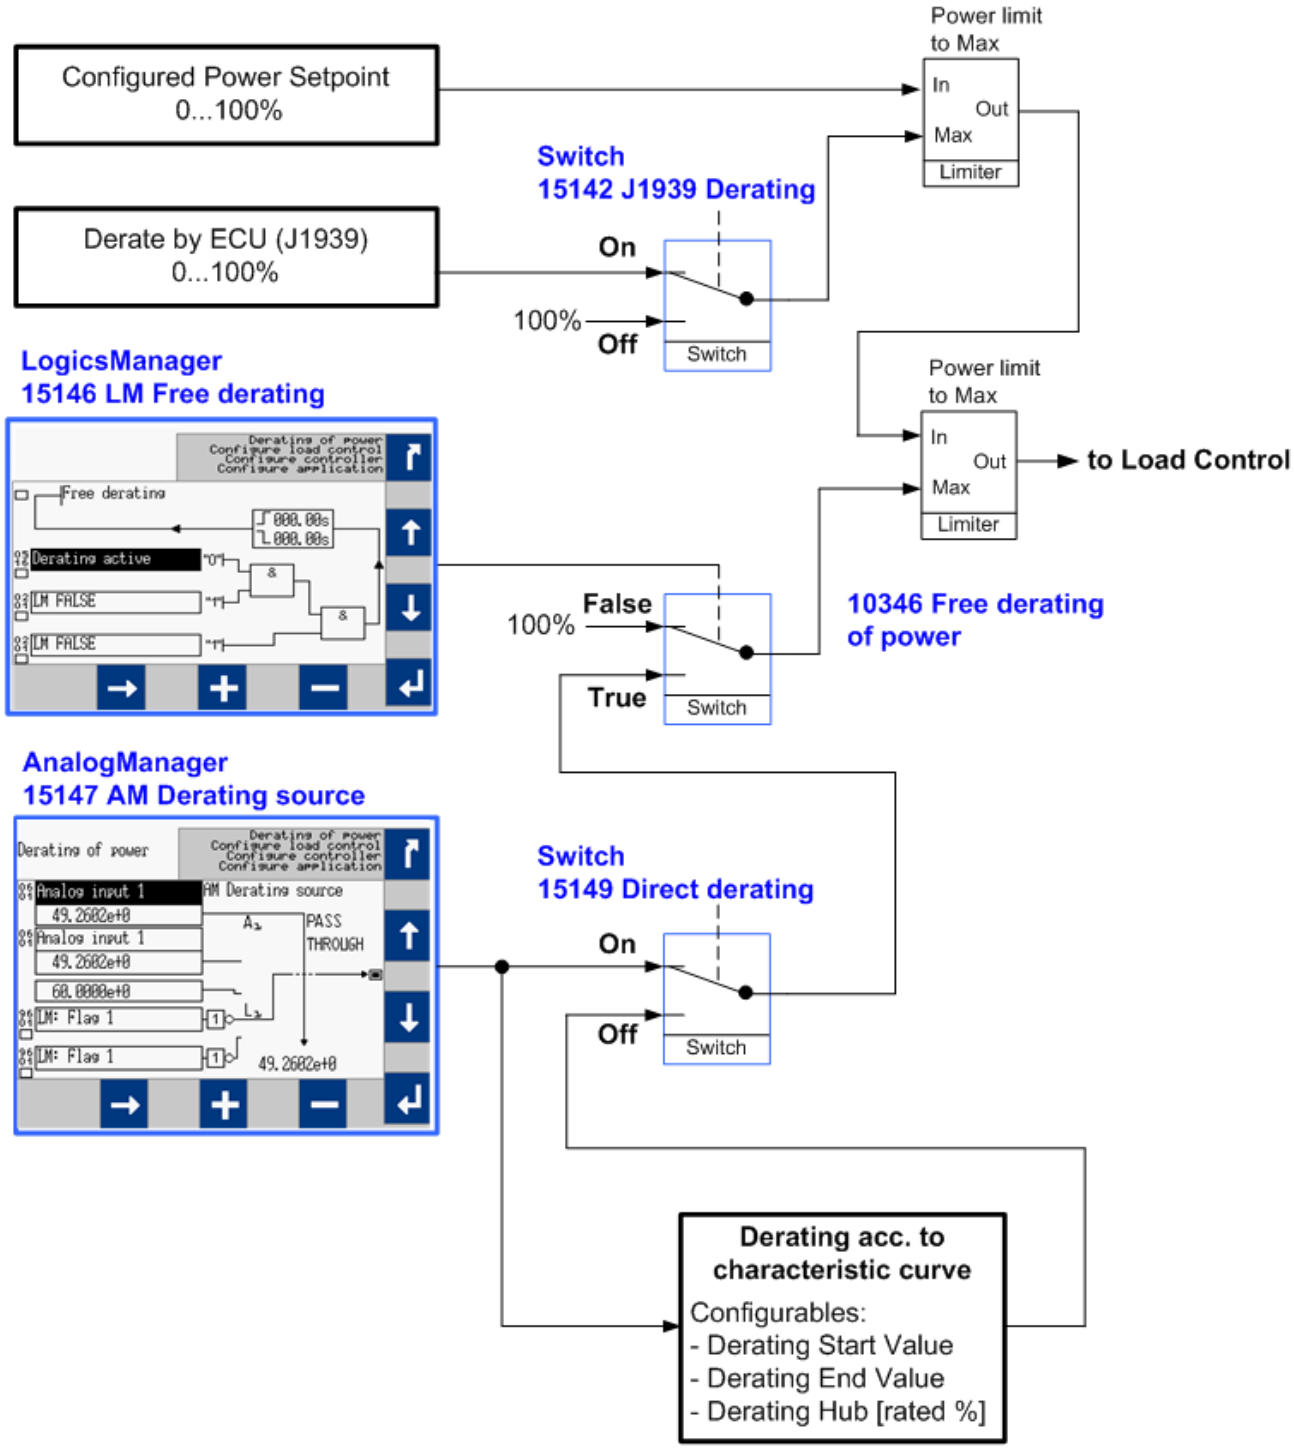


Fig. 163: Derating of Active Power (Note: J1939 ECU derating is not supported by the easY-I.)

Derating priority

If more than one derating function is configured the one which calculates the lowest setpoint becomes effective.

Derating Parameters

ID	Parameter	CL	Setting range [Default]	Description
15149	**Direct Derating**	2	On	Only the analog source is used for the up-/derating. The parameters 15143, 15144, and 15145 are not visible neither in the HMI nor in ToolKit.
			[Off]	The free derating function uses the parameters 15143, 15144, and 15145 for the calculation from the derating value. This parameters are visible in the HMI and ToolKit.
15143	**Start derating at**	2	-032000 to 032000 **[1000]**	This parameter defines the starting point when the derating becomes active. The value applies to the analog source (parameter ↳ 15147). Value of the analog source which starts derating.
15144	**Stop derating at**	2	-032000 to 032000 **[0]**	This parameter defines (in combination with parameter ↳ 15143) the ramp of the derating function. Value of the analog source which ends derating.
15145	**Max. power deviation**	2	1.0 to 100.0% **[100.0%]**	This parameter defines the maximal power deviation of the derating function. That means it determines also the minimal power while derating is active. 100% minus this value is the lowest P value reachable by free derating. The configured percentage for the max. power deviation refers to the generator rated active power (parameter ↳ 1752).
15146	**Free derating**	2	Determined by LogicsManager 87.60 **[(02.01 & 1] & 1]**	This LogicsManager equation releases the free derating function.
15147	**AM Derating source**	2	Determined by AnalogManager 81.21 **[A1 = 06.01 Analog input 1]**	This parameter defines the analog source »Analog input 1« which controls the derating function.

Table 60: Parameters

Indication of derating

Where?	What?	Remarks
HMI	"Derating active"	ID 13281 (for protocols state indication)

Released

Where?	What?	Remarks
	"Uprating active"	ID 13287 (for protocols state indication)
	Value of derating	The value is representing the derating in percent (not the resulting setpoint). For this reason this value becomes negative in case of uprating.
As LM command variable	05.16 for derating	If derating is active “Derating active” is shown in the status message and command variable 05.16 becomes active.
	05.17 for uprating	If uprating is active “Uprating active” is shown in the status message and command variable 05.17 becomes active.
Event list	entry	

The value of derating is shown in the following menus:

HMI: [Next Page / Setpoints / Derating]

ToolKit: [STATUS MENU / Setpoints / Derating]

In case of derating this value has positive in case of uprating has negative sign.

4.4.4.5.4 Active Power – Frequency Function P(f)

Introduction

The FNN VDE-AR-N 4105 / 4110 requests an active power control to stabilize the grid during mains faults. To maintain this the easY-I can be configured to:

- f depending derating of power OR
- f depending uprating of power OR
- both.

The reference for the uprating or derating power can be calculated out of the actual power or the rated power. This is differently treated in grid codes 4105 and 4110.

Function

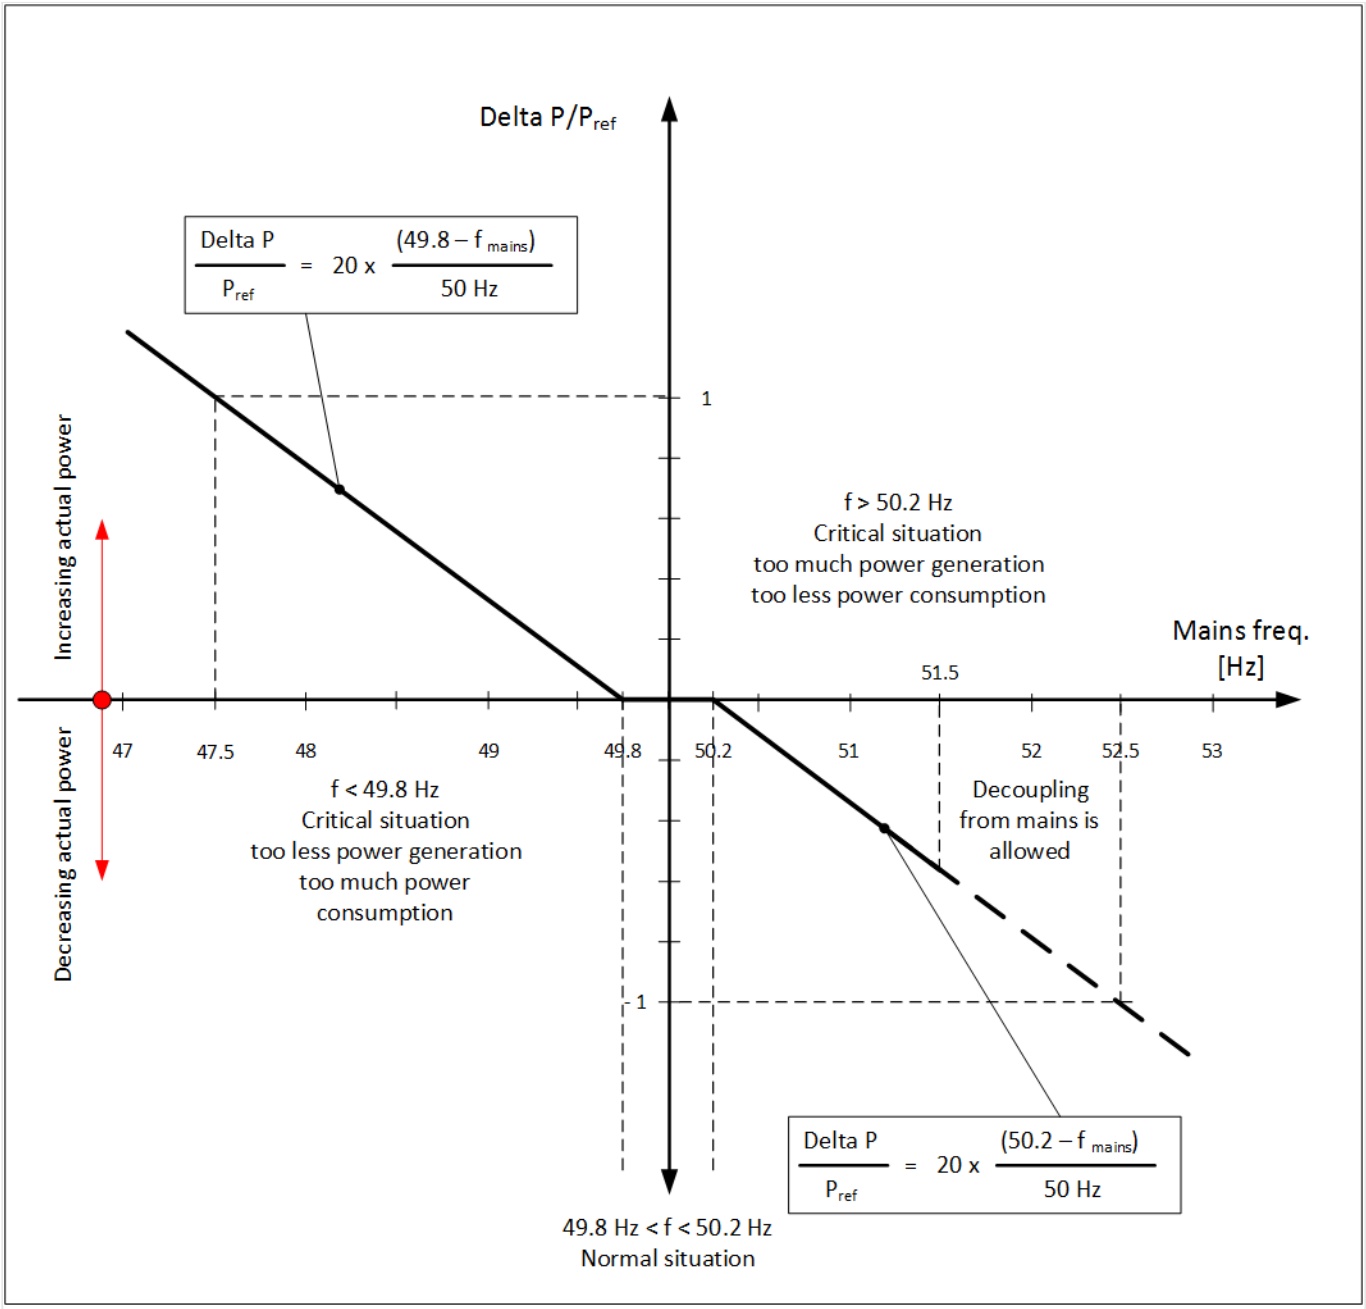


Fig. 164: De/Uprating of active power setpoint due mains stabilization

Derating:

If the mains frequency exceeds the f start value ID 5782 the device calculates a power reduction in relation to the configured rate.

If the mains frequency exceeds the f stop value ID 5095 the calculation will be disabled and the active power controller regulates its original active power setpoint. Should the active power setpoint be changed meanwhile the mains failure power ramp will be activated.

Released

Uprating

If the mains frequency underruns the f start value ID 5094 the device calculates a power increase in relation to the configured rate. If the mains frequency exceeds the f stop value ID 5095 the calculation will be disabled and the active power controller regulates its original active power setpoint. Should the active power setpoint be changed meanwhile the mains failure power ramp will be activated.

Frequency value for up/derating:

According to the VDE-AR-N 4110 a 200ms moving average mains frequency value is used. The frequency can be picked up under ID 236 or is usable via the AnalogManager variable “02.90 Mains freq.200ms [Hz]”.

ID	Parameter	Setting range [Default]	Description
5807	**Up/derating based on**	Rated power **[Actual power]**	The reference for the active power derating/uprating is adjustable with this parameter. **Rated power:** In the moment of up/ derating start the generator rated power is taken and from this value the percentage rating is calculated. **Actual power:** In the moment of up/ derating start the actual power is stored and from this value the percentage rating is calculated.

Parameter Derating

ID	Parameter	Setting range [Default]	Description
5781	**Function**	On **[Off]**	The f depending derating of power can be enabled here. **On:** Active power derating is enabled. **Off:** Active power derating is disabled
5782	**f start value**	15.00 to 85.00 Hz **[50.20 Hz]**	If the mains frequency is higher than the start value the frequency depending derating function is enabled.
5783	**f stop value**	15.00 to 85.00 Hz **[50.15 Hz]**	The frequency depending derating function stops, if the mains frequency is lower than the stop value.
5784	**f dep.derating**	1 to 100 %/Hz **[40 %/Hz]**	Depending on the actual mains frequency, the generator active power decreases with the gradient value in relation to the active power the reference value.
5785	**Hold max. derating**	On **[Off]**	It can be determined, whether the max. calculated reduction value shall be hold. In that case the last highest reduction rate is kept until the the f-stop value is underrun.

ID	Parameter	Setting range [Default]	Description
			Off: The reduction is executed along the reduction line. **On:** The reduction is executed and hold along the reduction line. With underrun the F stop value the reduction is reset.

Parameter Uprating

ID	Parameter	Setting range [Default]	Description
5093	**Function**	On **[Off]**	The f depending uprating of power can be enabled here. **On:** Active power uprating is enabled. **Off:** Active power uprating is disabled
5094	**f start value**	15.00 to 85.00 Hz **[49.80 Hz]**	If the mains frequency is lower than the start value the frequency depending uprating function is enabled.
5095	**f stop value**	15.00 to 85.00 Hz **[49.85 Hz]**	The frequency depending uprating function stops, if the mains frequency is higher than the stop value.
5096	**f dep.uprating**	1 to 100 %/Hz **[40 %/Hz]**	Depending on the actual mains frequency, the generator active power increases with the gradient value in relation to the active power the reference value.

Configuration Test possibility for f dependent up/derating

For test purposes it is possible to configure a "Mains voltage test frequency" which is passed to the uprating and derating characteristics.

ID	Parameter	Setting range [Default]	Description
5808	**Enable mains test frequency**	On **[Off]**	For test purposes it is possible to configure a "Mains voltage test frequency" which is passed to the uprating and derating characteristics. **On:**The mains **test frequency** is used for f- dependent up-/derating instead of the measured mains frequency. **Off:** The test frequency is disabled and the measured mains frequency is used.
			Note: Enable mains test frequency" is reset to Off automatically after 1 hour.

Released

ID	Parameter	Setting range **[Default]**	Description
5809	**Mains test frequency**	15.00 to 85.00 Hz **[50.00 Hz]**	If parameter 5808 is “On” this value is used for f- dependent up-/ derating instead of measured mains frequency.

Start conditions

The power derating function becomes active, if the following conditions are true:

- Mains frequency > F_{Start} (parameter ⮡ 5782) AND
- Mains parallel operation active (MCB, GCB and if applicable GGB are closed) AND
- easYgen is in AUTOMATIC mode AND
- The corresponding controller functions are switched "On"

Stop conditions

The power derating function becomes inactive and will be reset, if at least one of the following conditions is true:

- Mains frequency < F_{Stop} (parameter ⮡ 5783) OR
- Mains parallel operation **not** active (MCB, GCB and if applicable GGB are open) OR
- easYgen is **not** in AUTOMATIC mode OR
- The corresponding controller functions are switched "Off"

AnalogManager sources:

These analog variables indicate the derating respectively uprating percent value:

- 05.28 P derating(f) [%] (same value as 10341)
- 05.48 P uprating(f) [%] (same value as 10357)

Visualization

Values which indicate the actual active power stored when the derating respectively uprating function has started:

- 4613 f dep.derating P reference [%]
- 10357 f dep.derating P reference [%]

Values which indicate the derating respectively uprating percent value:

- 10341 Freq.dep.derating of power [%]
- 10356 Freq.dep.uprating of power [%]

Values which indicate the resulting setpoint:

- 10358 Freq.dep.uprating of power [kW]

- 10359 Setpoint uprating of power [kW]

Examples Power Derating

If the frequency increases the value F_{Start} (Parameter 5782), the momentary power of the generator will be memorized by the controller as an **internal** value P_M. (P measured) and indicated at “4613 f dep. Derating P reference” [%]. Now, the power will be derated with a gradient R [%/Hz](parameter 5784).

All examples are using the following values:

- P_{rated} = 200 kW
- P_M = 130 kW
- R = 40%/Hz (parameter 5784)
- F_{Start} = 50.20 Hz (parameter 5782)
- F_{Mains} = 50.50 Hz

The power derating ΔP may be calculated using the following formulas:

- $\Delta P_{\mathbf{kW}}$ = P_M [**kW**] x R [%/Hz] x (FMains [Hz] - FStart [Hz]) / 100 [%]
- $\Delta P_{\mathbf{\%}}$ = P_M [**%**] x R [%/Hz] x (FMains [Hz] - FStart [Hz]) / 100 [%]

Example 1: Power derating with “5807 Up/derating based on" Actual power

- The power derating $\mathbf{\Delta P_{kW}}$ is calculated as follows:
  - $\Delta P_{\mathbf{kW}}$ = 130 kW x 40 %/Hz x (50.50 Hz - 50.20 Hz] / 100% = 15.6 kW
  - “10358 Setpoint derating of power” indicates 114.4 kW (130 kW – 15.6 kW)
- The power derating $\mathbf{\Delta P_{\%}}$ is calculated as follows:
  - $\Delta P_{\mathbf{\%}}$ = 65 % x 40 %/Hz x (50.50 Hz - 50.20 Hz] / 100% = **7.8 %**
  - “10341 Freq. dep. derating of power” and “05.28 P derating(f) [%]” indicates 7.8 %

The derating becomes inactive, if the frequency becomes lower than F_{Stop} (Parameter 5783)). (If the frequency becomes too high, the frequency monitoring function trips.)

Example 2: Power derating with “5807 Up/derating based on" Rated power

- The power derating ΔP may be calculated using the following formulas: The power derating $\mathbf{\Delta P_{kW}}$ is calculated as follows:
  - $\Delta P_{\mathbf{kW}}$ = 200 kW x 40 %/Hz x (50.50 Hz - 50.20 Hz] / 100% = 24 kW
  - “10358 Setpoint derating of power” indicates 104 kW (130 kW – 24 kW).
- The power derating $\Delta P_{\%}$ is calculated as follows:
  - $\Delta P_{[\mathbf{\%}]}$ = 100 % x 40 %/Hz x (50.50 Hz - 50.20 Hz] / 100 % = **12 %**

Released

- “10341 Freq. dep. derating of power” and “05.28 P derating(f) [%]” indicates 12 %

The derating becomes inactive, if the frequency becomes lower than F_{Stop} (Parameter ↳ 5783). (If the frequency becomes too high, the frequency monitoring function trips.)

Example 3: Explanation of Parameter “5785 Hold max.derating”:

If the frequency decreases, while the derating is still active, the behavior depends on parameter “Hold max.derating” (parameter ↳ 5785)

The following assumptions are made:

- The corresponding parameters are set to default
- Derating has started with F_{Start} = 50.20 Hz with P_M = 130 kW
- The current frequency is 50.70 Hz → reduction ΔP = 26 kW current power = 104 kW

Now the measured frequency decreases to 50.50 Hz:

- Hold max. derating” (parameter ↳ 5785) = **Off**

  The derating ΔP decreases to 15.6 kW according to the gradient 40 %/Hz the power is increasing to 114.4 kW.

- Hold max. derating” (parameter ↳ 5785) = **On**

  The derating still remains at 26 kW the power remains at 104 kW. During an active derating process, the power will never increase again. The power can only increase again if the derating becomes inactive, that means that the measured frequency has reached F_{Stop}.

4.4.4.5.5 Photovoltaic (PV) load reduction regulated mode

General notes

The easY-I offers a function to reduce the power output of photovoltaic inverter (PV Inverter). This could be important in cases where Gensets running side by side with PV inverter. Mainly in island applications where the consumer load can be so low that a fixed PV power drives the Gensets into reverse power. But even in cases where a minimal generator load output is underrun over longer time it is beneficial to reduce the PV power. To maintain this, the easY-I offers a PV load reduction respectively a PV load setpoint to send to the PV inverter.

The PV load reference function contains a **monitor of generator reverse power**. It can be used e.g. to open the PV inverter breaker when the reverse power becomes critical. (Refer to ↳ “4.5.6.10 Monitoring PV load reference”).

Function

With knowing the system load the easY-I3000XT regulates the PV power so that a given generator load level is kept.

The PV regulation output is PID control loop based on:

- The generator real load [%]
- The configurable generator minimal load [%] ↳ 8914

To control the PV inverter, the easY-I3000XT calculates next:

- The AM variable 10.39 PV load ref. [%] (PV set-point value 0% - 100%, can be transferred to the PV inverter over an analog output)
- LM command variables (in applications using discrete load steps these LMs can be transferred to the PV inverter over several digital outputs):
  - 04.74 PV load ref. 0%
  - 04.75 PV load ref. 30%
  - 04.76 PV load ref. 60%
  - 04.77 PV load ref. 100%

In addition, the variable ”10.39 PV load ref. [%]“ (ID 9766) can be sent to the PV inverter via MODBUS TCP using the MODBUS MASTER (“6.5.5 Modbus master”)function of the easYgen3000XT. It is indicated also in ToolKit with a gauge.

The regulation output (analog or in steps) is treated as follows:

- If the Function is disabled (by parameter 8911), the output "10.39 PV load ref. [%]" is 0%.
- If the Function is enabled and LM ”Release PV regulation“ (parameter 8928) is FALSE, the output 10.39 PV load ref. [%] is 100% and 04.77 PV load ref. 100% is TRUE.
- If the Function is enabled and LM ”Release PV regulation“ (parameter 8928) is TRUE, the output 10.39 PV load ref. [%] shows the current PID value and the corresponding LM "PV load ref." is TRUE.

To provide a proper function the PV reduction must be tracked slowly. Reverse power of the generator must lead to an instant cut of the PV load.

Overview PV load reduction regulated mode

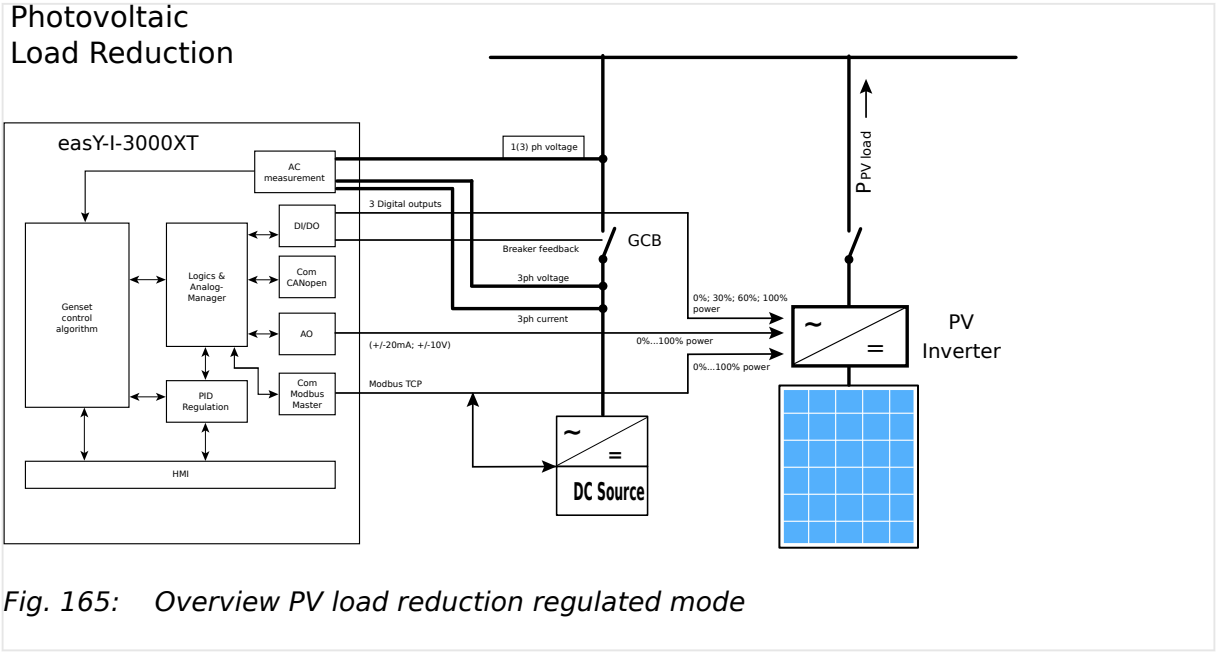


Fig. 165: Overview PV load reduction regulated mode

Released

Parameter

Navigate to [Parameter / Configuration / Configure application / Configure controller / Miscellaneous / PV load reference].

ID	Parameter	CL	Setting range [Default]	Description
8911	**PV load reference**	2	**[Off]**	The function is disabled. The output value remains 0%.
			Regulated	The PV load reference function is enabled. If LogicsManager 8928 is true too, the PV function with the minimum load setpoint configured by AnalogManager 8914 becomes active.
8928	**Release PV regulation**	2	Determined by LogicsManager 87.80 **[(0 & 1) & 1]**	If this LogicsManager condition is TRUE and 8911 is ”Regulated“, the PV regulation becomes active. If this LogicsManager condition is FALSE and 8911 is ”Regulated“, the regulation output 10.39 PV load ref. [%] goes on 100% and the load step "04.77 PV load ref. 100%" goes TRUE.
8917	**Proportional gain**	2	0.01 to 50.00 **[5.00]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band.
				Notes If the gain is configured too high, the result is excessive overshoot/ undershoot of the desired value.
8918	**Integral gain**	2	0.01 to 10.00 **[1.00]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the setpoint are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset.
				Notes The integral gain constant must be greater than the derivative time constant. If the integral gain

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				constant is too large, the inverter will continually oscillate. If the integral gain steady is too small, the inverter will take too long to settle at a steady state.
8919	**Derivative ratio**	2	0.01 to 10.00 **[1.00]**	The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.
8920	**Sampling time**	2	0.1 to 99.0 s **[0.5 s]**	This is the time between two consecutive samples.
8916	**Deadband**	2	0.0 to 10.0% **[2.0%]**	The dead band function can be taken to minimize the interaction between genset control and PV inverter when a tolerance window is matched.
8930	**Setpoint ramp**	1	0.1 to 10.0%/s **[1.0%/s]**	This is the setpoint ramp for the actual generator minimal load if the regulation is enabled.
8921	**Delay load increase step**	1	0.1 to 999.0 s **[10.0 s]**	In applications using discrete load steps the next increasing step can be delayed here.
8922	**Delay load decrease step**	1	0.1 to 999.0 s **[5.0 s]**	In applications using discrete load steps the next decreasing step can be delayed here.
8912	**PV Int.setpoint gen.min.load**	1	1.0 to 100.0% **[30.0%]**	This is the generator load level which shall be preferably not underrun by PV power. The value configured here is available as analog variable ”15.01 Int.SP gen.load [%]“.
8914	**AM PV SP gen.min.load**	2	Determined by AnalogManager 81.34: **[A1 = 15.01 Int.SP gen.load [%]]**	With this AnalogManager the generator setpoint minimal load can be dynamically determined.

4.4.4.6 PID {x} Control

General notes

The easY-I provides three additional freely configurable PID controllers. These controllers are intended and optimized for slow processes, like temperature control for heating

Released

systems (CHPO applications). The controller can either operate as a PID analog controller or a three-position controller.

ID	Parameter	CL	Setting range [Default]	Description
16338 16339 16348	**Description**	2	user-defined **[PID controller {x}]**	This text will be displayed on the Setpoints screens. The text may have 1 through 16 characters.
				Notes This parameter may only be configured using ToolKit.
5571 5584 5670	**PID1 control**	2	On	The PID controller is enabled.
			[Off]	No control is carried out.
5580 5593 5679	**PID1 ctrl.release**	2	PID{x} Determined by LogicsManager 87.17, 87.18, 87.19 **[(0 & 1) & 1]** = 11406/11407/11408	If this LogicsManager condition is TRUE, the PID {x} controller will be released.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
5572 5585 5671	**Proportional gain**	2	0.001 to 65.000 **[1.000]**	The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.
5573 5586 5672	**Integral gain**	2	0.010 to 10.000 **[0.100]**	The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. The integral gain automatically changes the output signal until the process variable and the setpoint are the same. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the controlled value will

Released

ID	Parameter	CL	Setting range [Default]	Description
				continually oscillate. If the integral gain constant is too small, the controlled value will take too long to settle at a steady state.
5574 5587 5673	**Derivative ratio**	2	0.001 to 10.000 **[0.001]**	The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process.
5575 5588 5674	**Time pulse minimum**	1	0.01 to 2.00 s **[0.05 s]**	A minimum pulse on time must be configured here. The shortest possible pulse time should be configured, but the actuator should still react safe, to limit overshoot of the desired value reference point. (Only three-position controller)
5576 5589 5675	**Deadband**	1	0 to 32000 **[10]**	Shows the adjust range around the setpoint value when no displace impulse is issued. This avoids an unnecessary abrasion of relay contacts for higher/lower. (Only three-position controller)
5578 5591 5677	**AM PID1 actual value**	2	Determined by AnalogManager 81.14, 81.16, 81.18: **[A1 = 10.01 ZERO]**	The PID {x} control actual value may be selected from the available analog data sources. It is possible to select all data sources (“9.5.2 Data Sources AM”).
5577 5590 5676	**AM PID1 setpoint**	2	Determined by AnalogManager 81.13, 81.15, 81.17: **[A1 = 05.75/76/77 Internal PID{x} setpoint]**	The PID {x} control setpoint source may be selected from the available analog data sources. It is possible to select all data sources (“9.5.2 Data Sources AM”).
5579 5592 5678	**Int. PID1 control setpoint**	1	-32000 to 32000 **[0]**	The internal setpoint is defined in this screen. This value is the reference for the PID {x} controller.
5581 5594 5680	**PID1 control initial state**	2	0 to 100% **[50%]**	The value entered for this parameter is the start reference point for the analog output to the controller as long as the LogicsManager is false. If the PID controller has been disabled (e.g. Parameter 5571), the bias output will change to 0 %.
5582 5595 5681	**Sampling time**	2	0.02 to 360 s **[1 s]**	The sampling time is configured here. This is the time between two consecutive samples. The sampling time shall be configured high enough that the actual value can react in case e.g. a temperature just shifts slowly.

Released

ID	Parameter	CL	Setting range [Default]	Description
5692 5693 5694	**Actuator run time**	2	0.1 to 999.0 s **[30.0 s]**	The actuator run time is configured here. This is the time the actuator needs to move from fully closed to fully open. This information is necessary because the controller does not receive a feedback of the actuator position and needs this value to calculate the desired actuator position.
5734 5735 5736	**PID1 control PI band**	1	0 to 32000 **[2000]**	The PI band is configured here to encounter excessive overshoot of the process value when starting up. The PI band defines the range around the setpoint, in which the I portion of the PID controller is active. If the actual value is outside of this band, the I portion is reduced to a minimum value. The PI band is not that important for three-position controllers and should be disabled by entering a high value (e.g. default value).
5737 5738 5739	**PID1 control setpoint ramp**	2	1 to 32000 **[10]**	The different setpoint values are supplied to the controller via this ramp to prevent an overshoot of the process value when enabling the controller. The slope of the ramp is used to alter the rate at which the controller modifies the setpoint value. The faster the change in the setpoint is to be carried out, the greater the value entered here must be.
7494 7495 7496	**Unit**	2	User-defined up to 6 characters text **[_ _ _ _ _ _]**	This parameter is assigning a unit text to the displayed analog value. **Notes** This parameter may only be configured using ToolKit. The max. number of characters is 39 but depends on numbers of Bytes for each character. The Bytes/character are defined by the font of the currently selected language. Up to six characters are best for display/HMI; more will override screen border/frame. Please verify the length on the display for best view!

Released

4.4.4.7 Discrete Raise/Low Function

General notes

In operation modes MANUAL, TEST and AUTOMATIK the frequency / load and voltage / reactive power setpoints may be raised and lowered using the LogicsManager functionality, i.e. it is possible to use LogicsManager command variables to raise and lower these setpoints. In this case the discrete raise/lower function always starts with the rated value (frequency / load and voltage / reactive power).

Most commonly a button may be used to energize a discrete input on the control, which is used again as a LogicsManager command variable to enable the respective LogicsManager function to change the setpoint.

For related information refer to ↳ “4.1.5.9 Setpoints generator”.

Frequency and voltage may be adjusted within the configured operating limits (↳ “4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar”). Active power may be adjusted between 0 and the configured load control setpoint maximum (parameter ↳ 5523). The power factor may be adjusted between 0.71 leading and 0.71 lagging.

ID	Parameter	CL	Setting range [Default]	Description
12900	**Discrete f/P +**	2	Determined by LogicsManager 86.21 **[(0 & 1) & 1]**	Once the conditions of the LogicsManager have been fulfilled, the frequency / load setpoint will be raised.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12901	**Discrete f/P -**	2	Determined by LogicsManager 86.22 **[(0 & 1) & 1]**	Once the conditions of the LogicsManager have been fulfilled, the frequency / load setpoint will be lowered.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12902	**Discrete V/PF +**	2	Determined by LogicsManager 86.23 **[(0 & 1) & 1]**	Once the conditions of the LogicsManager have been fulfilled, the voltage / reactive power setpoint will be raised.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12903	**Discrete V/PF -**	2	Determined by LogicsManager 86.24	Once the conditions of the LogicsManager have been fulfilled, the voltage / reactive power setpoint will be lowered.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[(0 & 1) & 1]	
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
5024	**Discr. ramp frequency +/-**	2	000.01 ... 100.00 %/s **[000.07 %/s]**	Configurable ramp rate for frequency setpoint raise and lower commands.
5025	**Discr. ramp voltage +/-**	2	000.01 ... 100.00 %/s **[000.70 %/s]**	Configurable ramp rate for voltage setpoint raise and lower commands.
5026	**Discr. ramp power +/-**	2	000.01 ... 100.00 %/s **[003.00 %/s]**	Configurable ramp rate for active power setpoint raise and lower commands.
5027	**Discr. ramp cos.phi +/-**	2	000.01 ... 100.00 %/s **[007.50 %/s]**	Configurable ramp rate for Power Factor (PF) setpoint raise and lower commands.

4.4.5 Configure Operation Modes

4.4.5.1 Operation Modes: General

Priority of operation modes

The priority of operation modes is well defined from highest to lowest priority:

- »STOP« is higher than
- »AUTOMATIC« is higher than
- »MANUAL« is higher than
- »TEST«

ID	Parameter	CL	Setting range [Default]	Description
1795	**Startup in mode** (Operating mode after applying the power supply)	2		If the controller is powered down, the unit will start in the following configured mode when it is powered up again.
			[STOP]	The unit starts in the STOP operating mode.
			AUTO	The unit starts in the AUTOMATIC operating mode.
			MAN	The unit starts in the MANUAL operating mode.

ID	Parameter	CL	Setting range [Default]	Description
			LLast	The unit starts in the last operating mode the control was in prior to being de-energized.
			TEST	The unit starts in the TEST operating mode.
				Notes For the selection of the operating mode via the LogicsManager (if two different operating modes have been selected simultaneously) the control unit will prioritize the modes as follows: • 1. STOP • 2. AUTOMATIC • 3. MANUAL • 4. TEST
12510	**Operat. mode AUTO** (Activate operating mode AUTOMATIC)	2	**WARNING!**	In Operation mode AUTO (intentionally): • the STOP button on front panel is without function and • the soft buttons for operation mode selection are not displayed.
				Notes If both Operation mode AUTO and 12120 Start req in AUTO are active the generator will start automatically with acknowledgment of the latest failure.
			Determined by LogicsManager 86.16 **[(0 & 1) & 1]** = 10715	Once the conditions of the LogicsManager have been fulfilled the unit will change into operating mode AUTOMATIC.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12520	**Operat. mode MAN** (Activate operating mode MANUAL)	2	Determined by LogicsManager 86.17 **[(0 & 1) & 1]** = 10716	Once the conditions of the LogicsManager have been fulfilled the unit will change into operating mode MANUAL. If MANUAL mode is selected via the LogicsManager it is not possible to change operating modes via the front panel.
				Notes For information on the LogicsManager and its default

Released

ID	Parameter	CL	Setting range [Default]	Description
				settings see “9.4.1 LogicsManager Overview”.
12530	**Operat. mode STOP** (Activate operating mode STOP)	2	Determined by LogicsManager 86.18 **[(0 & 1) & 1]** = 10717	Once the conditions of the LogicsManager have been fulfilled the unit will change into operating mode STOP. If STOP mode is selected via the LogicsManager it is not possible to change operating modes via the front panel. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12271	**Operat. mode TEST** (Activate operating mode TEST)	2	Determined by LogicsManager 86.29 **[(0 & 1) & 1]** = 12272	Once the conditions of the LogicsManager have been fulfilled the unit will change into operating mode TEST. If TEST mode is selected via the LogicsManager it is not possible to change operating modes via the front panel. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.

4.4.5.2 Operation Mode AUTO - Automatic Run

General notes

The start of the inverter can be performed via the following different logical conditions:

- A discrete input
- A temperature level
- An interface start condition
- A start request from the LDSS function
- A timer
- Any logical combination

If this logical output becomes TRUE in AUTOMATIC operating mode, the easY-I changes to the state "Inverter prepared". If 85.02 LM: start inverter is TRUE the inverter starts and the GCB will be closed if voltage and frequency is in range. The simultaneous activation of other LogicsManager outputs (e.g. Stop req. in Auto) may affect this function.

The breaker handling depends on the configured application mode and breaker logic.

Refer to Fig. 166 and "9.4.4 Logical Outputs" for the priority of the logical outputs in case that more than one logical output is TRUE.

Inverter conditions for for state "Inverter prepared"

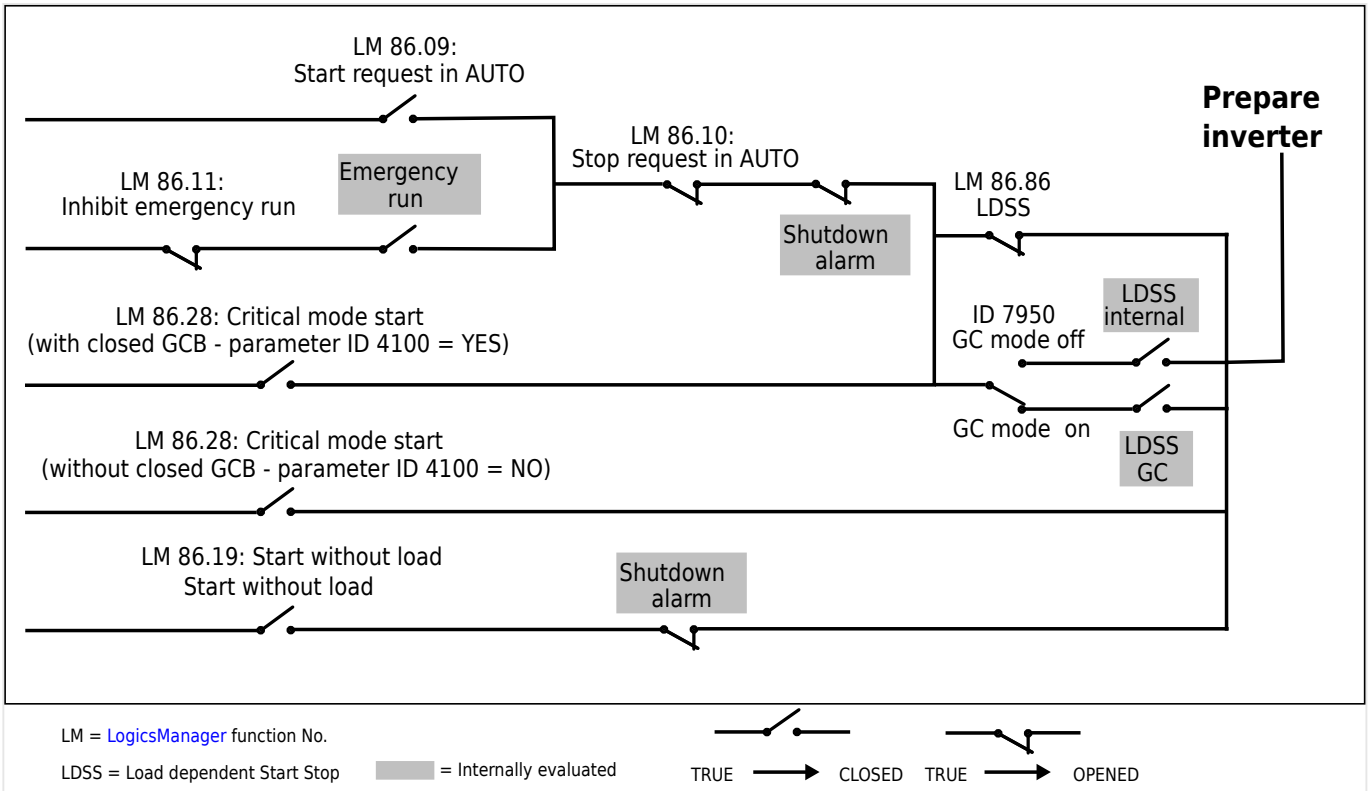


Fig. 166: Automatic run - inverter conditions for state "Inverter prepared" to start the inverter

ID	Parameter	CL	Setting range [Default]	Description
12120	**Start req. in AUTO** (Start request in operation mode AUTOMATIC)	2	Determined by LogicsManager 86.09 **[(09.02 Discrete input 2 OR 0) OR 04.13 Remote request]** = 10708	Once the conditions of the LogicsManager have been fulfilled, the control issues a start request in AUTOMATIC mode. **Notes** For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview". ≥1: math. "OR"
12190	**Stop req. in AUTO** (Stop request in operation mode AUTOMATIC)	2	Determined by LogicsManager 86.10 **[(0 & 1) & 1]** = 10709	If this logical output becomes TRUE, it inhibits all other start processes (e.g. Start req. in Auto, emergency power, etc.). Stopping of the inverter can be initiated externally via a discrete input or any logical combination. Once the conditions of the LogicsManager have been fulfilled,

Released

ID	Parameter	CL	Setting range [Default]	Description
				the control issues a stop request in AUTOMATIC mode. **Notes** It is possible to interrupt an already activated emergency run. For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12540	**Start w/o load** (Start without assuming load)	2	Determined by LogicsManager 86.19 **[(0 & 1) & 1]** = 10718	If this LogicsManager condition is TRUE switching from mains to inverter supply is prevented (the GCB close operation is blocked). This function may be used to perform a test operation. If an emergency power case occurs meanwhile, it is still possible to change to inverter operation. If this condition becomes TRUE in islanded operation, the GCB cannot be opened before the MCB has been closed. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.

4.4.5.3 Operation Mode TEST



Fig. 167: TEST button

Operation mode TEST gives the opportunity to test the genset. It can be activated via HMI button »TEST« or parameter 4672 »Test run mode«.


When the Test Run is time restricted:

- The remaining time is displayed on HMI.
- The device can change its operating mode after execution of the TEST mode.

In TEST mode the breakers are operated like in the application mode configured. The handling in the setpoint screen is be the same like in the AUTOMATIC mode.

Emergency run (AMF) and **sprinkler run** -- if configured -- both are fully supported.

Released



As in automatic mode some preconditions to start the inverter must be fullfilled in TEST mode too. Thus, the results of LogicsManagers Inv. ready for operation and Inv. start operation must be TRUE.

ID	Parameter	CL	Setting range [Default]	Description
4672	**TEST run mode**	2	**[No load w/o time]**	With enabling the operation mode TEST, the inverter starts automatically. The GCB remains open.
			OFF	It is not possible to enable the operation mode TEST.
			No load w. time	With enabling the operation mode TEST, the inverter starts automatically. The GCB remains open. After a configurable time (↳ 4679), the device switches to the operation mode configured with parameter ↳ 4680 »Operation mode after TEST«.
			Load w/o time	With enabling the operation mode TEST, the inverter starts automatically. The GCB will be closed according to the configured »Breaker transition mode« (↳ 3411). If mains parallel operation is configured, the current active and reactive power setpoint is controlled.
			Load with time	With enabling the operation mode TEST, the inverter starts automatically. The GCB will be closed according to the configured »Breaker transition mode« (↳ 3411). If mains parallel operation is configured, the current active and reactive power setpoint is controlled. After a configurable time (↳ 4679), the device switches to the operation mode configured with parameter ↳ 4680 »Operation mode after TEST«.
			Breaker access	With enabling the operation mode TEST, the inverter starts automatically. From there on the breakers can be operated manually according to the configured „Breaker transition mode“ (↳ 3411).
				Notes In breaker transition mode “parallel” the MCB open and close commands are not supported.

Released

ID	Parameter	CL	Setting range [Default]	Description
4679	**TEST mode time restriction**	2	**[60 s]** 0..9999 s	This is the time duration for the time restricted TEST mode.
4680	**Operation mode after TEST**	2		This is the operation mode, on which the genset control changes after the time restricted TEST run. After the TEST run ...
			[STOP]	... the genset control switches back to the STOP operation mode.
			Last	... the genset control switches back to the latest operation mode.
			MAN	... the genset control switches back to the MANUAL operation mode.
			AUTO	... the genset control switches back to the AUTOMATIC operation mode.

Control in TEST mode is application specific:

Breaker Transition Mode	Symbol	Available functionality in TEST mode
Parallel		• The MCB is not active • With the GCB button the load test can be started and interrupted • If the GCB trips the load test is interrupted
Interchange		• With the GCB button and the MCB button the load test can be started and interrupted • The load transfer is similar to the AUTOMATIC mode • If the GCB trips the load test is interrupted and the MCB will be closed if the condition matches: ◦ Release MCB ◦ Mains okay (similar to the closing in AUTOMATIC mode)
Closed Transit. / Open Transition		• With the GCB button and the MCB button the load test can be started and interrupted • If the GCB trips the load test is interrupted and the MCB will be closed if the condition matches: ◦ Release MCB ◦ Mains okay (similar to the closing in AUTOMATIC mode)
External		• The MCB button isn't active • With the GCB button the load test can be started and interrupted • Only the GCB open logic is active similar to AUTOMATIC mode

Released

Breaker Transition Mode	Symbol	Available functionality in TEST mode
		• If the GCB trips the load test is interrupted

4.4.5.4 Critical Mode

The critical mode may be used to operate a fire engine pump or any other critical operation which does not allow a shutdown of the inverter under any alarm conditions.

Alarm classes

When critical mode is enabled the alarm classes are reclassified as follows:

	Alarm classes					
Normal operation	A	B	C	D	E	F
Critical mode	A	B	B	B	B	B

Critical mode "On"

A critical mode will be initiated/started once the critical mode operation LogicsManager "↳ 12220" output becomes TRUE. The "Critical mode" message is displayed on the display screen and the logic variable "86.28 LM: Critical mode" becomes TRUE. If the unit is not already running, the controller changes to state "Inverter prepared" with this the inverter can be started. All shutdown alarms become warning messages (see above).

Critical mode "Off"

A critical mode will be interrupted/stopped once critical mode operation LogicsManager output becomes FALSE.



Refer to ↳ “9.4.4 Logical Outputs” for more information about the priorities of the logical outputs.

4.4.5.4.1 Critical Operation At Busbar

The fire engine pump mentioned before or other critical operation is connected to the busbar, i.e. it requires a closed GCB to be supplied by the inverter during critical operation.

Parameter ↳ 4100 (Close GCB in critical mode) should be configured to "Yes" and an external provision for load reduction should be provided. This ensures the pump operation of a sprinkler system.



Application and breaker transition mode remain as configured.

A mains parallel operation is possible.

Released

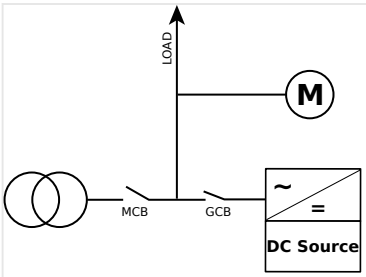


Fig. 168: Critical operation at busbar

The GCB will not be closed if the load is supplied by the mains until the mains fail and the MCB remains closed because emergency run (parameter 2802) is disabled.

Critical mode during mains supply

If critical mode is enabled during mains supply (MCB is closed), the controller changes to state "Inverter prepared" (if not already running) and the GCB will be closed.

- The "Critical mode" message is displayed on the display screen. All shutdown alarms become warning messages.
- If critical mode is disabled again, all shutdown alarms become active again.

If the inverter was not running before critical mode has been enabled, it will be stopped if critical mode is disabled.

Emergency power during critical mode

If there is a mains failure during critical mode, the "Emerg/Critical" message is displayed on the display screen after the mains fail delay time (parameter 2800) has expired.

All shutdown alarms become warning messages.

- Critical mode ends before mains recovery:
  - The emergency power operation will be continued and all shutdown alarms become active again.
  - If the mains returns, the unit transfers the load from inverter supply to mains supply after the mains settling delay expires.
- Emergency power operation ends before the end of the critical mode:
  - The critical mode is maintained and the load is transferred from inverter supply to mains supply after the mains settling delay expires.
  - If open transition mode is configured, the GCB will not be opened to prevent a dead busbar.
  - The inverter remains running until the conditions for the critical mode are no longer existent.
  - The GCB will take the same state as it had before the critical mode has been enabled.

Released

Critical mode during emergency power

An emergency power operation is active (load is supplied by the inverter, GCB is closed, MCB is open). If critical mode is enabled now, the GCB remains closed and the "Emerg/ Critical" message is displayed on the display screen. All shutdown alarms become warning messages.

- Critical mode ends before mains recovery:
  - The emergency power operation will be continued and all shutdown alarms become active again.
  - If the mains return, the unit transfers the load from inverter supply to mains supply after the mains settling delay expires, if Enable MCB (parameter 12923) has been enabled.
- Emergency power operation ends before the end of the critical mode:
  - The critical mode is maintained and the load is transferred from inverter supply to mains supply after the mains settling delay expires.
  - The inverter remains running until the conditions for the critical mode are no longer existent.
  - The GCB will take the same state as it had before the critical mode has been enabled.

Start request during critical mode

The critical mode operation has a higher priority than the remote request (Start/Stop request in AUTO). Therefore, the remote request cannot start or stop the inverter and has no effect on the breaker positions. The "Critical mode" message is displayed on the display screen and all shutdown alarms become warning alarms.

- Critical mode ends before the start request is terminated:
  - The inverter continues running. All shutdown alarms will become active again.
  - By resetting the start request the GCB will be opened and the inverter will be stopped.
- Start request will be terminated before the critical mode is terminated:
  - The critical mode operation is continued.
  - The inverter keeps running until the conditions for the critical mode are no longer fulfilled and all shutdown alarms will become active again.
  - The GCB will take the same state as it had before the critical mode has been enabled.

4.4.5.4.2 Critical Operation At The inverter

The fire engine pump mentioned before or other critical operation is connected to the inverter, i.e. it does not require a closed GCB to be supplied by the inverter during critical operation.

Parameter 4100 (Close GCB in critical mode) should be configured to "No". This ensures an open GCB during critical mode. A closed GCB is possible in case of an emergency operation.

Released

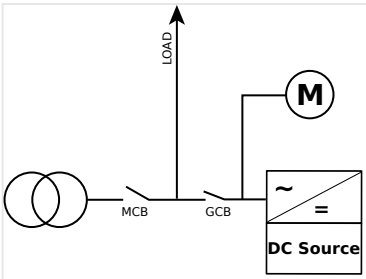


Fig. 169: Critical operation at the inverter

Critical mode during mains supply

If critical mode is enabled during mains supply (MCB is closed), the inverter will be started (if not already running) and operated with open GCB. The "Critical mode" message is displayed on the display screen. All shutdown alarms become warning messages.

If critical mode is disabled again, all shutdown alarms become active again. If the inverter was not running before critical mode has been enabled, it will be stopped.

Emergency power during critical mode

If there is a mains failure during critical mode, the MCB will be opened after the mains fail delay time (parameter 2800) has expired and the GCB will be closed. It is not necessary to configure parameter 4101 (Break emerg. in critical mode) because the critical operation is already supplied. The "Emerg/Critical" message is displayed on the display screen and all shutdown alarms become warning messages.

- Critical mode ends before mains recovery:
  - The emergency power operation will be continued and all shutdown alarms become active again.
  - If the mains returns, the unit transfers the load from inverter supply to mains supply after the mains settling delay expires.
- Emergency power operation ends before the end of the critical mode:
  - The critical mode is maintained and the load is transferred from inverter supply to mains supply after the mains settling delay expires.
  - The GCB will be opened without unloading (transition mode interchange or parallel).

Critical mode during emergency power

An emergency power operation is active (load is supplied by the inverter, GCB is closed, MCB is open). If critical mode is enabled now, the GCB will be opened dependent on the setting of the parameter 4101 (Break emerg. in critical mode) and a closure of the GCB is prevented for this time. The "Emerg/Critical" message is displayed on the display screen and all shutdown alarms become warning messages.

- Critical mode ends before mains recovery:
  - The emergency power operation will be continued and all shutdown alarms become active again.

- If the mains return, the unit transfers the load from inverter supply to mains supply after the mains settling delay expires.

- Emergency power operation ends before the end of the critical mode:
  - The critical mode is maintained and the load is transferred from inverter supply to mains supply after the mains settling delay expires.
  - The GCB will be opened without unloading (transition mode interchange or parallel).

Start request during critical mode

The critical mode operation has a higher priority than the remote request (Start/Stop request in AUTO). Therefore, the remote request cannot start or stop the inverter and has no effect on the breaker positions. The "Critical mode" message is displayed on the display screen and all shutdown alarms become warning alarms.

- Critical mode ends before the start request is terminated:
  - The inverter continues running and a change to inverter or parallel operation is performed.
  - All shutdown alarms will become active again.
- Start request will be terminated before the critical mode is terminated:
  - The critical mode operation is continued. The inverter keeps running until the conditions for the critical mode are no longer fulfilled.

Critical mode during start request

The inverter supplies the load and the GCB is closed. If critical mode is enabled, the MCB will be operated according to the configured transition mode (parameter 3411). The GCB will be opened without unloading (transition mode interchange or parallel). The "Critical mode" message is displayed on the display screen and all shutdown alarms become warning alarms.

- Critical mode ends before the start request is terminated:
  - The inverter continues running and a change to inverter or parallel operation is performed.
  - All shutdown alarms will become active again.
- Start request will be terminated before the critical mode is terminated:
  - The critical mode operation is continued.
  - The inverter keeps running until the conditions for the critical mode are no longer fulfilled.

Critical mode during islanded operation

The busbar is supplied by the inverter and emergency run (parameter 2802) is disabled. If the critical mode is enabled, the GCB will be opened although the MCB is not enabled. This will cause a dead busbar.

Released

4.4.5.4.3 Parameters

ID	Parameter	CL	Setting range [Default]	Description
12220	**Critical mode**	2	Determined by LogicsManager 86.28 **[(0 & !02.01 LM FALSE) & ! 09.01 Discrete input 1]** = 11607	If this logical output becomes TRUE in AUTOMATIC operating mode, it starts the critical mode.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
4100	**Close GCB in critical mode**	2	Yes	If a critical mode operation is detected the GCB will close.
			[No]	The GCB cannot be closed during a critical mode operation.
				Notes This parameter **only** applies to application mode A03 to A12.
4105	**Critical mode alarm class MAN** (Critical mode alarm classes active in MANUAL operating mode)	2	Yes	The critical mode alarm classes will override the normal operation alarm classes when in MANUAL operation mode so alarm classes become restricted to WARNING level - NO shut down. LogicsManager output ↳ 12220 becomes TRUE.
			[No]	The alarm classes will not be changed in the MANUAL operating mode, shut down is possible!

4.4.5.5 Load Dependent Start/Stop (LDSS)

General notes

Load-dependent start/stop may either be performed according to a system reserve power or the generator load depending on the configuration of the "Start stop mode" (parameter ↳ 5752).

Released

In the application mode "GCB/GC" A13 the LDSS algorithm is in the Group Controller. For this reason the functionality differs and in the easY-I only the following LDSS parameters are visible and valid in this mode: (Other configuration must be done in the Group Controller. Refer to GC manual.)

- LD start stop (parameter 12930)
- Base priority (parameter 5751)
- Minimum running time (parameter 5759)
- LDSS transtion time (parameter 5805)
- LDSS Priority 2 (parameter 12926)
- LDSS Priority 3 (parameter 12925)
- LDSS Priority 4 (parameter 12924)

Refer to "9.7.2 Load Dependent Start Stop (LDSS) Formulas" for all formulas related to the LDSS function.

4.4.5.5.1 Generator Load

If the "Start stop mode" (parameter 5752) is configured to »Generator load«, load-dependent start stop is performed in a way that the next genset will be started if all gensets in operation reach the maximum generator load (parameter 5762 or 5770 "IOP/MOP Max. generator load"), a configured percentage (e.g. 80%) of the rated power. In order to stop one generator, the load of all gensets in operation must fall below the minimum generator load (parameter 5763 or 5771 "IOP/MOP Min. generator load"), a configured percentage (e.g. 30%) of the rated power. There are different setpoints for islanded and mains parallel operation.

The LDSS algorithm acting on »Generator load« offers different dynamic levels:

- With higher dynamic the efficiency can be increased, but the change of generators becomes more frequent.
- With lower dynamic the efficiency can be lower for the first couple of engines, but overall the change of generators becomes less frequent.

Three levels of Dynamic

High:

- After removing of generator rated power the new generator load level shall not lay higher than 75% within the Add-on / Add-off band.

Moderate:

- After removing of generator rated power the new generator load level shall not lay over 50% within the Add-on / Add-off band.

Low:

- After removing of generator rated power the new generator load level shall not lay over 25% within the Add-on / Add-off band

Released

An additional dynamic parameter (parameter 5757 or 5758 "IOP/MOP Dynamic") with levels "Low", Moderate", and "Strong" prevents the gensets from being started and stopped continuously if only a few gensets are in operation.

This function provides an easy calculation for the start of the next genset.

- Refer to the description of the dynamic parameters for detailed information.

The following parameters need to configured for this operation:

Parameter ID	Parameter text	Note
5757	IOP Dynamic	only for islanded operation
5758	MOP Dynamic	only for mains parallel operation
5767	MOP Minimum load	only for mains parallel operation
5769	MOP Hysteresis	only for mains parallel operation
5770	MOP Max. generator load	only for mains parallel operation

Table 61: Load-dependent start/stop - parameters for generator load operation

Islanded operation (IOP)

If the configured maximum generator capacity utilization is exceeded, another genset will be added.

- $PGN_{real\ active} > P_{max.\ load\ islanded}$

If the configured minimum generator capacity utilization has been fallen below, a genset will be stopped depending on the dynamic setting (parameter 5757).

- $PGN_{real\ active} < P_{min.\ load\ islanded}$

Mains parallel operation (MOP)

If the required generator load setpoint for the control at the mains interchange point exceeds the MOP minimum load threshold (parameter 5767), the first genset will be added.

- $PMN_{setpoint} - PMN_{real} > PMOP_{minimum}$

If at least one genset is supplying the load in parallel with the mains and the total generator load exceeds the MOP maximum generator load threshold (parameter 5770), another genset will be added.

- $PGN_{real\ active} > P_{max.\ load\ parallel}$

If at least two gensets are supplying the load in parallel with the mains and the configured minimum generator capacity utilization has been fallen below, a genset will be stopped depending on the dynamic setting (parameter 5758)

- $PGN_{real\ active} < P_{min.\ load\ parallel}$

If one genset is supplying the load in parallel with the mains and the generator load exceeds the MOP minimum load threshold (parameter 5767) minus the hysteresis (parameter 5769), the genset will be stopped.

The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

- $PMN_{setpoint} - PMN_{real} + PGN_{real\ active} < PMOP_{minimum} - P_{hysteresis}$ MOP

4.4.5.5.2 System Reserve Power

If the "Start stop mode" (parameter 5752) is configured to "Reserve power", load-dependent start stop is performed in a way that a configured minimum reserve power is maintained in the system. This means that there is always enough reserve power for load swings on the busbar regardless of the generator load. The actual reserve power in the system is the total rated power of all gensets on the busbar minus the actual total generator real power.

This functionality provides high system reliability and is intended for applications that require a dedicated reserve power on the busbar, independent of the number of gensets on the busbar.

The following parameters need to configured for this operation:

Parameter ID	Parameter text	Note
5760	IOP Reserve power	only for islanded operation
5761	IOP Hysteresis	only for islanded operation
5767	MOP Minimum load	only for mains parallel operation
5768	MOP Reserve power	only for mains parallel operation
5769	MOP Hysteresis	only for mains parallel operation

Table 62: Load-dependent start/stop - parameters for reserve power operation

Note:

It is also possible to change the effective reserve power via interface. Refer to:

- “Remote LDSS IOP reserve power ”
- “Remote LDSS MOP reserve power ”

Islanded operation (IOP)

- $P_{Reserve} = P_{rated\ active} - P_{GN\ real\ active}$
- $P_{rated\ active} = P_{RatedGen[1]} + P_{RatedGen\ [2]} + \ldots + P_{RatedGen\ [n]}$

  (total rated power of all gensets on the busbar in the system)
- $P_{GN\ real\ active} = P_{ActualGen\ [1]} + P_{ActualGen\ [2]} + \ldots + P_{ActualGen\ [n]}$

  (total actual load of all gensets on the busbar in the system)

If the reserve power falls below the IOP Reserve power threshold (parameter 5760), another genset will be added.

- $P_{Reserve} < P_{Reserve\ IOP}$

Released

If the reserve power exceeds the IOP Reserve power threshold (parameter 5760) plus the hysteresis (parameter 5761) plus the rated load of the genset, the genset will be stopped.

The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

- $P_{reserve} > P_{reserve\ islanded\ IOP} + P_{hysteresis\ IOP} + P_{RatedGen}$

Mains parallel operation (MOP)

- $P_{reserve} = P_{rated\ active} - P_{GN\ real\ active}$
- $P_{rated\ active} = P_{RatedGen\ [1]} + P_{RatedGen\ [2]} + \ldots + P_{RatedGen\ [n]}$

  (total rated power of all gensets on the busbar in the system)
- $P_{GN\ real\ active} = P_{ActualGen\ [1]} + P_{ActualGen\ [2]} + \ldots + P_{ActualGen\ [n]}$

  (total actual load of all gensets on the busbar in the system)

If the required generator load setpoint for the control at the mains interchange point exceeds the MOP minimum load threshold (parameter 5767), the first genset will be added.

- $P_{MN\ setpoint} - P_{MN\ real} > P_{MOP\ minimum}$

If at least one genset is supplying the load in parallel with the mains and the reserve power falls below the reserve power threshold (parameter 5768), another genset will be added.

- $P_{reserve} < P_{reserve\ parallel}$

If at least two gensets are supplying the load in parallel with the mains and the reserve power exceeds the MOP Reserve power threshold (parameter 5768) plus the hysteresis (parameter 5769) plus the rated load of the genset, the genset will be stopped.

The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

- $P_{reserve} > P_{reserve\ parallel} + P_{hysteresis\ MOP} + P_{RatedGen}$

If one genset is supplying the load in parallel with the mains and the generator load exceeds the MOP minimum load threshold (parameter 5767) minus the hysteresis (parameter 5769), the genset will be stopped.

The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

- $P_{MN\ setpoint} - P_{MN\ real} + P_{GN\ real\ active} < P_{MOP\ minimum} - P_{hysteresis\ MOP}$

4.4.5.5.3 Generator Selection

General notes

If a genset is to be started, the genset with the highest priority configured will be started. If a genset is to be stopped, the genset with the lowest priority configured will be stopped.

Released

If all gensets have the same priority, the next genset is selected according to the size of engine, i.e. the genset combination, which allows an optimum efficiency will be used.

If all gensets have the same rated load or this parameter is disabled, the remaining hours until the next maintenance are considered. If these are also the same, the genset with the lowest generator number will be started first or stopped last.

Priority order:

- 1. Priority (parameter 5751)
- 2. Efficiency (size of engines) (parameter 5754)
- 3. Service hours (parameter 5755)
- 4. Generator (device) number (parameter 1702)

The load-dependent start/stop function requires the following conditions have been met:

- The control has been placed in AUTOMATIC operating mode
- A start request (Start req. in AUTO, Emergency run) is active
- All LDSS parameters are configured identically for all members at the load share line (“4.5.6.11 Multi-Unit Parameter Alignment”)
- The mains interchange load control (import/export power) has been enabled or the gensets are in islanded operation
- The conditions of the LogicsManager function "Load-dependent start/stop" have been fulfilled

ID	Parameter	CL	Setting range [Default]	Description
12930	**LD start stop** (Load-dependent start stop)	2	Determined by LogicsManager 86.86 **[(0 & 1) & 1]** = 11915	Once the conditions of the LogicsManager have been fulfilled, the load-dependent start/stop function is enabled. **Notes** For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
5752	**Start stop mode**	2	**[Reserve power]**	Load-dependent start stop is performed in a way that a configured minimum reserve power is maintained in the system. The reserve power is the total generator rated power minus the total actual generator power. If the reserve power falls below the threshold, another genset will be started. If the reserve power is sufficient to stop one genset without falling below the threshold, a genset will be stopped.
			Generator load	Load-dependent start stop is performed in a way that a configured maximum generator

Released

ID	Parameter	CL	Setting range [Default]	Description
				capacity utilization is not exceeded. If the generator capacity utilization exceeds this threshold, another genset will be started. If the generator capacity utilization is low enough to stop one genset without exceeding the threshold again, a genset will be stopped.
5753	**Dead busbar start mode**	2	**[All]**	All available gensets will be started in case of a dead busbar and remain connected to the busbar for the minimum running time (parameter 5759). Then the gensets will be stopped according to the configured LDSS procedure. The start delay is configured in parameter 2800 (Mains fail delay time).
			LDSS	The start of the gensets will be performed according to the configured LDSS priority in case of a dead busbar.
				Notes This function cannot be used as an emergency power function in mains parallel operations because it cannot control the MCB operation. If the MCB should be operated, the emergency run function (parameter 2802) must be enabled.
5751	**Base priority**	2	1 to 32 1 to 248 in GCB/GC A13 mode **[5]**	The priority of the genset in the load-dependent start/stop network is configured with this parameter (“4.4.5.5.3 Generator Selection”). The lower the number configured here, the higher the priority. This priority may be overridden by the LDSS Priority parameters (parameters 12924, 12925, and 12926).
5805	**LDSS transition time**	2	0 to 32000 s **[180 s]**	This parameter is only valid in GCB/GC A13 mode. If the the GC has removed the start command, the easY-I holds its start command for this time supposed its GCB is already closed.
12926	**LDSS Priority 2**	2	Determined by LogicsManager 86.90 **[(0 & 1) & 1]** = 111919	Once the conditions of the LogicsManager have been fulfilled, the load-dependent start/stop priority will be set to 2 (the highest priority is valid).
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12925	**LDSS Priority 3**	2	Determined by LogicsManager 86.91 **[(0 & 1) & 1]** = 11920	Once the conditions of the LogicsManager have been fulfilled, the load-dependent start/stop priority will be set to 3 (the highest priority is valid).
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
12924	**LDSS Priority 4**	2	Determined by LogicsManager 86.92 **[(0 & 1) & 1]** = 11921	Once the conditions of the LogicsManager have been fulfilled, the load-dependent start/stop priority will be set to 4 (the highest priority is valid).
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
5754	**Fit size of engine**	2		This parameter defines whether the start/stop priority order (↳ “4.4.5.5.3 Generator Selection”) considers the size of the engine (generator rated power) or not. In case of different sized gensets, the control can start a genset combination which results in optimum efficiency. The fuel efficiency may be optimized when this parameter is enabled. This parameter may be disabled if all generators have the same size.
				Notes The algorithm prefers one large engine instead of multiple small engines, even if this does not match the best possible efficiency. If an engine selection yields a condition, in which multiple small engines with its rated power cover exactly the rated power of an possible bigger engine, the bigger engine is preferred
			Yes	The priority order considers the engine size for the start of the next engine for gensets with the same priority.
			[No]	The priority order does not consider the rated power of the

Released

ID	Parameter	CL	Setting range [Default]	Description
				engines to fit the best size of engines.
5755	**Fit service hours**	2		With this parameter the LDSS function can be configured to start and stop redundant engines according to their engine running hours with different methods.
			[Off]	The engine running hours are not considered when evaluating the engines to be started for gensets with same priority. The parameter 5756 »Changes of engines« has no influence and can be ignored.
			Staggered	The remaining *hours until the next service is required* are considered when evaluating the engines to be started for gensets with same priority. The gensets are utilized in a way that the maintenance may be performed at different times to ensure that not all gensets have a downtime due to a maintenance at the same time. The genset with the lowest hours until the next service will be started first.
				Notes To run this functionality properly the maintenance call must be acknowledged accordingly.
			Equal	The remaining *hours until the next service is required* are considered when evaluating the engines to be started for gensets with same priority. The gensets are utilized in a way that the maintenance may be performed at the same time for all gensets. The genset with the highest hours until the next service will be started first.
				Notes To run this functionality properly the maintenance call must be acknowledged accordingly.
			Period of use	The »period of use hours« (value of ID 2580) are considered when evaluating the engines to be started for gensets with same priority. The gensets are utilized in a way that the period of use hours are equalized over time for all participating gensets. The genset with the lowest period of use hours will be started first.
5756	**Changes of engines**	2		Load dependent start stop: Changes of engine With setting "Off" no time slot is considered and the change of engine is related directly on the passed engine hours. With a

Released

ID	Parameter	CL	Setting range [Default]	Description
				configured time slot (32/64/128 h) a minimum of passed engine running hours is taken into account before changing the gensets. If LDSS is configured to act on best possible equal maintenance hours or "period of use" hours, the change of engines can be determined by given time slots. The LDSS therefore creates an individual unit’s time group for each engine. Refer to manual chapter »Engine time groups« for more details.
				Notes If the LDSS function »Fit service hours« (parameter 5755) is enabled with "Equal" or "Period of use" hours, this configuration gets valid. Otherwise this parameter can be ignored.
			[Off]	No engine change will be performed. The engines are selected according to the setting of parameter 5755 (Fit service hours) with 1 hour spacing in case of load changes.
			All 32h All 64h All 128h	All relevant engines are changed with a 32/64/128 hour spacing. **Example 1** • "Changes of engines" is configured to "All 64h" • Generator 1 has 262 maintenance hours remaining • Generator 2 has 298 maintenance hours remaining • The time group for generator 1 is calculated as: 262h/64h = 4.09 = Time group 4 • The time group for generator 2 is calculated as: 298h/64h = 4.66 = Time group 4 • Both generators are in time group 4. Time group 4 consists of any generator that the time group calculation total ranges from 4.00 through 4.99. In this instance the assigned generator number is used to determine which generator is brought online. Generator 1 will be started. **Example 2**

Released

ID	Parameter	CL	Setting range [Default]	Description
				• "Changes of engines" is configured to "All 64h" • Generator 1 has 262 maintenance hours remaining • Generator 2 has 345 maintenance hours remaining • Generator 3 has 298 maintenance hours remaining • The time group for generator 1 is calculated as: 262h/64h = 4.09 = Time group 4 • The time group for generator 2 is calculated as: 345h/64h = 5.39 = Time group 5 • The time group for generator 3 is calculated as: 298h/64h = 4.66 = Time group 4 • Generators 1 and 3 are in time group 4. • Time group 4 consists of any generator that the time group calculation total ranges from 4.00 through 4.99. • Generator 2 is in time group 5. • Time group 5 consists of any generator that the time group calculation total ranges from 5.00 through 5.99. In this instance the largest time group will determine which generator is brought online. Generator 2 will be started because it is in time group 5.
5777	**LDSS sort priority always**	2	On	The priority is considered in each moment. The priority will be changed depending on priority input and running hours even with constant load.
				Notes This parameter is only effective if »Start stop mode« (parameter 5752) is configured to »Reserve power«. This feature can cause more start and stop sequences, even there is only one additional generator brought into the LDSS system.
			[Off]	The priority is depending on priority input and running hours but only considered, if the nominal power in the system changes. The nominal power changes when

Released

ID	Parameter	CL	Setting range [Default]	Description
				another generator is to stop or to start anyway. **Notes** This setting causes less generator changes and brings more calmness in the system.
5759	**Minimum running time**	2	0 to 32000 s **[180 s]**	If a genset has been started by the LDSS function, it continues to operate at least for this time even if it would have been stopped before. This timer is started with the closure of the GCB. If an emergency run is active (“4.4.6 Emergency Run”) and the mains return, this timer will be overridden and the load is transferred back to the mains after the mains settling time (parameter 2801) has expired.

4.4.5.5.4 Islanded Parallel Operation (IOP)

General notes

In case of an islanded parallel operation (MCB open), the first genset will be connected to the de-energized busbar.



At least one genset must be in operation in islanded operation.

There are dedicated LDSS parameters for islanded parallel operation because the supply of the load is important here.

ID	Parameter	CL	Setting range [Default]	Description
5760	**IOP Reserve power**	2	1 to 999999 kW **[100 kW]**	The value configured for the reserve power determines when an additional generator will be started. The reserve power is the desired spinning reserve of a generator or generators. The reserve power is usually estimated as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. The available generator power is calculated by adding up the generator real power ratings of all generators with closed GCBs. The

Released

ID	Parameter	CL	Setting range [Default]	Description
				reserve generator power is calculated by subtracting the power currently being produced by all generators with closed GCBs from the total available generator power. If the actual reserve power of the generators is less than the value configured in this parameter, the next generator will be started.
				Currently available total generator rated real power
			–	Currently available total generator actual real power
			=	Reserve power
				Notes This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power". It is also possible to change the effective reserve power via interface (refer to “Remote LDSS IOP reserve power ”).
5648	**IOP Reserve power 2**	2	1 to 999999 kW **[200 kW]**	The value configured for the reserve power determines when an additional generator will be started. The reserve power is the desired spinning reserve of a generator or generators. The reserve power is usually estimated as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. The available generator power is calculated by adding up the generator real power ratings of all generators with closed GCBs. The reserve generator power is calculated by subtracting the power currently being produced by all generators with closed GCBs from the total available generator power. If the actual reserve power of the generators is less than the value configured in this parameter, the next generator will be started.
				Currently available total generator rated real power
			–	Currently available total generator actual real power
			=	Reserve power
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".
12604	**IOP Reserve power 2**	2	Determined by LogicsManager 86.41 **[(0 & 1) & 1]** = 11975	Once the conditions of the LogicsManager have been fulfilled, the 'IOP Reseve power 2' (parameter 5648) is used instead of the 'IOP Reserve power' (parameter 5760). **Notes** For information on the LogicsManager and its default settings see "9.4.1 LogicsManager Overview".
5761	**IOP Hysteresis**	2	1 to 65000 kW **[20 kW]**	If the reserve power is sufficient to stop one genset without falling below the threshold and the hysteresis configured here, a genset will be stopped. **Notes** This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".
5762	**IOP Max. generator load**	2	0 to 100% **[70%]**	If the generator load exceeds the threshold configured here, the load-dependent start/stop function will start another genset. **Notes** This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load". The maximum generator load must be configured higher then the minimum generator load for proper operation.
5763	**IOP Min. generator load**	2	0 to 100% **[30%]**	If the generator load falls below the threshold configured here, the load-dependent start/stop function will stop a genset. If only a few gensets are operating in a multi-genset application, the IOP Dynamic (parameter 5757) will also be considered when stopping a genset. **Notes** This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load". The maximum generator load must be configured higher then

Released

ID	Parameter	CL	Setting range [Default]	Description
				the minimum generator load for proper operation.
5757	**IOP Dynamic**	2		The dynamic determines when to start or stop the next genset and shows the following behavior: **Starting genset** The control requests a certain amount of additional load depending on the dynamic. It may start two or more gensets to supply the required load. Also refer to the following example. **Stopping genset** The dynamic determines how soon a genset will be stopped. It prevents continuous start and stop if only a few gensets are in operation. In this case, the remaining gensets would not reach the maximum limit if one genset stops (if, for example, two gensets with 100 kW rated load, a minimum load of 40 % and a maximum load of 70 % are operated, the second genset will be shut down if both reach 40 kW and the remaining engine would operate with 80 kW and request the next engine and so on). The more gensets are running, the less the influence of this parameter. Also refer to the following example.
			[Low]	**Starting genset** A larger genset is requested and it will take longer until the next change is required. The engines are operated with more reserve power. The requested load is calculated so that the gensets will be loaded with 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started. **Stopping genset** The genset will shut down at a lower limit and be operated longer. The number of gensets in operation will remain constant for a wider range of load. The load on the remaining gensets must not exceed 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
			Moderate	**Starting genset** A medium genset is requested. The requested load is calaculated

Released

ID	Parameter	CL	Setting range [Default]	Description
				so that the gensets will be loaded with 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started. **Stopping genset** The load on the remaining gensets must not exceed 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
			Strong	**Starting genset** A smaller genset is requested to operate the engines with higher efficiency. This may lead to more frequent starts and stops. The requested load is calaculated so that the gensets will be loaded with 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started. **Stopping genset** The genset will be shut down earlier. This may lead to more frequent starts and stops. The load on the remaining gensets must not exceed 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
				Notes This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".
				Example (Starting genset) A plant made up of several gensets with a rated power of 50, 100, and 200 kW is configured to a maximum generator load of 70 % and a minimum generator load of 40 %. One genset with 200 kW is running and the actual load reaches 140 kW. This is the 70 % maximum load limit of the running genset and requires the start of the next genset. • Low: a total generator rated power of 294.7 kW is requested and a 100 kW genset will be started. • Moderate: a total generator rated power of 254.5 kW is

Released

ID	Parameter	CL	Setting range [Default]	Description
				requested and a 100 kW genset will be started. • High: a total generator rated power of 224.0 kW is requested and a 50 kW genset will be started. Refer to ↳ “9.7.2 Load Dependent Start Stop (LDSS) Formulas” for details about the formulas used for calculation.
				Example (Stopping genset) Two gensets with the same rated power are configured to a maximum generator load of 70 % and a minimum generator load of 40 %. The following example shows the load level before stopping the second genset and the resulting load level for the first genset depending on the dynamic setting. • Low: Load level before stopping: 23.75% Resulting load level for remaining engine: 47.5% (25% of the difference between 70 and 40%) • Moderate: Load level before stopping: 27.5% Resulting load level for remaining engine: 55% (50% of the difference between 70 and 40%) • High: Load level before stopping: 31.25% Resulting load level for remaining engine: 62.5% (75% of the difference between 70 and 40%)
5764	**IOP Add on delay**	2	0 to 32000 s **[10 s]**	Load swings may exceed the threshold momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The LDSS criterion for adding load must be exceeded without interruption for this delay time,

Released

ID	Parameter	CL	Setting range [Default]	Description
				configured in seconds, prior to a start command being issued. If the LDSS criterion for adding load is fallen below before the delay time expires, the delay time is reset and a start command is not issued.
5765	**IOP Add on delay at rated load**	2	0 to 32000 s **[3 s]**	The command to start the next genset in case a genset exceeds rated load will be issued after the delay configured here has expired. **Notes** This parameter becomes only effective in case a genset exceeds rated load to achieve a faster start and overrides parameter 5764.
5766	**IOP Add off delay**	2	0 to 32000 s **[60 s]**	Load swings may fall below the threshold momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis setpoint without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis setpoint before the delay time expires, the delay time is reset and a stop command is not issued.

4.4.5.5.5 Mains Parallel Operation

General notes

In case of a mains parallel operation (MCB closed), load-dependent start stop is only enabled, if the gensets participates in load sharing at the interchange point (all participating gensets must be configured to the same setpoint).



A minimum load threshold must be exceeded to start the first genset, i.e. a genset will only be started if a minimum load would be demanded from the generator.

There are dedicated LDSS parameters for mains parallel operation.

ID	Parameter	CL	Setting range [Default]	Description
5767	**MOP Minimum load**	2	0 to 65000 kW **[10 kW]**	For the mains interchange (import/export) real power control to function, a minimum generator

Released

ID	Parameter	CL	Setting range [Default]	Description
				power setpoint value is required to start the first genset. In many cases, it is desirable that the engine is prevented from starting unless the generator will operate at a specific kW level or higher to ensure a reasonable degree of efficiency. **Example** The mains interchange must reach a level that will permit an 80 kW generator to operate at a minimum load of 40 kW prior to the engine starting.
5769	**MOP Hysteresis**	2	0 to 65000 kW **[10 kW]**	Start stop mode configured to "Reserve power": If the reserve power is sufficient to stop one genset without falling below the reserve power threshold and the hysteresis configured here, a genset will be stopped. If the generator load falls below the minimum load threshold minus the hysteresis configured here, the last genset will be stopped. **Notes** The importance of this parameter depends on the setting of the start stop mode (parameter 5752). It is also possible to change the effective reserve power via interface (refer to "Remote LDSS MOP reserve power ").
5768	**MOP Reserve power**	2	0 to 999999 kW **[50 kW]**	The minimum reserve power in mains parallel operation is configured here. This is the maximum expected load swing on the busbar, which shall be supported by the gensets. If the reserve power falls below this value, the load-dependent start/stop function will start another genset. **Notes** This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".
5649	**MOP Reserve power 2**	2	0 to 999999 kW **[100 kW]**	The minimum reserve power in mains parallel operation is configured here. This is the maximum expected load swing on

Released

ID	Parameter	CL	Setting range [Default]	Description
				the busbar, which shall be supported by the gensets. If the reserve power falls below this value, the load-dependent start/stop function will start another genset.
				Notes This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".
12605	**MOP Reserve power 2**	2	Determined by LogicsManager 86.42 **[(0 & 1) & 1]** = 11976	Once the conditions of the LogicsManager have been fulfilled, the 'MOP Reseve power 2' (parameter 5649) is used instead of the 'MOP Reserve power' (parameter 5768).
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
5770	**MOP Max. generator load**	2	0 to 100% **[70%]**	If the generator load exceeds the threshold configured here, the load-dependent start/stop function will start another genset.
				Notes This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load". The maximum generator load must be configured higher then the minimum generator load for proper operation.
5771	**MOP Min. generator load**	2	0 to 100% **[30%]**	If the generator load falls below the threshold configured here, the load-dependent start/stop function will stop a genset. If only a few gensets are operating in a multi-genset application, the MOP Dynamic (parameter 5758) will also be considered when stopping a genset.
				Notes This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load". The maximum generator load must be configured higher then the minimum generator load for proper operation.

Released

ID	Parameter	CL	Setting range [Default]	Description
5758	**MOP Dynamic**	2		The dynamic determines when to start or stop the next genset and shows the following behavior: **Starting genset** The Dynamic is only considered for the start sequence if "Fit size of engines" is enabled (refer to parameter 5754). The control requests a certain amount of additional load depending on the dynamic. It may start two or more gensets to supply the required load. **Stopping genset** The dynamic determines how soon a genset will be stopped. It prevents continuous start and stop if only a few gensets are in operation. In this case, the remaining gensets would not reach the maximum limit if one genset stops (if, for example, two gensets with 100 kW rated load, a minimum load of 40 % and a maximum load of 70 % are operated, the second genset will be shut down if both reach 40 kW and the remaining engine would operate with 80 kW and request the next engine and so on). The more gensets are running, the less the influence of this parameter. Also refer to the following example.
			[Low]	**Starting genset** A larger genset is requested and it will take longer until the next change is required. The engines are operated with more reserve power. The requested load is calaculated so that the gensets will be loaded with 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started. **Stopping genset** The genset will shut down at a lower limit and be operated longer. The number of gensets in operation will remain constant for a wider range of load. The load on the remaining gensets must not exceed 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763).

Released

ID	Parameter	CL	Setting range [Default]	Description
			Moderate	**Starting genset** A medium genset is requested. The requested load is calaculated so that the gensets will be loaded with 50 % of the range between minimum and maximum generator load (parameters ↳ 5762 & ↳ 5763) after the new genset has been started. **Stopping genset** The load on the remaining gensets must not exceed 50 % of the range between minimum and maximum generator load (parameters ↳ 5762 & ↳ 5763).
			High	**Starting genset** A smaller genset is requested to operate the engines with higher efficiency. This may lead to more frequent starts and stops. The requested load is calaculated so that the gensets will be loaded with 75 % of the range between minimum and maximum generator load (parameters ↳ 5762 & ↳ 5763) after the new genset has been started. **Stopping genset** The genset will be shut down earlier. This may lead to more frequent starts and stops. The load on the remaining gensets must not exceed 75 % of the range between minimum and maximum generator load (parameters ↳ 5762 & ↳ 5763).
				Notes This parameter is only effective if start stop mode (parameter ↳ 5752) is configured to "Generator load". Refer to parameter ↳ 5757 for examples on stating and stopping a genset depending on the dynamic setting.
5772	**MOP Add on delay**	2	0 to 32000 s **[20 s]**	Load swings may exceed the threshold momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The LDSS criterion for adding load must be exceeded without interruption for this delay time, configured in seconds, prior to a start command being issued.

Released

ID	Parameter	CL	Setting range [Default]	Description
				If the LDSS criterion for adding load is fallen below before the delay time expires, the delay time is reset and a start command is not issued.
5773	**MOP Add on delay at rated load**	2	0 to 32000 s **[3 s]**	The command to start the next genset in case a genset exceeds rated load will be issued after the delay configured here has expired. This parameter becomes only effective in case a genset exceeds rated load to achieve a faster start and overrides parameter 5772.
				Notes This parameter becomes only effective in case a genset exceeds rated load to achieve a faster start and overrides parameter 5764.
5774	**MOP Add off delay**	2	0 to 32000 s **[60 s]**	Load swings may fall below the threshold momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis setpoint without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis setpoint before the delay time expires, the delay time is reset and a stop command is not issued.

4.4.5.5.6 LDSS with predicted load

For further information, please refer to application examples to “6.3.11 LDSS with predicted load”.

In the application mode "GCB/GC" A13 the LDSS with predicted load is not available.

Introduction

In case of a mains failure, the usual LDSS function of the easY-I starts either one or all generators. This is done so because during the mains failure the consumer load information is lost. The LDSS with predicted load (LDSS PL) can start the correct amount of generators based on the last mains power measurements (5-minutes average value).

The LDSS PL takes the 5-minutes average value as mains load into account and passes it to the LDSS function as consumer load. The LDSS function can thereby start the correct

amount of gensets according to that predicted load. A prerequisite for this function is the availability of a group breaker (GGB) in the application. The GGB allows to switch the correct amount of generators onto the load.

- The LDSS PL differentiates two source modes as base for the predicted consumer load calculation:
  - 1. Internal source mode: The mains power and breaker handling is provided by the easY-IXT.
  - 2. External source mode: The mains power, the MCB and GGB control is provided by an external device (e.g. ATS), connected via CANopen with easY-I.

General

To the time the engines are not started and the mains is feeding the load the LDSS PL calculates a mains load with a 5-minute average value. This load value is passed to the LDSS function as consumer load. So the LDSS can determine the correct amount of engines which must be started if a start command becomes active. See ↳ “General”: Switches are in “Pos.1” and “Pos. A”.

In the moment the start request becomes active the average load calculation is frozen. See ↳ “General”: switches are in “Pos.2” and “Pos. A”.

If all requested engines are successful started and have closed their GCBs the LDSS PL gives the release for closing the GGB. From this time on the 5-minute average load calculation will be fed with the easY-I calculated generator load. See ↳ “General”: switches are in “Pos.3”; “Pos. B”

The LDSS function now does not differ anymore to the original function. There will be started and stopped the correct generators according to the common LDSS parameters.

The External and Internal Source Mode

There is an **"External"** and an **"Internal"** mode available (configurable by parameter 9066 "Predicted load source"):

The external source mode is dedicated for external installed ATS controls which measure the mains power. The system allows up to 5 ATS controls at the Interchange point.

In this mode, external ATS controls send information via CANopen RPDO messages. The easY-I provides information going to the ATS control.

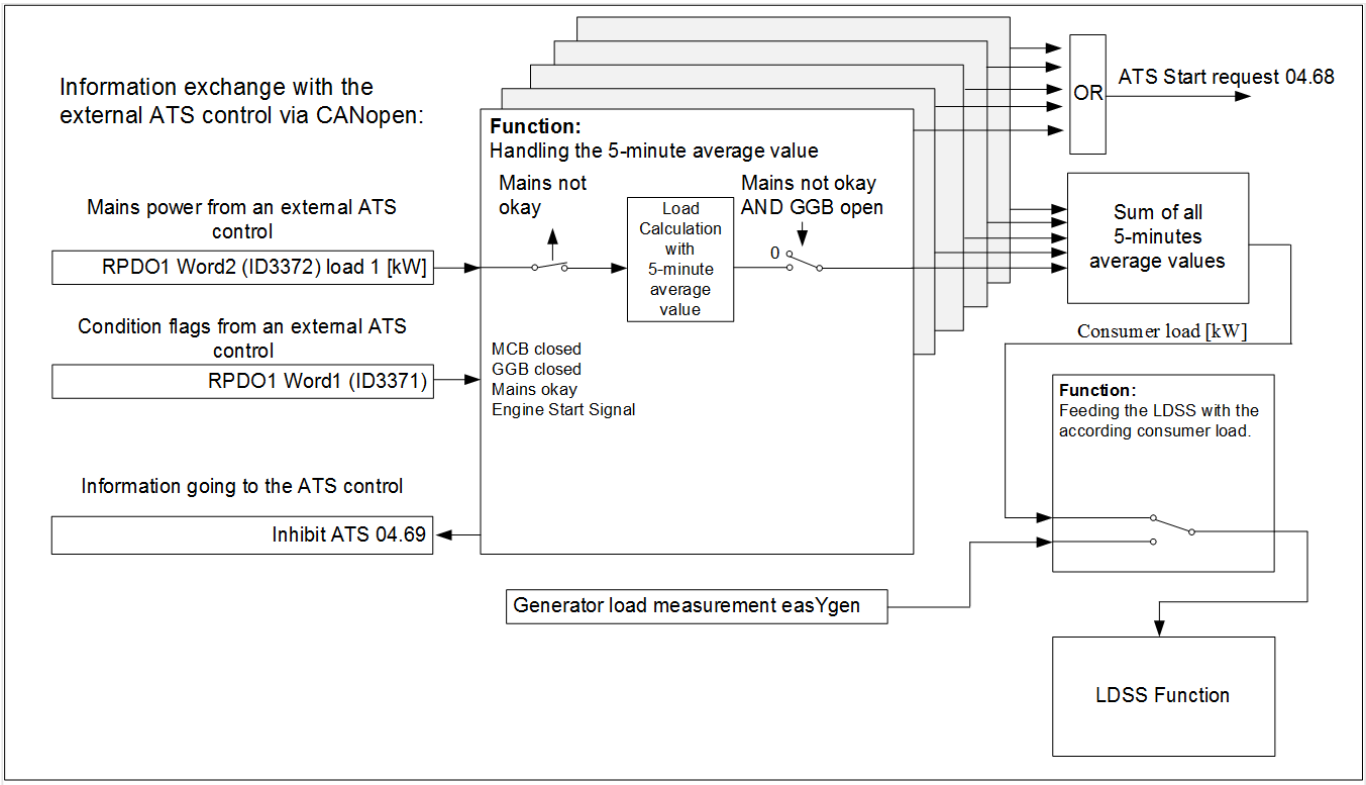


Fig. 170: ***External mode***

The **internal source mode** is dedicated to use the own mains power measurement assigned via Analogmanager .

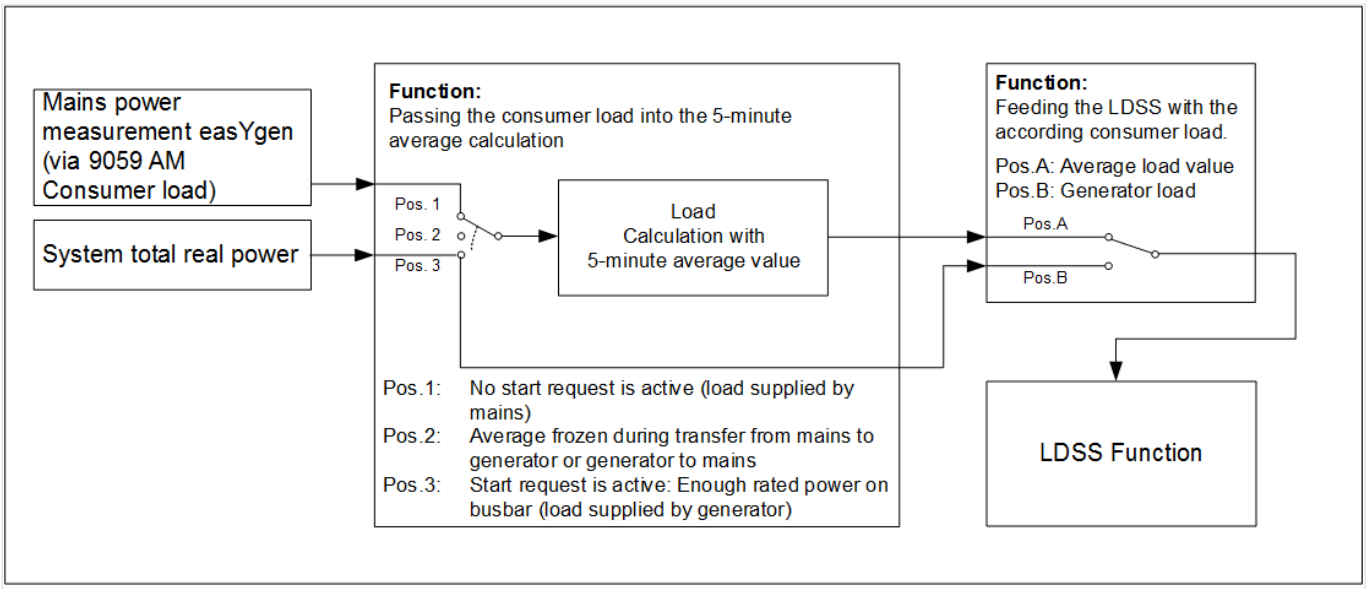


Fig. 171: ***Internal mode***

The external ATS control sends information in CANopen RPDO messages. The easY-I provides information going to the ATS control.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
15026	**LDSS with predicted load**	2	Determined by LogicsManager 86.36 **[(0 & 1) & 1]**	If the conditions of this LogicsManager have been fulfilled LDSS is working with predicted load. Otherwise LDSS is working normally.
9066	**Predicted load source**	2	Internal **[External]**	Internal: LDSS with predicted load is using internal data. ("86.09 LM: Start req.in AUTO") and "81.30 AM Consumer load [kW]")
				External: LDSS with predicted load is expected data from external via RPDOs
9059	**AM Consumer load [kW]**	2	AnalogManager **[↳ “9.5.3 Factory Settings”]**	The result (81.30) of this analog manager provides the load for the load prediction in **internal** source mode

4.4.6 Emergency Run

General notes

The automatically start by mains trip is possible only in application mode A04, A06, A07, A08, A09, A11, A12 and A13 (2 power circuit breakers).

If the LogicsManager outputs 'Stop request in AUTO' or 'Inhibit emergency run' are TRUE, an emergency power operation may be prevented or interrupted from an external source.

Prerequisites

- The emergency power function can only be activated with parameter ↳ 2802.
- Emergency power is carried out in operating mode AUTOMATIC regardless of the status of the LogicsManager output 'Start request in AUTO' (LogicsManager).
- The results of LogicsManagers Inv. ready for operation and Inv. start operation must be TRUE.

The display indicates "Emergency run" during emergency power operation.

The following principles are observed in case of an emergency power operation:

- If an emergency power operation is initiated, the inverter is started automatically, unless the start sequence is interrupted via an alarm or prevented via the LogicsManager or the operating mode is changed.
- If the mains return during an emergency power operation (GCB is closed), the mains settling time (parameter ↳ 2801) must expire before the load is transferred from the generator to mains operation.

Released

Activation of emergency power

If the mains are not within the configured frequency and voltage operating limits (“4.5.2.3 Mains Operating Ranges”) for at least the time configured in the parameter "Mains fail delay time" (parameter 2800), an emergency power operation is activated.

MCB malfunction

An emergency power operation will be performed, if the control is not able to close or recluse the MCB and the alarm "Fail to close MCB" occurs.

Mains rotation field alarm

If the mains returns after a mains failure with a reversed rotation direction the generator remains in emergency power operation until the mains rotation matches the rotation of the generator set.

The generator will not start upon a mains rotation field alarm, but it will keep on running if it has already started.

The following parameters **only** apply to application mode A04, A06, A07, A08, A09, A11, A12 and A13. In application mode GCB/GC A13 some of the following parameters are ignored.

Application mode GCB/GC A13

In application mode GCB/GC A13 the GC has the information about the conditions of the single segments in the whole Layer 3 system. The emergency start of the easY-I(s) in the group depend on the segments which are configured in the GC device. The GCs receive the measured voltages of the segments from LS-6XT. The GC monitors the configured segment(s). If at least one segment is recognized as out of the operating ranges, the generators in the own group are getting an emergency run start signal. With successful start the generator(s) close its breaker. The GGB breaker closure is to coordinate with a logic inside the GC (LogicsManager equations) or by a PLC which gives the close command.

ID	Parameter	CL	Setting range **[Default]**	Description
2802	**Emergency run**	2	**[On]**	If the unit is in the AUTOMATIC operating mode and a mains fault occurs according to the following parameters, the inverter is started and an automatic emergency operation is carried out.
			Off	No emergency operation is carried out.
2800	**Mains fail delay time**	2	0.00 to 99.99 s **[3.00 s]**	To start the inverter and to carry out an emergency operation the monitored mains must be failed continuously for the minimum

Released

ID	Parameter	CL	Setting range [Default]	Description
	(Mains failure start delay)			period of time set with this parameter. **Notes** This delay time starts only if the easY-I is in AUTOMATIC operating mode and emergency power is activated. This parameter is not valid in A13.
3408	**Emerg. start with MCB failure**	2	**[Yes]** **No**	Emergency power operations may be configured with the failure of the MCB in addition to a loss of power on the mains supply. **Notes** An MCB breaker alarm is indicated if parameter "MCB monitoring" (parameter 2620) is configured "On". This parameter is not valid in A13.
12200	**Inhibit emerg.run** (Inhibit emerg. run)	2	Determined by LogicsManager 86.11 **[(0 & 1) & 1]** = 10710	Once the conditions of the LogicsManager have been fulfilled the emergency power operation will be terminated or blocked. **Notes** It is possible to interrupt an already activated emergency run. For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”. This parameter is not valid in A13.
4101	**Break emerg. in critical mode** (Override emergency operations in critical mode)	2	0 to 999 s **[5 s]**	The emergency power operations are overridden for the configured time when the critical mode starts in order to supply the complete generator power to the sprinkler pump.

In the application mode GCB/GC A13 the configuration of the emergency start segment numbers of the easY-I are ignored. They must be configured at the GC.

ID	Parameter	CL	Setting range [Default]	Description
2805	**Emergency start Seg No 1-16**	2	—	In the application mode GCB/LSx the easY-I provides an emergency run according to the configured segments. If the operating range of the particular segment is lost, the easY-I starts and closes the GCB. When the easYgen has recognized being parallel to mains

Released

ID	Parameter	CL	Setting range [Default]	Description
				it ramps down and opens the breaker with cool down. The entry is bit wise. ToolKit offers therefore a more comfortable configuration. In the easY-I display must be entered a hexadecimal value related to the segment number.
				Notes This parameter **only** applies to application mode A07.
2806	**Emergency start Seg No 17-32**	2	—	In the application mode GCB/LSx the easY-I provides an emergency run according to the configured segments. If the operating range of the particular segment is lost, the easY-I starts and closes the GCB. When the easYgen has recognized being parallel to mains it ramps down and opens the breaker with cool down. The entry is bit wise. ToolKit offers therefore a more comfortable configuration. In the easY-I display must be entered a hexadecimal value related to the segment number.
				Notes This parameter **only** applies to application mode A07.
2807	**Emergency start Seg No 33-48**	2	—	In the application mode GCB/LSx the easY-I provides an emergency run according to the configured segments. If the operating range of the particular segment is lost, the easY-I starts and closes the GCB. When the easYgen has recognized being parallel to mains it ramps down and opens the breaker with cool down. The entry is bit wise. ToolKit offers therefore a more comfortable configuration. In the easY-I display must be entered a hexadecimal value related to the segment number.
				Notes This parameter **only** applies to application mode A07.
2808	**Emergency start Seg No 49-64**	2	—	In the application mode GCB/LSx the easY-I provides an emergency run according to the configured segments. If the operating range of the particular segment is lost, the easY-I starts and closes the GCB. When the easYgen has recognized being parallel to mains it ramps down and opens the breaker with cool down. The entry is bit wise. ToolKit offers therefore a more comfortable configuration. In the easY-I display must be

Released

ID	Parameter	CL	Setting range [Default]	Description
				entered a hexadecimal value related to the segment number. **Notes** This parameter **only** applies to application mode A07.

4.5 Configure Monitoring

4.5.1 Configure Generator Monitoring

4.5.1.1 Generator Operating Ranges: Voltage / Frequency / Busbar

The operating voltage/frequency/busbar parameters are used to check if the values are in range when performing a dead bus closure and synchronization of the generator. Busbar 1 must be within this ranges to synchronize the generator to the busbar.

It is recommended to configure the operating limits within the monitoring limits.

ID	Parameter	CL	Setting range [Default]	Description
5800	**Upper voltage limit** (Generator maximum operating voltage limit)	2	100 to 150% **[110%]** (Hysteresis: 1%)	The maximum permissible positive deviation of the generator voltage from the generator rated voltage (parameter 1766) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.03).
5801	**Lower voltage limit** (Generator minimum operating voltage limit)	2	50 to 100% **[90%]** (Hysteresis: 1%)	The maximum permissible negative deviation of the generator voltage from the generator rated voltage (parameter 1766) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.03).
5802	**Upper frequency limit** (Generator maximum operating frequency limit)	2	100.0 to 150.0% **[105.0%]** (Hysteresis: 0.05%)	The maximum permissible positive deviation of the generator frequency from the rated system frequency (parameter 1750) is configured here.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.04).
5803	**Lower frequency limit** (Generator minimum operating frequency limit)	2	50.0 to 100.0% **[95.0%]** (Hysteresis: 0.05%)	The maximum permissible negative deviation of the generator frequency from the rated system frequency (parameter 1750) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.04).

Table 63: Parameter settings: Voltage/frequency

Busbar monitoring

Busbar monitoring compares the actual voltage and frequency of the busbar with the configured generator operating ranges. The voltage operating range is configured with the "Upper voltage Limit" and "Lower voltage limit" parameter. The frequency operating range is configured with the "Upper frequency limit" and "Lower frequency limit" parameter. If the measured busbar voltage or frequency deviates from the operating range for a time exceeding the configurable delay, an alarm will be issued.

ID	Parameter	CL	Setting range **[Default]**	Description
5118	**Monitoring**	2	On	Monitoring is enabled
			[Off]	Monitoring is disabled
5122	**Delay**	2	0.02 to 99.99 s **[10.00 s]**	If one of the monitored values exceeds the threshold value for the delay time configured here, an alarm will be issued.
5119	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
5120	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing

Released

ID	Parameter	CL	Setting range [Default]	Description
				the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Table 64: Parameter settings: Busbar

4.5.1.2 Generator Voltage Monitoring

ID	Parameter	CL	Setting range [Default]	Description
1770	**Generator voltage monitoring**	2		The unit can either monitor the phase-neutral (wye) voltages or the phase-phase (delta) voltages. If the controller is used in a compensated or isolated network, voltage protection monitoring should be configured as phase-neutral to prevent earth-faults resulting in tripping of the voltage protections.
			[Phase - phase]	The phase-phase voltage will be monitored and all subsequent parameters concerning voltage monitoring "generator" are referred to this value (V_{L-L}).
			Phase - neutral	The phase-neutral voltage will be monitored and all subsequent parameters concerning voltage monitoring "generator" are referred to this value (V_{L-N}).
				Notes WARNING: This parameter defines how the protective functions operate.

Table 65: Settings: Generator Voltage Monitoring

4.5.1.2.1 Generator Overvoltage (Level 1 & 2) ANSI# 59

General notes

Voltage is monitored according to how the parameter "Generator voltage measuring" (parameter ⮡ 1851) is configured. This controller provides the user with two alarm levels for generator overvoltage. Both alarms are definite time alarms.

Monitoring for overvoltage faults is performed in two steps.

If this protective function is triggered, the display indicates "Gen. overvoltage 1" or "Gen. overvoltage 2" and the logical command variable "06.05" or "06.06" will be enabled.

Refer to "9.2.1 Triggering Characteristics" for the triggering characteristic of this monitoring function. The diagrams listed there show a frequency trend and the associated pickup times and length of the alarms.

The parameter limits listed below have identical setting ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

ID	Parameter	CL	Setting range [Default]	Description
2000 2006	**Monitoring**	2	**[On]**	Overvoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < limit 2).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2004 2010	**Limit**	2	50.0 to 150.0% 2004: **[108.0%]** 2010: **[112.0%]** (Hysteresis: 0.7%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes** This value refers to the System rated frequency (parameter 1766).
2005 2011	**Delay**	2	0.02 to 99.99 s 2005: **[5.00 s]** 2011: **[0.30 s]**	If the monitored generator voltage value exceeds the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored generator voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2001 2007	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2001: **[Class B]** 2007: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to "9.6.4 Alarm Classes"

Released

ID	Parameter	CL	Setting range [Default]	Description
2002 2008	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2003 2009	**Enabled**	2 4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.2.2 Generator Undervoltage (Level 1 & 2) ANSI# 27

General notes

Voltage is monitored according to how the parameter "Generator voltage measuring" (parameter ↳ 1851) is configured. This controller provides the user with two alarm levels for generator undervoltage. Both alarms are definite time alarms.

Monitoring for undervoltage faults is performed in two steps.



If this protective function is triggered, the display indicates "Gen. undervoltage 1" or "Gen. undervoltage 2" and the logical command variable "06.07" or "06.08" will be enabled.

Refer to ↳ “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function. The diagrams listed there show a frequency trend and the associated pickup times and length of the alarms.



The parameter limits listed below have identical setting ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Released

ID	Parameter	CL	Setting range [Default]	Description
2050 2056	**Monitoring**	2	**[On]**	Undervoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < limit 2).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2054 2060	**Limit**	2	50.0 to 150.0% 2054: **[92.0%]** 2060: **[88.0%]** (Hysteresis: 0.7%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the System rated frequency (parameter 1766).
2055 2061	**Delay**	2	0.00 to 999.00 s 2055: **[5.00 s]** 2061: **[0.30 s]**	If the monitored generator voltage value falls below the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator voltage exceeds the threshold (plus the hysteresis) before the delay expires the time will be reset.
2051 2057	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2051: **[Class B]** 2057: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
2052 2058	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Released

ID	Parameter	CL	Setting range [Default]	Description
2053 2059	**Enabled**	2 4	Always	Monitoring for this fault condition is continuously enabled.
			[85.10 LM:Del.mon]	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.2.3 Generator Voltage Asymmetry

General notes

The voltage asymmetry monitors absolute value of all three phase-phase voltage difference: $dV_1=|V_{12}- V_{23}|$, $dV_2=|V_{23}- V_{31}|$ and $dV_3=|V_{31}- V_{12}|$. If one of measured dV_1, dV_2 or dV_3 exceeds a configured permissible asymmetrical limit, an alarm is issued.

The percentage of permissible asymmetrical limit refers to the generator rated voltage.

If this protective function is triggered, the display indicates "Gen. volt. asymmetry" and the logical command variable "06.18" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

This monitoring function is only enabled if Generator voltage measuring (parameter 1851) is configured to "3Ph 4W" or "3Ph 3W".

ID	Parameter	CL	Setting range [Default]	Description
3900	**Monitoring**	2	**[On]**	Voltage asymmetry monitoring is carried out according to the following parameters.
			Off	No monitoring is carried out.
3903	**Limit**	2	0.5 to 15.0% **[10.0%]** (Hysteresis: 0.5%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				action specified by the alarm class is initiated. **Notes** This value refers to the Generator rated voltage (parameter 1766).
3904	**Delay**	2	0.02 to 99.99 s **[5.00 s]**	If the monitored generator voltage asymmetry exceeds the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored generator voltage asymmetry falls below the threshold (minus the hysteresis) before the delay expires the time will be reset
3901	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
3902	**Self acknowledge**	4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3905	**Enabled**	2	Always	Monitoring for this fault condition is continuously enabled.
			[85.10 LM:Del.mon]	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:**

Released

ID	Parameter	CL	Setting range [Default]	Description
				96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.3 Generator Frequency Monitoring

4.5.1.3.1 Generator Overfrequency (Level 1 & 2) ANSI# 81O

General notes

This controller provides the user with two alarm levels for generator overfrequency. Both alarms are definite time alarms.

Monitoring for overfrequency faults is performed in two steps.

If this protective function is triggered, the display indicates "Gen. overfrequency 1" or "Gen. overfrequency 2" and the logical command variable "06.01" or "06.02" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function. The diagrams listed there show a frequency trend and the associated pickup times and length of the alarms.

The parameter limits listed below have identical setting ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

ID	Parameter	CL	Setting range [Default]	Description
1900 1906	**Monitoring**	2	**[On]**	Overfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < limit 2).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
1904 1910	**Limit**	2	50.0 to 140.0% 1904: **[110.0%]** 1910: **[115.0%]** (Hysteresis: 0.05 Hz) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes**

Released

ID	Parameter	CL	Setting range [Default]	Description
				This value refers to the System rated frequency (parameter 1750).
1905 1911	**Delay**	2	0.02 to 99.99 s 1905: **[1.50 s]** 1911: **[0.30 s]**	If the monitored generator frequency value exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator frequency falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
1901 1907	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 1901: **[Class B]** 1907: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
1902 1908	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
1903 1909	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.3.2 Generator Underfrequency (Level 1 & 2) ANSI# 81U

General notes

This controller provides the user with two alarm levels for generator underfrequency. Both alarms are definite time alarms.

Monitoring for underfrequency faults is performed in two steps.

If this protective function is triggered, the display indicates "Gen. underfrequency 1" or "Gen. underfrequency 2" and the logical command variable "06.01" or "06.02" will be enabled.

Refer to "9.2.1 Triggering Characteristics" for the triggering characteristic of this monitoring function. The diagrams listed there show a frequency trend and the associated pickup times and length of the alarms.

The parameter limits listed below have identical setting ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

ID	Parameter	CL	Setting range [Default]	Description
1950 1956	**Monitoring**	2	**[On]**	Underfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < limit 2).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
1954 1960	**Limit**	2	50.0 to 130.0% 1954: **[90.0%]** 1960: **[84.0%]** (Hysteresis: 0.05 Hz) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or lower for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the System rated frequency (parameter 1750).
1955 1961	**Delay**	2	0.02 to 99.99 s 1955: **[5.00 s]** 1961: **[0.30 s]**	If the monitored generator frequency value falls below the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator frequency falls below the threshold (plus the hysteresis)

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				before the delay expires the time will be reset.
1951 1957	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 1951: **[Class B]** 1957: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ "9.6.4 Alarm Classes"
1952 1958	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
1953 1959	**Enabled**	2 4	Always	Monitoring for this fault condition is continuously enabled.
			[85.10 LM:Del.mon]	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation " Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.4 Generator Current Monitoring

4.5.1.4.1 Generator Time-Overcurrent (Level 1, 2 & 3) ANSI# 50/51

General notes

Current is monitored according to how the parameter "Generator current measuring" (parameter ↳ 1850) is configured. This controller provides the user with three definite time alarm levels for generator overcurrent faults.

Monitoring of the maximum phase current is performed in three steps. Every step can be provided with a delay time independent of the other steps.

If this protective function is triggered, the display indicates "Gen. overcurrent 1", "Gen. overcurrent 2", or "Gen. overcurrent 3" and the logical command variable "06.09", "06.10.", or "06.11" will be enabled.

Refer to "9.2.1 Triggering Characteristics" for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2200 2206 2212	**Monitoring**	2	**[On]**	Overcurrent monitoring is carried out according to the following parameters. Monitoring is performed at three levels. All three values may be configured independent from each other (prerequisite: Level 1 < Level 2 < Level 3).
			Off	Monitoring is disabled for Level 1 limit, Level 2 limit, and/or Level 3 limit.
2204 2210 2216	**Limit**	2	50.0 to 300.0% 2204: **[110.0%]** 2210: **[150.0%]** 2216: **[250.0%]** (Hysteresis: 1%) (Reset Delay: 1 s)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes** This value refers to the System rated frequency (parameter 1754).
2205 2211 2217	**Delay**	2	0.02 to 99.99 s 2205: **[30.00 s]** 2211: **[1.00 s]** 2217: **[0.40 s]**	If the monitored generator current exceeds the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored generator current falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2224 2225 2226	**Voltage restraint monitoring**	4	Yes	The control provides voltage restrained overcurrent relay according to ANSI 51 V individually for each generator current monitoring function. For details refer to "4.5.1.4.3 Generator Voltage Restrained Overcurrent Monitoring - ANSI #51V".
			[No]	Voltage restrained monitoring is disabled.
2201 2207	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control	Each limit may be assigned an independent alarm class that

Released

ID	Parameter	CL	Setting range [Default]	Description
2213			2201: **[Class E]** 2207: **[Class F]** 2213: **[Class F]**	specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to ↳ “9.6.4 Alarm Classes”
2202 2208 2214	**Self acknowledge**	2 4 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2203 2209 2215	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.4.2 Generator Inverse Time-Overcurrent ANSI# IEC 255

General notes

The current produced by the generator is monitored depending on how parameter "Generator current measuring" (parameter ↳ 1850) is configured. If an overcurrent condition is detected, the fault recognition time is determined by the configured tripping characteristic curve and the measured current.

The tripping time is faster as the measured current increases in magnitude according to a defined curve. According to IEC 255 three different characteristics are available.

If this protective function is triggered, the display indicates "Inv. time overcurr." and the logical command variable "06.22" will be enabled.

- "Normal inverse" characteristic:

  $t = 0.14 / (I/I_P)^{0.02} - 1) * t_P[s]$

- "Highly inverse" characteristic:

  $t = 13.5 / (I/I_P) - 1) * t_P[s]$

- "Extremely inverse" characteristic:

  $t = 80 / (I/I_P)^2 - 1) * t_P[s]$

Variables:

- t =tripping time
- t_P = setting value time
- I = measured fault current
- I_P = setting value current

Please take into account during configuration:

- for I_{start}:

  $I_{start} > I_n$ and $I_{start} > I_P$

- for I_P the smaller I_P is, the steeper is the slope of the tripping curve



The maximum tripping time is 327 s. If a tripping time greater than 327 s is configured, an overcurrent fault condition will not be recognized.

Released

Characteristics

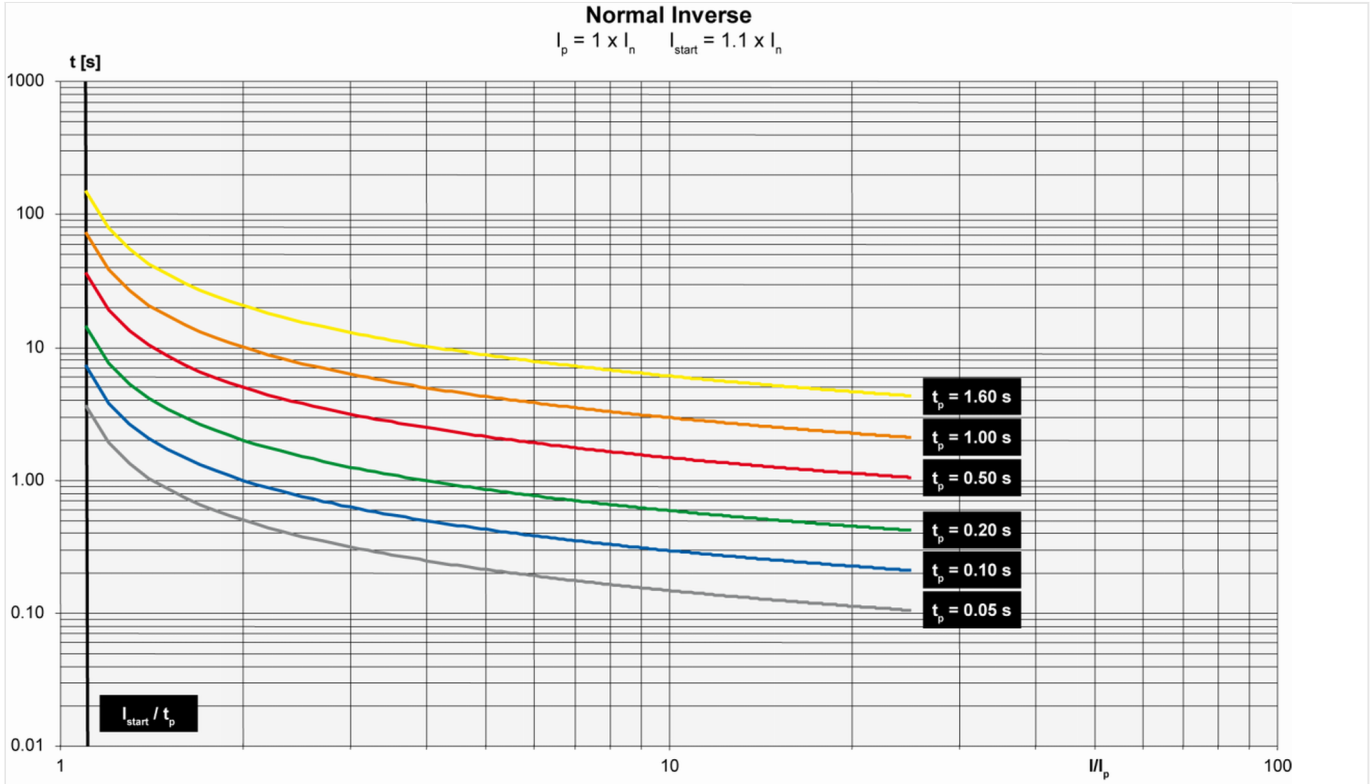


Fig. 172: "Normal inverse" characteristic

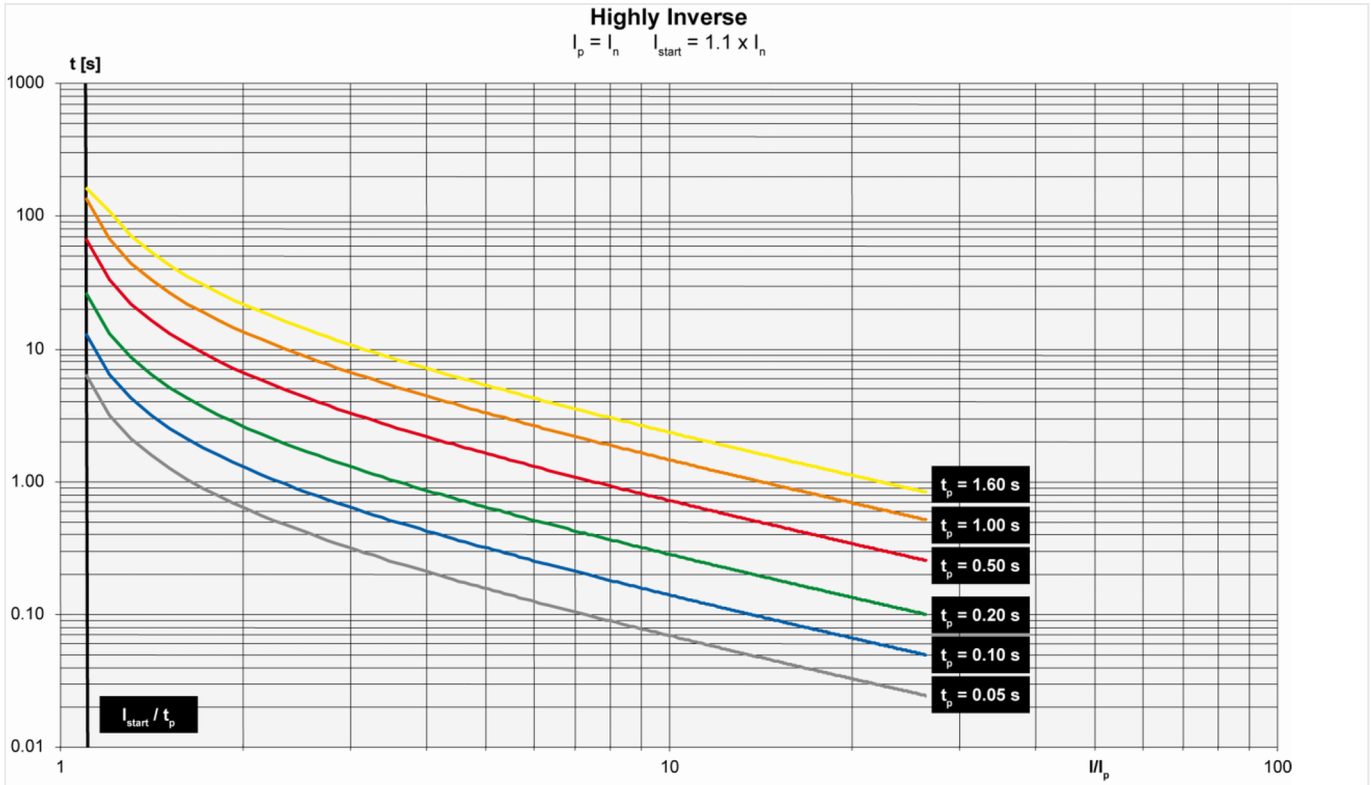


Fig. 173: "Highly inverse" characteristic

Released

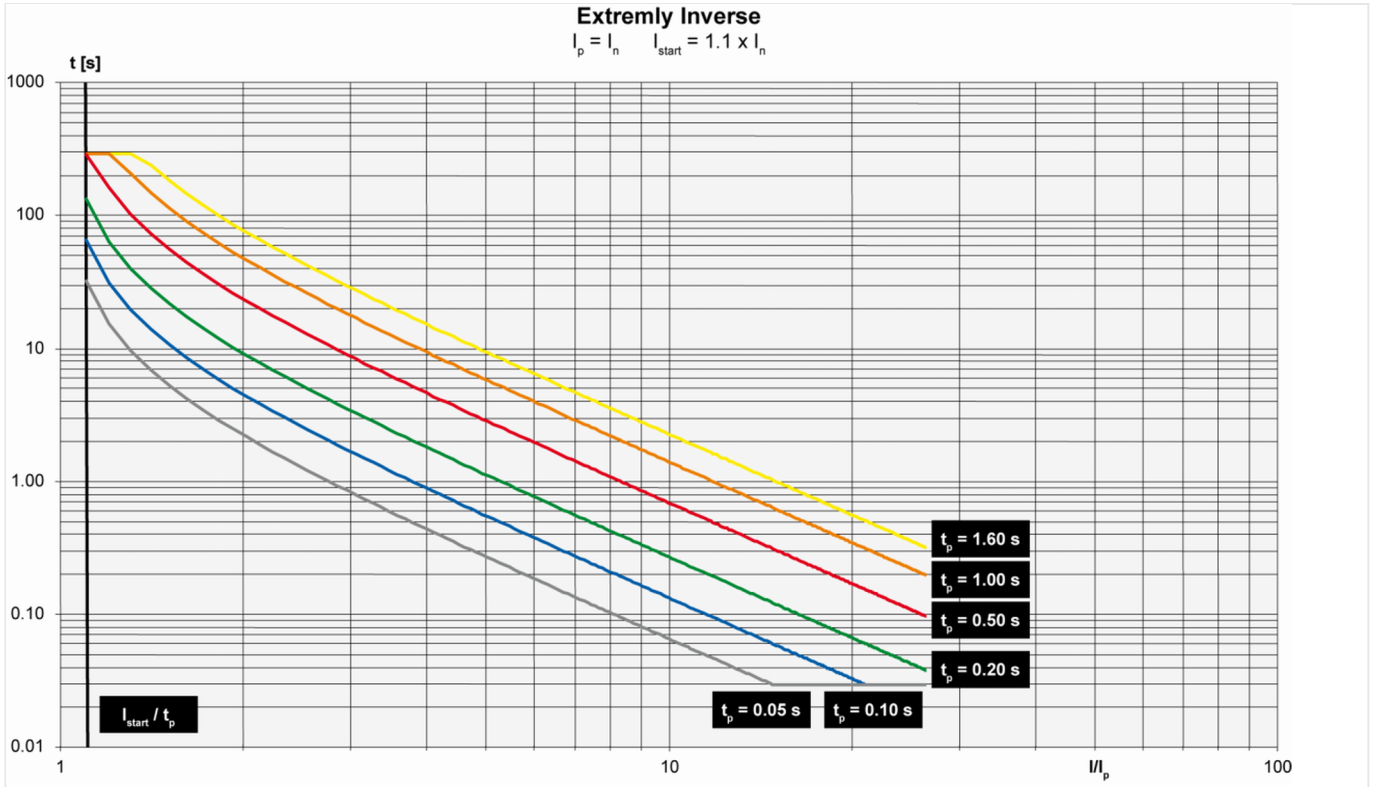


Fig. 174: "Extremely inverse" characteristic

ID	Parameter	CL	Setting range **[Default]**	Description
4030	**Monitoring**	2	**[On]**	Overcurrent monitoring is carried out according to the following parameters.
			Off	No monitoring is carried out.
4034	**Inverse time characteristic**	2		Selection of the used overcurrent characteristic.
			[Normal]	The "normal inverse" tripping curve will be used
			Strong	The "highly inverse" tripping curve will be used
			Extreme	The "extremely inverse" tripping curve will be used.
4035	**Inverse time overcurrent Tp=**	2	0.01 to 5.00 s **[0.06 s]**	Time constant T_p used to calculate the characteristics.
4036	**Inverse time overcurr. Ip=**	2	10.0 to 300.0% **[100.0%]**	Current constant I_P used to calculate the characteristics.
4037	**Inv. time overcurr. I-start=**	2	100.0 to 300.0% **[115.0%]** (Hysteresis: 1%) (Reset Delay: 1 s)	Lower tripping value for inverse time-overcurrent protection. If the monitored current is less than I_{start}, the inverse time-overcurrent protection does not trip. If I_{start} is less than I_P, I_P is used as the lower tripping value.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
2227	**Voltage restraint monitoring**	4	Yes	The control provides voltage restrained inverse time overcurrent monitoring. For general information about voltage restrained monitoring refer to “4.5.1.4.3 Generator Voltage Restrained Overcurrent Monitoring - ANSI #51V”.
			[No]	Voltage restrained monitoring is disabled.
4031	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
4032	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
4033	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.4.3 Generator Voltage Restrained Overcurrent Monitoring - ANSI #51V

General Notes

This function is an add-on to the over current monitoring and decreases the activation limit dependent on the amount of voltage dip. Especially in near to generator located over currents it can lead to situations, where the failure current remains under the

generator rated current. In this case a normal over current monitoring does not trip. The voltage restraint over current monitoring considers this and decreases the configured over current limit according to a modification factor, that it comes to a trip.

The considered voltages are either the single phase-phase or phase-neutral voltages. (Refer to "Generator voltage monitoring" 1770). The monitor takes always the lowest considered voltage into account for calculating the modification factor.

Voltage restraint over current monitoring can be activated individually for “Generator over current (limit 1-3)” and Generator inverse time over current, if the according parameter 2227 “Voltage restraint monitoring” is switched to “Yes”.

The modification factor depends on the measured voltage in percent of rated voltage. It is defined by a characteristic which is defined by three parameters (ID 2230, 2231, 2232 cf. figure). This characteristic is taken into account for all over current monitoring functions, if enabled.

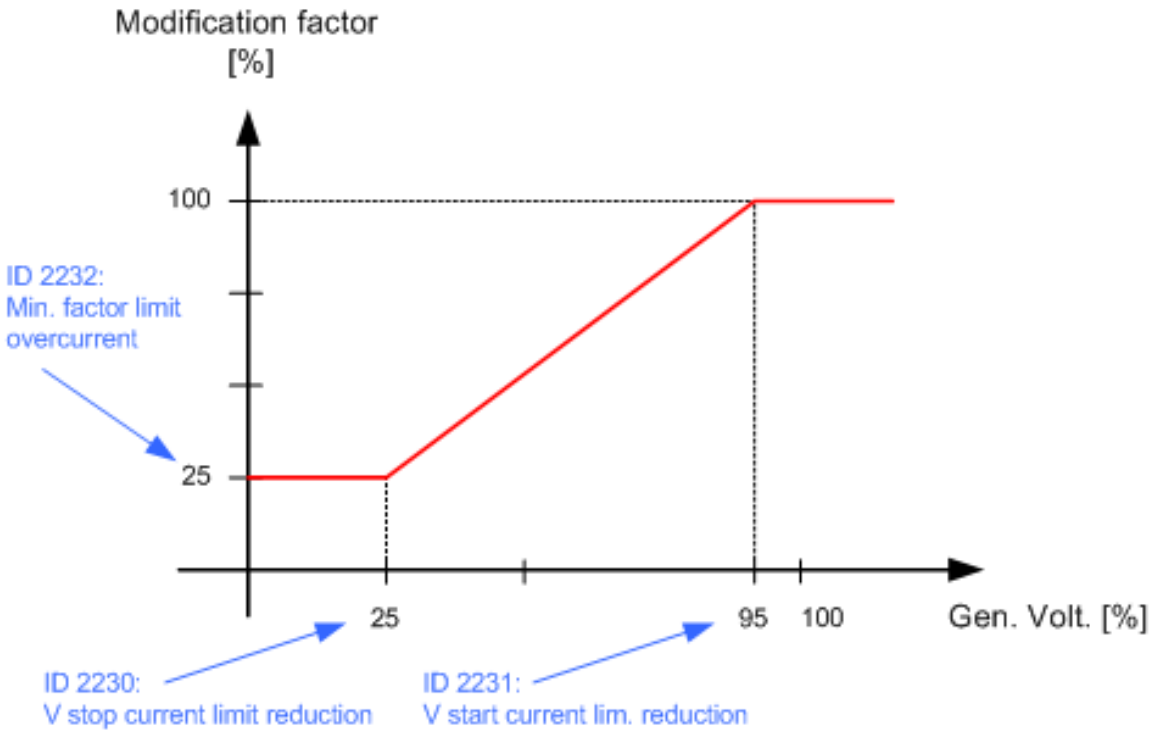


Fig. 175: Example for generator voltage restraint overcurrent characteristic

Beginning at a voltage dip of 95% rated voltage (configured by 2231), the modification factor will be linearly reduced (cf. figure 86). If the voltage reaches 25% or less (configured by 2230) the modification factor will remain at 25% (configured by 2232).

Now the effective limit is calculated as:

Effective limit [%] = Limit [%] * Modification Factor [%]/ 100[%]

Supposed the configured limit of an over current monitor is 110% and the measured voltage is 25%:

Effective limit [%] =110% * 25%/100% = 27.5%

Released

The V (voltage) start value configuration must be entered higher as the V stop value configuration. Otherwise the function does not work properly!

ID	Parameter	CL	Setting range [Default]	Description
2231	**V start current lim. reduction**	2	5.0 ... 100.0% **[95.0%]**	Voltage for starting current limitation reduction
2230	**V stop current limit reduction**	2	5.0 ... 100.0% **[25.0%]**	Voltage for stopping current limitation reduction
2232	**Min.factor limit overcurrent**	2	5.0 ... 100.0% **[25.0%]**	Minimum factor limit for current limitation reduction

4.5.1.5 Generator Power Monitoring

4.5.1.5.1 Generator Overload IOP (Level 1 & 2) ANSI# 32

General notes

IOP = islanded Operation in Parallel

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter ↳ 1851) and "Generator current measuring" (parameter ↳ 1850) are configured. The controller monitors if the system is in a mains parallel or an islanded operation.

When the controller detects that the system is operating islanded from the mains, the Generator Overload MOP (refer to ↳ “4.5.1.5.2 Generator Overload MOP (Level 1 & 2) ANSI# 32”) monitoring is disabled. If the measured generator real power during an islanded operation is above the configured limit an alarm will be issued.

If this protective function is triggered, the display indicates "Gen. Overload IOP 1" or "Gen. Overload IOP 2" and the logical command variable "06.14" or "06.15" will be enabled.

Refer to ↳ “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2300	**Monitoring**	2	**[On]**	Overload monitoring is carried out according to the following

Released

ID	Parameter	CL	Setting range [Default]	Description
2306				parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2304 2310	**Limit**	2	50.0 to 300.0% 2304: **[110.0%]** 2310: **[120.0%]** (Hysteresis: 1%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the Generator rated active power (parameter ↳ 1752).
2305 2311	**Delay**	2	0.02 to 99.99 s 2305: **[11.00 s]** 2311: **[0.10 s]**	If the monitored generator load exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator load falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2301 2307	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2301: **[Class B]** 2307: **[D]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
2302 2308	**Self acknowledge**	2 4	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2303 2309	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.

Released

ID	Parameter	CL	Setting range [Default]	Description
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.5.2 Generator Overload MOP (Level 1 & 2) ANSI# 32

General notes

MOP = Mains Parallel Operation

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter 1851) and "Generator current measuring" (parameter 1850) are configured.

The controller monitors if the system is in a mains parallel or an islanded operation. When the controller detects that the system is operating parallel with the mains, the Generator Overload IOP (refer to “4.5.1.5.1 Generator Overload IOP (Level 1 & 2) ANSI# 32”) monitoring is disabled. If the measured generator real power during a mains parallel operation is above the configured limit an alarm will be issued.

If this protective function is triggered, the display indicates "Gen. Overload MOP 1" or "Gen. Overload MOP 2" and the logical command variable "06.23" or "06.24" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2350 2356	**Monitoring**	2	**[On]**	Overload monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

Released

ID	Parameter	CL	Setting range [Default]	Description
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2354 2360	**Limit**	2	50.0 to 300.0% 2354: **[105.0%]** 2360: **[110.0%]** (Hysteresis: 1%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes** This value refers to the Generator rated active power (parameter 1752).
2355 2361	**Delay**	2	0.02 to 99.99 s 2355: **[5.00 s]** 2361: **[0.10 s]**	If the monitored generator load exceeds the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored generator load falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2351 2357	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2351: **[Class B]** 2357: **[D]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
2352 2358	**Self acknowledge**	4	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2353 2359	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32:	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE.

Released

ID	Parameter	CL	Setting range [Default]	Description
			96.{xx} LM: Flag{xx}	**Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.5.3 Generator Reverse/Reduced Power (Level 1 & 2) ANSI# 32R/F

General notes

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter ↳ 1851) and "Generator current measuring" (parameter ↳ 1850) are configured.

The generator power limits may be configured for reduced power and/or reverse power depending on the threshold values entered. The note below explains how a reduced or reverse power limit is configured.

If the single-phase or three-phase measured real power is below the configured limit of the reduced load or below the configured value of the reverse power, an alarm will be issued.

If this protective function is triggered, the display indicates "Gen. rev./red. pwr.1" or "Gen. rev./red. pwr.2" and the logical command variable "06.12" or "06.13" will be enabled.

Refer to ↳ “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

Definition

- Reduced power Fault initiated if the monitored real power falls below the configured (positive) limit.
- Reverse power Fault initiated if the direction of the monitored real power reverses and the configured (negative) limit is exceeded.

Configuration examples

The values for reverse /reduced power monitoring can be configured as follows:

- Level 1 limit = Positive and Level 2 limit = Positive

  (whereas Level 1 limit > Level 2 limit > 0 %)

- Both limits are configured for reduced power monitoring.

Example

- Rated power is 100 kW, Level 1 limit = 5 % > Level 2 limit = 3 %
- Tripping if real power falls below 5 kW (Level 1 limit) or 3 kW (Level 2 limit)

- Level 1 limit = Negative and Level 2 limit = Negative

  (whereas Level 2 limit < Level 1 limit < 0%)

  Both limits are configured for reverse power monitoring.

☼ **Example**

- Rated power is 100 kW, Level 1 limit = -3 % > Level 2 limit = -5 %
- Tripping if real power falls below -3 kW (Level 1 limit) or -5 kW (Level 2 limit)

- Level 1 limit = Positive and Level 2 limit = Negative

  (whereas Level 1 limit > 0 % > Level 2 limit)

- Level 1 is configured for reduced power monitoring and
- Level 2 is configured for reverse power monitoring.

☼ **Example**

- Rated power is 100 kW, Level 1 limit = 3 % > Level 2 limit = -5 %
- Tripping if real power falls below 3 kW (Level 1 limit) or -5 kW (Level 2 limit)

ID	Parameter	CL	Setting range [Default]	Description
2250 2256	**Monitoring**	2	**[On]**	Reverse/reduced power monitoring is carried out according to the following parameters. Both values may be configured independent from each other.
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2254 2260	**Limit**	2	-99.9 to 99.9% 2254: **[-3.0%]** 2260: **[-5.0%]** (Hysteresis: 1%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the Generator rated active power (parameter 1752).
2255 2261	**Delay**	2	0.02 to 99.99 s 2255: **[5.00 s]** 2261: **[5.00 s]**	If the monitored generator power falls below the threshold value for the delay time configured here, an alarm will be issued.
				Notes

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				If the monitored generator power exceeds or falls below the threshold (plus/minus the hysteresis) again before the delay expires the time will be reset.
2251 2257	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2251: **[Class B]** 2257: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to ↳ “9.6.4 Alarm Classes”
2252 2258	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2253 2259	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.5.4 Generator Unbalanced Load (Level 1 & 2) ANSI# 46

General notes

Unbalanced load is monitored according to how the parameters "Generator voltage measuring" (parameter ↳ 1851) and "Generator current measuring" (parameter ↳ 1850) are configured. The unbalanced load alarm monitors the individual phase currents of the generator. The percentage threshold value is the permissible variation of one phase from the average measured current of all three phases.

If this protective function is triggered, the display indicates "Unbalanced load 1" or "Unbalanced load 2" and the logical command variable "06.16" or "06.17" will be enabled.

Refer to "9.2.1 Triggering Characteristics" for the triggering characteristic of this monitoring function.

This monitoring function is only enabled when Generator voltage measuring (parameter 1851) is configured to "3Ph 4W", "3Ph 4W OD", or "3Ph 3W" and Generator current measuring (parameter 1850) is configured to "L1 L2 L3".

Formulas

	Phase L1	Phase L2	Phase L3
Exceeding	$I_{L1} \geq (3 * I_N * P_A + I_{L2} + I_{L3}) / 2$	$I_{L2} \geq (3 * I_N * P_A + I_{L1} + I_{L3}) / 2$	$I_{L3} \geq (3 * I_N * P_A + I_{L1} + I_{L2}) / 2$
Falling below	$I_{L1} \leq (I_{L2} + I_{L3} - 3 * I_N * P_A) / 2$	$I_{L2} \leq (I_{L1} + I_{L3} - 3 * I_N * P_A) / 2$	$I_{L3} \leq (I_{L1} + I_{L2} - 3 * I_N * P_A) / 2$

Examples

Exceeding a limit value

- Current in phase L1 = current in phase L3
- Current in phase L2 has been exceeded
- P_A = tripping value percentage (example 10 %)
- I_N = rated current (example 300 A)

Tripping value for phase L2:

- $I_{L2} \geq (3 * I_N * P_A + I_{L1} + I_{L3}) / 2$
  = (3 * 300 A * 10% + 300 A + 300 A) / 2
  = ((3 * 300 A * 10) / 100 + 300 A + 300 A) / 2
  = 345 A

Falling below a limit value

- Current in phase L2 = current in phase L3
- Current in phase L1 has been undershot
- P_A = tripping value percentage (example 10 %)
- I_N = rated current (example 300 A)

Tripping value for phase L1:

- $I_{L1} \leq (I_{L2} + I_{L3} - 3 * I_N * P_A) / 2$
  = (300 A + 300 A - 3 * 300 A * 10%) / 2
  = (300 A + 300 A - (3 * 300 A * 10) / 100)) / 2
  = 255 A

Released

ID	Parameter	CL	Setting range [Default]	Description
2400 2406	**Monitoring**	2	**[On]**	Unbalanced load monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (condition: Level 1 < Level 2).
			Off	No monitoring is carried out for either Level 1 limit or Level 2 limit.
2404 2410	**Limit**	2	0.0 to 100.0% 2404: **[10.0%]** 2410: **[15.0%]** (Hysteresis: 0.5%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the "Generator rated current" (parameter 1754)
2405 2411	**Delay**	2	0.02 to 99.99 s 2405: **[5.00 s]** 2411: **[1.00 s]**	If the monitored current exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored current falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2401 2407	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2401: **[Class B]** 2407: **[Class E]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
2402 2408	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

ID	Parameter	CL	Setting range **[Default]**	Description
2403 2409	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon." .
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.5.5 Load sharing

Active power load sharing mismatch

ID	Parameter	CL	Setting range **[Default]**	Description
5100	**Monitoring**	2	On	Load share monitoring is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
4841	**Limit**	2	1.0 to 100.0% **[30.0%]**	The percentage value that is to be monitored for the threshold limit is defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value is rated to the absolute difference between generator rated power (parameter 1752) and the percent average power of the other devices. The generator rated power is modified by the derating factor if derating is activated.
5104	**Delay**	2	1.0 to 999.9 s **[10.0 s]**	If the monitored generator power value exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator power falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

Released

ID	Parameter	CL	Setting range [Default]	Description
5101	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
5102	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
5103	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Reactive power load sharing mismatch

ID	Parameter	CL	Setting range [Default]	Description
5106	**Monitoring**	2	On	Load share monitoring is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
4842	**Limit**	2	1.0 to 100.0% **[30.0%]**	The percentage value that is to be monitored for the threshold limit is defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

ID	Parameter	CL	Setting range **[Default]**	Description
				Notes This value is rated to the absolute difference between generator rated reactive power (parameter 1758) and the percent average reactive power of the other devices. The generator rated reactive power is modified by the derating factor if derating is activated.
5110	**Delay**	2	1.0 to 999.9 s **[10.0 s]**	If the monitored generator power value exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator power falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
5107	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
5108	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
5109	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:**

Released

ID	Parameter	CL	Setting range [Default]	Description
				96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.5.6 Inverter/Generator Active Power Mismatch

General notes

If enabled, this monitoring function becomes only active if inverter power control is enabled (refer to “4.4.4.5 Load Control”). If the measured inverter power deviates from the power setpoint by a value exceeding the limit configured in parameter 2925 for a time exceeding the delay configured in parameter 2923, an alarm will be issued.

If this protective function is triggered, the display indicates "Gen.act.pwr.mismatch" and the logical command variable "06.29" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
2920	**Monitoring**	2	**[On]**	Monitoring of the generator active power mismatch is carried out according to the following parameters.
			Off	Monitoring is disabled.
2925	**Limit**	2	1.0 to 30.0% **[5.0%]**	If the difference between the measured generator power and the power setpoint exceeds this value for at least the delay time (parameter 2923) without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the generator rated active power (parameter 1752).
2923	**Delay**	2	3 to 9999 s **[30 s]**	If the monitored active power mismatch exceeds the threshold value configured in parameter 2925 for the delay time configured here, an alarm will be issued.
				Notes If the monitored active power mismatch falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2921	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[Class B]	
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
2922	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.1.5.7 Generator Unloading Mismatch

General notes

This monitoring function is always enabled and becomes active when a stop command is issued. Following a stop command, the controller tries to reduce the power before opening the GCB. If the power falls below the unload limit (parameter ↳ 3125) before the delay (parameter ↳ 3123) expires, a "GCB open" command will be issued. If the controller fails to reduce the power to fall below the unload limit (parameter ↳ 3125) before the delay (parameter ↳ 3123) expires, a "GCB open" command will be issued together with an alarm.



If this protective function is triggered, the display indicates "Gen. unloading fault" and the logical command variable "06.30" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
3120	**Monitoring**	2	**[On]**	Monitoring of generator unloading is carried out according to the following parameters.
			Off	Monitoring is disabled.
3125	**Unload limit**	2	0.5 to 99.9% **[3.0%]**	If the monitored generator power falls below this value, a "GCB open" command will be issued.
				Notes This value refers to the generator rated active power (parameter ↳ 1752).

Released

ID	Parameter	CL	Setting range [Default]	Description
3123	**Delay**	2	3 to 999 s **[60 s]**	If the monitored generator power does not fall below the limit configured in parameter 3125 before the time configured here expires, a "GCB open" command will be issued together with an alarm. The GCB will be opened after this time **even if 3120 is configured to OFF.**
3121	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3122	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.1.6 Other Monitoring

4.5.1.6.1 Power Factor - configure generator power factor monitoring

4.5.1.6.1.1 Generator Lagging Power Factor (Level 1 & 2)

General notes

The power factor is monitored for becoming more lagging (i.e. inductive) than an adjustable limit. This limit may be a lagging or leading power factor limit. There are two lagging power factor alarm levels available in the control. This monitoring function may be used for monitoring an overexcitation with a warning and a shutdown alarm level. Both alarms are definite time alarms.

The power factor monitoring

- is activated,

  if the generator current expires 5% rated Generator current and

- is blocked,

  if the generator current underrun 3% rated Generator current.

↳▷ Fig. 176 shows an example of a leading and a lagging power factor limit and the power factor range, for which the lagging power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Gen. PF lagging 1" or "Gen. PF lagging 2" and the logical command variable "06.25" or "06.26" will be enabled.

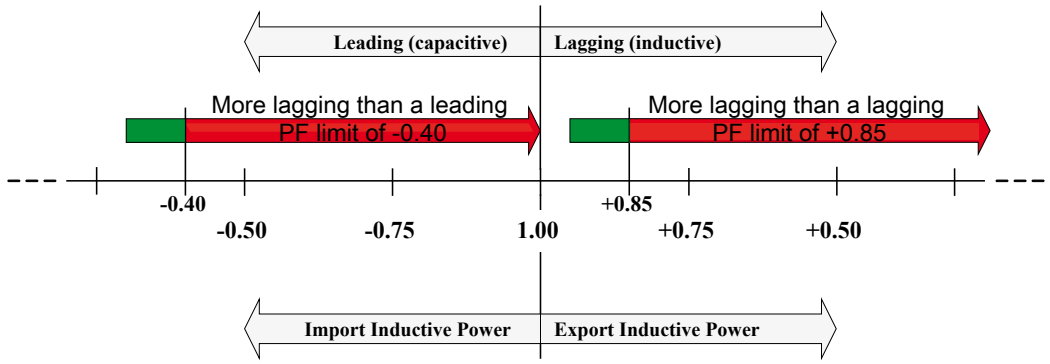


Fig. 176: Generator lagging power factor

ID	Parameter	CL	Setting range [Default]	Description
2325 2331	**Monitoring**	2	**[On]**	Generator lagging power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2329 2335	**Limit**	2	-0.999 to 1.000 2329 **[+ 0.900]** 2335: **[+ 0.700]** (Hysteresis: 0.02%) (Reset Delay: 80 ms)	The values that are to be monitored for each threshold limit are defined here. **Notes** If the power factor becomes more lagging (i.e. inductive, ↳▷ Fig. 176) than a lagging PF value (positive) or a leading PF value (negative) for at least the delay time (parameters ↳▷ 2330 or ↳▷ 2336) without interruption,

Released

ID	Parameter	CL	Setting range [Default]	Description
				the action specified by the alarm class is initiated.
2330 2336	**Delay**	2	0.02 to 99.99 s 2330: **[30.00 s]** 2336: **[10.00 s]**	If the monitored generator power factor is more lagging than the configured limit for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator power factor returns within the limit before the delay expires the time will be reset.
2326 2332	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2326: **[Class B]** 2332: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
2327 2333	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2328 2334	**Enabled**	2	Always	Monitoring for this fault condition is continuously enabled.
			[85.10 LM:Del.mon]	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Released

4.5.1.6.1.2 Generator Leading Power Factor (Level 1 & 2)

General notes

The power factor is monitored for becoming more leading (i.e. capacitive) than an adjustable limit. This limit may be a leading or lagging power factor limit. There are two leading power factor alarm levels available in the control. This monitoring function may be used for monitoring an under excitation with a warning and a shutdown alarm level. Both alarms are definite time alarms.

The power factor monitoring

- is activated,

  if the generator current expires 5% rated Generator current and

- is blocked,

  if the generator current underruns 3% rated Generator current.

Fig. 177 shows an example of a leading and a lagging power factor limit and the power factor range, for which the leading power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Gen. PF leading 1" or "Gen. PF leading 2" and the logical command variable "06.27" or "06.28" will be enabled.

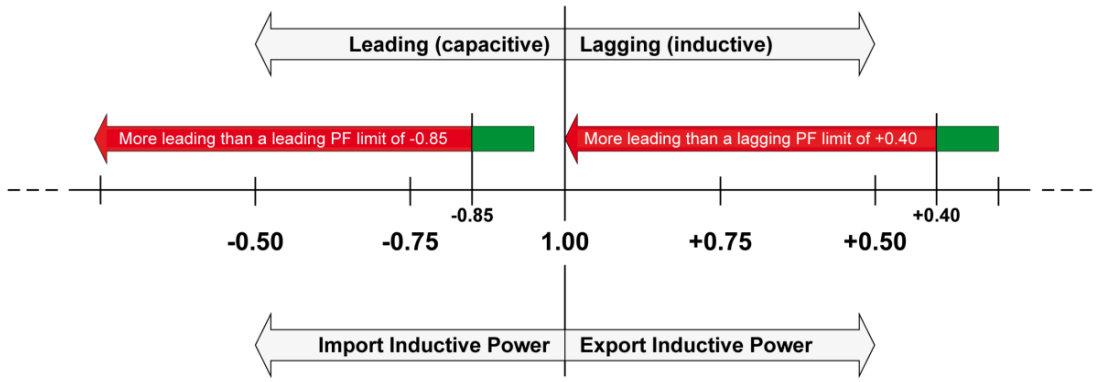


Fig. 177: Generator leading power factor

ID	Parameter	CL	Setting range [Default]	Description
2375 2381	**Monitoring**	2	**[On]**	Generator leading power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.

Released

ID	Parameter	CL	Setting range [Default]	Description
2379 2385	**Limit**	2	-0.999 to 1.000 2379: **[- 0.900]** 2385: **[- 0.700]** (Hysteresis: 0.02%) (Reset Delay: 80 ms)	The values that are to be monitored for each threshold limit are defined here. **Notes** If the power factor becomes more leading (i.e. capacitive, ↳ Fig. 177) than a leading PF value (negative) or a lagging PF value (positive) for at least the delay time (parameters ↳ 2380 or ↳ 2386) without interruption, the action specified by the alarm class is initiated.
2380 2386	**Delay**	2	0.02 to 99.99 s 2380: **[30.00 s]** 2386: **[10.00 s]**	If the monitored generator power factor is more leading than the configured limit for the delay time configured here, an alarm will be issued. **Notes** If the monitored generator power factor returns within the limit before the delay expires the time will be reset.
2376 2382	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2376: **[Class B]** 2382: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to ↳ “9.6.4 Alarm Classes”
2377 2383	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2378 2384	**Enabled**	2	Always	Monitoring for this fault condition is continuously enabled.
			[85.10 LM:Del.mon]	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE.

ID	Parameter	CL	Setting range [Default]	Description
			LM: Flag{xx}	**Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.6.2 Miscellaneous

4.5.1.6.2.1 Generator Ground Fault (Level 1 & 2)

General notes

The generator ground fault is determined differently depending on the following configuration options:

- Mains current input is configured for mains current

  (calculated ground fault)

- Mains current input is configured for ground current

  (measured ground fault)

Refer to parameter 1854.

Calculated ground fault

The current produced by the generator is monitored depending on how parameter "Generator current measuring" (parameter 1850) is configured. The measured three conductor currents IGen-L1, IGen-L2 and IGen-L3 are vectorially totaled (IS = IGen-L1 + IGen-L2 + IGen-L3) and compared with the configured fault limit (the calculated actual value is indicated in the display). If the measured value exceeds the fault threshold limit, a ground fault is present, and an alarm is issued.

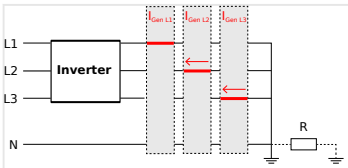


Fig. 178: Inverter (Generator) ground fault - schematic

If this protective function is triggered, the display indicates "Ground fault 1" or "Ground fault 2" and the logical command variable "06.19" or "06.20" will be enabled.

The ground fault protection zone is determined by the location where the generator current transformer are physically installed.

Released

⚙	**Test**
1. ▷	Short-circuit one of the three generator current transformers while the generator is at full load.
▶	The measured current should read 100% of rated on the two phases that do not have their current transformers short-circuited.

The ground current calculation does not take current on the neutral conductor into consideration. In order for the controller to be able to perform calculated ground fault current protection accurately, the neutral conductor must not conduct current.

The fault threshold value is configured as a percentage. This percentage threshold refers to the generator rated current (parameter 1754). Due to unavoidable load asymmetries, the minimum value for this parameter should be 10% or greater.

Calculation

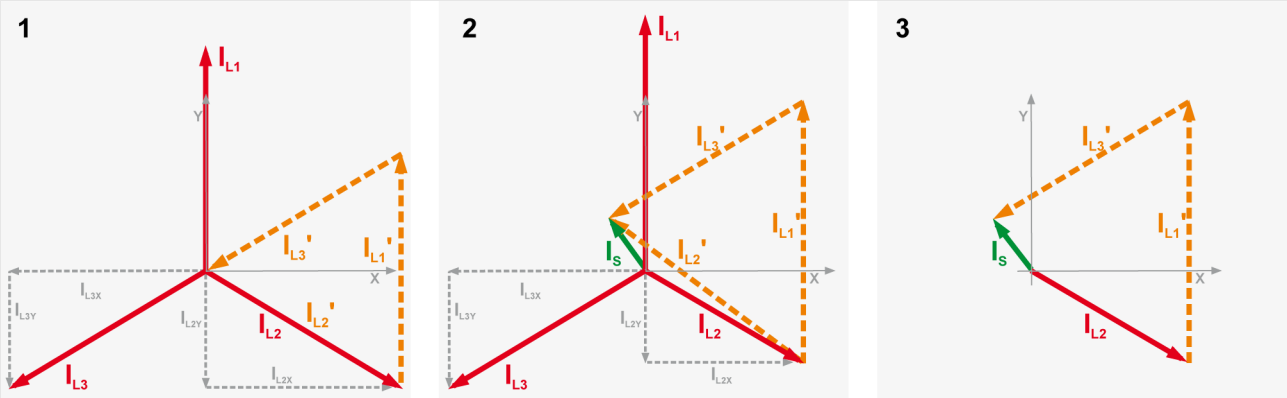


Fig. 179: Generator ground fault - calculation

1 No ground fault

2 Ground fault (with vectorial calculation)

3 Ground fault (I_S = ground fault current)

The ground current I_S is calculated geometrically/vectorially. The pointers for phase currents IL1 and IL2 are parallel shifted and lined up as shown in (Fig. 179/1).

The pointer between the neutral point and the point of the shifted pointer I_{L2}' results is the sum current I_S as shown in (Fig. 179/2).

In order to be able to add the pointers vectorially, these must be divided into their X- and Y-coordinates (IL2X, IL2Y, IL3X and IL3Y).

The ground fault current may be calculated using the following formula:

- $(I_{L1rated} + I_{L2rated} + I_{L3rated}) - (I_{L1measured} + I_{L2measured} + I_{L3measured}) / 1.73 = I_S$
- (7 A + 7 A + 7 A) – (7A + 6.5 A + 6 A) / 1.73 = 0.866 A

Results of a calculation example:

- Phase current $I_{L1} = I_{Rated}$ = 7 A

Released

- Phase current I_{L2} = 6.5 A
- Phase current I_{L3} = 6 A

Measured ground fault

Ground fault current is actively measured when the mains current input is configured to monitor for ground current. The ground fault threshold is configured as a percentage of the value entered for parameter "Generator rated current" (parameter 1754).



The ground fault protection zone is determined by the physical installation location of the generator current transformer.

ID	Parameter	CL	Setting range [Default]	Description
3250 3256	**Monitoring**	2	On	Ground current monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 < Level 2).
			[Off]	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3254 3260	**Limit**	2	0 to 300% 3254: **[10%]** 3260: **[30%]** (Hysteresis: 1%) (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the Generator rated current of the generator (parameter 1754), if the ground current is calculated from the generator current values. It refers to the parameter "Generator rated current" (parameter 1754), if the ground current is measured directly. The ground fault threshold must not exceed the mains/ground current measuring range (approx. 1.5 × I_{rated}; "8.1 Technical Data").
3255 3261	**Delay**	2	0.02 to 99.99 s 3255: **[0.20 s]** 3261: **[0.10 s]**	If the monitored ground fault exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored ground fault falls below the threshold (minus the

Released

ID	Parameter	CL	Setting range [Default]	Description
				hysteresis) before the delay expires the time will be reset.
3251 3257	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 3251: **[Class B]** 3257: **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
3252 3258	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3253 3259	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Released

4.5.1.6.2.2 Generator Phase Rotation

General notes

NOTICE!

Damage to the control unit and/or generation equipment

- Ensure that the control unit is properly connected to phase voltages on both sides of the circuit breaker(s) during installation.

Failure to do so may result in damage to the control unit and/or generation equipment due to the breaker closing asynchronously or with mismatched phase rotations. Also ensure that phase rotation monitoring is enabled at all connected components (inverter, engine, generator, breakers, cable, busbars, etc.).

This function will block a connection of systems with mismatched phases only under the following conditions:

- The voltages being measured are wired correctly with respect to the phase rotation at the measuring points (i.e. the potential transformers in on both sides of the circuit breaker)
- The voltages being measured are wired so that angular phase shifts or any interruptions from the measuring point to the control unit do not exist
- The voltages being measured are wired to the correct terminals of the control unit (i.e. L1 phase of the generator is connected with the terminal of the control unit which is intended for the generator L1 phase)
- The configured alarm class is of class C, D, E, or F (shutdown alarm).

Correct phase rotation of the phase voltages ensures that damage will not occur during a breaker closure to either the mains or the generator. The voltage phase rotation alarm checks the phase rotation of the measured voltages and the configured phase rotation to ensure they are identical.

The directions of rotation are differentiated as "clockwise" and "counter clockwise". With a clockwise field the direction of rotation is "L1-L2-L3"; with a counter clockwise field the direction of rotation is "L1-L3-L2". If the control is configured for a clockwise rotation and the measured voltages are monitored as counterclockwise, the alarm will be initiated.

The direction of configured rotation being monitored by the control unit is displayed on the screen.

If this protective function is triggered, the display indicates "Gen.ph.rot. mismatch" and the logical command variable "06.21" will be enabled.

This monitoring function is only enabled if Generator voltage measuring (parameter 1851) is configured to "3Ph 4W", "3Ph 3W", or "3Ph 4W OD" and the measured voltage exceeds 50 % of the rated voltage (parameter 1766) or if Generator voltage measuring (parameter 1851) is configured to "1Ph 2W" (in this case, the phase rotation is not evaluated, but defined by the 1Ph2W phase rotation (parameter 1859)).

Released

ID	Parameter	CL	Setting range [Default]	Description
3950	**Monitoring**	2	**[On]**	Phase rotation monitoring is carried out according to the following parameters.
				Notes The phase rotation monitor is internally configured with a two seconds delay, so that the expected response time is less than three seconds.
			Off	No monitoring is carried out.
3954	**Generator phase rotation**	2	**[CW]**	The three-phase measured generator voltage is rotating CW (clock-wise; that means the voltage rotates in L1-L2-L3 direction; standard setting).
			CCW	The three-phase measured generator voltage is rotating CCW (counter clock-wise; that means the voltage rotates in L1-L3-L2 direction).
3951	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class F]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3952	**Self acknowledge**	4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3953	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:**

Released

ID	Parameter	CL	Setting range [Default]	Description
				96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.1.6.3 Inverter

General notes

The alarms are transmitted from the inverter to the easY-I via Modbus.

For this purpose, a corresponding Modbus mapping file must be created with the help of the Woodward "ModbusMasterMapper" tool which must be loaded into the easy-I via Toolkit. For this purpose, the LM variables **55.01 to 55.64** “9.4.2.28 Group 55: Modbus master flags 2 (Inverter and DC Source alarms)” are reserved in the easy-I. Important alarm flags of the inverter must be mapped to these LM variables.

Because the easY-I is designed to work with different inverters and BMS, the assignment must be adapted to the the current application. For most LM flags, parameters "Description" are already preconfigured as suggestion. It is assumed that most of the alarms offered will be provided in a similar manner in the different systems.



The values of these LM variables are the row data mapped from the Modbus. Latched flags are not offered for these LM variables. Parameter "Alarm class" and "Self acknowledge" are only valid for these LM variables but for the entries in the "Alarm list".

Parameter

For the parameters navigate to [Parameter / Configure monitoring / Generator / Other monitoring / Inverter].

The parameters

- "Description" are preconfigured as in the tables
- "Alarm class" are preconfigured as "Class D"
- "Self acknowledge" are preconfigured as "No"



Some alarms are indicated as "Reserved". For their corresponding assignment to the LM variable there are currently no parameters and alarms available. But the corresponding variables can be assigned to any Modbus data via the mapper and further used with the free alarms.

DC Source alarm	1	2	3	4
Description ID	17801	17804	17807	17810
Description preconfig.	Safe Stop	Hardware over current	Emergency Stop	Gate drive fault
Alarm class ID	17802	17805	17808	17811
Self acknowledge ID	17803	17806	17809	17812

DC Source alarm	1	2	3	4
Assigned to	LM 55.01	LM 55.02	LM 55.03	LM 55.04

Table 66: Inverter alarms 1-4 parameter

DC Source alarm	5	6	7	8
Description ID	17813	17816	17819	17822
Description preconfig.	AC Over curr. Ph. A	AC Over curr. Ph. B	AC Over curr. Ph. C	DC Over voltage
Alarm class ID	17814	17817	17820	17823
Self acknowledge ID	17815	17818	17821	17824
Assigned to	LM 55.05	LM 55. 06	LM 55.07	LM 55.08

Table 67: Inverter alarms 5-8 parameter

DC Source alarm	9	10	11	12
Description ID	17825	17828	17831	17834
Description preconfig.	DC Under voltage	DC pos. over voltage	DC pos. under volt.	DC neg. over voltage
Alarm class ID	17826	17829	17832	17835
Self acknowledge ID	17827	17830	17833	17836
Assigned to	LM 55.09	LM 55.10	LM 55.11	LM 55.12

Table 68: Inverter alarms 9-12 parameter

DC Source alarm	13	14	15	16
Description ID	17837	17840	17843	17846
Description preconfig.	DC neg. under volt.	DC imbalance	Heat sink over temp.	Unintent. islanding
Alarm class ID	17838	17841	17844	17847
Self acknowledge ID	17839	17842	17845	17848
Assigned to	LM 55.13	LM 55. 14	LM 55.15	LM 55.16

Table 69: Inverter alarms 13-16 parameter

DC Source alarm	17	18	19	20
Description ID	17849	17852	17855	17858
Description preconfig.	AC Current imbalance	AC Voltage imbalance	AC Over voltage	AC Under voltage
Alarm class ID	17850	17853	17856	17859
Self acknowledge ID	17851	17854	17857	17860

DC Source alarm	17	18	19	20
Assigned to	LM 55.17	LM 55.18	LM 55.19	LM 55.20

Table 70: Inverter alarms 17-20 parameter

DC Source alarm	21	22	23	24
Description ID	17861	17864	17867	17870
Description preconfig.	Over voltage Ph. A	Over voltage Ph. B	Over voltage Ph. C	Over frequency
Alarm class ID	17862	17865	17868	17871
Self acknowledge ID	17863	17866	17869	17872
Assigned to	LM 55.21	LM 55.22	LM 55.23	LM 55.24

Table 71: Inverter alarms 21-24 parameter

DC Source alarm	25	26	27	28
Description ID	17873	17876	17879	Reserved
Description preconfig.	Under frequency	Int.communicat. CPUs	DC Voltage deviation	-
Alarm class ID	17874	17877	17880	Reserved
Self acknowledge ID	17875	17878	17881	Reserved
Assigned to	LM 55.25	LM 55.26	LM 55.27	LM 55.28

Table 72: Inverter alarms 25-28 parameter

DC Source alarm	29	30	31	32
Description ID	Reserved	Reserved	17891	17894
Description preconfig.	-	-	ADC Error	Parameter mismatch
Alarm class ID	Reserved	Reserved	17892	17895
Self acknowledge ID	Reserved	Reserved	17893	17896
Assigned to	LM 55.29	LM 55.30	LM 55.31	LM 55.32

Table 73: Inverter alarms 29-32 parameter

DC Source alarm	33	34	35	36
Description ID	17897	17900	17903	Reserved
Description preconfig.	Master fault	DC Supply overload	Ambient over temp.	-
Alarm class ID	17898	17901	17904	Reserved
Self acknowledge ID	17899	17902	17905	Reserved

Released

DC Source alarm	33	34	35	36
Assigned to	LM 55.33	LM 55.34	LM 55.35	LM 55.36

Table 74: Inverter alarms 33-36 parameter

DC Source alarm	37	38	39	40
Description ID	Reserved	Reserved	Reserved	Reserved
Description preconfig.	-	-	-	-
Alarm class ID	Reserved	Reserved	Reserved	Reserved
Self acknowledge ID	Reserved	Reserved	Reserved	Reserved
Assigned to	LM 55.37	LM 55.38	LM 55.39	LM 55.40

Table 75: Inverter alarms 37-40 parameter (reserved)

DC Source alarm	41	42	43	44
Description ID	17921	17924	Reserved	Reserved
Description preconfig.	Timeout with PLC	Internal timeout GTC	-	-
Alarm class ID	17922	17925	Reserved	Reserved
Self acknowledge ID	17923	17926	Reserved	Reserved
Assigned to	LM 55.41	LM 55.42	LM 55.43	LM 55.44

Table 76: Inverter alarms 41-44 parameter

DC Source alarm	45	46	47	48
Description ID	Reserved	Reserved	Reserved	Reserved
Description preconfig.	-	-	-	-
Alarm class ID	Reserved	Reserved	Reserved	Reserved
Self acknowledge ID	Reserved	Reserved	Reserved	Reserved
Assigned to	LM 55.45	LM 55.46	LM 55.47	LM 55.48

Table 77: Inverter alarms 45-48 parameter (reserved)

DC Source alarm	49	50	51	52
Description ID	17945	17948	17951	Reserved
Description preconfig.	AC Curr. imbal. GF	Slave not detected	Fan fault	-
Alarm class ID	17946	17949	17952	Reserved
Self acknowledge ID	17947	17950	17953	Reserved

DC Source alarm	49	50	51	52
Assigned to	LM 55.49	LM 55.50	LM 55.51	LM 55.52

Table 78: Inverter alarms 49-52 parameter (GF: Grid forming)

DC Source alarm	53	54	55	56
Description ID	Reserved	17960	Reserved	Reserved
Description preconfig.	-	Master not detected	-	-
Alarm class ID	Reserved	17961	Reserved	Reserved
Self acknowledge ID	Reserved	17962	Reserved	Reserved
Assigned to	LM 55.53	LM 55.54	LM 55.55	LM 55.56

Table 79: Inverter alarms 53-56 parameter

DC Source alarm	57	58	59	60
Description ID	Reserved	Reserved	Reserved	Reserved
Description preconfig.	-	-	-	-
Alarm class ID	Reserved	Reserved	Reserved	Reserved
Self acknowledge ID	Reserved	Reserved	Reserved	Reserved
Assigned to	LM 55.57	LM 55.58	LM 55.59	LM 55.60

Table 80: Inverter alarms 57-60 parameter (reserved)

DC Source alarm	61	62	63	64
Description ID	Reserved	Reserved	Reserved	Reserved
Description preconfig.	-	-	-	-
Alarm class ID	Reserved	Reserved	Reserved	Reserved
Self acknowledge ID	Reserved	Reserved	Reserved	Reserved
Assigned to	LM 55.61	LM 55.62	LM 55.63	LM 55.64

Table 81: Inverter alarms 61-64 parameter (reserved)

Released

4.5.2 Mains

4.5.2.1 General Mains Monitoring

ID	Parameter	CL	Setting range [Default]	Description
1771	**Mains voltage monitoring**	2		The unit can either monitor the wye voltages (phase-neutral) or the delta voltages (phase-phase). The monitoring of the wye voltage is above all necessary to avoid earth-faults in a compensated or isolated network resulting in the tripping of the voltage protection.
			[Phase - phase]	The phase-phase voltage will be monitored and all subsequent parameters concerning voltage monitoring "mains" are referred to this value (VL-L).
			Phase - neutral	The phase-neutral voltage will be monitored and all subsequent parameters concerning voltage monitoring "mains" are referred to this value (VL-N).
			All	The phase-phase **and** phase-neutral voltage will be monitored and all subsequent parameters concerning voltage monitoring "mains" are referred to this value (VL-L & VL-N). This setting is only effective if "Mains voltage measuring" (parameter 1853) is configured to "3Ph 4W".
				Notes WARNING: This parameter influences the protective functions. Please be aware that if "Mains voltage monitoring" (parameter 1771) is configured to "All" and the function "4.5.1.2.2 Generator Undervoltage (Level 1 & 2) ANSI# 27" is used, that this function only monitors "Phase - neutral".
2801	**Mains settling time**	2	0 to 9999 s **[20 s]**	To end the emergency operation, the monitored mains must be within the configured operating parameters without interruption for the minimum period of time set with this parameter without interruption. This parameter permits delaying the switching of the load from the generator to the mains.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The display indicates "Mains settling" during this time.

4.5.2.2 Blocking of Mains Protection

General notes

The operator can deactivate the mains monitoring features and the decoupling function. A dedicated LogicsManager is installed to disable all mains monitoring and the decoupling function.



Already latched alarms (self acknowledge = No) are not removed from the alarm list by this function.

Following functions are blocked:

- Mains decoupling
- Mains over frequency 1&2
- Mains under frequency 1&2
- Mains over voltage 1&2
- Mains under voltage 1&2
- Mains voltage increase (10 minutes average value)
- Mains Time-dependent Voltage (FRT)
- Mains Q(V) Monitoring
- Mains phase shift
- Mains df/dt

ID	Parameter	CL	Setting range [Default]	Description
15159	**Disable mns.mon.**	2	Determined by LogicsManager 87.72 **[(0 & 1) & 1]** **t_{ON} = 0.00; t_{OFF} = 0.00]** = 11461	Switch to disable • all mains monitoring functions and • the mains decoupling function.

Released

4.5.2.3 Mains Operating Ranges

4.5.2.3.1 General Mains Operating Range

General notes

The mains operating voltage/frequency parameters are used to trigger mains failure conditions and activate an emergency run.

The mains values must be within this ranges to synchronize the mains circuit breaker. It is recommended to configure the operating limits within the monitoring limits.

Example

If the mains rated voltage is 400 V, the upper voltage limit is 110 % (of the mains rated voltage, i.e. 440 V), and the hysteresis for the upper voltage limit is 5 % (of the mains rated voltage, i.e. 20 V), the mains voltage will be considered as being out of the operating limits as soon as it exceeds 440 V and will be considered as being within the operating limits again as soon as it falls below 420 V (440 V – 20 V).

If the rated system frequency is 50 Hz, the lower frequency limit is 90 % (of the rated system frequency, i.e. 45 Hz), and the hysteresis for the lower frequency limit is 5 % (of the rated system frequency, i.e. 2.5 Hz), the mains frequency will be considered as being out of the operating limits as soon as it falls below 45 Hz and will be considered as being within the operating limits again as soon as it exceeds 47.5 Hz (45 Hz + 2.5 Hz).

ID	Parameter	CL	Setting range [Default]	Description
5810	**Upper voltage limit**	2	100 to 150% **[110%]**	The maximum permissible positive deviation of the mains voltage from the mains rated voltage (parameter 1768) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.09).
5814	**Hysteresis upper voltage limit**	2	0 to 50% **[2%]**	If the mains voltage has exceeded the limit configured in parameter 5810, the voltage must fall below the limit and the value configured here, to be considered as being within the operating limits again.
5811	**Lower voltage limit**	2	50 to 100% **[90%]**	The maximum permissible negative deviation of the mains voltage from the mains rated voltage (parameter 1768) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.09).

ID	Parameter	CL	Setting range [Default]	Description
5815	**Hysteresis lower voltage limit**	2	0 to 50% **[2%]**	If the mains voltage has fallen below the limit configured in parameter ⮡ 5811, the voltage must exceed the limit and the value configured here, to be considered as being within the operating limits again.
5812	**Upper frequency limit**	2	66.7[1] to 150.0% **[110.0%]**	The maximum permissible positive deviation of the mains frequency from the rated system frequency (parameter ⮡ 1750) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.10). **Notes** [1] The lowest measurable frequency is 40 Hz. 66.7 % of 60 Hz is 40 Hz. Equivalent for 50 Hz don't go below 80 %.
5816	**Hyst. upper frequency limit**	2	0.0 to 50.0% **[0.5%]**	If the mains frequency has exceeded the limit configured in parameter ⮡ 5812, the frequency must fall below the limit and the value configured here, to be considered as being within the operating limits again.
5813	**Lower frequency limit**	2	66.7[1] to 100.0% **[90.0%]**	The maximum permissible negative deviation of the mains frequency from the rated system frequency (parameter ⮡ 1750) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the LogicsManager (02.10). **Notes** [1] The lowest measurable frequency is 40 Hz. 66.7 % of 60 Hz is 40 Hz. Equivalent for 50 Hz don't go below 80 %.
5817	**Hyst. lower frequency limit**	2	0.0 to 50.0% **[0.5%]**	If the mains frequency has exceeded the limit configured in parameter ⮡ 5813, the frequency must raise above the limit and the value configured here, to be considered as being within the operating limits again.

Released

4.5.2.3.2 Reconnecting Mains Operating Range

Introduction

After mains decoupling from the power generation device, with under-/over frequency or under-/over voltage, the automatic reconnection to the grid after the mains settling time is only possible, if the mains is within the following operation ranges.

The operation ranges for mains reconnecting uses the voltages according to the configured mains voltage monitoring (ID 1771 Mains voltage monitoring, phase-phase/ phase-neutral/All). Only if all considered voltages are back in band the synchronization to mains will be executed.

ID	Parameter	CL	Setting range **[Default]**	Description
5818	**Upper voltage limit**	2	100 to 150% **[105%]**	The maximum permissible positive deviation of the mains voltage from the mains rated voltage after mains decoupling.
5819	**Lower voltage limit**	2	50 to 100% **[95%]**	The maximum permissible negative deviation of the mains voltage from the mains rated voltage after mains decoupling.
5821	**Upper frequency limit**	2	66.7 to 150.0% **[100.2%]**	The maximum permissible positive deviation of the mains voltage from the mains rated voltage after mains decoupling.
5822	**Lower frequency limit**	2	66.7 to 100.0% **[99.8%]**	The maximum permissible negative deviation of the mains voltage from the mains rated voltage after mains decoupling.

4.5.2.4 Mains Decoupling

General notes

The mains decoupling function is intended for use in a mains parallel operation and monitors a series of subordinate mains protection thresholds. If a threshold is exceeded, the easY-I initiates a breaker opening and separates the generator(s) from the mains at the defined breaker.

The following thresholds are monitored:

- Overfrequency level 2 (↳ “4.5.1.3.1 Generator Overfrequency (Level 1 & 2) ANSI# 81O”)
- Underfrequency level 2 (↳ “4.5.2.6 Mains Underfrequency (Level 1 & 2) ANSI# 81U”)
- Overvoltage level 2 (↳ “4.5.1.2.1 Generator Overvoltage (Level 1 & 2) ANSI# 59”)
- Undervoltage level 2 (↳ “4.5.1.2.2 Generator Undervoltage (Level 1 & 2) ANSI# 27”)
- Mains phase shift / df/dt (ROCOF) (↳ “4.5.2.12 Change Of Frequency”)

If one of these protective functions is triggered, the display indicates "Mains decoupling" (the logical command variable "07.25" will be enabled) and the active level 2 alarm.



The mains decoupling function is optimized on the both relay outputs "GCB open" and "MCB open". In case of using a free relay output in conjunction with the command variable 07.25 an additional delay time of up to 20 ms is to consider.

Managing Breaker Open alarm

When the mains decoupling function detects a breaker open failure, the according breaker alarm will be triggered as long the monitoring function is activated. Additionally in cases where the decoupling mode has to change over to the other breaker, (GCB®MCB, MCB®GCB), the alarm text “Decoupling GCB«MCB“ is indicated. The breaker open alarm already occurs after the mains decoupling feedback delay (refer to ID 3113).

ID	Parameter	CL	Setting range **[Default]**	Description
12922	**Ext. mns.decoupl.** (External mains decoupling)	2	Determined by LogicsManager 86.27 **[(0 & 1) & 1]**	The unit may be configured to decouple from the mains when commanded by an external device. Once the conditions of the LogicsManager have been fulfilled, an external mains failure is issued.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
12942	**Enable mains decoupl.** (Enable mains decoupling)	2	Determined by LogicsManager 87.31 **[(02.02 & 1) & 1]**	Once the conditions of the LogicsManager have been fulfilled, the mains decoupling function is enabled.
				Notes For information on the LogicsManager and its default settings see “9.4.1 LogicsManager Overview”.
3110	**Mains decoupling**	2	Off	Mains decoupling monitoring is disabled.
			[GCB]	Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the GCB will be opened. If the unit is operated in parallel with the mains and the MCB opens, the GCB will be closed again.
			GCB->MCB	Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the GCB will be opened. If the reply "GCB open" is

Released

ID	Parameter	CL	Setting range [Default]	Description
				not present within the delay configured in parameter 3113, the MCB will be opened as well.
			MCB	Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the MCB will be opened.
			MCB->GCB	Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the MCB will be opened. If the reply "MCB open" is not present within the delay configured in parameter 3113, the GCB will be opened as well.
			GCB/MCB by LM	Mains decoupling is carried out. If one of the subordinate monitoring functions is triggered, a breaker will be opened, which is determined by the LogicsManager equation "15160 LM mains decoupling MCB". If it's status is TRUE, the MCB will be opened. If it's status is FALSE, the GCB will be opened.
15160	**Mains decoupl.MCB**	2	Determined by LogicsManager 87.73 **[(0 & 1) & 1]**	**FALSE**: If the decoupling is triggered, the GCB will be opened. **TRUE**: If the decoupling is triggered, the MCB will be opened. Only available in Mains decoupling mode "GCB/MCB by LM".
3113	**Mns. decoupling feedback delay**	2	0.2 to 99.9 s **[0.4 s]**	If the open signal from the respective circuit breaker cannot be detected within the time configured here, the mains decoupling function performs the action as configured in parameter 3110.
3111	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
3112	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected.

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
8848	**Mns.decoupling by overfreq.1**	2		The mains overvoltage 1 alarm can be linked to the mains decoupling function, if required.
			On	The mains overvoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains overvoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.
8845	**Mns.decoupling by overvolt.1**	2		The mains overvoltage 1 alarm can be linked to the mains decoupling function, if required.
			On	The mains overvoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains overvoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.
3296	**Mains decoupling by QV**	2	On	The QV monitoring function is linked to the mains decoupling function with all its consequences and is assigned to "Delay step 1" (parameter 3283).
			[Off]	The QV monitoring function is ignored in the mains decoupling function.
4989	**Mns.decoupl.by time-dep.volt.**	2	On	Time-dependent voltage monitoring does cause a decoupling.
			[Off]	Time-dependent voltage monitoring does not cause a decoupling.
8847	**Mns.decoupling by underfreq.1**	2		The mains undervoltage 1 alarm can be linked to the mains decoupling function, if required.

Released

ID	Parameter	CL	Setting range [Default]	Description
			On	The mains undervoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains undervoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.
8844	**Mns.decoupling by undervolt.1**	2		The mains undervoltage 1 alarm can be linked to the mains decoupling function, if required.
			On	The mains undervoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains undervoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.
8808	**Mains decoupling volt.incr.**	2	On	Voltage increase monitoring does cause a decoupling.
			[Off]	Voltage increase monitoring does not cause a decoupling.
1733	**Test**	2	On	Activates a test mode which allows a comfortable mains decoupling test.
			[Off]	Deactivates the test mode. Mains decoupling is working normal.
				Notes When the test mode is activated a mains decoupling according to the parametrization is triggered, once a mains failure is detected. Thereby the states of things of the breaker reply are irrelevant. A retriggering of the mains decoupling can be performed after 0.5 s + "Mns. decoupling feedback delay" (parameter 3113) without leaving the test mode. As long as the codelevel is ≥ 2 it is possible to switch-off the test mode manually. The test mode switches off automatically after one hour since having turned on or if there is any "Prepare Inverter" state.

Released

4.5.2.4.1 Setup Grid Code AR-–4105

General notes

The German Grid Code VDE-AR-N 4105 instructs the handling of electrical energy sources running parallel to the low voltage grid. This rule has an impact with some items on the genset control. A more detailed description relating to that VDE rule is done through the separated application note “easYgen-3000_VDE-AR-N 4105”.

Here are some functions which have to be covered according to the 4105 rule:

- The mains decoupling is executed through following monitors:
  - Mains under voltage V<
  - Mains over voltage V>
  - Mains under frequency f<
  - Mains over frequency f>
- Recognizing isolation operation (other decoupling argument)
  - Phase shift OR
  - df/dt
- Button for Testing the Decoupling Facility
- Single-failure-security including self-monitoring

The VDE-AR-N 4105 demands a Single-failure-proof of the mains decoupling function. That means that the decoupling of the generator from the mains must be always ensured, even if a single element in the system fails. So the system must contain two circuit breakers with two independent monitoring functions acting individually on each breaker. From the perspective of the network provider that rule pursuits the mains protection but not the availability of the electrical source, so in case of doubt the generator should be decoupled from mains.

Woodward solves this requirement with the use of a minimum of two units acting as a system (for example two easY-Is or an easY-I and an LS-5 with 4105 functionality). The system allows incorporating more units, so that the availability of the generator can still be increased.

The demanded two breakers in series are realized through the use of a GCB and a MCB. If only a GCB is available, the customer must install another circuit breaker in addition.

An important item of the VDE-AR-N 4105 is the Single-Failure-Diagnostic, at which a minimum of two units exchange their measurement data and settings over communication interface (usually CANbus). This allows determining, if the Single-Failure-Proof is lost and the unit can issue an alarm.



Using Ethernet?

To us Ethernet communication interface for Single-failure-proof it is mandatory that load-share is using Ethernet, too. For interface selection refer to “4.4.4.3.5 Load-Share Interface”.

Released

Enable 4105 monitoring

Monitoring according VDE AR-N 4105 per default is [Off]. It can be enabled via ToolKit [Configure monitoring / Mains / Other monitoring / Setup VDE-AR-N 4105] or via Menu (see screen Fig. 180).

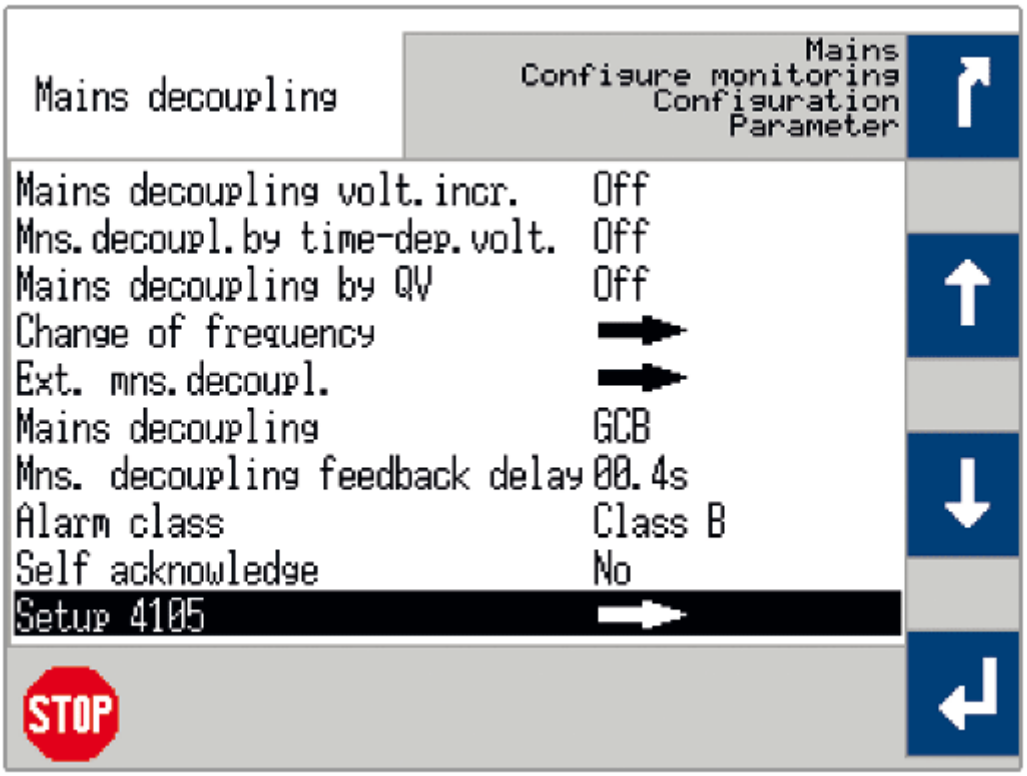


Fig. 180: Select mains decoupling 4105

Monitoring according AR--4105

ID	Parameter	CL	Setting range [Default]	Description
3297	**Monitoring**	2	**[Off]**	The diagnostic function is disabled, no related monitoring is executed.
			CAN #1, CAN #3, Ethernet	If the diagnostic function is enabled, the related messages can be received via CAN 1, CAN 3 or Ethernet. **Notes** The following alarms can be triggered: • Missing member 4105 • Para. alignment 4105 • Meas.difference 4105

ID	Parameter	CL	Setting range [Default]	Description
3298	**Monitoring mode**	2	Single	The diagnostic function is related to one partner unit.
			[Multi]	The diagnostic function is executed with according partner units.
3299	**Device number partner**	2	**[01]** 01 to 64	The device ID of the expected partner unit. This configuration is only valid, if the mode 'single' is enabled.
1828	**Voltage difference**	2	**[4.0%]** 2.0 to 9.9%	This is the voltage measurement tolerance for all participating 4105 partners relating to the mains rated voltage measurement (refer to ID 1768). This is a part within the 4105 diagnostic.
1836	**Frequency difference**	2	**[1.0%]** 0.5 to 9.9%	This is the frequency measurement tolerance for all participating 4105 partners relating to the system rated frequency measurement. (refer to ID 1750). This is a part within the 4105 diagnostic.

Monitoring Missing Member AR--4105

ID	Parameter	CL	Setting range [Default]	Description
5125	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class C]**	The alarm class specifies what action should be taken in case of missing communication with devices(s) being member(s) of the AR--4105 system.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
5126	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Monitoring Parameter Alignment VDE AR--4105

The following parameters are compared for monitoring its alignment:

Released

Control	Parameter ID	Parameter
Mains Decoupling	3110	Mains Decoupling
Overfrequency level 2	2856	Monitoring
	2860	Limit
	2861	Delay
Underfrequency level 2	2906	Monitoring
	2910	Limit
	2911	Delay
Overvoltage level 2	2956	Monitoring
	2960	Limit
	2961	Delay
Undervoltage level 2	3006	Monitoring
	3010	Limit
	3011	Delay
Mains voltage increase	8806	Monitoring
	8808	Mains decoupling volt.incr.
	8807	Limit
Change of frequency	3058	Change of frequency
	3054	Phase shift: Limit 1-phase
	3055	Phase shift: Limit 3-phase
	3104	Limit (df/dt)
	3105	Delay (df/dt)
Disable mains monitoring	15159	Set TRUE
		Notes In applications with LS-5, this LogicsManager must be permanent FALSE. Otherwise the LS-5 parameter alignment alarm will remain.

Table 82: VDE 4105 alignment: Supervised parameters

ID	Parameter	CL	Setting range **[Default]**	Description
5131	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class C]**	The alarm class specifies what action should be taken if the parameter alignment between the communication devices(s) of the AR-–4105 system is active.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”.

Released

ID	Parameter	CL	Setting range [Default]	Description
5132	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Table 83: VDE 4105 alignment: Monitoring

Monitoring Measurement Difference AR-–4105

ID	Parameter	CL	Setting range [Default]	Description
5137	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class C]**	The alarm class specifies what action should be taken if the measurement difference (frequency, ↳ 1836 or voltage, ↳ 1828) between the communication devices(s) of the AR-–4105 system differ more than allowed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”.
5138	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longerdetected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.2.4.2 Setup Grid Code BDEW (medium voltage guideline)

The BDEW Grid Code instructs the handling of electrical energy sources running parallel to the medium voltage grid. This rule has an impact with some items on the genset control. A more detailed description relating to that BDEW technical guideline can be

Released

ordered directly by the BDEW Germany. With easY-I-3000... genset control series functions which have to be covered according to this BDEW rule are supported.

The mains decoupling is executed through following monitors:

- Mains under voltage V<
- Mains under voltage V<<
- Mains over voltage V>
- Mains over voltage V>>
- Mains under frequency f<
- Mains over frequency f>
- Q(V) Monitoring
- Mains Time-Dependent Voltage (FRT)

The Change of frequency monitors (vector/phase shift or df/dt) is not directly required by BDEW. These monitors are depending on the according network providers.

Other functions related to the BDEW guideline:

- Frequency Depending Derating Of Power. Refer to “4.4.4.5.4 Active Power – Frequency Function P(f)” for details.
- Reactive Power Control, alternatively:
  - Power Factor Control. Refer to “4.4.4.2 Power Factor Control” for details.
  - Power Factor Characteristic. Refer to “4.4.4.2 Power Factor Control” for details.

4.5.2.5 Mains Overfrequency (Level 1 & 2) ANSI# 81O

General notes

There are two overfrequency alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the frequency is accomplished in two steps.

If this protective function is triggered, the display indicates "Mains overfreq. 1" or "Mains overfreq. 2" and the logical command variable "07.06" or "07.07" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2850	**Monitoring**	2	**[On]**	Overfrequency monitoring is carried out according to the

ID	Parameter	CL	Setting range [Default]	Description
2856				following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: limit 1 < Level 2 limit).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2854 2860	**Limit**	2	100.0 to 140.0% 2854: **[100.4%]** 2860: **[102.0%]** (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the System rated frequency (parameter 1750).
2965 3016	**Hysteresis**	2	0.00 to 10.00% 2965: **[0.10%]** 3016: **[0.10%]**	If the mains frequency has exceeded the configured limit , the frequency must fall below the limit and the value configured here, to reset the alarm.
				Notes This value refers to the System rated frequency (parameter 1750).
2855 2861	**Delay**	2	0.00 to 99.99 s **[0.06 s]**	If the monitored mains frequency value exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored mains frequency falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2851 2857	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2851: **[Class A]** 2857: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
2852 2858	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2853 2859	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.6 Mains Underfrequency (Level 1 & 2) ANSI# 81U

General notes

There are two underfrequency alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the frequency is performed in two steps.

If this protective function is triggered, the display indicates "Mains underfreq. 1" or "Mains underfreq. 2" and the logical command variable "07.08" or "07.09" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2900 2906	**Monitoring**	2	**[On]**	Underfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).
			Off	Monitoring is disabled for limit 1 and/or Level 2 limit.

Released

ID	Parameter	CL	Setting range [Default]	Description
2904 2910	**Limit**	2	50.0 to 140.0% 2904: **[99.6%]** 2910: **[98.0%]** (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the System rated frequency (parameter 1750).
2998 3017	**Hysteresis**	2	0.00 to 10.00% 2998: **[0.10%]** 3017: **[0.10%]**	If the mains frequency has fallen below the configured limit, the frequency must exceed the limit and the value configured here, to reset the alarm.
				Notes This value refers to the System rated frequency (parameter 1750). .
2905 2911	**Delay**	2	0.00 to 99.99 s 2905: **[1.50 s]** 2911: **[0.06 s]**	If the monitored mains frequency value falls below the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored mains frequency exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.
2901 2907	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2901: **[Class A]** 2907: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
2902 2908	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External

Released

ID	Parameter	CL	Setting range [Default]	Description
				acknowledgment" (via a discrete input or via an interface).
2903 2909	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.7 Mains Overvoltage (Level 1 & 2) ANSI# 59

General notes

Voltage is monitored depending on parameter "Mains voltage measuring" (parameter 1853). There are two overvoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.



If this protective function is triggered, the display indicates "Mains overvoltage 1" or "Mains overvoltage 2" and the logical command variable "07.10" or "07.11" will be enabled.

Refer to "9.2.1 Triggering Characteristics" for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
2950 2956	**Monitoring**	2	**[On]**	Overvoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: limit 1 < Level 2 limit).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2954 2960	**Limit**	2	50.0 to 150.0% 2954: **[108.0%]** 2960: **[110.0%]**	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the

Released

ID	Parameter	CL	Setting range [Default]	Description
			(Reset Delay: 80 ms)	action specified by the alarm class is initiated. **Notes** This value refers to the Mains rated voltage (parameter 1768).
2964 3014	**Hysteresis**	2	00.00 to 20.00 % 2964: **[1.50 %]** 3014: **[1.50 %]**	If the mains voltage has exceeded the configured limit , the voltage must fall below the limit and the value configured here, to reset the alarm. **Notes** This value refers to the Mains rated voltage (parameter 1768).
2955 2961	**Delay**	2	0.00 to 999.00 s 2955: **[1.50 s]** 2961: **[0.06 s]**	If the monitored mains voltage exceeds the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored mains voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2951 2957	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 2951: **[Class A]** 2957: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
2952 2958	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2953 2959	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".

Released

ID	Parameter	CL	Setting range [Default]	Description
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
8845	**Mns.decoupling by overvolt.1**	2		The mains overvoltage 1 alarm can be linked to the mains decoupling function, if required.
			On	The mains overvoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains overvoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.

4.5.2.8 Mains Undervoltage (Level 1 & 2) ANSI# 27

General notes

Voltage is monitored depending on parameter "Mains voltage measuring" (parameter 1853). There are two undervoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.



If this protective function is triggered, the display indicates "Mains undervoltage 1" or "Mains undervoltage 2" and the logical command variable "07.12" or "07.13" will be enabled.

Refer “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
3000 3006	**Monitoring**	2	**[On]**	Undervoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.

ID	Parameter	CL	Setting range [Default]	Description
3004 3010	**Limit**	2	10.0 to 150.0% 3004: **[92.0%]** 3010: **[90.0%]** (Reset Delay: 80 ms)	The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes** This value refers to the "Mains rated voltage" (parameter 1768). Minimum value follows BDEW requirement.
2997 3015	**Hysteresis**	2	00.00 to 20.00% 2997: **[1.50%]** 3015: **[1.50%]**	If the mains voltage has fallen below the configured limit, the voltage must exceed the limit and the value configured here, to reset the alarm. **Notes** This value refers to the "Mains rated voltage" (parameter 1768).
3005 3011	**Delay**	1	0.00 to 99.99 s 3005: **[1.50 s]** 3011: **[0.06 s]**	If the monitored mains voltage falls below the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the monitored mains voltage exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.
3001 3007	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 3001: **[Class A]** 3007: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
3002 3008	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External


Released

ID	Parameter	CL	Setting range [Default]	Description
				acknowledgment" (via a discrete input or via an interface).
3003 3009	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
8844	**Mns.decoupling by undervolt.1**	2		The mains undervoltage 1 alarm can be linked to the mains decoupling function, if required.
			On	The mains undervoltage 1 trip is linked to the mains decoupling function with all its consequences.
			[Off]	The mains undervoltage 1 trip is ignored in the mains decoupling function.
				Notes It is recommended to configure the operating limits (parameter 5810 to 5817) within the monitoring limits.

4.5.2.9 Mains Voltage Increase

General notes

Voltage is monitored depending on parameter "Monitoring" (parameter 8806). This function allows the monitoring of the voltage quality over a longer time period. It is realized as a 10 minute moving average. The function is only active, if mains is within the operating range. If "Mains voltage measuring" (parameter 1853) is configured to a three-phase measurement, the slow voltage increase alarm is monitoring the individual three-phase voltages of the mains according to parameter “AND characteristics” (parameter 8849). The parameter "Mains decoupling volt. incr." (parameter 8808) determines if a voltage increase shall trigger a mains decoupling or not.



If this protective function is triggered, the display indicates "Mains volt. increase". The alarm can be incorporated into the mains decoupling function.



The average is set to "Mains rated voltage" (parameter ↳ 1768) if:

- Frequency is not in the operating range OR
- Monitoring (parameter ↳ 8806) is "Off" OR
- Monitoring is "Release delayed mon." (parameter ↳ 8833) OR
- Monitoring is tripped AND the measured voltage is again in the operating range

Back synchronization is only possible if:

- The 10 minute average value is smaller than the defined limit AND
- The actual measured value is inside the operating range AND
- The mains settling time is over

ID	Parameter	CL	Setting range [Default]	Description
8806	**Monitoring**	2	On	Voltage increase monitoring is carried out according to the following parameters.
			[Off]	No monitoring is carried out.
8807	**Limit**	1	100 to 150% **[110%]**	The percentage voltage value that is to be monitored is defined here. If the average voltage over 10 minutes is higher, the action specified by the alarm class is initiated.
				Notes This value refers to the "Mains rated voltage" (parameter ↳ 1768).
8849	**AND characteristics**	2	On	If the 10 minute voltage averages of **all** phases exceed the limit, the monitoring is tripping.
			[Off]	If the 10 minute voltage average of **at least one** phase exceeds the limit, the monitoring is tripping.
8831	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
8832	**Self acknowledge**	4	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
8833	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
8808	**Mains decoupling volt.incr.**	2	On	Voltage increase monitoring does cause a decoupling.
			[Off]	Voltage increase monitoring does not cause a decoupling.
8850	**Volt.incr.average**	0	—	This visualization value shows the current 10 minute average voltage. **Notes** If 8849 is configured to AND, this value is the minimum value otherwise the maximum value of the averages. If "Mains voltage monitoring" (parameter 1771) is configured to ALL, this value is derived from the ”Phase - Phase“ values.

4.5.2.10 Mains Time-Dependent Voltage

General notes



Two Time Dependent Mains Voltage Monitors Available

Both monitors behave similar but each with a separate Fault-Ride-Through (FRT) curve.

Example of a Time Dependent Mains Voltage Curve

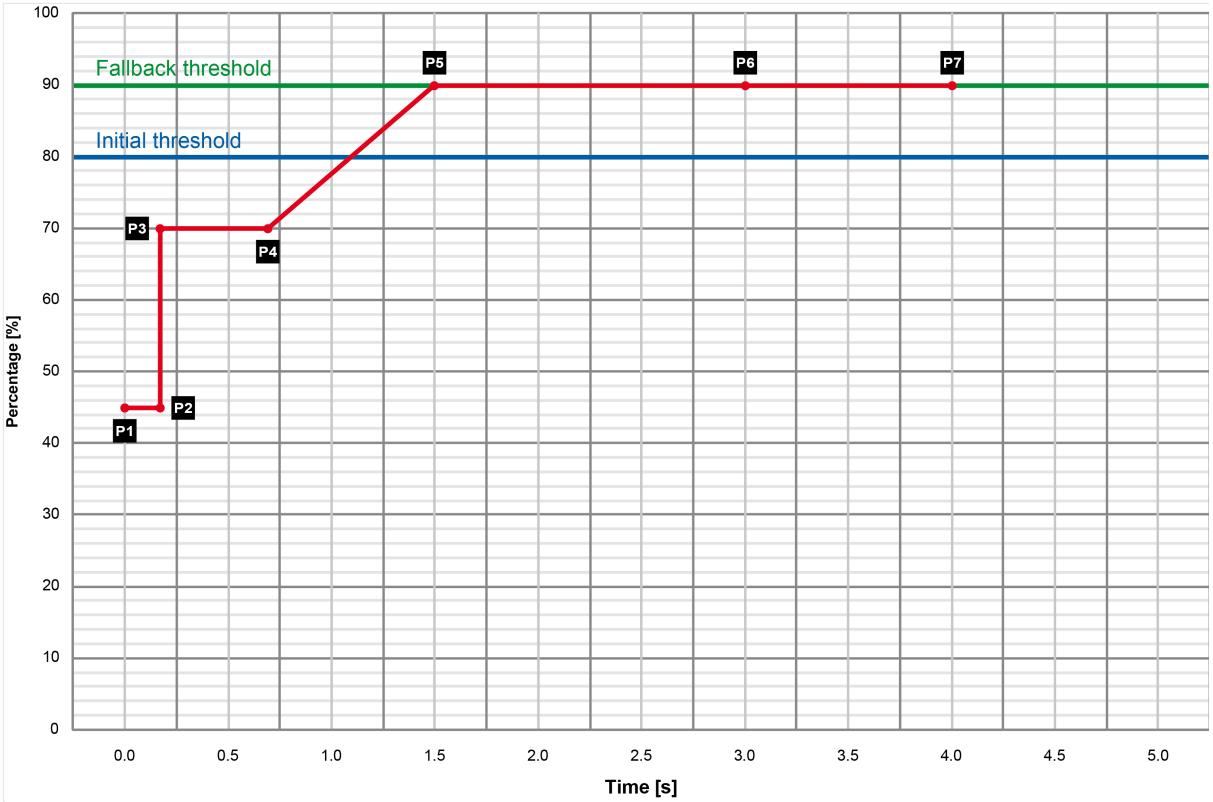


Fig. 181: Time-dependent voltage monitoring curve

P1	0.00 s → 45.0%
P2	0.15 s → 45.0%
P3	0.15 s → 70.0%
P4	0.70 s → 70.0%
P5	1.50 s → 90.0%
P6	3.00 s → 90.0%
P7	4.00 s → 90.0%
Fallback threshold	90.0%
Initial threshold	80.0%
Fallback time	1.00 s

General settings for Mains decoupling and Monitoring Voltage 1 - 3

Find parameters ...

Find parameters in two menus:

- [Configuration / Configure monitoring / Mains decoupling / General mains decoupling]
- [Configuration / Configure monitoring / Mains / Frequency / Voltage / Mains time-dependent voltage]

Released

ID	Parameter	CL	Setting range [Default]	Description
4989	**Mns.decoupl.by time-dep.volt.**	2		Mains decoupling by FRT monitoring.
			On	Time-dependent voltage monitoring does cause a decoupling.
			[Off]	Time-dependent voltage monitoring does not cause a decoupling.
4951	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
4959	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Table 84: Time Dependent Voltage Monitoring settings

4.5.2.10.1 Time Dependent Mains Voltage Monitor 1

This monitoring function is supporting a dynamic stabilization of mains. To maintain the VDE-AR-N 4105 and VDE-AR-N 4110 grid code (2019) up to 3 FRT (Fault-Ride-Through) curves can be defined.

The voltage is monitored depending on parameter "Mains voltage measuring" (parameter ↳ 1853).

Furthermore it can be configured either as undervoltage or overvoltage monitoring (»underrun« or »overrun« selected with parameter "Monitoring at ↳ 4953). If the measured voltage of at least N phase (N is defined with parameter 4960) falls below/ exceeds the configured "Initial threshold" (parameter ↳ 4970), the time-dependent voltage monitoring sequence starts and the voltage threshold will change in time according to the configured threshold curve points (see ↳ Fig. 181).

If the measured voltage falls below/exceeds this curve, the monitoring function triggers and LogicsManager command variable "07.28 Time-dep. voltage 1" becomes TRUE. The mains decoupling function is incorporated, if configured. If the measured voltage falls below/exceeds the configured "Fallback threshold" (parameter ↳ 4978) for at least the configured "Fallback time" (parameter ↳ 4968), the time-dependent voltage monitoring sequence will be reset.

The threshold curve results from seven configurable points and a linear interpolation between these points. ↳ Fig. 181 shows an example of a Low-Voltage-Ride-Through (LVRT) curve for time-dependent voltage monitoring. The curve is configured by default according to a typical grid code requirement.

Rules for configuration

The time points should always have an ascending order. The fallback threshold (parameter ↳ 4978) should always be configured to a value higher/lower than the initial threshold (parameter ↳ 4970).

The monitoring on undervoltage over the undervoltage curve (or overvoltage or overvoltage curve) is always active, if the »Monitoring« (parameter ↳ 4950) is enabled. A mains decoupling is only executed, if the generator runs parallel to mains.

The monitor behaves according to the configured »AND characteristic« (parameter 4960). When the AND characteristic is configured to "On", all 3 phases are taken into account. Only if **all** phases are below/above the configurable curve, the monitor will trip. When the AND characteristic is configured to "Off", the single phases are taken into account. Even if only one phase runs below/above the configurable curve, the monitor will trip.

The monitoring starts with passing the initial threshold. The tripping time is determined by the voltage deviation and its according curve location. The monitoring is disabled, if the voltage value (values) have crossed the fallback threshold. The monitor trips the LogicsManager command variable 10877 "07.28 Time-dep. voltage 1".

FRT Monitoring Characteristic

The monitoring type influences the FRT:

Parameter "Mains voltage monitoring" ↳ 1771 determines, if the Ph-Ph, Ph-N, or all measurements are used.

If type "**All**" is available and configured, and **3Ph4W** is configured, "Time dependent Voltage Monitoring" is calculated with phase-phase and phase-neutral voltages. If **All and 1Ph3W** is configured, only PH-N values are used.

The mains time-dependent monitoring works with configurable FRT characteristics. In conjunction with mains voltage measuring (ID1853) and mains voltage monitoring (see section before) different monitoring procedures take place.

Bloking ROCOF Monitor During Dynamic Mains Stabilization

Due the higher prioritization of the Dynamic Mains Stabilization (FRT) as the ROCOF monitor, the ROCOF monitor must be disabled for longest 5 seconds when any FRT curve was initiated. Therefore each FRT (=Time-dependent voltage monitoring) function provides a flag. The flag is set, if the particular initiation threshold is passed. The flag is reset if all monitored voltages are back in band (parameter ↳ 4978).

The 3 flags are OR’ed and results in one “FRT initiated” flag. This flag will be kept TRUE for maximal 5 seconds. Finally this ROCOF blocking flag will be inverted and entered as LM Command Variable “07.34 FRT ROCOF enable”.

Released

Time-dep. voltage 1

ID	Parameter	CL	Setting range [Default]	Description
4950	**Monitoring**	2	On	Time-dependent voltage monitoring is carried out according to the following parameters.
			[Off]	No monitoring is carried out.
4960	**Characteristic**	2		The mains time-dependent monitoring works with different characteristics.
			[1-phase]	Uses the lowest/highest phase for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least one phase L-L or at least one phases L-N is out of range and will be reset if all phases of L-L and all phases of L-N are in range.
			2-phase	Uses the two lowest/highest phases for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least two phases L-L or at least two phases L-N are out of range and will be reset if at least two phases of L-L and at least two phases of L-N are in range.
			3-phase	Uses all three phases (symmetric condition) for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if all phases L-L or all phases L-N are out of range and will be reset if at least one phase of L-L and at least one phase of L-N is in range.
4953	**Monitoring at**	2		Selects whether the system shall do over- or undervoltage monitoring.
			[Underrun]	The undervoltage monitoring is carried out (The monitoring function triggers if the measured voltage is below the curve).
			Overrun	The overvoltage monitoring is carried out (The monitoring function triggers if the measured voltage exceeds the curve).
4970	**Init threshold**	2	0.0 to 150.0% **[80.0%]**	The time-dependent voltage monitoring initial threshold is configured here. If the measured voltage falls below/exceeds this threshold, the monitoring sequence starts and the voltage threshold will change in time according to the configured threshold curve points. If the measured voltage falls below/exceeds this curve, the

ID	Parameter	CL	Setting range [Default]	Description
				monitoring function triggers and the configured relay will energize.
4978	**Fallback threshold**	2	0.0 to 150.0% **[90.0%]**	The time-dependent voltage monitoring fallback voltage is configured here. If the measured voltage falls below/exceeds the voltage configured here for at least the configured "Fallback time", the monitoring sequence will be reset.
				Notes This parameter should always be configured to a value higher/lower than the "Init threshold" (parameter ↳ 4970) for proper operation. The parameter "Point 7 voltage" (parameter ↳ 4977) is used as fallback threshold if it is configured to a value higher/lower than the parameter "Fallback threshold" (parameter ↳ 4978).
4968	**Fallback time**	2	0.00 to 320.00 s **[1.00 s]**	The time-dependent voltage monitoring fallback time is configured here. If the measured voltage falls below/exceeds the configured "Fallback threshold" (parameter ↳ 4978) for at least the time configured here, the monitoring sequence will be reset.
4971 4972 4973 4974 4975 4976 4977	**Point 1 voltage** [x = 1 to 7]	2	0.0 to 150.0% 4971: **[45.0%]** 4972: **[45.0%]** 4973: **[70.0%]** 4974: **[70.0%]** 4975: **[90.0%]** 4976: **[90.0%]** 4977: **[90.0%]**	The voltage values of time-dependent voltage monitoring voltage points are configured here.
				Notes Please avoid a setting between 0.1% and 5.0%.
4961 4962 4963 4964 4965 4966	**Point 1 time** [x = 1 to 7]	2	0.00 to 320.00 s 4961: **[0.00 s]** 4962: **[0.15 s]** 4963: **[0.15 s]** 4964: **[0.70 s]** 4965: **[1.50 s]** 4966: **[3.00 s]**	The time values of time-dependent voltage monitoring time points are configured here.

Released

ID	Parameter	CL	Setting range [Default]	Description
4967			4967: **[4.00 s]**	

4.5.2.10.2 Time Dependent Mains Voltage Monitor 2

The Time dependent voltage monitoring 2 is an additional independent FRT monitoring, which behaves like the Time dependent voltage monitoring 1 described in the previous chapter.

It serves a LogicsManager command variable 11750 "07.31 Time-dep. voltage 2" to trip a relay or to incorporate the monitoring into the mains decoupling feature of the device.

The alarm class and the self-acknowledge feature is taken from the original time dependent voltage monitoring (see ↳ “General settings for Mains decoupling and Monitoring Voltage 1 - 3”.

Time-dep. voltage 2

ID	Parameter	CL	Setting range [Default]	Description
4954	**Monitoring**	2	On	Time-dependent voltage 2 monitoring is carried out according to the following parameters.
			[Off]	No monitoring is carried out.
				Notes. It is an additional independent FRT monitoring. It serves a LogicsManager command variable to trip a relay or to incorporate the monitoring into the mains decoupling function of the device. The alarm class and the self-acknowledge setting is shared with the other time dependent voltage monitoring. (Id 4951 and Id 4959)
4957	**Monitoring at**	2		Selects whether the system shall do over- or undervoltage monitoring.
			[Underrun]	The undervoltage monitoring is carried out (The monitoring function triggers if the measured voltage is below the curve).
			Overrun	The overvoltage monitoring is carried out (The monitoring function triggers if the measured voltage exceeds the curve).
4969	**Characteristic**	2		The mains time-dependent monitoring works with different characteristics.
			[1-phase]	Uses the lowest/highest phase for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least one phase L-L or at least one phases L-N is

ID	Parameter	CL	Setting range [Default]	Description
				out of range and will be reset if all phases of L-L and all phases of L-N are in range.
			2-phase	Uses the two lowest/highest phases for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least two phases L-L or at least two phases L-N are out of range and will be reset if at least two phases of L-L and at least two phases of L-N are in range.
			3-phase	Uses all three phases (symmetric condition) for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if all phases L-L or all phases L-N are out of range and will be reset if at least one phase of L-L and at least one phase of L-N is in range.
4990	**Init threshold**	2	0.0 to 200.0% **[80.0%]**	The time-dependent voltage 2 monitoring initial threshold is configured here. If the measured voltage falls below/exceeds this threshold, the monitoring sequence starts and the voltage threshold will change in time according to the configured threshold curve points. If the measured voltage 2 falls below/exceeds this curve, the monitoring function triggers and the configured relay will energize.
4998	**Fallback threshold**	2	0.0 to 200.0% **[90.0%]**	The time-dependent voltage 2 monitoring fallback voltage is configured here. If the measured voltage falls below/exceeds the voltage configured here for at least the configured "Fallback time" (parameter 4988), the monitoring sequence will be reset.
				Notes This parameter should always be configured to a value higher/lower than the "Init threshold" (parameter 4990) for proper operation. The parameter "Point 7 voltage" (parameter 4997) is used as fallback threshold if it is configured to a value higher/lower than the parameter "Fallback threshold" (parameter 4998).
4988	**Fallback time**	2	0.00 to 320.00 s **[1.00 s]**	The time-dependent voltage 2 monitoring fallback time is configured here. If the measured voltage falls below/exceeds the configured "Fallback threshold" (parameter 4998) for at least

Released

ID	Parameter	CL	Setting range [Default]	Description
				the time configured here, the monitoring sequence will be reset.
4991 4992 4993 4994 4995 4996 4997	**Point 1 voltage** [x = 1 to 7]	2	0.0 to 200.0% 4991: **[10.0%]** 4992: **[10.0%]** 4993: **[90.0%]** 4994: **[90.0%]** 4995: **[90.0%]** 4996: **[90.0%]** 4997: **[90.0%]**	The voltage values of time-dependent voltage 2 monitoring voltage points are configured here.
				Notes Please avoid a setting between 0.1% and 5.0%.
4981 4982 4983 4984 4985 4986 4987	**Point 1 time** [x = 1 to 7]	2	0.00 to 320.00 s 4981: **[0.00 s]** 4982: **[0.15 s]** 4983: **[1.50 s]** 4984: **[10.00 s]** 4985: **[20.00 s]** 4986: **[30.00 s]** 4987: **[40.00 s]**	The time values of time-dependent voltage 2 monitoring time points are configured here.

4.5.2.10.3 Time Dependent Mains Voltage Monitor 3

The Time dependent voltage monitoring 3 is an additional independent FRT monitoring, which behaves like the Time dependent voltage monitoring 1 described in the previous chapter.

It serves a LogicsManager command variable 11750 "07.33 Time-dep. voltage 3" to trip a relay or to incorporate the monitoring into the mains decoupling feature of the device.

The alarm class and the self-acknowledge feature is taken from the original time dependent voltage monitoring (see ↳▷ “General settings for Mains decoupling and Monitoring Voltage 1 - 3”.

Time-dep. voltage 3

ID	Parameter	CL	Setting range [Default]	Description
9130	**Monitoring**	2	On	Enabling the time-dependent voltage monitoring 3. It is an additional independent FRT monitoring. It serves a

ID	Parameter	CL	Setting range [Default]	Description
				LogicsManager command variable to trip a relay or to incorporate the monitoring into the mains decoupling function of the device. The alarm class and the self-acknowledge setting is shared with the other time dependent voltage monitoring. (Id 4951 and Id 4959)
			[Off]	No monitoring is carried out.
				Notes. It is an additional independent FRT monitoring. It serves a LogicsManager command variable to trip a relay or to incorporate the monitoring into the mains decoupling function of the device. The alarm class and the self-acknowledge setting is shared with the other time dependent voltage monitoring. (Id 4951 and Id 4959)
4979	**Characteristic**	2		The mains time-dependent monitoring works with different characteristics.
			[1-phase]	Uses the lowest/highest phase for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least one phase L-L or at least one phases L-N is out of range and will be reset if all phases of L-L and all phases of L-N are in range.
			2-phase	Uses the two lowest/highest phases for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if at least two phases L-L or at least two phases L-N are out of range and will be reset if at least two phases of L-L and at least two phases of L-N are in range.
			3-phase	Uses all three phases (symmetric condition) for triggering the alarm. If "1771 Mains voltage monitoring" is configured to “All”, the alarm will be triggered if all phases L-L or all phases L-N are out of range and will be reset if at least one phase of L-L and at least one phase of L-N is in range.
9133	**Monitoring at**	2		Selects whether the system shall do over- or undervoltage monitoring.
			Underrun	The undervoltage monitoring is carried out (The monitoring function triggers if the measured voltage is below the curve).
			[Overrun]	The overvoltage monitoring is carried out (The monitoring

ID	Parameter	CL	Setting range [Default]	Description
				function triggers if the measured voltage exceeds the curve).
9148	**Init threshold**	2	0.0 to 200.0% **[115.0%]**	The time-dependent voltage monitoring initial threshold is configured here. If the measured voltage falls below/exceeds this threshold, the monitoring sequence starts and the voltage threshold will change in time according to the configured threshold curve points. If the measured voltage falls below/ exceeds this curve, the monitoring function triggers and the configured alarm / decoupling will be initiated.
	Fallback threshold	2	0.0 to 200.0% **[110.0%]**	The time-dependent voltage monitoring fallback voltage is configured here. If the measured voltage falls below/exceeds the voltage configured here for at least the configured "Fallback time" (parameter 9147), the monitoring sequence will be reset.
				Notes This parameter should always be configured to a value higher/lower than the "Init threshold" (parameter 9148) for proper operation. The parameter "Point 7 voltage" (parameter 9155) is used as fallback threshold if it is configured to a value higher/lower than the parameter "Fallback threshold" (parameter).
9147	**Fallback time**	2	0.00 to 320.00 s **[1.00 s]**	The time-dependent voltage monitoring fallback time is configured here. If the measured voltage falls below/exceeds the configured "Fallback threshold" (parameter) for at least the time configured here, the monitoring sequence will be reset.
9149 9150 9151 9152 9153 9154 9155	**Point 1 voltage** [x = 1 to 7]	2	0.0 to 150.0% 9149: **[125.0%]** 9150: **[125.0%]** 9151: **[120.0%]** 9152: **[120.0%]** 9153: **[115.0%]** 9154: **[115.0%]** 9155: **[110.0%]**	The voltage values of time-dependent voltage monitoring voltage points are configured here.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				Avoid a setting between 0.1% and 5.0%.
9140 9141 9142 9143 9144 9145 9146	**Point 1 time** [x = 1 to 7]	2	0.00 to 320.00 s 9140: **[0.00 s]** 9141: **[0.10 s]** 9142: **[1.10 s]** 9143: **[5.00 s]** 9144: **[5.00 s]** 9145: **[60.00 s]** 9146: **[60.00 s]**	The time values of time-dependent voltage monitoring time points are configured here.

4.5.2.10.4 Time dependent voltage monitoring – Decoupling Function

The 3 Time dependent voltage monitorings can be allocated to the mains decoupling function. With a configuration general all 3 FRT monitors are included.

ID	Parameter	CL	Setting range [Default]	Description
4989	**Mns.decoupl.by time-dep.volt.**	2		Mains decoupling by FRT monitoring.
			On	Time-dependent voltage monitoring does cause a decoupling.
			[Off]	Time-dependent voltage monitoring does not cause a decoupling.

Table 85: Time Dependent Voltage Monitoring 1

Alarm flags (latched)

Time dependent voltage 1 (FRT1) is LM flag 07.28, ID10877

Time dependent voltage 2 (FRT2) is LM flag 07.31, ID11750

Time dependent voltage 3 (FRT3) is LM flag 07.33, ID11751

4.5.2.11 QV Monitoring

General notes

In case of mains undervoltage some grid codes require a special monitoring function to avoid the import of inductive reactive power at the mains interchange point. The monitoring function measures close to the generator. For this reason the QV monitoring is a function of generator voltage and generator reactive power.

Released

QV monitoring is triggered if the following conditions are fulfilled: (Refer to Fig. 182 for details)

- QV monitoring is configured to "On" (parameter 3292)
- Measured reactive power is higher than the configured “Reactive power threshold” (parameter 3291)
- Measured voltages are below the configured “Limit undervoltage” (parameter 3285)

As a result Timer 1 and Timer 2 are starting. If the delay time "Delay step 1" (parameter 3283) has exceeded, the LogicsManager command variable "07.29 QV monitoring 1" becomes TRUE and the corresponding alarm message "QV monitoring 1" is indicated. If the delay time "Delay step 2" (parameter 3284) has exceeded, the LogicsManager command variable "07.30 QV monitoring 2" becomes TRUE and the corresponding alarm message "QV monitoring 2" is indicated.

If parameter “Mains decoupling by QV” (parameter 3296) is configured to "On" the decoupling function is assigned to “Delay step 1” (parameter 3283).

- The LogicsManager command flags 07.29 and 07.30 can be additionally used to cause other actions according to the corresponding regulations of the grid.
- The QV Monitoring function according the German grid code VDE-AR-N 4105 depends on the parameter 1770 "phase-phase/phase-neutral monitoring".

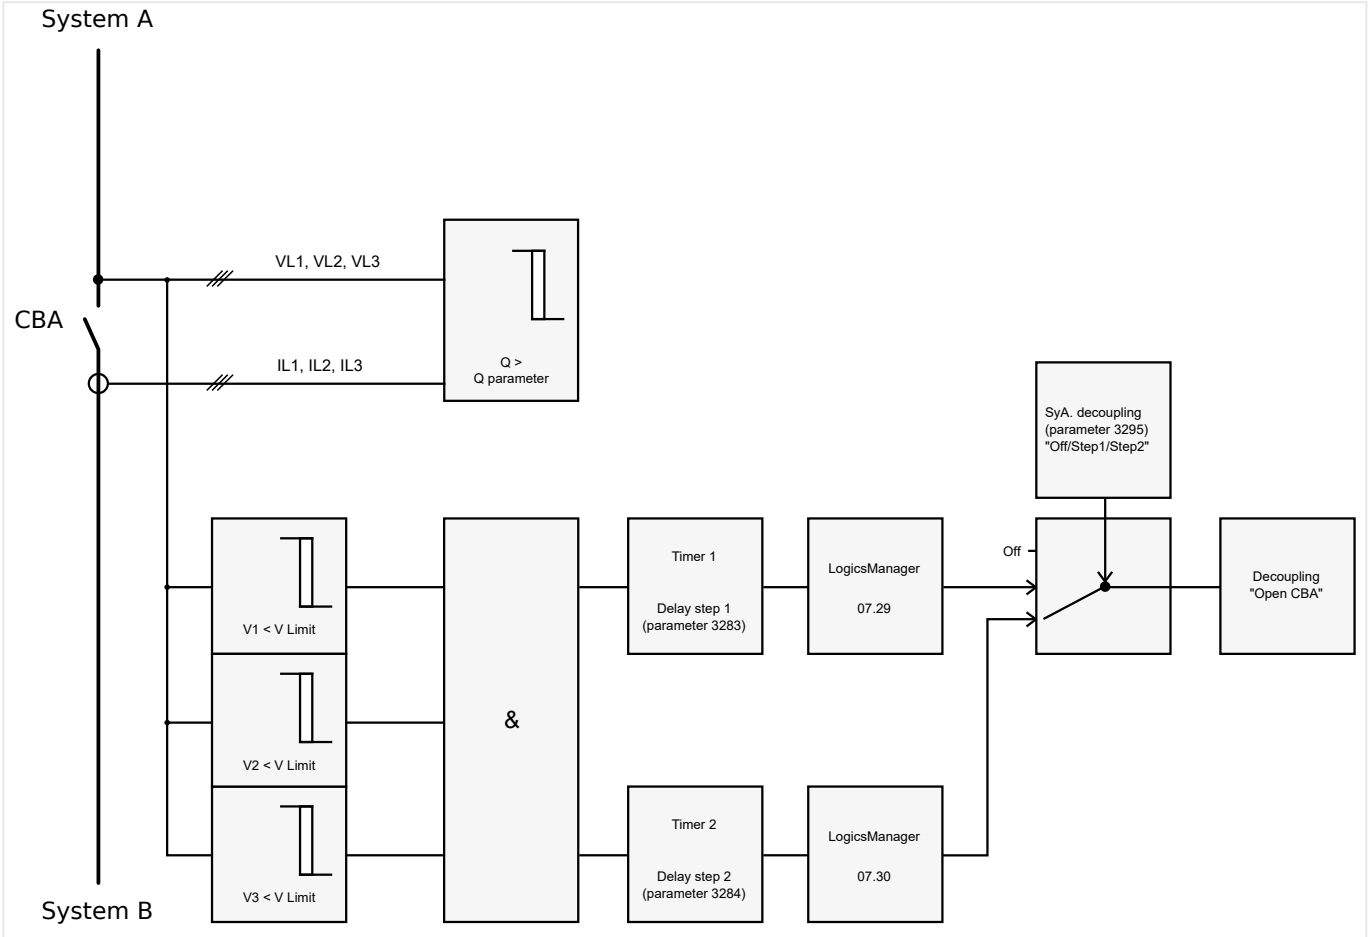


Fig. 182: QV monitoring - schematic

ID	Parameter	CL	Setting range [Default]	Description
3292	**Monitoring**	2	On	QV monitoring is carried out according to the following parameters.
			[Off]	No monitoring is carried out.
3285	**Limit undervoltage**	2	45 to 150% **[85%]**	The percentage voltage value that is to be monitored is defined here. If the voltages of all phases (one phase in 1Ph 2W system) are below this limit, the voltage condition for tripping the monitoring function is TRUE.
				Notes This value refers to the "Generator rated voltage" (parameter 1766).
3291	**Reactive power threshold**	2	2 to 100% **[5%]**	The percentage reactive value that is to be monitored is defined here. If the absolute value of reactive power Q is higher than this threshold, the reactive power condition for tripping the monitoring function is TRUE.
				Notes This value refers to the "Gen. rated react. power [kvar]" (parameter 1758).
3283	**Delay step 1**	2	0.10 to 99.99 s **[0.50 s]**	If the QV monitoring conditions are met, for the delay time configured here, an alarm "QV monitoring 1" will be issued and the LogicsManager command variable "07.29 QV monitoring 1" becomes TRUE.
				Notes The decoupling function is only activated if "Mains decoupling by QV" (parameter 3296) is configured to "On".
3284	**Delay step 2**	2	0.10 to 99.99 s **[1.50 s]**	If the QV monitoring conditions are met, for the delay time configured here, an alarm "QV monitoring 2" will be issued and the LogicsManager command variable "07.29 QV monitoring 1" becomes TRUE.
3280	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	The alarm class specifies what action should be taken when at least one delay has been exceeded.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm class is valid for parameter 3283 and 3284. For additional information refer to “9.6.4 Alarm Classes”
3293	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
				Notes The self acknowledge is valid for parameter 3283 and 3284.
3296	**Mains decoupling by QV**	2	On	The QV monitoring function is linked to the mains decoupling function with all its consequences and is assigned to "Delay step 1" (parameter 3283).
			[Off]	The QV monitoring function is ignored in the mains decoupling function.

4.5.2.12 Change Of Frequency

Phase shift

A vector/phase shift is defined as the sudden variation of the voltage curve which may be caused by a major generator load change. It usually occurs, if the utility opens the MCB, which causes a load change for the genset.

The genset control measures the duration of a cycle, where a new measurement is started with each voltage passing through zero. The measured cycle duration will be compared with an internal quartz-calibrated reference time to determine the cycle duration difference of the voltage signal.



The phase shift monitoring is a very sensitive functionality and reacts according to the settings on each sinus wave constellation.

Please be aware that under special circumstances it may come to a phase shift trip, when switching elements are taken into the mains measurement lines because mains voltage sensing lines are switched nearby the genset control.

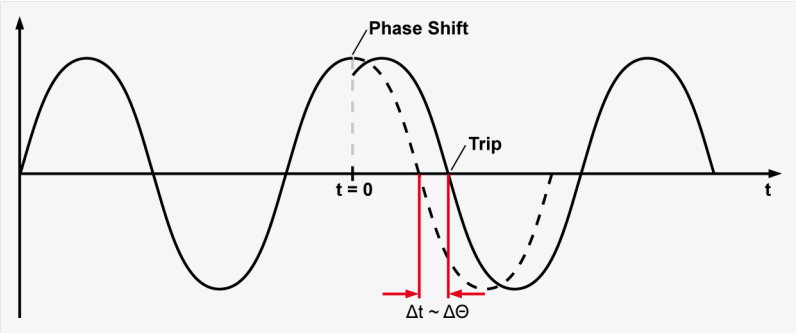


Fig. 183: Phase shift

A vector/phase shift as shown in Fig. 183 causes a premature or delayed zero passage. The determined cycle duration difference corresponds with the occurring phase shift angle.

The monitoring may be carried out three-phased or one/three-phased. Different limits may be configured for one-phase and three-phase monitoring. The vector/phase shift monitor can also be used as an additional method to decouple from the mains. Vector/ phase shift monitoring is only enabled after the monitored voltage exceeds 50% of the PT secondary rated voltage.

Function "Voltage cycle duration not within the permissible range"

The voltage cycle duration exceeds the configured limit value for the phase/vector shift. The result is, that the power circuit breaker that disconnects from the mains, is opened, the message "Mains phase shift" is displayed, and the logical command variable "07.14" is enabled.

The prerequisite for phase/vector shift monitoring is that the generator is operating in a mains parallel operation (the MCB and GCB are both closed).

df/dt (ROCOF)

df/dt (rate of change of frequency) monitoring measures the stability of the frequency. The frequency of a source will vary due to changing loads and other effects. The rate of these frequency changes due to the load variances is relatively high compared to those of a large network.

Function "Rate of change of frequency not within permissible limits"

The control unit calculates the unit of measure per unit of time. The df/dt is measured over 4 sine waves to ensure that it is differentiated from a phase shift. This results in a minimum response time of approximately 100 ms (at 50 Hz).

ID	Parameter	CL	Setting range [Default]	Description
3058	**Change of frequency**	2	Off	Monitoring is disabled.
			[Phase shift]	Phase shift monitoring is carried out according to the parameters described in “Phase shift”.

Released

ID	Parameter	CL	Setting range [Default]	Description
			df/dtdf/dt	df/dt monitoring is carried out according to the parameters described in ↳ “df/dt (ROCOF)”.
			Ph-shift,df/dt	Phase shift monitoring and df/dt monitoring is carried out. Tripping occurs if phase shift **or** df/dt is triggered.
3053	**Monitoring**	2	**[1- and 3-phase]**	During single-phase voltage phase/vector shift monitoring, tripping occurs if the phase/vector shift exceeds the configured threshold value (parameter ↳ 3054) in at least one of the three phases.
			3-phase	During three-phase voltage phase/vector shift monitoring, tripping occurs only if the phase/vector shift exceeds the specified threshold value (parameter ↳ 3055) in all three phases within 2 cycles.
				Notes If a phase/vector shift occurs in one or two phases, the single-phase threshold value (parameter ↳ 3054) is taken into consideration; if a phase/vector shift occurs in all three phases, the three-phase threshold value (parameter ↳ 3055) is taken into consideration. Single phase monitoring is very sensitive and may lead to nuisance tripping if the selected phase angle settings are too small. 3 phase mains phase shift monitoring is only enabled if Mains voltage measuring (parameter ↳ 1853) is configured to "3Ph 4W" or "3Ph 3W".
3054	**Limit 1-phase**	2	3 to 30° **[20°]**	If the electrical angle of the mains voltage shifts more than this configured value in any single phase, an alarm with the class configured in parameter ↳ 3051 is initiated. Depending on the configured mains decoupling procedure (parameter ↳ 3110), the GCB, MCB, or an external CB will be opened.
3055	**Limit 3-phase**	2	3 to 30° **[8°]**	If the electrical angle of the mains voltage shifts more than this configured value in all three phases, an alarm with the class configured in parameter ↳ 3051 is initiated. Depending on the configured mains decoupling procedure

ID	Parameter	CL	Setting range **[Default]**	Description
				(parameter 3110), the GCB, MCB, or an external CB will be opened.
3051	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
3052	**Self acknowledge**	2	**[Yes]**	The control automatically clears the alarm if the fault condition is no longer detected.
			No	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3056	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	Defining of an own release flag through Logicsmanager equations.
			FRT ROCOF enable	The dynamic mains stabilization according to VDE-AR-N 4110/4105 requires a temporary blocking of the ROCOF monitor. Please refer to the according VDE-AR-N rule.
3104	**Limit**	2	0.1 to 9.9 Hz/s **[2.6 Hz/s]** (Hysteresis: 0.1 Hz/s) (Reset Delay: 80 ms)	The df/dt threshold is defined here. If this value is reached or exceeded for at least the delay time without interruption, an alarm with the class configured in parameter 3101 is initiated. Depending on the configured mains decoupling procedure (parameter 3110), the GCB, MCB, or an external CB will be opened.
3105	**Delay**	2	0.10 to 2.00 s **[0.10 s]**	If the monitored rate of df/dt exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored df/dt exceeds the threshold (plus the hysteresis)

Released

ID	Parameter	CL	Setting range [Default]	Description
				again before the delay expires the time will be reset.
3101	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
3102	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3103	**Enabled**	4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	Defining of an own release flag through Logicsmanager equations.
			FRT ROCOF enable	The dynamic mains stabilization according to VDE-AR-N 4110/4105 requires a temporary blocking of the ROCOF monitor. Please refer to the according VDE-AR-N rule.

Released

4.5.2.13 Mains Voltage Phase Rotation

General notes

NOTICE!

Damage to the control unit and/or generation equipment

- Please ensure during installation that all voltages applied to this unit are wired correctly to both sides of the circuit breaker.

Failure to do so may result in damage to the control unit and/or generation equipment due to closing the breaker asynchronous or with mismatched phase rotations and phase rotation monitoring enabled at all connected components (inverter, breakers, cable, busbars, etc.).

This function will block a connection of systems with mismatched phases only under the following conditions:

- The voltages being measured are wired correctly with respect to the phase rotation at the measuring points (i.e. the voltage transformer in front and behind the circuit breaker)
- The measuring voltages are wired without angular phase shift or interruption from the measuring point to the control unit
- The measuring voltages are wired to the correct terminals of the control unit (i.e. L1 of the generator is connected with the terminal of the control unit which is intended for the L1 of the generator)
- The LogicsManager function "Enable MCB" (refer to parameter 12923) is false in case of a incorrect rotation field

Correct phase rotation of the phase voltages ensures that damage will not occur during a breaker closure to either the mains or the generator. The voltage phase rotation alarm checks the phase rotation of the voltages and the configured phase rotation to ensure they are identical.

The directions of rotation are differentiated as "clockwise" and "counter clockwise". With a clockwise field the direction of rotation is "L1-L2-L3"; with a counter clockwise field the direction of rotation is "L1-L3-L2".

If the control is configured for a clockwise rotation and the voltages into the unit are calculated as counterclockwise the alarm will be initiated. The direction of configured rotation being monitored by the control unit is displayed on the screen.

If this protective function is triggered, the display indicates "Mns.ph.rot. mismatch" and the logical command variable "07.05" will be enabled.

This monitoring function is only enabled if Mains voltage measuring (parameter 1853) is configured to "3Ph 4W" or "3Ph 3W" and the measured voltage exceeds 50 % of the rated voltage (parameter 1768) or if Mains voltage measuring (parameter 1853) is configured to "1Ph 2W" (in this case, the phase rotation is not evaluated, but defined by the 1Ph2W phase rotation (parameter 1859)).

Released

ID	Parameter	CL	Setting range [Default]	Description
3970	**Monitoring**	2	**[On]**	Phase rotation monitoring is carried out according to the following parameters.
			Off	No monitoring is carried out.
3974	**Mains phase rotation**	2	**[CW]**	The three-phase measured mains voltage is rotating CW (clock-wise; that means the voltage rotates in L1-L2-L3 direction; standard setting).
			CCW	The three-phase measured mains voltage is rotating CCW (counter clock-wise; that means the voltage rotates in L1-L3-L2 direction).
3971	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes CAUTION: If an alarm class that leads to a shutdown (alarm class C or higher) is configured into this parameter, a main phase rotation alarm may lead to a genset shutdown due to an alarm of class C or higher. For additional information refer to “9.6.4 Alarm Classes”
3972	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3973	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:**

Released

ID	Parameter	CL	Setting range [Default]	Description
				96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.14 Mains Import Power (Level 1 & 2)

General notes

It is possible to monitor two independently configurable mains import power limit values. This function makes it possible to initiate external load shedding.



If this protective function is triggered, the display indicates "Mains import power 1" or "Mains import power 2" and the logical command variable "07.21" or "07.22" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
3200 3206	**Monitoring**	2	On	Mains import power monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).
			[Off]	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3215 3216	**Monitoring at**	2	**[Overrun]**	The monitored value must exceed the limit to be considered as out of limits.
			Underrun	The monitored value must fall below the limit to be considered as out of limits.
3204 3210	**Limit**	2	0.00 to +150.00% 3204: **[80.00%]** 3210: **[100.00%]**	If this threshold value has been exceeded or fallen below (depending on the setting of parameter ↳ 3215 or ↳ 3216) for at least the delay time (parameter ↳ 3205 or ↳ 3211), the action specified by the alarm class is initiated.
				Notes This value refers to the Mains rated active power (parameter ↳ 1748).
3213 3214	**Hysteresis**	2	0.00 to 99.99% **[0.01%]** (Reset Delay: 80 ms)	The monitored mains power level must return within the limits configured in parameter ↳ 3204 or ↳ 3210 plus or minus (depending on the setting of parameter ↳ 3215 or ↳ 3216) the value configured here, to reset the alarm.

Released

ID	Parameter	CL	Setting range [Default]	Description
3205 3211	**Delay**	2	0.02 to 99.99 s **[1.00 s]**	If the monitored mains import power falls below or exceeds (depending on the setting of parameter 3215 or 3216) the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored mains import power exceeds or falls below the threshold (plus or minus the hysteresis configured in parameter 3213 or 3214) before the delay expires the time will be reset.
3201 3207	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 3201: **[Class A]** 3207: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3202 3208	**Self acknowledge**	2	3202: **[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			3208: **[No]**	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3203 3209	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Released

4.5.2.15 Mains Export Power (Level 1 & 2)

General notes

It is possible to monitor two independently configurable mains export power limit values. This function makes it possible to initiate external load shedding.



If this protective function is triggered, the display indicates "Mains export power 1" or "Mains export power 2" and the logical command variable "07.23" or "07.24" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
3225 3233	**Monitoring**	2	On	Mains export power monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).
			[Off]	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3232 3240	**Monitoring at**	2	**[Overrun]**	The monitored value must exceed the limit to be considered as out of limits.
			Underrun	The monitored value must fall below the limit to be considered as out of limits.
3229 3237	**Limit**	2	0 to +150.00% 3229: **[80.00%]** 3237: **[100.00%]**	If this threshold value has been exceeded or fallen below (depending on the setting of parameter ↳ 3232 or ↳ 3240) for at least the delay time (parameter ↳ 3230 or ↳ 3238), the action specified by the alarm class is initiated.
				Notes This value refers to the Mains rated active power (parameter ↳ 1748).
3231 3239	**Hysteresis**	2	0 to 99.99% **[0.01%]** (Reset Delay: 80 ms)	The monitored mains power level must return within the limits configured in parameter ↳ 3229 or ↳ 3237 plus or minus (depending on the setting of parameter ↳ 3232 or ↳ 3240) the value configured here, to reset the alarm.
3230 3238	**Delay**	2	0.02 to 99.99 s **[1.00 s]**	If the monitored mains export power falls below or exceeds (depending on the setting of ns export power falls below or exceeds (depending on the setting of parameter ↳ 3232 or ↳ 3240) the threshold value for the delay time configured here, an alarm will be issued.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes If the monitored mains import power exceeds or falls below the threshold (plus or minus the hysteresis configured in parameter 3231 or 3239) before the delay expires the time will be reset.
3226 3234	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control 3226: **[Class A]** 3234: **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed. **Notes** For additional information refer to “9.6.4 Alarm Classes”
3227 3235	**Self acknowledge**	2	3227: **[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			3235: **[No]**	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3228 3236	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.16 Inverter/Mains Active Power Mismatch

General notes

If enabled, this monitoring function becomes only active if inverter/generator power control is enabled and the active power setpoint is configured to "Import" or "Export" (refer to “4.4.4.5 Load Control”). If the measured import or export power deviates from the power setpoint by a value exceeding the limit configured in parameter 2935

for a time exceeding the delay configured in parameter ↳ 2933, an alarm will be issued.



If this protective function is triggered, the display indicates "Mns act.pwr mismatch" and the logical command variable "07.16" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
2930	**Monitoring**	2	**[On]**	On Monitoring of the mains active power mismatch is carried out according to the following parameters.
			Off	Monitoring is disabled.
2935	**Limit**	2	1.0 to 99.9% **[5.0%]**	If the difference between the measured import or export power and the power setpoint exceeds this value for at least the delay time (parameter ↳ 2933) without interruption, the action specified by the alarm class is initiated.
				Notes This value refers to the mains rated active power (parameter ↳ 1748).
2933	**Delay**	2	3 to 9999 s **[30 s]**	If the monitored active power mismatch exceeds the threshold value configured in parameter ↳ 2935 for the delay time configured here, an alarm will be issued.
				Notes If the monitored active power mismatch falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
2931	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
2932	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by

Released

ID	Parameter	CL	Setting range [Default]	Description
				activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2936	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.17 Mains Lagging Power Factor (Level 1 & 2)

General notes

The power factor is monitored for becoming more lagging (i.e. inductive) than an adjustable limit. This limit may be a lagging or leading power factor limit. There are two lagging power factor alarm levels available in the control. This monitoring function may be used for monitoring or controlling the power factor compensation. Both alarms are definite time alarms.

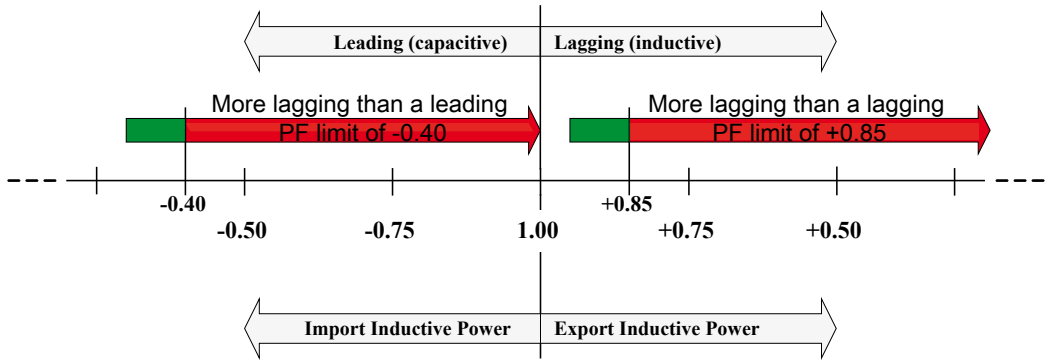


Fig. 184: Mains lagging power factor

↳ Fig. 184 shows an example of a leading and a lagging power factor limit and the power factor range, for which the lagging power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Mains PF lagging 1" or "Mains PF lagging 2" and the logical command variable "07.17" or "07.18" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
2975 2980	**Monitoring**	2	On	Mains lagging power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.
			[Off]	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
2978 2983	**Limit**	2	-0.999 to 1.000 2978: **[+ 0.900]** 2983: **[+ 0.800]**	The values that are to be monitored for each threshold limit are defined here.
				Notes If the power factor becomes more lagging (i.e. inductive, ↳ Fig. 184) than a lagging PF value (pos.) or a leading PF value (neg.) for at least the delay time (parameters ↳ 2979 or ↳ 2984) without interruption, the logical command variables 07.17 (level 1) or 07.18 (level 2) are enabled and the action specified by the alarm class is initiated.
2989 2990	**Hysteresis**	2	0.000 to 0.999 **[0.020]** (Reset Delay: 80 ms)	The monitored power factor must return within the limits configured in parameter ↳ 2978 or ↳ 2983 minus the value configured here, to reset the alarm.
2979 2984	**Delay**	2	0.02 to 99.99 s 2979: **[30.00 s]** 2984: **[1.00 s]**	If the monitored generator power factor is more lagging than the configured limit for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator power factor returns within the limit (minus the Hysteresis configured in parameter ↳ 2989 or ↳ 2990) before the delay expires the time will be reset.
2987 2988	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
2976 2981	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
2977 2982	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.2.18 Mains Leading Power Factor (Level 1 & 2)

General notes

The power factor is monitored for becoming more leading (i.e. capacitive) than an adjustable limit. This limit may be a leading or lagging power factor limit. There are two leading power factor alarm levels available in the control. This monitoring function may be used for monitoring or controlling the power factor compensation. Both alarms are definite time alarms.

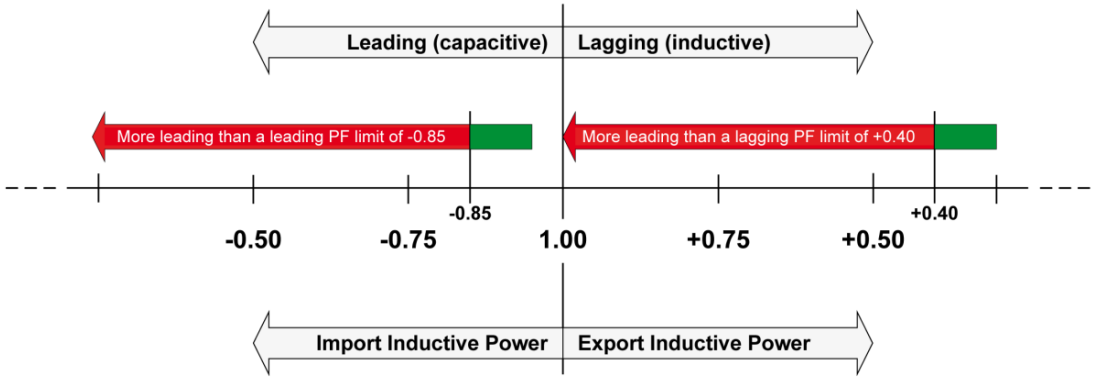


Fig. 185: Mains leading power factor

↳ Fig. 185 shows an example of a leading and a lagging power factor limit and the power factor range, for which the leading power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Mains PF leading 1" or "Mains PF leading 2" and the logical command variable "07.19" or "07.20" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
3025 3030	**Monitoring**	2	On	Mains leading power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.
			[Off]	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3028 3033	**Limit**	2	-0.999 to 01.000 3028: **[- 0.900]** 3033: **[- 0.800]**	The values that are to be monitored for each threshold limit are defined here.
				Notes If the power factor becomes more leading (i.e. inductive, ↳ Fig. 185) than a leading PF value (pos.) or a leading PF value (neg.) for at least the delay time (parameters ↳ 3029 or ↳ 3034) without interruption, the logical command variables 07.17 (level 1) or 07.18 (level 2) are enabled and the action specified by the alarm class is initiated.
3039 3040	**Hysteresis**	2	0.000 to 0.999 **[0.020]** (Reset Delay: 80 ms)	The monitored power factor must return within the limits configured in parameter ↳ 3028 or ↳ 3033 minus the value configured here, to reset the alarm.
3029 3034	**Delay**	2	0.02 to 99.99 s 3029: **[10.00 s]** 3034: **[1.00 s]**	If the monitored generator power factor is more leading than the configured limit for the delay time configured here, an alarm will be issued.
				Notes If the monitored generator power factor returns within the limit (minus the Hysteresis configured in parameter ↳ 3039 or ↳ 3033) before the delay expires the time will be reset.
3037 3038	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
3026 3031	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3027 3032	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.3 DC Source

4.5.3.1 General notes

The alarms are transmitted from the BMS to the easY-I via Modbus.

For this purpose, a corresponding Modbus mapping file must be created with the help of the Woodward "ModbusMasterMapper" tool which must be loaded into the easy-I via Toolkit. For this purpose, the LM variables **55.65 to 55.99** “9.4.2.28 Group 55: Modbus master flags 2 (Inverter and DC Source alarms)” are reserved in the easy-I. Important alarm flags of the BMS must be mapped to these LM variables.

Because the easY-I is designed to work with different BMS and inverters, the assignment must be adapted to the the current application. For most LM flags, parameters "Description" are already preconfigured as suggestion. It is assumed that most of the alarms offered will be provided in a similar manner in the different systems.



The values of these LM variables are the row data mapped from the Modbus. Latched flags are not offered for these LM variables. Parameter "Alarm class" and "Self acknowledge" are only valid for these LM variables but for the entries in the "Alarm list".

4.5.3.2 Parameter

For the parameters navigate to [Parameter / Configure monitoring / DC Source].

The parameters

- "Description" are preconfigured as in the tables

- "Alarm class" are preconfigured as "Class D"
- "Self acknowledge" are preconfigured as "No"

DC Source alarm	1	2	3	4
Description ID	18101	18104	18107	18110
Description preconfig.	Cell under temp.	Cell over temp.	Cell under voltage	Cell over voltage
Alarm class ID	18102	18105	18108	18111
Self acknowledge ID	18103	18106	18109	18112
Assigned to	LM 55.65	LM 55.66	LM 55.67	LM 55.68

Table 86: DC Source alarms 1-4 parameter

DC Source alarm	5	6	7	8
Description ID	18113	18116	18119	18122
Description preconfig.	Cell volt.imbalance	Cell temp.imbalance	R-M communication	R-S communication
Alarm class ID	18114	18117	18120	18123
Self acknowledge ID	18115	18118	18121	18124
Assigned to	LM 55.69	LM 55.70	LM 55.71	LM 55.72

Table 87: DC Source alarms 5-8 parameter (R: Rack, M: Module)

DC Source alarm	9	10	11	12
Description ID	18125	18128	18131	18134
Description preconfig.	R Charge over curr.	R Discharge ov.curr.	Rack under voltage	Rack over voltage
Alarm class ID	18126	18129	18132	18135
Self acknowledge ID	18127	18130	18133	18136
Assigned to	LM 55.73	LM 55.74	LM 55.75	LM 55.76

Table 88: DC Source alarms 9-12 parameter (R: Rack)

DC Source alarm	13	14	15	16
Description ID	18137	18140	18143	18146
Description preconfig.	R volt. sens. diff.	R current sensor	Rack fuse fail	Permanent under V
Alarm class ID	18138	18141	18144	18147
Self acknowledge ID	18139	18142	18145	18148
Assigned to	LM 55.77	LM 55.78	LM 55.79	LM 55.80

Table 89: DC Source alarms 13-16 parameter (R: Rack)

DC Source alarm	17	18	19	20
Description ID	18149	18152	18155	18158
Description preconfig.	R DC Sw1 (+) sens	R DC Sw2 (-) sens.	R DC Sw1 (+) fail	R DC Sw2 (-) fail
Alarm class ID	18150	18153	18156	18159
Self acknowledge ID	18151	18154	18157	18160
Assigned to	LM 55.81	LM 55.82	LM 55.83	LM 55.84

Table 90: DC Source alarms 17-20 parameter (R: Rack, Sw: Switch)

DC Source alarm	21	22	23	24
Description ID	18161	18164	18167	18170
Description preconfig.	Fan fail	Add. protection	C charge op. limit	C discharge op.lim.
Alarm class ID	18162	18165	18168	18171
Self acknowledge ID	18163	18166	18169	18172
Assigned to	LM 55.85	LM 55.86	LM 55.87	LM 55.88

Table 91: DC Source alarms 21-24 parameter (C: Cell)

DC Source alarm	25	26	27	28
Description ID	18173	18176	18179	18182
Description preconfig.	M BMS under temp.	M BMS over temp.	R DC SW count fail	R string imbal. V
Alarm class ID	18174	18177	18180	18183
Self acknowledge ID	18175	18178	18181	18184
Assigned to	LM 55.89	LM 55. 90	LM 55.91	LM 55.92

Table 92: DC Source alarms 25-28 parameter (R: Rack, M: Module)

DC Source alarm	29	30	31	32
Description ID	18185	18188	18191	18194
Description preconfig.	R string imbal. I	Reserve 1	Reserve 2	Reserve 3
Alarm class ID	18186	18189	18192	18195
Self acknowledge ID	18187	18190	18193	18196
Assigned to	LM 55.93	LM 55.94	LM 55.95	LM 55.96

Table 93: DC Source alarms 29-32 parameter (R: Rack)

DC Source alarm	33	34	35
Description ID	18197	18200	18203

Released

DC Source alarm	33	34	35
Description preconfig.	Reserve 4	Reserve 5	Reserve 6
Alarm class ID	18198	18201	18204
Self acknowledge ID	18199	18202	18205
Assigned to	LM 55.97	LM 55.98	LM 55.99

Table 94: DC Source alarms 33-35 parameter

4.5.4 Breaker

4.5.4.1 Configure GCB

General notes

Circuit breaker monitoring contains two alarms: A "breaker reclose" alarm and a "breaker open" alarm.

"Breaker reclose alarm"

If the control initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated (refer to parameter "GCB maximum closing attempts", parameter 3418).

If this protective function is triggered, the display indicates "GCB fail to close" and the logical command variable "08.05" will be enabled.

"Breaker open alarm"

If the control is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated (refer to parameter "GCB open monitoring", parameter 3420).

NOTICE!

If load-dependent start/stop (refer to "4.4.5.5 Load Dependent Start/Stop (LDSS)") is enabled, this monitoring function must be configured with a shutdown alarm class C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next inverter/ engine will be started.

If this protective function is triggered, the display indicates "GCB fail to open" and the logical command variable "08.06" will be enabled.

Released

ID	Parameter	CL	Setting range [Default]	Description
2600	**GCB monitoring**	2	**[On]**	Monitoring of the GCB is carried out according to the following parameters.
			Off	Monitoring is disabled.
2601	**GCB alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3418	**GCB maximum closing attempts**	2	1 to 10 **[5]**	The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: close GCB"). When the breaker reaches the configured number of attempts, a "GCB fail to close" alarm is issued. The counter for the closure attempts will be reset as soon as the "Reply GCB" is de-energized for at least 5 seconds to signal a closed GCB.
3420	**GCB open monitoring**	2	0.10 to 5.00 s **[2.00 s]**	If the "Reply GCB" is not detected as energized once this timer expires, a "GCB fail to open" alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter 2601 is issued.

4.5.4.2 Configure GCB 50BF

General notes

50BF is a breaker monitoring function which is tripping if the breaker reply is indicating an open breaker but there is still a current measured which is exceeding a configurable threshold. It is a kind of plausibility check between breaker reply and measurement.



This monitoring function is only working if the measured current is below 320% of rated current.

ID	Parameter	CL	Setting range [Default]	Description
1929	**Monitoring**	2	**[On]**	Monitoring of the GCB 50BF is carried out according to the following parameters.
			Off	Monitoring is disabled.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
1930	**Limit**	2	2 to 100% **[2%]**	If the average generator current has reached or exceeded this limit for at least the delay time without interruption and the breaker reply indicates open, the action specified by the alarm class is initiated.
1931	**Delay**	2	0.02 to 99.90 s **[0.20 s]**	If the conditions are fullfilled for the time configured here, an alarm will be issued. The message "GCB failure 50BF" is issued and the logical command variable "08.46" will be enabled.
1932	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
1933	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
1939	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32:96.{xx}LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. Example: 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Released

4.5.4.3 Synchronization GCB

General notes

NOTICE!

If load-dependent start/stop (refer to “4.4.5.5 Load Dependent Start/Stop (LDSS)”) is enabled, this monitoring function must be configured with a shutdown alarm class C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next inverter/ engine will be started.

ID	Parameter	CL	Setting range [Default]	Description
3060	**Monitoring**	2	**[On]**	Monitoring of the GCB synchronization is carried out according to the following parameters.
			Off	Monitoring is disabled.
3063	**Delay**	2	3 to 999 s **[60 s]**	If it was not possible to synchronize the GCB within the time configured here, an alarm will be issued. The message "GCB syn. timeout" is issued and the logical command variable "08.30" will be enabled.
3061	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3062	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Released

4.5.4.4 Configure GGB

General notes

All parameters listed below only apply to application mode A05, A06, A09, A10, A11 and A12.

Circuit breaker monitoring contains two alarms: A breaker reclose alarm and a breaker open alarm.

"Breaker reclose alarm"

If the control unit initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated.

- Refer to parameter "GGB maximum closing attempts", parameter 3087.

If this protective function is triggered, the display indicates "GGB fail to close" and the logical command variable "08.34" will be enabled.

"Breaker open alarm"

If the control unit is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated.

- Refer to parameter "GGB open monitoring", parameter 3088.

If this protective function is triggered, the display indicates "GGB fail to open" and the logical command variable "08.35" will be enabled.

ID	Parameter	CL	Setting range **[Default]**	Description
3085	**GGB monitoring**	2	**[On]**	Monitoring of the GGB is carried out according to the following parameters.
			Off	Monitoring is disabled.
3086	**GGB alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to "9.6.4 Alarm Classes"
3087	**GGB maximum closing attempts**	2	1 to 10 **[5]**	The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: close GGB").

Released

ID	Parameter	CL	Setting range [Default]	Description
				When the breaker reaches the configured number of attempts, an "GGB fail to close" alarm is issued. The counter for the closure attempts will be reset as soon as the "Reply GGB" is de-energized for at least 5 seconds to signal a closed GGB.
3088	**GGB open monitoring**	2	0.10 to 5.00 s **[2.00 s]**	If the "Reply GGB" is not detected as energized once this timer expires, an "GGB fail to open" alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter ↳ 3086 is issued.

4.5.4.5 Synchronization GGB

ID	Parameter	CL	Setting range [Default]	Description
3080	**Monitoring**	2	On	Monitoring of the GGB synchronization is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
3083	**Delay**	2	3 to 999 s **[30 s]**	If it was not possible to synchronize the GGB within the time configured here, an alarm will be issued. The message "GGB syn. timeout" is issued and the logical command variable "08.32" will be enabled.
3081	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
3082	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by

Released

ID	Parameter	CL	Setting range [Default]	Description
				activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.4.6 Configure MCB

General notes

If an alarm is detected when attempting to close the MCB, an emergency power operation will be carried out if the "Emergency start with MCB failure" is "On".

If an alarm class higher than 'B' class has been selected it will not be possible to start the unit with the setting "Emergency start with MCB failure" (parameter 3408) = configured as "On" in an emergency power condition.

All parameters listed below only apply to application mode A04, A06, A08, A09, and A11.

Circuit breaker monitoring contains two alarms: A breaker reclose alarm and a breaker open alarm.

"Breaker reclose alarm"

If the control unit initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated.

- Refer to parameter "MCB maximum closing attempts", parameter 3419.

If this protective function is triggered, the display indicates "MCB fail to close" and the logical command variable "08.07" will be enabled.

"Breaker open alarm"

If the control unit is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated.

- Refer to parameter "MCB open monitoring", parameter 3421.

If this protective function is triggered, the display indicates "MCB fail to open" and the logical command variable "08.08" will be enabled.

Fault at 'closing the MCB'

Alarm classes A & B

- Parameter 2802 "Emergency run" = Off;

  If the MCB cannot be closed, the busbar remains without voltage, until the MCB breaker fault is acknowledged.

  The control continues attempting to close the MCB.

- Parameter 2802 "Emergency run" = On, parameter 3408 "Emergency start with MCB failure" = Off;

  If the MCB cannot be closed, the busbar remains without voltage, until the MCB breaker fault is acknowledged.

  The control continues attempting to close the MCB.

- Parameter 2802 "Emergency run" = On, parameter 3408 "Emergency start with MCB failure" = On;

  If the MCB cannot be closed, an emergency power operation is initiated (the unit is started and the GCB is closed; the busbar is supplied by the inverter).

  If the alarm is acknowledged and if the MCB can be closed, the load is switched to mains supply and the emergency power operation terminates.

Fault at 'opening the MCB'

This alarm class has the following influence to the function of the unit:

- This fault is processed according to the action described within the alarm classes. As long as the reply is present that the MCB is still closed, the GCB cannot be closed.

ID	Parameter	CL	Setting range **[Default]**	Description
2620	**MCB monitoring**	2	**[On]**	Monitoring of the MCB is carried out according to the following parameters.
			Off	Monitoring is disabled.
2621	**MCB alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3419	**MCB maximum closing attempts**	2	1 to 10 **[5]**	The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: close MCB"). When the breaker reaches the configured number of attempts, an "MCB fail to close" alarm is issued.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The counter for the closure attempts will be reset as soon as the "Reply MCB" is de-energized for at least 5 seconds to signal a closed MCB.
3421	**MCB open monitoring**	2	0.10 to 5.00 s **[2.00 s]**	If the "Reply MCB" is not detected as energized once this timer expires, an "MCB fail to open" alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter 2621 is issued.

4.5.4.7 Synchronization MCB

ID	Parameter	CL	Setting range [Default]	Description
3070	**Monitoring**	2	**[On]**	Monitoring of the MCB synchronization is carried out according to the following parameters.
			Off	Monitoring is disabled.
3073	**Delay**	2	3 to 999 s **[60 s]**	If it was not possible to synchronize the MCB within the time configured here, an alarm will be issued. The message "MCB syn. timeout" is issued and the logical command variable "08.31" will be enabled.
3071	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3072	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External

Released

ID	Parameter	CL	Setting range [Default]	Description
				acknowledgment" (via a discrete input or via an interface).

4.5.4.8 Configure MCB 50BF

50BF is a breaker monitoring function which is tripping if the breaker reply is indicating an open breaker but there is still a current measured which is exceeding a configurable threshold. It is a kind of plausibility check between a breaker reply and a measurement.



This monitoring function is only working if the measured current is below 320% of rated current!

ID	Parameter	CL	Setting range [Default]	Description
1934	**Monitoring**	2	**[Off]**	Monitoring is disabled.
			On	Monitoring of the MCB 50BF is carried out according to the following parameters.
1935	**Limit**	2	2 to 100% **[2%]**	If the mains current has reached or exceeded this limit for at least the delay time without interruption and the breaker reply indicates open, the action specified by the alarm class is initiated.
1936	**Delay**	2	3 to 999 s **[60 s]**	If the conditions are fulfilled for the time configured here, an alarm will be issued. The message "MCB failure 50BF" is issued and the logical command variable "08.47" will be enabled.
1937	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
1938	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager

Released

ID	Parameter	CL	Setting range [Default]	Description
				output "External acknowledgment" (via a discrete input or via an interface).
1940	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. Example: 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.4.9 MCB plausibility



If breaker mode GCB/MCB is configured, this alarm trips (according to the monitor settings) if the number of closed MCBs is different to the number of easY-I devices in the same segment.

ID	Parameter	CL	Setting range [Default]	Description
1941	**Monitoring**	2	**[Off]**	Monitoring is disabled.
			On	Monitoring of the MCB plausibility is carried out according to the following parameters.
1942	**Delay**	2	0.02 to 99.90 s **[0.20 s]**	If the conditions are fulfilled for this time the alarm "MCB plausibility" will trip and the command variable 08.48 becomes active.
1943	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	An alarm can be assigned that specifies what action should be taken when the conditions are fulfilled.
				Notes For additional information refer to “9.6.4 Alarm Classes”
1944	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by

Released

ID	Parameter	CL	Setting range [Default]	Description
				activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
1945	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. Example: 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.4.10 Configure Neutral Contactor

General notes

The monitoring of the Neutral Contactor (NC) feedback "17.09 N-cont. reply mism." is performed always, if the Neutral Interlocking (parameter 1840) and the Monitoring function are enabled (parameter 5148). The monitor checks, if the feedback behaves according to the NC command. With a configurable delay time, the alarm is activated with a general alarm text. Open failure or closure failure are not differentiated.

Please refer to “6.3.10 Neutral Interlocking” for more details.



This function is not usable in the application mode "GCB/GC" A13.

ID	Parameter	CL	Setting range [Default]	Description
5148	**Monitoring**	2	On	Monitoring of the Neutral Contactor is carried out according to the following parameters, if the Neutral Interlocking function (parameter 1840) is enabled .
			[Off]	Monitoring is disabled.
5152	**Delay**	2	0.10 to 5.00 s **[2.00 s]**	Period of continuous failure signal before tripping a failure.
5149	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				For additional information refer to ↳ “9.6.4 Alarm Classes”.
5150	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
5153	**N-cont. reply mism.**	-	**[N-cont. reply mism.]**	Text is visible in display during alarm is detected.

4.5.4.11 Configure DC breaker

General notes

Circuit breaker monitoring contains two alarms: A "breaker reclose" alarm and a "breaker open" alarm.

"Breaker reclose alarm"

If the control initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated (refer to parameter "DC breaker max. close attempts", parameter ↳ 17523).



If this protective function is triggered, the display indicates "DC fail to close" and the logical command variable "08.85" will be enabled.

"Breaker open alarm"

If the control is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated (refer to parameter "DC breaker open monitoring", parameter ↳ 17524).

NOTICE!



If load-dependent start/stop (refer to ↳ “4.4.5.5 Load Dependent Start/Stop (LDSS)”) is enabled, this monitoring function must be configured with a shutdown alarm class C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next inverter will be started.



If this protective function is triggered, the display indicates "DC fail to open" and the logical command variable "08.86" will be enabled.

Released

ID	Parameter	CL	Setting range [Default]	Description
17521	**DC breaker monitoring**	2	**[On]**	Monitoring of the DC breaker is carried out according to the following parameters.
			Off	Monitoring is disabled.
17522	**DC breaker alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
17523	**DC breaker max.close attempts**	2	1 to 10 **[5]**	The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: 56.14 Closing DC breaker"). When the breaker reaches the configured number of attempts, a "DC fail to close" alarm is issued. The counter for the closure attempts will be reset as soon as the "Reply DC breaker" is de-energized for at least 5 seconds to signal a closed DC breaker.
17524	**DC breaker open monitoring**	2	0.10 to 5.00 s **[2.00 s]**	If the "Reply DC breaker" is not detected as energized once this timer expires, a "DC fail to open" alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter 17522 is issued.

4.5.5 Flexible Limits

General notes

CAUTION!

Hazards due to improper configuration of protective functions

Flexible Limits must not be used for protective functions, because the monitoring function is not guaranteed beyond an exceeding of 320 %.

It is not possible to monitor temperature values in Degree Fahrenheit and pressure values in psi. Although parameters 3631 or 3630 are configured to a value display in °F or psi, flexible limit monitoring always refers to the value in Degree Celsius or bar.

This control unit offers 40 flexible limits. They may be used for "limit switch" functions of all measured analog values. It is possible to choose between alarm (warning and shutdown) and control operation via the LogicsManager.

If an alarm class is triggered, the display indicates "Flexible limit {x}", where {x} indicates the flexible limit 1 to 40, or the text configured using ToolKit and the logical command variable "15.{x}" will be enabled.



The flexible limits 25 through 32 are configurable additionally with a 'Fallback time' e.g., for load shedding.

The following parameter description refers to flexible limit 1. The flexible limits 2 through 40 are configured accordingly. The parameter IDs of the flexible limits 2 through 40 are listed below.

ID	Parameter	CL	Setting range **[Default]**	Description
4208	**Description**	2	user defined (up to 39 characters) **[Flex. limit {x}]**	TKit A description for the respective flexible limit may be entered here. The description may have 4 through 20 characters and is displayed instead of the default text if this limit is exceeded.
				Notes This parameter may only be configured using ToolKit. 19 characters are best for HMI readability - text strings with 20 and more characters but without a blank in between are NOT visible as headline on detail screen. Selection screen on HMI/display works fine with up to 30 characters; others are overwritten by mandatory screen symbols. The max. number of characters depends on the numbers of Bytes for each character. Please verify the length on the display for best view.
4200	**Monitoring**	2	On	Monitoring of the limit {x} is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
4204	**Monitoring at**	2	**[Overrun]**	The monitored value must exceed the threshold limit for a fault to be recognized.
			Underrun	The monitored value must fall below the threshold limit for a fault to be recognized.
4205	**Limit**	2	-21000000.00 to 21000000.00 **[100.00]**	The threshold limit of the value to be monitored is defined by this parameter. If this value is reached or exceeded / fallen below

Released

ID	Parameter	CL	Setting range [Default]	Description
				(dependent on parameter ↳ 4204) for at least the delay time configured in parameter ↳ 4207 the action specified by the alarm class is initiated after the configured delay expires. The entry format of the threshold depends on the respective analog value. If the monitored analog value has a reference value, the threshold is expressed as a percentage of this reference value.
				Notes Refer to ↳ "Examples" for examples on how to configure the limit.
4216	**Hysteresis**	2	0.00 to 21000000.00 **[1.00]**	During monitoring, the actual value must exceed or fall below one of the limits defined in parameter ↳ 4205 to be recognized as out of permissible limits. For a value to register as having returned to the permissible limits, the monitored value must rise above or fall below this value for the hysteresis. The format for entering the hysteresis depends on the monitored analog input and corresponds with the one of the threshold listed in parameter ↳ 4205.
4207	**Delay**	2	0.02 to 99999.99 s **[1.00 s]**	If the monitored value exceeds or falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored value falls below the threshold (plus/minus the hysteresis, dependent on parameter ↳ 4204) before the delay expires the time will be reset.
	Beginning: For flexible limit 25 ... 32 only; sample refers to flexible limit #25.			
6646	**Fallback time**	2	00.02 to 99999.99 s **[1.00 s]**	If the monitored value exceeds or falls below the threshold value, a counter will start and finally disable the alarm. If the monitored value comes back into the threshold value (plus/minus the hysteresis) before the fallback time expires the time will be reset.
	End: For flexible limit 25 ... 32 only; sample referred to flexible limit #25.			
4201	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				For additional information refer to “9.6.4 Alarm Classes”
4202	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
4203	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
4206	**AM FlexLim 1 source**	2	Determined by AnalogManager 82.01 **[A1 = 10.01 ZERO]**	Any possible data sources may be selected. Analog and digital OUT value/signal are available as sources for AnalogManager and LogicsManager. Refer to “9.5.2 Data Sources AM” for a list of all data sources.

Parameter IDs

Flexible limit #	Description	Monitoring	Monitored analog value	Monitoring at	Limit	Hysteresis	Delay Fallback	Alarm class	Self acknowledge	Enabled
1	4208	4200	4206	4204	4205	4216	4207	4201	4202	4203
2	4225	4217	4223	4221	4222	4233	4224	4218	4219	4220
3	4242	4234	4240	4238	4239	4250	4241	4235	4236	4237
4	4259	4251	4257	4255	4256	4267	4258	4252	4253	4254
5	7108	4270	4276	4274	4275	4278	4277	4271	4272	4273
6	7116	4280	4286	4284	4285	4288	4287	4281	4282	4283
7	7124	4290	4296	4294	4295	4298	4297	4291	4292	4293

Released

Flexible limit #	Description	Monitoring	Monitored analog value	Monitoring at	Limit	Hysteresis	Delay	Alarm class	Self acknowledge	Enabled
							Fallback			
8	7132	6000	6006	6004	6005	6008	6007	6001	6002	6003
9	7140	6010	6016	6014	6015	6018	6017	6011	6012	6013
10	7148	6020	6026	6024	6025	6028	6027	6021	6022	6023
11	7156	6030	6036	6034	6035	6038	6037	6031	6032	6033
12	7164	6040	6046	6044	6045	6048	6047	6041	6042	6043
13	7172	6050	6056	6054	6055	6058	6057	6051	6052	6053
14	7180	6060	6066	6064	6065	6068	6067	6061	6062	6062
15	7188	6070	6076	6074	6075	6078	6077	6071	6072	6073
16	7196	6080	6086	6084	6085	6088	6087	6081	6082	6083
17	7204	6090	6096	6094	6095	6098	6097	6091	6092	6093
18	7212	6100	6106	6104	6105	6108	6107	6101	6102	6103
19	7220	6110	6116	6114	6115	6118	6117	6111	6112	6113
20	7228	6120	6126	6124	6125	6128	6127	6121	6122	6123
21	7236	6130	6136	6134	6135	6138	6137	6131	6132	6133
22	7244	6140	6146	6144	6145	6148	6147	6141	6142	6143
23	7252	6150	6156	6154	6155	6158	6157	6151	6152	6153
24	7260	6160	6166	6164	6165	6168	6167	6161	6162	6163
25	7268	6170	6176	6174	6175	6178	6177	6171	6172	6173
							6646			
26	7276	6180	6186	6184	6185	6188	6187	6181	6182	6183
							6647			
27	7284	6190	6196	6194	6195	6108	6197	6191	6192	6193
							6648			
28	7292	6200	6206	6204	6205	6208	6207	6201	6202	6203
							6649			
29	7300	6210	6216	6214	6215	6218	6217	6211	6212	6213
							6650			
30	7308	6220	6226	6224	6225	6228	6227	6221	6222	6223
							6651			
31	7316	6230	6236	6234	6235	6238	6237	6231	6232	6233
							6652			
32	7324	6240	6246	6244	6245	6248	6247	6241	6242	6243
							6653			
33	7332	6250	6256	6254	6255	6258	6257	6251	6252	6253
34	7340	6260	6266	6264	6265	6268	6267	6261	6262	6263
35	7348	6270	6276	6274	6275	6278	6277	6271	6272	6273

Released

Flexible limit #	Description	Monitoring	Monitored analog value	Monitoring at	Limit	Hysteresis	Delay / Fallback	Alarm class	Self acknowledge	Enabled
36	7356	6280	6286	6284	6285	6288	6287	6281	6282	6283
37	7364	6290	6296	6294	6295	6298	6297	6291	6292	6293
38	7372	6300	6306	6304	6305	6308	6307	6301	6302	6303
39	7380	6310	6316	6314	6315	6318	6317	6311	6312	6313
40	7388	6320	6326	6324	6325	6328	6327	6321	6322	6323

Table 95: Flexible limits - parameter IDs

Examples

Example value	Desired limit	Reference value / display value	Limit entry format
01.24 Gen.act.power [%]	160 kW	Gen. rated active power [kW] (parameter 1752) = 200 kW	80.00
01.09 Gen.frequency [%]	51.5 Hz	System rated frequency (parameter 1750) = 50Hz	103.00
06.03 Analog input 3 (configured to VDO 5bar)	4.25 bar	Display in 0.01 bar	4.25
06.02 Analog input 2 (configured to VDO 150°C)	123 °C	Display in 0.01°C	123.00
06.03 Analog input 3 (configured to “Linear” e.g. for tank level 0 - 100 %, “User defined min display value” = 0, “User defined max display value” = 100)	20 %	Display in 0.00 %	20.00

Table 96: Flexible limits - analog value examples

The flexible limits must be used to monitor analog inputs like oil pressure or coolant temperature for example. We recommend to change the flexible limit description accordingly.

The table below gives some configuration examples. The analog inputs must be configured accordingly.

Parameter (Examples using “Flexible limit 1” and “Flexible limit 2 ”)	Example for low oil pressure monitoring	Example for high coolant temperature monitoring
Description	Oil pressure	Coolant temperature
Monitoring	On	On
AM FlexLim 1 source / AM FlexLim 2 source	A1 = 06.01 Analog input 1 Type = Pass through	A1 = 06.02 Analog input 2 Type = Pass through
Monitoring at	Underrun	Overrun
Limit	2.00 (2.00 bar)	80.00 (80 °C)
Hysteresis	0.10 (0.10 bar)	2.00 (2 °C)

Released

Parameter (Examples using “Flexible limit 1” and “Flexible limit 2 ”)	Example for low oil pressure monitoring	Example for high coolant temperature monitoring
Delay	0.50 s	3 s
Alarm class	F	B
Self acknowledge	No	No
Enabled	Yes	No

Table 97: Flexible limits - configuration examples

4.5.6 Miscellaneous

4.5.6.1 General monitoring settings

ID	Parameter	CL	Setting range **[Default]**	Description
1756	**Time until horn reset**	0	0 to 1,000 s **[180 s]**	After each alarm of alarm class B through F occurs, the alarm LED flashes and the horn (command variable 03.05) is enabled. After the delay time "time until horn reset" has expired, the horn (command variable 03.05) is disabled. The alarm LED flashes until the alarm has been acknowledged either via the push button, the LogicsManager, or the interface. **Notes** If this parameter is configured to 0, the horn will remain active until it will be acknowledged.
12490	**Ext. acknowledge** (External acknowledgment of alarms)	2	Determined by LogicsManager 86.15 **[(09.05 Discrete input 5 & 1) OR 04.14 Remote acknowledge]** = 10714	It is possible to acknowledge all alarms simultaneously from remote, e.g. with a discrete input. The logical output of the LogicsManager has to become TRUE twice. The first time is for acknowledging the horn, the second for all alarm messages. The On-delay time is the minimum time the input signals have to be "1". The Off-delay time is the time how long the input conditions have to be "0" before the next high signal is accepted. Once the conditions of the LogicsManager have been fulfilled the alarms will be acknowledged. The first high signal into the discrete input acknowledges the command variable 03.05 (horn).

ID	Parameter	CL	Setting range [Default]	Description
				The second high signal acknowledges all inactive alarm messages.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
16973	**Monitoring delay time**	0	1 to 99 s **[8 s]**	Delay time between 85.10 LM: Delayed mon. and 56.28 Mon.delay expired.
16971	**Release delayed mon.**	2	Determined by LogicsManager 85.10 **[(04.06 GCB closed & 56.05 Running condition) AND True]** = 16972	Switch to activate the delayed monitoring.
				Notes For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
1849	**Stop mode with stopping alarm**	2	If operating mode is not fixed via LogicsManager (see chapter ↳ “6.3.3 Performing Remote Start/Stop And Acknowledgment” for details) with this parameter it can be decided if the operation mode changes to STOP mode when a shutdown alarm of class C, D, E, F occurs.	
			No	A shut down alarm does not cause an operating mode change. This can be useful in applications with remote control, where the operator wants to acknowledge alarms and restart the unit without the need to change operating mode in the easY-I.
				Notes If the shut down alarm disappears, generator can start automatically!
			[Yes]	Each shut down alarm (class C, D, E, F) will change operating mode to STOP.
				Notes LM ↳ 12510, ↳ 12520, ↳ 12530 do have priority.
5775	**IOP Delayed unload. Alarm C,E**	2	0 to 9999 s **[0 s]**	This parameter gives a load sharing participant the opportunity to delay the unload if an shutdown alarm of alarm class C or E occurs. The time gained gives another generator the chance to participate in the load sharing network. The time configured here delays the triggering of alarm class C and E. A setting of 0 s deactivates this function.

Released

ID	Parameter	CL	Setting range [Default]	Description
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”

4.5.6.2 Free Configurable Alarms

General Notes

The easY-I-XT provides 16 freely configurable alarms.

Each alarm is configurable by:

- A LogicsManager equation
- Alarm text/description (configurable with ToolKit only)
- Delay time
- Alarm class
- Self acknowledgment
- Being enabled depending on "85.10 LM: Delayed mon." (selectable)

Free Alarm 1 for example

ID	Parameter	CL	Setting range [Default]	Description
8120	**Free alarm 1**	2	Determined by LogicsManager 88.01 **[02.01 LM FALSE & 1 & 1]** = 11550	This LogicsManager is used to select the source of monitoring. **Notes** For information on the LogicsManager and its default settings see ↳ “9.4.1 LogicsManager Overview”.
8121	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	The assigned independent alarm class specifies what action should be taken when the alarm becomes TRUE.
8122	**Self acknowledge**	2	Yes / No	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically clears the alarm if the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

ID	Parameter	CL	Setting range [Default]	Description
8123	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			Release delayed mon.	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation " 85.10 LM: Delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
8236	**Delay**	2	0.02 to 99999.99 s **[1.00 s]**	Period before alarm becomes TRUE.
6680	**Description**	2	**[Free alarm 1]** ...((30 characters))*	Text is configurable by ToolKit. **Notes** *) The max. number of characters is 48 but 30 characters can be read on easY-I HMI without restrictions.

Parameter IDs

Free alarm #	Description	Logics-Manager	Alarm class	Self acknow-ledge	Enabled	Delay
1	6680	8120	8121	8122	8123	8236
2	6681	8124	8125	8126	8127	8237
3	6682	8128	8129	8130	8131	8238
4	6683	8132	8133	8134	8135	8239
5	6688	8136	8137	8138	8139	8240
6	6689	8140	8141	8142	8143	8241
7	6690	8144	8145	8146	8147	8242
8	6691	8148	8149	8152	8153	8243
9	6692	8154	8155	8156	8157	8244
10	6693	8158	8159	8161	8163	8245
11	6694	8165	8167	8168	8169	8246
12	6695	8170	8171	8172	8173	8247
13	6696	8174	8175	8176	8177	8248
14	6697	8178	8179	8180	8181	8249
15	6698	8182	8183	8184	8185	8250

Released

Free alarm #	Description	Logics-Manager	Alarm class	Self acknow-ledge	Enabled	Delay
16	6699	8186	8187	8188	8189	8251

Table 98: Free alarms - parameter IDs

4.5.6.3 CAN Interfaces

- CAN Interface 1: See “4.5.6.4 CAN Interface 1”.
- CAN Interface 2: See “4.5.6.5 CAN Interface 2”.

4.5.6.4 CAN Interface 1

General notes

The CANopen interface 1 is monitored. If the interface does not receive a Receive Process Data Object (RPDO) before the delay expires, an alarm will be initiated.

If this protective function is triggered, the display indicates "CANopen interface 1" and the logical command variable "08.18" will be enabled.

ID	Parameter	CL	Setting range **[Default]**	Description
3150	**Monitoring**	2	On	CANopen interface 1 monitoring is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
3154	**Delay**	2	0.01 to 650.00 s **[0.20 s]**	The maximum receiving break is configured with this parameter. If the interface does not receive an RPDO within this time, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.
3151	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3152	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3153	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.5 CAN Interface 2

General notes

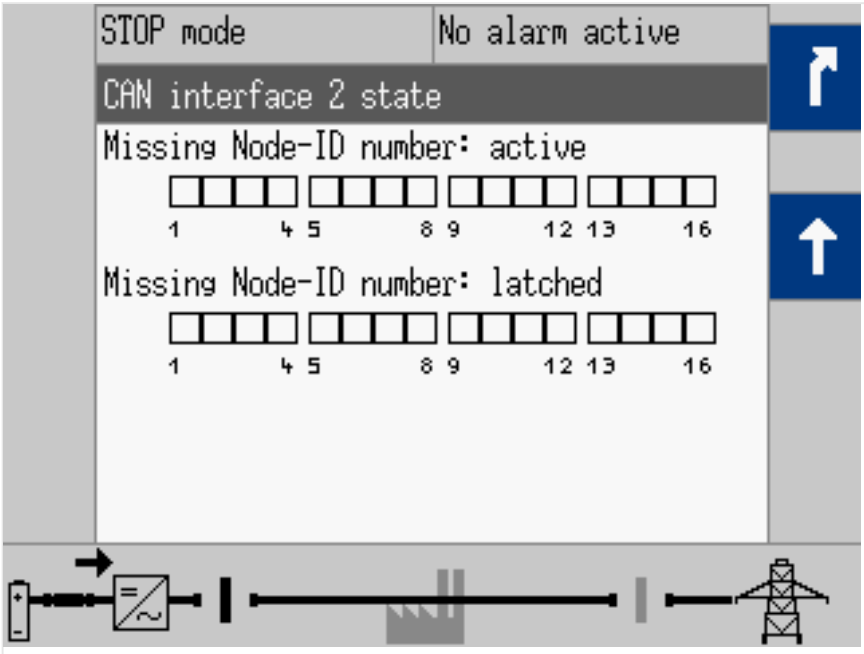


Fig. 186: CAN2 state

The CANopen interface 2 is monitored. If the interface does not receive a message from the external expansion board (Node-ID) before the delay expires, an alarm will be initiated.

This is indicated in the following menus:

Released

HMI: [Next Page / Diagnostic / Interfaces / CAN / CAN 2 state]

Toolkit: [STATUS MENU / Diagnostic / Interfaces / CAN / CAN 2 state]

If this protective function is triggered, the display indicates "CANopen interface 2" and the logical command variable "08.19" will be enabled.

If you are not using the exact amount of external I/O modules you have defined, the monitoring function does not work correctly.

ID	Parameter	CL	Setting range **[Default]**	Description
16187	**Monitoring**	2	On	CANopen interface 2 monitoring is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
16186	**Delay**	2	0.01 to 650.00 s **[0.20 s]**	The maximum receiving break is configured with this parameter. If the interface does not receive message from the external expansion board (Node-ID) within this time, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.
16188	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
16190	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
16189	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined

Released

ID	Parameter	CL	Setting range [Default]	Description
				through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.6 CAN Interface 3

General notes

The CANopen interface 3 is monitored. If the interface does not receive a Receive Process Data Object (RPDO) before the delay expires, an alarm will be initiated.



If this protective function is triggered, the display indicates "CANopen interface 3" and the logical command variable "08.29" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
3165	**Monitoring**	2	On	CANopen interface 3 monitoring is carried out according to the following parameters.
			[Off]	Monitoring is disabled.
3169	**Delay**	2	0.01 to 650.00 s **[0.20 s]**	The maximum receiving break is configured with this parameter. If the interface does not receive an RPDO within this time, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.
3166	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3167	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3168	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.g".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.7 Ethernet interfaces

General notes

The devices reacts on an abnormal rate of Ethernet UDP-messages per time scale e.g. “broadcast storm”. If a maximal allowed number of messages is received, the device closes all Ethernet ports to give the own device more calculation time. After about 100ms the Ethernet ports are opened again to recheck the UDP message traffic. As long the traffic is still high the device remains in this protection state.



If this protective function is triggered, after the configured delay time the display indicates the alarm “Ethernet issue” and the logical command variable “08.62 Ethernet issue” will be enabled.

ID	Parameter	CL	Setting range **[Default]**	Description
3174	**Monitoring**	2	**[On]**	Ethernet UDP message monitoring is enabled.
			Off	Monitoring is disabled.
3175	**Delay**	2	0.02 to 99.00 s **[2.00 s]**	If the issue contiunoes for the time configured here, an alarm will be issued.
3176	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				For additional information refer to “9.6.4 Alarm Classes”
3177	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3178	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.8 Battery Overvoltage (Level 1 & 2)

General notes

There are two battery overvoltage alarm levels available in the control. Both alarms are definite time alarms and. Monitoring of the voltage is done in two steps.



If this protective function is triggered, the display indicates "Bat. overvoltage 1" or "Bat. overvoltage 2" and the logical command variable "08.01" or "08.02" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
3450 3456	**Monitoring**	2	3450: **[On]** 3456: **[Off]** (Hysteresis: 0.1 V)	Overvoltage monitoring of the battery voltage is carried out according to the following parameters. Both values may be configured independent from each

Released

ID	Parameter	CL	Setting range **[Default]**	Description
			(Reset Delay: 1s)	other (prerequisite: Level 1 > Level 2). Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3454 3460	**Limit**	2	8.0 to 42.0 V 3454: **[32.0 V]** 3460: **[35.0 V]**	The threshold values that are to be monitored are defined here. If the monitored battery voltage reaches or exceeds this value for at least the delay time without interruption, the action specified by the alarm class is initiated.
3455 3461	**Delay**	2	0.02 to 99.99 s 3455: **[5.00 s]** 3461: **[1.00 s]**	If the monitored battery voltage exceeds the threshold value for the delay time configured here, an alarm will be issued.
				Notes If the monitored battery voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.
3451 3457	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
3452 3458	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3453 3459	**Enabled**	2 4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:**

Released

ID	Parameter	CL	Setting range [Default]	Description
			LM: Flag{xx}	96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.9 Battery Undervoltage (Level 1 & 2)

General notes

There are two battery undervoltage alarm levels available in the control. Both alarms are definite time alarms. Monitoring of the voltage is done in two steps.



If this protective function is triggered, the display indicates "Bat. undervoltage 1" or "Bat. undervoltage 2" and the logical command variable "08.03" or "08.04" will be enabled.

Refer to “9.2.1 Triggering Characteristics” for the triggering characteristic of this monitoring function.

ID	Parameter	CL	Setting range [Default]	Description
3500 3506	**Monitoring**	2	**[On]**	Undervoltage monitoring of the battery voltage is carried out according to the following parameters. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).
			Off	Monitoring is disabled for Level 1 limit and/or Level 2 limit.
3504 3510	**Limit**	2	8.0 to 42.0 V 3504: **[24.0 V]** 3510: **[20.0 V]** (Hysteresis: 0.1 V) (Reset Delay: 1s)	The threshold values that are to be monitored are defined here. If the monitored battery voltage reaches or falls below this value for at least the delay time without interruption, the action specified by the alarm class is initiated. **Notes** The default monitoring limit for battery undervoltage is 24 Vdc after 60 seconds. This is because in normal operation the terminal voltage is approximately 26 Vdc (alternator charged battery).
3505 3511	**Delay**	2	0.02 to 99.99 s 3505: **[60.00 s]** 3511: **[10.00 s]**	If the battery voltage falls below the threshold value for the delay time configured here, an alarm will be issued. **Notes** If the battery voltage exceeds the threshold (plus the hysteresis)

Released

ID	Parameter	CL	Setting range [Default]	Description
				again before the delay expires the time will be reset.
3501 3507	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”
3502 3508	**Self acknowledge**	2 4	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
3503 3509	**Enabled**	2 4	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.10 Monitoring PV load reference

General notes

The PV load reference function contains a monitor for generator reverse power. It is enabled if parameter ↳ 8911) is configured to ”Regulated“. The monitor observes the system generator load and trips the alarm ”08.71 PV disconnect“ if the real generator load underruns the configured disconnect level e.g. in case of reverse power. Then the PV power can be cut. This can be maintained if the LogicsManager "08.71 PV disconnect" is assigned to a relay output.

Parameter

Navigate to [Parameter / Configuration / Configure monitoring / Miscellaneous / Other monitoring / PV load reference].

ID	Parameter	CL	Setting range **[Default]**	Description
8923	**PV disconnect level**	2	-20.0 to 20.0% **[-2.0%]**	This is the system generator load level on which the PV is immediately to cut. (Hysteresis is 0.5%.)
8924	**Delay**	2	0.1 to 99.0 s **[5.0 s]**	If the system generator load level underruns the disconnect level for the delay time the alarm is tripped. (The delay off time is 0.08s.)
8925	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳▷ “9.6.4 Alarm Classes”
8926	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.6.11 Multi-Unit Parameter Alignment

General notes

The multi-unit parameter alignment functionality requires that the relevant parameters are all configured identically at all participating units. In GCB/GC mode A13 the parameter alignment is performed in the Group Controller.



If at least one of these parameters is configured different in at least one of the units, the display indicates "Parameter alignment" on all units and the logical command variable "08.16" will be enabled. To identify different configured units, please use the diagnostic screen "Genset parameter alignment":

HMI: [Next Page / Multi-unit / Genset parameter alignment]

ToolKit: [STATUS MENU / Multi-unit / Genset parameter alignment]

This alarm is always self-acknowledging, i.e. the control automatically clears the alarm if it is no longer valid.

The setting of the following parameters will be monitored:

Parameter	ID
Start stop mode	5752
Dead busbar start mode	5753
Fit size of engine	5754
Fit service hours	5755
Changes of engines	5756
IOP Reserve power	5760
IOP Hysteresis	5761
IOP Max. generator load	5762
IOP Min. generator load	5763
IOP Dynamic	5757
IOP Add on delay	5764
IOP Add on delay at rated load	5765
IOP Add off delay	5766
MOP Minimum load	5767
MOP Reserve power	5768
MOP Hysteresis	5769
MOP Max. generator load	5770
MOP Min. generator load	5771
MOP Dynamic	5758
MOP Add on delay	5772
MOP Add on delay at rated load	5773
MOP Add off delay	5774
LDSS sort priority always	5777
Transfer rate LS fast message	9921

Table 99: Multi-unit parameter alignment - monitored parameters

ID	Parameter	CL	Setting range [Default]	Description
4070	**Monitoring**	2	**[On]**	Multi-unit parameter alignment monitoring is carried out.
			Off	Monitoring is disabled.
4071	**Alarm class**	2	Alarm class Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.
				Notes For additional information refer to “9.6.4 Alarm Classes”.

Released

ID	Parameter	CL	Setting range [Default]	Description
4076	**Delay**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).
4078	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.". For xx = 1 to 32: 96.{xx}, LM: Flag{xx} The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32
4077	**Self acknowledge**	2	0.02 to 999.99 s **3.00 s**	Parameter alignment monitoring delay If a parameter alignment error occurs, the alarm will be delayed by a basic delay time (depending on the communication method) plus the delay time defined here.

4.5.6.12 Multi-Unit Missing easY-I

General notes

The multi-unit missing easY-I monitoring function checks whether all participating units are available (sending data on the load share line).

If the number of available units is less than the number of displayed "Monitored easY-I" ↳ 9925 (initiated by parameter ↳ 13356 System update) for at least the delay time, the display indicates "Missing easY-I" and the logical command variables "08.17" and "08.27" will be enabled.

Released

After energizing the easY-I, a delay is started, which allows a possible "Missing easY-I" alarm to become active.

When using **only CAN**, the delay for the first 140 seconds after booting depends on the Device Number (parameter 1702): Delay = (Device number + 11) seconds

This delay serves for detecting the Master of the CAN bus connection. Approximately two minutes after energizing the easY-I, the alarm delay will be set to a fix time, which depends on the setting of parameter 9921 (Transfer rate LS fast message) and is in the range between 3 to 12 seconds.

If load share is with **any Ethernet**, after energizing the easY-I the delay is 12 s.

After 12 seconds the delay time is approximately 1 s.

During »System update« the alarm is disabled.

For more information see “6.2.2 Communication Management”

If the easY-I is configured to the application modes A07 to A13, the monitoring function also checks the participating LSx units.

ID	Parameter	CL	Setting range [Default]	Description
4060	**Monitoring**	2	On	Multi-unit missing members monitoring is carried out.
			[Off]	Monitoring is disabled.
4061	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
4062	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Released

4.5.6.13 Multi-Unit Missing LSx

General notes

If the easY-I is configured to the application modes A07 to A13, the monitoring function also checks the participating LS-x units.

The multi-unit missing LS-x monitoring function works as described above for "Missing easY-I".

If the number of available units is less than the number of displayed "Monitored LSx" 9926 (initiated by parameter 13356 System update) for at least the delay time, the display indicates "Missing LSx" and the logical command variables "08.17" and "08.28" will be enabled.

After energizing the easY-I, a delay is started, which allows a possible "Missing easY-I" alarm to become active.

When using **only CAN**, the delay for the first 140 seconds after booting depends on the Device Number (parameter 1702): Delay = (Device number + 11) seconds

This delay serves for detecting the Master of the CAN bus connection. Approximately two minutes after energizing the easY-I, the alarm delay will be set to a fix time, which depends on the setting of parameter 9921 (Transfer rate LS fast message) and is in the range between 3 to 12 seconds.

If load share is with **any Ethernet**, after energizing the easY-I the delay is 12 s.

After 12 seconds the delay time is approximately 1 s.

During »System update« the alarm is disabled.

For more information see “6.2.2 Communication Management”

ID	Parameter	CL	Setting range **[Default]**	Description
4066	**Monitoring**	2	On	Multi-unit missing members monitoring is carried out.
			[Off]	Monitoring is disabled.
4067	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.
				Notes For additional information refer to “9.6.4 Alarm Classes”.
4068	**Self acknowledge**	2	Yes	The control automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control does not automatically reset the alarm when the fault condition is no longer detected.

Released

ID	Parameter	CL	Setting range [Default]	Description
				The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

4.5.6.14 Multi-Unit System Update

General notes

The multi-unit system update monitoring function checks whether only the participating units are available (sending data on the load share line).

If the number of available easY-I units is more than the number of displayed "Monitored easY-I" ↳ 9925 (initiated by parameter ↳ 13356 System update), the display indicates "System Update easY-I" and the logical command variables "08.43" and "08.65" will be enabled.

If the easY-I is configured to the application modes A07 to A13 and the number of available LS-x units is more than the number of displayed "Monitored LS-x" ↳ 9926 (initiated by parameter ↳ 13356 System update), the display indicates "System Update LS-x" and the logical command variables "08.44" and "08.65" will be enabled.

For more information see ↳ “6.2.2 Communication Management”

ID	Parameter	CL	Setting range [Default]	Description
7832	**Monitoring**	2	**[On]**	Enabling to monitor the system if there are **more** devices against latest updated system configuration.
				Notes To detect **less** easY-I devices against latest updated system configuration use missing member monitor ↳ 4060. To detect **less** LS-5 devices against latest updated system configuration use missing member monitor ↳ 4066.
			Off	Monitoring is disabled.
7833	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to ↳ “9.6.4 Alarm Classes”

Released

ID	Parameter	CL	Setting range [Default]	Description
7834	**Self acknowledge**	-/-	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Table 100: Parameter setting: Monitoring system update

4.5.6.15 Operating Range Failure

General notes

The operating range failure monitoring issues an Operating Range Failure Alarm "Oper.range failed XX" (where XX is the number of Check 01 to 12) if one of the following conditions is fulfilled. Example: Check 4 **failed** causes »Oper.range failed 4«.

Only the first incoming operation range failure will tripp an alarm. Because in most cases this will be the root cause for eventually incoming further operating range alarms. Any other operating range alarm can only be tripped if there is no active or latched operating range alarm.

If there are more than one failures only the first incoming failure will be indicated and is available at protocol 5400.

If there is no alarm this number is 0.

- **Check 1**: The easY-I tries to close the GCB, but the generator is not within its operating range (parameters 5800, 5801, 5802, or 5803).
- **Check 2**: The easY-I tries to synchronize the GCB, but the busbar is not within the generator operating range (parameters 5800, 5801, 5802, or 5803).
- **Check 3**: The easY-I tries close the GCB in breaker transition mode "Open transition" with GCB and MCB open status. In this condition the busbar is expected as dead, but the busbar voltage is NOT below the dead busbar detection limit (parameter 5820).
- **Check 4**: The easY-I wants to close the GCB onto a dead busbar, but the device cannot close the breaker because there is at least one neighbor device recognized with a closed GCB.

Released

- **Check 5**: The easY-I tries to synchronize the GCB, the MCB is closed, but mains and/or bussbar are not within its operating range (parameters 5810, 5811, 5812, or 5813).
- **Check 6**: The easY-I wants close the GGB, but the generator minimum power is not reached and 'LM 12936 Bypass min.Pgen.' is FALSE.
- **Check 7**: The easY-I wants close the GGB in the Open Transition Mode, but the generator minimum power is not reached and 'LM 12936 Bypass min.Pgen.' is FALSE.
- **Check 8**: The easY-I wants synchronize the GGB , but the generator minimum power is not reached.
- **Check 9**: (GGB control mode) The MCB or the GGB is closed with min. one neighbor GCB is closed to the busbar. There is a conflict, the external voltage monitoring of the Load Busbar signals a "Dead load busbar", which cannot be the case.
- **Check 10**: The easY-I wants synchronize the GGB, the MCB is closed, but the mains is not in operating range
- **Check 11**: The easY-I checks the plausibility of generator and busbar, if GCB is closed and the inverter runs, but the operating range of generator OR busbar is not matched.
- **Check 12**: The easY-I checks the phase rotation of generator, busbar, and mains and a synchronisation shall be executed, but the phase rotation of all systems does not match. (Synchronisation is blocked.)

Regarding Check 9 and 10: The GGB application mode GCB/GGB/L-MCB is tapping the Load busbar via the internal mains measurement. Therefore the check 10 is made via the load busbar condition. So the "load busbar" -OK flag is created out of the mains operation ranges.

No alarm will be issued in idle mode. This monitoring function is disabled below firing speed.

NOTICE!

If load-dependent start/stop (refer to “4.4.5.5 Load Dependent Start/Stop (LDSS)”) is enabled, this monitoring function must be configured with a shutdown alarm class C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next inverter/ engine will be started.

If this protective function is triggered, the display indicates "Operat. range failed" / ("Operating Range failed") and the logical command variable "06.31" will be enabled.

ID	Parameter	CL	Setting range [Default]	Description
2660	**Monitoring**	2	**[On]**	Monitoring of the operating range is carried out according to the following parameters.
			Off	Monitoring is disabled.
2663	**Delay**	2	1 to 999 s	If one of the above mentioned conditions for an operating range

Released

ID	Parameter	CL	Setting range [Default]	Description
			[30 s]	failure is fulfilled, an alarm will be issued. If the respective condition is not fulfilled anymore before the delay time expires, the delay time will be reset.
2661	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
				Notes For additional information refer to “9.6.4 Alarm Classes”
2662	**Self acknowledge**	2	Yes	The control unit automatically clears the alarm if the fault condition is no longer detected.
			[No]	The control unit does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgment" (via a discrete input or via an interface).

Table 101: Operating Range Failure settings

4.5.6.16 Plausibility Check of Voltages' AC Wiring

General Notes

The easY-I-3000XT detects the frequency out of up to six voltages (L1-N, L2-N, L3-N, L1-L2, L2-L3 and L3-L1). The frequency measurement (of all three systems) additionally checks the values on plausibility. With this monitoring the easY-I can detect wrong wiring issues.




Wrong Wiring Issue

It might occur that for example a generator frequency is measured even if the generator is not running. This can happen e.g. if PE (terminal 61) is not connected, the generator neutral connection is broken, and mains is energized with 1Ph2W connection. In this case a potential shift occurs which could lead to "ghostly" voltages at the generator (or busbar, or mains) phase-neutral system. This voltages lead to a frequency measurement even if no voltage is detected in the generator phase-phase system.

The »Plausibility AC wiring « monitoring is introduced to indicate such situations at generator, busbar, and mains measurement. These alarms are tripping if only "Phase-Phase" or only "Phase-Neutral" frequency is detected. If such an alarm ("Gen. AC wiring", "Busbar 1 AC wiring" or "Mains AC wiring" has tripped please check all "Phase-Phase" and "Phase-Neutral" voltages via HMI or Toolkit to get more information and check the AC wiring.

Released



This »Plausibility AC wiring « monitoring function is only active if the wiring can provide "Phase-Phase" and "Phase-Neutral" values.

The plausibility monitoring offers one setting for all three measurement systems. The Monitor is placed under: [Parameter / Configuration / Configure monitoring / Miscellaneous / Other monitoring] .The alarm indications are called Gen. .../Busbar .../ Mains AC wiring (see “9.6.5 Alarm Messages”).

ID	Parameter	CL	Setting range **[Default]**	Description
1964	**Monitoring**	2	**[On]**	Enabling Plausibility AC Wiring monitoring.
			Off	Monitoring is disabled
1965	**Delay**	2	00.2 to 99.99 s **[00.30]**	If the monitored value undershoots the threshold value for the delay time configured here, an alarm will be issued.
1966	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
1967	**Self acknowledge**	2	**[Yes]**	The control unit automatically clears the alarm if the fault condition is no longer detected.
			No	The control unit does not automatically reset the alarm when the fault condition is no longer detected.
1968	**Enabled**	2	**[Always]**	Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

4.5.6.17 Load Share Interface Redundancy is Lost

General

Beside the automatic handling of redundant load share line messages the easY-I can inform the operator if a redundant load share communication line get lost. Preassumption for that is an enabled redundant load share line like CAN/Ethernet A or Ethernet B/C in conjunction with a successful system update procedure.

If the according alarm has occurred the operator usually checks the "Diagnostic devices" screen. Available on device display or over ToolKit. There he will be informed which channel is affected. Refer to system update for more information.

Function

If the parameter "9924 Load share interface" is configured to "Ethernet B/C" or "CAN/ Ethernet A" and the system update was executed, the monitoring becomes active.

The devices observes if the both load share messages are correctly received. If a channel fails the alarm "LS interf. redundancy" is triggered.

ID	Parameter	CL	Setting range **[Default]**	Description
5017	**Monitoring**	2		The monitoring of the load share communication line redundancy can be enabled here.
			On	**On**: Monitoring is enabled
			[Off]	**Off**: Monitoring is disabled
5018	**Alarm class**	2	Class A, Class B, Class C, Class D, Class E, Class F , Control **[Class B]**	Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.
5019	**Delay**	2	0.2 to 999.9 s **[3.0 s]**	The redundancy lost error can be delayed according to the application.
5020	**Self acknowledge**	2	No	No: The control unit does not automatically reset the alarm when the fault condition is no longer detected.
			[Yes]	Yes The control unit automatically clears the alarm if the fault condition is no longer detected.
5021	**Enabled**	2	**[Always]**	Always: Monitoring for this fault condition is continuously enabled.
			85.10 LM:Del.mon	Monitoring for fault conditions is not performed until the delay time has expired. This is determined through the LogicsManager equation "Release delayed mon.".
			For xx = 1 to 32: 96.{xx} LM: Flag{xx}	The monitoring is executed, if the LogicsManager "Flag {xx}" is TRUE. **Example:** 96.01 LM: Flag 1, 96.02 LM: Flag 2, ..., 96.32 LM: Flag 32

Table 102: Parameter: Monitoring

Released

4.6 Configure Measurement

General notes

If the genset control is intended to operate a genset in parallel to the mains, the mains voltage measuring inputs must be connected.

Dependencies

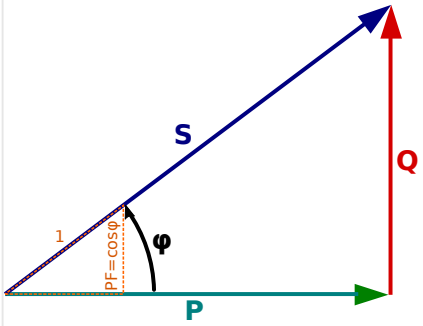


Fig. 187: AC power triangle

PF	Power Factor
P	Active Power [kW]
S	Apparent power [kVA]
Q	Reactive Power [kvar]

The AC power triangle illustrates the dependencies between active power, apparent power, reactive power and power factor.

- PF = P/S = cos Φ
- Q = $\sqrt{(S^2-P^2)}$
- S = $\sqrt{(P^2+Q^2)}$
- P = S * PF

4.6.1 General measurement settings

ID	Parameter	CL	Setting range **[Default]**	Description
1750	**System rated frequency**	2	50Hz / 60Hz **[50Hz]**	The rated frequency of the system is used as a reference figure for all frequency related functions, which use a percentage value, like frequency monitoring, breaker operation windows or the AnalogManager.

ID	Parameter	CL	Setting range [Default]	Description
1825	**System rated active power[kW]**	2	0.5 to 99999.9 kW **[200.0 kW]**	This value specifies 100% of the system rated power, which is used for system related indications and calculations. The AnalogManager "10.11 System nominal P [%]" and "10.12 System real P [%]" are related to this value or setting.
1858	**1Ph2W voltage measuring**	3	**[Phase - phase]**	The unit is configured for measuring phase-phase voltages if 1Ph 2W measuring is selected.
			Phase - neutral	The unit is configured for measuring phase-neutral voltages if 1Ph 2W measuring is selected.
				Notes For information on measuring principles refer to “3.3.4.1 Generator Voltage”. Never configure the busbar measurement for phase-neutral, if the other systems like mains and generator are configured as 3Ph 3W or 3Ph 4W. The phase angle for synchronization would be not correct.
1859	**1Ph2W phase rotation**	3	**[CW]**	A clockwise rotation field is considered for 1Ph 2W measuring .
			CCW	A counter-clockwise rotation field is considered for 1Ph 2W measuring.
				Notes For information on measuring principles refer to “3.3.4.1 Generator Voltage”.
1854	**Additional CT input**	2	**[Mains current]** Ground current Off	This parameter configures whether ground or mains current is measured on terminals ½ or the input is disabled.
1835	**Ground current range**	2	1A **[5A]**	Application specific ground current range must be selected e.g. for rated values.
1810	**Gnd. CT primary rated current**	2	**[500 A/x]** 1..32000 A/x	CT ground current measuring primary rated value.
				Notes Available if parameter »1854 Additional CT input «is set to »Ground current«.

Released

ID	Parameter	CL	Setting range [Default]	Description
				»A/x«: "/x" shows the relation to the current range which can be selected (1 A or 5 A).

4.6.2 Generator

ID	Parameter	CL	Setting range [Default]	Description
1766	**Generator rated voltage**	2	50 to 650000 V **[400 V]**	This value refers to the rated voltage of the generator (generator voltage on data plate) and is the voltage measured on the potential transformer primary. The generator rated voltage is used as a reference figure for all generator voltage related functions, which use a percentage value, like generator voltage monitoring, breaker operation windows or the AnalogManager.
1752	**Gen. rated active power [kW]**	2	0.5 to 99999.9 kW **[200.0 kW]**	This value specifies the generator real power rating, which is used as a reference figure for related functions. The generator rated active power is the generator apparent power multiplied by the generator power factor (typically ~0.8). These values are indicated in the generator data plate (“Dependencies”).
1758	**Gen. rated react. power [kvar]**	2	0.5 to 99999.9 kvar **[200.0 kvar]**	This value specifies the generator reactive power rating, which is used as a reference figure for related functions. The generator rated reactive power also depends on the generator values (“Dependencies”).
1754	**Generator rated current**	2	1 to 32000 A **[300 A]**	This value specifies the generator rated current, which is used as a reference figure for related functions.
1851	**Generator voltage measuring**	2	3Ph 4W OD	Measurement is performed Line-Neutral (Open Delta connected system). The voltage is connected via transformer with 3 Wire. Phase voltages and the neutral must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for Open Delta connected systems. Monitoring refers to the following voltages:

ID	Parameter	CL	Setting range [Default]	Description
				• VL12, VL23 and VL31
			1Ph 3W	Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter ↳ 1770. Measurement, display, and protection are adjusted according to the rules for single-phase systems. Monitoring refers to the following voltages: • VL13 (parameter ↳ 1770 configured to "Phase-phase") • VL1N, VL3N (parameter ↳ 1770 configured to "Phase-neutral")
			1Ph 2W	Measurement is performed Line-Neutral (WYE connected system) if parameter ↳ 1858 is configured to "Phase - neutral" and Line-Line (Delta connected system) if parameter ↳ 1858 is configured to "Phase - phase". Measurement, display and protection are adjusted according to the rules for phase-phase systems. Monitoring refers to the following voltages: • VL1N, VL12
			3Ph 3W	Measurement is performed Line-Line (Delta connected system). Phase voltages must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for Delta connected systems. Monitoring refers to the following voltages: • VL12, VL23, VL31
			[3Ph 4W]	Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter ↳ 1770. Phase voltages and the neutral must be connected for proper calculation. Measurement, display and protection are adjusted

Released

ID	Parameter	CL	Setting range [Default]	Description
				according to the rules for WYE connected systems. Monitoring refers to the following voltages: • VL12, VL23 and VL31 (parameter ↳ 1770 configured to "Phase-phase") • VL1N, VL2N and VL3N (parameter ↳ 1770 configured to "Phase-neutral")
				Notes If this parameter is configured to 1Ph 3W, the generator and mains rated voltages (parameters ↳ 1766 and ↳ 1768) must be entered as Line-Line (Delta) and the busbar 1 rated voltage (parameter ↳ 1781) must be entered as Line-Neutral (WYE). For information on measuring principles refer to ↳ "3.3.4.1 Generator Voltage".
1850	**Generator current measuring**	2	**[L1 L2 L3]**	All three phases are monitored. Measurement, display and protection are adjusted according to the rules for 3-phase measurement. Monitoring refers to the following currents: IL1, IL2, IL3
			Phase L1 Phase L2 Phase L3	Only one phase is monitored. Measurement, display and protection are adjusted according to the rules for single-phase measurement. Monitoring refers to the selected phase.
				Notes This parameter is only effective if generator voltage measuring (parameter ↳ 1851) is configured to "3Ph 4W" or "3Ph 3W". For information on measuring principles refer to ↳ "3.3.5.1 Generator Current".
16800	**Gen. power measurement**	2	**[Internal]**	The power measurement uses the configured phases from the current measuring (parameter ↳ 1850) and requires the CT connection.
			External	Instead on the own power calculation the data from the inverter are used (Modbus communication). The easY-I

Released

ID	Parameter	CL	Setting range [Default]	Description
				measures only generator frequency and voltage. • 55.04 Inv. Active power (kW) • 55.05 Inv. Reactive power (kvar) • 55.06 Inv. Apparent power (kVA) • 55.07 Inv. Power factor • 55.14 Inv. Current L1 • 55.15 Inv. Current L2 • 55.16 Inv. Current L3
				Notes The current and power monitoring uses the values from the interface and the monitoring delay time is limited by the Modbus refresh time. The generator unbalanced load monitoring is disabled in "External". • Unbalanced load level 1 and 2

4.6.2.1 Configure transformer

General notes

The setpoints for specific parameters will differ depending upon the setting of parameter »Generator current range« ↳ 1830.

- 1830 = "1A": Current transformer with ../1 A rated current
- 1830 = "5A": Current transformer with ../5 A rated current

ID	Parameter	CL	Setting range [Default]	Description
1801	**Gen. PT primary rated voltage** (Generator potential transformer primary voltage rating)	2	50 to 650000 V **[400 V]**	Some generator applications may require the use of potential transformers to facilitate measuring the voltages produced by the generator. The rating of the primary side of the potential transformer must be entered into this parameter. If the application does not require potential transformers (i.e. the measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.
1800	**Gen. PT secondary rated volt.**	2	50 to 690 V **[400 V]**	Some generator applications may require the use of potential transformers to facilitate

Released

ID	Parameter	CL	Setting range [Default]	Description
	(Generator potential transformer secondary voltage rating)			measuring the voltages produced by the generator. The rating of the secondary side of the potential transformer must be entered into this parameter. If the application does not require potential transformers (i.e. the measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.
1806	**Gen. CT primary rated current** (Generator current transformer primary rating)	2	1 to 32000 A/x **[500 A/x]**	The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. **Notes** The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5 A CT should output 3 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control. »A/x«: "/x" shows the relation to the current range which can be selected (1 A or 5 A).
1830	**Generator current range**	2	1A **[5A]**	The input range of the current transformer must be selected/ defined.

4.6.3 Busbar

The busbar parameters in the device are often named with the affix "1". This preparation is done to avoid confusion e.g., if a model with a second busbar measurement is introduced.

ID	Parameter	CL	Setting range [Default]	Description
1781	**Busbar 1 rated voltage**	2	50 to 650000 V **[400 V]**	This value refers to the rated voltage of busbar 1 and is the voltage measured on the potential transformer primary.

Released

ID	Parameter	CL	Setting range [Default]	Description
				If voltage measuring is configured to 1Ph 3W, the WYE voltage (VL1N) must be entered here. The busbar 1 potential transformer primary voltage is entered in this parameter. The busbar rated voltage is used as a reference figure for all busbar voltage related functions, which use a percentage value, like synchronization.
5820	**Dead bus detection max. volt.**	2	0 to 30% **[10%]**	If the busbar voltage falls below this percentage of the busbar 1 rated voltage (parameter 1781), a dead bus condition is detected and the logical command variable "02.21 Dead busbar1" becomes TRUE.

4.6.3.1 Configure transformer

ID	Parameter	CL	Setting range [Default]	Description
1813	**Busb1 PT primary rated voltage** (Busbar 1 potential transformer primary voltage rating)	2	50 to 650000 V **[400 V]**	Some applications may require the use of potential transformers to facilitate measuring the voltages to be monitored. The rating of the primary side of the potential transformer must be entered into this parameter.
				Notes If the application does not require potential transformers (i.e. the measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.
1812	**Busb1 PT secondary rated volt.** (Busbar 1 potential transformer secondary voltage rating)	2	50 to 690 V **[400 V]**	Some applications may require the use of potential transformers to facilitate measuring the busbar voltages. The rating of the secondary side of the potential transformer must be entered into this parameter. If the application does not require potential transformers (i.e. the measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.

Released

4.6.4 Mains

ID	Parameter	CL	Setting range [Default]	Description
1768	**Mains rated voltage**	2	50 to 650000 V **[400 V]**	This value refers to the rated voltage of the mains and is the voltage measured on the potential transformer primary. The mains potential transformer primary voltage is entered in this parameter. The mains rated voltage is used as a reference figure for all mains voltage related functions, which use a percentage value, like mains voltage monitoring, breaker operation windows or the AnalogManager.
1748	**Mains rated active power [kW]**	2	0.5 to 99999.9 kW **[200.0 kW]**	This value specifies the mains real power rating, which is used as a reference figure for related functions. The mains rated active power is a reference value used by several monitoring and control functions (↳ “Dependencies”).
1746	**Mains rated react. pwr. [kvar]**	2	0.5 to 99999.9 kvar **[200.0 kvar]**	This value specifies the mains reactive power rating, which is used as a reference figure for related functions. The mains rated reactive power is a reference value used by several monitoring and control functions(↳ “Dependencies”).
1785	**Mains rated current**	2	1 to 32000 A **[300 A]**	This value specifies the mains rated current, which is used as a reference figure for related functions.
1853	**Mains voltage measuring**	2	**[3Ph 4W]**	Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter ↳ 1771. Phase voltages and the neutral must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for WYE connected systems. Monitoring refers to the following voltages: • VL12, VL23 and VL31 (parameter ↳ 1771 configured to "Phase-phase") • VL1N, VL2N and VL3N (parameter ↳ 1771 configured to "Phase-neutral") • VL12, VL23, VL31, VL1N, VL2N and VL3N (parameter ↳ 1771 configured to "All")

ID	Parameter	CL	Setting range [Default]	Description
			3Ph 3W	Measurement is performed Line-Line (Delta connected system). Phase voltages must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for Delta connected systems. Monitoring refers to the following voltages: • VL12, VL23, VL31
			1Ph 2W	Measurement is performed Line-Neutral (WYE connected system) if parameter ↳ 1858 is configured to "Phase - neutral" and Line-Line (Delta connected system) if parameter ↳ 1858 is configured to "Phase - phase". Measurement, display and protection are adjusted according to the rules for phase-phase systems. Monitoring refers to the following voltages: • VL1N, VL12
			1Ph 3W	Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter ↳ 1771. Measurement, display, and protection are adjusted according to the rules for single-phase systems. Monitoring refers to the following voltages: • VL13 (parameter ↳ 1771 configured to "Phase-phase") • VL1N, VL3N (parameter ↳ 1771 configured to "Phase-neutral") • VL1N, VL3N (parameter ↳ 1771 configured to "All")
				Notes If this parameter is configured to 1Ph 3W, the generator and mains rated voltages (parameters ↳ 1766 and ↳ 1768) must be entered as Line-Line (Delta) and the busbar 1 rated voltage (parameter ↳ 1781) must be entered as Line-Neutral (WYE).

Released

ID	Parameter	CL	Setting range [Default]	Description
1852	**Mains current measuring**	2	**[Phase L1]** Phase L2 Phase L3	Phase L{1/2/3} Measurement is performed for the selected phase only. The measurement and display refer to the selected phase. The configured phase CT must be connected to perform current measurement.
				Notes For information on measuring principles refer to “3.3.5.2 Mains Current”. This parameter is only effective if mains voltage measuring (parameter 1853) is configured to "3Ph 4W" or "3Ph 3W".

4.6.4.1 Configure transformer

General notes

The setpoints for specific parameters will differ depending upon the setting of parameter »Mains current range« 1832.

- 1832 = "1A": Current transformer with ../1 A rated current
- 1832 = "5A": Current transformer with ../5 A rated current

ID	Parameter	CL	Setting range [Default]	Description
1804	**Mains PT primary rated voltage** (Mains potential transformer primary voltage rating	2	50 to 650000 V **[400 V]**	Some applications may require the use of potential transformers to facilitate measuring the voltages to be monitored. The rating of the primary side of the potential transformer must be entered into this parameter.
				Notes If the application does not require potential transformers (i.e. the measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.
1803	**Mains PT secondary rated volt.** (Mains potential transformer secondary voltage rating)	2	50 to 690 V **[400 V]**	Some applications may require the use of potential transformers to facilitate measuring the mains voltages. The rating of the secondary side of the potential transformer must be entered into this parameter. If the application does not require potential transformers (i.e. the

Released

ID	Parameter	CL	Setting range [Default]	Description
				measured voltage is 690 V or less), then the measured voltage will be entered into this parameter.
1807	**Mains CT primary rated current** (Mains current transformer primary rating)	2	1 to 32000 A/x **[500 A/x]**	The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5 A CT should output 3 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.
				Notes This screen is only visible if parameter ↳▷ 1854 is configured as Mains.
1832	**Mains current range**	2	1A **[5A]**	The input range of the current transformer must be selected/ defined.
				Notes This screen is only visible if parameter ↳▷ 1854 is configured as Mains.

4.6.4.2 External Mains Active Power

ID	Parameter	CL	Setting range [Default]	Description
2966	**External mains active power**	2	Yes	The mains active power is coming from an external source. The following measurement values of the external mains active power depend on the external mains **re**active power measurement. So there is to differentiate between two cases: **Case 1:** External mains **reactive** power measurement (parameter ↳▷ 2969) is disabled: • The mains power factor is assumed as "1".

Released

ID	Parameter	CL	Setting range [Default]	Description
				• The mains power factor monitoring is switched off. • The mains power factor is not displayed. • The mains total reactive power is not displayed. **Case 2:** External mains **reactive** power measurement (parameter ↳ 2969) is enabled: • The mains power factor is calculated. • The mains power factor monitoring is switched off. • The mains power factor is not displayed. • The mains total reactive power is not displayed. • The mains total apparent power is calculated and displayed.
				Notes Mains power monitoring is not available. Please make sure to assign the external mains active power to the corresponding analog data source (parameter ↳ 5780). The same data source must be used if the mains active power is requested via interface.
			[No]	The mains active power is internally measured.
5780	**AM Ext.mains act.pwr**	2	Determined by AnalogManager 81.19: **[A1 = 06.01 Analog input 1]**	Typically an analog input is selected as data source which is connected to an external transducer.
2967	**Mains power meas. resolution** (Mains power measurement resolution)	2		This parameter controls the resolution and the format.
			Selected resolution	Power at 100 % analog value
			0.01kW	10.00 kW
			0.1kW	100.0 kW
			[1kW]	1000 kW
			0.01MW	10.00 MW
			0.1MW	100.0 MW

Released

4.6.4.3 External Mains Reactive Power

ID	Parameter	CL	Setting range [Default]	Description
2969	**External mains reactive power**	2	Yes	The mains reactive power is coming from an external source. This power is displayed and used for control purposes. The source is taken via AnalogManager. The following measurement values depend on the external mains active power measurement. So there is to differentiate between two cases: **Case 2:** External mains **active** power measurement (parameter 2966) is disabled: • The mains power factor is assumed as "1". • The mains active power monitoring is switched off. • The mains power factor monitoring is switched off. • The mains power factor is not displayed. • The mains total active power is not displayed. **Case 1:** External mains **active** power measurement (parameter **2966**) is enabled: • The mains power factor is calculated. • The mains power factor monitoring is switched off. • The mains power factor is not displayed. • The mains total reactive power is not displayed. • The mains total apparent power is calculated and displayed.
				Notes Mains power monitoring is not available. Please make sure to assign the external mains reactive power to the corresponding analog data source (parameter 5794). The same data source must be used if the mains active power is requested via interface.
			[No]	The mains reactive power is internally measured.
5794	**AM Ext.mains RPower**	2	Determined by AnalogManager 81.20: **[A1 = 06.02 Analog input 2]**	Typically an analog input is selected as data source (kvar value) which is connected to an external transducer.

Released

ID	Parameter	CL	Setting range [Default]	Description
2970	**Mains react.power meas.resol.** (Mains reactive power measurement resolution)	2		This parameter controls the resolution and the format.
			Selected resolution:	Power at 100 % analog value:
			0.01kvar	10.00 kvar
			0.1kvar	100.0 kvar
			[1kvar]	1000 kvar
			0.01Mvar	10.00 Mvar
			0.1Mvar	100.0 Mvar

4.7 Configure Interfaces

Interfaces / Communication

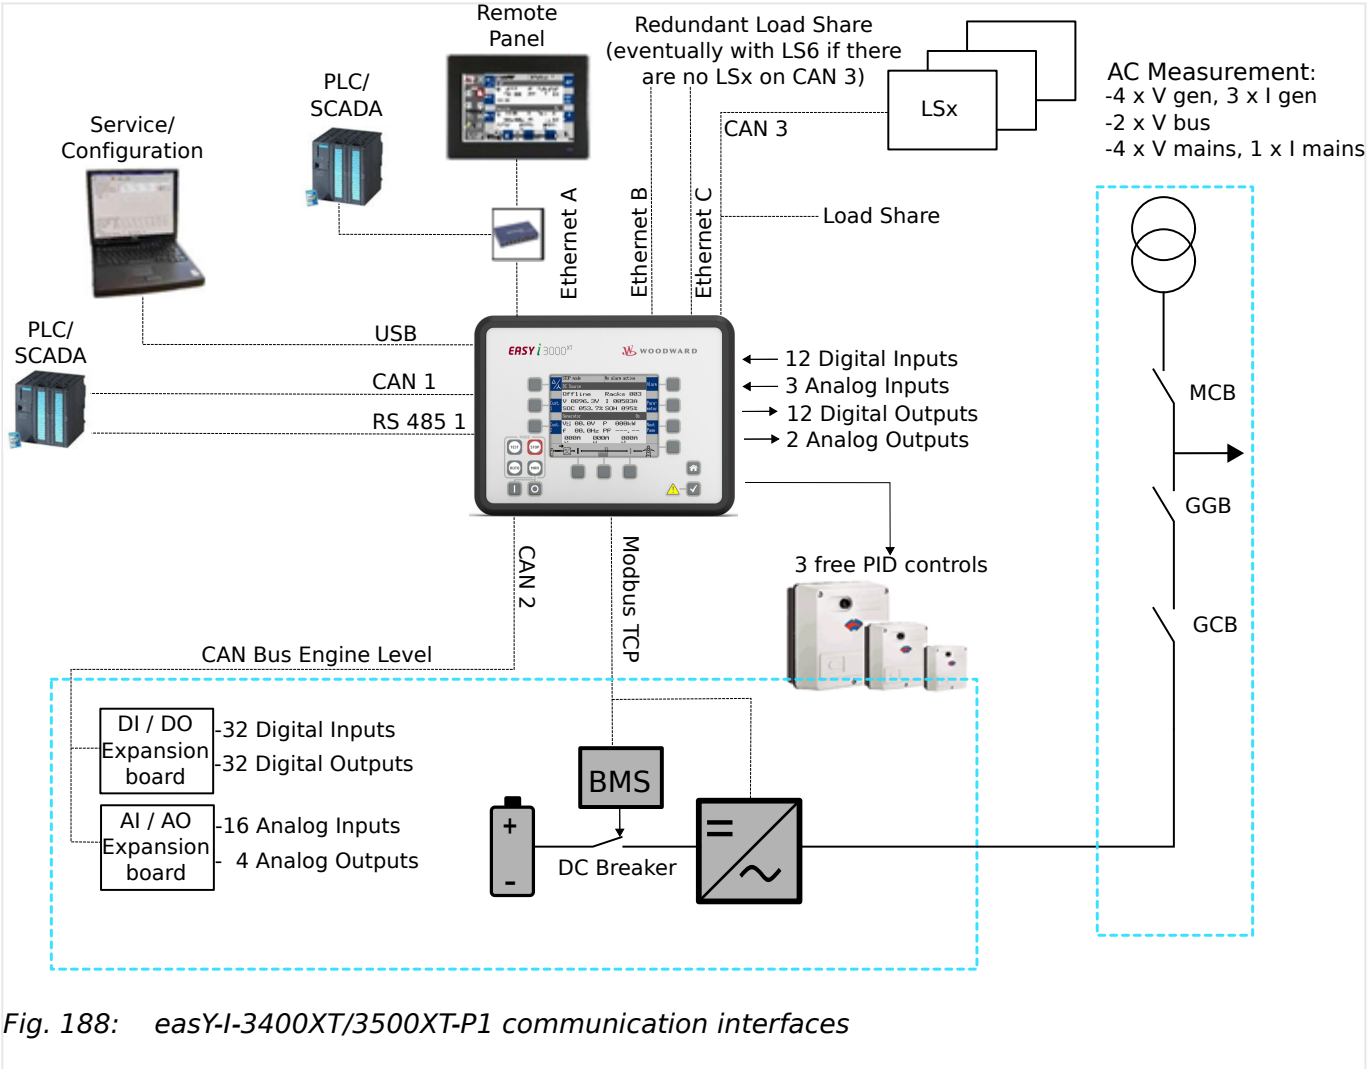


Fig. 188: easY-I-3400XT/3500XT-P1 communication interfaces

Released

4.7.1 USB (Service Port) Interface

If the easY-I-XT is connected to a PC via USB port, the device appears as an USB drive. The drive contains e.g. the technical manual, appropriate configuration files and the virtual COM port driver to connect to the easY-I using ToolKit. If the PC does not install the COM port automatically, then the installer in folder "Driver" must be executed before starting ToolKit.

There is no configuration to do for the USB Service Port.

USB Service Port

The USB service port is restricted for ToolKit communication, Woodward service communication, and - if provided by factory side - read only files.

The »Automatic Reconnection« over USB is not possible.

If connection over USB is lost, please reconnect manually:

- 1. Wait until the easY-I-XT is recognized again through the PC (as an external hard drive)
- 2. Start via ToolKit at new by "Disconnect" and then "Connect" again

4.7.2 RS-485 Interface

ID	Parameter	CL	Setting range **[Default]**	Description
3170	**Baudrate**	2	2400 Bd / 4800 Bd / 9600 Bd / **[19.2 kBd]** / 38.4 kBd / 56 kBd / 115 kBd	This parameter defines the baud rate for communications. Please note, that all participants on the bus must use the same baud rate.
3171	**Parity**	2	**[No]** / Even / Odd	The used parity of the interface is set here.
3172	**Stop bits**	2	**[One]** / Two	The number of stop bits is set here.
3173	**Full-, halfduplex mode**	2	**[Fullduplex]**	Fullduplex mode is enabled.
			Halfduplex	Half-duplex mode is enabled.
				Modbus Interface
3188	**Modbus slave ID**	2	0 to 255 **[1]**	The Modbus device address, which is used to identify the device via Modbus, is entered here. If "0" is configured here, the Modbus is disabled.
3189	**Reply delay time**	2	0.00 to 2.55 s **[0.00 s]**	This is the minimum delay time between a request from the Modbus master and the sent response of the slave. This time is required in half-duplex mode.
9128	**Password protection**	5	Off	Password protection for Modbus RS 485 is **not active**.
				Notes

Released

ID	Parameter	CL	Setting range [Default]	Description
				Take care for a protected access!
			[On]	Password protection for Modbus RS 485 is active.

4.7.3 Modbus Protocol



Data Format(s)

Modbus registers are read and written according to the Modbus standard as Big-endian.

Composite data types like LOGMAN, ANALOGMANAGER, and TEXT use separate descriptions.

ID	Parameter	CL	Setting range [Default]	Description
3184	**Modbus protocol number**	2	0 to 65535	A Modbus protocol may be selected by entering the data protocol ID here. If an unknown data protocol ID is configured here, nothing will be transmitted. Possible data protocol IDs (existing protocols) are listed in this Technical Manual. Instead of a Woodward protocol, a customer specific data protocol can be selected. Such a protocol must have been uploaded onto the device and its file name must fit the reserved range from protocol number 65100 to 65199. Use Woodward "TelegramMapper" PC software to create your own Data Telegrams (refer to “6.5.4 Modbus Telegram Mapper (Customer Written Data Protocols)”).
				Notes Another protocol can be used after a reboot of the control: Change Modbus protocol number first, then reboot 10419!
			[5400]	Number of the Data Telegram to be used for communication (corresponds to the file name [xxxx].scp).
				Notes All Date Telegrams described in this Technical Manual are device implemented: no separate scp-file (e.g. "5400.scp") needed.

Released

ID	Parameter	CL	Setting range [Default]	Description
3179	**Detect a gap in a Modbus frame**	2	**[On]**	If a received Modbus command has a gap between its byte of more than 5 ms, this command is ignored.
			Off	The Modbus message is not checked.
3181	**Power [W] exponent 10^x**	2	2 to 5 **[3]**	This setting adjusts the format of the 16 bit power values in the data telegram.
				Notes Valid for data telegram 5400 only! Refer to ↳ “Power measurement example” for examples.
3182	**Voltage [V] exponent 10^x**	2	-1 to 2 **[0]**	This setting adjusts the format of the 16 bit voltage values in the data telegram.
				Notes Valid for data telegram 5400 only! Refer to ↳ “Voltage measurement example” for examples.
3183	**Current [A] exponent 10^x**	2	-1 to 0 **[0]**	This setting adjusts the format of the 16 bit current values in the data telegram.
				Notes Valid for data telegram 5400 only! Refer to ↳ “Power measurement example” for examples.
3219	**Modbus master**	2	**[0ff]**	The Modbus master function is disabled and no Modbus master requests are sent.
			0n	The Modbus master function is requesting data according to the control file. **Note** Take care that a modbus master control file is already load into the device. For details refer to chapter ↳ “6.5.5 Modbus master”).

Released

Power measurement example

☼ **How to use Power exponent 3181**

Power measurement:

- The measurement range is 0...250 kW
- Momentary measurement value = 198.5 kW (198.500 W)

Setting value 3181	Meaning	Calculation	Transfer value (16 Bit, max. 32767)	Possible display format
2	10^2	198500 W / 10^2 W	1985	198.5 kW
3	10^3	198500 W / 10^3 W	198	198 kW
4	10^4	198500 W / 10^4 W	19	N/A
5	10^5	198500 W / 10^5 W	1	N/A

Table 103: Power measurement example

Voltage measurement example

☼ **How to use Voltage exponent 3182**

Voltage measurement:

- The measurement range is 0...480 V
- Momentary measurement value = 477.8 V

Setting	Meaning	Calculation	Transfer value (16 Bit, max. 32767)	Possible display format
-1	10^{-1}	477.8 V / 10^{-1} W	4778	477.8 V
0	10^0	477.8 V / 10^0 V	477	477 V
1	10^1	477.8 V / 10^1 V	47	N/A
2	10^2	477.8 V / 10^2 V	4	N/A

Table 104: Voltage measurement example

Current measurement example

How to use Current exponent 3183

Current measurement:

- The measurement range is 0...500 A
- Momentary measurement value = 345.4 A

Setting	Meaning	Calculation	Transfer value (16 Bit, max. 32767)	Possible display format
-1	10^{-1}	345.4 A / 10^{-1} A	3454	345.4 A
0	10^{0}	345.4 A / 10^{0} A	345	345 A

Table 105: Current measurement example

4.7.4 CAN Interfaces

4.7.4.1 CAN Interface 1

General notes

The CAN bus is a field bus and subject to various disturbances. Therefore, it cannot be guaranteed that every request will be answered. We recommend to repeat a request, which is not answered within reasonable time.

COB-ID of SYNC/TIME messages

Parameters 9100 and 9101 use synchronization and time messages that adhere to the following structure.

Note: "Time consumer" via CAN3 interface has priority in comparison to CAN1. After factory default settings CAN3 is prepared to consume time (9104 COB-ID TIME Message = 0xC000 0100 refer to 9104). If it is necessary to activate "Time consumer" over CAN 1, CAN3 "Time consumer" must be deactivate (via 9104 COB-ID TIME Message) over CAN3. Otherwise it will not be possible to receive time over CAN1.

Bit number	Value	Meaning
31 (MSB)	0	Unit does not consume TIME message
	1	Unit consumes TIME message
30	0	Unit does not generate SYNC/TIME message
	1	Unit generates SYNC/TIME message
29	X	N/A
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of SYNC/TIME COB-ID

Released

TIME synchronization message

CANopen master	COB-ID TIME	Time consumer	Time transmitted
Off	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes
	Bit 31 = 1; Bit 30 = 0	Yes	No
	Bit 31 = 1; Bit 30 = 1	Yes	Yes
Default Master	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes[1]
	Bit 31 = 1; Bit 30 = 0	Yes	No
	Bit 31 = 1; Bit 30 = 1	Yes	Yes[1]
On	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes
	Bit 31 = 1; Bit 30 = 0	Yes	No
	Bit 31 = 1; Bit 30 = 1	Yes	Yes

[1] If CANopen master (lowest Node-ID).

ID	Parameter	CL	Setting range **[Default]**	Description
3156	**Baudrate**	2	20 kBd / 50 kBd / 100 kBd / 125 kBd / 250 kBd / 500 kBd / 800 kBd / 1000 kBd **[250 kBd]**	This parameter defines the used baud rate. Please note, that all participants on the CAN bus must use the same baud rate.
1894	**Align device no. with Node-ID**	2	No **[Yes]**	If this parameter is configured to "Yes" the parameter »Node-ID CAN bus 1« 8950 will be overwritten with the value of the »Device number « 1702 and is not visible. If configured to "No", parameter »Device number « 1702 is visible and will not be overwritten. **Notes** This is to avoid CAN ID conflict in multi unit systems if using the same ID more than one time. This can cause CAN "Bus-Off" failure.
8950	**Node-ID CAN bus 1**	2	1 to 127 (dec) **[1]**	A number that is unique to the control must be set in this parameter so that this control unit can be correctly identified on the CAN bus. This address number may only be used once on the CAN bus. All

ID	Parameter	CL	Setting range [Default]	Description
				additional addresses are calculated based on this unique device number.
				Notes We recommend to configure the Node-IDs for units, which participate in load sharing, as low as possible to facilitate establishing of communication.
8993	**CANopen Master**	2		One bus participant must take over the network management and put the other participants into "operational" mode. The easY-I is able to perform this task.
			[Default Master]	The unit starts up in "operational" mode and sends a "Start_Remote_node" message after a short delay (the delay is the Node-ID (parameter ↳ 8950) in seconds, i.e. if the Node-ID is configured to 2, the message will be sent after 2 seconds). If more than one easY-I is configured to Default Master, the unit with the lower Node-ID will take over control. Therefore, the CAN bus devices, which are intended to act as Default Master should be assigned a low Node-ID. No other device on the CAN bus (except the easY-Is) may operate as Master).
			On	The unit is the CANopen Master and automatically changes into operational mode and transmits data.
			Off	The unit is a CANopen Slave. An external Master must change into operational mode.
				Notes If this parameter is configured to "Off", the Master controller (for example a PLC) must send a "Start_Remote_node" message to initiate the load share message transmission of the easY-I. If no "Start_Remote_node" message would be sent, the complete system would not be operational.
9120	**Producer heartbeat time**	2	0 to 65500 ms **[2000 ms]**	Independent from the CANopen Master configuration, the unit transmits a heartbeat message with this configured heartbeat cycle time. If the producer heartbeat time is equal 0, the heartbeat will only be sent as response to a remote frame request. The time

Released

ID	Parameter	CL	Setting range [Default]	Description
				configured here will be rounded up to the next 20 ms step.
9100	**COB-ID SYNC Message**	2	1 to FFFFFFFF hex **[80 hex]**	This parameter defines whether the unit generates the SYNC message or not. The message complies with CANopen specification: object 1005 hex; subindex 0 defines the COB-ID of the synchronization object (SYNC).
				Notes The structure of this object is shown in ↳ "COB-ID of SYNC/ TIME messages"
8940	**Producer SYNC Message time**	2	0 to 65000 ms **[20 ms]**	This is the cycle time of the SYNC message. If the unit is configured for this function (parameter ↳ 9100) it will send the SYNC message with this interval. The time configured here will be rounded up to the next 10 ms step.
9101	**COB-ID TIME Message**	2	1 to FFFFFFFF hex **[100 hex]**	This parameter defines whether the unit generates the TIME message or not. Complies with CANopen specification: object 1012 hex, subindex 0; defines the COB-ID of the time object (TIME).
				Notes The structure of this object is shown in ↳ "COB-ID of SYNC/ TIME messages"
9102	**Cycle of TIME sync. message**	2	1.0 to 6500.0 s **[10.0 s]**	This is the cycle time of the TIME message. If the unit is configured for this function (parameter ↳ 9101) it will send the TIME message with this interval.
				Notes The structure of this object is shown in ↳ "TIME synchronization message"
9126	**Password protection**	5	Off	Password protection for CAN 1 is **not active**.
				Notes Take care for a protected access!
			[On]	Password protection for CAN 1 is active.

4.7.4.1.1 Additional Server SDOs (Service Data Objects)

General notes



The CAN bus is a field bus and subject to various disturbances. Therefore, it cannot be guaranteed that every request will be answered. We recommend to repeat a request, which is not answered within reasonable time.

The first Node-ID is the standard Node-ID of CAN interface 1 (parameter 8950).

ID	Parameter	CL	Setting range [Default]	Description
12801	**2. Node ID**	2	0 to 127 (dec) **[0]**	In a multi-master application, each Master needs its own identifier (Node-ID) from the unit. in order to send remote signals (i.e. remote start, stop, shutdown, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node-ID to a value different than zero. This is the additional CAN ID for the PLC.
12802	**3. Node ID**	2	0 to 127 (dec) **[0]**	In a multi-master application, each Master needs its own identifier (Node-ID) from the unit. in order to send remote signals (i.e. remote start, stop, shutdown, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node-ID to a value different than zero. This is the additional CAN ID for the PLC.
12803	**4. Node ID**	2	0 to 127 (dec) **[0]**	In a multi-master application, each Master needs its own identifier (Node-ID) from the unit. in order to send remote signals (i.e. remote start, stop, shutdown, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node-ID to a value different than zero. This is the additional CAN ID for the PLC.
12804	**5. Node ID**	2	0 to 127 (dec) **[0]**	In a multi-master application, each Master needs its own identifier (Node-ID) from the unit. in order to send remote signals (i.e. remote start, stop, shutdown, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node-ID to a value different than

Released

ID	Parameter	CL	Setting range [Default]	Description
				zero. This is the additional CAN ID for the PLC.

4.7.4.1.2 Receive PDO {x} (Process Data Object)

General notes

RPDO mapping is carried out as shown in (↳ Fig. 189).

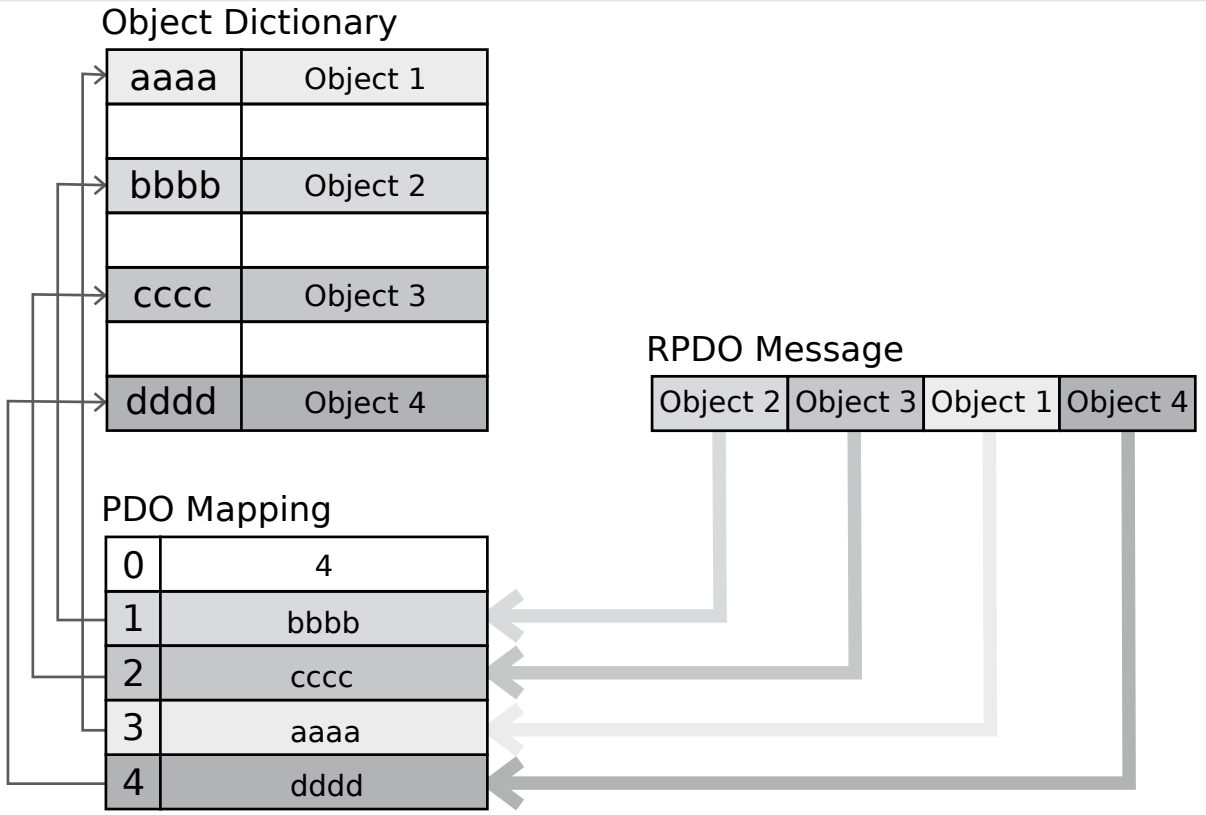


Fig. 189: RPDO mapping principle

Parameters ↳ 9300/↳ 9310/↳ 9320/↳ 12805/↳ 12806 use communication parameters that adhere to the following structure.

RPDO Objects can be remote signals (parameter 503; please refer to ↳ "Remote control word 1" for details), DI states and AI measured values.

Bit number	Value	Meaning
31 (MSB)	0	PDO exists / is valid
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A

Bit number	Value	Meaning
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of COB-ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

ID	Parameter	CL	Setting range [Default]	Description
9300 9310 9320 12805 12806	**COB-ID**	2	1 to FFFFFFFF hex **[80000000 hex]**	This parameter contains the communication parameters for the PDOs, the device is able to receive. Complies with CANopen specification: object 1400 hex (for RPDO 1, 1401 hex for RPDO 2, 1402 hex for RPDO 3, 1403 hex for RPDO 4, and 1404 hex for RPDO 5), subindex 1.
				Notes The structure of this object is shown in Chapter 4.7.4.1.2. Do not configure an RPDO or TPDO with a COB-ID higher than 580 hex or lower than 180 hex. These IDs are reserved for internal purposes.
9121 9122 9123 9124 9125	**Event timer**	2	0 to 65500 ms **[2000 ms]**	This parameter configures the time, from which this PDO is marked as "not existing". The time configured here will be rounded up to the next 5 ms step. Received messages are processed by the control unit every 20 ms. Messages, which are sent faster, will be discarded. We recommend to configure ten times the cycle time of the received data here.
				Notes Complies with CANopen specification: object 1400 hex (for RPDO 1, 1401 hex for RPDO 2, 1402 hex for RPDO 3, 1403 hex for RPDO 4, and 1404 for RPDO 5), subindex 5
8970 8971 8972 8973 8974	**Selected Data Protocol**	2	0 to 65535 **[0]**	A data protocol may be selected by entering the data protocol ID here. If 0 is configured here, the message assembled by the mapping parameters is used. If an unknown data protocol ID is configured here, a failure is indicated by the CAN status bits. Possible data protocol IDs are:

Released

ID	Parameter	CL	Setting range [Default]	Description
			65000	IKD 1 – external DIs/DOs 1 through 8
			65001	IKD 1 – external DIs/DOs 9 through 16
			65002	IKD 1 – external DIs/DOs 17 through 24
			65003	IKD 1 – external DIs/DOs 25 through 32
9910 9915 9905 12821 12831	**Number of Mapped Objects**	2	0 to 4 **[0]**	This parameter defines the number of valid entries within the mapping record. This number is also the number of the application variables, which shall be received with the corresponding PDO.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3, 1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 0
9911 9916 9906 12822 12832	**1. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 1.
9912 9917 9907 12823 12833	**2. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3, 1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 2.
9913 9918 9908 12824	**3. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

Released

ID	Parameter	CL	Setting range [Default]	Description
12834				**Notes** Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3, 1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 3.
9914 9919 9909 12825 12835	**4. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3, 1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 4.

4.7.4.1.3 Transmit PDO {x} (Process Data Object)

General notes

TPDO mapping is carried out as shown in (Fig. 190).

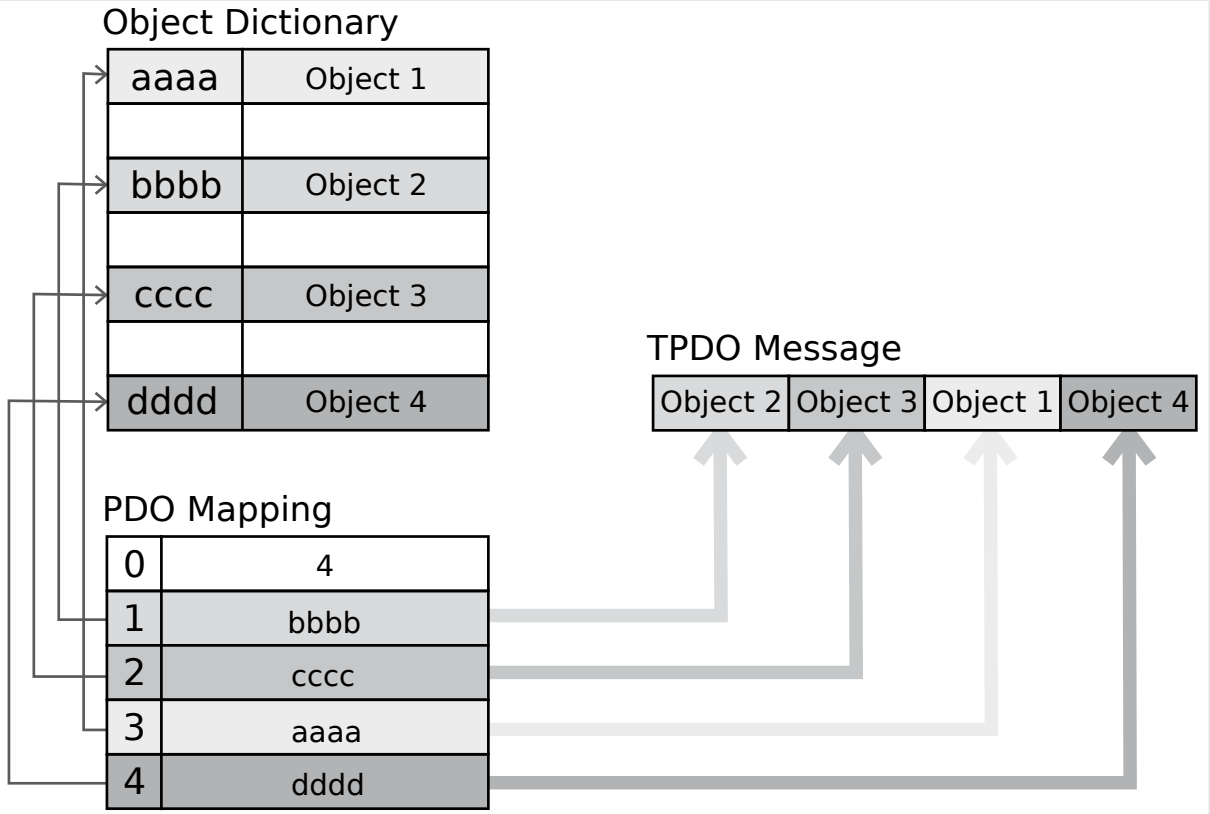


Fig. 190: TPDO mapping

CANopen allows to send 8 byte of data with each Transmit PDO. These may be defined separately if no pre-defined data protocol is used.

All data protocol parameters with a parameter ID may be sent as an object with a CANopen Transmit PDO.

The data length will be taken from the data byte column (see "9.3 Data Protocols"):

- 1,2 UNSIGNED16 or SIGNED16
- 3,4 UNSIGNED16 or SIGNED16
- 5,6 UNSIGNED16 or SIGNED16
- 1,2,3,4 UNSIGNED32 or SIGNED32
- 3,4,5,6 UNSIGNED32 or SIGNED32
- etc.

The object ID is identical with the parameter ID when configuring via front panel or ToolKit.

Parameters 9600/9610/9620/9630/12792 use communication parameters that adhere to the following structure.

Bit number	Value	Meaning
31 (MSB)	0	PDO exists / is valid

Bit number	Value	Meaning
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of COB-ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

Transmission types

Parameters 9602/9612/9622/9632/12793 are used to select one of the following transmission types.

Transmission type	PDO transmission				
	Cyclic	Acyclic	Synchronous	Asynchronous	RTR only
0	Will not be sent				
1-240	X		X		
241-251	Will not be sent				
252	Will not be sent				
253	Will not be sent				
254				X	
255				X	

A value between 1 and 240 means that the PDO is transferred synchronously and cyclically. The transmission type indicating the number of SYNC messages, which are necessary to trigger PDO transmissions.

Transmit PDOs are always triggered by the following SYNC upon reception of data independent of the transmission types 0 to 240. For TPDOs, transmission type 254 and 255 means, the application event is the event timer.

ID	Parameter	CL	Setting range [Default]	Description
9600 9610 9620 9630	**COB-ID**	2	1 to FFFFFFFF hex **[80000000 hex]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. The unit transmits data (i.e. visualization data) on the CAN ID configured here.

Released

ID	Parameter	CL	Setting range [Default]	Description
12792				Complies with CANopen specification: object 1800 hex for (TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 1.
				Notes The structure of this object is shown in Chapter 4.7.4.1.3 Do not configure an RPDO or TPDO with a COB-ID higher than 580 hex or lower than 180 hex. These IDs are reserved for internal purposes. In case a LSG is part of CAN 1, do not configure COB-IDs 181 - 18E hex because legacy devices are using same IDs but cannot be switched.
9602 9612 9622 9632 12793	**Transmission type**	2	0 to 255 **[255]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. It defines whether the unit broadcasts all data automatically (value 254 or 255) or only upon request with the configured address of the COB-ID SYNC message (parameter 9100).
				Notes Complies with CANopen specification: object 1800 hex (for TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 2. The description of the transmission type is shown in “Transmission types”.
9604 9614 9624 9634 12794	**Event timer**	2	0 to 65535 ms **[20 ms]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. The broadcast cycle for the transmitted data is configured here. The time configured here will be rounded up to the next 5 ms step.
				Notes Complies with CANopen specification: object 1800 hex (for TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 5
8962 8963	**Selected Data Protocol**	2	0 to 65535 8962: **[0]**	A data protocol may be selected by entering the data protocol ID here. If 0 is configured here, the message assembled by the

ID	Parameter	CL	Setting range [Default]	Description
8964 8965 8966			8963: **[0]** 8964: **[0]** 8965: **[0]** 8966: **[0]**	mapping parameters is used. If an unknown data protocol ID is configured here, a failure is indicated by the CAN status bits. Possible data protocol IDs are:
			65000	IKD 1 – external DIs/DOs 1 through 8
			65001	IKD 1 – external DIs/DOs 9 through 16
			65002	IKD 1 – external DIs/DOs 17 through 24
			65003	IKD 1 – external DIs/DOs 25 through 32
9609 9619 9629 9639 12799	**Number of Mapped Objects**	2	0 to 4 **[0]**	This parameter contains the mapping for the PDOs the unit is able to transmit. This number is also the number of the application variables, which shall be transmitted with the corresponding PDO.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 0
9605 9615 9625 9635 12795	**1. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 1
9606 9616 9626 9636 12796	**2. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex

Released

ID	Parameter	CL	Setting range [Default]	Description
				for TPDO 4, and 1A04 hex for TPDO 5), subindex 2
9607 9617 9627 9637 12797	**3. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 3
9608 9618 9628 9638 12798	**4. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 4

4.7.4.2 CAN Interface 2

General notes



This CAN Interface is dedicated to

- external CANopen devices with analog and/or digital terminals.

General Settings

ID	Parameter	CL	Setting range [Default]	Description
3157	**Baudrate**	2	20 kBd / 50 kBd / 100 kBd / 125 kBd / 250 kBd **[250 kBd]**	This parameter defines the used baud rate. **Notes** All participants on the CAN bus must use the same baud rate.

4.7.4.2.1 Expansion Modules at CANopen Interface

The CANopen interface at CAN 2 is very flexible.

The configuration of the expansion modules is split into two parts:

- One part is located at the CAN2 interface pages and defines the Node IDs and the types of external devices and is described here.

  An application description explains the setup in detail (refer to “6.3.7 Setup Expansion Modules at CAN 2”).

- One other part is located at the external analog/digital inputs/outputs pages and defines how many inputs/outputs are used and the scaling of the analog types. Refer to chapters “4.4.2.4 Analog Inputs” for reference.

- Six Node-IDs can be selected to be used with different combinations of external terminals ("# Node-ID", parameters 9930-9935)

- A number of well defined combinations is available for Woodward IKD and/or third party expansion modules from Phoenix and WAGO: ("Select external terminals", parameter 15320)

  This parameter defines the type and the maximal number of DI, DO, AI, AO combinations.

- Alternatively new combinations can be implemented by selecting "Ext.term.file" and define this separate file by "Sequencer filename", parameter 15318.

  Such files can be prepared by Woodward. Please ask you local Woodward partner for an offer.

How to read the table ...

- "2 IKD: 16 X DI/DO": 2 devices with 8 DI/DO each (2 x 8 = 16 DI/DO together)
- "P": Phoenix
- "W": Wago
- "_": separator for combinations with different headers

For basic configuration see “6.3.7 Setup Expansion Modules at CAN 2” - especially the flow charts of “Configuration process help”ff.

Assignment of selectable Combinations CAN 2 (Node 1-6) used for DI/DO – Only Digital Inputs and Digital Outputs:

Combination selected by ...		**Terminal assigned to ...**					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
DI/DO: Digital Inputs and Digital Outputs, only							

Released

Combination selected by ...		Terminal assigned to ...					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
1IKD	1 IKD: 8 x DI/DO	IKD1 DI/DO 1-8					
2IKD	2 IKD: 16 x DI/DO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16				
3IKD	3 IKD: 24 x DI/DO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24			
4IKD	4 IKD: 32 x DI/DO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24	IKD4 DI/DO 25-32		
P16D	1 Phoenix: 16 x DI/DO			P16DIDO DI/DO 1-16			
W16D	1 WAGO: 16 x DI/DO			W16DIDO DI/DO 1-16			
P32D	1 Phoenix: 32 x DI/DO			P32DIDO DI/DO 1-32			
W32D	1 WAGO: 32 x DI/DO			W32DIDO DI/DO 1-32			
P16D_16D	2 Phoenix: 32 x DI/DO			P16DIDO DI/DO 1-16	P16DIDO DI/DO 17-32		

Assignment of selectable Combinations CAN 2 (Node 1-6) used for AI/AO – Only Analog Inputs and Analog Outputs:

Combination selected by ...		Terminal assigned to ...					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
AI/AO: Analog Inputs and Analog Outputs, only							
P 16AI 4AO	1 Phoenix: 16 x AI / 4 x AO					P16AI4AO AI 1-16 AO 1-4	
W 16AI 4AO	1 WAGO:					W16AI4AO AI 1-16	

Combination selected by ...		Terminal assigned to ...					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
	16 x AI / 4 x AO					AO 1-4	

Assignment of selectable Combinations CAN 2 (Node 1-6) used for DI/DO/AI/AO:
Combinations of the expansion modules:

Combination selected by ...		Terminal assigned to ...					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
DI/DO/AI/AO: Combinations of the expansion modules IKD and/or Phoenix							
1IKD_ P 16AI 4AO	1 IKD: 8 x DI/DO 1 Phoenix: 16 x AI / 4 x AO	IKD1 DI/DO 1-8				P16AI4AO AI 1-16 AO 1-4	
2IKD_ P 16AI 4AO	2 IKD: 16 x DI/DO 1 Phoenix: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16			P16AI4AO AI 1-16 AO 1-4	
3IKD_ P 16AI 4AO	3 IKD: 24 x DI/DO 1 Phoenix: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24		P16AI4AO AI 1-16 AO 1-4	
4IKD_ P 16AI 4AO	4 IKD: 32 x DI/DO 1 Phoenix: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24	IKD4 DI/DO 25-32	P16AI4AO AI 1-16 AO 1-4	
P 16D_ 16AI 4AO	1 Phoenix:: 16 x DI/DO 1 Phoenix: 16 x AI / 4 x AO			P16DIDO DI/DO 1-16		P16AI4AO AI 1-16 AO 1-4	

Released

Combination selected by ...		**Terminal assigned to ...**					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
P 16D 16AI 4AO	1 Phoenix: 16 x DI/DO 16 x AI / 4 x AO					P16DIDO DI/DO 1-16 P16AI4AO AI 1-16 AO 1-4	
W 16D 16AI 4AO	1 WAGO: 16 x DI/DO 16 x AI / 4 x AO					W16DIDO DI/DO 1-16 W16AI4AO AI 1-16 AO 1-4	
P 32D 16AI 4AO	1 Phoenix,: 32 x DI/DO 16 x AI / 4 x AO					P32DIDO DI/DO 1-32 P16AI4AO AI 1-16 AO 1-4	
W 32D 16AI 4AO	1 WAGO,: 32 x DI/DO 16 x AI / 4 x AO					W32DIDO DI/DO 1-32 W16AI4AO AI 1-16 AO 1-4	
2P 16D_ 16AI 4AO	2 Phoenix: 32 x DI/DO 1 Phoenix: 16 x AI / 4 x AO			P16DIDO DI/DO 1-16	P16DIDO DI/DO 17-32	P16AI4AO AI 1-16 AO 1-4	
P32 D_ 16AI 4AO	1 Phoenix: 32 x DI/DO 1 Phoenix: 16 x AI / 4 x AO			P32DIDO DI/DO 1-32		P16AI4AO AI 1-16 AO 1-4	
DI/DO/AI/AO: Combinations of the expansion modules IKD and/or WAGO							
W 16AI 4AO	1 Wago: 16 x AI / 4 x AO					W16AI4AO AI 1-16	

Combination selected by ...		Terminal assigned to ...					
Select external terminals **ID 15320**	**# of terminals: I/O**	**1st Node-ID** **ID 9930**	**2nd Node-ID** **ID 9931**	**3rd Node-ID** **ID 9932**	**4th Node-ID** **ID 9933**	**5th Node-ID** **ID 9934**	**6th Node-ID** **ID 9935**
						AO 1-4	
1IKD_W16AI4AO	1 IKD: 8 x DI/DO 1 Wago: 16 x AI / 4 x AO	IKD1 DI/DO 1-8				W16AI4AO AI 1-16 AO 1-4	
2IKD_W16AI4AO	2 IKD: 16 x DI/DO 1 Wago: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16			W16AI4AO AI 1-16 AO 1-4	
3IKD_W16AI4AO	3 IKD: 24 x DI/DO 1 Wago: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24		W16AI4AO AI 1-16 AO 1-4	
4IKD_W16AI4AO	4 IKD: 32 x DI/DO 1 Wago: 16 x AI / 4 x AO	IKD1 DI/DO 1-8	IKD2 DI/DO 9-16	IKD3 DI/DO 17-24	IKD4 DI/DO 25-32	W16AI4AO AI 1-16 AO 1-4	



If you need only four analog inputs, select “P16AI4AO” and configure only four inputs to ON at the configuration for the external analog inputs.

CANopen Settings and Procedure

Proceed as follows to configure an external device:

- Connect external device(s)
- **Check that WAGO devices are configured to default**.

  This is the case if the WAGO CAN-Coupler is new or if there was any change in number or kind of WAGO modules.
- Configure and check parameters at the easY-I (Select external terminals, Node-ID, DI/DOs, AI/AOs)

  Reboot the device that the setting (15320) becomes effective

Released

- If WAGO terminals are connected and the configuration of the external AIs and/or AOs is done, the easY-I must send a configuration string to the WAGO coupler one time. This can be done by setting parameter »Configure external devices« ↳ 15134 to "YES". This must be repeated if there is any change in number or kind of WAGO modules.
- If you have changed parameter »Select external terminals « ↳ 15320: **reboot the device**
- Set parameter »Configure external devices« ↳ 15134 to "Yes"
- Verify the successful configuration of the external device(s)



Update WAGO After Any Change!

The update procedure described above must be repeated if there is any change in number or kind of Wago modules.

ID	Parameter	CL	Setting range **[Default]**	Description
9940	**This device**	2	Node-ID 1-126 **[Node-ID 7]**	The Node-ID for the control unit (this device) is configured here.
9930	**1st Node-ID**	2	Node-ID 1-126 **[Node-ID 1]**	This Node-ID's are used for the communication with CANopen devices. Parameter ↳ 15320 "Select external terminals" offers often used pre-settings and the possibility to point to a file containing customer specific settings.
9931	**2nd Node-ID**	2	Node-ID 1-126 **[Node-ID 2]**	
9932	**3rd Node-ID**	2	Node-ID 1-126 **[Node-ID 3]**	
9933	**4th Node-ID**	2	Node-ID 1-126 **[Node-ID 4]**	
9934	**5th Node-ID**	2	Node-ID 1-126 **[Node-ID 5]**	
9935	**6th Node-ID**	2	Node-ID 1-126 **[Node-ID 6]**	
15320	**Select external terminals**	2		**Notes** A change of this parameter becomes **only effective if the device is rebooted!** and: the external devices itself must be configured with **the correct node ID**.
			[Off]	No external CANopen device is supported on CAN2
			Ext. term file	File defined with parameter ↳ 15318 is active.

ID	Parameter	CL	Setting range [Default]	Description
			1IKD	Selection of the combination of terminal(s) at the six pre-set Node-IDs. For terminal description see table ↳ Table above.
			2IKD	
			3IKD	
			4IKD	
			P16D	
			P32D	
			P16D_16D	
			P16AI4AO	
			1IKD_ P16AI4AO	
			2IKD_ P16AI4AO	
			3IKD_ P16AI4AO	
			4IKD_ P16AI4AO	
			P16D_16AI4AO	
			P16D16AI4AO	
			P32D16AI4AO	
			2P16D_16AI4AO	
			P32D_16AI4AO	
			W16AI4AO	
			1IKD_W16AI4AO	
			2IKD_W16AI4AO	
			3IKD_W16AI4AO	
			4IKD_W16AI4AO	
			W16D	
			W32D	
			W16D16AI4AO	
			W32D16AI4AO	
15318	**Sequencer filename**	2	**[Filename.seq]**	Filename of a special additional file to define external devices (see NOTE ↳ Chapter 4.7.4.2.1). **Notes** This parameter takes only effect if parameter ↳ 15320 is configured to “Ext.term.file”. Please ask your Woodward partner for support / an offer.
15134	**Configure external devices**	2	Yes **[No]**	This parameter starts the configuration of external Phoenix expansion boards. **Notes**

Released

ID	Parameter	CL	Setting range [Default]	Description
				This parameter can only be used to configure Phoenix or Wago expansion boards as describe above. Refer to the IKD 1 Manual 37135 for configuring the IKD 1 expansion boards.

Changing the Node ID

Changing the Node ID of a Wago terminal which is still configured:

- Set the new NODE-ID via DIP switches
- Load default values (via a temporary change in number or kind of Wago modules-run configuration again.

4.7.4.2.1.1 Configurable Wago devices

If configurable WAGO devices are used, the mode of the terminal must be configured via the PC software WAGO I/O Check. These configuration cannot be done via the easY-I parameters. Be aware that the easY-I parameters for the corresponding channels must be consistent with the Wago configuration done with the WAGO I/O Check.

RTD device (750-451)

To use the 8 channel RTD device (750-451) the following process image must be configured via the Wago I/O-Check.



The following types are not supported: Ni1000 (high resolution), Ni1000 (TK5000), Pt1000 (EN 60751 high resolution), and 1200 Ohm.

Typ	Expected format
Pt100 (EN 60751)	default
Ni100 (EN 60751)	default
Pt500 (EN 60751)	default
Pt200 (EN 60751)	default
Ni1000 (TK6180, DN 43760)	default
Ni120 (Minco)	default
5000 Ohm	S5-FB250

Thermocouple device (750-458) for voltage measurement

There is no intuitive setting in the easY-I-XT if a channel of the Thermocouple (TC) device (750-458) is configured for voltage measurement. But nevertheless it is possible.

Therefore a special scaling of the easY-I-XT parameters “Sender value at display min.” and “Sender value at display max” is required like described in the table below:

Voltage measuring range	“Sender value at display min.”	“Sender value at display max.”
+/- 30 mV	-614.4	614.4
+/- 60 mV	-307.2	307.2
+/- 120 mV	-153.6	153.6

4.7.4.3 CAN Interface 3

General notes



The CAN bus is a field bus and subject to various disturbances. Therefore, it cannot be guaranteed that every request will be answered. We recommend to repeat a request, which is not answered within reasonable time.

COB-ID of SYNC/TIME messages



Parameters 9104 and 9105 use synchronization and time messages that adhere to the following structure.

Note: If CAN 3 is configured as "Time consumer", the unit consumes time message **only** from CAN 3.

Bit number	Value	Meaning
31 (MSB)	0	Unit does not consume TIME message
	1	Unit consumes TIME message
30	0	Unit does not generate SYNC/TIME message
	1	Unit generates SYNC/TIME message
29	X	N/A
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of SYNC/TIME COB-ID

TIME synchronization message

CANopen master	COB-ID TIME	Time consumer	Time transmitted
Off	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes
	Bit 31 = 1; Bit 30 = 0	Yes	No
	Bit 31 = 1; Bit 30 = 1	Yes	Yes
Default Master	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes[1]
	Bit 31 = 1; Bit 30 = 0	Yes	No

Released

CANopen master	COB-ID TIME	Time consumer	Time transmitted
	Bit 31 = 1; Bit 30 = 1	Yes	Yes[1]
On	Bit 31 = 0; Bit 30 = 0	No	No
	Bit 31 = 0; Bit 30 = 1	No	Yes
	Bit 31 = 1; Bit 30 = 0	Yes	No
	Bit 31 = 1; Bit 30 = 1	Yes	Yes

[1] If CANopen master (lowest Node-ID).

ID	Parameter	CL	Setting range **[Default]**	Description
3143	**Baudrate**	2	20 kBd / 50 kBd / 100 kBd / 125 kBd / 250 kBd / 500 kBd / 800 kBd / 1000 kBd **[250 kBd]**	This parameter defines the used baud rate. Please note, that all participants on the CAN bus must use the same baud rate.
1895	**Align device no. with Node-ID**	2	No **[Yes]**	If this parameter is configured to "Yes" the parameter »Node-ID CAN bus 3« ⮡ 8952 will be overwritten with the value of the »Device number « ⮡ 1702 and is not visible. If configured to "No", parameter »Device number « 1702 is visible and will not be overwritten. **Notes** This is to avoid CAN ID conflict in multi unit systems if using the same ID more than one time. This can cause CAN "Bus-Off" failure.
8952	**Node-ID CAN bus 3**	2	1 to 127 (dec) **[1]**	A number that is unique to the control must be set in this parameter so that this control unit can be correctly identified on the CAN bus. This address number may only be used once on the CAN bus. All additional addresses are calculated based on this unique device number. **Notes** We recommend to configure the Node-IDs for units, which participate in load sharing, as low as possible to facilitate establishing of communication.

ID	Parameter	CL	Setting range **[Default]**	Description
				For multiple genset applications please make sure to change parameter 1702 as well
8995	**CANopen Master**	2		One bus participant must take over the network management and put the other participants into "operational" mode. The easY-I is able to perform this task.
			[Default Master]	The unit starts up in "operational" mode and sends a "Start_Remote_node" message after a short delay (the delay is the Node-ID (parameter 8952) in seconds, i.e. if the Node-ID is configured to 2, the message will be sent after 2 seconds). If more than one easY-I is configured to Default Master, the unit with the lower Node-ID will take over control. Therefore, the CAN bus devices, which are intended to act as Default Master should be assigned a low Node-ID. No other device on the CAN bus (except the easY-Is) may operate as Master).
			On	The unit is the CANopen Master and automatically changes into operational mode and transmits data.
			Off	The unit is a CANopen Slave. An external Master must change into operational mode.
				Notes If this parameter is configured to "Off", the Master controller (for example a PLC) must send a "Start_Remote_node" message to initiate the load share message transmission of the easY-I. If no "Start_Remote_node" message would be sent, the complete system would not be operational.
8953	**Producer heartbeat time**	2	0 to 65500 ms **[2000 ms]**	Independent from the CANopen Master configuration, the unit transmits a heartbeat message with this configured heartbeat cycle time. If the producer heartbeat time is equal 0, the heartbeat will only be sent as response to a remote frame request. The time configured here will be rounded up to the next 20 ms step.
8967	**COB-ID SYNC Message**	2	0 to FFFFFFFF hex **[80 hex]**	This parameter defines whether the unit generates the SYNC message or not. Complies with CANopen specification: object 1005,

Released

ID	Parameter	CL	Setting range **[Default]**	Description
				subindex 0; defines the COB-ID of the synchronization object (SYNC).
				Notes The structure of this object is shown in ↳ "COB-ID of SYNC/ TIME messages"
8968	**Producer SYNC Message time**	2	0 to 65000 ms **[20 ms]**	This is the cycle time of the SYNC message. If the unit is configured for this function it will send the SYNC message with this interval. The time configured here will be rounded up to the next 10 ms step.
9104	**COB-ID TIME Message**	2	1 to FFFFFFFF hex **[C0000100 hex]**	This parameter defines whether the unit generates the TIME message or not. Complies with CANopen specification: object 1012, subindex 0; defines the COB-ID of the time object (TIME).
				Notes The structure of this object is shown in ↳ "COB-ID of SYNC/ TIME messages"
9105	**Cycle of TIME sync. message**	2	1.0 to 6500.0 s **[10.0 s]**	This is the cycle time of the TIME message. If the unit is configured for this function (parameter ↳ 9104) it will send the TIME message with this interval.
				Notes The structure of this object is shown in ↳ "TIME synchronization message"
9127	**Password protection**	5	Off	Password protection for CAN 3 is **not active**.
				Notes Take care for a protected access!
			[On]	Password protection for CAN 3 is active.

4.7.4.3.1 Receive PDO {x} (Process Data Object)

General notes

RPDO mapping is carried out as shown in (↳ Fig. 191).

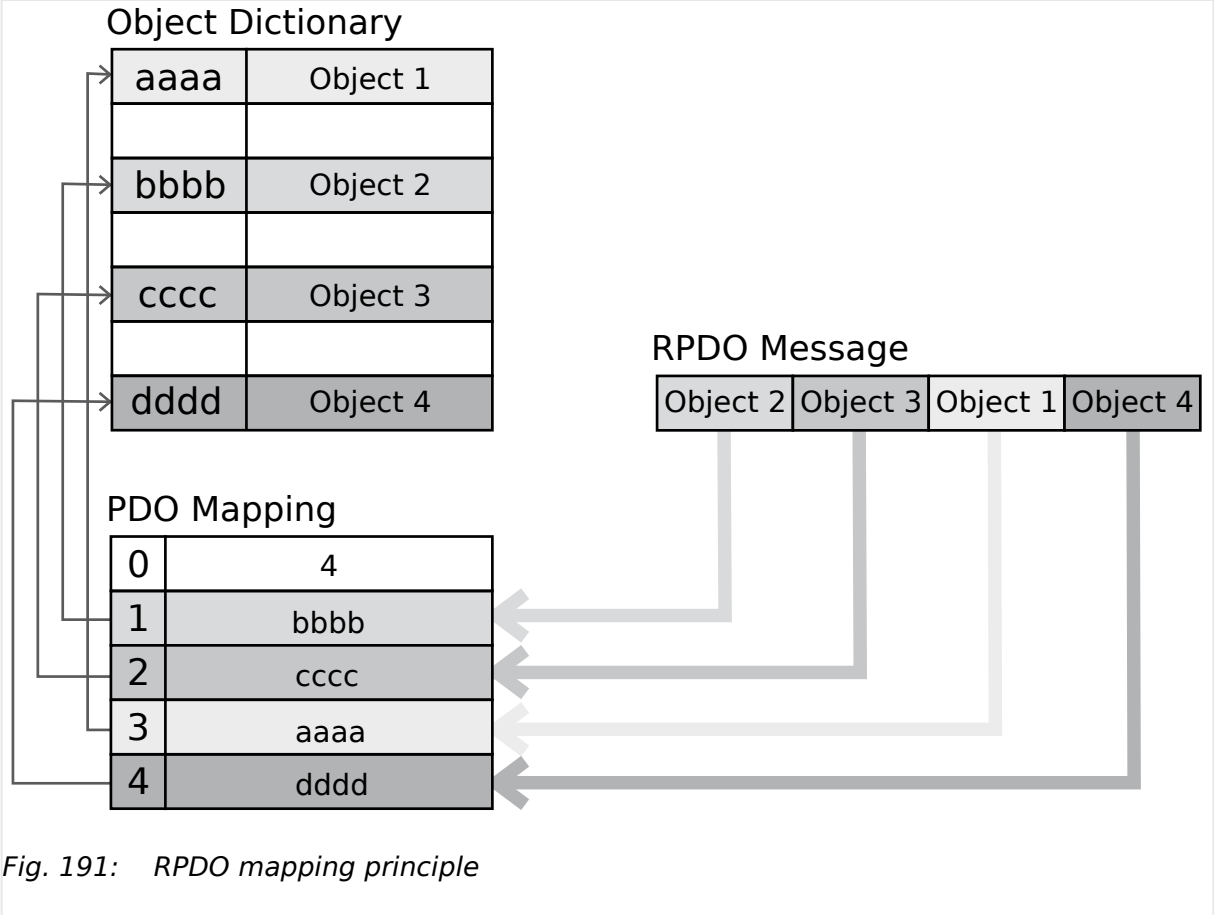


Fig. 191: RPDO mapping principle

COB-ID parameters

Parameters ↳ 12741/↳ 12751/↳ 12761/↳ 12771/↳ 12781 use communication parameters that adhere to the following structure.

RPDO Objects can be remote signals (parameter 503; please refer to ↳ "Remote control word 1" for details), DI states and AI measured values.

UNSIGNED 32		MSB				LSB
Bits	Bits	31	30	29	28-11	10-0
11 bit ID	11 bit ID	0/1	X	X	0	11 bit identifier

Bit number	Value	Meaning
31 (MSB)	0	PDO exists / is valid
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of COB-ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

ID	Parameter	CL	Setting range [Default]	Description
12741 12751 12761 12771 12781	**COB-ID**	2	1 to FFFFFFFF hex **[80000000 hex]**	This parameter contains the communication parameters for the PDOs, the device is able to receive. Complies with CANopen specification: object 1400 hex (for RPDO 1, 1401 hex for RPDO 2, 1402 hex for RPDO 3, 1403 hex for RPDO 4, and 1404 hex for RPDO 5), subindex 1.
				Notes The structure of this object is shown in “COB-ID parameters”. Do not configure an RPDO or TPDO with a COB-ID higher than 580 hex or lower than 180 hex. These IDs are reserved for internal purposes.
12742 12752 12762 12772 12782	**Event timer**	2	0 to 65535 ms **[2000 ms]**	This parameter configures the time, from which this PDO is marked as "not existing". The time configured here will be rounded up to the next 5 ms step. Received messages are processed by the control unit every 20 ms. Messages, which are sent faster, will be discarded. We recommend to configure ten times the cycle time of the received data here.
				Notes Complies with CANopen specification: object 1400 (for RPDO 1, 1401 hex for RPDO 2, 1402 hex for RPDO 3, 1403 hex for RPDO 4, and 1404 hex for RPDO 5), subindex 5
12743 12753 12763 12773 12783	**Selected Data Protocol**	2	0 to 65535 **[0]**	A data protocol may be selected by entering the data protocol ID here. If 0 is configured here, the message assembled by the mapping parameters is used. If an unknown data protocol ID is configured here, a failure is indicated by the CAN status bits. Possible data protocol IDs are:
			65000	IKD 1 – external DIs/DOs 1 through 8
			65001	IKD 1 – external DIs/DOs 9 through 16

Released

ID	Parameter	CL	Setting range [Default]	Description
			65002	IKD 1 – external DIs/DOs 17 through 24
			65003	IKD 1 – external DIs/DOs 25 through 32
12744 12754 12764 12774 12784	**Number of Mapped Objects**	2	0 to 4 **[0]**	This parameter defines the number of valid entries within the mapping record. This number is also the number of the application variables, which shall be received with the corresponding PDO.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 0
12745 12755 12765 12775 12785	**1. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 1.
12746 12756 12766 12776 12786	**2. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 2.
12747 12757 12767 12777 12787	**3. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for

Released

ID	Parameter	CL	Setting range [Default]	Description
				RPDO 4, and 1604 hex for RPDO 5), subindex 3.
12748 12758 12768 12778 12788	**4. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1600 hex (for RPDO 1, 1601 hex for RPDO 2, 1602 hex for RPDO 3,1603 hex for RPDO 4, and 1604 hex for RPDO 5), subindex 4.

4.7.4.3.2 Transmit PDO {x} (Process Data Object)

General notes

TPDO mapping is carried out as shown in (Fig. 192).

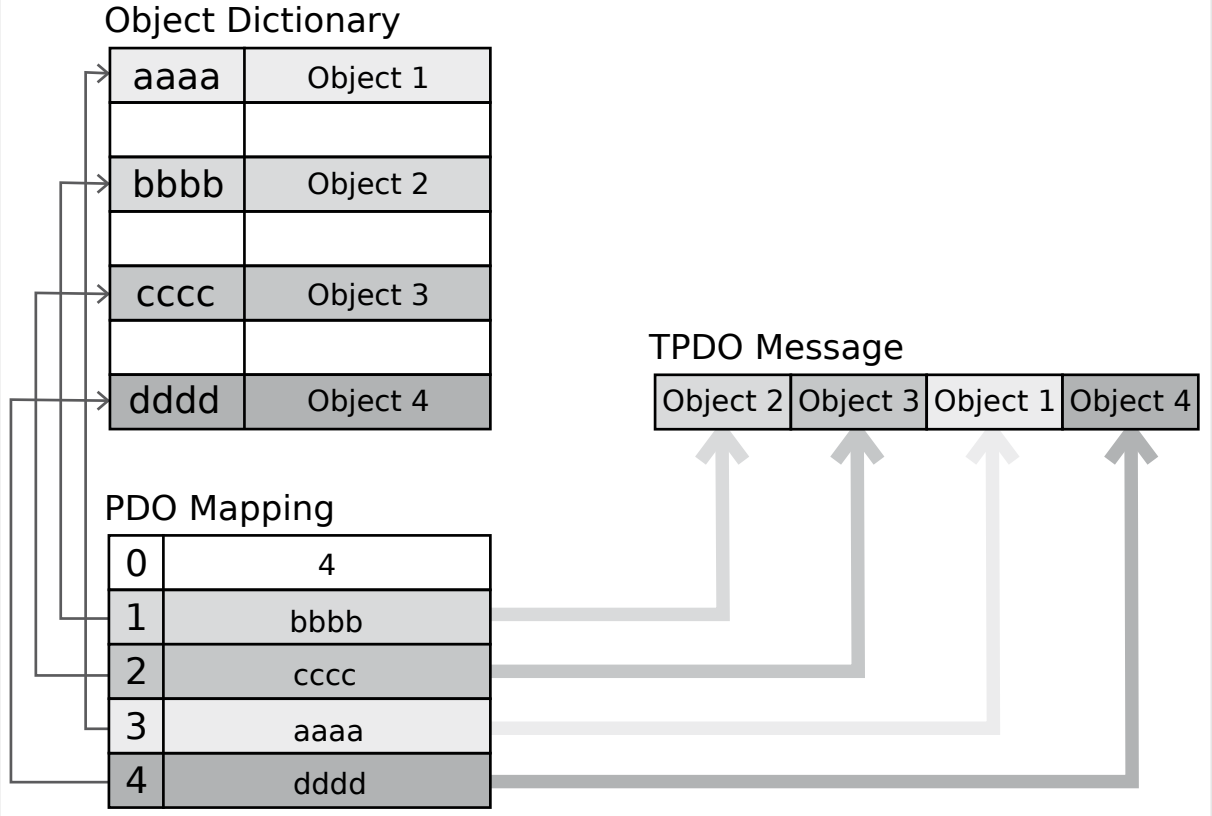


Fig. 192: TPDO mapping

CANopen allows to send 8 byte of data with each Transmit PDO. These may be defined separately if no pre-defined data protocol is used.

All data protocol parameters with a parameter ID may be sent as an object with a CANopen Transmit PDO.

The data length will be taken from the data byte column (see “9.3 Data Protocols”):

- 1,2 UNSIGNED16 or SIGNED16
- 3,4 UNSIGNED16 or SIGNED16
- 5,6 UNSIGNED16 or SIGNED16
- 1,2,3,4 UNSIGNED32 or SIGNED32
- 3,4,5,6 UNSIGNED32 or SIGNED32
- etc.

The object ID is identical with the parameter ID when configuring via front panel or ToolKit.

COB-ID parameters

Parameters 12691/12701/12711/12721/12731 use communication parameters that adhere to the following structure.

UNSIGNED 32		MSB				LSB
Bits	Bits	31	30	29	28-11	10-0
11 bit ID	11 bit ID	0/1	X	X	0	11 bit identifier

Bit number	Value	Meaning
31 (MSB)	0	PDO exists / is valid
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A
28-11	0	Always 0
10-0 (LSB)	X	Bits 10-0 of COB-ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

Transmission types

Parameters 12693/12703/12713/12723/12733 are used to select one of the following transmission types.

Transmission type	PDO transmission				
	Cyclic	Acyclic	Synchronous	Asynchronous	RTR only
0	Will not be sent				
1-240	X		X		
241-251	Will not be sent				
252	Will not be sent				
253	Will not be sent				
254				X	
255				X	

A value between 1 and 240 means that the PDO is transferred synchronously and cyclically. The transmission type indicating the number of SYNC, which are necessary to trigger PDO transmissions.

Receive PDOs are always triggered by the following SYNC upon reception of data independent of the transmission types 0 to 240. For TPDOs, transmission type 254 and 255 means, the application event is the event timer.

ID	Parameter	CL	Setting range [Default]	Description
12691 12701 12711 12721 12731	**COB-ID**	2	1 to FFFFFFFF hex **[80000000 hex]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. The unit transmits data (i.e. visualization data) on the CAN ID configured here. Complies with CANopen specification: object 1800 hex for (TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 1.
				Notes The structure of this object is shown in “COB-ID parameters” Do not configure an RPDO or TPDO with a COB-ID higher than 580 hex or lower than 180 hex. These IDs are reserved for internal purposes. In case a LSG is part of CAN 1, do not configure COB-IDs 181 - 18E

ID	Parameter	CL	Setting range [Default]	Description
				hex because legacy devices are using same IDs but cannot be switched.
12693 12703 12713 12723 12733	**Transmission type**	2	0 to 255 **[255]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. It defines whether the unit broadcasts all data automatically (value 254 or 255) or only upon request with the configured address of the COB-ID SYNC message (parameter 9100).
				Notes Complies with CANopen specification: object 1800 hex (for TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 2. The description of the transmission type is shown in "Transmission types".
12694 12704 12714 12724 12734	**Event timer**	2	0 to 65535 ms **[20 ms]**	This parameter contains the communication parameters for the PDOs the unit is able to transmit. The broadcast cycle for the transmitted data is configured here. The time configured here will be rounded up to the next 5 ms step.
				Notes Complies with CANopen specification: object 1800 hex (for TPDO 1, 1801 hex for TPDO 2, 1802 hex for TPDO 3, 1803 hex for TPDO 4, and 1804 hex for TPDO 5), subindex 5
12692 12702 12712 12722 12732	**Selected Data Protocol**	2	0 to 65535 8962: **[0]** 8963: **[0]** 8964: **[0]** 8965: **[0]** 8966: **[0]**	A data protocol may be selected by entering the data protocol ID here. If 0 is configured here, the message assembled by the mapping parameters is used. If an unknown data protocol ID is configured here, a failure is indicated by the CAN status bits. Possible data protocol IDs are:
			65000	IKD 1 – external DIs/DOs 1 through 8
			65001	IKD 1 – external DIs/DOs 9 through 16
			65002	IKD 1 – external DIs/DOs 17 through 24
			65003	IKD 1 – external DIs/DOs 25 through 32

Released

ID	Parameter	CL	Setting range [Default]	Description
12695 12705 12715 12725 12735	**Number of Mapped Objects**	2	0 to 4 **[0]**	This parameter contains the mapping for the PDOs the unit is able to transmit. This number is also the number of the application variables, which shall be transmitted with the corresponding PDO.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 0
12696 12706 12716 12726 12736	**1. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 1
12697 12707 12717 12727 12737	**2. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 2
12698 12708 12718 12728 12738	**3. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 3

Released

ID	Parameter	CL	Setting range [Default]	Description
12699 12709 12719 12729 12739	**4. Mapped Object**	2	0 to 65535 **[0]**	This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.
				Notes Complies with CANopen specification: object 1A00 hex (for TPDO 1, 1A01 hex for TPDO 2, 1A02 hex for TPDO 3, 1A03 hex for TPDO 4, and 1A04 hex for TPDO 5), subindex 4

4.7.4.4 CAN Load Share Parameters

ID	Parameter	CL	Setting range [Default]	Description
9921	**Transfer rate LS fast message** (CAN)	2	0.10 to 0.30 s **[0.10 s]**	The transfer rate defines the time delay between two fast CAN messages. In case of CAN systems with a high bus load (e.g. long distance between the units with low baud rate), a shorter transfer rate (higher time setting) helps to reduce the bus load.
9999	**Load share timeout factor**	2	2 to 20 **[2]**	"Transfer rate LS fast message" multiplied by "Load share timeout factor" defines the loadshare timeout. If a loadshare message was not received within this defined time a event will be shown in the Event History. See also “7.6 Load Sharing”
9920	**Load share CAN-ID**	2	2xx Hex / 3xx Hex / 4xx Hex / 5xx Hex **[5xx Hex]**	The first digit of the CAN ID or the range (i.e. 2xx Hex means 200 through 2FF hex) is configured here. The last two digits will be assigned by the control with the settings from the device number (parameter 1702).

Released

4.7.5 Ethernet Interfaces

General notes

The Ethernet network provides a fast communication capability to different devices, like remote panel, PLC or SCADA systems. The common protocol Modbus TCP is there for the preferred communication protocol. Additionally the Ethernet connection supports the Woodward protocol Servlink for ToolKit and other Woodward own monitoring tools (like remote panel and SCADA visualization tool). At least the easY-I provides a UDP protocol for system relevant and time discrete information exchange.



Do not connect the easY-I with the internet as long the security aspects are not considered. Consider an IP responsible person to discuss proper security procedures like placing routers and fire walls.

If the easY-I (or -system) shall be connected to an already existing Ethernet network, a network responsible person must arrange and allocate the IP Addresses. He takes care about IP-Address, the subnet mask, and when needed the gateway IP Address.

ID	Parameter	CL	Setting range [Default]	Description
7488 and 7489	**(Time needed to detect "connection missing")**	12/2	"7488" x "7489"	**Notes** Should not be changed - otherwise please ask your Woodward sales support partner for a temporary code level access. ToolKit Visible in ToolKit only.
				The "Transmission rate" (ID 7488) multiplied with the number of "Timeout cycles" (ID 7489) is the time it needs to detect a"connection missing". See also “7.6 Load Sharing”
7488	**Transmission rate**	12	**[80 ms]** 80 to 400 ms	The transmission rate defines the refresh rate (time) of the UDP messages, for example load share messages.
7489	**Timeout cycles**	2	**[5]** 2 to 10	The control monitors the expected amount of received UDP messages. This entry is the number of loadshare and control UDP messages that can be lost before it is detected as "connection missing".
7485	**Modbus/TCP Slave ID**	2	**[1]** 1 to 255	Your local Modbus device address, which is used to identify the device via Modbus/TCP (Ethernet), must be entered here.
9129	**Password protection**	5	Off	Password protection for Ethernet is **not active**.
				Notes Take care for a protected access!
			[On]	Password protection for Ethernet is active.

4.7.5.1 General notes “Network address”

A network address is basically calcutated of an IP address and a subnet mask. The network address is the result of a binary AND connection of the IP address and the subnet mask:

Example network address calculation		
	decimal	**binary**
IP address	192.168.002.001	11000000 10101000 00000010 00000001
Subnet mask	255.255.255.224	11111111 11111111 11111111 11100000
Network address = IP address AND Subnet mask	192.168.002.000	11000000 10101000 00000010 00000000

The device (host) part is the individual part of the network address for a dedicated device. The device part is the result of the binary AND connection of the IP address and the inverted subnet mask:

Example device part (host) calculation		
	decimal	**binary**
IP address	192.168.002.001	11000000 10101000 00000010 00000001
Subnet mask	255.255.255.224	11111111 11111111 11111111 11100000
Subnet mask inverted		00000000 00000000 00000000 00011111
Device part = IP address AND Subnet mask inverted	000.000.000.001	00000000 00000000 00000000 00000001

Note: Because the device has 3 Ethernet ports (A , B and C) it is important to make sure that the network addresses of all ports are different!

Note: Network address check

There is a plausibility check between Ethernet A, B and C to ensure that all three networks uses different network addresses. The plausibility check uses the actual network address (IP address with the related subnet mask) for the compare.

In case that not all ethernet ports uses different networks the alarm "Eth. configuration" and the LM flag "08.54 Eth. configuration" are active.

Note: IP address range *224.0.0.0 to 239.255.255.255*

This address range is restricted for specific use (multicast class D addresses) and not usable for the Ethernet IP configuration from network A, B and C.

Bad example (there is a conflict between Ethernet A and Ethernet B because of the same resulting network address)

- Ethernet A:

  IP address: 192.168.074.070

  Subnet mask: 255.255.255.000

  Resulting network address: 192.168.074.000

- Ethernet B:

  IP address: 192.168.074.071

Released

Subnet mask: 255.255.255.000

Resulting network address: 192.168.074.000

- Ethernet C:

  IP address: 192.168.073.071

  Subnet mask: 255.255.255.000

  Resulting network address: 192.168.073.000

Good example (there is no conflict between Ethernet A, B and C because all have different network address)

- Ethernet A:

  IP address: 192.168.075.070

  Subnet mask: 255.255.255.000

  Resulting network address: 192.168.075.000

- Ethernet B:

  IP address: 192.168.074.071

  Subnet mask: 255.255.255.000

  Resulting network address: 192.168.074.000

- Ethernet C:

  IP address: 192.168.073.071

  Subnet mask: 255.255.255.000

  Resulting network address: 192.168.073.000

4.7.5.2 Ethernet Network A

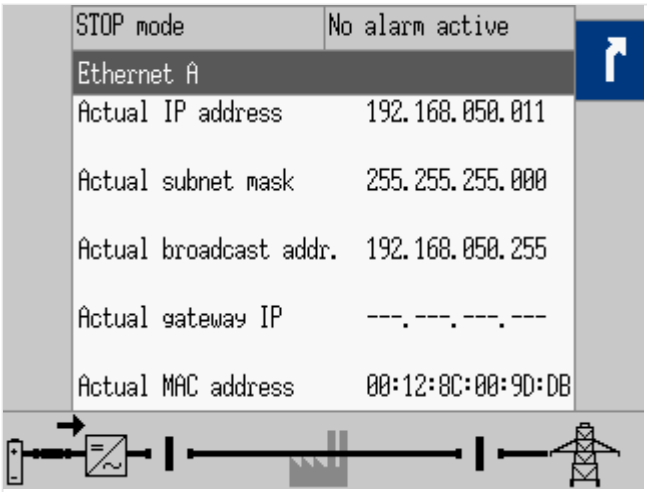


Fig. 193: Ethernet Network A screen

Released

The actual IP address, subnet mask, gateway IP address (all hex values) can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet A.

IP address

Each port within the Ethernet network must have its own network address. As long the Ethernet network is only used by the easY-I-XT system, the address range is free configurable. For better troubleshooting use the default Ethernet address range and configure the single IP addresses according to their device numbers.

Device part: Restrictions

The "device part" is the logical result of »IP Address« AND NOT »Network Mask«. The bits (dual system 0_2/1_2) of the device part must be different from being all the same - neither all zero 0_2 nor all 1_2 (broadcast).

Please select your IP address accordingly.

Gateway IP address

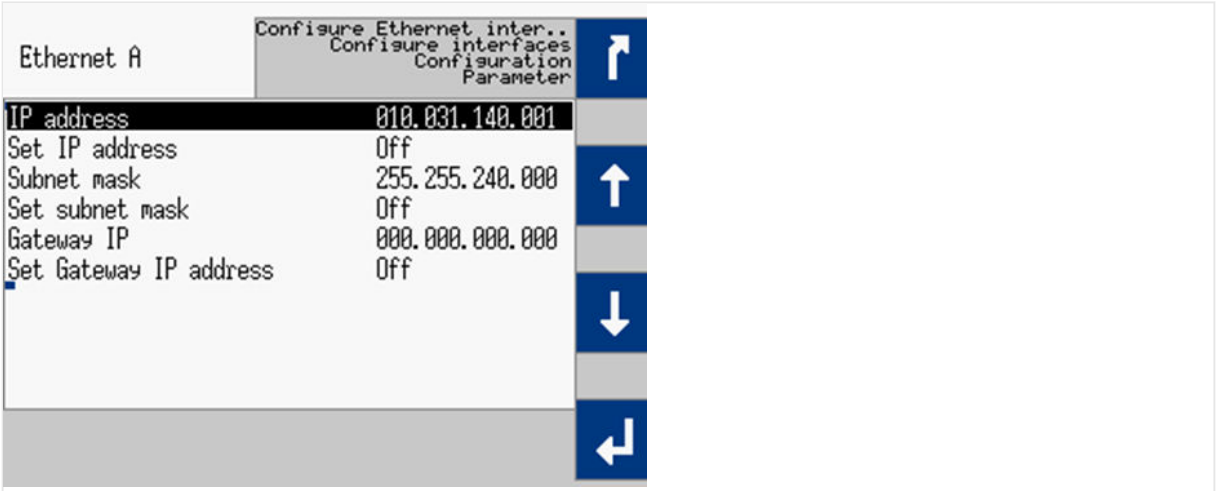


Fig. 194: Ethernet IP and gateway addresses

The gateway IP address defines a node within a local area network (LAN), which is directed to external networks. It is usually not needed in an easY-I Ethernet network. Refer to your network responsible contact person, if a gateway capability is required.

HEX values

The addresses and subnet masks are known as hex values but are displayed in HMI and ToolKit as decimal values.

ID	Parameter	CL	Setting range [Default]	Description
5330 5331 5332	**IP address**	2	[10, 31, 140, 0]	Field 1,2,3,4 for IP address Ethernet port A. This setting will be not valid automatically. The »Set IP address« parameter must be set to »ON« for enabling. **Notes**

Released

ID	Parameter	CL	Setting range [Default]	Description
5333				Device part bits are not allowed to be either **all** *00...$_2$* or **all** *11...$_2$* (broadcast).
7412	**Set IP address**	2	Off	Set IP-Address Ethernet port A.
5334 5335 5336 5337	**Subnet mask**	2	[255, 255, 240, 0]	Set byte 1,2,3,4 of the subnet mask Ethernet port A. This setting will be not valid automatically. The »Set subnet mask« parameter must be set to »ON« for enabling.
7413	**Set subnet mask**	2	Off	Set subnet mask Ethernet port A.
5338 5339 5340 5341	**Gateway IP**	2	[0, 0, 0, 0]	Field 1,2,3,4 for gateway IP-Address for Ethernet port A. This setting will be not valid automatically. The »Set IP address« parameter must be set to »ON« for enabling. If 0.0.0.0 is set, the gateway's functionality is switched off.
5342	**Set Gateway IP address**	2	Off	Set Gateway IP Address for Ethernet port A

4.7.5.3 Ethernet Network B

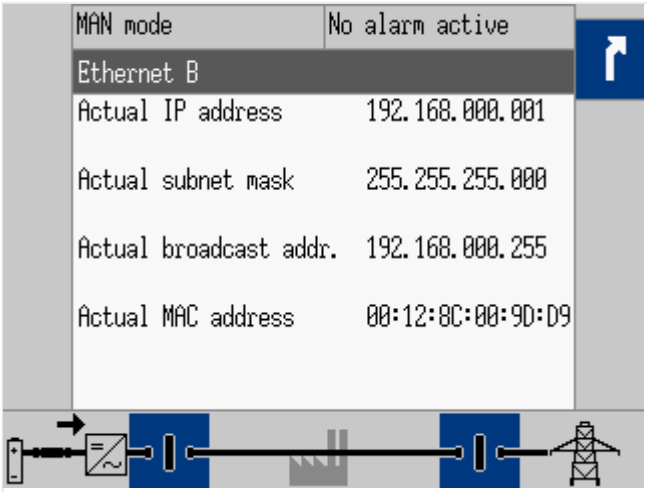


Fig. 195: Ethernet Network B screen

The actual IP address and subnet mask (all hex values) can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet B.

IP address

Each port within the Ethernet network must have its own network address. As long the Ethernet network is only used by the easY-I-XT system, the address range is free configurable. For better troubleshooting use the default Ethernet address range and configure the single IP addresses according to their device numbers.

Device part: Restrictions

The "device part" is the logical result of »IP Address« AND NOT »Network Mask«. The bits (dual system $0_2/1_2$) of the device part must be different from being all the same - neither all zero 0_2 nor all 1_2 (broadcast).

Please select your IP address accordingly.

HEX values

The addresses and subnet masks are known as hex values but are displayed in HMI and ToolKit as decimal values.

ID	Parameter	CL	Setting range [Default]	Description
5430 5431 5432 5433	**IP address**	2	[10, 31, 140, 0]	Field 1,2,3,4 for IP address Ethernet port B. This setting will be not valid automatically. The »Set IP address« parameter must be set to »ON« for enabling. **Notes** Device part bits are not allowed to be either **all** $00..._2$ or **all** $11..._2$ (broadcast).
7414	**Set IP address**	2	Off	Set IP-Address Ethernet port B.
5434 5435 5436 5437	**Subnet mask**	2	[255, 255, 255, 0]	Set byte 1,2,3,4 of the subnet mask Ethernet port B. This setting will be not valid automatically. The »Set subnet mask« parameter must be set to »ON« for enabling.
7415	**Set subnet mask**	2	Off	Set subnet mask Ethernet port B.

4.7.5.4 Ethernet Network C

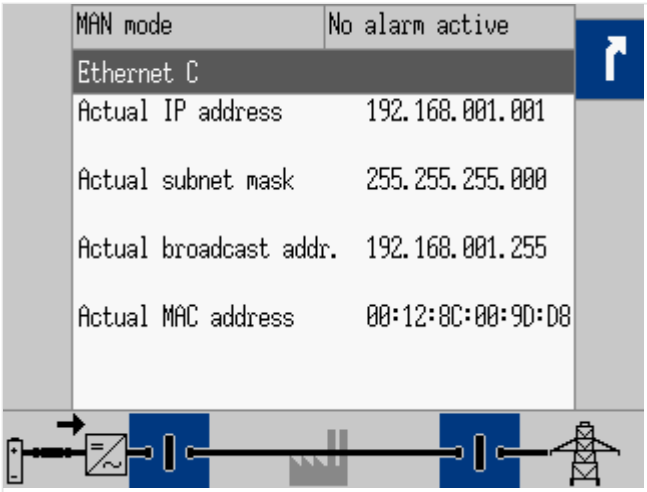


Fig. 196: Ethernet Network C screen

Released

The actual IP address and subnet mask (all hex values) can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet C.

IP address

Each port within the Ethernet network must have its own network address. As long the Ethernet network is only used by the easY-I-XT system, the address range is free configurable. For better troubleshooting use the default Ethernet address range and configure the single IP addresses according to their device numbers.



Device part: Restrictions

The "device part" is the logical result of »IP Address« AND NOT »Network Mask«. The bits (dual system 0_2/1_2) of the device part must be different from being all the same - neither all zero 0_2 nor all 1_2 (broadcast).

Please select your IP address accordingly.



HEX values

The addresses and subnet masks are known as hex values but are displayed in HMI and ToolKit as decimal values.

ID	Parameter	CL	Setting range [Default]	Description
7418 7419 7420 7421	**IP address**	2	[10, 31, 140, 0]	Field 1,2,3,4 for IP address Ethernet port C. This setting will be not valid automatically. The »Set IP address« parameter must be set to »ON« for enabling. **Notes** Device part bits are not allowed to be either **all** $00..._2$ or **all** $11..._2$ (broadcast).
7416	**Set IP address**	2	Off	Set IP-Address Ethernet port C.
7422 7423 7424 7425	**Subnet mask**	2	[255, 255, 255, 0]	Set byte 1,2,3,4 of the subnet mask Ethernet port C. This setting will be not valid automatically. The »Set subnet mask« parameter must be set to »ON« for enabling.
7417	**Set subnet mask**	2	Off	Set subnet mask Ethernet port C.

4.7.5.5 SNTP

SNTP feature

The Simple Network Time Protocol (SNTP) is a common procedure to synchronize clocks in computer systems via packaged based communication networks. In this manner, the easY-I-XT can be configured as a SNTP client. The easY-I-XT is also usable as a SNTP server within the local area network by its own IP address.

The SNTP functionality can be configured for three modes:

- **External SNTP mode**

Released

The easY-I-XT requests time and date information from an external SNTP server, marked with an own IP address.

- **Load sharing mode**

  The easY-I-XT requests time and date information from the easY-I with the smallest device number, if the load sharing over Ethernet is enabled.

- **Internal clock mode**

  The SNTP client mechanism is disabled. The own real time clock determines clock and date.



HEX values

The addresses and subnet masks are known as hex values but are displayed in HMI and ToolKit as decimal values.

ID	Parameter	CL	Setting range [Default]	Description
7780 7781 7782 7783	**SNTP address**	2	0 to 255 (4x) **[10, 14, 128, 128]**	Set byte 1,2,3,4 of the IP address of the external SNTP-Server.
7784	**Rate**	2	60 to 6000 s **[1200 s]**	Set the time rate of the SNTP-Server request. Note: After changing this value, the previous rate must expire before the new rate is used.
7785	**Timeout**	2	30 to 600 s **[60 s]**	Set the timeout of the SNTP-Server. This feature is prepared for the future and has currently no influence on the function.
7786	**Mode**	2	**[Internal clock]** External SNTP Load sharing	The device provides different SNTP modes. **Internal clock:** The clock information comes from the internal clock. The SNTP function is disabled. **External SNTP:** The clock information is receipt by an external SNTP-Server. **Load sharing:** The clock information is generated within the easY-I system. A master (usually the device with the smallest device number) serves all easY-Is with time and date information according to their request rate.

4.8 Configure LogicsManager

Logical symbols

The easY-I LogicsManager screens show logical symbols according to the IEC standard by default. However, it is also possible to change the LogicsManager screens to ASA standard.

Released

ID	Parameter	CL	Setting range [Default]	Description
4117	**Use ASA symbols**	2	Yes	Symbols according to the ASA standard are used in LogicsManager screens.
			[No]	Symbols according to the IEC standard are used in LogicsManager screens.

Refer to ↳ “9.4.3 Logical Symbols” for a table of symbols according to the different standards.

Refer to ↳ “9.4.1 LogicsManager Overview”for an introduction how a LogicsManager works.

Internal flags

Internal flags within the LogicsManager logical outputs may be programmed and used for multiple functions.

Flag {x}	Flag 1	Flag 2	Flag 3	Flag 4	Flag 5	Flag 6	Flag 7	Flag 8
Parameter ID {yyyyy}	12230	12240	12250	12260	12270	12280	12290	12300
Result	10700	10701	10702	10702	10704	10705	10706	10707

Table 106: Flag parameter IDs (1 to 8)

Flag {x}	Flag 9	Flag 10	Flag 11	Flag 12	Flag 13	Flag 14	Flag 15	Flag 16
Parameter ID {yyyyy}	12910	12911	12912	12913	12914	12915	12916	12917
Result	11609	11610	11611	11612	11613	11614	11615	11616

Table 107: Flag parameter IDs (9 to 16)

Flag {x}	Flag 17	Flag 18	Flag 19	Flag 20	Flag 21	Flag 22	Flag 23	Flag 24
Parameter ID {yyyyy}	12231	12233	12235	12237	12241	12243	12245	12247
Result	12232	12234	12236	12238	12242	12244	12246	12248

Table 108: Flag parameter IDs (17 to 24)

Flag {x}	Flag 25	Flag 26	Flag 27	Flag 28	Flag 29	Flag 30	Flag 31	Flag 32
Parameter ID {yyyyy}	12251	12253	12255	12257	12261	12263	12265	12267
Result	12252	12254	12256	12258	12262	12264	12266	12268

Table 109: Flag parameter IDs (25 to 32)

ID	Parameter	CL	Setting range [Default]	Description
{yyyyy}	**Flag {x}**	2	Determined by LogicsManager {XX.XX} **[(0 & 1) & 1]** = {nnnnn}	The flags may be used as auxiliary flags for complex combinations by using the logical output of these flags as command variable for other logical outputs. **Notes** Flag 1 is also used as placeholder in other logical combinations. Flag 8 is preset with a timer start and shows different default values. {XX.XX} is a placeholder for the LogicsManager number {nnnnn} is a placeholder for the parameter ID of the logical output of the LogicsManager equation

For conditions and explanation of programming please refer to “9.4.1 LogicsManager Overview”.

LSx related command flags

In systems of easY-I together with LSx the LSx command flags described below may be configured via easY-I LogicsManager to send binary information to the LSx LogicsManager system. Within the LSx these commands appear as LogicsManager command variables as well.

LSx command {x}	LSx command 1	LSx command 2	LSx command 3	LSx command 4	LSx command 5	LSx command 6
Parameter ID {yyyyy}	12979	12980	12981	12982	12983	12984
Not applicable for application mode	A08 A09 A11	A08 A09 A11	A10 A11	A10 A11	—	—

Table 110: LSx command flag IDs

ID	Parameter	CL	Setting range [Default]	Description
{yyyyy}	**LSx command {x}**	2	Determined by LogicsManager {XX.XX} **[(0 & 1) & 1]** = {nnnnn}	All these single command variables of all easY-I devices are offered in the connected LSx units. In the LSx the flags appear in two ways: • **aligned** (logical OR) and • **individually**. *See drawing below.*

ID	Parameter	CL	Setting range [Default]	Description
				Notes The results can also be used within the easY-I own LogicsManager system (LM: 87.23 to 87.28). {XX.XX} is a placeholder for the LogicsManager number {nnnnn} is a placeholder for the parameter ID of the logical output of the LogicsManager equation

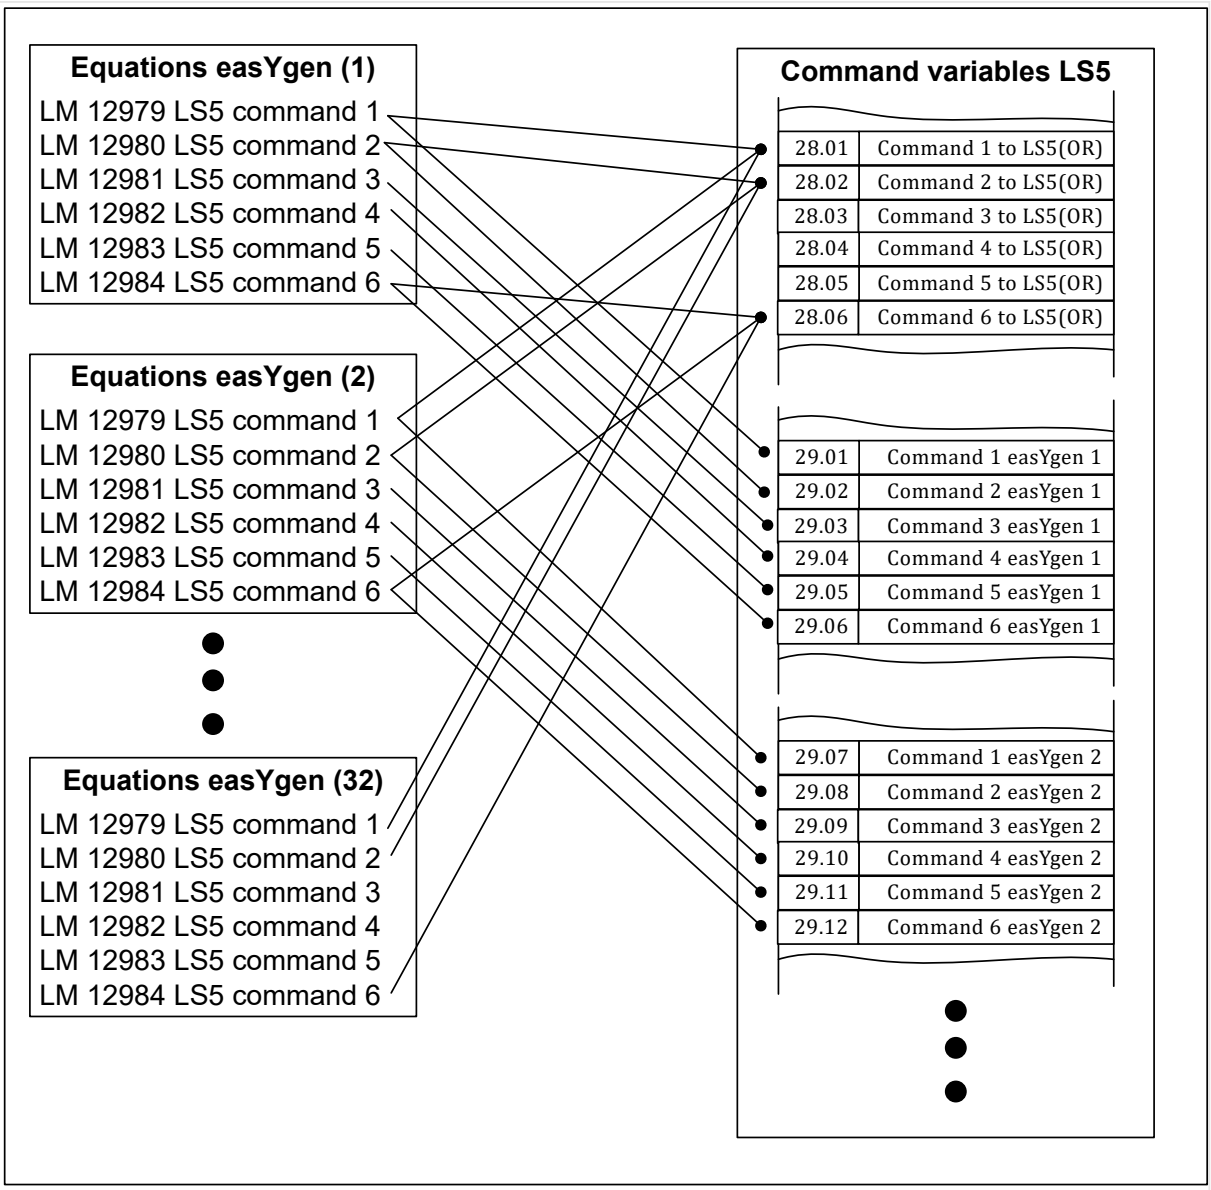


Fig. 197: LM flags of easY-I transferred to LS-5 (LSx)

For conditions and explanation of programming please refer to “9.4.1 LogicsManager Overview”.

LEDs (only for metal housing)

Each device has nine LED flags ("LED 1" to "LED 9") which can be defined via LogicsManager.

The LED configuration is used in the easY-I to control the 9 LEDs at the back panel.

The LED {x} LogicsManagers are available via HMI and ToolKit even if the menu tree (location) is different.

ID	Parameter	CL	Setting range [Default]	Description
{yyyyy}	**LED {x}**	2	Determined by LogicsManager	The flags are used to control the LED states. The default values are defined on the provided paper strip. For the corresponding IDs refer to Table 111. For default configuration refer to “9.4.5 Factory Settings”

LED {x}	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	LED 8	LED 9
Parameter ID {yyyyy}	12962	12963	12964	12965	12966	12967	12968	12969	13451

Table 111: LED flag parameter IDs

LogicsManager Timers: Set timers

Daily time setpoints - Timer 1, 2

Utilizing the LogicsManager it is possible to establish specific times of the day that functions (i.e. generator test run) can be enabled.

The two daily time flags are activated each day at the configured time. The both flags will be RESET at the end of the day on exact 23h.59m.59s. The both timer flags are independent of each other and are considered as intermediate flags to create a special control flag or function. Using the LogicsManager, the flags can be configured individually or both flags can be combined to create a time range. Refer to chapter example to understand their meaning better. Refer to “6.3.13 Examples timer configuration”).

Released

Note:

If the RTC time is within the configured time (with hour, minute and second), a latch with the corresponding LM Timer flag (11.01, 11.02) becomes TRUE. This latch and the LM flags will be **reset** each day at the time the RTC time 23:59:59 is reached. It is very important to consider that, when testing the function. For a complete test of the configuration it is recommended to let the RTC pass the configured time (even the 23.59.29 reset time).

Active time setpoint

Utilizing the LogicsManager it is possible to establish specific days (and/or hours, minutes, seconds) that functions (i.e. generator exerciser) can be enabled. The active switching point is activated only on a specified day (and/or hour, minute, second).

The setpoints may be configured individually or combined via the LogicsManager. You may configure for each month: daily, hourly, minutely, and/or even secondly time setpoints depending on how you combine the setpoints in the LogicsManager.

Active week days - weekly time setpoint

Utilizing the LogicsManager it is possible to establish specific days of the week that functions (i.e. generator exerciser) can be enabled.

The weekly time setpoint is enabled during the indicated day from 0:00:00 hours to 23:59:59 hours.

For examples refer to “6.3.13 Examples timer configuration”

Daily time setpoints - Timer 1, 2

ID	Parameter	CL	Setting range [Default]	Description
1652 1657	**Timer 1: Hour**	2	0 to 23 h 1652: **[8 h]** 1657: **[17 h]**	Enter the hour of the daily time setpoint here. **Example** • 0 = 0th hour of the day (midnight). • 23 = 23rd hour of the day (11pm).
1651 1656	**Timer 1: Minute**	2	0 to 59 min **[0 min]**	Enter the minute of the daily time setpoint here. **Example** • 0 = 0th minute of the hour. • 59 = 59th minute of the hour.

ID	Parameter	CL	Setting range [Default]	Description
1650 1655	**Timer 1: Second**	2	0 to 59 s **[0 s]**	Enter the second of the daily time setpoint here. **Example** • 0 = 0th second of the minute. • 59 = 59th second of the minute.

Active time setpoint

ID	Parameter	CL	Setting range [Default]	Description
1663	**Active day**	2	Day 1 to 31 **[1]**	Enter the day of the active switch point here. The active time setpoint is enabled during the indicated day from 0:00:00 hours to 23:59:59 hours. **Example** • 01 = 1st day of the month. • 31 = 31st day of the month.
1662	**Active hour**	2	0 to 23 h **[12 h]**	Enter the hour of the active switch point here. The active time setpoint is enabled every day during the indicated hour from minute 0 to minute 59. **Example** • 0 = 0th hour of the day. • 23 = 23rd hour of the day.
1661	**Active minute**	2	0 to 59 min **[0 min]**	Enter the minute of the active switch point here. The active time setpoint is enabled every hour during the indicated minute from second 0 to second 59. **Example** • 0 = 0th minute of the hour. • 59 = 59th minute of the hour.
1660	**Active second**	2	0 to 59 s **[0 s]**	Enter the second of the active switch point here. The active time setpoint is enabled every minute during the indicated second. **Example**

Released

ID	Parameter	CL	Setting range [Default]	Description
				• 0 = 0th second of the minute. • 59 = 59th second of the minute.

Active week days - weekly time setpoint

ID	Parameter	CL	Setting range [Default]	Description
				Please select each of the active weekdays.
1670	**Monday active**	2	**[Yes]**	The switch point is enabled every Monday.
			No	The switch point is disabled every Monday.
1671	**Tuesday active**	2	**[Yes]**	The switch point is enabled every Tuesday.
			No	The switch point is disabled every Tuesday.
1672	**Wednesday active**	2	**[Yes]**	The switch point is enabled every Wednesday.
			No	The switch point is disabled every Wednesday
1673	**Thursday active**	2	**[Yes]**	The switch point is enabled every Thursday.
			No	The switch point is disabled every Thursday.
1674	**Friday active**	2	**[Yes]**	The switch point is enabled every Friday.
			No	The switch point is disabled every Friday.
1675	**Saturday active**	2	Yes	The switch point is enabled every Saturday.
			[No]	The switch point is disabled every Saturday.
1676	**Sunday active**	2	Yes	The switch point is enabled every Sunday.
			[No]	The switch point is disabled every Sunday.

4.9 Configure AnalogManager

4.9.1 Operations

An AnalogManager (AM) is a flexible sub-system to process and/or generate both an analog output signal and a related digital output. It offers a set of functions (Type) to select the preferred signal processing. According to the selected function the AM

computes up to two analog inputs and one constant for result. Up to two digital inputs enable to control the process (internal logic allows to adjust boolean signal).

Inputs:

- Up to 2 analog variables (A1, A2) and
- 1 direct configurable constant (C1)

  in conjunction with

- up to 2 Boolean information (L1, L2)*.

The AM processes the inputs listed above depending on the **selected "Type"**. The result is always provided in form of

- an analog value (AR) and
- a Boolean (BR).

There are two types of AnalogManagers:

- Freely usable AM to process signals and use the results for output as control.
- Dedicated AM which analog result is directly accepted by (fixed to) an according function (e.g. AO01).

For both freely and dedicated AM is valid:

- The analog result is accessible via the AnalogManager command variable pool.
- The resulting Boolean is accessible via the LogicsManager command variable pool.

⚙	**Preferred AM Definition Procedure**
1. ▷	Start with "Type"
▶	Select AM type first to get the picture and the visual understanding of available inputs, outputs, function, and results.
2. ▷	Select analog inputs and set constant.



Besides internal and measured values there are 16 »Free constants« available for more flexibility. Refer to “4.9.2 AnalogManager Constants”for details.

3. ▷	Prepare each digital input by selecting source (parameter) and logical function.
4. ▷	Enter with "Apply"
▶	Press »Apply« button to send current settings to device.
5. ▷	Use analog and boolean result for intended (re)action.

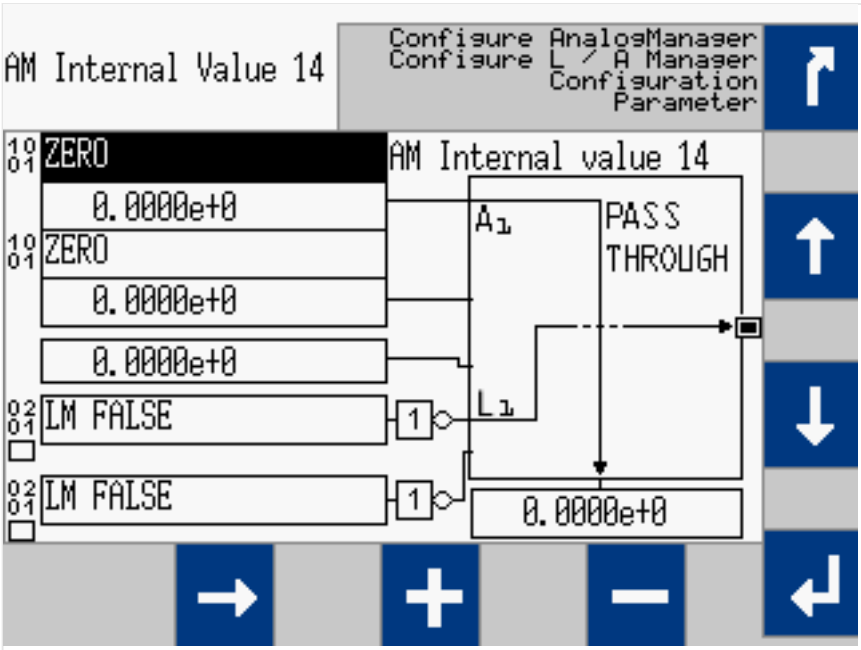


Fig. 198: Display (HMI) AM14

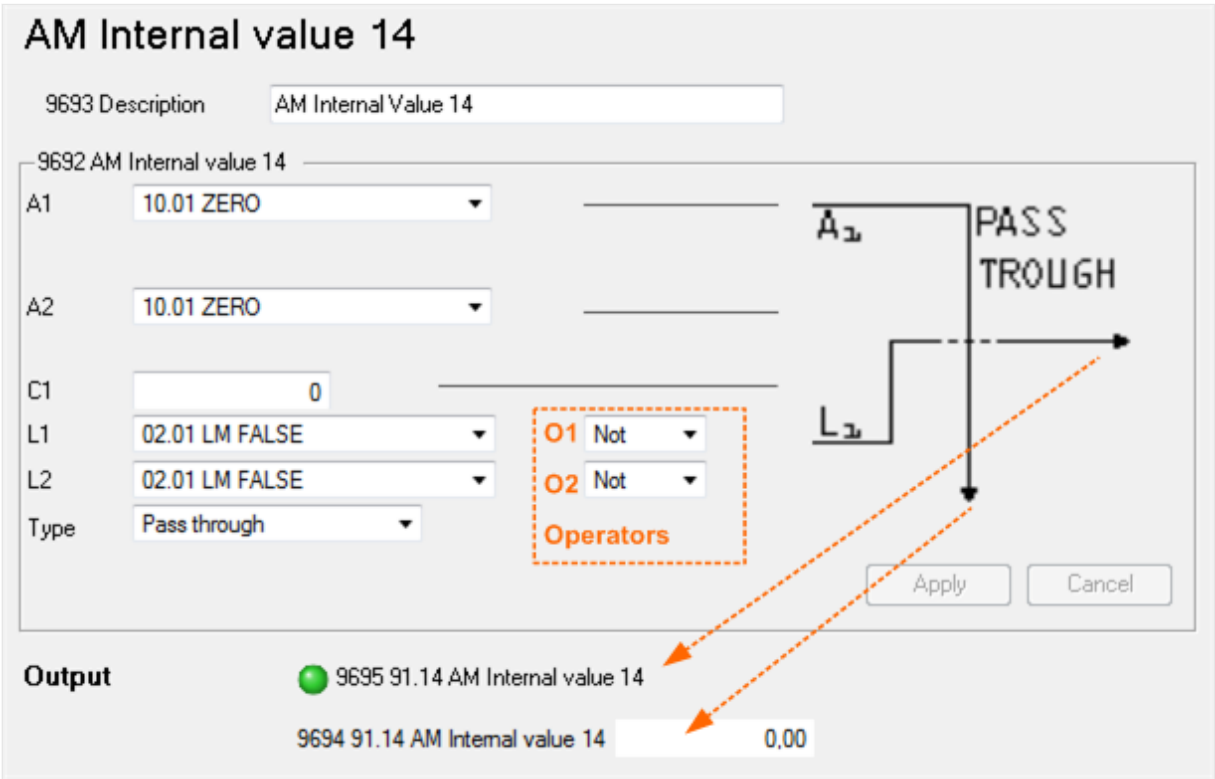


Fig. 199: ToolKit AM14

*) Please be aware that the boolean information passes an operator. So the input for the AnalogManager function block is **the result** of this!

AnalogManager Description

Acronym	Name	Value
A1	Analog input 1 (variable)	coming from selected analog parameter
A2	Analog input 2 (variable)	coming from selected analog parameter
C1	Analog **C**onstant input (constant)	defined via HMI, ToolKit, or other (remote) interface
		Notes ToolKit can display input values between -9.9999e9 and +9.9999e9. Other values will be handled correctly by the device but display will be cropped
L1	Boolean (**L**ogic) input 1	coming from selected digital parameter
L2	Boolean (**L**ogic) input 2	coming from selected digital parameter
O1	Operator 1 (Operators-Unary 1)	selected via HMI, ToolKit, or other (remote) interface
O2	Operator 2 (Operators-Unary 2)	selected via HMI, ToolKit, or other (remote) interface
Type	AnalogManager type (operation)	selected via HMI, ToolKit, or other (remote) interface
BR	Boolean result	result/output of the boolean operation
		Notes Available as LogicsManager Variable ("result") e.g. as AM/LM input
AR	Analog result	result/output of the analog operation
		Notes Available as AnalogManager "result" e.g. as AM input

AnalogManager Internal Values 1 to 16

Internal values within the AnalogManager analogue and logical outputs may be programmed and used for multiple functions.

Flag	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8
Parameter ID	9640	9644	9648	9652	9656	9660	9664	9668
Description ID	9641	9645	9649	9653	9657	9661	9665	9669

Table 112: Internal Values parameter IDs (1 to 8)

Value	Value 9	Value 10	Value 11	Value 12	Value 13	Value 14	Value 15	Value 16
Parameter ID	9672	9676	9680	9684	9688	9692	9696	9700
Description ID	9673	9677	9681	9685	9689	9683	9697	9701

Table 113: Internal Values parameter IDs (9 to 16)

Released

Default values

Factory settings of the internal values come with Type = "Pass through" so the analog result AR is same as analog input A1 (Default: A1 = 10.01 ZERO). The boolean result BR is "FALSE".

ID	Parameter	CL	Setting range **[Default]**	Description
Parameter ID	**AM Internal value 1 {1 - 16}**	2	Determined by AnalogManager **[A1 = 10.01 ZERO]**	The data source may be selected from the available data sources. **Notes** Refer to “9.5.2 Data Sources AM” for a list of all data sources.
Description ID	**Description {1 - 16}**	2	user-defined (up 22 to characters) **[AM Internal value 1 {1 - 16}]**	The text may have 0 through 22 characters. **Notes** This parameter may only be configured using ToolKit. The max. number of characters depends on the numbers of bytes for each character. Please verify the length on the display for best view.

The analog and logic results can be used via analog variables “91.01 AM Internal value 1” - “91.16 AM Internal value 16” and via command “91.01 AM Internal value 1” - “91.16 AM Internal value 16”.

Released

Examples

☼ **Calculating with an AnalogManager**

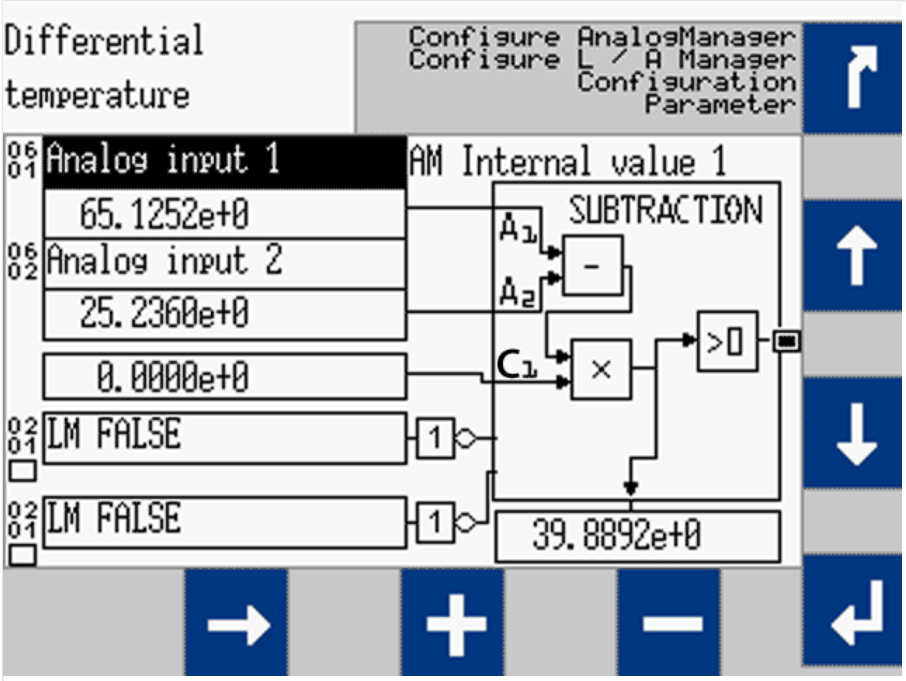


Fig. 200: screen shot HMI: AM subtraction sample

Acronym	Name	Value	
A1	Analog input 1	Number:	06.01
		Name:	Analog Input 1
		Value:	65.1252
A2	Analog input 2	Number:	06.02
		Name:	Analog Input 2
		Value:	25.2360
C1	Analog constant input	Value: 0	
L1	Boolean input 1	Number:	02.01
		Name:	LM FALSE
		Value:	0
L2	Boolean input 2	Number:	02.01
		Name:	LM FALSE
		Value:	0
O1	Operator 1	NOT [input will be inverted]	
O2	Operator 2	NOT [input will be inverted]	
Type	Operation type	SUBTRACTION	
BR	Boolean result	(A1 - A2) x C1 > 0 (available as boolean result »91.01 AM Internal value 1«)	
AR	Analog result	(A1 - A2) x C1 (available as analog result »91.01 AM Internal value 1«)	

Released

Incrementing and comparing with an AnalogManager

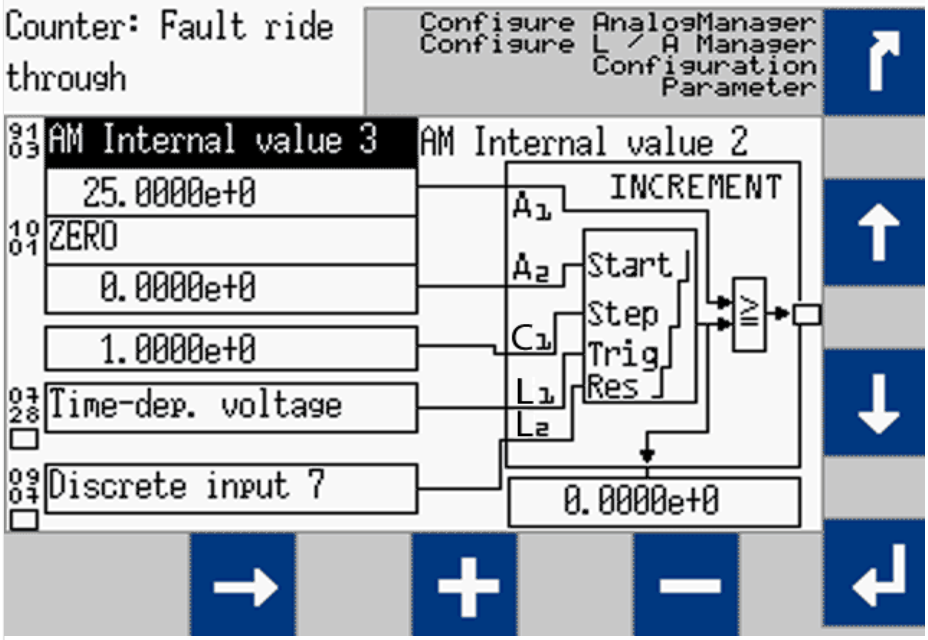


Fig. 201: screen shot HMI: AM increment sample

Acronym	Name	Value	
A1	Analog input 1	Number:	91.03
		Name:	Internal value 3
		Value:	25.0000
A2	Analog input 2	Number:	10.01
		Name:	ZERO
		Value:	0
C1	Analog constant input	Value: 1.000	
L1	Boolean input 1	Number:	07.28
		Name:	Time dependent voltage
		Value:	Result of LM 07.28
L2	Boolean input 2	Number:	09.07
		Name:	Discrete input 7
		Value:	Result of LM 09.07
O1	Operator 1	L1 [passed]	
O2	Operator 2	L2 [passed]	
Type	Operation type	INCREMENT	
BR	Boolean result	A1≧ A2 + (n[L1] x C1)* *) Reset if L2 = TRUE (available as boolean result »91.02 AM Internal value 2«)	
AR	Analog result	A2 + (n[L1] x C1)* *) Reset if L2 = TRUE (available as analog result »91.02 AM Internal value 2«)	





The following AnalogManager operations are available:

New AnalogManager "Type" selected? Then: ...






Please be aware that the input values stay "as is" (are NOT changed) if a new Type is selected. Check all input settings A1, A2, C1, L1, L2, O1, O2 before applying!

Example:






If A2 = 0 and you select Type “Divide”, you would ask the AnalogManager to divide by zero!

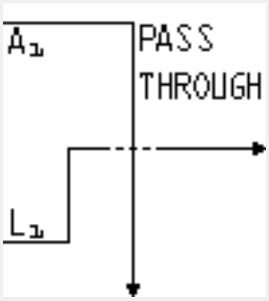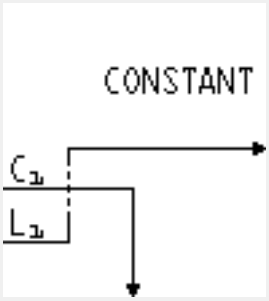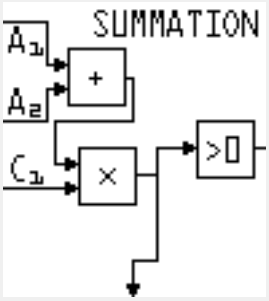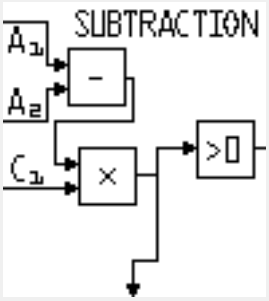AnalogManager Operation (Type)	Bitmap	Function (Output)
Pass through		Analog Result = A1 Boolean Result = L1
Constant		Analog Result = C1 Boolean Result = L1
Summation		Analog Result = (A1 + A2) * C1 Boolean Result goes TRUE, if Analog Result > 0
Subtraction		Analog Result = (A1 - A2) * C1 Boolean Result goes TRUE, if Analog Result > 0




Released

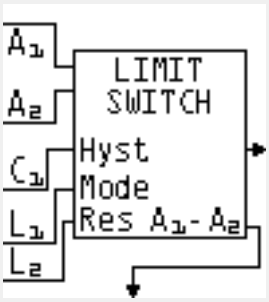
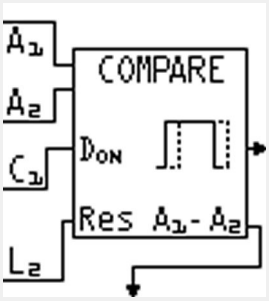
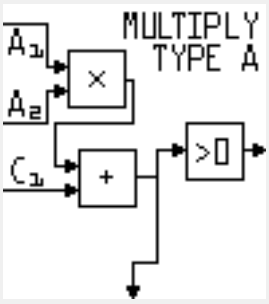
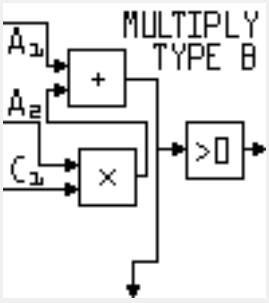
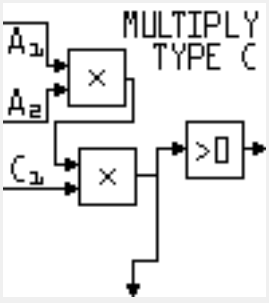
AnalogManager Operation (Type)	Bitmap	Function (Output)
Limit Switch		Analog Result = (A1 - A2) **L1 = FALSE -> Overrun mode**: Boolean Result goes TRUE, if A1 > A2 Boolean Result goes FALSE, if A1 <= (A2 - C1) **L1 = TRUE -> Underrun mode**: Boolean Result goes TRUE, if A1 < A2 Boolean Result goes FALSE, if A1 >= (A2 + C1) C1 = Hysteresis L1 = TRUE = Underrun mode, otherwise Overrun mode L2 = Resets Hysteresis.
Compare with Delay On		Analog Result = (A1 - A2) Boolean Result goes TRUE, if A1 > A2 for the duration of C1 time [s], otherwise FALSE C1 = Time Delay to switch on [s] L2 = Reset Time Delay. Absolute value of C1 is taken as time [s] (no negative time). **Notes** Time is not latched, so C1 changes can be done during delay cycle.
Multiply type A		Analog Result = (A1 * A2) + C1 Boolean Result goes TRUE, if Analog Result > 0
Multiply type B		Analog Result = A1 + (A2 * C1) Boolean Result goes TRUE, if Analog Result > 0
Multiply type C		Analog Result = A1 * A2 * C1 Boolean Result goes TRUE, if Analog Result > 0

Released

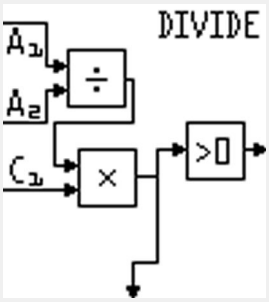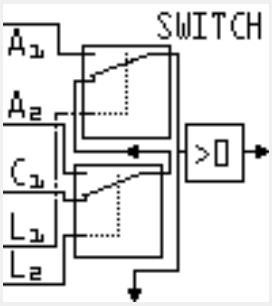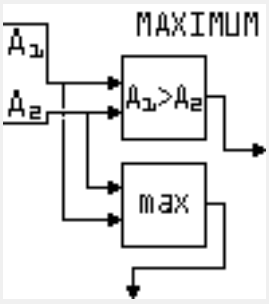
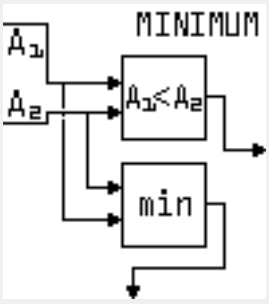
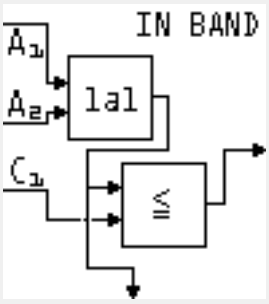
AnalogManager Operation (Type)	Bitmap	Function (Output)
Divide		Analog Result = (A1 / A2) * C1 Boolean Result goes TRUE, if Analog Result > 0
Switch		Analog Result = A1, if L1 = TRUE Analog Result = A2, if L1 = FALSE AND L2 = TRUE Analog Result = C1, if L1 = FALSE AND L2 = FALSE Boolean Result goes TRUE, if Analog Result > 0 **Notes** Icon shows switch positions L1/L2 as FALSE. Common use could be to switch between A1 and A2: Set L2 = TRUE; use L1 to switch.
Maximum		Analog Result = MAX(A1 , A2) Boolean Result goes TRUE, if A1 > A2
Minimum		Analog Result = MIN(A1, A2) Boolean Result goes TRUE, if A1 < A2
In Band		Analog Result = ABS(A1 - A2) Boolean Result goes TRUE, if (ABS(A1 - A2) <= C1) C1 = maximum tolerance for being "in band"

Released

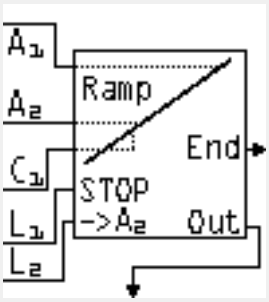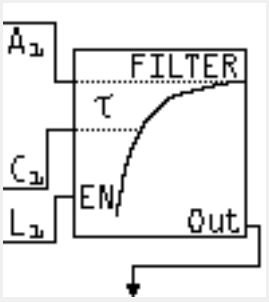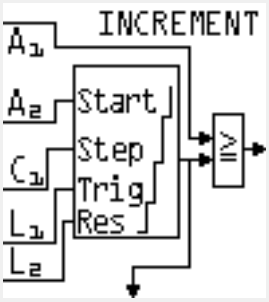AnalogManager Operation (Type)	Bitmap	Function (Output)
Ramp		Analog Result = Ramp value Boolean Result goes TRUE, if Ramp value equal end position C1 determines rate/second. Absolute value of C1 is taken - no negative rate allowed L1 holds ramp: If L1 goes TRUE, the current ramp output is stopped L2 determines end value: If L2 goes TRUE, the end position is value A2, otherwise it is A1. **Notes** Rate/second is not latched, so C1 changes can be done during ramp cycles. Common use could be ramp up and down: Start ramping from A1 to A2 with gradient C1 if L1 goes TRUE; then switch to ramping down back to A1 with the same gradient if L2 goes TRUE.
Filter		Analog Result = Filtered value of A1 Boolean Result = FALSE. A1 = Value, which is to filter. A2 not used. C1 is filter time (time constant) in [s] L1 switches the filter. If L1 goes TRUE, the filter function is enabled, otherwise the filter function is disabled and the Analog Result = A1 L2 not used. Absolute value of C1 is taken **Notes** Time constant is not latched, so C1 changes can be done during filter cycles. Filter formula: OUT[i] = a*IN[i] + (1-a)*OUT[i-1] , where OUT[i] is current output, IN[i] is current input, and OUT[i-1] is previous output. a = (dT / (C1 + dT)), where dT is interval of input/output change (== RATEGROUP)
Increment		Analog Result = Analog Result + C1 on every L1 rising edge Boolean Result goes TRUE, if Analog Result > = Value A1 (Limit) A1 = Limit A2 = Start Value after RESET C1 = Increment per Step L1 = Trigger for Increment L2 = Reset to Start Value

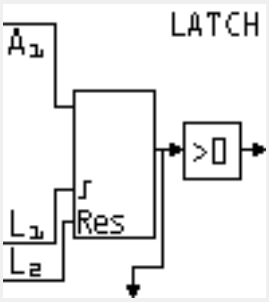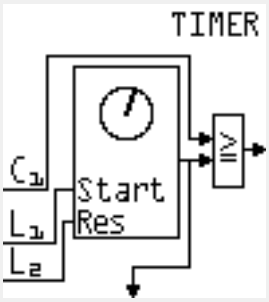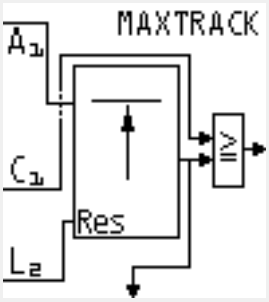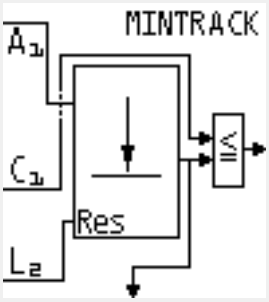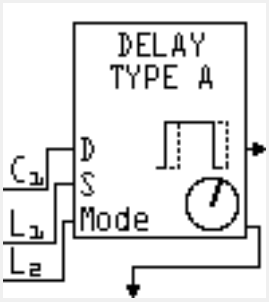AnalogManager Operation (Type)	Bitmap	Function (Output)
Latch		Analog Result = A1 on every L1 rising edge Boolean Result goes TRUE, if Analog Result > 0 A1 = Value 1 L1 = Saves Analog Result with rising edge L2 = Resets Analog Result to 0 with rising edge
Timer		Analog Result = Elapsed time [s] Boolean Result goes TRUE, if Analog Result > = C1 C1 = Timer Compare [s] L1 = If L1 goes TRUE, timer starts or continues to run, otherwise timer is stopped L2 = Resets Analog Result to 0 with rising edge **Notes** Could be used e.g., for reading out values when a defined (failure) situation occurs
Maxtrack		Analog Result = If A1 > Analog Result, the new result is A1 Boolean Result goes TRUE, if Analog Result > = C1 A1 = Tracked Value A2 not used C1 = Limit L2 = Resets Analog Result to A2 with rising edge.
Mintrack		Analog Result = If A1 < Analog Result, the new result is A1 Boolean Result goes TRUE, if Analog Result < = C1 A1 = Tracked Value C1 = Limit L2 = Resets Analog Result to A2 with rising edge.
Delay type A		**Mode "Delay On":** Analog Result = Remaining time [s] for Boolean Result to go to TRUE Boolean Result goes TRUE, if L1 = TRUE for at least C1[s] time. **Mode "Delay Off:** Analog Result = Remaining time [s] for Boolean Result to go to FALSE Boolean Result goes FALSE, if L1 = FALSE for at least C1[ms] time C1 = Absolute value of C1 is taken as time in [s] (no negative time allowed)

Released

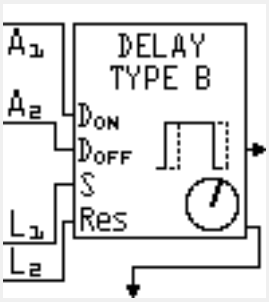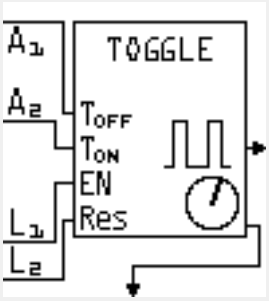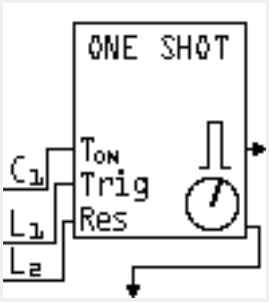AnalogManager Operation (Type)	Bitmap	Function (Output)
		L1 = Switching signal. The boolean result is delayed according to the mode in L2 L2 = TRUE = Mode "Delay Off"; = FALSE = Mode "Delay On"
		Notes Time is not latched, so C1 changes can be done during delay cycle.
Delay type B		Analog Result = Remaining time [s] to switch Boolean Result Boolean Result = TRUE, if L1 was TRUE for at least A1 time [s] Boolean Result = FALSE, if L1 was FALSE for at least A2 time [s] A1 = Delay-On time [s], no negative time allowed A2 = Delay-Off time [s], no negative time allowed L1 = Switching signal. The boolean result is delayed according to the time A1 and A2 L2 = Resets Boolean result with rising edge
		Notes A1/A2 Time is not latched, so changes can be done during delay cycle.
Toggle		Analog Result = Remaining time to switch Boolean Result Boolean Result = Toggles with ON time = A1[ms] and OFF time = A2[s] A1 = Delay-On time [ms], no negative time allowed A2 = Delay-Off time [ms], no negative time allowed L1 = Activates toggling, if TRUE. L2 = Resets remaining time to toggle with rising edge
		Notes A1/A2 Time is not latched, so changes can be done during delay cycle.
One Shot		Analog Result = Remaining time to fall back to FALSE [s] Boolean Result = L1 rising edge forces TRUE state for C1 time [s] C1 = Absolute value of C1 is taken as time in [s] (no negative time allowed) L1 = Activates boolean result to TRUE with rising edge L2 = Resets remaining time for fall back with rising edge
		Notes Time is not latched, so C1 changes can be done during monoflop cycle.

4.9.2 AnalogManager Constants

General note

For even more flexibility and use of "self explaining" parameters 16 constants can be defined. These constants are available as AnalogManager input AM 13.01 to AM 13.16. Each parameter can be named individually and its value can be defined in a wide range:

AnalogManager Constants 1 to 16

AnalogManager values may be used for multiple functions.

AM Constant #	1	2	3	4	5	6	7	8
Description	15567	15568	15569	15570	15571	15572	15573	15574
Value	15551	15552	15553	15554	15555	15556	15557	15558
AM	AM 13.01	AM 13.02	AM 13.03	AM 13.04	AM 13.05	AM 13.06	AM 13.07	AM 13.08

Table 114: AM Constant IDs (1 to 8)

AM Constant #	9	10	11	12	13	14	15	16
Description	15575	15576	15577	15578	15003	15004	15005	15006
Value	15559	15560	15561	15562	15563	15564	15565	15566
AM	AM 13.09	AM 13.10	AM 13.11	AM 13.12	AM 13.13	AM 13.14	AM 13.15	AM 13.16

Table 115: AM Constant IDs (9 to 16)



Constant's name

The AM inputs selectable for A1 or A2 come with the predefined name of the Constant e.g. 13.01 Free constant 1" but not with the customizable AM Description e.g. the value of 15567 Description constant 1.

ID	Parameter	CL	Setting range [Default]	Description
15567 - 15578, 15003 - 15006	**Description constant {1 -16}**	2	user-defined (up 22 to characters) **[13.yy Free constant {1 - 16}]**	The text may have 0 through 22 characters. **Notes** This parameter may only be configured using ToolKit. The max. number of characters depends on the numbers of bytes for each character. Please verify the length on the display for best view.
15551 - 15566	**13.yy Free constant {1 - 16}**	2	-21000.00 e3 to 21000.00 e3	Preset value to be used as AM 13.yy.

Released

ID	Parameter	CL	Setting range [Default]	Description
			[1]	

4.10 Configure Counters

General notes

The following chapters describe all available and configurable counters of the device.

The standard/basic counters - available in all devices of this product family - are described in the chapter “4.10.1 Generator Preset Values”. For special counters please see the chapters following.

4.10.1 Generator Preset Values

General notes



Maintenance call

A maintenance call will be issued if the configured number of maintenance hours has expired or the configured number of days has expired since the last maintenance.

In case of a maintenance call, the display indicates "Mainten. days exceeded" or "Mainten. hours exceeded".

ID	Parameter	CL	Setting range [Default]	Description
2521	**Gen.pos.active energy preset**	2	000000.00 to 999999.00 MWh **[0.00 MWh]**	This parameter defines the number of MWh of the counter. The number entered here will overwrite the current displayed value after confirming with parameter 2510.
2510	**Gen.pos.active energy set**	2	Yes	The current value of this counter is overwritten with the value configured in "Gen.pos.active energy preset" (parameter 2521). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.
2523	**Gen.pos.react.energy preset**	2	000000.00 to 999999.00 Mvarh **[0.00 Mvarh]**	This parameter defines the number of positive Mvarh of the counter. The number entered here will overwrite the current displayed value after confirming with parameter 2511.
2511	**Gen.pos.react.energy set**	2	Yes	The current value of this counter is overwritten with the value configured in "Gen.pos.react.energy preset"

ID	Parameter	CL	Setting range [Default]	Description
				(parameter 2523). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.
2527	**Gen.neg.react.energy preset**	2	000000.00 to 999999.00 Mvarh **[0.00 Mvarh]**	This parameter defines the number of negative Mvarh of the counter. The number entered here will overwrite the current displayed value after confirming with parameter 2513.
2513	**Gen.neg.react.energy set**	2	Yes	The current value of this counter is overwritten with the value configured in "Gen.neg.react.energy preset" (parameter 2527). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.
2541	**Number of starts preset**	2	0 to 65535 **[0]**	This parameter defines the number of times the control unit registers a start of the generator set. The number entered here will overwrite the current displayed value after confirming with parameter 2542.
2542	**Number of starts set**	2	Yes	The current value of the start counter is overwritten with the value configured in "Number of starts preset" (parameter 2541). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.

4.10.2 Service Reset Values

General notes



Maintenance call

A maintenance call will be issued if the configured number of maintenance hours has expired or the configured number of days has expired since the last maintenance.

In case of a maintenance call, the display indicates "Mainten. days exceeded" or "Mainten. hours exceeded".

Released

Displaying hours: operation / period of use

The easY-I device handles operating hours internally in floating format. To indicate the operating hours on a display or to provide it in the data protocol the value is transferred into an integer variable. This can cause display errors within 4*10-6 % in relation to the absolute value.

ID	Parameter	CL	Setting range **[Default]**	Description
2550	**Maintenance hours**	2	0 to 9,999 h **[300 h]**	This parameter defines the remaining hours until the next maintenance call occurs. Once the generator has been operated for the number of hours configured here, a maintenance message is displayed. If this value is changed, the counter is reset to the new value. If the maintenance counter is reset by the push-buttons at the front panel (refer to “2.1 Display And Status Indicators”), or by configuring the parameter "Reset maintenance period hrs" to "Yes" (parameter 2562), the maintenance counter is reset to the configured value. **Notes** To disable the "maintenance hours" counter configure "0" for this entry.
2562	**Reset maintenance period hrs**	2	Yes / No **[No]**	If this parameter is configured to "Yes" the maintenance "hours" counter is reset to the configured value. Once the counter "maintenance hours" has been reset, the control unit changes this parameter to "No". **Notes** When using a specific code level in parameter 2567 to reset maintenance hours this parameter can be blocked. **Notes** HMI - menu path: [Next Page / Configure counters / (symbol: wrench)]
2551	**Maintenance days**	2	0 to 999 d **[365 d]**	This parameter defines the remaining days until the next maintenance call occurs. Once the configured number of days has expired since the last

ID	Parameter	CL	Setting range [Default]	Description
				maintenance, a maintenance message is displayed. If this value is changed, the counter is reset to the new value. If the maintenance counter is reset by the push-buttons at the front panel (refer to ↳ “2.1 Display And Status Indicators”), or by configuring the parameter "Reset maintenance period days" to "Yes" (parameter ↳ 2563), the maintenance counter is reset to the configured value.
				Notes To disable the "maintenance days" counter configure "0" for this entry.
2563	**Reset maintenance period days**	2	Yes / No **[No]**	If this parameter is configured to "Yes" the "maintenance days" counter is reset to the configured value. Once the counter has been reset, the control unit changes this parameter to "No".
				Notes When using a specific code level in parameter ↳ 2567 to reset maintenance days this parameter can be blocked.
				Notes HMI - menu path: [Next Page / Counters and service / (symbol: wrench)] 
2567	**Code level for reset maint.**	2		This parameter determines the required code level for resetting the counter "Maintenance call in...". User with a lower code level may not access this function. The following code levels exist:
			0	Operator
			1	Service level
			[2]	Temporary commissioner
			3	Commissioner
				Notes The code level defined here only affects the access via the front panel (HMI).

Released

ID	Parameter	CL	Setting range [Default]	Description
2509	**Operation hours preset**	0	0.00 to 999,999.99 **[0.00]**	When setting the operating hours counter (refer to parameter 2574), the counter always will be set up to the value configured here.
2574	**Operation hours set**	0[1]	Yes	The current value of this counter is overwritten with the value configured in "Operation hours preset" (parameter 2509). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.
				Notes [1] The code level can be configured with "Codelevel set operation hours" (parameter 2573). If your current code level does not match, this parameter is not visible.
2573	**Code level set operation hours**	5	0 to 5 **[2]**	This parameter defines which codelevel is necessary to set the operation hours (parameter 2574).
2515	**Period of use preset**	2	0.00 to 999,999.99 **[0.00]**	When setting the period of use hours counter (refer to parameter 2579), the counter always will be set up to the value configured here.
2579	**Period of use set**	0[1]	Yes	The current value of this counter is overwritten with the value configured in "Period of use preset" (parameter 2515). After the counter has been (re)set, this parameter changes back to "No" automatically.
			[No]	The value of this counter is not changed.
				Notes [1] The code level can be configured with "Code level f. set period of use" (parameter 2581). If your current code level does not match, this parameter is not visible.
2581	**Code level f.set period of use**	5	0 to 5 **[2]**	This parameter defines which codelevel is necessary to set the period of use hours (parameter 2579).

Released

5 Operation

In operation the genset controller can be manually or remote controlled.

Front panel access is described in chapter “4.1 Front Panel Access”.

Access via ToolKit is described in the ToolKit Manual.

Access via Remote Panel PR-3000XT is described in chapter “4.3.6 Configure Remote Panel Mode” and the Technical Manual »37593 RP-3000XT«.

Access via PLC depends on the interface and the data telegram used for communication.



For menu structure/menu tree see “Menu structure (menu tree)”.

5.1 Power ON

Behavior during starting easY-I-3000XT

The start-up procedure of the easY-I-XT device can be caused by the following reasons:

- Power ON
- Power cycling e.g. by 1701» Set factory default values«
- Power is back after voltage drop

This process is visualized by the HMI of the plastic housing version or the LEDs of the metal housing version.



Using the USB Service Port

With power ON and a PC/laptop connected via USB service port it can happen that the USB window that pops up doesn't show all files and/or the correct available free memory at the device: Please unplug/plug the USB connection after the easY-I finished starting.

With power ON and connected USB service port it can happen that a connected USB device is not detected correctly: Please unplug/plug the USB connection after the easY-I finished starting.

With power cycle or reboot of the easY-I-XT the USB connection is lost: Please unplug/plug and/or start USB connection again after the easY-I finished starting.

... starting plastic housing (HMI) version

Power ON from zero power

- Buttons are illuminated
- Start-up screen appears
  - the red bar at the bottom monitors the degree of fulfillment
- HOME screen appears with measured values and state information

Released

- Illumination of buttons is disabled according to the default settings STOP button still might be illuminated
- WARNING triangle is blinking if there are unacknowledged alarm messages

Power cycling

- Warning LED is twinkling in a high frequency
- (afterwards the standard process of Power ON is executed:)
- Buttons are illuminated
- Start-up screen appears
  - the red bar at the bottom monitors the degree of fulfillment
- HOME screen appears with the same measured values and state information as before power cycling

... starting metal housing version

Power ON from zero power

- LEDs are twinkling
- LEDs are illuminated according to the state of the genset control

Power cycling

- Warning LED is twinkling in a high frequency
- (afterwards the standard process of Power ON is executed:)
- LEDs are twinkling
- LEDs are illuminated according to the state of the genset control

5.2 Change Operating Modes

Startup

The genset controls starts in the operating mode defined by parameter 1795 »Startup in mode«. Refer to “4.4.5 Configure Operation Modes” for details.

Select Operation Mode

Operation modes can be selected via

- front panel buttons (plastic housing variant or Remote Panel RP-3000XT or VNC client),
- HMI configuration (plastic housing variant or Remote Panel RP-3000XT or VNC client),
- remote settings via interfaces, or
- ToolKit

The following chapters describe the manually front panel access.

5.2.1 Operating Mode STOP

Usage

⚙

1. ▷ 

Use the STOP button to activate operating mode STOP.

Observe the notes on the system's reaction upon activation of operating mode STOP as listed below.

▶ STOP LED is illuminated at the front panel; ToolKit home page shows STOP icon left beside the prime mover.

System reaction

In operating mode STOP neither the inverter/DC source nor the GCB can be operated. Dependent on the application mode the power circuit breakers cannot be operated.

CAUTION!

Hazards due to improper use of operating mode STOP

Selecting the operating mode STOP is not the same as an EMERGENCY STOP.

In some cases the easY-I will perform additional logic functions, such like opening the GCB, before the inverter is stopped.

- For emergency stop functionality use an EMERGENCY STOP discrete input, programmed as an F class alarm.

If the operating mode STOP is selected while the inverter/DC source was already stopped the following applies:

- The GCB will not be closed.
- The start request is ignored.
- The start push buttons (softkeys are disabled.
- The Inverter/generator monitoring remains activated (exception: all monitoring that is delayed by "85.10 LM: Delayed mon.").

If the operating mode STOP is selected while the inverter was running the following applies:

- Dependent on the current application mode a soft shut down will be executed.
- Pressing the STOP button again opens the GCB.

Released

If the conditions of the LogicsManager function "Enable MCB" (parameter 12923) are TRUE, the MCB will be closed again if it is open in STOP operating mode.

5.2.2 Operating Mode MANUAL

General usage

In the MANUAL operating mode (mode button »MAN« illuminated) the circuit breakers can be operated via the push buttons along the bottom of the display (softkeys). Additionally the Start(I)/Stop(O) buttons can be used to start or stop the unit.

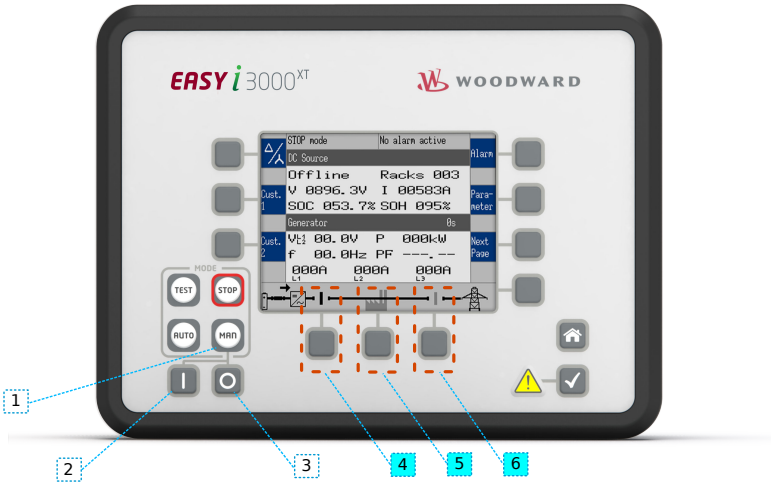


Fig. 202: Buttons for manual operation

1	Mode button: MAN
2	START button: Inverter
3	STOP button: Inverter
4 .. 6	Soft buttons: Breaker OPEN/CLOSE (5 only active with GGB applications)

⚙

1. ▷ 

Use the mode button »MAN« to activate operating mode MANUAL.

▶ The MAN button is illuminated

Released

NOTICE!

The breakers will open immediately without power reduction.

To open the breaker in a no-load condition, reduce the load manually in the setpoints screen (“4.1.5 Specialized Menu Screens”).

Example for application mode A01

As in automatic mode some preconditions to start the inverter must be fullfilled in MANUAL mode too. Thus, the results of LogicsManagers Inv. ready for operation and Inv. start operation must be TRUE.

⚙

> To start the inverter:

1. ▷  Press the button »I« below the MAN button.

▶ Success: The inverter starts and the circular arrow and the eye symbol appear.
Failure: No change in the display until the "start failure" message appears.

⚙

> To stop the inverter:


1. ▷  Press the button »0« right below the MAN button.

▶ Success: The inverter stops and the circular arrow and the eye symbol disappear.
Failure: No change in the display until the "stop failure" message appears.

Overview

Function Status	Symbol	Available in application mode												
		A01	A02	A03	A04	A05	A06	A07	A08	A09	A10	A11	A12	A13
Start running inverter		✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔
Stop inverter		✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔
Breaker open command			✔											

Released

Function Status	Symbol	Available in application mode												
		A01	A02	A03	A04	A05	A06	A07	A08	A09	A10	A11	A12	A13
is issued or a closure of the breaker is blocked														
No defined breaker state			✔											
Open the GCB				✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔
Close the GCB				✔	✔	✔	✔	✔	✔	✔	✔	✔	✔	✔
Open the GGB[1]						✔	✔			✔	✔	✔	✔	
Close the GGB[1]						✔	✔			✔	✔	✔	✔	
Open the MCB					✔		✔		✔	✔		✔	✔	
Close the MCB					✔		✔		✔	✔		✔	✔	

[1] The GGB can not be operated via softkey.

Symbol	Description
	Generator or mains rotating field moves clockwise.
	Generator or mains rotating field moves counter-clockwise.
	Power is detected at the respective measuring point (generator, busbar, or mains).
	Indicates that the delayed monitoring has expired and the monitoring functions are enabled.
	Power is imported (at mains interchange).
	Power is exported (at mains interchange).

Table 116: Status symbols

5.2.3 Operating Mode AUTOMATIC

General usage

In the AUTOMATIC operating mode (»AUTO«), all inverter, GCB, and/or MCB functions are operated via an interface, or automatically by the control unit (i.e. a mains failure).

The function of the easY-I depends on the configuration of the unit and how the external signals are used.

⚙

1. ▷ 

Use the button »AUTO« to activate operating mode AUTOMATIC.

▶ If mode change was successful the button »AUTO« is illuminated.

For a more detailed description of the start/stop sequence of the unit and the associated parameters refer to “4.4.5.2 Operation Mode AUTO - Automatic Run”.

The main functions are briefly described in the following sections.

Start unit

The unit is started via a remote start signal.

Prerequisites:

- The AUTOMATIC operating mode is enabled.
- The start request is enabled by the LogicsManager Start req. in AUTO.
- No shut down alarm is present. (for explanation of the alarm classes refer to “9.6.4 Alarm Classes”).
- The results of LogicsManagers Inv. ready for operation and Inv. start operation must be TRUE.
- The GCB is open.

Auto mains failure operation (AMF)

Auto mains failure operation is available in application mode A04, A06, A07, A08, A09, A11, A12 and A13.

If the AUTOMATIC operating mode is enabled and the mains fail, the inverter and the power circuit breakers will be operated according to the current application mode.

Prerequisites:

- The AUTOMATIC operating mode is enabled.
- The parameter "Emergency power" is configured to "On".
- The configured mains failure limits are reached.
- The configured delay times have expired.

Released

- No shut down alarm is present. (for explanation of the alarm classes refer to “9.6.4 Alarm Classes”).
- The results of LogicsManagers Inv. ready for operation and Inv. start operation must be TRUE.

5.2.4 Operating Mode TEST

General usage

The operating mode (»TEST«) usually is a temporary operating mode. The idea is to test the genset.

TEST operating mode always starts the unit, when changing into this mode independent on an AUTOMATIC start order. Additionally the TEST operating mode supports the emergency and critical run as well (if a mains failure occurs during the test run). The operating mode TEST supports different sub modes so the operator can choose if the breakers shall be closed during test run or whether the operating mode is changed after the test run.

The function of the easY-I depends on the configuration of the unit and how the external signals are used.

⚙

1. ▷ 

Use the button »TEST« to activate operating mode TEST.

▶ If mode change was successful the button »TEST« is illuminated.

The illumination of the button becomes twinkling a short time before TEST run is over.

For a more detailed description of the start/stop sequence of the unit and the associated parameters refer to “4.4.5.3 Operation Mode TEST”.

The main functions are briefly described in the following sections.

5.3 Restore Language Setting via HMI, Buttons and Softkeys

⚙

> In order to change the language setting via HMI, press the (soft)keys in the following order:

Language parameter is on code level "0", so the instruction will work with each code level.

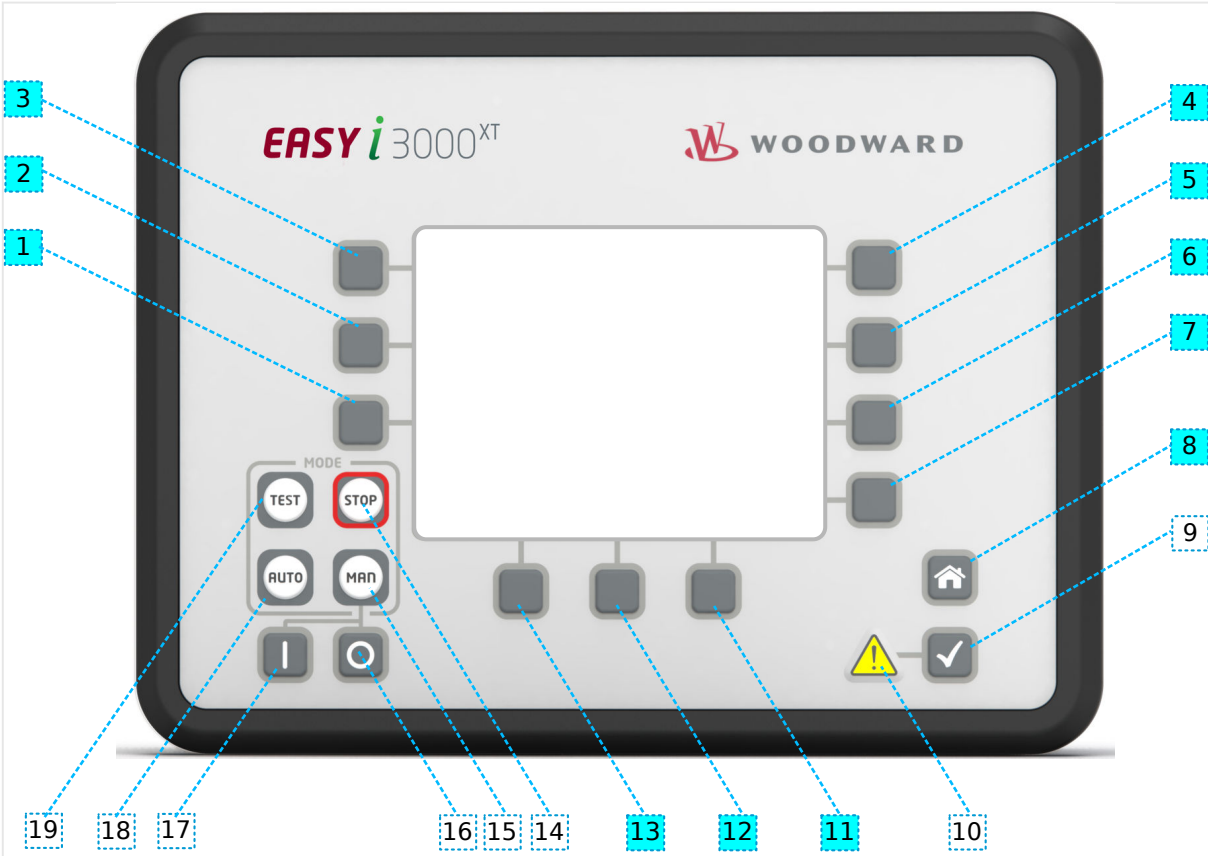


Fig. 203: Front panel and display

1. ▷ Press button »HOME« once to return to the start screen

2. ▷ Press softkey »6« once to access the "Parameter" screen

3. ▷ Press softkey »3« once to access the "Configure language / clock" screen

4. ▷ Press softkey »7« once to edit the language setting

5. ▷ Press softkeys »11« or »12« to select the desired language.

6. ▷ Press softkey »7« once to commit the language setting.

▶ The desired display language is restored.

Released

6 Application Field

Device status

The following applications are described for devices with status "factory settings". This is mandatory because parameters not changed during sample setup may have influence to the devices' behavior!

Live test requirement

If you want to use the same setup as described with the sample, please ensure factory settings status of the device before changing it.

Otherwise you have to take care that the changes you did before do not "disturb" sample settings!

Application Modes

For application modes overview see chapter “2.2 Application Modes Overview”.

6.1 Basic Applications

General

Beside all the application modes based on GCB, GGB and MCB breakers, the easY-I also considers an AC-breaker. The AC-breaker is usually realized in the inverter and the easY-I has no direct influence on it. That means with a start command sent to the inverter the AC-contactor will be closed. As long there is no direct AC-contactor feedback provided by the inverter the easY-I takes the state machine information “Running” of the inverter to recognize the state of the AC-contactor. The easY-I creates with the AC-contactor and the own GCB feedback a general GCB-is-closed-feedback (04.06 GCB closed). The one-line diagram on display and ToolKit shows a closed GCB if both breakers are closed.

Treatment of GCB feedback.

The easY-I needs a clear information if the physical connection between inverter and busbar is closed. Therefor the easY-I offers the LogicsManager "LM GCB is closed" (16907). In cases the physical GCB is installed between Inverter and Busbar the LogicsManager is configured with "NOT DI8" and the status “Running” from the inverter (default setting). In cases the physical GCB is not installed the parameter "GCB is available" (16999) is set on “No” and the LogicsManager is configured only with the status “Running” of the inverter. If the GCB is configured as not available the commands GCB close and GCB open are not supported.

6.1.1 Application mode A01 (None)

This application mode (A01) may be used, where the breaker control is done external. The control does not operate any breaker. Emergency mode (AMF operation) is not supported in this application mode.

This application mode would not make sense for easY-I applications serving Inverters with internal AC-contactor because there is no method existing to open the breaker. In this case it is recommended to change to the application mode GCBopen.

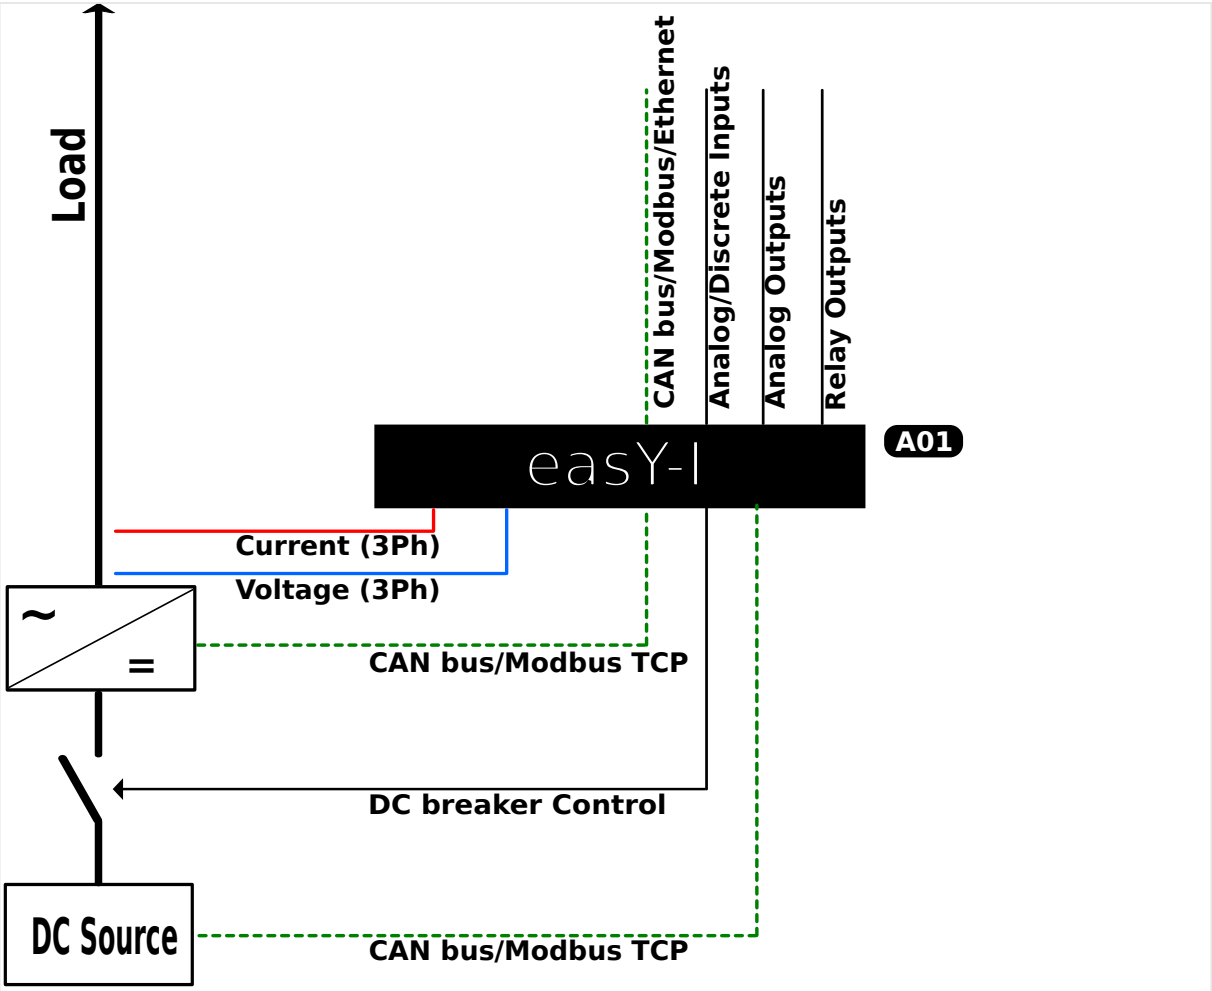


Fig. 204: Application mode A01 (schematic)

The easY-I requires the feedback reply from GCB and MCB in this application mode. These replies are used to define, whether the easY-I controls frequency, shares the load with other gensets or performs active load control.

The following feedback signals are used in this application mode and fixed to the respective discrete inputs:

- DI 7 "Reply MCB" (mains parallel)
- DI 8 "Reply GCB" (normally closed (break) contact)

If the easY-I is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected.

If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

Inverter operation in AUTOMATIC (basic function)

Inverter starts, if

- The LogicsManager "86.09 LM: Start req.in AUTO" is fulfilled (TRUE) AND

Released

- A shut down alarm is not present AND
- The inverter is ready for operation

Inverter stops, if

- The reply GCB is open AND the LogicsManager "86.09 LM: Start req.in AUTO" is not fulfilled (FALSE) OR
- A shut down alarm occurs

Being parallel to mains or to other generator, the generator power will be reduced before.



Refer to “4.4.5.2 Operation Mode AUTO - Automatic Run” for details.

6.1.2 Application mode A02 (GCB open)

This application mode (A02) may be used for islanded operation or parallel operation to any other source. In this case the easY-I will function as a control with inverter and DC source protection. The control unit can only open the GCB installed outside the inverter. Emergency mode (AMF operation) is not supported in this application mode. The AC-contactor in the Inverter will be closed and opened with the start and stop signal sent to the Inverter.



Recommended for easY-I applications serving Inverters with internal AC-contactor even there is no GCB outside the Inverter installed.

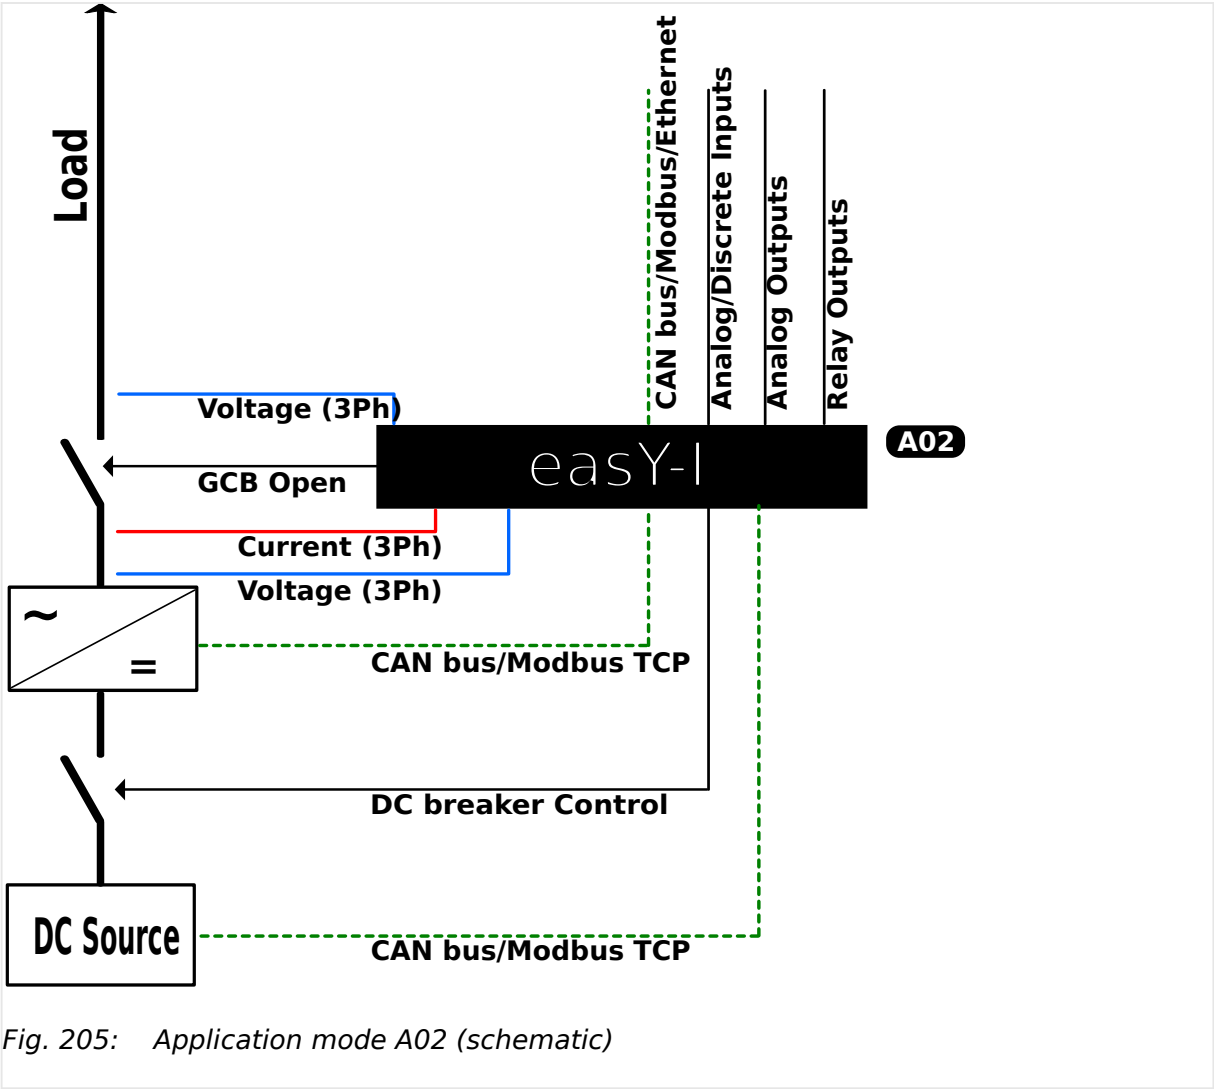


Fig. 205: Application mode A02 (schematic)

The easY-I requires the feedback reply from GCB and MCB in this application mode. These replies are used to define, whether the easY-I controls frequency, shares the load with other gensets or performs active load control.

The following feedback signals and commands are used in this application mode and fixed to the respective discrete inputs and outputs:

- DI 7 "Reply MCB" (mains parallel)
- DI 8 "Reply GCB" (normally closed (break) contact)
- DO 7 "Command: GCB open"

If the easY-I is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected.

If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

Inverter operation in AUTOMATIC (basic function)

Inverter starts, if

Released

- The LogicsManager "86.09 LM: Start req.in AUTO" is fulfilled (TRUE) AND
- A shut down alarm is not present AND
- The inverter is ready for operation

With successful start the GCB closure is released.

Inverter stops, if

- The reply GCB is open AND the LogicsManager "86.09 LM: Start req.in AUTO" is not fulfilled (FALSE) OR
- A shut down alarm occurs

Being parallel to mains or to other generator, the generator power will be reduced before.



Refer to “4.4.5.2 Operation Mode AUTO - Automatic Run” for details.

6.1.3 Application mode A03 (GCB)

This application mode (A03) may be used in applications, where only the GCB is operated by the easY-I.

If it is used for islanded or mains parallel operations, GCB open (alarms) or mains decoupling should be performed with a physical breaker installed outside the Inverter. The easY-I will function as a control with inverter and DC source protection. The control unit can open and close the GCB. Emergency mode (AMF operation) is not supported in this application mode.



Recommended for easY-I applications serving Inverters running grid-tie and grid-forming mode.

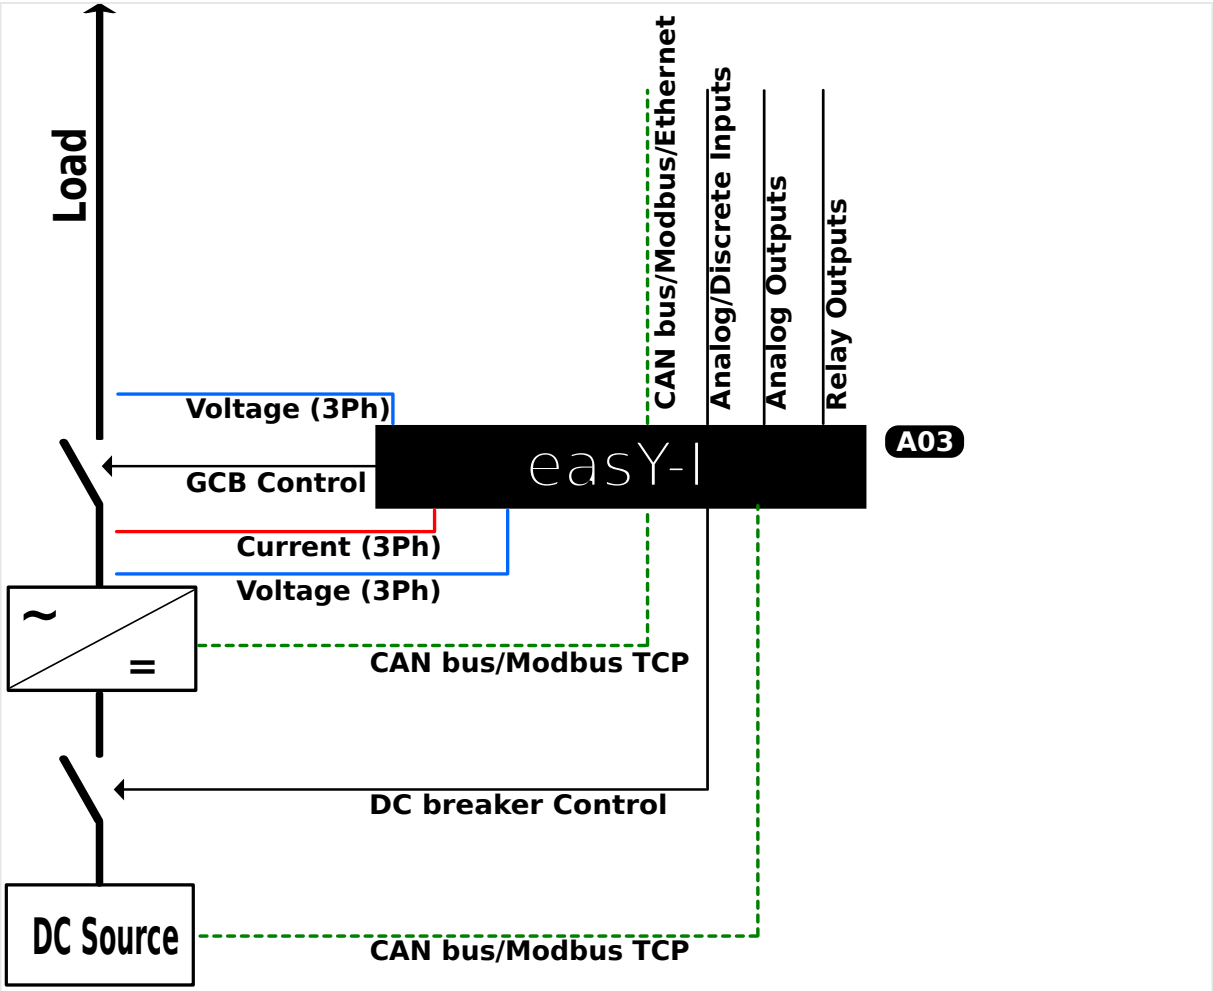


Fig. 206: Application mode (schematic)

The easY-I requires the feedback reply from GCB and MCB in this application mode. These replies are used to define, whether the easY-I controls frequency, shares the load with other gensets or performs active load control.

The following feedback signals and commands are used in this application mode and fixed to the respective discrete inputs and outputs:

- DI 7 "Reply MCB" (mains parallel)
- DI 8 "Reply GCB" (normally closed (break) contact)
- DO 6 "Command: GCB close"
- DO 7 "Command: GCB open" (optionally)

If the easY-I is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected.

If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

Released

Inverter operation in AUTOMATIC (basic function)

Inverter starts, if

- The LogicsManager "86.09 LM: Start req.in AUTO" is fulfilled (TRUE) AND
- A shut down alarm is not present AND
- The inverter is ready for operation

With successful start the GCB closure is executed.

- If the voltage of generator and generator busbar is in range, the GCB will be synchronized



If the voltage of generator is in range, and the **generator busbar** is dead, and no other GCB is closed, **and the MCB is closed** the GCB will **not** be closed but an »operating range failure« occurs.

Inverter stops, if

- The LogicsManager "86.09 LM: Start req.in AUTO" is not fulfilled (FALSE) OR
- A shut down alarm occurs

Being parallel to mains or to other generator, the generator power will be reduced, before the GCB will be opened.



Refer to “4.4.5.2 Operation Mode AUTO - Automatic Run” for details.

6.1.4 Application mode A04 (GCB/MCB)

This application mode (A04) may be used for mains parallel operation. In this case, the easY-I will function as control with mains, inverter and DC source protection.

The control unit can open and close the GCB and the MCB. The breaker transition modes “Open Transition”, “Closed Transit.”, “Interchange” and “Parallel” are possible.

The Emergency mode (AMF operation) is supported in this application mode.

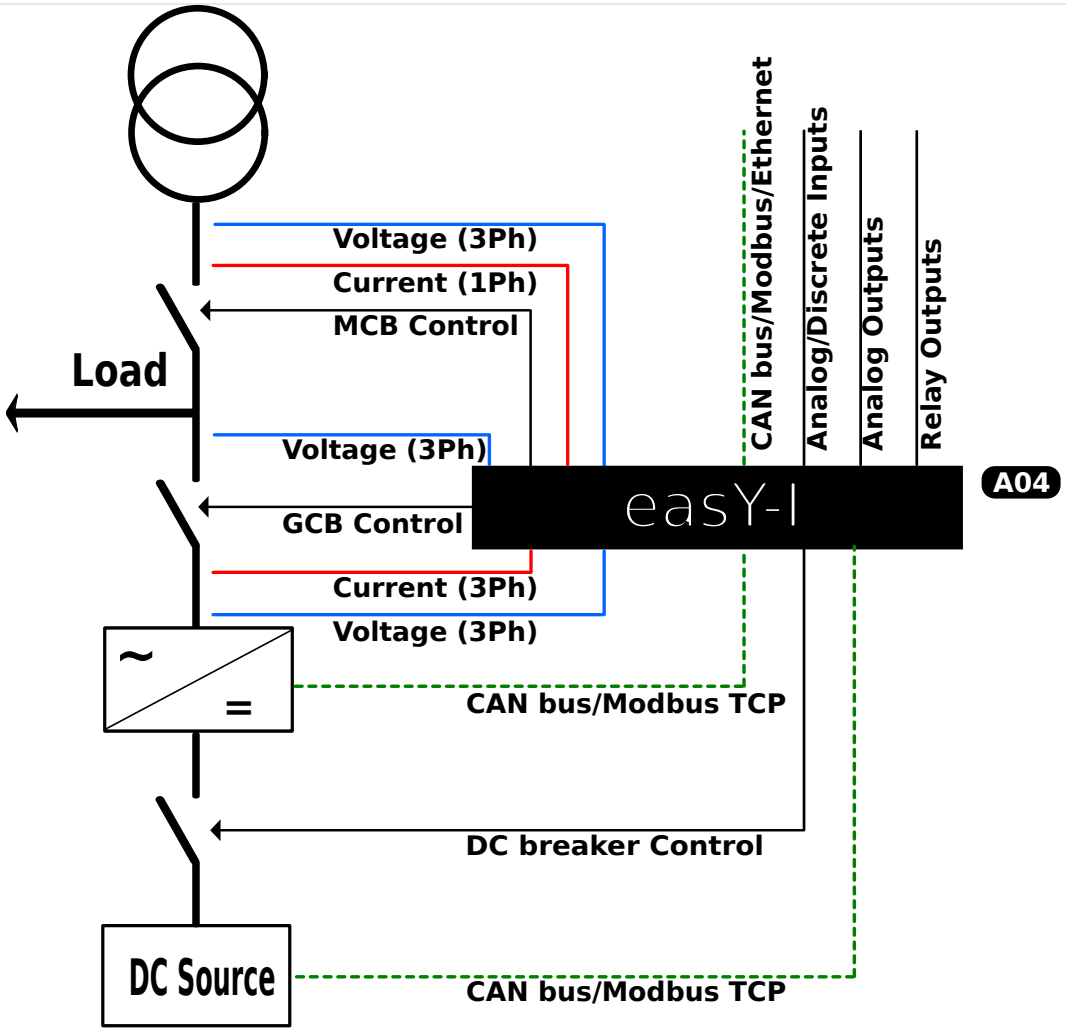


Fig. 207: Application mode A04 (schematic)

The easY-I requires the feedback reply from both circuit breakers in this application mode. These replies are used to define, whether the easY-I controls frequency, shares the load with other gensets or performs active load control.

The following feedback signals and commands are used in this application mode and fixed to the respective discrete inputs and outputs:

- DI 7 "Reply MCB" (mains parallel)
- DI 8 "Reply GCB" (normally closed (break) contact)
- DO 6 "Command: GCB close"
- DO 7 "Command: GCB open" (optionally)
- DO 8 "Command: MCB close"
- DO 9 "Command: MCB open"

Inverter operation in AUTOMATIC (basic function)

Inverter starts, if

Released

- The LogicsManager "86.09 LM: Start req.in AUTO" is fulfilled (TRUE) AND
- A shut down alarm is not present AND
- The inverter is ready for operation

According to the current active breaker transition mode the GCB and MCB will be operated.

Inverter stops, if

- The LogicsManager "86.09 LM: Start req.in AUTO" is not fulfilled (FALSE) OR
- A shut down alarm occurs

According to the current active breaker transition mode the GCB and MCB will be operated.



Refer to “4.4.5.2 Operation Mode AUTO - Automatic Run” for details.

Auto mains failure operation (AMF) in AUTOMATIC (basic function)

Inverter starts, if

- The configured mains failure limits are reached AND
- A shut down alarm is not present AND
- The inverter is ready for operation

With successful start the MCB will be opened and the GCB will be closed.

Inverter stops, if

- The mains values are back in range AND
- The mains settling time is expired

According to the current active breaker transition mode the GCB and MCB will be operated.

6.2 Multiple Genset Applications

Overview

The easY-I device with its inverter is for sure not a classic genset control but it can be configured in the same manner with different application modes like the easYgen. This ensures the same use cases in regards of breakers and systems. Finally the rules for adding LSx and GC devices are the same.

In a multiple-unit mains parallel application, all devices (easYgen and easY-I) need the same signals for:

- Mains voltage and current
- Reply and release signal of the MCB

Released

The open and close contacts from all controls must be wired in parallel.

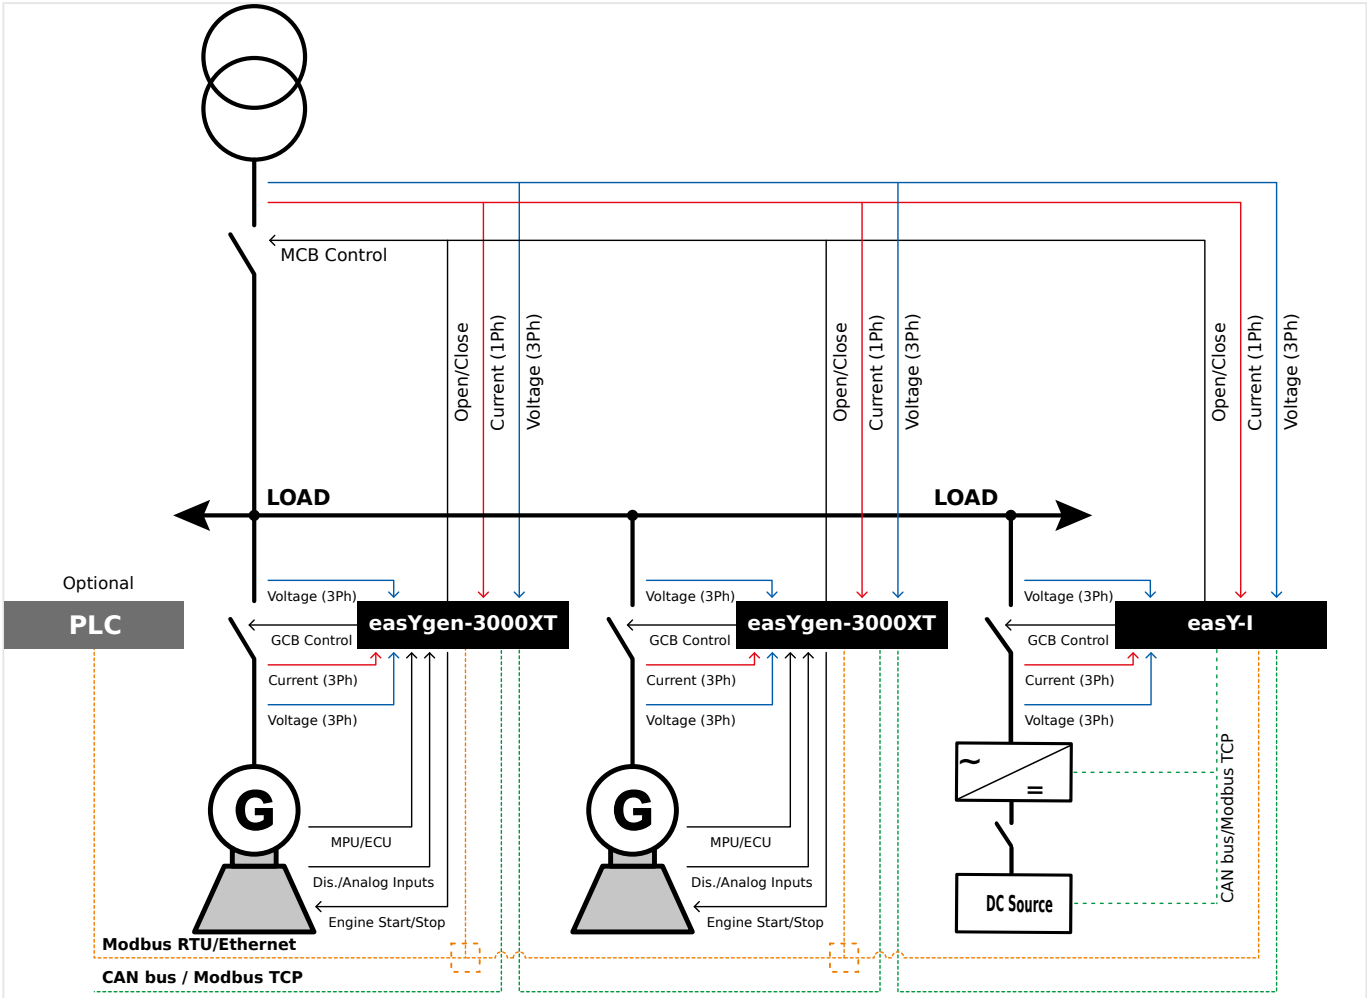


Fig. 208: Multiple genset application (schematic)

6.2.1 Configuration Example: Multiple Genset

Configuration example

The following example describes the configuration of a typical mains parallel operation with import/export power control at the interchange point and load-dependent start/stop.

Multiple generators are to be operated in parallel to the mains maintaining a stable power at the interchange point. The generators shall be started depending on the momentary load at the plant. An emergency operation in case of a mains failure is also intended.

The load dependent start/stop function (LDSS) shall be enabled with a remote start request. LDSS shall depend on the reserve power on the busbar. In case of a dead busbar (caused by a mains failure) all capable generators shall be started and operated with their minimum running time.

No generator priority is considered. Generator selection shall be performed depending on the operating hours.

Released

The following assumptions are valid for the example:

- Two generators and one inverter, each with 80 kW rated power, are available.
- The recommended minimum load for the generators is 40 kW.
- The minimum running time is 180 s.

6.2.1.1 Configuring Load-Dependent Start/Stop

⚙

1. ▷

In the Application mode "(GCB/GC" A13 the LDSS algorithm is in the Group Controller. For this reason the functionality is different and in the easY-I only the following LDSS parameters are visible and valid in this mode: (Other configuration must be done in the Group Controller. Refer to GC manual)

- LD start stop (parameter ⮡ 12930)
- Base priority (parameter ⮡ 5751)
- Minimum running time (parameter ⮡ 5759)
- LDSS transition time (parameter ⮡ 5805)
- LDSS Priority 2 (parameter ⮡ 12926)
- LDSS Priority 3 (parameter ⮡ 12925)
- LDSS Priority 4 (parameter ⮡ 12924)

Either on the front panel or using ToolKit navigate to menu [PARAMETER / Configuration / Configure application / Configure operation modes / Load dependent start/stop / General LDSS settings].

2. ▷ Configure the parameters below.

ID	Parameter	Value	Comment
5752	Start stop mode	Reserve power	The reserve power at the interchange point is to be considered for LDSS
5753	Dead busbar start mode	All	All generators shall start in case of a dead busbar (mains failure)
5751	Base priority	5	The base priority for the genset is 5
5754	Fit size of engine	No	The generator rated power is not considered for LDSS
5755	Fit service hours	Equal	The remaining hours until next service are considered for LDSS
5756	Changes of engines	Off	No engine change will be performed
5777	LDSS sort priority always	Off	LDSS priority follows settings without permanently refreshing.

ID	Parameter	Value	Comment
5759	Minimum running time	180 s	The minimum running time is 180 seconds
5805	LDSS transition time	60 s	LDSS transition time is 60s (only valid in GCB/GC mode A13)
12930	LD start stop	LM 86.86: TRUE	Enables function LDSS

3. ▷

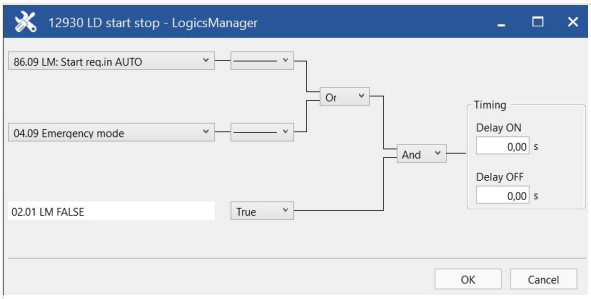


Fig. 209: LogicsManager function "LD start stop"

Configure the LogicsManager 86.86 function »12930 LD start stop« as shown in (“6.2 Multiple Genset Applications”) to enable LDSS if a start request in automatic operating mode or emergency mode are enabled.

LDSS parameters for mains parallel operation

Additional assumptions are valid for mains parallel operation (MOP):

- The first generator is only started if it is able to operate at a minimum load of 40 kW.
- A hysteresis of 20 kW is required to avoid frequent starts and stops.
- A reserve power of 10 kW on the busbar shall be maintained, i.e. at least 10 kW of generator capacity are available for short load peaks.

  Higher load peaks are supported by the mains.
- The delay for adding another generator shall be 30 seconds.
- The delay for adding another generator shall be reduced to 10 seconds if a generator at the busbar is operating above its rated load (accelerated start of the next generator).
- The delay for removing a generator from the busbar shall be 60 seconds.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Load dependent start/stop / Mains parallel operation].

2. ▷ Configure the parameters listed below.

Released

ID	Parameter	Value	Comment
5767	MOP Minimum load	40 kW	The minimum load in mains parallel operation is 40 kW
5769	MOP Hysteresis	20 kW	The reserve power hysteresis in mains parallel operation is 20 kW
5768	MOP Reserve power	10 kW	The reserve power in mains parallel operation is 10 kW
5772	MOP Add on delay	30 s	The add on delay in mains parallel operation is 20 seconds
5773	MOP Add on delay at rated load	10 s	The add on delay at rated load in mains parallel operation is 10 seconds
5774	MOP Add off delay	60 s	The add off delay in mains parallel operation is 60 seconds

Table 117: Parameter configuration for LDSS (MOP)

LDSS parameters for islanded operation

Additional assumptions are valid for islanded operation (IOP), i.e. in case of an mains failure (emergency) operation:

- A reserve power of 80 kW on the busbar shall be maintained, i.e. at least 2 generators are available in islanded operation for redundancy because no supporting mains are present.
- A hysteresis of 20 kW is required to avoid frequent starts and stops.
- The delay for adding another generator shall be 10 seconds.
- The delay for adding another generator shall be reduced to 3 seconds if a generator at the busbar is operating above its rated load (accelerated start of the next generator).
- The delay for removing a generator from the busbar shall be 180 seconds.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [PARAMETER / Configuration / Configure application / Configure operation modes / Load dependent start/stop / Islanded operation].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
5760	IOP Reserve power	80 kW	The reserve power in islanded operation is 80 kW
5761	IOP Hysteresis	20 kW	The reserve power hysteresis in islanded operation is 20 kW
5764	IOP Add on delay	10 s	The add on delay in islanded operation is 10 seconds

ID	Parameter	Value	Comment
5765	IOP Add on delay at rated load	3 s	The add on delay at rated load in islanded operation is 3 seconds
5766	IOP Add off delay	180 s	The add off delay in islanded operation is 180 seconds

Table 118: Parameter configuration for LDSS (IOP)

6.2.1.2 Configuring Automatic Operation

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [PARAMETER / Configuration / Configure application / Configure operation modes / Operation mode AUTO].

2. ▷

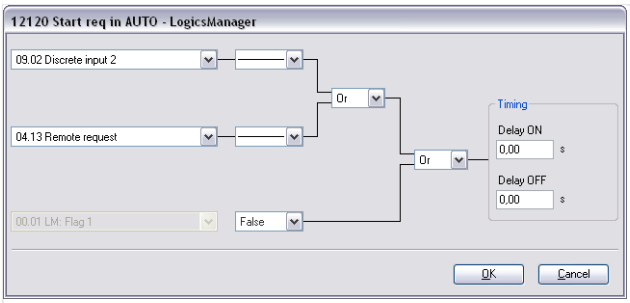


Fig. 210: LogicsManager function "Start req. in AUTO"

Configure the LogicsManager 86.90 function »12120 Start req. in AUTO« as shown in (↳▷ Fig. 210) to start the generator in Automatic operating mode if discrete input [DI 02] ("09.02 Discrete input 2") is energized or a remote start request ("04.13 Remote request" = start via interface) is issued.

Released

6.2.1.3 Configuring Emergency Operation

Configure emergency operation to be initiated if the mains fails for at least 3 seconds or the MCB cannot be closed.

⚙

1. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
2802	Emergency run	On	Emergency operation is enabled
2800	Mains fail delay time	3.00 s	Emergency operation is initiated if the mains fail for a t least 3 seconds
3408	Emerg. start with MCB failure	Yes	Emergency operation is initiated if the MCB fails to close

Table 119: Parameter configuration for emergency run



See ↳▷ “4.4.6 Emergency Run” for further settings possibilities.

Released

6.2.1.4 Configuring Power Control

Configure the power controller to use the internal power setpoint 1, which must be set to 0 kW import power.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure load control].
2. ▷ Configure the parameters listed below .

ID	Parameter	Value	Comment
5539	AM ActPower SP1 [kW]	Determined by AnalogManager 81.05: **[A1 = 05.54 Internal P setp1 [kW]]**	The internal power setpoint 1 is used as load setpoint 1
5526	Load setpoint 1	Import	The internal power setpoint 1 is a import power value
5520	Int. load control setpoint 1	0 kW	The internal power setpoint 1 is configured to 0 kW

Table 120: Parameter configuration for import/export power control

6.2.2 Communication Management

6.2.2.1 System Update

General notes

The Communication Management gives an overview of all devices on the load share bus in the system with regard to their different interfaces (Ethernet and CAN). See screen ↳▷ Fig. 212).

Additionally it provides functions to monitor the communication members and the interface. The monitor not only detects missing members, it also monitors a defined and stored constellation with the current constellation for deviations. This function is called »System Update«.

For a better understanding some expressions needs to be explained.

System update expressions and their meaning:

- **»System update« or »System update function«:**

  Is the overall procedure that, if triggered, saves after 30 seconds the actual constellation of members.

- **»System update order«:**

  Triggers the System Update function. ↳▷ “How to initiate a system update”

Released

- **»System update delay timer«:**

  A timer of 30 second that starts after the System Update order was triggered.

- **»System update active«:**

  This flag is active while the System Update delay timer is running.

- **»System update monitoring«:**

  After the System Update function was triggered and is finished, the saved constellation is monitored in regards of any change.

- **»System update alarm«:**

  Occurs if an additional device is recognized that does not exist in the actual saved constellation. See Alarmlist for more details.

- **»Missing Member alarm«:**

  Occurs if a device is not recognized but exists in the actual saved constellation. See Alarmlist for more details.

With the System Update order, a delay timer of 30 seconds is triggered and will be sent to all other members on the load share and control bus. During this time the System Update and missing member monitoring is disabled to not interrupt a well working plant by upcoming alarm messages and control reactions on them due to shutting down a device for maintenance. Short before the delay timer ends, the System Update function saves the actual constellation of recognized devices.

During the delay time the LogicsManager flag *04.65 System update active* is active.

NOTICE!

A change of the device ID or of parameter »9924 Load share Interface« will reset the saved constellation and a new System Update order needs to be triggered.

After the System Update function is finished, the saved constellation will be monitored. Any deviation to this constellation will be recognized and noticed by an alarm that describes the type of change.

A missing member alarm is shown if a device, of the saved constellation, is not recognized anymore. If an additional device is recognized, that does not exist in the saved constellation, a System Update alarm is shown, see ↳ “System update expressions and their meaning:”

Each Alarm is also available as flag for the LogicsManager system.

To configure the »System update« Monitoring see ↳ “4.5.6.14 Multi-Unit System Update”:

By default the Missing Member alarm is incorporated into the frequency droop LogicsManager ↳ 12904.

The system update function incorporates as well the LSx members on the control bus. So with the system update order the amount and constellation of all devices (easYgen and LSx) on the load share and control bus will be saved.

Released

If a redundant Ethernet bus for load sharing is chosen, the system update function considers also the correct constellations of both buses. Additionally it gives insight and alerts, if the redundancy is lost or a new member is not registered properly.

Diagnostic screens

The easY-I-XT provides several overview screens to check all members on the load share and control bus to help trouble shooting. These screens should be watched, before the system update order is executed. These screens can be in the HMI under [Next Page / Multi-unit / Diagnostic devices] and in ToolKit under [STATUS MENU / Multi-unit / Diagnostic devices] .

For more details see ↳ “6.2.2.2 Diagnostic Screens”.

Availability

The system update function is available for all choices of »9924 Load share Interface«:

- Communication over CAN 3 bus
- Communication over Ethernet network A
- Communication over redundant CAN 3 bus and Ethernet network A
- Communication over Ethernet network B
- Communication over redundant Ethernet network B and C

How to initiate a system update

The system update order can be initiated with the following options:

- By Softkey button »Syst. upd.« in the HMI. Navigate to [Next Page / Multi-unit / Diagnostic devices]
- By ToolKit switch ↳ 13356 »System update«. Navigate to [STATUS MENU / Multi-unit / Diagnostic easYgen]
- By LogicsManager 86.35 with parameter ↳ 7801 »System update«. Navigate to [Parameter / Configure monitoring / Multi-unit functions]

NOTICE!

Please ensure, if you are using the LogicsManager »7801 System update« or the parameter »13356 System update«., that the signal goes false after executing. Otherwise, all buttons relating to system update are locked.

The actual constellation of all members on the load share and control bus is displayed on the according diagnostic screens in HMI and ToolKit.

6.2.2.2 Diagnostic Screens

The diagnostic screens are helping the operator to recognize the current communication state of the load share and control bus. These screens should be reviewed before executing a system update order. It is highly recommended to review the diagnostic

screen of each device that is participating on the load share/control bus. The system update function will save exactly the states which are displayed in these screens.

In case of a missing member or system update alarm, these screens will also help the operator to detect the root cause and for general troubleshooting.

The status of each device in the system will be indicated by a status ”LED“ in conjunction with a status text.



In GCB/GC mode A13 the Group Controller appears in the easY-I diagnostic screen as 'GC (32)' and in the LSx diagnostic screen as 'GC (33)'.

In this mode also an additional diagnostic screen »Diagnostic GC« will be available in the HMI and ToolKit. This screen will show the status of all existing Group Controllers in the Layer 3 system. It also provides a separated parameter 13349 »Syst. upd.« order for the Layer 3 system.

The information of other Group Controllers on Ethernet B/C bus can only be received by Group Controller themselves. The easY-Is receive the information about other groups for visualization purpose from their own GC via load share bus as they are never connected to the Ethernet B/C bus on which the GCs communicate between each other.



Load Share Gateways (LSG) will be shown in the diagnostic screens as easY-I devices.

Availability

There are diagnostic screens for the following devices (depending on the application mode):

- easYgen, A01 to A13
- Group Controller, A13
- LSx Layer 1, A07 to A13

Diagnostic Screen Parameter

ID	Parameter	CL	Setting range **[Default]**	Description
7801	**System update**	2	Determined by LogicsManager 86.35 **[(0 & 1) & 1]** = 11974	To select logical input(s) to cause a system update.
13356	**System update** (HMI: Syst. upd.)	2	Yes	Network is checked for members and its states. Updated results become new status.
			[No]	Check and update is disabled.
9925	**Monitored easYgen**	-/-	Latest result of members count	Result of members count driven by system update parameter 13356.

ID	Parameter	CL	Setting range [Default]	Description
9951	**Valid easYgen devices**	-/-	Actual count of valid devices	Actual count of devices that has sent valid data.
9926	**Monitored LSx**	-/-	Latest result of members count	Result of members count driven by system update parameter 13356. **Notes** Only applies to the application modes A07 to A13.
9952	**Valid LSx devices**	-/-	Actual count of valid devices	Actual count of devices that has sent valid data. **Notes** Only applies to the application modes A07 to A13.

Table 121: Parameter: Diagnostic Screens

All Diagnostic Screen Parameters are accessible via communication interfaces. The system update command can be initiated through a free control flag.

Diagnostic screens in the HMI

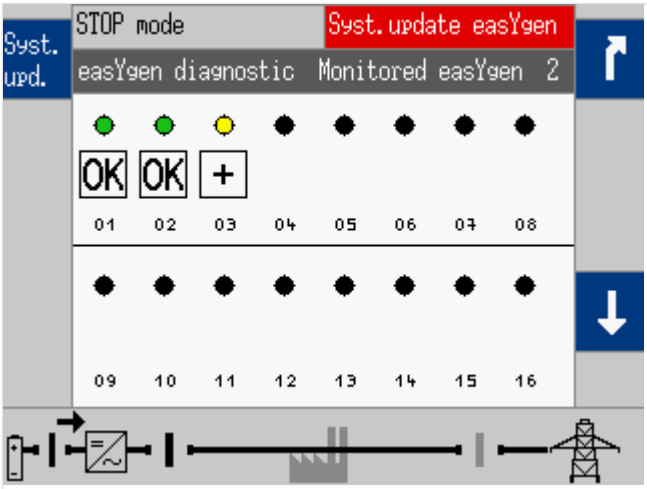


Fig. 211: Diagnostic screen example (HMI)

The HMI diagnostic screen shows, additional to the Status of each device, the number of Monitored devices and the »Syst. upd.« button to activate the System Update order, see ⮡ Table 121. While the System Update is active, the Event indication will show »System update«.

Because of space restrictions on the display, the status text of each device is realized with symbols. Use ToolKit for text indications.

Diagnostic screens in ToolKit

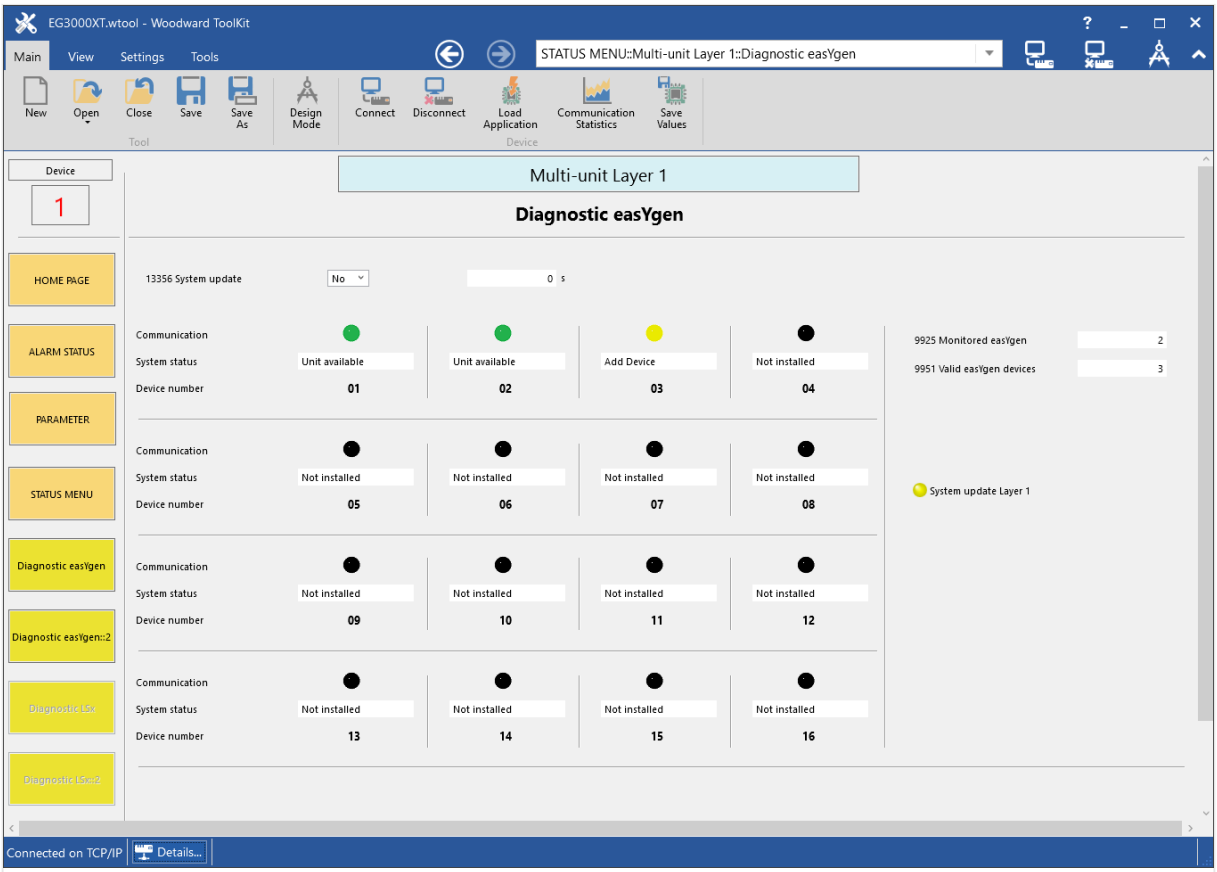


Fig. 212: Diagnostic screen example (ToolKit)

The ToolKit diagnostic screen shows, additional to the Status of each device, the number of »Monitored devices«, the number of »Valid devices« and the ↳ 13356 »System update« to activate the System Update order, see ↳ Table 121. While the System Update is active, the remaining time will be shown. An active System Update Alarm is also shown by the »Syst.update Layer1« LED.

It is possible, that several system status messages are active at same time. So the indication is prioritized:

- Unit not recognized (highest priority)
- Add Device
- Only NW CAN, Only NW A, Only NW B, or Only NW C
- Not installed

It is possible, that several system status are causing different LED messages. So the indication is prioritized:

- Red LED (highest priority)
- Yellow LED
- Black (off) LED

Diagnostic symbolic for single bus topology

Single bus topology means there is no redundant bus topology in use. Single bus topologies are load share over CAN bus or a single Ethernet network.

System and Control bus (CAN or single Ethernet)			
LED	**ToolKit: displayed text**	**easYgen: HMI**	**Explanation**
GREEN	Unit available	OK	This device is recognized and monitored with the missing member monitor according to the latest System Update order.
YELLOW	Add Device	+	This device is recognized but not registered according to the latest system update order. Therefore, the missing member monitoring does not observe the device. **System update is required!**
RED	Unit not recognized	X	This device is not recognized according to the latest system update order. (Missing Member Alarm)
BLACK	Not installed		This device is neither recognized nor registered through the latest system update order.
(/) RED / BLACK (twinkling)	Unit not recognized / Not installed (twinkling)	X (twinkling)	This only applies to the own device. There is no other device recognized according to the latest system update. Therefore this unit is suspected to have an interface error as it does not see any device on the bus.

Diagnostic symbolic for redundant bus topologies

Redundant bus topology like CAN/Ethernet A to provide more safety in regards of load share communication.

System and Control bus (Redundant CAN/EthernetA)			
LED	**ToolKit: displayed text**	**easYgen: HMI**	**Explanation**
GREEN	Unit available	OK	This device is recognized and monitored with the missing member monitor according to the latest System Update order.
YELLOW	Add Device	+	This device is recognized but not registered according to the latest system update order. Therefore, the missing member monitoring does not observe the device. **System update is required!**
YELLOW	Only NW CAN	CAN	This device is not recognized on the Ethernet A bus according to the latest system update. Therefore, a Redundancy Lost Alarm is triggered.

Released

System and Control bus (Redundant CAN/EthernetA)			
LED	**ToolKit: displayed text**	**easYgen: HMI**	**Explanation**
YELLOW / BLACK (twinkling)	Only NW CAN / Not installed (twinkling)	CAN (twinkling)	This only applies to the own device. There is no other device recognized on the Ethernet A bus according to the latest system update. Therefore this unit is suspected to have an interface Ethernet A error as it does not see any device on Ethernet A. A Redundancy Lost Alarm is triggered.
YELLOW	Only NW A	A	This device is not recognized on the CAN bus according to the latest system update. Therefore, a Redundancy Lost Alarm is triggered.
YELLOW / BLACK (twinkling)	Only NW A / Not installed (twinkling)	A (twinkling)	This only applies to the own device. There is no other device recognized on the CAN bus according to the latest system update. Therefore this unit is suspected to have a CAN interface error as it does not see any device on the CAN. A Redundancy Lost Alarm is triggered.
RED	Unit not recognized	X	This device is not recognized according to the latest system update order. (Missing Member Alarm)
BLACK	Not installed		This device is neither recognized nor registered through the latest system update order.
(RED / BLACK) RED / BLACK (twinkling)	Unit not recognized / Not installed (twinkling)	X (twinkling)	This only applies to the own device. There is no other device recognized according to the latest system update. Therefore this unit is suspected to have an interface Ethernet A and CAN error as it does not see any device on the bus. A Redundancy Lost Alarm is triggered.

System and Control bus (Redundant EthernetB/C)			
LED	**ToolKit: displayed text**	**easYgen: HMI**	**Explanation**
GREEN	Unit available	OK	This device is recognized and monitored with the missing member monitor according to the latest System Update order.
YELLOW	Add Device	+	This device is recognized but not registered according to the latest system update order. Therefore, the missing member monitoring does not observe the device. **System update is required!**
YELLOW	Only NW B	B	This device is not recognized on the Ethernet C bus according to the latest system update. Therefore, a Redundancy Lost Alarm is triggered.
(YELLOW / BLACK)	Only NW B / Not installed	B	This only applies to the own device. There is no other device recognized on the Ethernet C bus according to the latest system update. Therefore this unit is suspected to have an

System and Control bus (Redundant EthernetB/C)			
LED	**ToolKit:** **displayed text**	**easYgen:** **HMI**	**Explanation**
YELLOW / BLACK (twinkling)	(twinkling)	(twinkling)	interface Ethernet C error as it does not see any device on Ethernet C. A Redundancy Lost Alarm is triggered.
YELLOW	Only NW C	C	This device is not recognized on the Ethernet B bus according to the latest system update. Therefore, a Redundancy Lost Alarm is triggered.
(YELLOW / BLACK) YELLOW / BLACK (twinkling)	Only NW C / Not installed (twinkling)	C (twinkling)	This only applies to the own device. There is no other device recognized on the Ethernet B bus according to the latest system update. Therefore this unit is suspected to have an interface Ethernet B error as it does not see any device on Ethernet B. A Redundancy Lost Alarm is triggered.
RED	Unit not recognized	X	This device is not recognized according to the latest system update order. (Missing Member Alarm)
BLACK	Not installed		This device is neither recognized nor registered through the latest system update order.
(RED / BLACK) RED / BLACK (twinkling)	Unit not recognized / Not installed (twinkling)	X (twinkling)	This only applies to the own device. There is no other device recognized according to the latest system update. Communication error on network. Therefore this unit is suspected to have an interface Ethernet B and Ethernet C error as it does not see any device on the buses.

6.2.2.3 Practicing the System Update Functionality

⚙ **Commissioning**

1. ▷ If the devices are connected to a network system, during the first commissioning it is to observe in the diagnostic screens, whether all devices are recognized. Additional to that the sum of all easY-I / easYgen devices must match the number shown at parameter »9951 Valid easYgen devices«, see ⮡▷ Table 121.

> For application mode A07 to A13 the sum of all LSx devices must match the number shown at parameter »9952 Valid LSx devices«.

If all these conditions are fulfilled the system update order can be executed. If any condition is not fulfilled do trouble shooting before you hit any system update order.

Released

NOTICE!

It is highly recommended to verify the diagnostic screen of each device in the system.

2. ▷ Executing system update order

▶ After 30 seconds all devices must be indicated with a green lamp in the diagnostic screens. The sum of all easY-I / easYgen devices must match the number shown at parameter »9925 Monitored easYgen« and »9951 Valid easYgen devices«.

For application mode A07 to A13 the sum of all LSx devices must match the number shown at parameter »9926 Monitored LSx« and »9952 Valid LSx devices«.

⚙ **Adding a device to an already running and commissioned network**

1. ▷ Connect the additional device onto the network.

2. ▷ Check the availability in the diagnostic screen. The new device is indicated by a yellow LED and with status text »Add device«.

3. ▷ Execute the system update order

▶ After 30 seconds all devices must be indicated with a green lamp in the diagnostic screens. The sum of all easY-I / easYgen devices must match the number shown at parameter »9925 Monitored easYgen« and »9951 Valid easYgen devices«.

⚙ **Removing a device from an already running and commissioned network**

1. ▷ Execute the system update order

If you are removing the device before you hit the system update order, it is important to know that it will come to a missing member alarm with the consequence that the system goes into a droop function (if configured). If that has happened, this issue can be solved by a system update order. But do not forget to make a system check via the diagnostic screens.

2. ▷ You have now 30 seconds time to remove the device, without getting any consequences on the system.

6.3 Special Applications

6.3.1 Configuring A Setpoint Control Via Analog Input

The following example illustrates how to configure an easY-I to use an external load setpoint via analog input [AI 03].

The external setpoint may be enabled using a switch, wired to discrete input [DI 09].

An analog 0 to 20 mA input is to be used where 4 mA corresponds with 0 % power (0 MW), 12 mA corresponds with 50 % power (1 MW), and 20 mA corresponds with 100 % power (2 MW).

Configuring the rated generator power

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure measurement].
2. ▷ Configure the parameter listed in ↳▷ Table 122.

ID	Parameter	Value	Comment
1752	Gen. rated active power [kW]	2000	Generator rated power of 2 MW

Table 122: Parameters for rated generator power

Configuring the analog input for real power setpoint

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Parameter / Configuration / Configure application / Configure inputs/outputs / Configure analog inputs / Analog input 3].
2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
1100	Type	Linear	A user-defined linear characteristic curve is to be used
1101	User defined min display value	+0.00e0	A value of 0.00 is displayed at the minimum of the input range
1102	User defined max display value	+2000.00e3	A value of 2000.00e3 (= 2000000) is displayed at the maximum of the input range
1139	Sender value at display min.	4	The sender value at minimum display is 4 mA
1140	Sender value at display max.	20	The sender value at maximum display is 20 mA
1120	Sender type	0 - 20 mA	A 0 to 20 mA sender is used on the analog input
10116	Filter time constant	Off	No filter time constant is applied to the analog signal
1135	Exponent for protocol	0	The value of the analog input 3 is multiplied by 10^0=1.

ID	Parameter	Value	Comment
1103	Monitoring wire break	Low	If the analog signal falls below 2 mA, a wire break is indicated
1104	Wire break alarm class	Class B	An alarm of Class B will be issued in case of a wire break
1105	Self acknowledge wire break	No	A wire break is not automatically cleared after it has been repaired
3636	Bargraph minimum	+0.00	The start value for the bargraph display of the analog input is 0.00
3637	Bargraph maximum	+2000.00e3	The end value for the bargraph display of the analog input is 2000.00e3 (= 2000000)

3. ▷ Configure the following parameters using ToolKit. They facilitate a more detailed display of the analog value.

ID	Parameter	Value	Comment
1125	Description	ActivePower SP	Analog input [AI 03] is labeled with "ActivePower SP (%)" on the display
1134	Unit	%	The unit "%" is shown on the display.

Configuring the load controller

The load controller is to be configured that it uses a fixed load setpoint 1 of 2 MW unless a switch energizes discrete input [DI 04] for enabling a variable load setpoint 2, which is controlled by analog input [AI 03].

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure load control].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
5539	AM ActPower SP1 [kW]	Determined by AnalogManager 81.05 **[A1 = 05.54 Internal P setp1 [kW]]**	The internal power setpoint 1 is used as load setpoint 1
5526	Load setpoint 1	Import	The internal power setpoint 1 is a import power value
5520	Int. load control setpoint 1	2000.0 kW	The internal power setpoint 1 is configured to 2 MW
5540	AM ActPower SP2 [kW]	Pass through of: 06.03 Analog input 3	Analog input 3 is used as load setpoint 2

ID	Parameter	Value	Comment
5527	Load setpoint 2	Steady	The internal power setpoint 1 is a import power value
5521	Int. load control setpoint 2	1000.0 kW	The internal power setpoint 1 is configured to 1 MW
12919 12998 12269	Setp. 2 load Setp. 3 load Setp. 4 load	FALSE	LogicsManagers are not enabling load setpoint 2, 3, 4

3. ▷

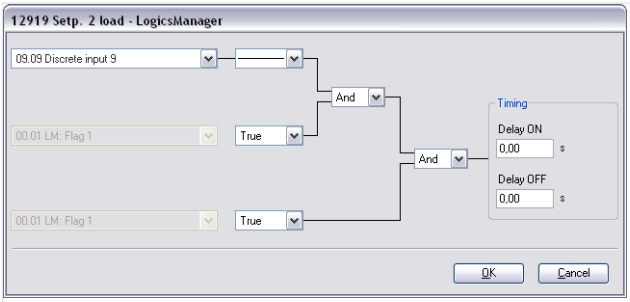


Fig. 213: LogicsManager function "Setp. 2 load"

Configure the LogicsManager function 12919 "Setp. 2 load" as shown in (↳▷ Fig. 213) to enable load setpoint 2 if discrete input [DI 09] is energized.

4. ▷ Continue similarly with setpoint 3 and setpoint 4

Viewing the load setpoint on the easY-I

⚙

1. ▷

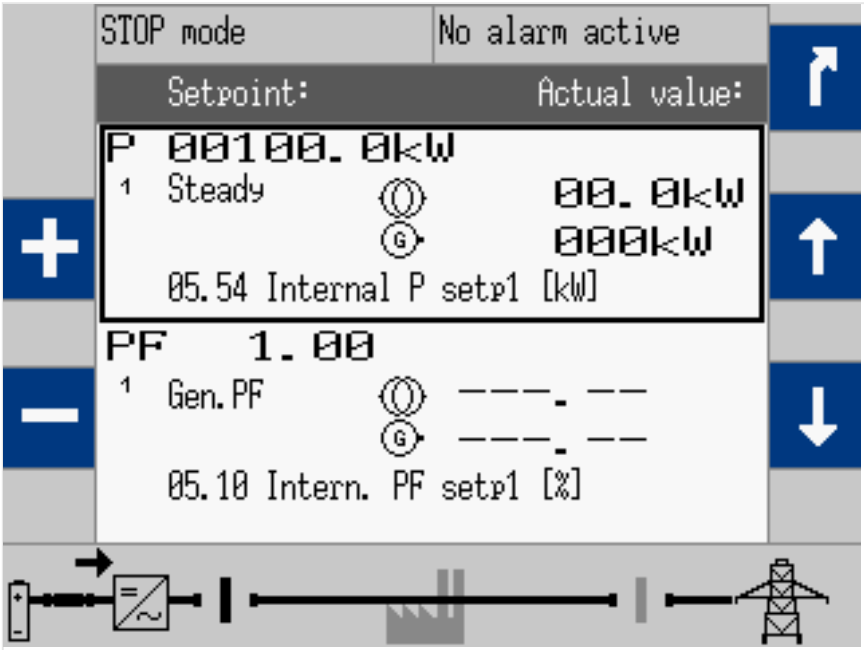


Fig. 214: Screen "Setpoint"

Released

After the unit is configured as described above, the "Setpoint" screen may be viewed from the main screen by selecting [Next Page / Setpoints / Setpoints generator].

2. ▷

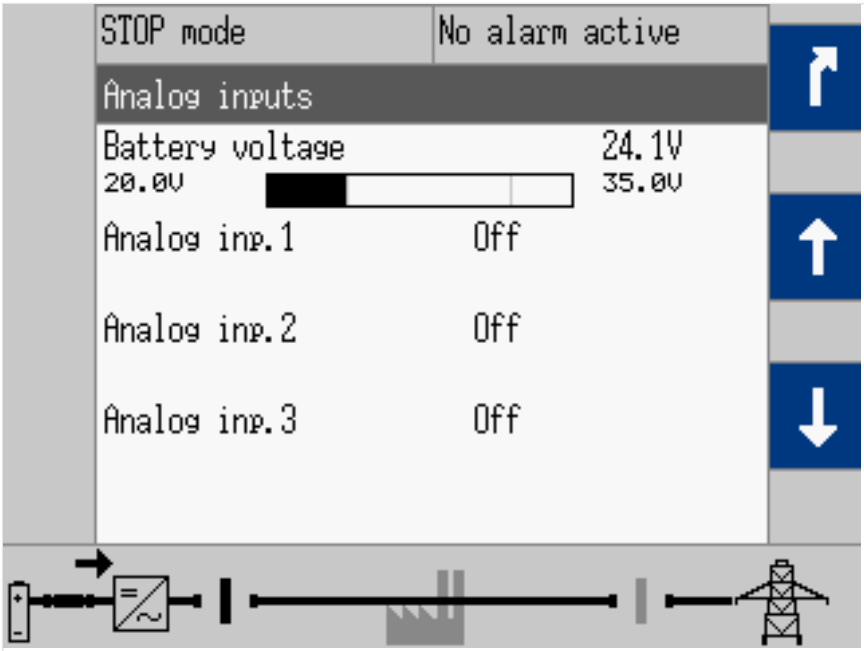


Fig. 215: Screen "Analog inputs"

The "Analog inputs" screen may be viewed from the main screen by selecting [Next Page / Measured values / Analog inputs/outputs].

6.3.2 Creating Self-Toggling (Pulsing) Relays

This function is set up with the LogicsManager.

This is a simple example of a relay output that toggles from energized to de-energized with adjustable on and off time.

In this example relay 2 is pulsing if

- "04.01 Operat. mode AUTO" and
- "01.08 Warning alarm" is active.

Configuring "Relay 2" for a pulsing relay

⚙

1. ▷

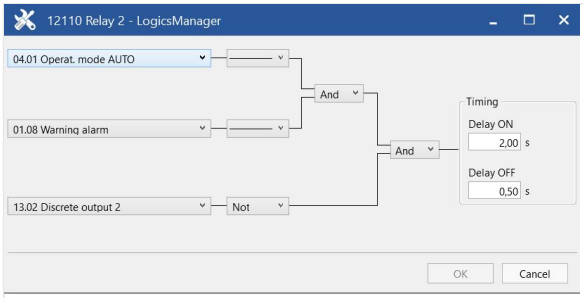


Fig. 216: LogicsManager function "Relay 2"

Configure the LogicsManager function "Relay 2" as shown in (↳▷ Fig. 216).

▶ In this example is the Delay ON time (2 s) in the LogicsManager determines how long the pause is, the Delay OFF time (0.5 s) the pulse duration.

6.3.3 Performing Remote Start/Stop And Acknowledgment

The easY-I controller may be configured to perform start/stop/shutdown/Acknowledgment functions remotely through the CAN bus or Modbus. The required procedure is detailed in the following steps.

Refer to ↳▷ “4.1.1 Basic Navigation” for a detailed description of the navigation through the various display screens.

A detailed description of the individual parameters may be found in ↳▷ “4.4.5.2 Operation Mode AUTO - Automatic Run”.

Be sure to enter the password for code level 2 or higher to be able to access the required configuration screens.

Refer to ToolKit Manual for a description of the installation, configuration and usage of the ToolKit visualization and configuration application.

Preliminary Conditions

We recommend to reset the unit to factory settings before proceeding.

Refer to ↳▷ “4.3.5 System Management” for reference.

The LogicsManager factory settings are shown in ↳▷ “9.4.5 Factory Settings”.

6.3.3.1 Operating Modes

Two operating modes may be used with remote control:

- AUTOMATIC
- STOP

It is possible to fix the operating mode using the LogicsManager function "86.16 LM: Operat. mode AUTO" (parameter ↳▷ 12510).

Released

AUTOMATIC

⚙

1. ▷

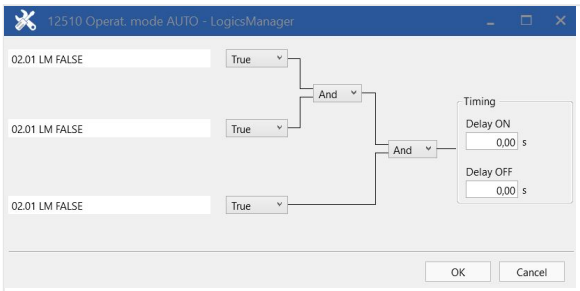


Fig. 217: LogicsManager function "Operat. mode AUTO"

The LogicsManager function ""Operat. mode AUTO"" (parameter ↳▷ 12510) can be configured as shown in (↳▷ Fig. 217).

▶ AUTOMATIC operation mode is always enabled.

If an alarm of alarm class C through F occurs in AUTOMATIC operating mode, the control does not return to STOP operating mode. If the alarm is cleared after Acknowledgment a restart is initiated.

It is also possible to configure a discrete input for controlling the operating mode using the LogicsManager function "86.16 LM: Operat. mode AUTO" (parameter ↳▷ 12510) and "86.18 LM: Operat. mode STOP" (parameter ↳▷ 12530).

⚙

1. ▷

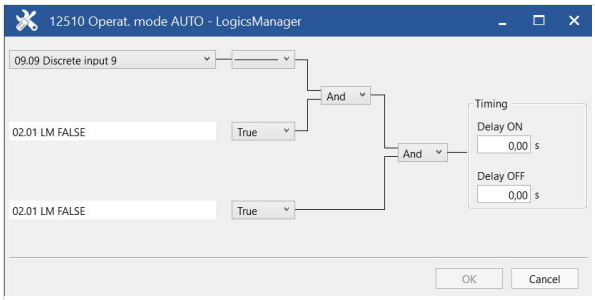


Fig. 218: LogicsManager function ""Operat. mode AUTO""

The LogicsManager function ""Operat. mode AUTO"" (parameter ↳▷ 12510) can be configured as shown in (↳▷ Fig. 218).

▶ AUTOMATIC operation mode is enabled as soon as discrete input 9 is energized.

STOP

⚙

1. ▷

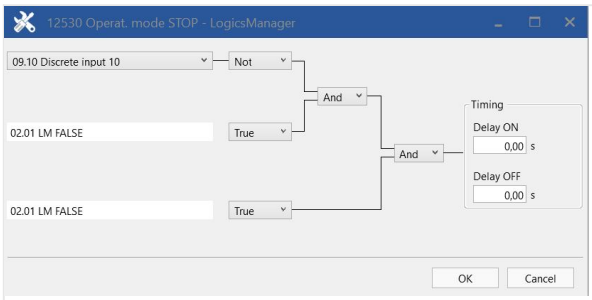


Fig. 219: LogicsManager function "Operat. mode STOP"

The LogicsManager function "Operat. mode STOP" (parameter 12530) can be configured as shown in (Fig. 219).

▶ STOP operation mode is enabled as soon as discrete input 10 is de-energized.

6.3.3.2 Setting Up A Test With Or Without Load

There are a lot of different opinions of the behavior of a proper test mode. The easY-I controller is supporting the following two modes:

- Test with load
- Test without load

Alternatives to the operation mode TEST

In cases the dedicated TEST operation mode shall be not taken, the following procedure can be taken to execute an TEST run in the operation mode AUTOMATIC.

Test with load

This is the LogicsManager function Start req. in AUTO (parameter 12120). No special message appears on the display.

If the mains fail during start in auto, the unit keeps running until the mains return and the mains settling time is expired or the conditions for Start req. in AUTO are FALSE again. The result depends on which condition is active longer.

Released

Test without load

This is the LogicsManager function "Start w/o load" (parameter 12540). If the conditions for this LogicsManager function are TRUE, the inverter will provide an automatic starting sequence and keep the generator running until this function is FALSE again.

Then the unit will perform an automatic stop sequence and remain in standby in auto mode.

The message "Start w/o load" is displayed during the test without load. If the mains fails during test without load and the emergency mode is enabled, the unit will take over the load.

The unit will open the MCB and close the GCB. When the mains return, it will transfer the load back to the mains according to the configured breaker transition mode after the mains settling timer has expired. The inverter will keep running until the conditions for "Start w/o load" are FALSE again.

Example for test without load

The inverter shall start once a month and run for one hour without overtaking the load. The test day shall be every fifteenth of a month (with flag 2). A relay output can be configured to indicate if this test is running, e.g. for a signal lamp.

⚙

1. ▷ Configure the parameters listed below to set up the timer.

ID	Parameter	Value	Comment
1663	Active day	15	The active day is enabled every fifteenth of the month
1662	Active hour	10	The active hour is enabled between 10:00 and 11:00 am every day

Table 123: Timer configuration

2. ▷

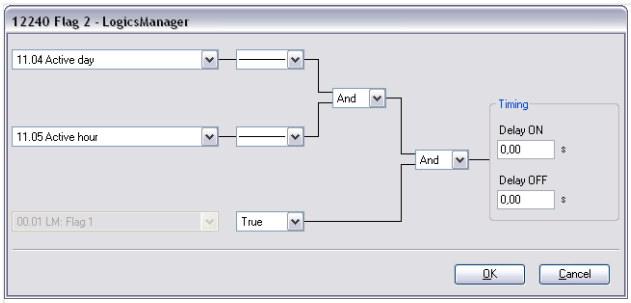


Fig. 220: LogicsManager function "Flag 2"

Configure the LogicsManager function "Flag 2" (parameter 10701) as shown in (Fig. 220).

▶ Flag 2 becomes TRUE as soon as the configured active day and active time is reached.

3. ▷

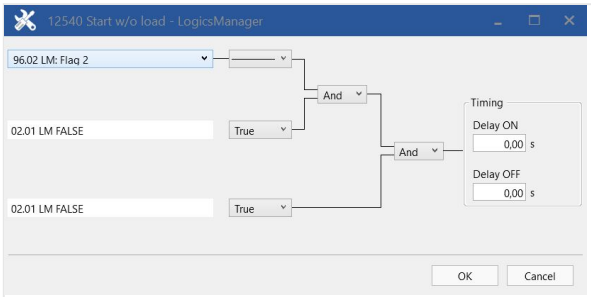


Fig. 221: LogicsManager function "Start without load"

The LogicsManager function "Start without load" (parameter 12540) can be configured as shown in (Fig. 221).

▶ Start without load mode is enabled as soon as Flag 2 becomes TRUE.

6.3.3.3 Remote Start/Stop, Shutdown, And Acknowledgment

The easY-I may be start, stop, shut down, or acknowledged alarms with Modbus or CAN protocol via the interface.

Therefore, two logical command variables (04.13, 04.14 and 03.40) have to be configured with the LogicsManager.

Released

- 04.13 Remote request
- 04.14 Remote acknowledge
- 03.40 Remote Shutdown

A 03.40 Remote Shutdown can be configured via LogicsManager internal flag (e.g.12230 Flag 1) combined with a free alarm LogicsManager (e.g. Free alarm 1) configured with shutdown alarm class.

How to handle a "04.13 Remote request" and a "04.14 Remote acknowledge" is described below in detail.

Start request in AUTOMATIC operating mode

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [PARAMETER / Configuration / Configure application / Configure operation modes / Operation mode AUTO].

2. ▷ Open the LogicsManager 12120 for entry "Start req. in AUTO".

3. ▷

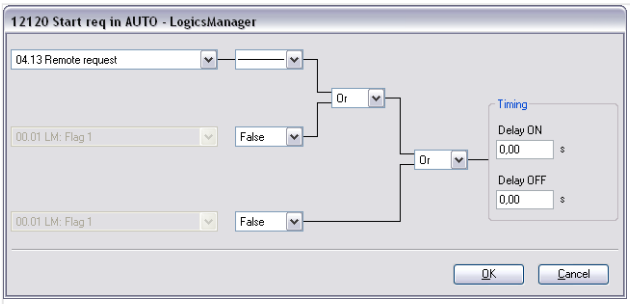


Fig. 222: LogicsManager function "Start req. in AUTO"

Configure the LogicsManager function "Start req. in AUTO" as shown in (↳▷ Fig. 222).

▶ With this setting, the "Start req. in AUTO" LogicsManager output becomes TRUE as soon as the remote request signal is enabled.

The LogicsManager commands 2 and 3 may be used to configure additional conditions like discrete inputs, which must be energized to be able to issue the remote start request.

Released

External Acknowledgment

⚙

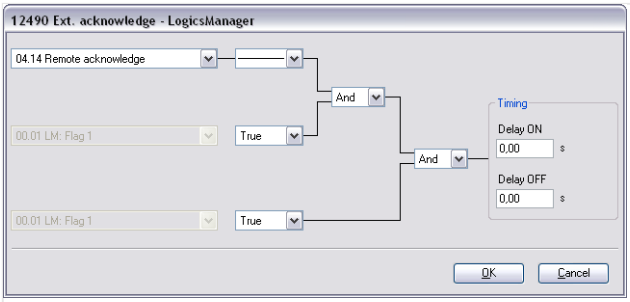
1. ▷ Either on the front panel or using ToolKit navigate to menu [PARAMETER / Configuration / Configure monitoring / Miscellaneous / General monitoring settings].
2. ▷ Open the LogicsManager "Ext. acknowledge":
3. ▷ 

Fig. 223: LogicsManager function "Ext. acknowledge"

Configure the LogicsManager function "Ext. acknowledge" as shown in (↳▷ Fig. 223).

▶ With this setting, the "Ext. acknowledge" LogicsManager output becomes TRUE as soon as the remote acknowledge signal is enabled.

The LogicsManager commands 2 and 3 may be used to configure additional conditions like discrete inputs, which must be energized to be able to issue the remote acknowledge command.

Please refer to ↳▷ "6.5 Modbus Applications" for a description of how to configure the LogicsManager functions via Modbus.

All interfaces access the same bits. The command variable "04.13 Remote request" remains enabled in the easY-I until a new command is sent or the power supply failed or is removed.

Remote start:

- The command variable "04.13 Remote request" changes to "1" (high) if the start bit (ID 503, bit 0) changes from "0" to "1".
- The command variable "04.13 Remote request" changes to "0" (low) if the stop bit (ID 503, bit 1) changes from "0" to "1" (↳▷ Fig. 224).

Acknowledgment:

- The command variable "04.14 Remote acknowledge" reflects the Acknowledgment bit (ID 503, bit 4).
- An Acknowledgment is generally performed twice:
  - 1st change of the logical output "86.15 LM: Ext. acknowledge" from "0" to "1":

    Silence horn
  - 2nd change of the logical output "86.15 LM: Ext. acknowledge" from "0" to "1":

    Acknowledges all inactive alarms

System reaction

The easY-I does NOT react on the disabling of the start bit, but only on the enabling of the stop bit.

This has the advantage that it is not required to maintain the connection established for the whole time in case of a remote start.

The following figure shows the reaction of the command variable on the various changes of the bits:

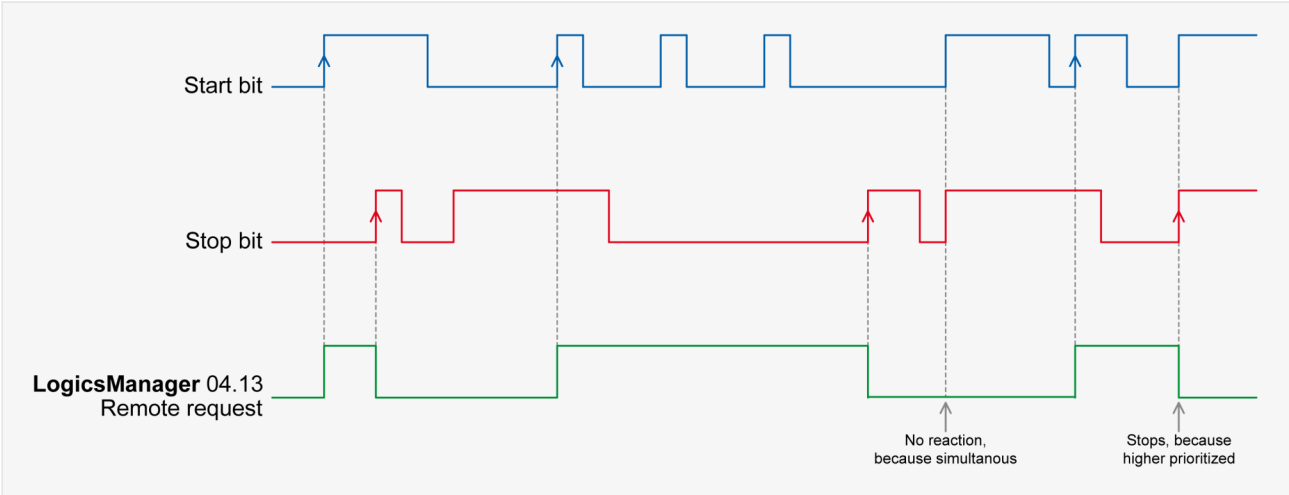


Fig. 224: Command variable

Enabling the bits may be performed with the following methods:

- Bit Enabling via Modbus Protocol and RS-485 Interface
- Bit Enabling via CANopen Protocol and CAN Interface 1

Bit enabling via Modbus protocol and RS-485 interface

The parameter Modbus Slave ID must be configured.

The control bits are sent on address 503 for a start via Modbus:

- Bit 0: Start
- Bit 1: Stop
- Bits 2 and 3: must be "0" (for the watchdog).
- Bit 4: Acknowledgment
- Bit 9: Shutdown command

Please refer to “6.5 Modbus Applications” for a description of how to enable control bits via Modbus.

Bit enabling via CANopen protocol and CAN interface 1

For further information on the CANopen protocol refer to “7.4 CANopen Protocol” and the CANopen file *.eds, which is delivered with the unit.

Please refer to “6.5 Modbus Applications” for a description of how to enable control bits via Modbus.

Remote Shutdown

For controlling the device with 03.40 Remote Shutdown please run setup as described above but with 03.40 instead of 04.14 and using Bit 9 instead of Bit 0, 1, and 4.

Additionally

- define a free LM flag for "03.40 Remote Shutdown" and
- take it as input for a Free alarm
- with a shutdown alarm class.

6.3.4 Connecting IKD 1 on CAN Bus

We recommend to connect external expansion boards, like the Woodward IKD 1 to CAN bus 2. This CAN bus offers preconfigured settings for operating several expansion boards including the IKD 1.

However, it is also possible to connect an IKD 1 to CAN bus 1.

Refer to the “4.7.4.1.3 Transmit PDO {x} (Process Data Object)” and “4.7.4.1.2 Receive PDO {x} (Process Data Object)” for the configuration of the parameters concerned.

Refer also to “7.4 CANopen Protocol” for a description of the data objects.

The easY-I may either be configured directly using the front panel or externally using the ToolKit software.

Transmit PDO

The easY-I must be configured for sending to data protocol 65000 (external DOs 1 to 8) and CAN ID 181 (hex) every 20 ms on TPDO1.

TPDO is used to send messages to an external device.

⚙

1. ▷ Configure TPDO1 as shown below.

ID	Parameter	Value	Comment
9600	COB-ID	181 (hex) / 385 (dec)	The COB-ID is configured to 181 (hex) or 385 (dec)

Released

ID	Parameter	Value	Comment
9602	Transmission type	255	Data is automatically broadcasted (transmission type 255)
9604	Event timer	20 ms	The event timer is configured to 20 ms
8962	Selected Data Protocol	65000	Data protocol 65000 is selected

Table 124: TPDO1 configuration

▶

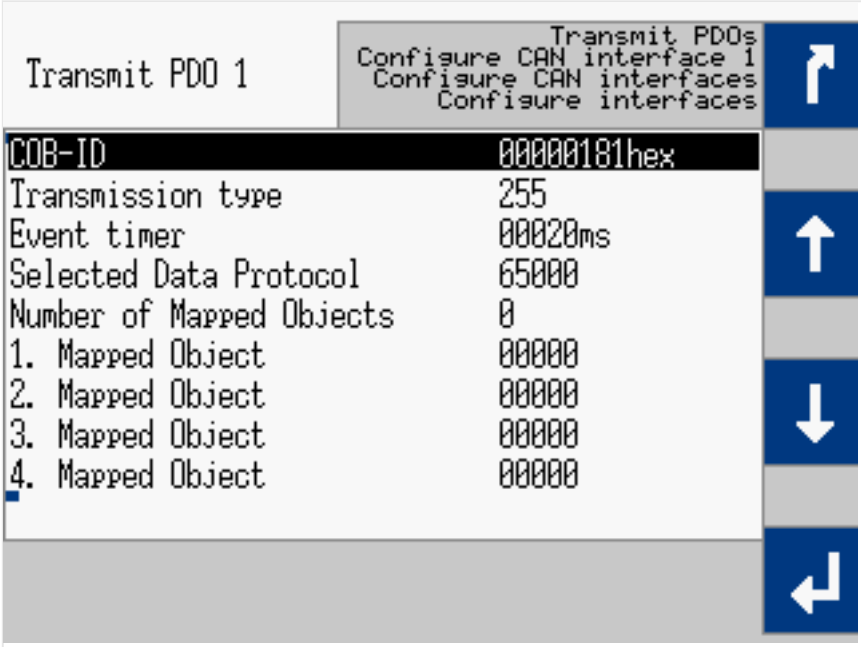


Fig. 225: TPDO configuration for IKD 1 (example HMI)

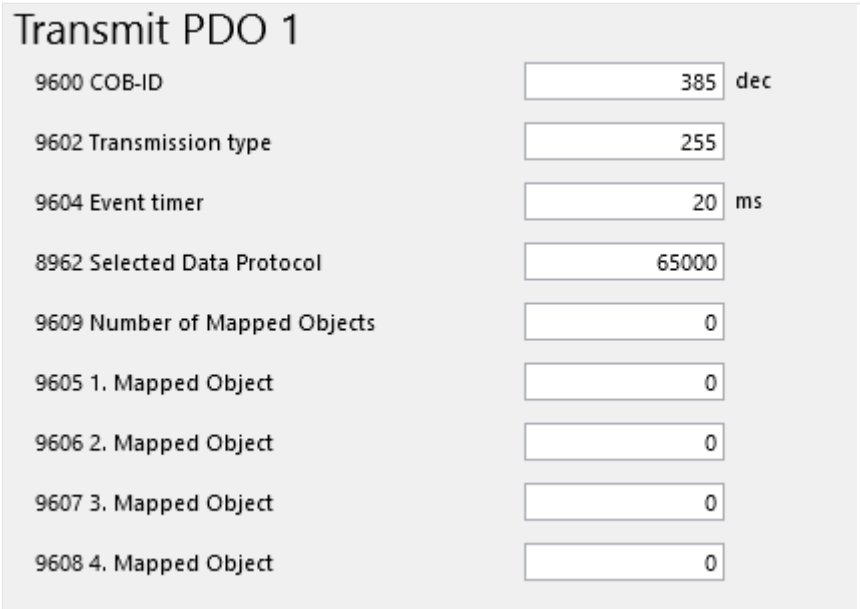


Fig. 226: TPDO configuration for IKD 1 (example ToolKit)

↳▷ Fig. 225 and ↳▷ Table 124 display the example TPDO configuration for IKD 1.

Receive PDO

The easY-I must be configured for receiving data on an RPDO. The data received on CAN ID 201h is interpreted as data protocol 65000 (external DIs 1 to 8).

⚙

1. ▷ Configure RPDO1 as shown below.

ID	Parameter	Value	Comment
9300	COB-ID	201 (hex) / 513 (dec)	The COB-ID is configured to 201 (hex) or 513 (dec)
9121	Event timer	2000 ms	The event timer is configured to 2000 ms
8970	Selected Data Protocol	65000	Data protocol 65000 is selected

Table 125: RPDO1 configuration

▶

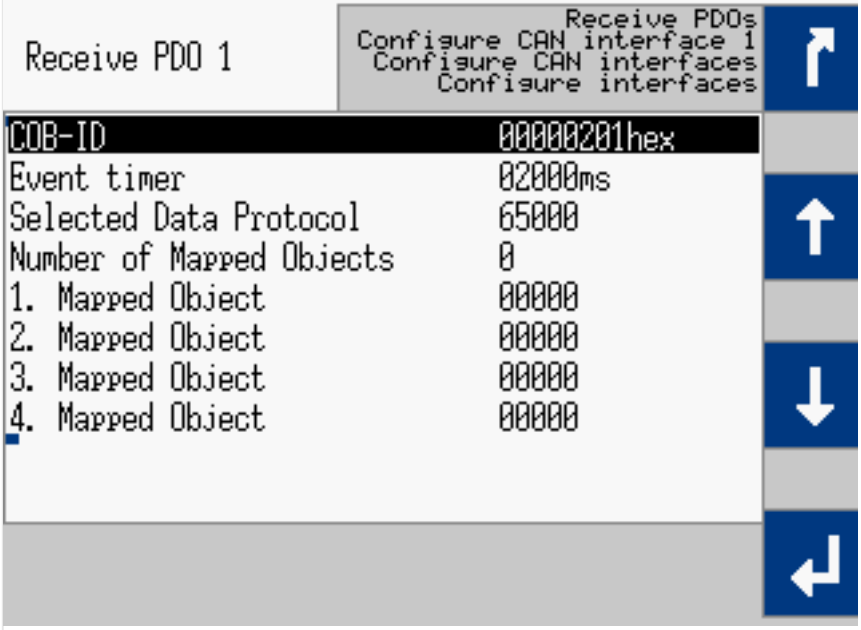


Fig. 227: RPDO configuration for IKD 1 (example HMI)

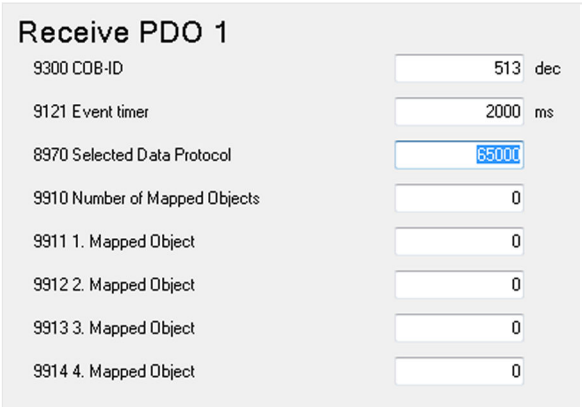


Fig. 228: RPDO configuration for IKD 1 (example ToolKit)

↳▷ Fig. 227 and ↳▷ Table 125 display the example RPDO configuration for IKD 1.

Released

6.3.4.1 IKD Configuration Tool

General notes

The IKD 1 is a Woodward I/O expansion board with 8 digital inputs and 8 digital outputs. It can be connected via CAN bus to Woodward easYgen generator controllers or DTSC 200 Automatic Transfer Switch Controllers. The configuration of the IKD 1 can be done with the IKD Configuration Tool running on a PC/laptop, connected via serial interface to the IKD 1.

IKD Configuration Tool (P/N: 9927-2094) is a tool to quickly configure an IKD for connection with the easYgen series or DTSC 200. It will check the parametrization of the IKD 1 and allows to set it to one of the four different connection modes. The IKD Configuration Tool replaces the LeoPC configuration tool.

Note: This tool cannot be used for **IKD-IN-16** and **IKD-OUT-16**. (These devices have Dip switches for configuration.)

Installation prerequisites

The following items are necessary before installing the software:

- PC with Windows operating system
- To connect the IKD to a serial port (RS232) on the PC
  - Woodward DPC cable RS-232 (P/N: 5417-557)
- To connect the IKD to a USB port on the PC
  - USB/RS-232 adaptor and a Woodward DPC cable RS-232 (P/N: 5417-557)
  - Woodward DPC cable USB/RS-232 (P/N: 5417-1251)

⚙ **Installation**

> The following steps needs to be performed for installing the IKD Configuration Tool

1. ▷ Uninstall any previous installation of IKD Configuration Tool

2. ▷ Download IKD Configuration Tool from Woodward web site

3. ▷ Unzip the *.zip file on your PC

▶ You should get a directory named “publish”

4. ▷ Run the “setup.exe” from this directory

5. ▷ Follow the instructions given during installation

6. ▷ After installation the directory “publish” can be deleted

⚙ **How to use the Configuration Tool**

> The following steps allow push-button configuration of IKD 1


1. ▷ Connect the IKD 1 to the PC/laptop as described above and power it

2. ▷ Start the already installed IKD Configuration Tool ”ConfigIKD“

3. ▷	Select the COM port IKD 1 is connected to the PC/laptop
4. ▷	Press button “Connect” to connect to the IKD 1
5. ▷	Select CAN baud rate
6. ▷	Press one of the four preconfigured mode buttons (“IKD 1 on Node-ID x”)
▶	Settings will be transferred to the IKD 1

The Program Dialog Box

On start of the configuration software, you should get the following screen with fields, buttons and selectors available:

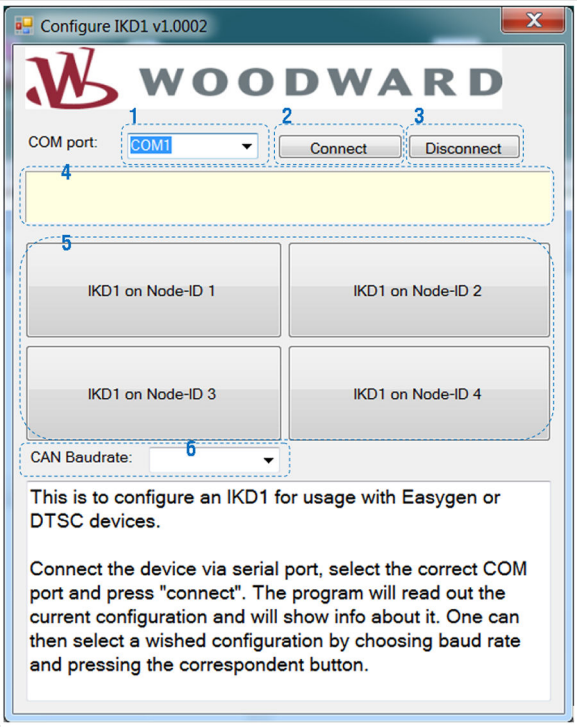⚙	**Configuring an IKD**
1. ▷	 *Fig. 229: IKD Configuration Tool*
	»COM port«
▶	Select between all serial ports your PC is providing. If there is no serial port available, then this field is empty. Select the COM port to which the IKD is connected. (“COM1” for example)
2. ▷	»Connect«
▶	Opens the selected serial port and tries to connect to the IKD. If successful, it will read out the data from the IKD but it won’t change any data on the IKD. It will populate the “CAN Baud rate” field with the CAN baud rate the IKD is currently configured. If the IKD is already configured to one of the four different CAN node-IDs usable for an easYgen, the corresponding button “IKD 1 on Node-ID x” will be colored green.
3. ▷	»Disconnect«
▶	Closes the serial port if it was opened. Must be used, if accidentally the wrong COM port was selected and connected
4. ▷	»Status field« (yellow background)

Released

▶	Shows messages about the status of the connection
5. ▷	»IKD on Node-ID X«
▶	Each of these four buttons has two functionalities: 1) After connecting, if the IKD 1 is already configured to one of the four different CAN node-IDs usable for an easYgen, the corresponding button will be colored green. 2) By pressing the button the program will configure the IKD 1 to the selected node-ID and CAN baud rate. After that it will read it out for check.
6. ▷	»CAN Baud rate«
▶	This button has two functionalities: 1) After connecting it shows the currently configured CAN baud rate of the IKD. 2) It can also be used to select the CAN baud rate. For the easYgen configuration only 125 kBaud, 250 kBaud and 500 kBaud is permissible.

6.3.4.2 Configuration for a second IKD 1

⚙

> To connect a second IKD 1 to the easY-I:

1. ▷

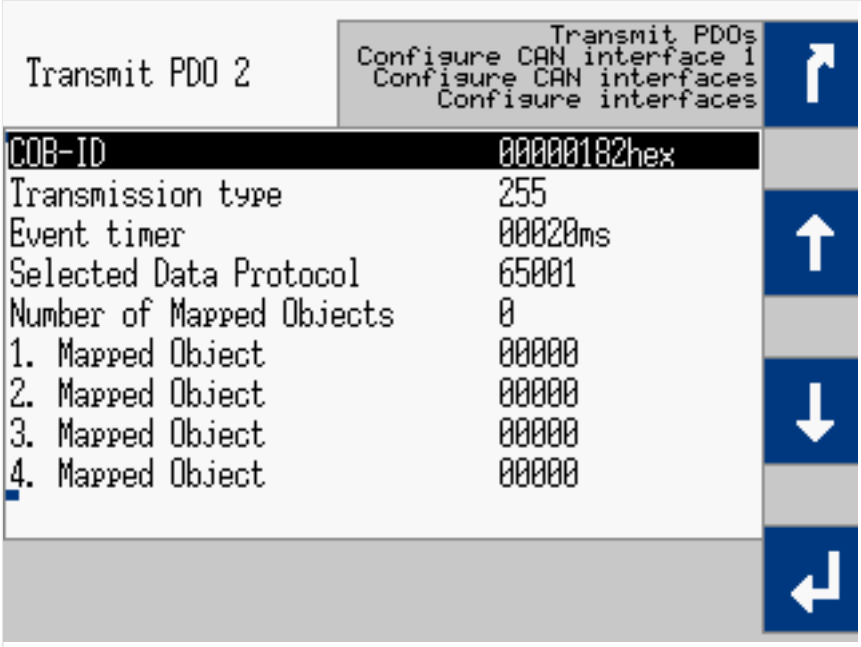


Fig. 230: TPDO configuration for 2nd IKD 1 (example HMI)

Set up TPDO2 for the easY-I on the front panel as shown in (↳▷ “ Transmit PDO”).

▶

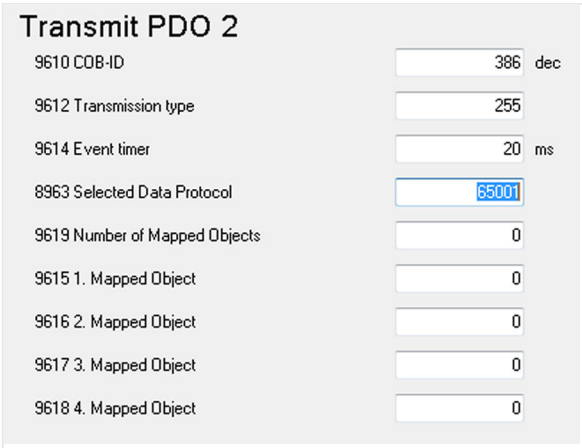


Fig. 231: TPDO configuration for 2nd IKD 1 (example ToolKit)

Set up TPDO2 for the easY-I in ToolKit as shown in (↳ “ Transmit PDO”).

2. ▷

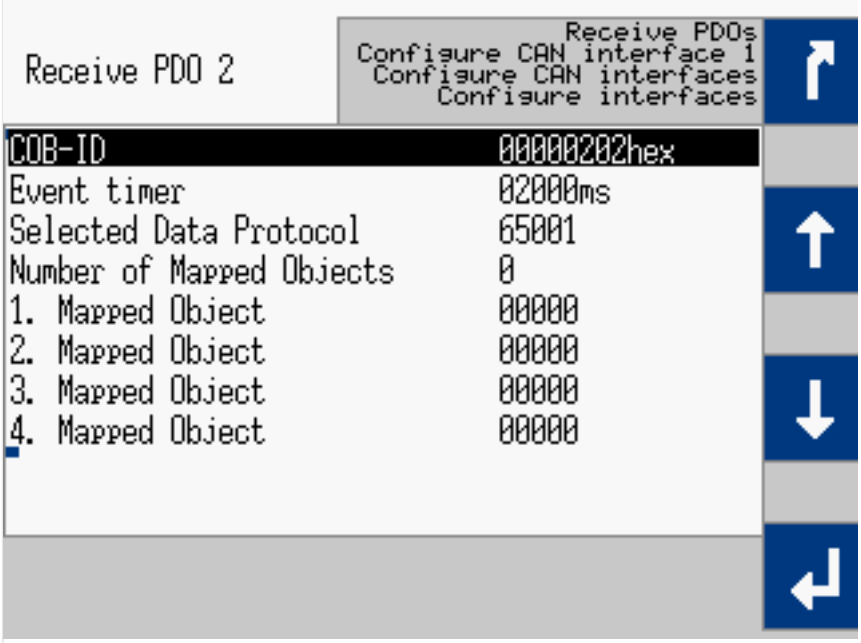


Fig. 232: RPDO configuration for 2nd IKD 1 (example HMI)

Set up RPDO2 for the easY-I on the front panel as shown in (↳ “Receive PDO”).

▶

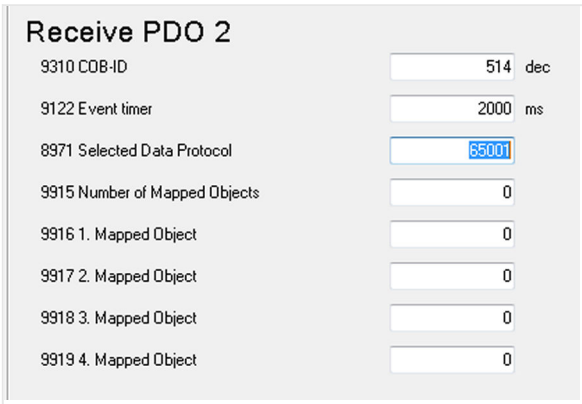


Fig. 233: RPDO configuration for 2nd IKD 1 (example ToolKit)

Released

Set up RPDO2 for the easY-I in ToolKit as shown in (“Receive PDO”).

6.3.5 Wiring Self Powered Discrete Inputs

⚙

> In order to create self-powered discrete inputs with plastic housing variant:

1. ▷ Connect battery negative (B-) to ground and PE (terminal 61).

2. ▷

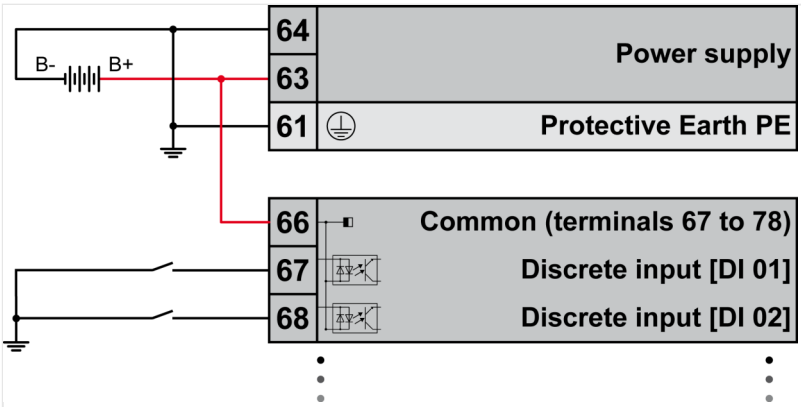


Fig. 234: Wiring self-powered discrete inputs

Connect DI common (terminal 66) to power supply 12/24 V (terminal 63, minimum wire size 0.5 mm² (20 AWG)).

▶ This enables to energize the discrete inputs against ground.

The Protective Earth terminal 61 is not connected on the sheet metal housing.

- Use the protective earth (PE) connector located at the bottom center of the sheet metal housing instead.

6.3.6 Connecting Analog Inputs In Series

The analog inputs of the easY-I-3000XT series are galvanically isolated to the power supply. This allows for example to share a power setpoint 0/4 to 20 mA with three devices.

Make sure that the source can drive the resulting burden.

Internal load:

- AI 1-3 approx. 50 Ω
- AI 4-6 approx. 249 Ω

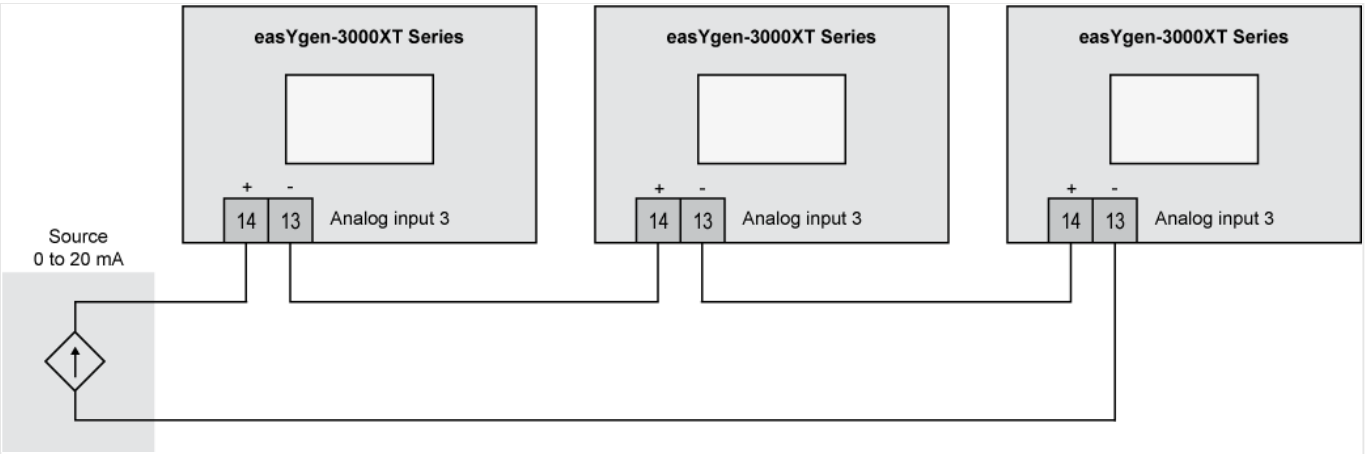


Fig. 235: Connecting analog inputs in series

The graphic above shows the terminal numbers for the analog input 3, but in principle it works for all analog inputs which support a 0/4 to 20 mA signal.

6.3.7 Setup Expansion Modules at CAN 2

General notes

The easY-I is supporting several expansion modules for external analog and digital terminals. It is possible to connect up to four Woodward IKDs for digital inputs and outputs and some third party devices e.g. from Phoenix or WAGO for analog and digital inputs and outputs. Also a combination of the devices listed is possible.

Configuring easY-I for expansion modules is split in two parts:

- One part is located at the external analog/digital inputs/outputs pages and defines how many inputs/outputs are used and the scaling of the analog types. Refer to chapters “4.4.2.4 Analog Inputs” for reference.
- The other part is located at the CAN2 interface pages and defines the Node IDs and the types of external devices. Refer to chapter “4.7.4.2.1 Expansion Modules at CANopen Interface” for reference.

Additionally the external device must be configured to the correct baud rate and Node ID. This could be done via DIP switches at Phoenix and WAGO, for the IKD with a Woodward IKD configuration tool.

Supported external modules

Phoenix ...				
Bus coupler	**Discrete outputs**	**Discrete inputs**	**Analog outputs**	**Analog inputs**
IL CAN BK	IB IL 24 DO 2	IB IL 24 DI 2	IB IL AO 2/SF	IB IL AI 2/SF
	IB IL 24 DO 8	IB IL 24 DI 4		IB IL TEMP 2 UTH
	IB IL 24 DO 16	IB IL 24 DI 8		IB IL TEMP 2 RTD
	IB IL 24 DO 32	IB IL 24 DI 16		
	IB IL 24/230 DOR4/W	IB IL 24 DI 32		

There is a maximum of three Phoenix bus couplers on the CAN bus. There is also a maximum of 16AI 4AO 32DI and 32DO, which must not exceeded in all possible combinations.

WAGO ...	
Field bus coupler for CAN	**Interface/Connector**
750-337 (MCS)	Terminals/clamps
750-338 (SUB-D)	SUB-D

WAGO Analog Inputs (2 x AI or 4 x AI)				
Type	**P/N two channel version**	**P/N four channel version**	**"Wire break" detection**	**TYPE: Settings**
(SE = Single ended, Diff = Differential)				
Pt100	750-461	750-460/0001	T >849 °C: Overrun T < -200 °C: Underrun	Pt DIN(R0) Sender type: R0 = 100
Pt 1000	750-461/0003	750-460/0003	T >849 °C: Overrun T < -200 °C: Underrun	Pt DIN(R0) Sender type: R0 = 1000
Ni 100	750-461/0004		T >250 °C: Overrun T < -60 °C: Underrun	Ni DIN(R0) Sender type: R0 = 100
Ni 1000 TK6180	750-461/0005		T >250 °C Overrun T < -60 °C: Underrun	Ni DIN(R0) Sender type: R0 = 100
10-1200	750-461/000-002		no	Linear or table Sender type: 0-1200 Ohm
10-5000 Ohms	750-461/000-007		no	Linear or table Sender type: 0-5000 Ohms
4-20 mA (SE)	750-466	750-455	Underrun	Linear or table Sender type: 4-20 mA
0-20 mA (SE)	750-465	750-453	no	Linear or table Sender type: 0-20 mA
0-20 mA (Diff)	750-452		no	Linear or table Sender type: 0-20 mA
4-20 mA (Diff)	750-454		Underrun	Linear or table Sender type: 4-20 mA
+/-10 V (Diff)	750-456		no	Linear or table Sender type: +/-10 V
0-10 V (SE)	750-467	750-468	no	Linear or table Sender type: 0..10 V
Thermocouple (K, T, J, E, S, L)	750-469xxx (standard format)		Overrun Underrun: (approx. -49.8 °C)	TC Type x Sender type: Thermocouple **Notes** If adjustable variant (750-469/003-000) is used: use “Wago-I/O-CHECK” to adjust (default Type is "K"). For details refer to

WAGO Analog Inputs (2 x AI or 4 x AI)				
Type	**P/N two channel version**	**P/N four channel version**	**"Wire break" detection**	**TYPE: Settings**
				“Configurable WAGO devices”
+/- 120 mV	750-469/000-003		no	Linear or table Sender type: Thermocouple

WAGO Analog Inputs (8 x AI)			
Type	**P/N eight channel version**	**"Wire break" detection**	**TYPE: Settings**
RTD	750-451	depends on the configured type	TYPE and Sender type: according to the type configured by “Wago-I/O-CHECK” Use “Wago-I/O-CHECK ” to configure the different channels (Default type is PT100). For details refer to “Configurable WAGO devices”.
0/4 – 20 mA	750-496	4-20 mA: Underrun 0-20 mA: no detection	TYPE: Linear or table Sender type: 4-20 mA or 0-20 mA Use “Wago-I/O-CHECK ” to configure the different channels (Default type is 4-20 mA). For details refer to “Configurable WAGO devices”.
Thermocouple	750-458	Overrun Underrun (approx. -49.8 °C)	TYPE: depends on the configured type Sender type: depends on the configured type Note: if adjustable variant (750-469/003-000) is used use “Wago-I/O-CHECK ” to adjust (Default type is K). For details refer to “Configurable WAGO devices”.

WAGO Analog Outputs (2 x AO or 4 x AO)				
Type	**P/N two channel version**	**P/N four channel version**	**Comments**	**Settings**
0-20 mA	750-552	750-553		Selected hardware type = mA
0-10 V	750-560, [10 bit (100 mW)] 750-550	750-559		Selected hardware type = "V"

WAGO Digital Inputs/Outputs (2 ... 16 x DI/DO)				
# of DIs	2 x DI	4 x DI	8 X DI	16 X DI
P/N	750-400	750-402	750-430	750-1405
# of DOs	2 x DO	4 x DO	8 X DO	16 X DO
P/N	750-501	750-504	750-530	750-1504

There is a maximum of 16 WAGO analog inputs and up to 4 WAGO analog outputs with up to 32 WAGO digital inputs and 32 WAGO digital outputs or up to 4 IKDs.

For all configurations with WAGO devices at least one WAGO CANopen fieldbus coupler 750-337 is required!

Configurable WAGO devices

If configurable WAGO devices are used, the mode of the terminal must be configured via the PC software »Wago I/O Check«. This configuration cannot be done via easY-I parameters. The easY-I parameters for the corresponding channels must be consistent with the Wago configuration!

RTD device (750-451)

Configure this 8 channel device RTD (750-451) via the »Wago I/O-Check« with the following process image:

The following types are not supported: Ni1000 (high resolution), Ni1000 (TK5000), Pt1000 (EN 60751 high resolution), and 1200 Ohms.

Typ	Expected format
Pt100 (EN 60751)	default
Ni100 (EN 60751)	default
Pt500 (EN 60751)	default
Pt200 (EN 60751)	default
Ni1000 (TK6180, DN 43760)	default
Ni120 (Minco)	default
5000 Ohms	S5-FB250

Thermocouple device (750-458) for voltage measurement

There is no intuitive setting in the easY-I if a channel of the TC device (750-458) is configured for voltage measurement. A special scaling of the easY-I parameters “Sender value at display min..” and “Sender value at display max.” like in the table below is required.

WAGO device	Configure the according easY-I parameter	
Voltage range	“Sender value at display min.”	“Sender value at display max.”
+/- 30 mV	-614.4	614.4
+/- 60 mV	-307.2	307.2
+/- 120 mV	-153.6	153.6

Combinations of modules

All combinations of external terminals up to the maximum of 16AI, 4AO, 32DI, and 32DO are possible.

Selection is done by parameter »Select external terminals « 15320.

There is a maximum of three bus couplers on the CAN bus for PHOENIX modules but (for the moment) only one bus coupler on the CAN bus for WAGO modules.

So WAGO devices must use one and the same CAN address only.

The following table shows the possible configuration combination of the "Type" settings (parameter 5851) and the "Sender type" setting (parameter 5856) for Phoenix devices.

Parameter Type	Sender Type	0 - 10V	±10V	0 - 20mA	±20mA	4 - 20mA	0 - 400 Ohm	0 - 4000 Ohm	Thermocouple	R0=100	R0=10	R0=20	R0=30	R0=50	R0=120	R0=150	R0=200	R0=240	R0=300	R0=400	R0=500	R0=1000	R0=1500	R0=2000	R0=3000
OFF																									
Linear		X	X	X	X	X	X	X	X																
Table A		X	X	X	X	X	X	X	X																
Table B		X	X	X	X	X	X	X	X																
Thermo couple type K									X																
Thermo couple type J									X																
Thermo couple type E									X																
Thermo couple type R									X																
Thermo couple type S									X																
Thermo couple type T									X																
Thermo couple type B									X																
Thermo couple type N									X																
Thermo couple type U									X																
Thermo couple type L									X																
Thermo couple type C									X																
Thermo couple type W									X																
Thermo couple type HK									X																
Pt DIN(R0)										X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Pt SAMA(R0)										X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Ni DIN(R0)										X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Ni SAMA(R0)										X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Cu10																									
Cu50																									
Cu53																									
Ni 1000(Landis)																									
Ni 500(Viessm.)																									
KTY 81-110																									
KTY 84																									

Don't care
NOT ALLOWED
RIGHT CONFIGURATION

Fig. 236: Supported Phoenix sender types

If *Thermocouple* is configured together with "Table A", "Table B", or "Linear" the input works with a range from -15 mV to 85mV. In this case the values for parameters 2Sender value at display min."/"Sender value at display max." must be entered in [mV] (e.g.: min: 0.00, max: 85.00).

Configuration process help

The following flow charts step-by-step guide you through the configuration of external CANopen devices.

Configuration is the same for Phoenix/WAGO

The flow charts below use "P..." for Phoenix external interfaces but it works similar with "W..." for WAGO devices.

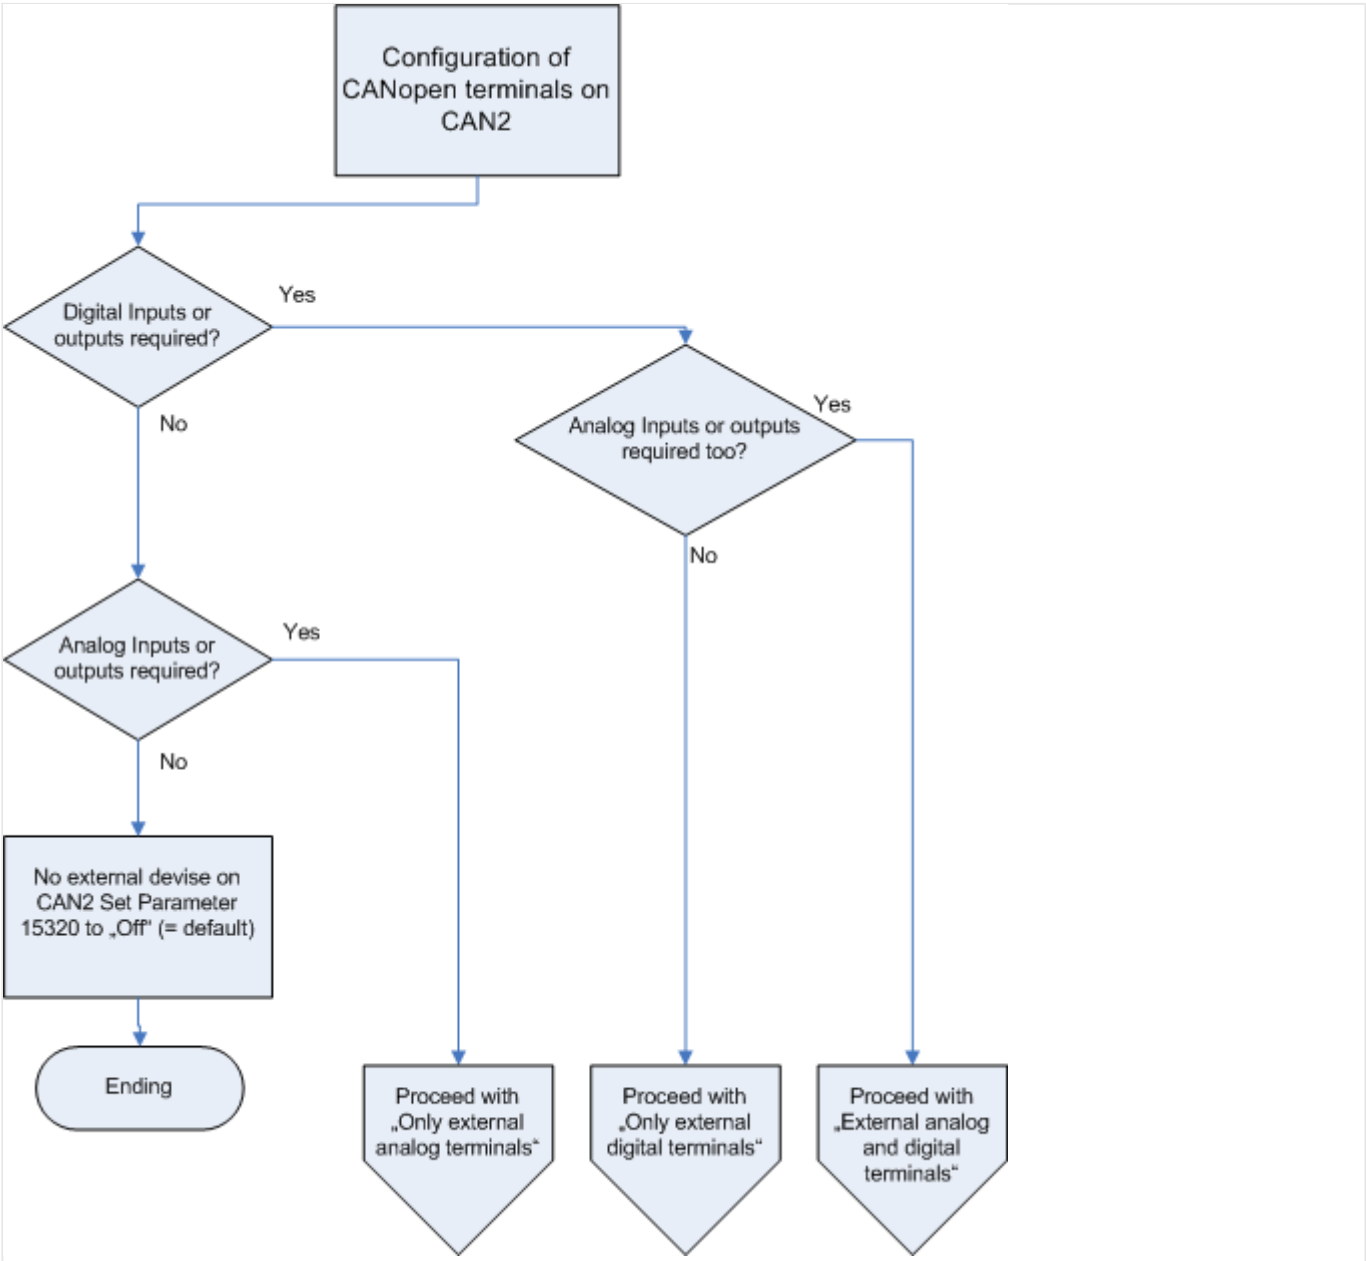


Fig. 237: Configure expansion boards part 1

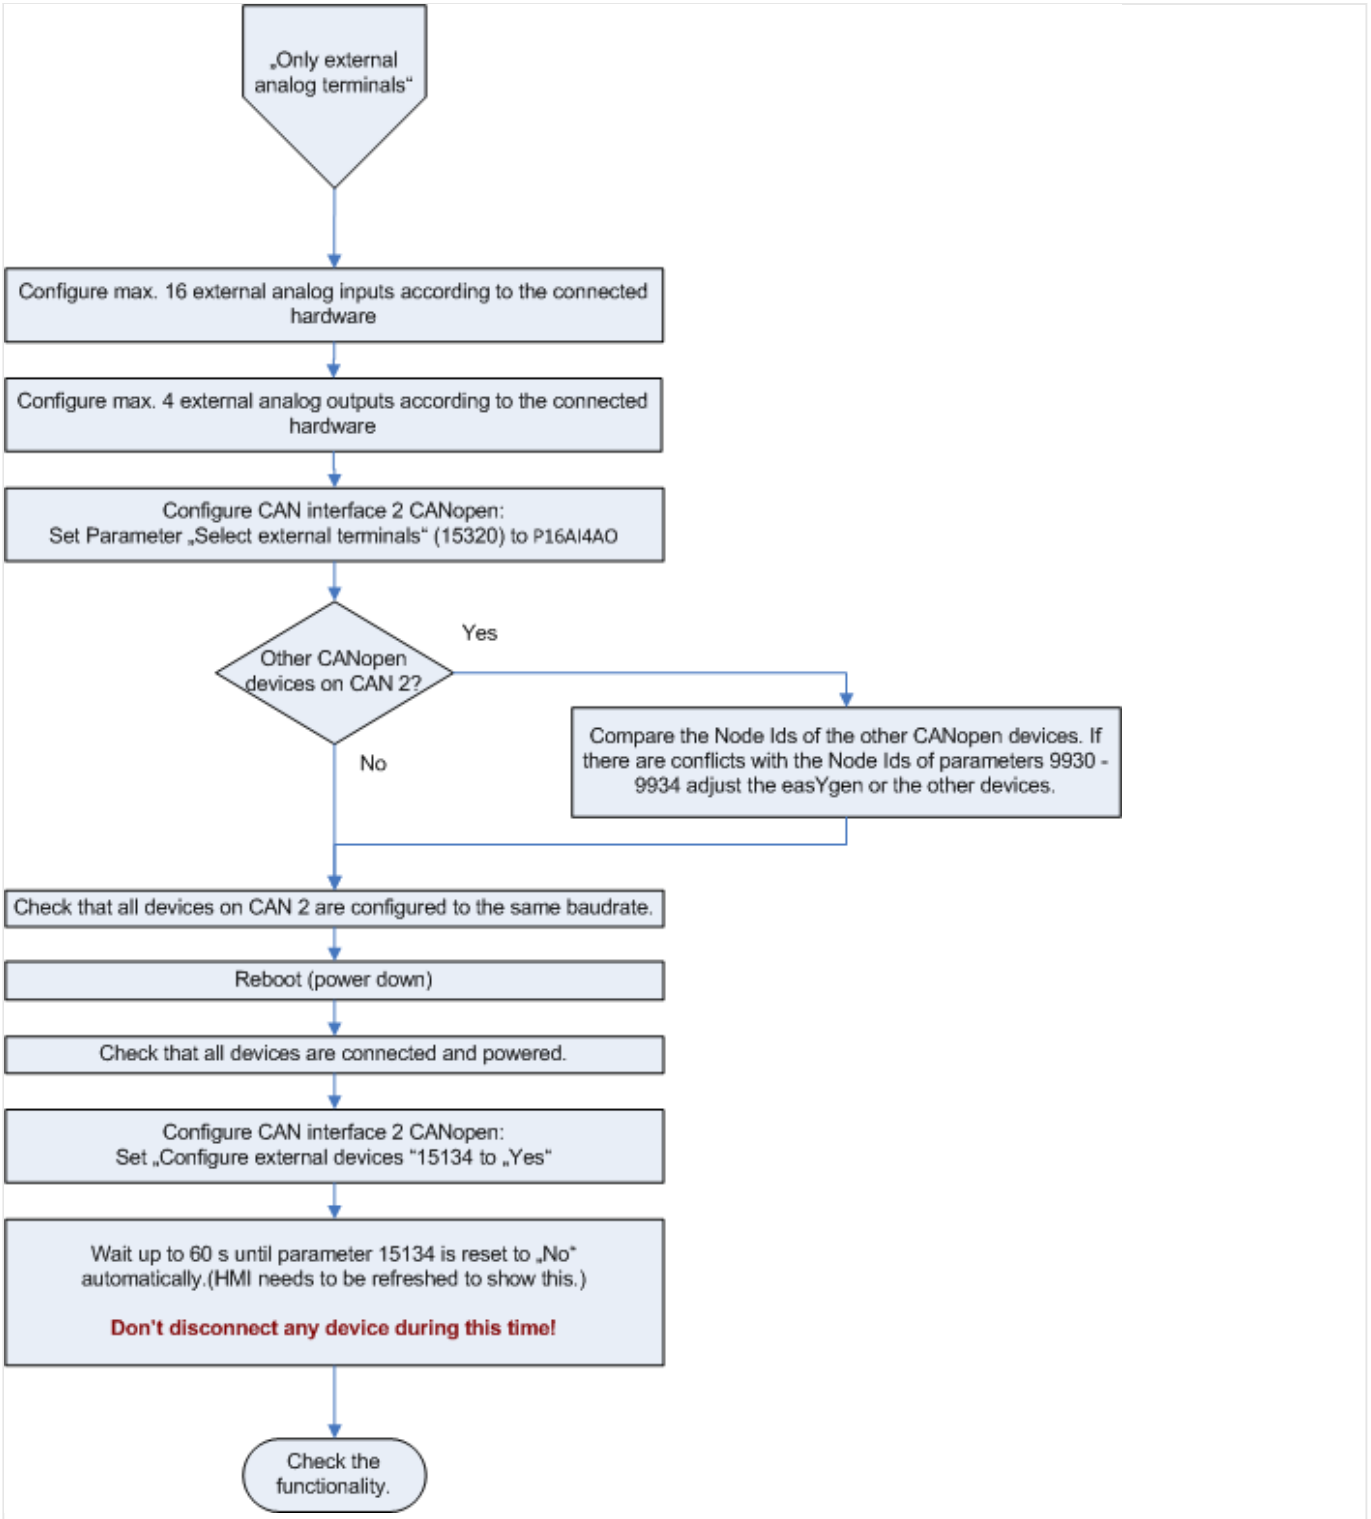


Fig. 238: Configure expansion boards part 2

Released

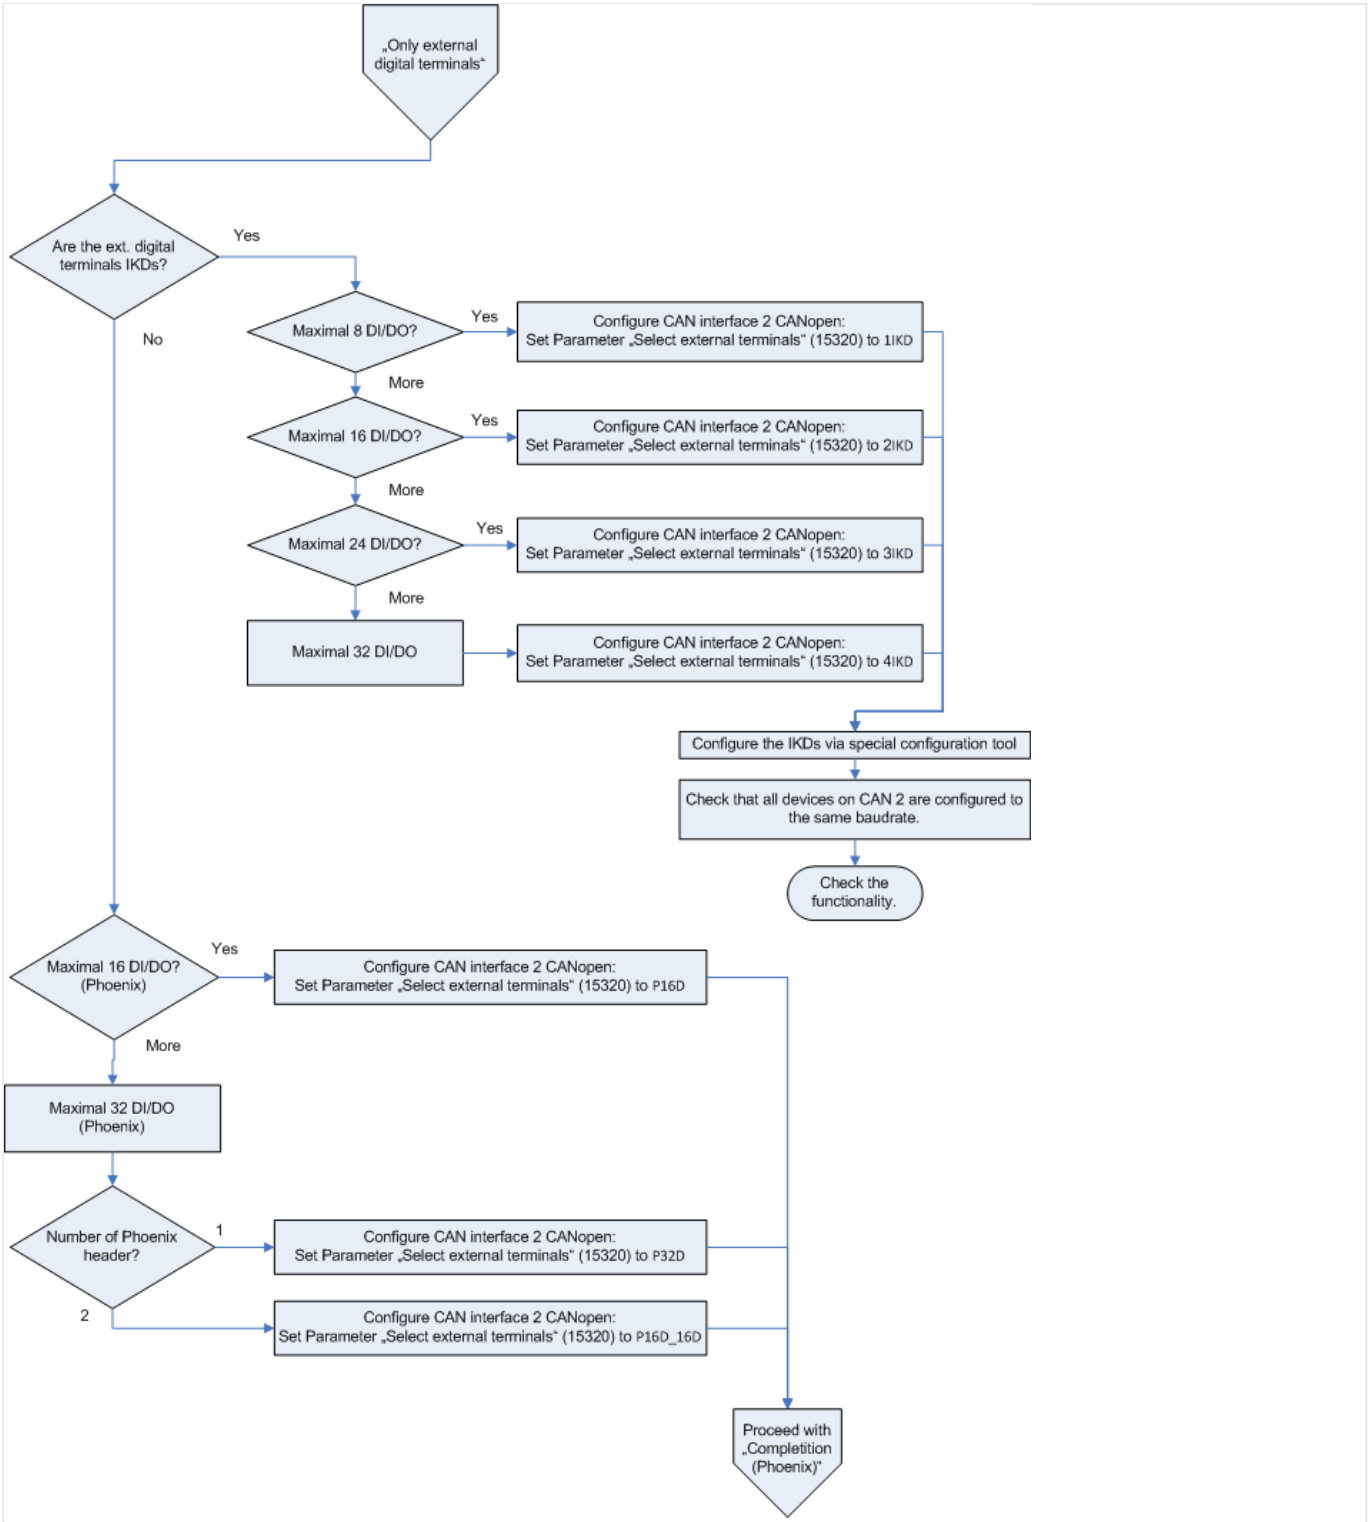


Fig. 239: Configure expansion boards part 3

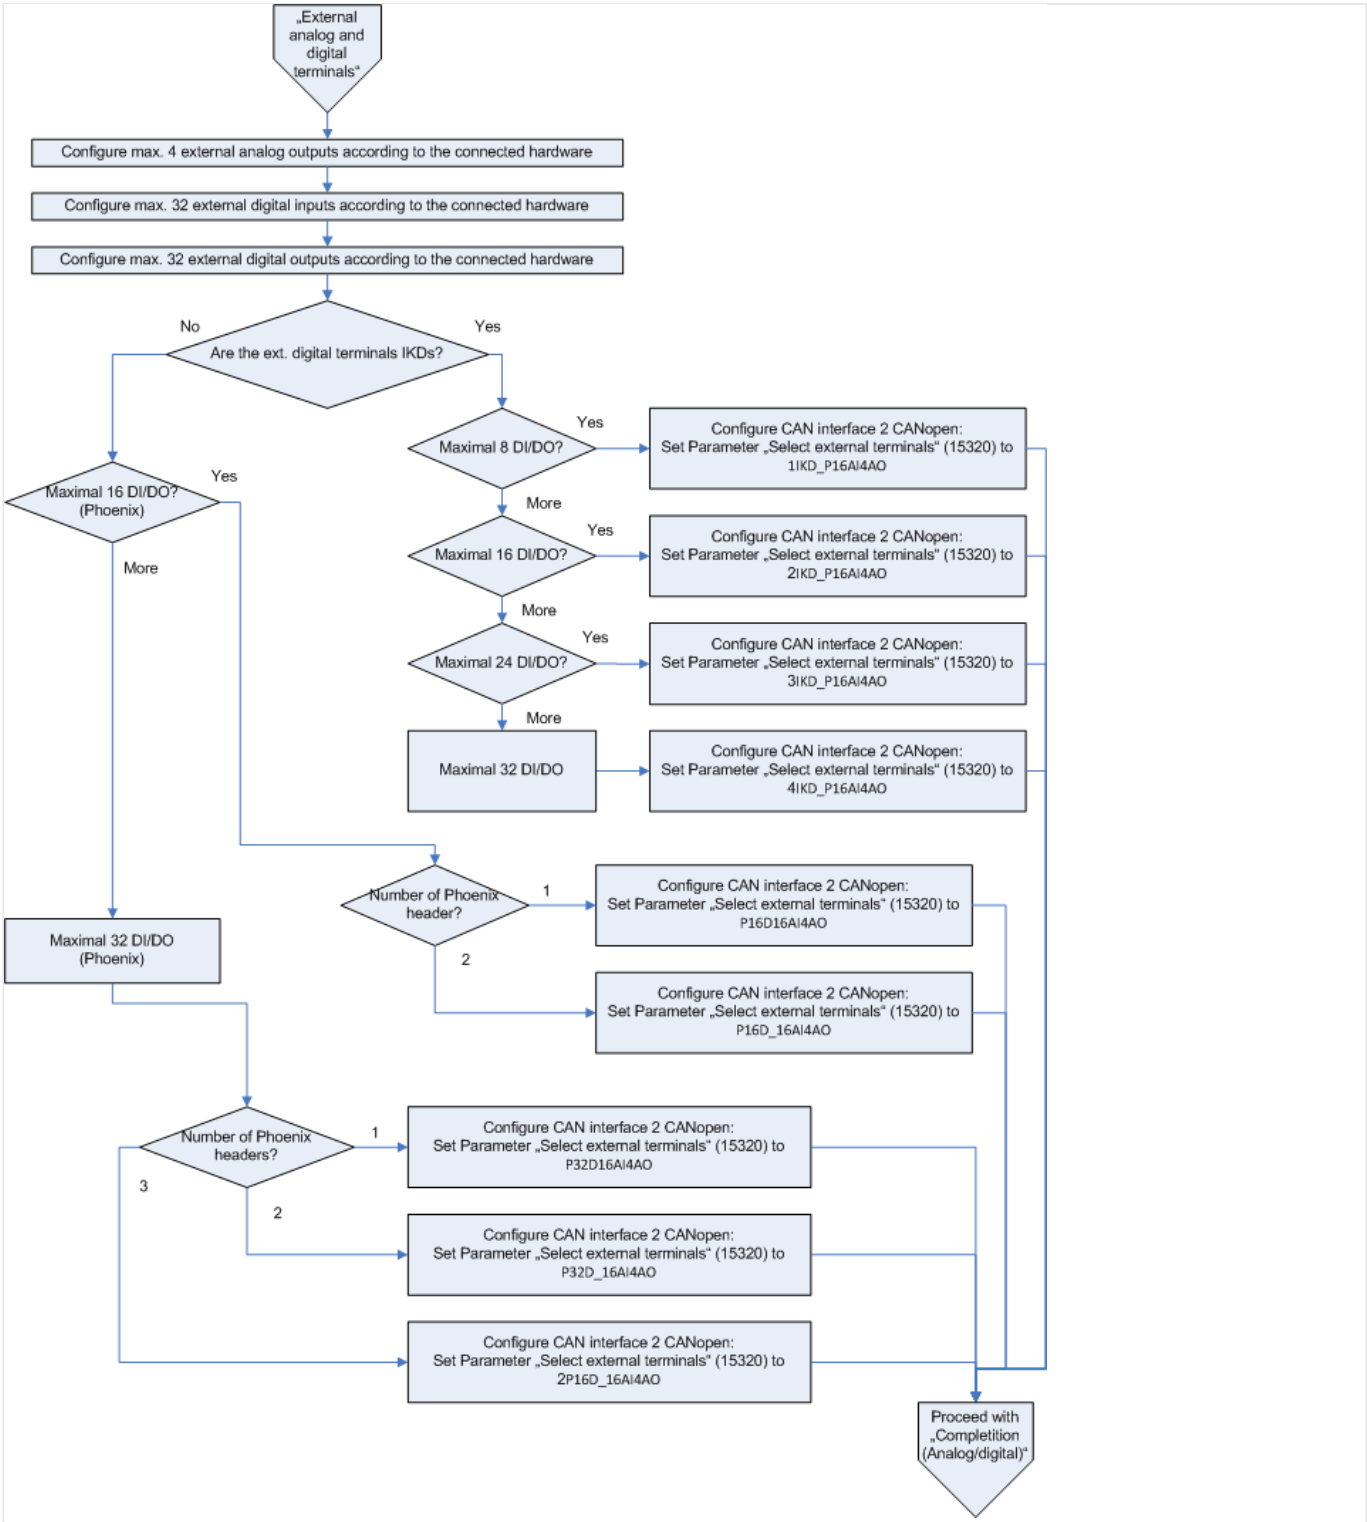


Fig. 240: Configure expansion boards part 4

Released

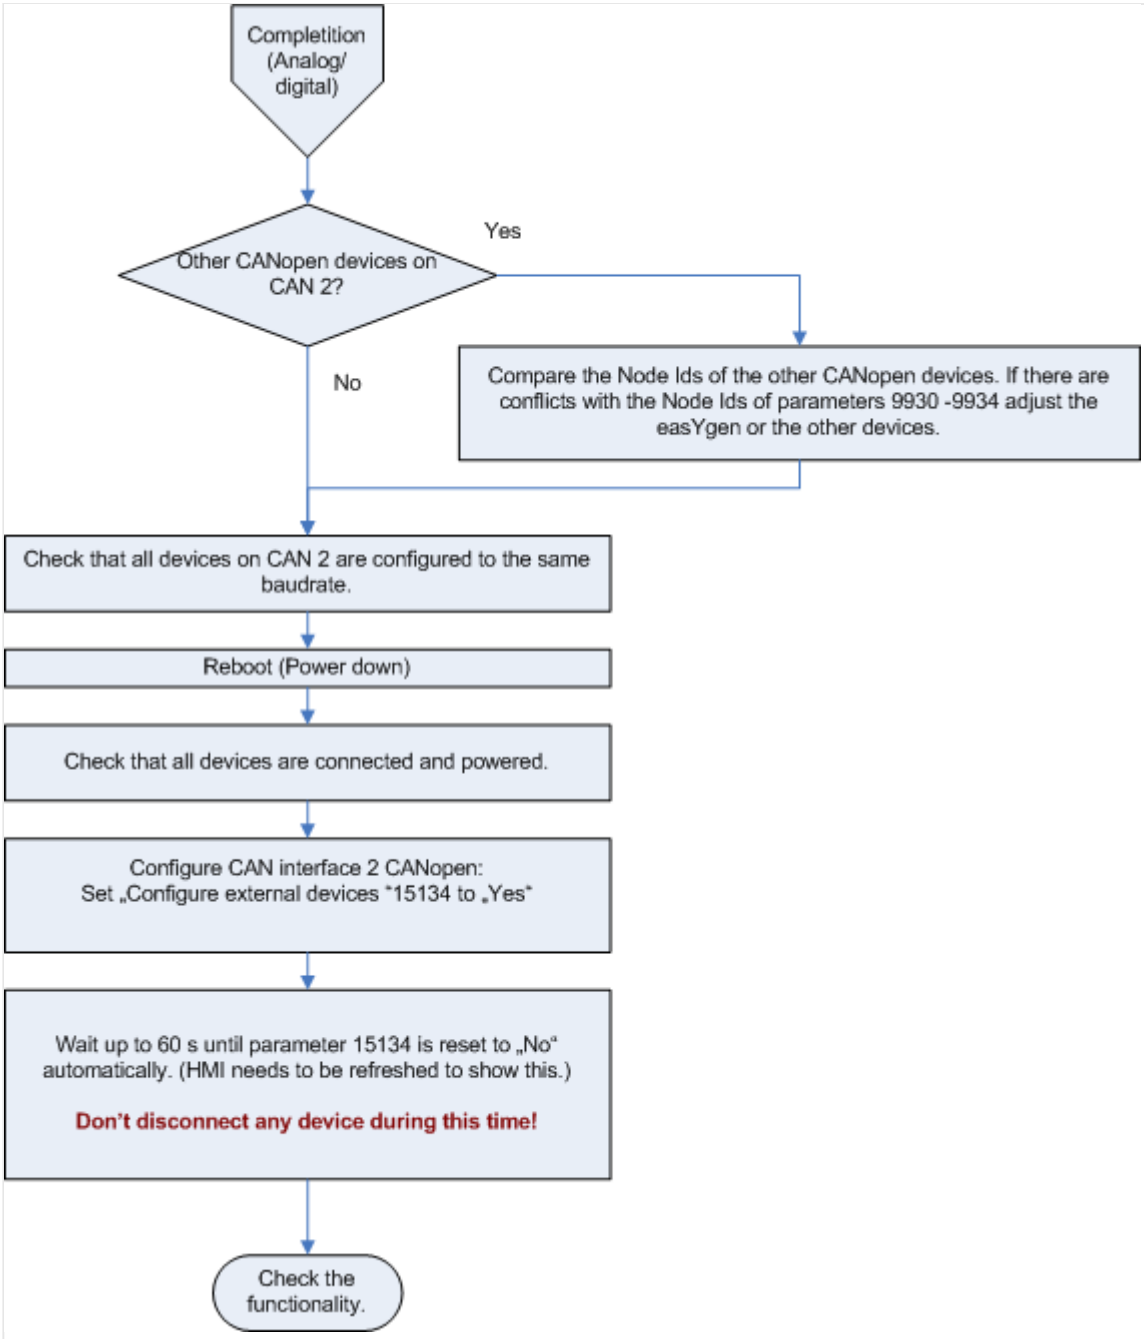


Fig. 241: Configure expansion boards part 5

6.3.8 Phase Angle Compensation

WARNING!

Check parameters!

Erroneous synchronization settings can destroy the inverter with destructive power!

Ensure the parameters are configured correctly! Incorrect wiring of the system cannot be compensated for with this parameter.

General notes

This feature allows the easY-I to adapt the phase angle measurement system according to the transformer type. The phase angle of the "busbar to mains" measurement can be compensated . The phase angle compensation is activated with the parameter "Phase angle compensation MCB" (parameter ⮡ 8841) .

The controller provides an adjustment for a phase angle deviation in a range of +/-180.0°. The range can be configured with the parameter "Phase angle MCB" (parameter ⮡ 8842). This parameter compensate the phase angle deviation, which can be caused by transformers (i.e. a delta to wye transformer) located within the electrical system.

Example – phase angle compensation MCB

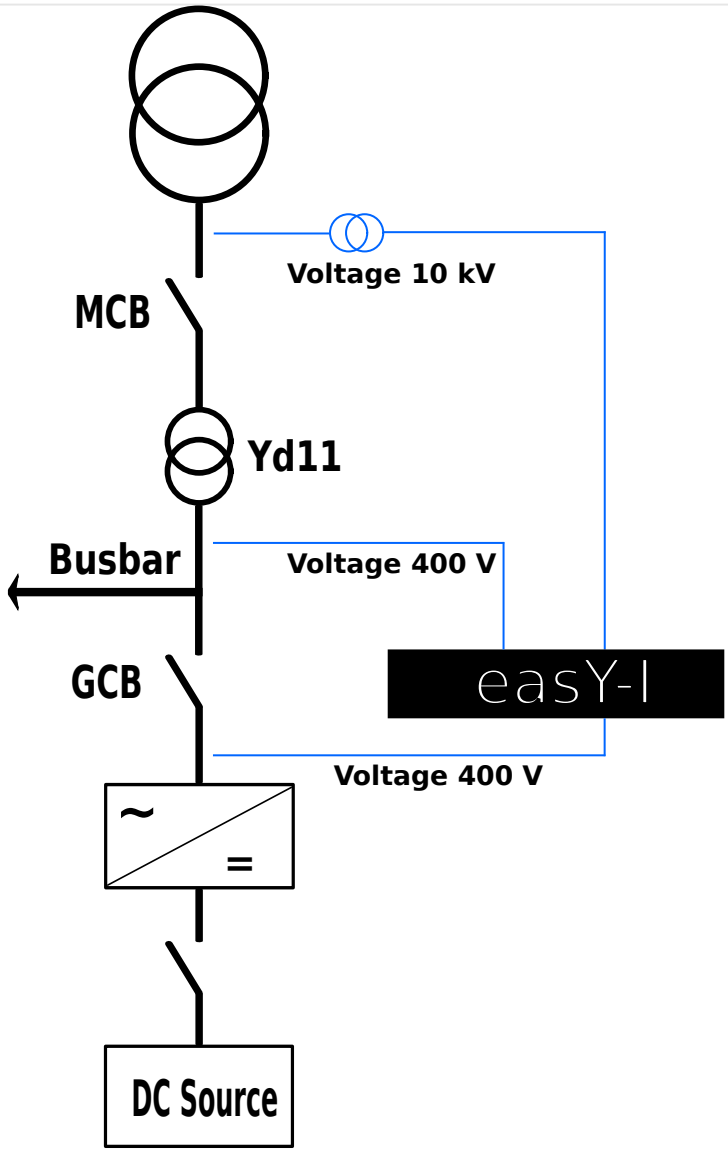


Fig. 242: Phase angle compensation MCB

The easY-I mains voltage is connected to the high voltage side of a transformer with the vector group **Yd11**. The easY-I busbar voltage is connected to the low voltage side. Because of the transformer, the phase angles between mains and busbar differs due the closed MCB. The synchronization function of the easY-I can be compensated by a configurable phase angle deviation.

Released

Using vector group 11 (Yd11) implies: α = 11 x 30° = 330°. Since 330° > 180° and the easY-I mains measurement is connected to the high voltage side, this results into "-360° - α" to be used as phase difference. Configure parameter "Phase angle MCB" (parameter 8842) to "-30°" to compensate the phase difference between mains/busbar.

6.3.9 Ripple Control Receiver

General notes

Decentralized energy producers can be obliged by power supply companies to equip plants with a technical and operational provision for remote-controlled reduction of the feed-in power to stabilize mains. Ripple control is one form of power limitation and is used in many countries around the world.

Functionality

The energy supply company provides a signal to the ripple control receiver to reduce the feed-in power of the generating plant. The ripple control receiver switches four relay contacts according to the required energy power level. This relay contacts correspond for example to the following energy power levels:

- 100% (full feed-in) - Step 1
- 60% - Step 2
- 30% - Step 3
- 0% (no feed-in) - Step 4

The respective contact is closed for the duration of the reduction.

The reduction of the feed-in power must be established within a certain time frame (depending on national regulations).

Note: As an alternative to the here described solution the easY-I provides as well 4 active power setpoints. These setpoints can be initiated by two or four DI if available.

Derating of power

The power reduction is realized by using the LogicsManager "Free derating" (parameter 15146). This function is using an analog signal. For this reason the relay outputs of the ripple control receiver must be converted into a corresponding analog signal. We recommend a resistor array like shown in Fig. 243 to convert the relay outputs into a analog signal (0 to 500 Ohms).

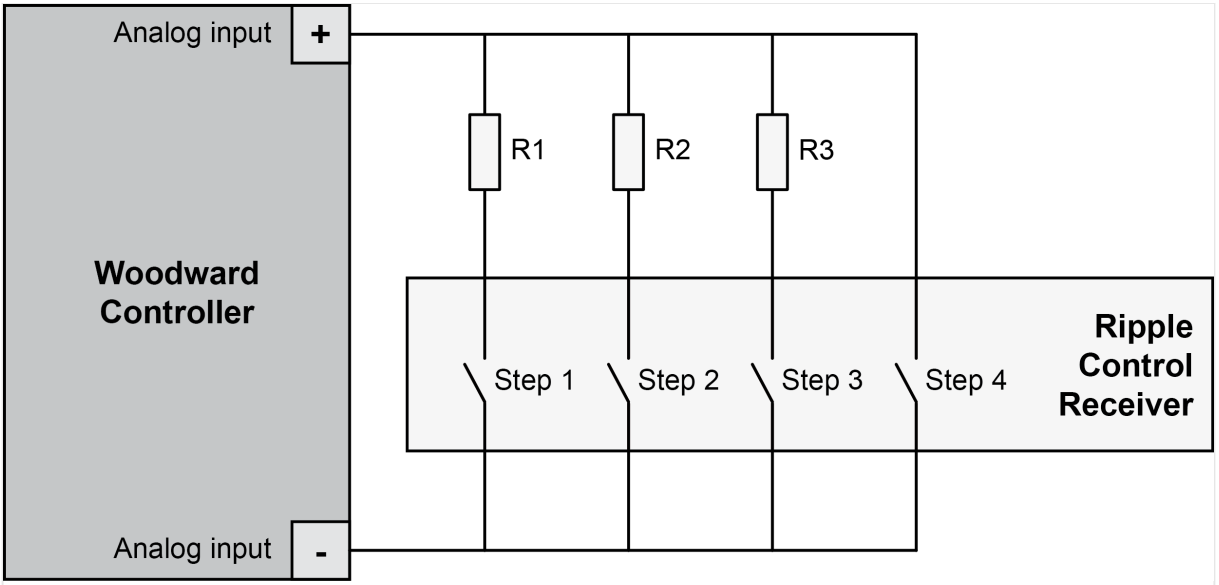


Fig. 243: Ripple control receiver wiring

R1 = 500 Ohms (or 560 parallel 4.7 k)

R2 = 300 Ohms (or 330 parallel 3.3 k)

R3 = 150 Ohms

Max. power [% of rated]	Switched relay ripple control receiver	Corresponding analog value	Derating [% of rated]
100%	Relay - Step 1	500 Ohms	0%
60%	Relay - Step 2	300 Ohms	40%
30%	Relay - Step 3	150 Ohms	70%
0%	Relay - Step 4	0 Ohms	100%

⚙ Configuring the analog input for a ripple control receiver

1. ▷ Either on the front panel or using ToolKit navigate to menu [Parameter / Configuration / Configure application / Configure inputs/outputs / Configure analog inputs / Analog input 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
1000	Type	Linear	A user-defined linear characteristic curve is to be used
1001	User defined min display value	+100.00	A value of 100 is displayed at the minimum of the input range
1002	User defined max display value	+0.00	A value of 0 is displayed at the maximum of the input range

Released

ID	Parameter	Value	Comment
1039	Sender value at display min.	0.000	The sender value at minimum display is 0 Ohms
1040	Sender value at display max.	500.000	The sender value at maximum display is 500 Ohms
1020	Sender type	0 - 2000 Ohm	A 0 to 2000 Ohms sender is used on the analog input
10113	Filter time constant	3	Filter time depending on the ambient conditions
3632	Bargraph minimum	+0.00	The start value for the bargraph display of the analog input is 0
3633	Bargraph maximum	+100.00	The end value for the bargraph display of the analog input is 100 and indicates the derating

3. ▷ Configure the following parameters using ToolKit. They facilitate a more detailed display of the analog value.

ID	Parameter	Value	Comment
1025	Description	Derating	Analog input [AI 01] is labeled with "Derating" on the display
1034	Unit	%	Text "%" is displayed for the unit
1035	Exponent for protocol	0	Value displayed "as is" (without exponent)

⚙ **Configuring the derating of power**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure load control / Derating of power].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
15149	Direct Derating	On	Only the analog source is used for the derating
15147	AM Derating source	Determined by AnalogManager 81.21 **[A1 = 06.01 Analog input 1]**	Defines »06.01 Analog input 1« as the analog source which controls the derating function Select "Pass through"

3. ▷

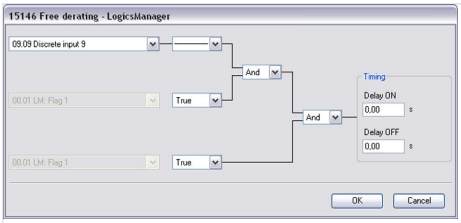


Fig. 244: LogicsManager function "Free derating"

Configure the LogicsManager function "Free derating" as shown in (↳▷ Fig. 244) to enable derating of power if discrete input [DI 09] is energized.

Please configure "Alarm class" (parameter ↳▷ 1362) of discrete input [DI 09] to "Control".

Maximal power setpoint

After the unit is configured as described above, the maximal power setpoint looks like shown in ↳▷ Fig. 245.

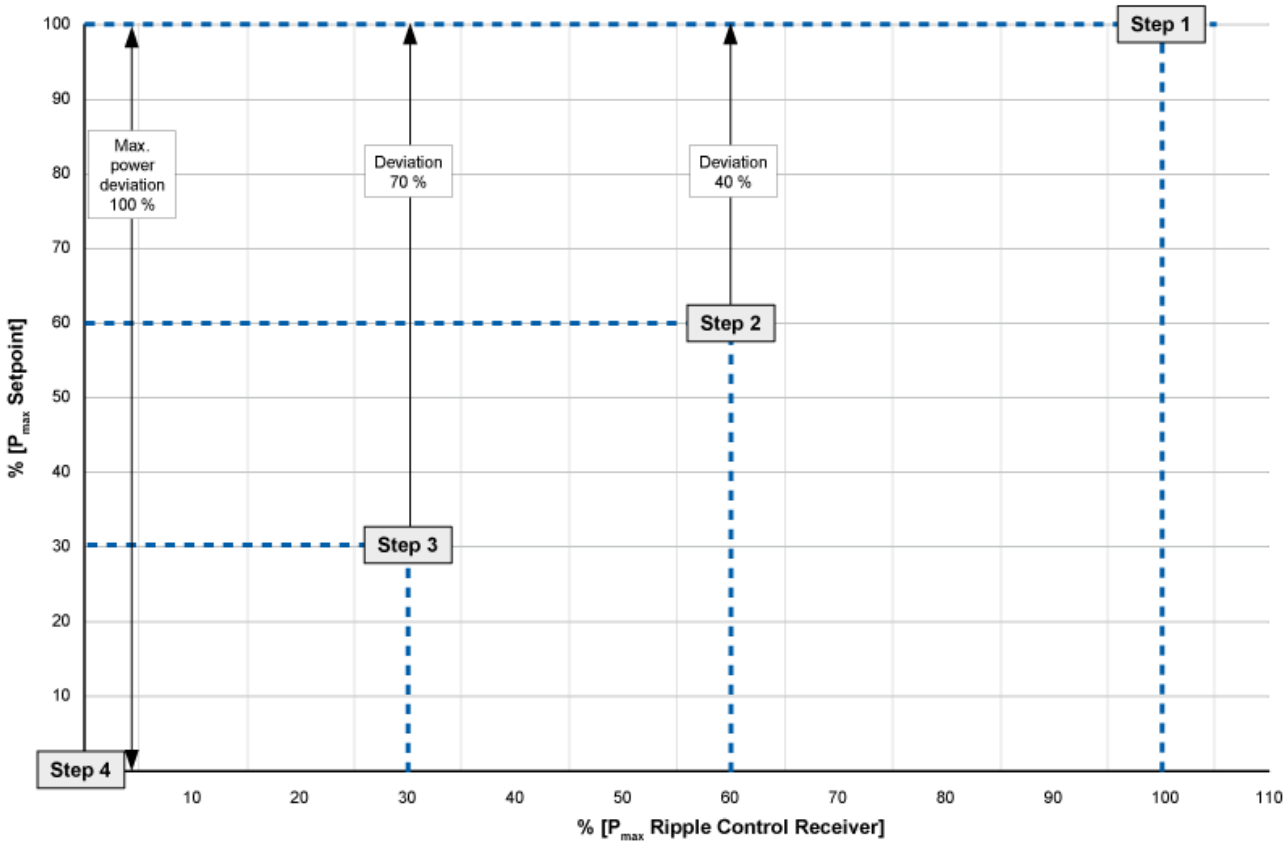


Fig. 245: Maximal power setpoint

Released

6.3.10 Neutral Interlocking

General Notes

This function requires a physical GCB and is not usable in the application mode "None" A01, "GCB open" A02 and "GCB/GC" A13.

The Neutral Interlocking function controls in multiple-gen applications the Neutral Contactor (NC) of each generator. The contactor bridges the Neutral with the PE. The rule is that only one neutral of the running generators in the same segment are bridged to earth.

The Logic ensures that with changing of generators or a lacking neutral breaker the neutral link is passed over to another active running generator. This requires information exchange between the genset controls. The load share protocol in the easY-I provides the according information.

Application Examples (with one generator and one inverter)

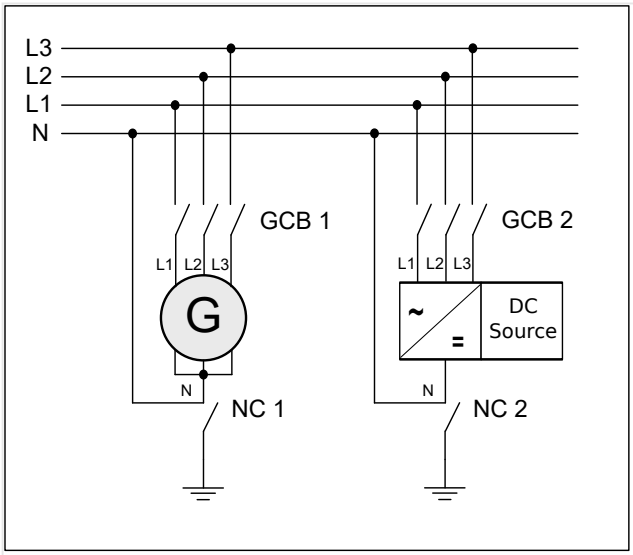


Fig. 246: Wiring neutral Interlocking: GCB 3-pole

Released

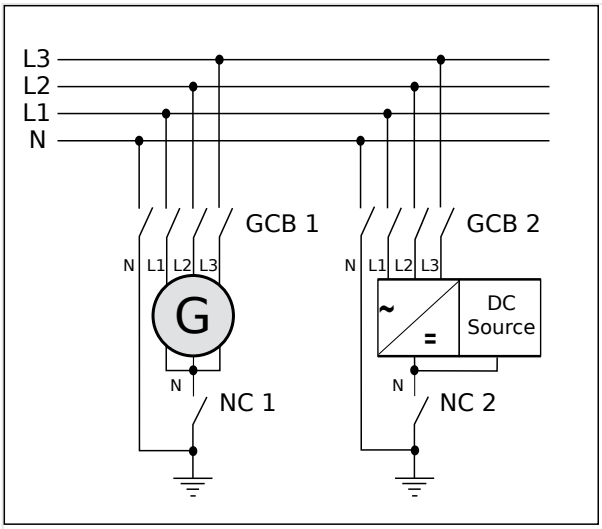


Fig. 247: Wiring neutral Interlocking: GCB 4-pole

Function

Start and operating

The inverter control closes principally after each successful starting from the inverter the NC. The easY-I proceeds with closing the GCB, if the NC has been closed successfully. If the NC closure was not successful the easY-I issues an alarm. The NC and GCB closure procedure is blocked from now on, until the alarm is acknowledged.

When the GCB is closed the easY-I begins to figure out, whether the own NC can remain closed or must be opened. This monitoring is done continuously.

As long the GCB is closed, the NC remains closed or is closed, if:

- No connection to mains is active

  AND

- one of the following is TRUE
  - the own NC is the only closed NC in the same segment

    OR

  - there is minimum one other NC in the same segment closed but the own device has a higher neutral interlocking priority

    OR

  - there is minimum one other NC in the same segment closed which has the same neutral interlocking priority but the own device has a lower device number

In all other cases the NC is opened!

Neutral Contactor (NC) Feedback

The discrete input 12 (DI 12) is used as feedback of the Neutral contactor and cannot be configured onto another discrete input. If the input is energized, the neutral contactor is recognized as closed.

Released

Monitoring NC Feedback

The monitoring of the NC feedback is performed always, if the Neutral Interlocking is enabled. The monitor checks, if the feedback behaves according to the NC command. With a configurable delay time the alarm is activated with a general alarm text. Open or closure failure are not differentiated. The issued Alarm text is: "N-cont. reply mism." (Neutral contactor has a reply mismatch).

Event logger and NC Feedback

If the Neutral Interlocking is enabled, following event entries shall take place:

- "Neutral cont. opened" (with +)
- "Neutral cont. closed" (with +)

Priority for Closing NC

The priority for closing GCB is configurable (parameter ⮡ 1841). This priority is independent from the LDSS priority. The customer can freely decide which device shall get which priority.



The advantage of this determination is that the application is not fixed with rated power settings. Maybe there are other circumstances which shall determine the neutral interlocking priority.

Two LogicsManager variables give further information:

- "03.39 Close neutral cont."
- 17.09 N-cont. reply mism.

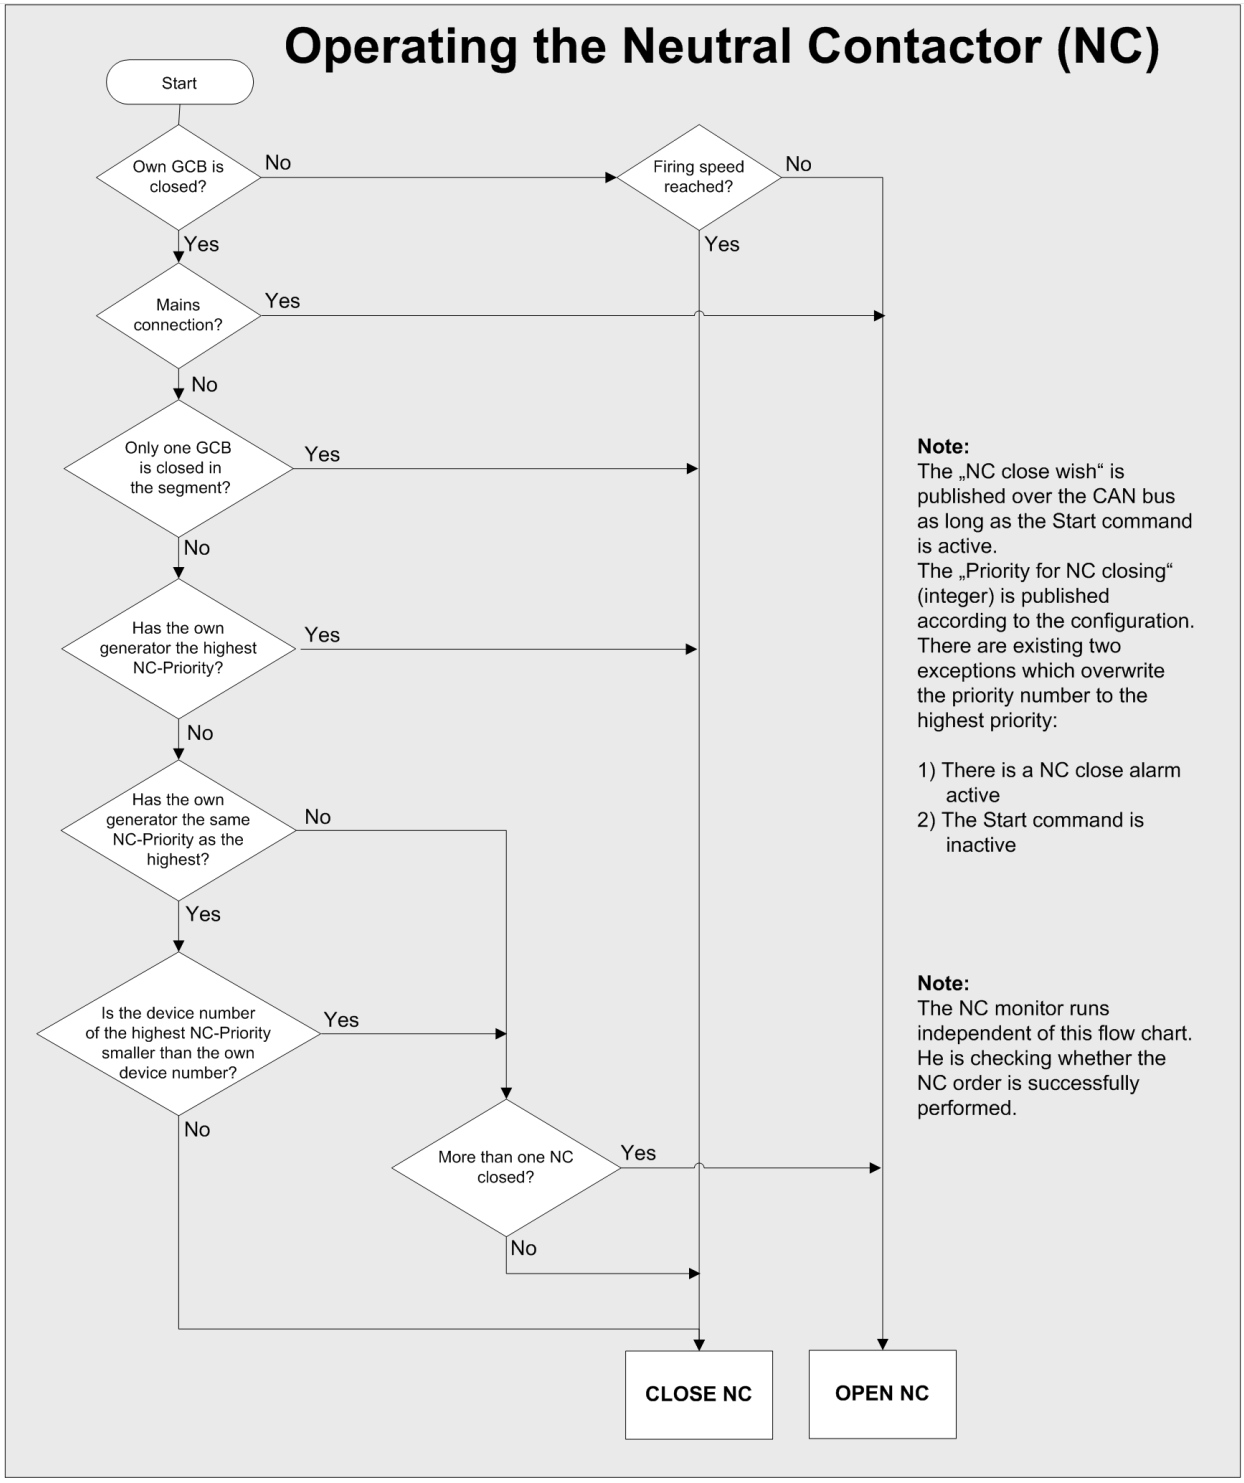


Fig. 248: Flow Chart Neutral-Interlocking

Released

6.3.11 LDSS with predicted load

6.3.11.1 Introduction

This function is not usable in the application mode "GCB/GC" A13.

Please read the “4.4.5.5.6 LDSS with predicted load” first, before you continue. The chapter here shall give you additional information to dedicated application.

Be aware of the two possible modes configurable by parameter 9066 "Predicted load source"):

- **"Internal"**:

  The easY-I is autarkic handling the function. The easY-I serves the GGB and the MCB.

- **"External"**:

  The easY-I cooperates with an external ATS control (e.g. Woodward DTSC-200). The ATS control measures the mains power and serves the MCB and GGB. The ATS device communicates over CANopen with the easY-I.

We recommend to ask Woodward for a dedicated application note with configuration examples, if you want go for the external mode.

For parameter refer to “4.4.5.5.6 LDSS with predicted load”. The easY-I informs the user with AnalogManager variables and LogicsManager command variables about their content.

For the relevant analog variables (10.73-10.78, 81.30 and group 21) refer to “9.5 AnalogManager Reference”.

For the relevant logic variables 04.68, 04.69, 86.36, groups 32 – 36 refer to “9.4.2 Logical Command Variables”.

Released

6.3.11.2 Internal source mode (EG3500XT only)

6.3.11.2.1 General

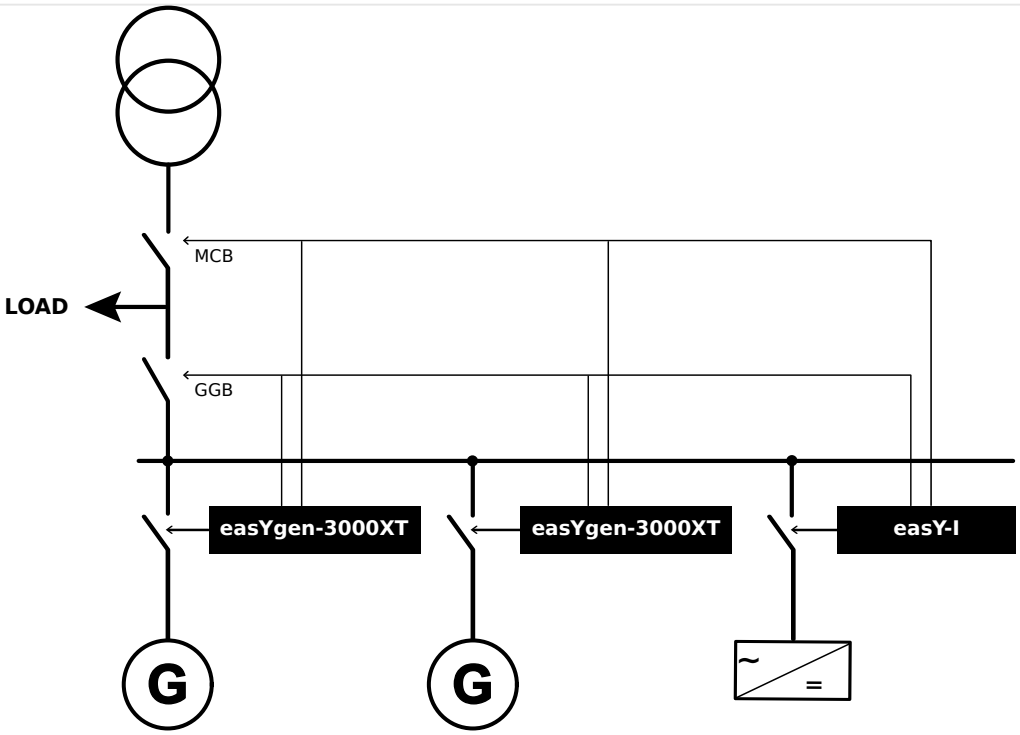


Fig. 249: Example of an application with predicted load source „internal“

Pre-assumption:

The LM 12930 "LD start stop" is TRUE.

The parameter 9066 "Predicted load source" is configured as "Internal".

The LM 15026 "LDSS with predicted load" is TRUE.

The AnalogManager 9059 "AM Consumer load [kW]" passes the mains active power (02.74 Mains act.power [W] * -0.001) to the LDSS PL function.

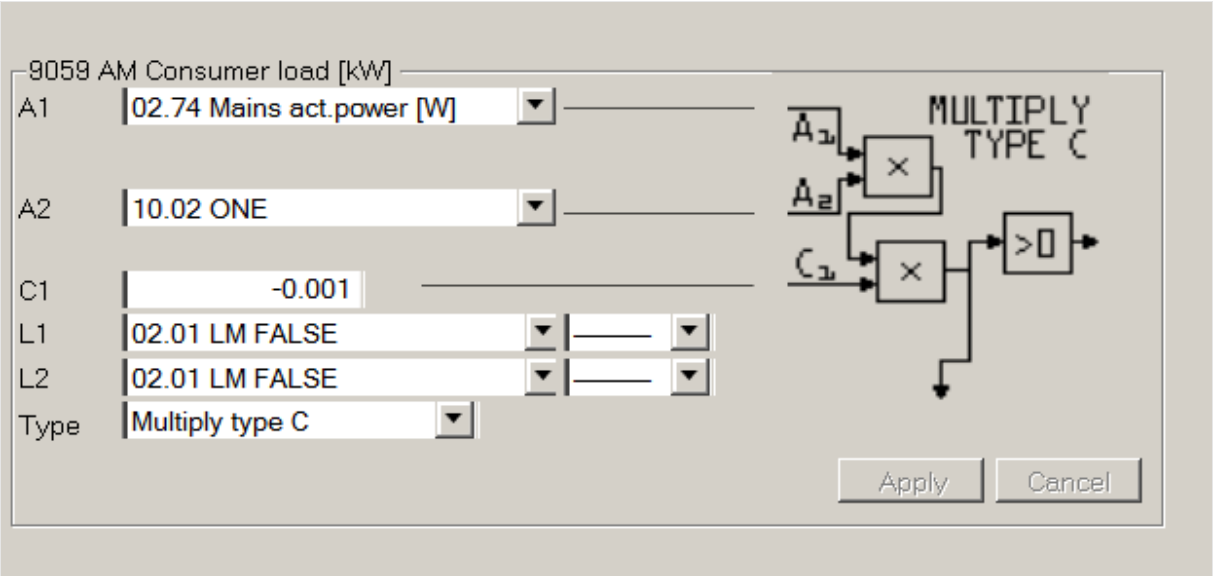


Fig. 250: Configuration AM Consumer load

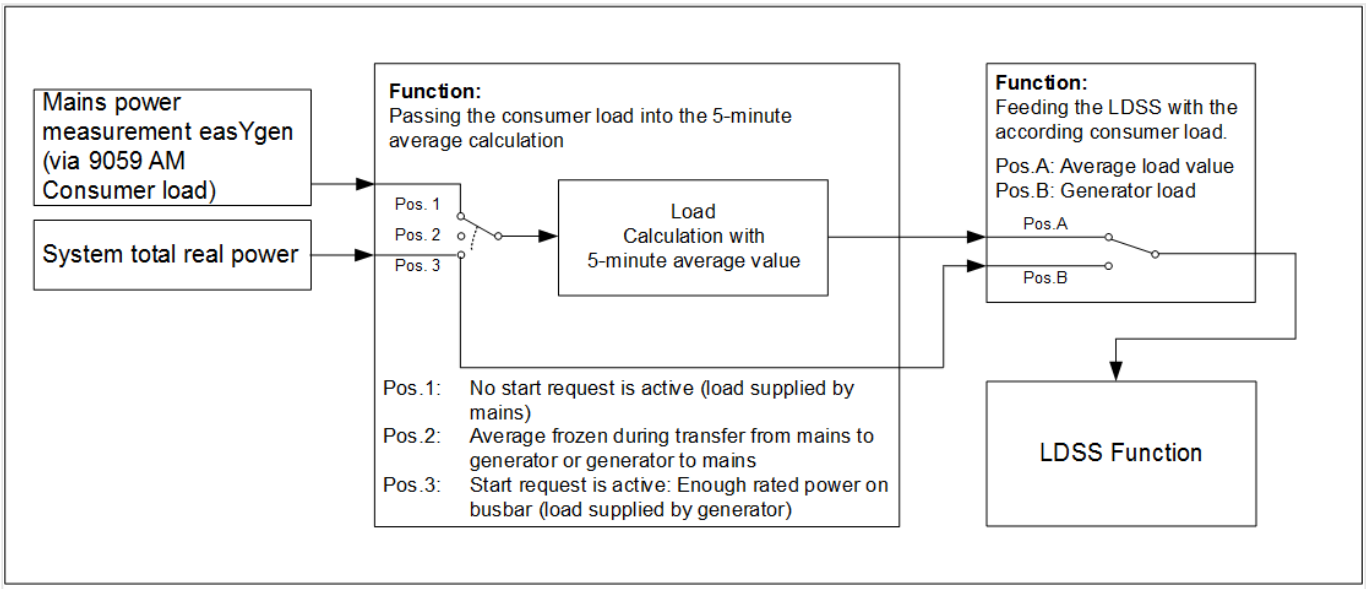


Fig. 251: Schematic of a predicted load with „internal“ source handling

The Procedure:

As long as LM 12120 "Start req. in AUTO" is FALSE, the value of the AM 9059 "AM Consumer load [kW]" goes into the 5-minute average power calculation which is passed to the LDSS.

In that moment the LM 12120 "Start req. in AUTO" becomes TRUE, the last result of the 5-minute average calculation will be kept.

So following procedure is started:

- The configuration 5752 "Start stop mode" is ignored and forced to “Reserve power”.
- The GGB close release will be internally blocked in the easY-I and the "04.69 Inhibit ATS" becomes true.

- The easY-I(s) starts in dead busbar start mode "LDSS", the according amount of engines/inverters which are required to maintain the consumer load. (Parameter 5753 "Dead busbar start mode" is ignored in that moment).

If the rated power on the generator busbar is higher than the 5-minute average value plus the active reserve power,

- the internal GGB close will be released and the "04.69 Inhibit ATS" becomes false.
  - The GGB will be closed
- The generator load measurement easY-I is passed to the LDSS. So the LDSS is now working like in the original mode.
- The configuration of 5752 "Start stop mode" is considered again. So the start stop argue could change now.
- The 5-minute average value is now supplied by the real busbar load. Thus the 5-minute average value is still tracked with the consumer load.

The procedure is stopped from that moment on the LM 12120 "Start req. in AUTO" becomes FALSE. The generators will go into cooldown and stop.

6.3.11.2.2 Example “Emergency power unit” with internal GGB control (only easY-I 3400XT/3500XT)

The example here shows what is to do if the easY-I shall start the correct amount of engines/inverters in emergency mode. The GGB and MCB is operated by the easY-I. The breaker transition mode is “Open transition”.

To incorporate the easY-I emergency mode into the procedure, the flag "04.09 Emergency mode" is to include in the LM 12120 "Start req. in AUTO" .

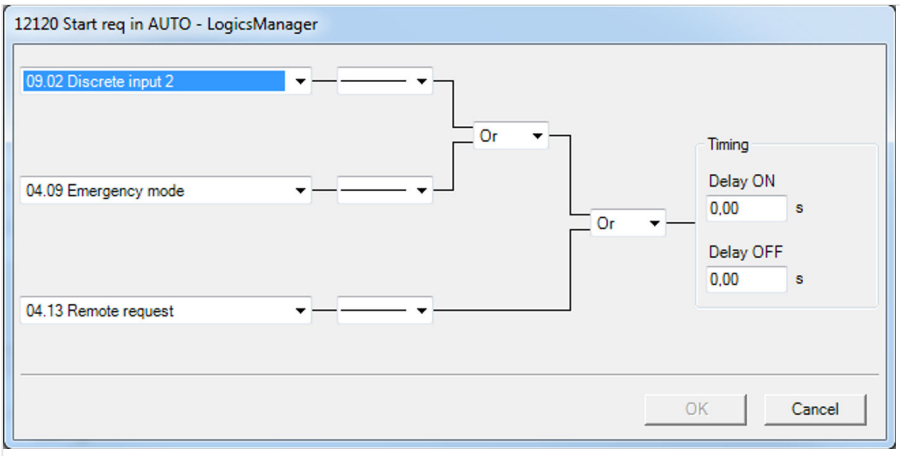


Fig. 252: Including the emergency mode as starting argue.

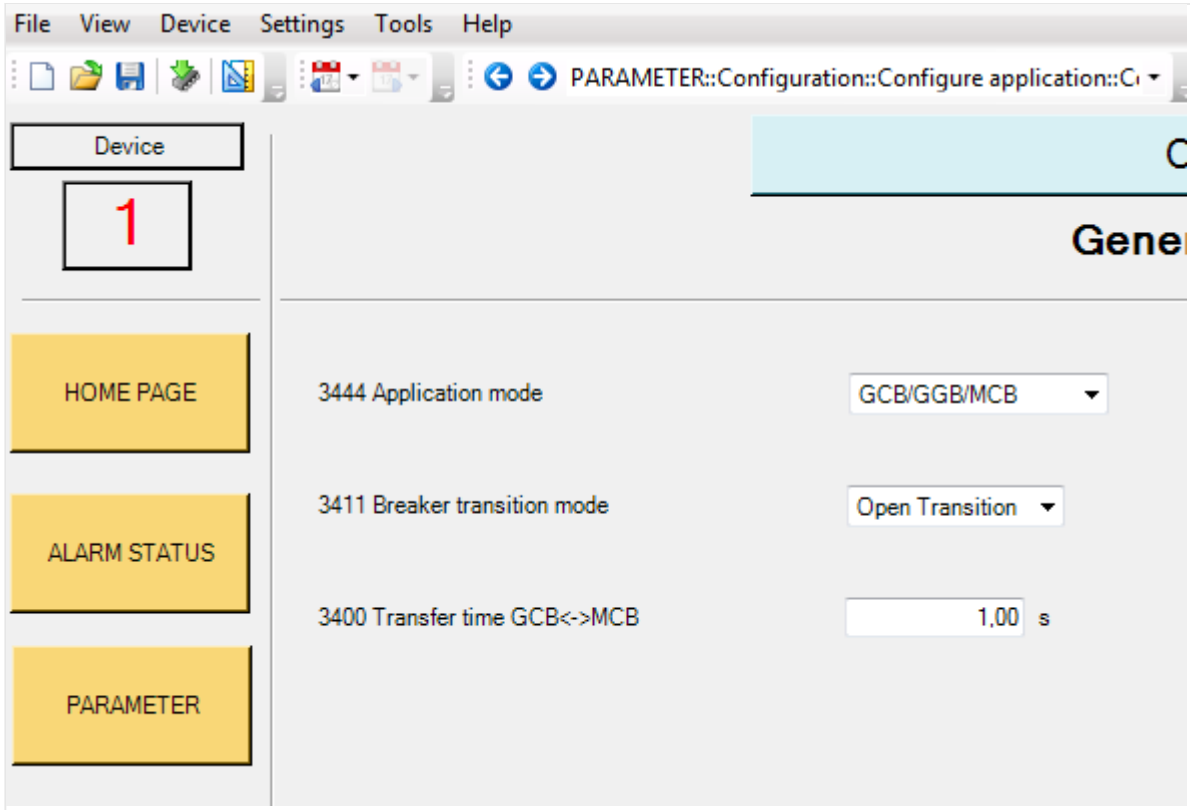


Fig. 253: Example - GGB breaker handling with open transition.

The minimum generator power is set according to the largest expected load. The GGB is released with the signal "04.69 Inhibit ATS". Parameter 3440 "Min.Generator power" is set to the maximum expected load.


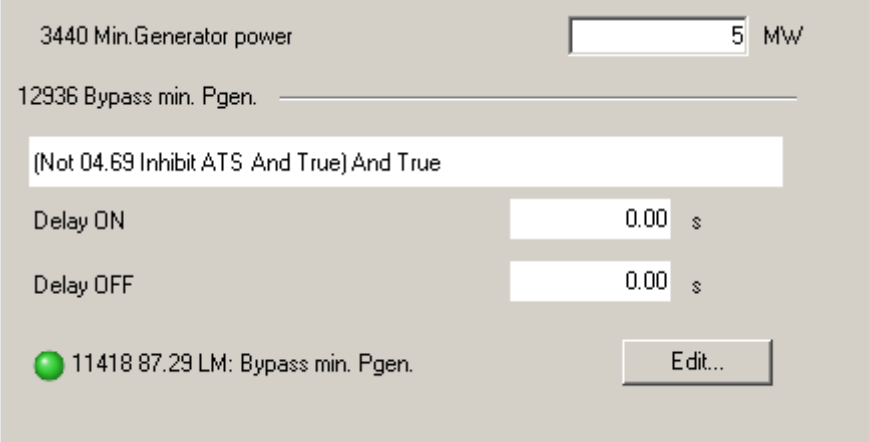


Fig. 254: LM 12936 "Bypass min. Pgen." becomes active if "04.69 Inhibit ATS" is false. That is the case if there is enough generator rated power on busbar.

6.3.11.3 External source mode

6.3.11.3.1 General

The external source mode is basically running like the internal source mode but the mains measurement, the MCB and GGB control is provided by an external control. This control, usually an ATS control (e.g. DTSC-200), sends the mains power and required condition flags as CANopen TPDO messages to the easY-I device. Through configuration of the RPDO in the easY-I the mains power and the condition flags are appearing automatically in the LDSS PL function. The system allows to connect up to 5 ATS controls.



We recommend to ask Woodward for a dedicated application note with configuration examples, if you want go for the external mode.

The external mode contains up to 5 independent “5-minute average value [kW]” calculations. Out of these values "10.78 Average load sum [kW]" is provided.

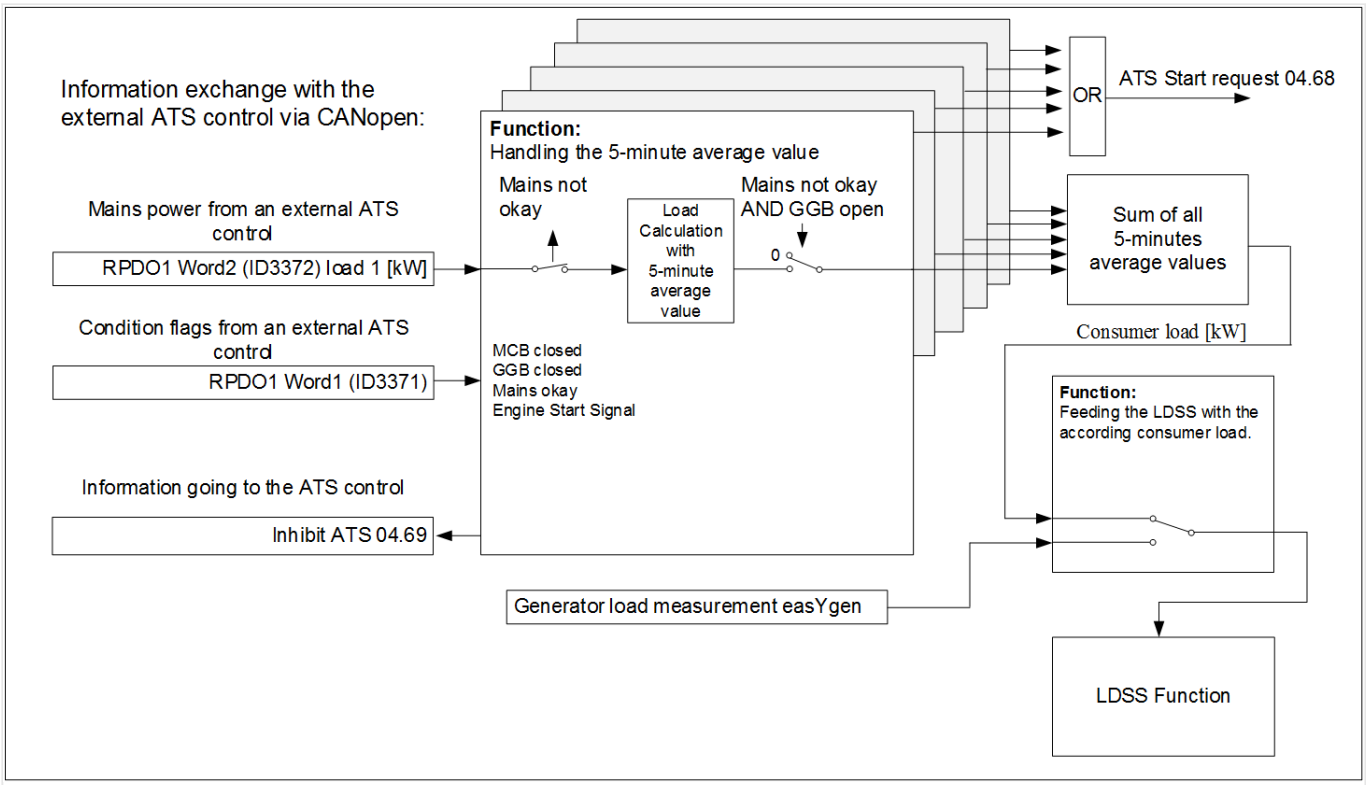


Fig. 255: The principle of the LDSS PL in external source mode

Pre-assumption

The explanation here is performed for an application with one ATS control. The principle is expandable on up to 5 ATS controls.

The LM 12930 "LD start stop" is TRUE.

The parameter 9066 "Predicted load source" is configured as "External".

The LM 15026 "LDSS with predicted load" is TRUE.

The ATS control sends:

- The mains load 1 [kW]
- The MCB condition
- The mains condition
- The GGB condition
- An ATS Start signal

The "04.68 ATS start request" is entered in the LM 12120 "Start req. in AUTO".

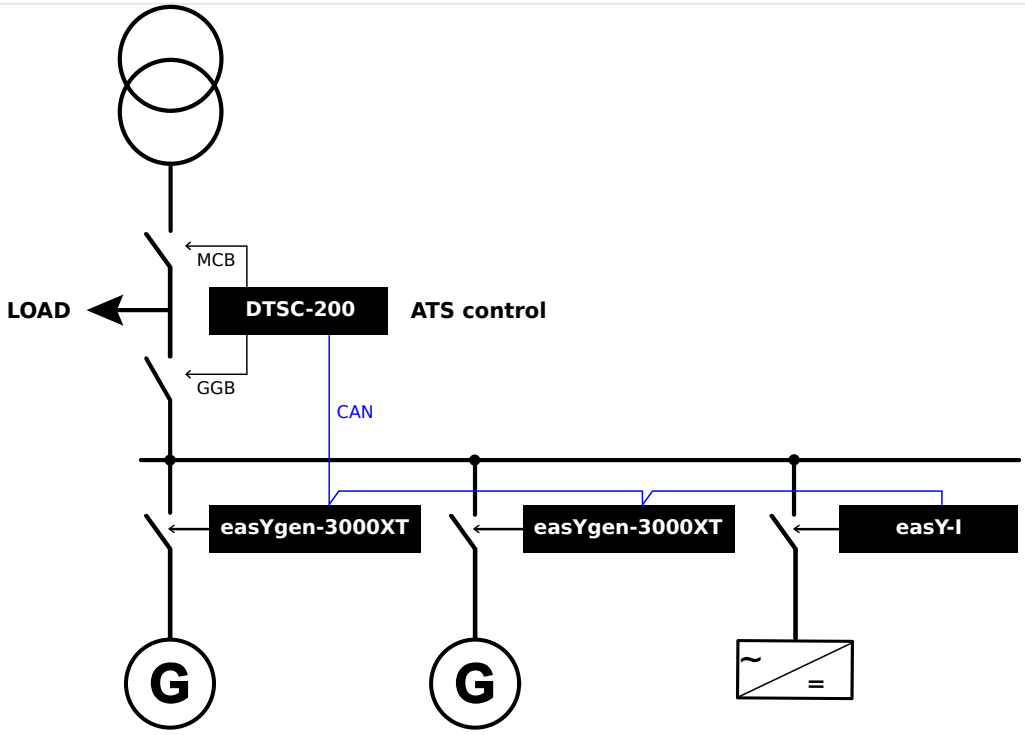


Fig. 256: Example of an application with parameter 9066 "Predicted load source" is configured as "External". Additionally, there is a hardwired inhbit signal from easY-Is to the ATS".

Inhibit Signal

To inhibit the switching over of the ATS (e.g. DTCSs) before the nominal power on bus matches the predicted load plus the active reserve power the easY-Is activate an inhibit signal.

For this reason every easY-I and easY-gen must have a relay configured with the command variable "04.69 Inhibit ATS". These signals must be hardwired as OR and connected to the ATS inhibit input.

The procedure

As long as LM 12120 "Start req. in AUTO" is FALSE and the MCB is closed, the RPDO1 Word2 (ID3372) load 1 [kW] goes into the individual 5-minute average power calculation.

In the moment the mains fails [see RPDO1 Word1 (ID3371)] the feeding of the 5-minute average value is stopped. So the last result of average calculation will be kept. If the GGB is open [see RPDO1 Word1 (ID3371)] the value will be passed over as consumer load to the LDSS function.

The ATS start signal from extern [see RPDO1 Word1 (ID3371)] sets the LM command variable "04.68 ATS start request" on TRUE. So the LM 12120 "Start req. in AUTO" becomes TRUE.

- So following procedure is started:
  - The configuration ID5752 "Start stop mode" is ignored and forced to “Reserve power”.
  - The flag "04.69 Inhibit ATS" becomes true.
  - The easY-I(s) starts in dead busbar start mode "LDSS", the according amount of engines/inverters which are required to maintain the consumer load. (The parameter ID5753 is ignored in that moment).

If the rated power on the generator busbar is higher than the 5-minute average value plus the active reserve power,

- the flag "04.69 Inhibit ATS" becomes false.
  - The ATS closes the GGB
- The generator load measurement easY-I is passed to the LDSS. So the LDSS is now working like in the original mode.
- The configuration ID5752 "Start stop mode" is considered again. So the start stop argue could change now.

The procedure is stopped from that moment on the LM 12120 "Start req. in AUTO" becomes FALSE. The generators will stop.



The easY-I emergency mode ID2802 must be disabled. The control over the start of the engines/inverters is maintained by the ATS control.

6.3.11.3.2 LDSS PL CANopen Handling

The following chapter summarize the CANopen analog and binary variables within the LDSS PL function. If the RPDO mapping is configured the LDSS PL function is supported. Parallel to that the easY-I makes the binary and analog variables available via the Logics- and AnalogManager. (see table below). These values can be taken for visualization or additional logical purposes.

Each ATS must send a transmit PDO with minimal two words (INT16):

- **“Word 1”** with binary flags
  - a. Bit 1-12 empty (0)
  - b. Bit 13 GGB closed
  - c. Bit 14 MCB closed
  - d. Bit 15 Mains okay flag
  - e. Bit 16 ATS start signal
- **“Word 2”** with the mains power [0.1 kW resolution] signed.

Released

These two words are mapped inside the easY-I to according database identifiers.

Binary flags from ATS (Word 1)

The word with the binary flags is filled up on the last 4 bits. This word is mapped in the easY-I to the according database index. (According to the ATS number)

CAN	LogicsManager Command Variable	Bit	ID	Function LDSS PL	ID De-script-ion Field
ATS1: RPDO 1 “Word 1” is mapped to ID 3371	32.13 CAN1 RPDO1.1.13	13	11509	GGB closed	11573
	32.14 CAN1 RPDO1.1.14	14	11510	MCB closed	11574
	32.15 CAN1 RPDO1.1.15	15	11511	Mains OK	11575
	32.16 CAN1 RPDO1.1.16	16	11512	ATS Start signal	11576

CAN	LogicsManager Command Variable	Bit	ID	Function LDSS PL	ID De-script-ion Field
ATS2: RPDO 2 “Word 1” is mapped to ID 3375	33.13 CAN1 RPDO2.1.13	13	11513	GGB closed	11577
	33.14 CAN1 RPDO2.1.14	14	11514	MCB closed	11578
	33.15 CAN1 RPDO2.1.15	15	11515	Mains OK	11579
	33.16 CAN1 RPDO2.1.16	16	11516	ATS Start signal	11580
ATS3: RPDO 3 “Word 1” is mapped to ID 3379	34.13 CAN1 RPDO3.1.13	13	11517	GGB closed	1577
	34.14 CAN1 RPDO3.1.14	14	11518	MCB closed	11578
	34.15 CAN1 RPDO3.1.15	15	11519	Mains OK	11583
	34.16 CAN1 RPDO3.1.16	16	11520	ATS Start signal	11584
ATS4: RPDO 4 “Word 1” is mapped to ID 3383	35.13 CAN1 RPDO4.1.13	13	11521	GGB closed	11585
	35.14 CAN1 RPDO4.1.14	14	11522	MCB closed	11586
	35.15 CAN1 RPDO4.1.15	15	11523	Mains OK	11587
	35.16 CAN1 RPDO4.1.16	16	11524	ATS Start signal	11588
ATS5: RPDO 5 “Word 1” is mapped to ID 3387	36.13 CAN1 RPDO5.1.13	13	11525	GGB closed	11589
	36.14 CAN1 RPDO5.1.14	14	11526	MCB closed	11590
	36.15 CAN1 RPDO5.1.15	15	11527	Mains OK	11591
	36.16 CAN1 RPDO5.1.16	16	11528	ATS Start signal	11592

Table 126: If further ATS are in use:

Mains power [kW] from ATS (Word 2)

The word with mains power is an 16INT signed. This word is mapped in the easY-I to the according database index.

CAN	AnalogManager variable	Function LDSS PL
ATS 1: RPDO 1 “Word 2” is mapped to ID 3372	21.02 CAN1 RPDO1.2	Real power 1 [0.1kW]

If further ATS are in use:

CAN	AnalogManager variable	Function LDSS PL
ATS 2: RPDO 2 “Word 2” is mapped to ID 3376	21.06 CAN1 RPDO2.2	Real power 2 [0.1kW]
ATS 3: RPDO 3 “Word 2” is mapped to ID 3380	21.10 CAN1 RPDO3.2	Real power 3 [0.1kW]
ATS 4: RPDO 4 “Word 2” is mapped to ID 3384	21.14 CAN1 RPDO4.2	Real power 4 [0.1kW]
ATS 5: RPDO 5 “Word 2” is mapped to ID 3388	21.18 CAN1 RPDO5.2	Real power 5 [0.1kW]

6.3.11.3.3 Internally provided analog variables

	These values can be assigned to the analog variables of the Customer screens for visualization.
10.73 Average load 1 [kW]	5 min average of “21.02 CAN1 RPDO1.2 “
10.74 Average load 2 [kW]	5 min average of “21.06 CAN1 RPDO2.2 “
10.75 Average load 3 [kW]	5 min average of “21.10 CAN1 RPDO3.2 “
10.76 Average load 4 [kW]	5 min average of “21.14 CAN1 RPDO4.2 “
10.77 Average load 5 [kW]	5 min average of “21.18 CAN1 RPDO5.2 “
10.78 Average load sum [kW]	If LDSS PL external is active, 10.78 is the load value which is passed to the LDSS. It is the sum of all averages (10.73 – 10.77) which have “Mains not okay” and “GGB not closed”. In internal mode it is the value of the 5 min. average of the AM “Consumer load”.
81.30 AM Consumer load [kW]	This analog variable provides the load for the LDDS with load prediction in internal source mode.

Released

6.3.11.4 Tables

RPDO Summary

RPDO configuration to get data from ATS 1:

Receive PDO	Database Index	AnalogManager variable	Comment
RPDO1 Word1	3371	21.01 CAN1 RPDO1.1	Binary information
RPDO1 Word2	3372	21.02 CAN1 RPDO1.2	Real power [0.1kW]

RPDO Summary

RPDO configuration to get data from ATS 2:

Receive PDO	Database Index	AnalogManager variable	Comment
RPDO2 Word1	3375	21.05 CAN1 RPDO2.1	Binary information
RPDO2 Word2	3376	21.06 CAN1 RPDO2.2	Real power [0.1kW]

RPDO Summary

RPDO configuration to get data from ATS 3:

Receive PDO	Database Index	AnalogManager variable	Comment
RPDO3 Word1	3379	21.09 CAN1 RPDO3.1	Binary information
RPDO3 Word2	3380	21.10 CAN1 RPDO3.2	Real power [0.1kW]

RPDO Summary

RPDO configuration to get data from ATS 4:

Receive PDO	Database Index	AnalogManager variable	Comment
RPDO4 Word1	3383	21.13 CAN1 RPDO4.1	Binary information
RPDO4 Word2	3384	21.14 CAN1 RPDO4.2	Real power [0.1kW]

RPDO Summary

RPDO configuration to get data from ATS 5:

Receive PDO	Database Index	AnalogManager variable	Comment
RPDO5 Word1	3387	21.17 CAN1 RPDO5.1	Binary information
RPDO5 Word2	3388	21.18 CAN1 RPDO5.2	Real power [0.1kW]

Internally provided LM Command Variables

	ID LMCV	Function
04.68 ATS start request	11983	If this variable is true, LDSS PL wants to start the engines. This command variable is incorporated in the LM “Start request in AUTO”.
04.69 Inhibit ATS	11984	This variable is true if “04.68 ATS start request” is true and the

Released

	ID LMCV	Function
		rated power on the bus bar is lower than the predicted load (+ active reserve power). It is usually passed internally to release the GGB or external to release the ATS control.
86.36 LM: LDSS predicted	12606	Result of the LM LDSS with load prediction.

6.3.12 Derating And Uprating Of Power (Details)

6.3.12.1 Direct Derating

General notes

The idea of direct derating of power is that the user can control with an analog value, usually from outside, the amount of reduction. For this purposes mainly an analog input would be taken. Additionally in some applications are uprating desired, for example during load sharing procedures, which can be as well executed in determined circumstances.

Derating

If parameter 15149 "Direct Derating" (↳ 15149) is enabled, the output value of the AnalogManager 15147 "AM Derating source" determines the derating directly. This derating value is also provided as AnalogManager variable under "81.21 AM Derating source". For derating the active power setpoint, the value shall vary between 100% (no derating) and 0% (full derating). The derating function parameters 15143, 15144, 15145 are not in use.

Uprating

If parameter 15149 "Direct Derating" (ID ↳ 15149) is enabled, the output value of the AnalogManager 15147 "AM Derating source" determines the uprating directly. This value is also provided as AnalogManager variable under "81.21 AM Derating source". For uprating the value shall vary between 100% (no uprating) and higher (uprating begins). The scaling with parameters 15143, 15144, 15145 is not in use.

Combined Derating and Uprating

If parameter 15149 "Direct Derating" (ID ↳ 15149) is enabled, the output value of the AnalogManager 15147 "AM Derating source" determines the derating/uprating directly. This value is also provided as AnalogManager variable under "81.21 AM Derating source".

For derating the active power setpoint goes under 100%, for uprating the value goes over 100%, and with exact value of 100% the normal setpoint becomes active.

Released

6.3.12.2 Derating With Characteristic Curve

General notes

Some application require a functionality to reduce the active power dependent on a well defined measured value. This could be for example a temperature measurement: The load should decrease with higher temperatures according to a configured characteristic.

If parameter 15149 "Direct Derating" (↳ 15149) is OFF, the LogicsManager 15146 "Free derating" (↳ 15146) becomes TRUE and the analog value of power exceeds the value "Start derating at" (↳ 15143), the unit begins to reduce the present active power setpoint. The grade of reducing depends on the value "Stop derating at" (↳ 15144) and the value of "Max. power deviation" (↳ 15145) which are configurable.

If the LogicsManager 15146 "Free derating" becomes FALSE, the unit ramps back to its original setpoint. If derating/uprating is active, the display shows the indication “Derating”/"Uprating".

The derating/uprating function can be used in islanded operation, too. The available rated power from the inverter can be reduced (derated) or increased (uprated) with an analog value without adjusting a parameter value. With this function the inverter/engine can be individually loaded within of an multiple inverter/generator islanded operation (asynchronous load sharing).

Freely scalable derating characteristic

The easY-I-XT offers a characteristic which is linearly decreasing the momentary active power setpoint according to the value offered by the AnalogManager AM Derating source ↳ 15147.

The characteristic is defined by the following parameters:

- 15143: "Start derating at"
- 15144: "Stop derating at"
- 15145: "Max. power deviation"

When the LogicsManager 15146 "Free derating" becomes active and the analog value crosses the reducing start value, the configured derating line becomes active. If the derating line falls below the active power setpoint the derating becomes effective. The grade of reduction depends on the reducing stop value and the power deviation freely configurable. If the LogicsManager "Power Reduction" becomes FALSE, the unit shall ramp back to its original setpoint.

To become more familiar please look at the examples below:

Example 1: Mains Parallel Operation (setpoint = below rated power)

- Rated generator power = 200 kW
- Current power setpoint of the inverter/generator = 150 kW (75%)
- "Start derating at" = 80 °C water temperature (i.e. analog input AI 01 is defined as free derating source by parameter 15147)
- "Stop derating at" = 90 °C water temperature
- "Max. power deviation" = 40% (80 kW)

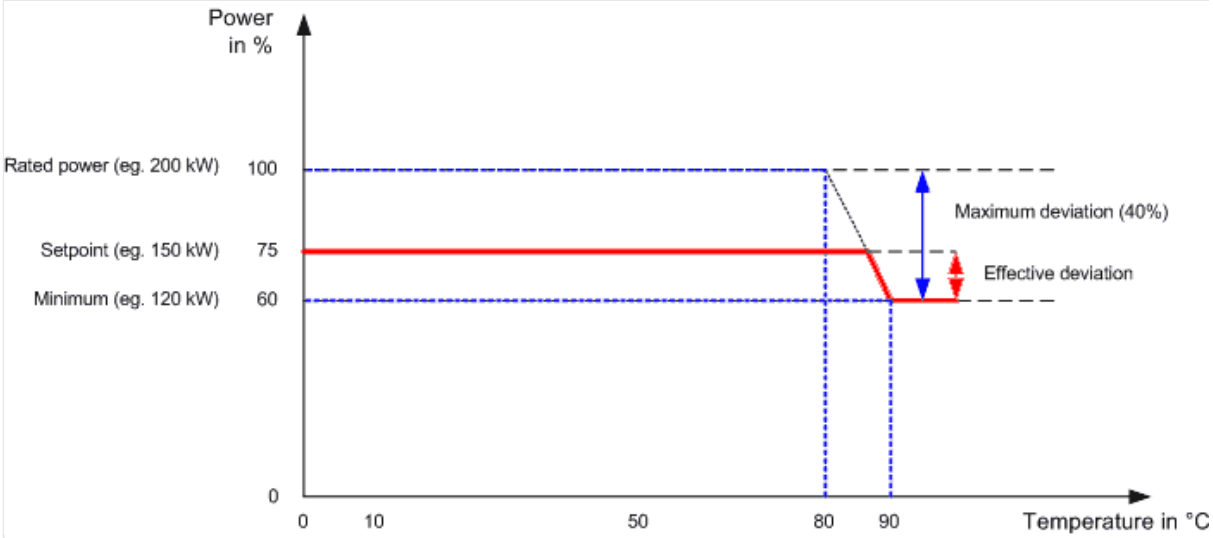


Fig. 257: Derating: Mains parallel operation; setpoint below rated power

If the inverter is running and the LogicsManager 15146 "Free derating" is TRUE, the unit monitors the water temperature. If the water temperature remains below the value "Start derating at", the reduction becomes not active and remains on 0%. If the water temperature increases and so exceeds the value Start derating at the reduction becomes active (the unit starts to derate the current active power setpoint). The rate of reduction (slope) is determined by the values of Start derating at, "Stop derating at", and "Max. power deviation" ("Max. power deviation" also defines the minimum power).

In this example the power reduction would increase and so reduce power from 75% at 86.5 °C down to 60% = 120 kW at 90 °C. Temperature over 90 °C would cause the same reduction of 40% in this example. So it is guaranteed that the inverter is not running with too less load.

A Setpoint below the Minimum (e.g. 55%) would not run into reduction.

With a smaller Maximum deviation (e.g. 20%) Minimum would be higher than Setpoint and so not cause reduction.

Released

Example 2: Mains Parallel Operation (setpoint = rated power)

- Rated generator power = 200 kW
- Current power setpoint of the inverter/generator = 200 kW (100%)
- "Start derating at" = 80 °C water temperature (i.e. analog input AI 02 is defined as free derating source by parameter 15147)
- "Stop derating at" = 90 °C water temperature
- "Max. power deviation" = 40% (80 kW)

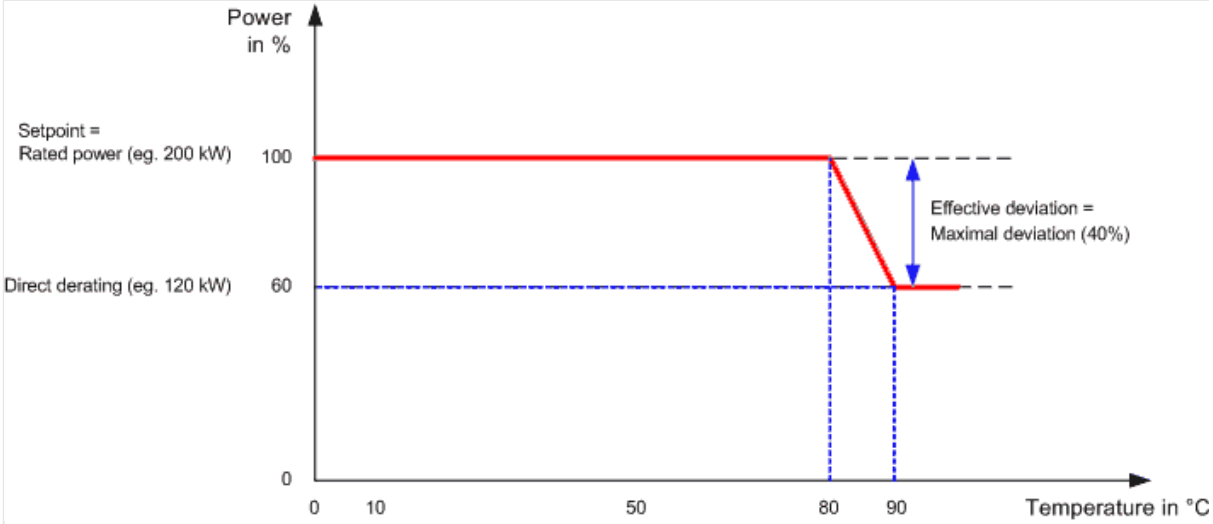


Fig. 258: Derating: Mains parallel operation; setpoint = rated power

If the inverter is running and the LogicsManager "Free derating"15146 "Free derating" is TRUE, the unit monitors the water temperature. If the water temperature remains below the value "Start derating at", the reduction becomes not active and remains on 0%. If the water temperature increases and so exceeds the value "Start derating at" the reduction becomes active (the unit starts to derate the current active power setpoint). The rate of reduction (slope) is determined by the values of "Start derating at", "Stop derating at", and "Max. power deviation" ("Max. power deviation" also defines the minimum power).

The power reduction would increase and so reduce power from 100% at 80 °C down to 60% = 120 kW at 90 °C. Temperature over 90 °C would cause the same reduction of 40% in this example. So it is guaranteed that the inverter is not running with too less load.

Example 3: Islanded Parallel Operation (IOP)

- Rated generator power = 200 kW
- Current average utilization of all inverters/generators = 95%
- "Start derating at" = 80 °C water temperature (i.e. analog input AI 02 is defined as free derating source by parameter 15147)
- "Stop derating at" = 90 °C water temperature
- "Max. power deviation" = 40%

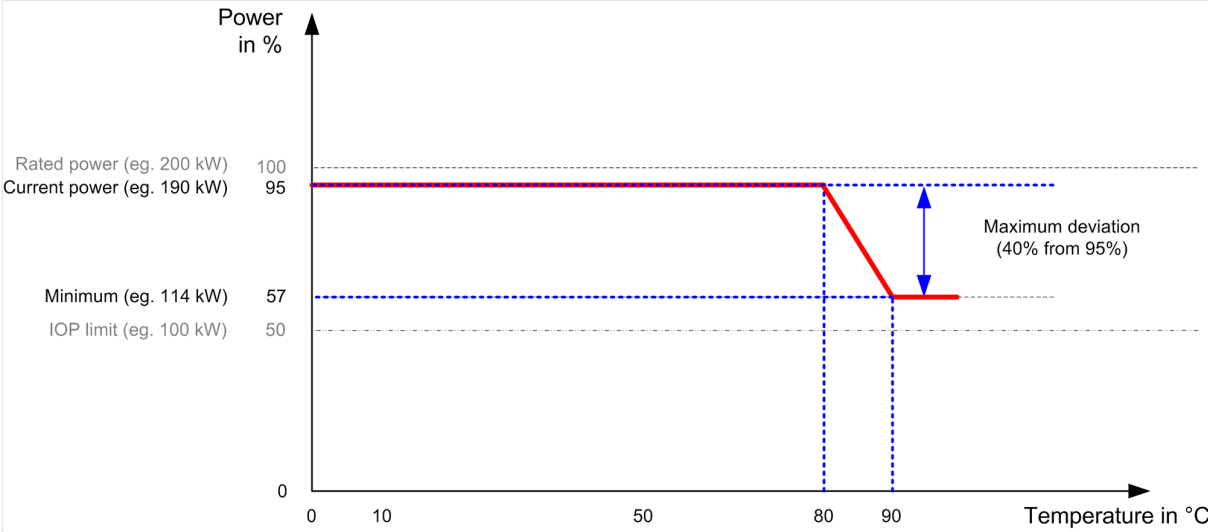


Fig. 259: Derating: Islanded parallel operation

In islanded parallel operation the derating factor is correlated to the utilization factor of all inverters/generators! This becomes the new Maximum for derating.

The inverter is running with 95% (190 kW). If the LogicsManager is enabled and temperature has reached 80 °C the derating becomes effective (the unit starts to derate the current active power setpoint). If the temperature is 90 °C or higher the maximum reduction value of 40% becomes active. The current power of 95% will be reduced by 40% to 60%.

95% x 0.6 = 57% ≙ 0.57

This inverter will run now with 200 kW x 0.57 = 114 kW.

In islanded parallel operation the derating is limited to 50%. It is not possible to get the utilization factor lower than 50% by derating function.

If the derating signals are digital (e.g. different relay outputs from a ripple control receiver; refer to “6.3.9 Ripple Control Receiver”), the digital signals can be transformed to an analog signal with a simple set of resistors.

The derating of power has an impact on the Load-Dependent Start/Stop functionality (refer to “6.2.1.1 Configuring Load-Dependent Start/Stop”): The start of the next inverter/generator will be shifted.

Released

6.3.13 Examples timer configuration

Example 1:

Each day a function shall be activated from 8.12am to 6.48pm (18:48)

- Configure Timer 1: Hour (ID1652) to 8
- Configure Timer 1: Minute (ID1651) to 12
- Configure Timer 1: Second (ID1650) to 0
- Configure Timer 2: Hour (ID1657) to 18
- Configure Timer 2: Minute (ID1656) to 48
- Configure Timer 2: Second (ID1655) to 0
- Take a LogicsManager equation i.e. Internal flag and configure:
  - 11.01 Timer 1 AND
  - 11.02 Timer 2 NOT
- Incorporate this internal flag into the LogicsManager equation which enables the desired function.

Example 2:

Each working day (Monday to Friday) a function shall be activated at 10.15am for the duration of 1 minute

- Configure Active houractive hour (ID1662) to 10
- Configure Active minuteactive minute (ID1661) to 15
- Configure "Active weekdays" (ID1670, 1671,1672,1673,1674; Monday - Friday) to YES
- Configure "Active weekdays" (ID1675, 1676; Saturday - Sunday) to NO
- Take a LogicsManager equation i.e. Internal flag and configure:
  - 11.05 Active hour AND
  - 11.06 Active minute AND
  - 11.03 Active weekdays
- Incorporate this internal flag into the LogicsManager equation which enables the desired function.

Example 3:

Each day a function shall be activated at 7am for the duration of 1 hour

- Configure "11.05 Active hour" (ID1662) to 7
- Take a LogicsManager equation i.e. Internal flag and configure:
  - 11.05 Active hour

Released

- Incorporate this internal flag into the LogicsManager equation which enables the desired function.

6.4 CANopen Applications

Parameter access

The CANopen SDO system only allows parameters with an identifier smaller than 16384 (4000hex). This means that all parameters (including visualization parameters) with values greater than 16384 can no longer be supported via ToolKit CANopen and PLC CAN. Access via PLC CANopen can still take place as long as parameters smaller than 16384 are addressed.

6.4.1 Remote Control

6.4.1.1 Remote Start/Stop, Shutdown, And Acknowledgment

Refer to “6.3.3 Performing Remote Start/Stop And Acknowledgment” for detailed information.

The easY-I may start, stop, shut down, or acknowledge alarms with CAN/Modbus. Therefore, two logical command variables (04.13 and 04.14) have to be configured with the LogicsManager. 03.40 can handle Remote shutdown only.

- 04.13 Remote request
- 04.14 Remote acknowledge
- 03.40 Remote Shutdown

A "03.40 Remote Shutdown" can be configured via LogicsManager internal flag (e.g. 12230 "Flag 1") combined with a free alarm LogicsManager (e.g. 8120 "Free alarm 1") configured with shutdown alarm class.

Two different methods to perform a remote start/stop/Acknowledgment using "04.13 Remote request" and "04.14 Remote acknowledge" are detailed in the below.

These are "Remote start/stop/Acknowledgment via RPDO" and "Remote start/stop/ Acknowledgment via default SDO communication channel". The advantages and the disadvantages of these two methods are as follows.

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 127: Comparison

Released

6.4.1.1.1 RPDO

CANopen Master (parameter 8993) must be enabled, if there is no PLC taking over the master function.

⚙ **Configure CAN interface 1**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].
2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

⚙ **Configure RPDO**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].
2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000201 (hex)	COB-ID set to 00000201.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00503	The 1st mapped object is set to control parameter 503.

▶

Setting the COB-ID to 201 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is configured to overtake the received data coming in by COB-ID 201 into the ID 503. The number of mapped objects is here 1.

Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows four data examples the device is receiving on the CANopen bus. These data are sent as TPDO to the device (COB-ID 201). The settings above map the received data to the easY-I address ID 503.

ID (hex)	Description	Data (hex)
201	Remote Start	01 00

Released

ID (hex)	Description	Data (hex)
201	Remote Stop	02 00
201	Remote Acknowledge	sequence of: 0000, 10 00; 0000, 1000 **Notes** The message 1000hex must be sent twice to acknowledge an alarm completely. The first rising edge (0000hex followed by 1000hex) disables the horn and the second rising edge resets the alarm.
201	Remote Shutdown	00 02

6.4.1.1.2 Default SDO Communication Channel

Another possibility for a remote start/stop/Acknowledgment is to send the request via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node-ID.

The following examples show the request format on CANopen with different Node-IDs.

The request on the bus is sent via the control parameter ID 503 of the device.

The value 2000 (hex) is calculated internally:

- 503 (dec) -- 1F7 (hex)
- 1F7+2000 (hex) = 21F7 (hex)



Please note that high and low bytes are exchanged in the sent address. The data (hex) shows the state of parameter 503 to achieve the required control.

Node-ID 1 (standard value)

The following table shows exemplary request data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601	Remote Start	2B F7 21 01 01 00 00 00
601	Remote Stop	2B F7 21 01 02 00 00 00
601	Remote Acknowledge	sequence of: 2B F7 21 01 00 00 00 00, 2B F7 21 01 10 00 00 00; 2B F7 21 01 00 00 00 00, 2B F7 21 01 10 00 00 00; **Notes** The message 2B F7 21 01 10 00 00 00 must be sent twice to acknowledge an alarm completely. The first rising edge (2B F7 21 01 00 00 00 00 followed by 2B F7 21 01 10 00 00 00) disables the horn

Released

Identifier	Description	Data (hex)
		and the second rising edge resets the alarm.
601	Remote Shutdown	2B F7 21 01 00 02 00 00

Node-ID (not standard value)

If the Node-ID of the device is intended to be different from the standard value, the parameter "Node-ID CAN bus 1" (parameter ⮡ 8950) must be configured accordingly. Node-ID 2 is used in the following example.

⚙ **Configure the Node-ID**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].

2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8950	Node-ID CAN bus 1	002 (hex)	Node-ID set to 002.

▶ With this setting, the Node-ID of the CAN interface 1 is set to 002.

The request on the bus is sent via the control parameter 503 of the device.

The hexadecimal value 2000 is calculated internally:

- 503 (dec) -- 1F7 (hex)
- 1F7 (hex) + 2000 (hex) = 21F7 (hex)

Please note that high and low bytes are exchanged in the sent address.

The data (hex) shows the state of parameter 503 to achieve the required control.

The following table shows exemplary request data for the device on the CANopen bus.

Identifier	Description	Data (hex)
602	Remote Start	2B F7 21 01 01 00 00 00
602	Remote Stop	2B F7 21 01 02 00 00 00
602	Remote Acknowledge	sequence of: 2B F7 21 01 00 00 00 00, 2B F7 21 01 10 00 00 00; 2B F7 21 01 00 00 00 00, 2B F7 21 01 10 00 00 00; **Notes** The message 2B F7 21 01 10 00 00 00 must be sent twice to acknowledge an alarm completely. The first rising edge (2B F7 21 01 00 00 00 00 followed by 2B F7 21 01 10 00 00 00) disables the horn

Released

Identifier	Description	Data (hex)
		and the second rising edge resets the alarm.
602	Remote Shutdown	2B F7 21 01 00 02 00 00

Additional SDO communication channels

It is also possible to allow several PLCs to start/stop/acknowledge the unit in addition to the default SDO communication channel. Four additional SDO communication channels are provided for this. The additional SDO 127 (dec) is used in the following example.

⚙

1. ▷ **Configure an additional SDO communication channel**
Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Additional Server SDOs].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
12801	2. Node ID	127 (dec) = 7F (hex)	SDO communication channel is configured to 127

▶ With this setting, an additional SDO communication channel is configured to 127.

The control request is equal to the request via default SDO communication channel, but the device will listen to messages including the configured address as well.

The device listens to the CAN ID 600 (hex) + 2. Node-ID internally to perform the desired control, the reply from the easY-I is sent on CAN ID 580 (hex) + 2. Node-ID.

- Receive CAN ID 67F (hex) (600 (hex) + 7F (hex))
- Receive CAN ID 5FF (hex) (580 (hex) + 7F (hex))

The same is valid for the additional SDO communication channels 3, 4, and 5.

The following table shows exemplary request data for the device on the CANopen bus.

Identifier	Description	Data (hex)
67F	Remote Start	2B F7 21 01 01 00 00 00
67F	Remote Stop	2B F7 21 01 02 00 00 00
67F	Remote Acknowledge	2B F7 21 01 10 00 00 00
67F	Remote Shutdown	2B F7 21 01 00 02 00 00



If parameters are written or read via two or more SDO communication channels at the same time (before the first has answered), the second one will be refused.

Released

6.4.1.2 Transmitting A Frequency Setpoint

It is possible to transmit a frequency setpoint value via the CANopen protocol. Prerequisite for the use of a frequency setpoint via an interface is the configuration of the frequency setpoint sources with AnalogManager "AM Frequency SP1[Hz]" ⮡ 5518 or AnalogManager "AM Frequency SP2[Hz]" ⮡ 5519. Refer to ⮡ “4.4.4.4 Frequency Control” for detailed information.

The respective frequency setpoint source is to be configured to "05.53 Interface f setp [Hz]".

Two different methods to transmit a frequency setpoint via CANopen are detailed below.

These are "Transmitting a frequency setpoint via RPDO" and "Transmitting a frequency setpoint via default SDO communication channel". The advantages and the disadvantages of these two methods are as follows.

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 128: Comparison

6.4.1.2.1 RPDO

Configure CAN interface 1

CANopen Master (parameter ⮡ 8993) must be enabled, if there is no PLC taking over the master function.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].

2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

Configure RPDO

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	COB-ID set to 00000321
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00509	The 1st mapped object is set to control parameter 509.

▶

Setting the COB-ID to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 509 of the device as mapped object 1.

Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus.

A frequency setpoint of 50.60 Hz is transmitted:

- 5060 (dec) = 13C4 (hex) → C4 13 according to the CANopen protocol

ID (hex)	Description	Data (hex)
321	Remote F setpoint	C4 13

6.4.1.2.2 Default SDO Communication Channel

Another possibility for transmitting a frequency setpoint is to send the value via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node-ID.

The following example shows the send format on CANopen with Node-ID 1.

The value is sent on the bus via the control parameter 509 of the device.

The hexadecimal value 2000 is calculated internally:

- 509 (dec) -- 1FD (hex)
- 1FD (hex) + 2000 (hex) = 21FD (hex)

Released

Please note that high and low bytes are exchanged in the sent value.

The data (hex) shows the state of parameter 509 to achieve the required control.

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601	Remote F setpoint	2B FD 21 01 C4 13 00 00

6.4.1.3 Transmitting A Voltage Setpoint

It is possible to transmit a voltage setpoint value via the CANopen protocol. Prerequisite for the use of a voltage setpoint via an interface is the configuration of the voltage setpoint sources with AnalogManager "AM Voltage SP1 [V]" ↳ 5618 or AnalogManager "AM Voltage SP2 [V]" ↳ 5619.

Refer to ↳ “4.4.4.1 Voltage Control” for detailed information.

The respective voltage setpoint source is to be configured to "05.59 Interface v setp [V]".

Two different methods to transmit a voltage setpoint setpoint via CANopen are detailed below.

These are "Transmitting a voltage setpoint via RPDO" and "Transmitting a voltage setpoint via default SDO communication channel". The advantages and the disadvantages of these two methods are as follows.

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 129: Comparison

6.4.1.3.1 RPDO

Configure CAN interface 1

CANopen Master (parameter ↳ 8993) must be enabled, if there is no PLC taking over the master function.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].
2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

Configure RPDO

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	COB-ID set to 00000321.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00510	The 1st mapped object is set to control parameter 510.

▶

Setting the COB-ID to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 510 of the device as mapped object 1.

Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus in line 1.

A voltage setpoint of 412 V is transmitted:

- 412 (dec) = 019C (hex) → 9C 01 according to the CANopen protocol

ID (hex)	Description	Data (hex)
321	Remote V setpoint	9C 01 00 00

Released

6.4.1.3.2 Default SDO Communication Channel

Another possibility for transmitting a voltage setpoint is to send the value via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node ID.

The following example shows the send format on CANopen with Node ID 1.

The value is sent on the bus via the control parameter 510 of the device.

The hexadecimal value 2000 is calculated internally:

- 510 (dec) - 1FE (hex)
- 1FE (hex) + 2000 (hex) = 21FE (hex)



Please note that high and low bytes are exchanged in the sent value.

ID (hex)	Description	Data (hex)
601	Remote V setpoint	23 FE 21 01 9C 01 00 00

The data (hex) shows the state of parameter 510 to achieve the required control.

6.4.1.4 Transmitting A Power Factor Setpoint

It is possible to transmit a power factor setpoint value via the CANopen protocol. Prerequisite for the use of a power factor setpoint via an interface is the configuration of the power factor setpoint source "AM PF/kvar SP1[-/kvar]" (parameter ↳ 5638 or parameter "AM PF/kvar SP2[-/kvar]" ↳ 5639).

Refer to ↳ “4.4.4.2 Power Factor Control” for detailed information.

The respective power factor setpoint source is to be configured to "05.12 Interface PF sp [%]".

Two different methods to transmit a power factor setpoint via CANopen are detailed below.

These are "Transmitting a power factor setpoint via RPDO" and "Transmitting a power factor setpoint via default SDO communication channel". The advantages and the disadvantages of these two methods are as follows.

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 130: Comparison

Released

6.4.1.4.1 RPDO

CANopen Master (parameter 8993) must be enabled, if there is no PLC taking over the master function.

⚙ **Configure CAN interface 1**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].
2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

⚙ **Configure RPDO**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].
2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	COB-ID set to 00000321.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00508	The 1st mapped object is set to control parameter 508.

▶



Setting the COB-ID to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 508 of the device as mapped object 1.



Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus. A power factor setpoint of 0.85 capacitive/leading is transmitted (64689 (dec) [65536-850] = FCAE (hex) → AE FC according to the CANopen protocol) in line 1. Please note that

Released

negative (capacitive or leading) power factor values are deducted from 65536 (dec) or FFFF (hex).

A power factor setpoint of 0.9 inductive/lagging is transmitted in line 2:

- 900 (dec) = 0384 (hex) → 84 03 according to the CANopen protocol.

A power factor setpoint of 1.0 is transmitted in line 3:

- 1000 (dec) = 03E8 (hex) → E8 03 according to the CANopen protocol

ID (hex)	Description	Data (hex)
321	Remote PF Ld 085	AE FC
321	Remote PF LG 090	84 03
321	Remote PF 1.00	E8 03

6.4.1.4.2 Default SDO Communication Channel

Another possibility for transmitting a power factor setpoint is to send the value via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node-ID.

The following example shows the send format on CANopen with Node-ID 1.

The value is sent on the bus via the control parameter 508 of the device.

The hexadecimal value 2000 is calculated internally:

- 508 (dec) -- 1FC (hex)
- 1FC (hex) + 2000 (hex) = 21FC (hex)



Please note that high and low bytes are exchanged in the sent value.

The data (hex) shows the state of parameter 508 to achieve the required control.

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601	Remote PF Ld 085	2B FC 21 01 AE FC 00 00
601	Remote PF LG 090	2B FC 21 01 84 03 00 00
601	Remote PF 1.00	2B FC 21 01 E8 03 00 00

6.4.1.5 Transmitting A Power Setpoint

It is possible to transmit a power setpoint value via the CANopen protocol. Prerequisite for the use of a power setpoint via an interface is the configuration of the power setpoint sources with AnalogManager "AM ActPower SP1 [kW]" 5539, AnalogManager "AM

ActPower SP2 [kW]" ↳ 5540, "AM ActPower SP3 [kW]" ↳ 5606 or "AM ActPower SP4 [kW]" ↳ 5609.

Refer to ↳ “4.4.4.5 Load Control” for detailed information).

The respective power setpoint source is to be configured to "05.56 Interface P setp [kW]".

Please note that the type of the power setpoint (Steady, Import, or Export) must also be defined by parameter "Load setpoint 1", (↳ 5526), parameter "Load setpoint 2" (↳ 5527 for), parameter "Load setpoint 3" (↳ 5796) or parameter "Load setpoint 4" (↳ 5999).

Two different methods to transmit a power setpoint via CANopen are detailed below.

These are "Transmitting a power setpoint via RPDO" and "Transmitting a power setpoint via default SDO communication channel". The advantages and the disadvantages of these two methods are as follows.

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 131: Comparison

6.4.1.5.1 RPDO

Configure CAN interface 1

CANopen Master (parameter ↳ 8993) must be enabled, if there is no PLC taking over the master function.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].

2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

Configure RPDO

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

Released

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	COB-ID set to 00000321.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00507	The 1st mapped object is set to control parameter 507.

▶

Setting the COB-ID to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 507 of the device as mapped object 1.

Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus in line 1.

A power setpoint of 1000.0 kW is transmitted:

- 10000 (dec) = 2710 (hex) → 10 27 according to the CANopen protocol

ID (hex)	Description	Data (hex)
321	Remote P setpoint	10 27 00 00

6.4.1.5.2 Default SDO Communication Channel

Another possibility for transmitting a power setpoint is to send the value via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node-ID.

The following example shows the send format on CANopen with Node-ID 1.

The value is sent on the bus via the control parameter 507 of the device.

The hexadecimal value 2000 is calculated internally:

- 507 (dec) -- 1FB (hex)
- 1FB (hex) + 2000 (hex) = 21FB (hex)

Released

Please note that high and low bytes are exchanged in the sent value.

ID (hex)	Description	Data (hex)
601	Remote P setpoint	23 FB 21 01 10 27 00 00

The data (hex) shows the state of parameter 507 to achieve the required control.

The table above shows exemplary send data for the device on the CANopen bus in line 2.

6.4.1.6 Transmitting Multiple Setpoints

A single RPDO can transmit multiple objects. The receive PDO can be used for four objects with 16 bits (2 bytes).

If larger objects - for example 32 bits (4 bytes), like for voltage and power setpoints - are used, the maximum number of objects is reduced.

Configure RPDO

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	"COB-ID" set to 00000321.
9910	Number of Mapped Objects	3	Three mapped objects are configured
9911	1. Mapped Object	00509	The "1. Mapped Object" is set to control parameter 509.
9912	2. Mapped Object	00507	The "2. Mapped Object" is set to control parameter 507.
9913	3. Mapped Object	00508	The "3. Mapped Object" is set to control parameter 508.

▶

Setting the "COB-ID" to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 3 since 3 mapped object are used. The request on the bus is sent with the control parameters 509, 507, and 508 of the device as the mapped objects.

Released



Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus in line 1. The following setpoints are transmitted:

- Frequency 50.6 Hz (5060 (dec) = 13C4 (hex) → C4 13 according to the CANopen protocol)
- Power 1000 kW (10000 (dec) = 2710 (hex) → 10 27 according to the CANopen protocol)
- Power factor 0.9 lagging (900 (dec) = 0384 (hex) → 84 03 according to the CANopen protocol)

ID (hex)	Description	Data (hex)
321	Remote F P PF setpoint	C4 13 10 27 00 00 84 03

6.4.1.7 Remotely Changing The Setpoint

It is possible to remotely switch between pre-defined setpoints. This is available for active power, power factor, frequency, and voltage.

The bits 4 to 7 of parameter 504 (“9.3.2 Additional Data Identifier”) are carrying the settings and are available in CAN bus and Modbus protocols. Each bit may be used as input of the according setpoint switching LogicsManager.

ID	Parameter	Setting range	Data type
504	Remote control word 2	Yes / No	UNSIGNED 16

Table 132: Remote Control word »504«: switching between setpoints

In order to switch to another setpoint, the respective bit of object 21F8 (hex), i.e. parameter 504, must be enabled. The following bits are used for this:

Bit “x” of Parameter 504 ...	... remotely requests to switch to	... is available as LogicsManager command variable	... uses LogicsManager “y” to switch
Bit 4	Voltage setpoint 2	"04.37 Remote volt. setp. 2"	12920; "86.83 LM: Setp. 2 voltage"
Bit 5	Frequency setpoint 2	"04.38 Remote freq. setp. 2"	12918; "86.81 LM: Setpoint 2 freq."
Bit 6	Power factor setpoint 2	"04.39 Remote PF setp. 2"	12921: "86.84 LM: Setp.2 pwr.factor"
Bit 7	Active power setpoint 2	"04.40 Remote pwr. setp. 2"	12919; "86.82 LM: Setp. 2 load"
			12998; "87.67 LM: Setp. 3 load"
			12969; "87.75 LM: Setp. 4 load"
			Notes

Released

Bit “x” of Parameter 504 ...	... remotely requests to switch to	... is available as LogicsManager command variable	... uses LogicsManager “y” to switch
			This LogicsManager command variable can be used to switch to each available load setpoint.

Additionally/alternatively to remotely changing the control setpoints, it is possible to use "remote" setpoints (values) defined via interface instead of the internal setpoints as data source in the respective controller. For example, use data source "05.53 Interface f setp [Hz]" instead of "05.51 Internal f setp1 [Hz]" in AnalogManager "AM Frequency SP1[Hz]" ↳ 5518 to transmit a frequency setpoint via interface.

Two different methods for remotely switch between setpoints via CANopen are detailed below.

These are switching between setpoints via »RPDO« or »Default SDO communication channel«. The advantages and the disadvantages of these two methods are as follows:

RPDO	Default SDO communication channel
Classical communication for CANopen devices	Configuration process
One message	Two messages
No validation of the received answer	Validation answer, if message has been received by the unit
Only working in operational mode	May take longer in case of communication with two messages

Table 133: Comparison CANopen methods

6.4.1.7.1 RPDO

CANopen Master (parameter ↳ 8993) must be enabled, if there is no PLC taking over the master function.

⚙ **Configure CAN interface 1**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface / Configure CAN interface 1].

2. ▷ Configure the parameter listed below.

ID	Parameter	Value	Comment
8993	CANopen Master	On	CANopen Master is enabled.

⚙ **Configure RPDO**

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

Released

ID	Parameter	Value	Comment
9300	COB-ID	00000321 (hex)	COB-ID set to 00000321.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00504	The "1. Mapped Object" is set to control parameter 504.

▶

Setting the COB-ID to 321 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 504 of the device as mapped object 1.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus. The respective bits are enabled by sending the data of the respective lines.

ID (hex)	Description	Data (hex)
321	Remote P setpoint 2	80 00
321	Remote PF setpoint 2	40 00
321	Remote F setpoint 2	20 00
321	Remote V setpoint 2	10 00

6.4.1.7.2 Default SDO Communication Channel

Another possibility for changing a setpoint is to enable the bit via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 (hex) + Node-ID.

The following example shows the send format on CANopen with Node-ID 1.

The value is sent on the bus via the control parameter ID 504 of the device.

The hexadecimal value 2000 is calculated internally:

- 504 (dec) -- 1F8 (hex)
- 1F8 (hex) + 2000 (hex) = 21F8 (hex)

Please note that high and low bytes are exchanged in the sent value.

The data (hex) shows the state of parameter 504 to achieve the required control.

The following table shows exemplary send data for the device on the CANopen bus.

Identifier	Description	Data (hex)
601	Remote P setpoint 2	2B F8 21 01 80 00 00 00
601	Remote PF setpoint 2	2B F8 21 01 40 00 00 00
601	Remote F setpoint 2	2B F8 21 01 20 00 00 00
601	Remote V setpoint 2	2B F8 21 01 10 00 00 00

6.4.1.8 Transmitting A Remote Control Bit

It is possible to transmit a remote control bit via the CANopen protocol. Such a remote control bit can be sent by a PLC to remotely control the easY-I if this remote control bit is used as a command variable in a LogicsManager function.

Configure RPDO

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Receive PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9300	COB-ID	00000334 (hex)	"COB-ID" set to 00000334.
9910	Number of Mapped Objects	1	One mapped object is configured
9911	1. Mapped Object	00505	The "1. Mapped Object" is set to control parameter 505.

▶

Setting the COB-ID to 334 (hex) is exemplary; usually, the PDOs are in the range of 181 (hex) to 57F (hex).

With this setting, the Receive PDO is set to the address, for which the device is listening on the bus. The "Number of Mapped Objects" is 1 since 1 mapped object is used. The request on the bus is sent with the control parameter 505 of the device as mapped object 1.

Refer to “9.3.2 Additional Data Identifier” for a list of additional parameter groups.

CANopen message

The following table shows exemplary send data for the device on the CANopen bus.

Released

Remote control bit 1 is set:

- 1 (dec) = 0001 (hex) → 01 00 according to the CANopen protocol

ID (hex)	Description	Data (hex)
334	Remote Control Bit 1 (PDO)	01 00

6.4.1.8.1 Default SDO Communication Channel

Another possibility for transmitting a power setpoint is to send the value via default SDO communication channel. The device listens to the CAN ID 600 (hex) + Node-ID internally to perform the desired control, the reply is on CAN ID 580 hex) + Node-ID.

The following example shows the send format on CANopen with Node-ID 1.

The value is sent on the bus via the control parameter 249 of the device.

The hexadecimal value 2000 is calculated internally:

- 249 (dec) -- 1F9 (hex)
- 1FB (hex) + 2000 (hex) = 21F9 (hex)



Please note that high and low bytes are exchanged in the sent value.

ID (hex)	Description	Data (hex)
601	Remote Control Bit 1 (SDO)	2B F9 21 01 01 00 00 00

The data (hex) shows the state of parameter 249 to achieve the required control.

The table above shows exemplary sends data for the device on the CANopen bus in line 2.

6.4.2 Sending A Data Protocol via TPDO

Note: This is a place holder for the future capability to send protocols out by TPDO. This is currently in this version not supported.

This is a configuration example for sending an object (data protocol 5003) on CAN ID 2AE (hex) every 20 ms on TPDO1. For this, TPDO1 must be configured as follows:

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Transmit PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9600	COB-ID	000002AE (hex)	COB-ID set to 000002AE.
9602	Transmission type	255	The number of required sync messages is set to 255.
9604	Event timer	20 ms	Object is sent every 20 ms.
8962	Selected Data Protocol	5003	Data protocol 5003 is used.
9609	Number of Mapped Objects	0	No mapped object is configured

The data to be sent (Mapped Objects) may be provided on request by configuring the "COB-ID SYNC Message" (parameter ↳ 9100) and the "Transmission type" (parameter ↳ 9602, ↳ 9612, ↳ 9622, ↳ 9632, or ↳ 12793) of a TPDO. The unit is requested to send its data by sending a Sync Message.

The number of required Sync Messages is determined by the setting of the Transmission Type.

If the data is to be sent on request, Bit 30 of the "COB-ID SYNC Message" (parameter ↳ 9100) must be configured to "0" and the "CANopen Master" (parameter ↳ 8993) function must be configured to "Off".

Additional example

The "Transmission type" of TPDO 1 (parameter ↳ 9602) is configured to "2" in the following example. This means that a message of the configured TPDO is sent by the unit after two Sync Messages have been sent to the unit.

⚙

1. ▷ Either on the front panel or using ToolKit navigate to menu [Configure CAN interface 1 / Transmit PDO 1].

2. ▷ Configure the parameters listed below.

ID	Parameter	Value	Comment
9600	COB-ID	000002AE (hex)	COB-ID set to 000002AE.
9602	Transmission type	2	The number of required sync messages is set to 2.
9604	Event timer	20 ms	Object is sent every 20 ms.
8962	Selected Data Protocol	5003	Data protocol 5003 is used.
9609	Number of Mapped Objects	0	No mapped object is configured

The recorded data shows that the data of the Mapped Object (in this example Mux 5) is sent (↳ Table 134) after sending the Sync Message twice (↳ Table 135).

Released

ID (hex)	Description	Data (hex)
80	-	-

Table 134: Cyclical sending of data - sync message request

No.	Count	ID (hex)	Data (hex)
1	2	80	-
2	1	2AE	8B 13

Table 135: Cyclical sending of data - reply

6.4.3 Troubleshooting

General diagnosis

Error	Possible diagnosis
Connected device (Phoenix I/O board) cannot be configured	Are all LEDs at the expansion modules illuminated green (i.e. correctly connected)?
	Are all modules detected (i.e. no blinking expansion module)?

CAN interface 1 (guidance level) diagnosis

Error	Possible diagnosis
No data is sent by the Woodward controller	Is the unit in operational mode (heartbeat - CAN ID 700 (hex) + Node-ID has the content 5 (hex)?
	Are the TPDOs correctly configured (CAN ID, mapping, parameter)?
No data is received by the Woodward controller	Is the unit in operational mode (heartbeat - CAN ID 700 (hex) + Node-ID has the content 5 (hex)?
	Are the RPDOs correctly configured (CAN ID, mapping, parameter)?
No monitoring bit data is received on the RPDO	Is the CAN bus connected correctly?
	Is the baud rate configured correctly?
	Is the CAN ID assigned more than once?
	Is the unit in operational mode? If not, start it via another device or put in NMT Master (parameter 8993).
	No SDOs (configuration messages) are received by the unit
No SDOs (configuration messages) are received by the unit	Is the CAN ID assigned more than once?
	Is the CAN ID 600 (hex) + Node-ID of the easY-I already used in a PDO (COB-ID)?
	Are RPDOs or TPDOs higher then 580 (hex) or lower than 180 (hex) used?

Released

6.5 Modbus Applications

Data Format(s)

Modbus registers are read and written according to the Modbus standard as Big-endian.

Composite data types like LOGMAN, ANALOGMANAGER, and TEXT use separate descriptions.

6.5.1 Remote Control

6.5.1.1 Remote Start/Stop, Shutdown, And Acknowledgment

The Woodward controller may be configured to perform start/stop/Acknowledgment functions remotely through the Modbus protocol. The required procedure is detailed in the following steps.

Please find remote control parameter 505 described at: “ Remote control word 3”. It works similar like 503 described below.

The following descriptions refer to the remote control parameter 503 as described in “9.3.2 Additional Data Identifier”.

It may be necessary to shift the address by 1 depending on the used PC software. In this case, the address would be 504 for example.

Be sure to check both possibilities in case of remote control problems.

ID	Parameter	Setting range	Data type
503	Remote control 1	0 to 65535	UNSIGNED 16

- Modbus address = 40000 + (Par. ID +1) = 40504
- Modbus length = 1 (UNSIGNED 16)

In order to issue a command, the respective bit of object 21F7 (hex), i.e. parameter 503, must be enabled. The following bits are used for this:

- Bit 0 Start bit:

  This bit activates the LogicsManager command variable "04.13 Remote request" and enables a remote start.

- Bit 1 Stop bit:

  This bit deactivates the LogicsManager command variable "04.13 Remote request" and disables a remote start.

- Bit 4 Acknowledgment bit:

  This bit activates the LogicsManager command variable "04.14 Remote acknowledge". This bit must be set and reset twice to acknowledge an alarm

completely. The first rising edge disables the horn and the second rising edge resets the alarm.

- Bit 9 Shutdown Command bit:

  This bit activates the LogicsManager command variable "03.40 Remote Shutdown-Status". With this function the system is immediately shut down. This works independent from beaker conditions.

The following Modscan32 screenshot (↳ Fig. 260) shows the configurations made to remote control parameter 503. It is possible to set the format to binary to view single bits using the "display options".

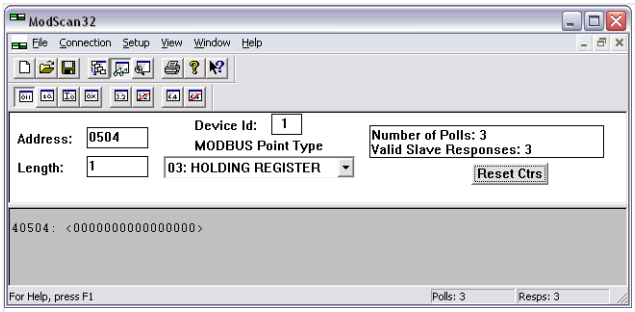


Fig. 260: Modbus - remote control parameter 503

Example 1: Start Request

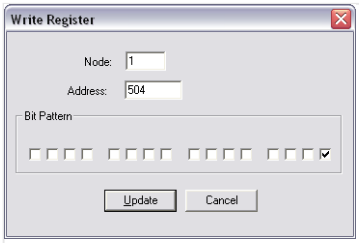


Fig. 261: Modbus - write register - start request

By double-clicking the address, a Write Register command may be issued.

↳ Fig. 261 shows how bit 0 is set using the ModScan32 Software.

Example 2: Stop Request

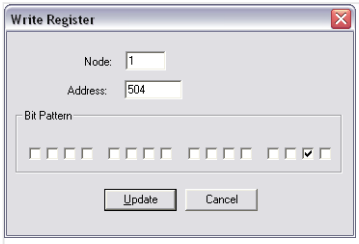


Fig. 262: Modbus - write register - stop request

By double-clicking the address, a Write Register command may be issued.

↳ Fig. 262 shows how bit 1 is set using the ModScan32 Software.

Example 3: External Acknowledge

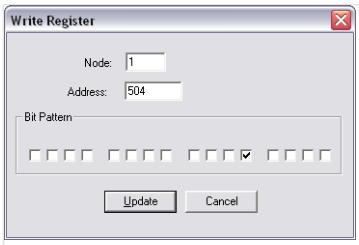


Fig. 263: Modbus - write register - external acknowledge

By double-clicking the address, a Write Register command may be issued.

↳ Fig. 263 shows how bit 4 is set using the ModScan32 Software.

Example 4: Shutdown Command

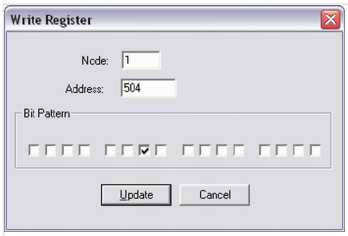


Fig. 264: Modbus - write register - shutdown command

By double-clicking the address, a Write Register command may be issued.

↳ Fig. 264 shows how bit 9 is set using the ModScan32 Software.

Sample for Free alarm 1

This (remote) shutdown request can be taken by LogicsManager equation 12230 to set Flag 1 (see ↳ Fig. 265). To perform an immediately shutdown, the free alarm has to be configured as alarm Class F. Free alarm 1 configuration ↳ Fig. 266 shows how the Monitoring source LM ↳ 8120 »Free alarm 1« is set to Flag 1 and the Alarm class 8121 is set to Class F.

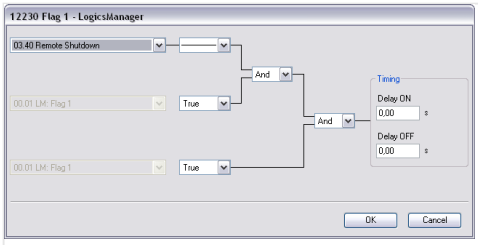


Fig. 265: LM 12230 Flag1

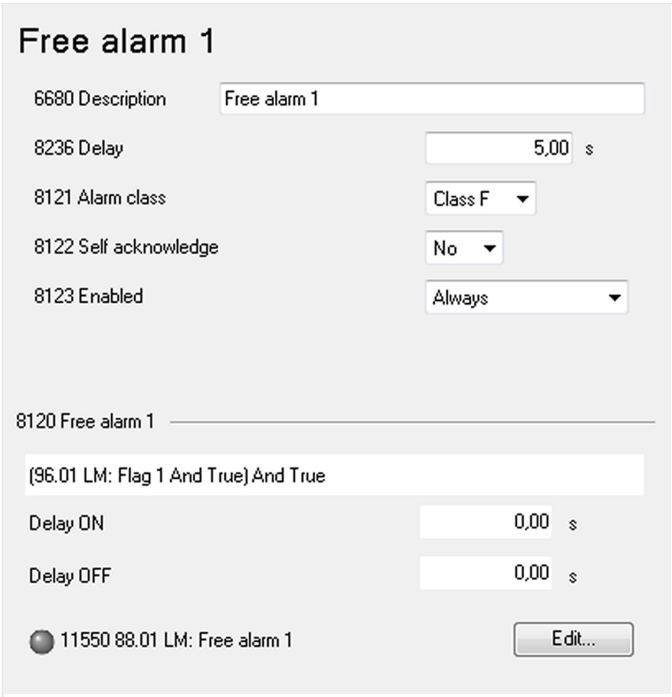


Fig. 266: LM Free-Alarms

6.5.1.2 Setpoint Setting

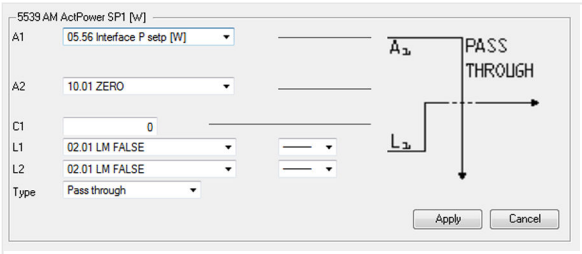


Fig. 267: Setpoint source selection

For a remote setting of the control setpoints, it is necessary to use the interface setpoints instead of the internal setpoints.

For example, use data source "05.56 Interface P setp [kW]" in AnalogManager "AM ActPower SP1 [kW]" ⮡ 5539 to transmit a load setpoint via interface. No password is required to write this value.

Screen shots beside show an exemplary configuration of the load setpoint 1 source. All other setpoint sources are configured accordingly.

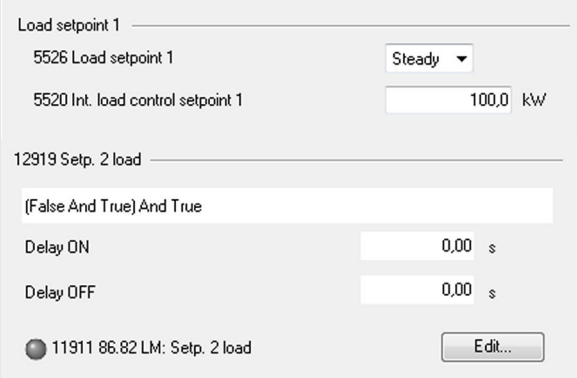


Fig. 268: Setpoint configuration

The interface setpoints may be set using the objects for active power, power factor, frequency, and voltage (refer to “9.3.2 Additional Data Identifier” for detailed information).

ID	Parameter	Setting range	Unit	Data type	Data source
507	Active Power Setpoint	-999999 to 999999	1/10 kW	INTEGER 32	05.56 Interface P setp [kW]
508	Power Factor Setpoint	-710 to 1000 to 710	-	INTEGER 16	05.12 Interface PF sp [%]
509	Frequency Setpoint	0 to 7000	1/100 Hz	UNSIGNED 16	05.53 Interface f setp [Hz]
510	Voltage Setpoint	50 to 650000	V	UNSIGNED 32	05.59 Interface v setp [V]
511	Reactive Power Setpoint	-999999 to 999999	1/10 kvar	INTEGER 32	05.83 Interf.kvar sp [kvar]

☼ **Example 1: Active power interface setpoint**

The active power setpoint value must be written to object 21FB (hex), i.e. parameter 507.

A power value of 50 kW = 500 (dec) = 01F4 (hex) is to be transmitted.

- Modbus address = 40000 + (Par. ID + 1) = 40508
- Modbus length = 2 (INTEGER 32)

The high word must be written to the lower address and the low word must be written to the higher address.

⚙

> To set the parameter address in ModScan32:

1. ▷

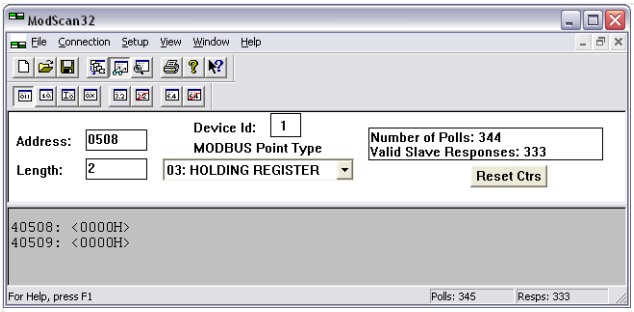


Fig. 269: Modscan32 at address 40508

Open the "Preset Multiple Registers" dialog by selecting [Setup / Extended / Preset Regs] from the menu.

2. ▷

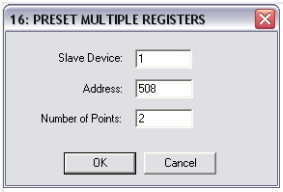


Fig. 270: "Preset Multiple Registers" dialog 1

Select »OK« and enter the desired values.

3. ▷

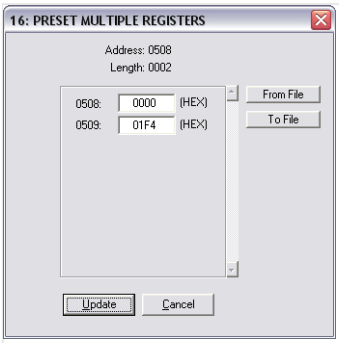


Fig. 271: "Preset Multiple Registers" dialog 2

Select »Update« to confirm the entered values.

▶ The dialog closes and the values are changed.

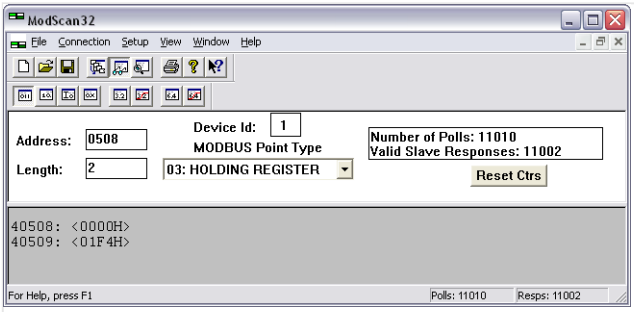


Fig. 272: Modscan32 at address 40508

☼ **Example 2: Power factor interface setpoint**

The power factor setpoint value must be written to object 21FC (hex), i.e. parameter 508.

A power factor of 1 = 1000 (dec) = 03E8 (hex) is to be transmitted.

- Modbus address = 40000 + (Par. ID + 1) = 40509
- Modbus length = 1 (UNSIGNED 16)

⚙

> To set the parameter address in ModScan32:

1. ▷

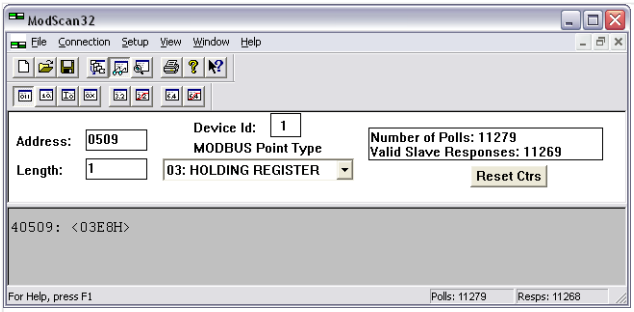


Fig. 273: Modscan32 at address 40509

Analogous to Chapter 6.5.1.2 set the parameter address as shown in Fig. 273.

☼ **Example 3: Frequency interface setpoint**

The frequency setpoint value must be written to object 21FD (hex), i.e. parameter 509.

A frequency value of 50.00 Hz = 5000 (dec) = 1388 (hex) is to be transmitted.

- Modbus address = 40000 + (Par. ID + 1) = 40510
- Modbus length = 1 (UNSIGNED 16)

⚙

> To set the parameter address in ModScan32:

1. ▷

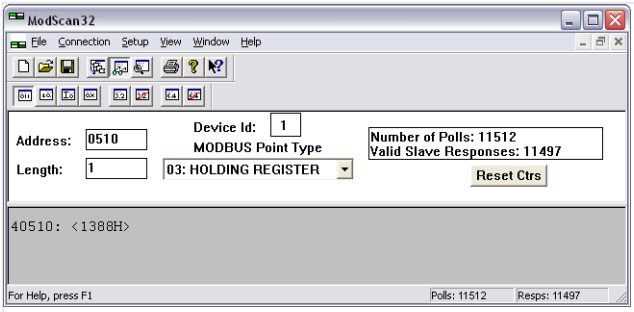


Fig. 274: Modscan32 at address 40510

Analogous to Chapter 6.5.1.2 set the parameter address as shown in Fig. 274.

Released

☼ **Example 4: Voltage interface setpoint**

The voltage setpoint value must be written to object 21FE (hex), i.e. parameter 510.

A voltage value of 400 V = 400 (dec) = 0190 (hex) is to be transmitted.

- Modbus address = 40000 + (Par. ID + 1) = 40511
- Modbus length = 2 (UNSIGNED 32)

The high word must be written to the lower address and the low word must be written to the higher address.

⚙

> To set the parameter address in ModScan32:

1. ▷

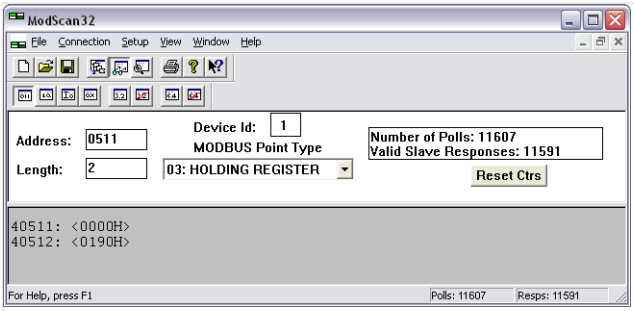


Fig. 275: Modscan32 at address 40511

Analogous to ⮡ Chapter 6.5.1.2 set the parameter address as shown in ⮡ Fig. 275.

6.5.1.3 Remotely Changing The Setpoint

It is possible to remotely switch between pre-defined setpoints. This is available for active power, power factor, frequency, and voltage.

The bits 4 to 7 of parameter 504 (⮡ “9.3.2 Additional Data Identifier”) are carrying the settings and are available in CAN bus and Modbus protocols. Each bit may be used as input of the according setpoint switching LogicsManager.

ID	Parameter	Setting range	Data type
504	Remote control word 2	Yes / No	UNSIGNED 16

Table 136: Remote Control word »504«: switching between setpoints

In order to switch to another setpoint, the respective bit of object 21F8 (hex), i.e. parameter 504, must be enabled. The following bits are used for this:

Bit “x” of Parameter 504 ...	... remotely requests to switch to	... is available as LogicsManager command variable	... uses LogicsManager “y” to switch
Bit 4	Voltage setpoint 2	"04.37 Remote volt. setp. 2"	12920; "86.83 LM: Setp. 2 voltage"
Bit 5	Frequency setpoint 2	"04.38 Remote freq. setp. 2"	12918; "86.81 LM: Setpoint 2 freq."

Bit “x” of Parameter 504 ...	... remotely requests to switch to	... is available as LogicsManager command variable	... uses LogicsManager “y” to switch
Bit 6	Power factor setpoint 2	"04.39 Remote PF setp. 2"	12921: "86.84 LM: Setp.2 pwr.factor"
Bit 7	Active power setpoint 2	"04.40 Remote pwr. setp. 2"	12919; "86.82 LM: Setp. 2 load"
			12998; "87.67 LM: Setp. 3 load"
			12969; "87.75 LM: Setp. 4 load"
			Notes This LogicsManager command variable can be used to switch to each available load setpoint.

☼ **Example**

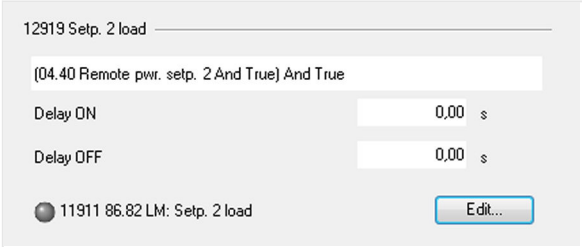


Fig. 276: Remotely switch Setp. 2 load

The active power setpoint 2 is to be enabled. Therefore LM 12919 is prepared using 04.40 (see beside).
The switching signal than comes remotely e.g. as described below:

- Modbus address = 40000 + (Par. ID + 1) = 40505
- Modbus length = 1 (UNSIGNED 16)

⚙

> To set the bits in ModScan32:

1. ▷

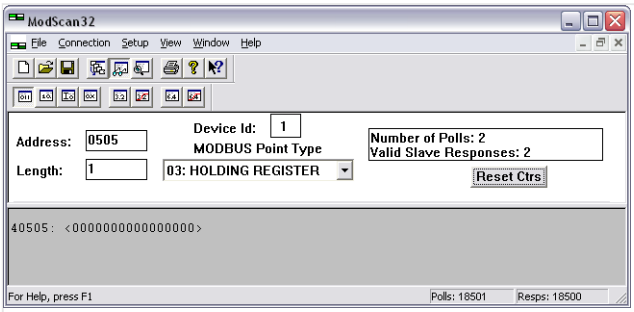


Fig. 277: ModScan32 single bit view

Using the "display options" set the format to binary to view single bits (↳▷ Fig. 277).

2. ▷ Double-click the address to issue a `Write Register` command.

▶

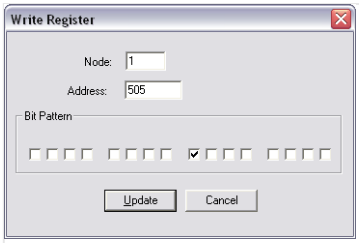


Fig. 278: Active power setpoint

↳ Fig. 278 shows how bit 7 is set to enable the active power setpoint 2.

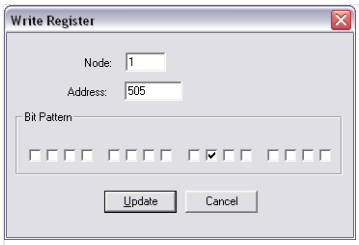


Fig. 279: Power factor setpoint

↳ Fig. 279 shows how bit 6 would be set to enable the power factor setpoint 2.

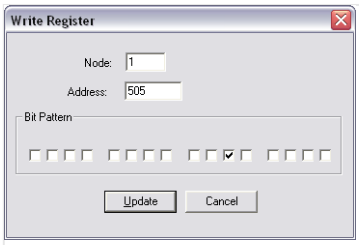


Fig. 280: Frequency setpoint

↳ Fig. 280 shows how bit 5 would be set to enable the frequency setpoint 2.

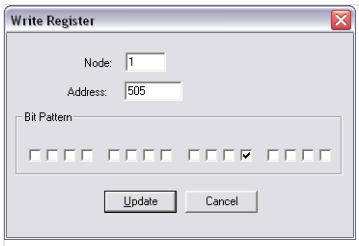


Fig. 281: Voltage setpoint

↳ Fig. 281 shows how bit 4 would be set to enable the voltage setpoint 2.

Additionally/alternatively to remotely changing the control setpoints, it is possible to use "remote" setpoints (values) defined via interface instead of the internal setpoints as data source in the respective controller. For example, use data source "05.53 Interface f setp [Hz]" instead of "05.51 Internal f setp1 [Hz]" in AnalogManager "AM Frequency SP1[Hz]" ↳ 5518 to transmit a frequency setpoint via interface.

6.5.2 Changing Parameter Settings

6.5.2.1 Parameter Setting

The example tables below are excerpts. Refer to the following chapters for the complete parameter lists:

- “4.3.4 Enter Password”
- “4.6 Configure Measurement”

Be sure to enter the password for the code level that is needed to get access for changing parameter settings via the preferred interface.

The new entered value must comply with the parameter setting range when changing the parameter setting.

Example 1: Addressing the generator rated voltage

ID	Parameter	Setting range	Data type
1766	Generator rated voltage	50 to 650000 V	UNSIGNED 32

Example

- Modbus address = 40000 + (Par. ID + 1) = 41767
- Modbus length = 2 (UNSIGNED 32)

1. ▷

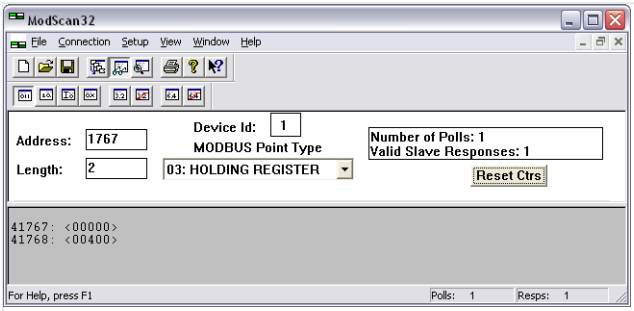


Fig. 282: Modscan32 at address 41767

Set the configuration to address parameter 1766 as shown in Fig. 282.

Released

Example 2: Addressing the generator voltage measuring

ID	Parameter	Setting range	Data type
1851	Generator voltage measuring	3Ph 4W 3Ph 3W 1Ph 2W 1Ph 3W 3Ph 4W OD	UNSIGNED 16

☼ **Example**

- Modbus address = 40000 + (Par. ID + 1) = 41852
- Modbus length = 1 (UNSIGNED 16)

If the setting range contains a list of parameter settings like in this example, the parameter settings are numbered and start with 0 for the first parameter setting. The number corresponding with the respective parameter setting must be configured.

⚙

1. ▷

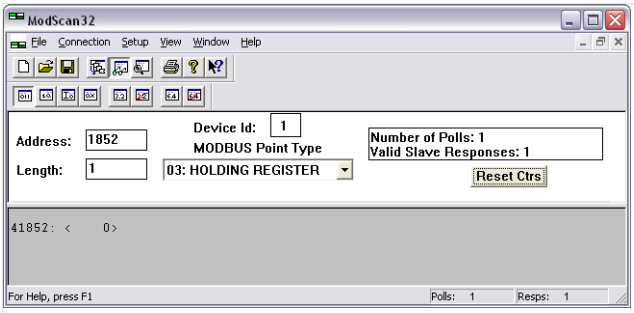


Fig. 283: Modscan32 at address 41852

Set the configuration to address parameter 1851 as shown in (↳▷ Fig. 283).

▶ The parameter is configured to "3Ph 4W".

6.5.2.2 Configuration Of LogicsManager Functions

Next to HMI and ToolKit, LogicsManager can also be configured via Modbus.

- The complete LogicsManager instruction set is available for Modbus control.
- Hex code equivalents are defined for all LogicsManager settings.
- The Modbus definition for a LogicsManager equation consists of 7 data words following a well defined sequence.

Word 0	Word 1	Word 2	Word 3	Word 4	Word 5	Word 6
Delay ON	Delay OFF	Logic equation 1	Logic equation 2	Command 1	Command 2	Command 3

Table 137: 7 words Modbus message

To send a LogicsManager function via Modbus follow these steps:

⚙

1. ▷ Define your LogicsManager equation
2. ▷ Describe the LogicsManager equation as "command chain" in hex code
3. ▷ Send the message via Modbus

Describe the LogicsManager equation as "command chain" in hex code (step 2)

The LogicsManager screens below show parts of the command chain. How to generate hex code words is described for each part of the Modbus message.

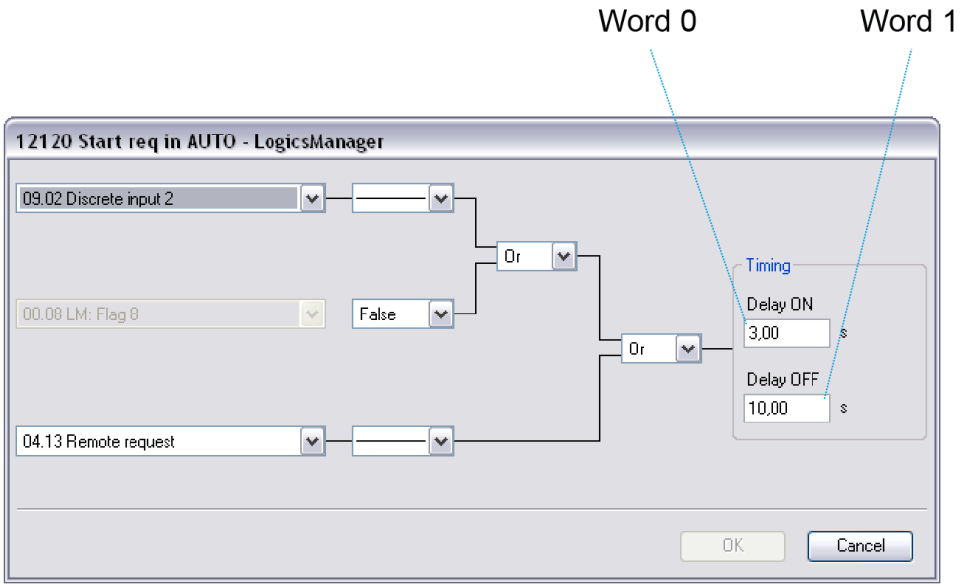


Fig. 284: LogicsManager command chain words 0 and 1

Word 0 and word 1 contain the hex code of the Delay times but in the reverse order of double-byte words, i.e. low byte before high byte.

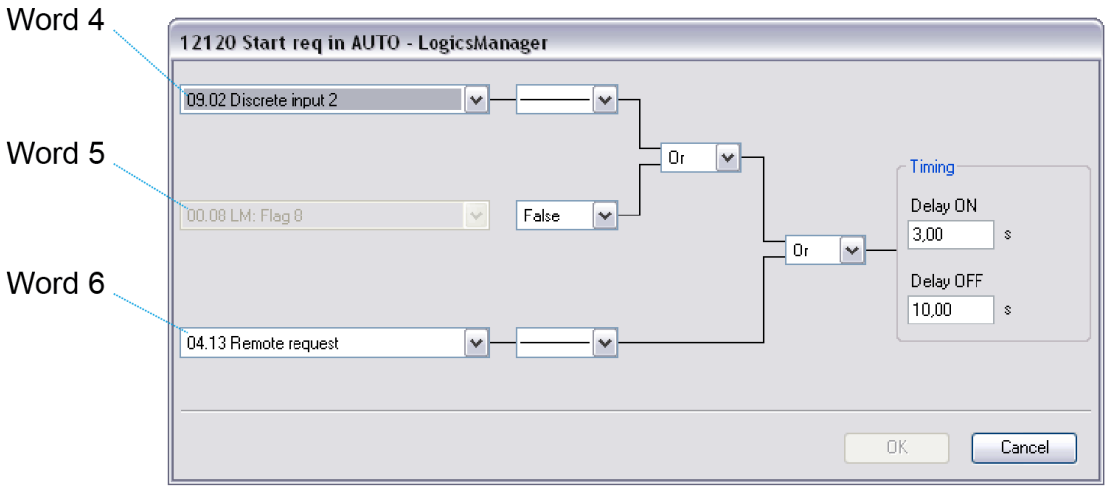


Fig. 285: LogicsManager command chain words 4, 5, and 6

Words 4, 5, and 6 contain the hex codes of the respective command variable ID's decimal value but in the reverse order of double-byte words, i.e. low byte before high byte.

The command variable prefix e.g., "04.13" is the number of the command variable not it's ID.

Refer to “9.4.2 Logical Command Variables” for the command variable IDs.

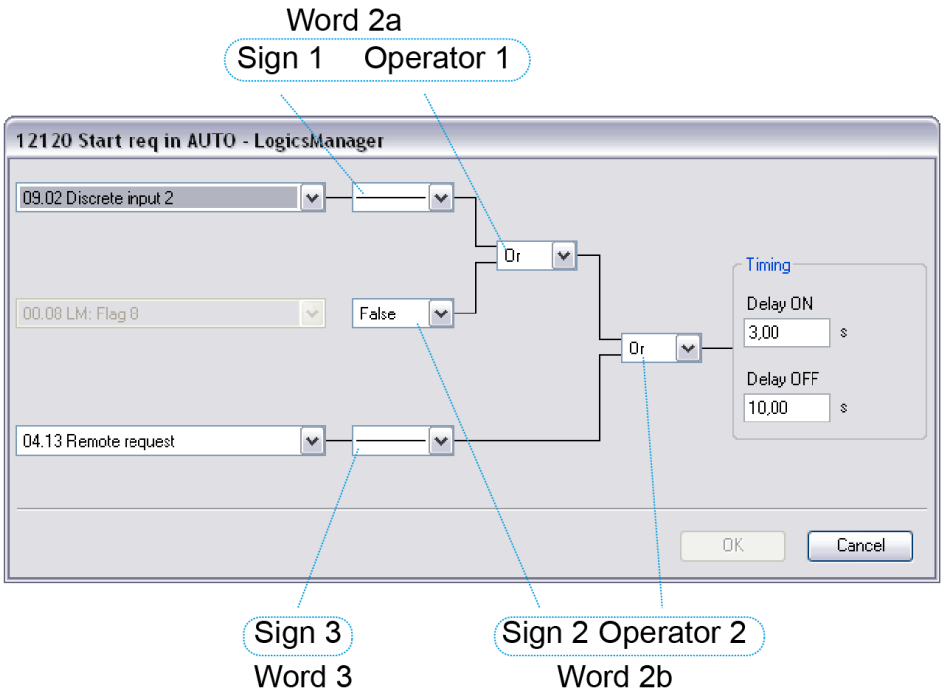


Fig. 286: LogicsManager command chain words 2 and 3

Words 2 and 3 contain a sequence of nibbles each representing a sign or operator of the equation.

The Data words table below shows the sequence how to arrange the LogicsManager setting that build the command chain.

Word 2				**Word 3**			
Sign 1	Operator 1	Sign 2	Operator 2	Sign 3	not used	not used	not used

Table 138: Data words 2 and 3 - details of the logic equations

Please find the hex code equivalents on the table below:

Signs		**Operators**	
"NOT"	0	"AND"	0
"—"	1	"NAND"	1
"TRUE"	2	"OR"	2
"FALSE"	3	"NOR"	3
		"XOR"	4
		"NOT-XOR"	5

Table 139: Hex code equivalents of the logic equations' nibbles

The hex code of words 2 and 3 is taken "as is" ¾ don't swap high byte and low byte.

Write the Modbus message (step 3)

It may be necessary to shift the address by 1 depending on the software you use for Modbus communication.

⚙

1. ▷ Copy the complete message of 7 words to the address [parameter number +1] in one step.

Word 0		Word 1		Word 2				Word 3				Word 4		Word 5		Word 6	
Delay ON		Delay OFF		Logic equation 1				Logic equation 2				Command 1		Command 2		Command 3	
low byte	high byte	low byte	high byte	Sign 1	Ope-rator 1	Sign 2	Ope-rator 2	Sign 3	0x00	0x00	0x00	low byte	high byte	low byte	high byte	low byte	high byte

Table 140: 7 words Modbus message in detail

Example

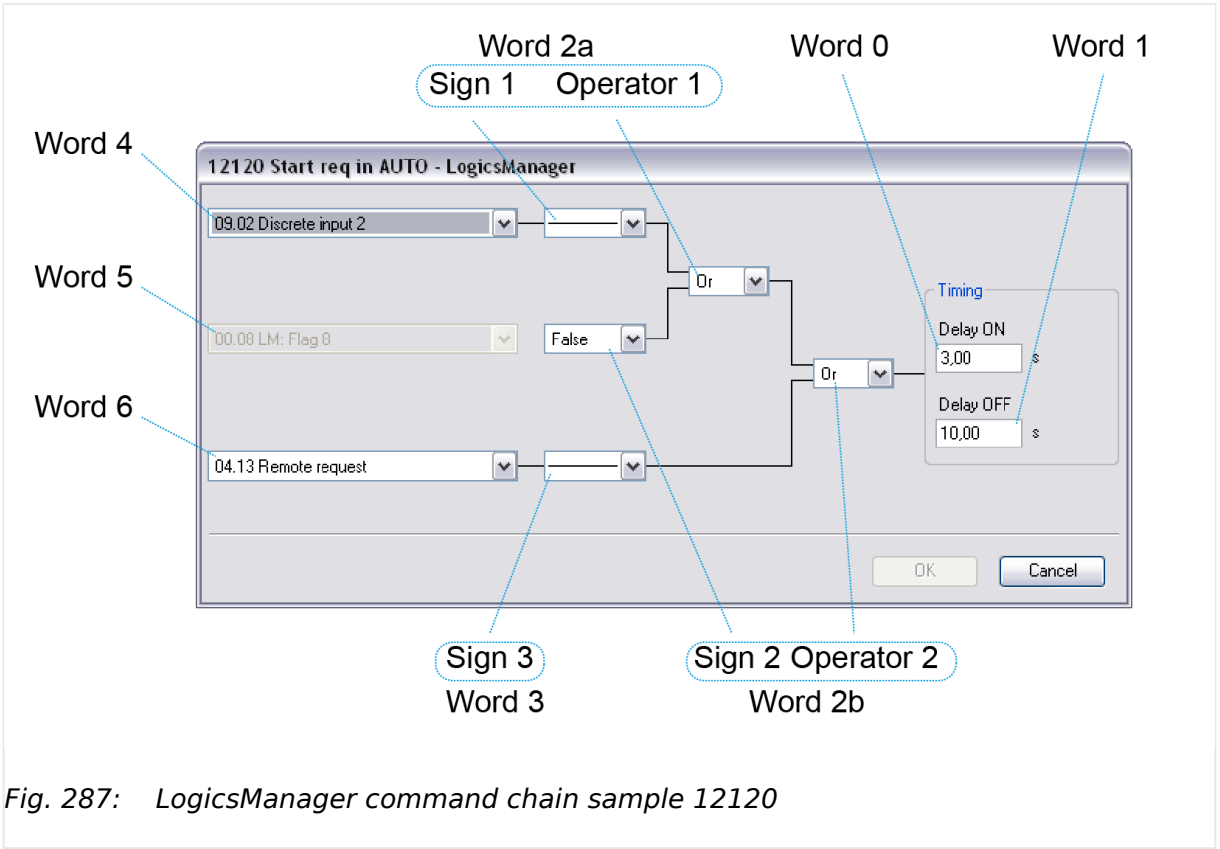


Fig. 287: LogicsManager command chain sample 12120

Word 0	Word 1	Word 2	Word 3	Word 4	Word 5	Word 6
Delay ON	Delay OFF	Logic equation 1	Logic equation 2	Command 1	Command 2	Command 3

Word 0		Word 1		Word 2				Word 3				Word 4		Word 5		Word 6	
3.00 sec		10.00 sec		¾	Or	False	Or	¾	-/-	-/-	-/-	No. 09.02 ID = 520 dec, 0208 hex		No. 00.08 ID = 7 dec, 0007 hex		No. 04.13 ID = 251 dec, 00FB hex	
low byte	high byte	low byte	high byte	Sign 1	Ope-rator 1	Sign 2	Ope-rator 2	Sign 3	0x00	0x00	0x00	low byte	high byte	low byte	high byte	low byte	high byte
2C	01	E8	03	1	2	3	2	1	0	0	0	08	02	07	00	FB	00

Table 141: 7 words Modbus message sample 12120 in detail

The Modbus message for the LogicsManager equation used for description above is 2C01 / E803 / 1232 / 1000 / 0802 / 0700 / FB00 (hex).

6.5.2.3 Configuration Of LogicsManager Functions For Remote Access

6.5.2.3.1 Basic remote control functions

The following chapters describe how to parametrize the LogicsManager via Modbus for the following basic remote control functions:

- Change to AUTOMATIC mode: 12510 "Operat. mode AUTO"
- Remote request start/stop: 12120 "Start req. in AUTO"
- Remote acknowledge: 12490 "Ext. acknowledge"
- Remote shutdown: 11669 "03.40 Remote Shutdown"
- Start without load: 12540 "Start w/o load"

6.5.2.3.2 Configuration of the LogicsManager "Operation mode AUTO"

To fix the operating mode use the LogicsManager function "86.16 LM: Operat. mode AUTO" (parameter 12510).

The LogicsManager function "Operat. mode AUTO" (parameter 12510) can be configured in two different ways:

- 1. Automatic operating mode is always enabled
- 2. Automatic operating mode is enabled via discrete input

Refer to "6.3.3 Performing Remote Start/Stop And Acknowledgment" for a detailed configuration of the LogicsManager via HMI or ToolKit.

Example

⚙

>

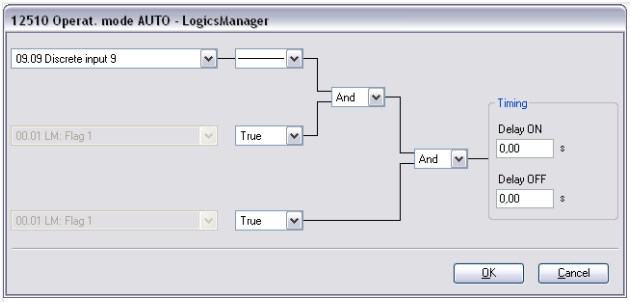


Fig. 288: LogicsManager function sample 12510

To configure the LogicsManager function "Operat. mode AUTO" (parameter ↳▷ 12510) as indicated in (↳▷ Fig. 288) the following Modbus message must be sent to the easY-I:
See table ↳▷ Table 142 below



* see ↳▷ Table 139 for reference

1. ▷

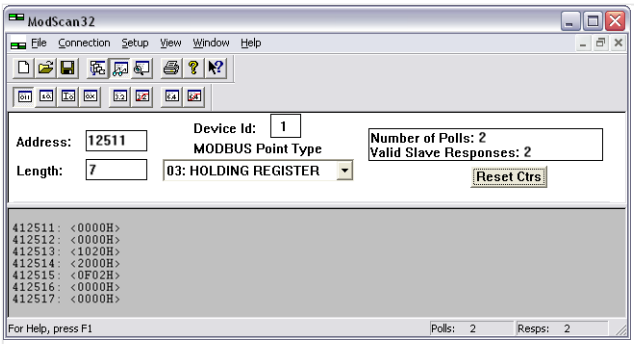


Fig. 289: Modscan32 at address 12511

Copy the complete message of 7 words to address 12511 ff (12510+1) in one step.
This is shown in ↳▷ Fig. 289 using the ModScan32 software.

Word 0		Word 1		Word 2				Word 3				Word 4		Word 5		Word 6	
Delay ON		Delay OFF		Logic equation 1*				Logic equation 2*				Command 1		Command 2		Command 3	
				Sign 1	Op. 1	Sign 2	Op. 2	Sign 3	-/-	-/-	-/-						
0.00 sec		0.00 sec		¾	And	True	And	True	00	00	00	No. 09.09 ID = 527 dec		No. 96.01 ID = 0 dec		No. 96.01 ID = 0 dec	
0000 (hex)		0000 (hex)		1	0	2	0	2	0	0	0	020F (hex)		0000 (hex)		0000 (hex)	
low byte	high byte	low byte	high byte	"as is"				"as is"				low byte	high byte	low byte	high byte	low byte	high byte

Word 0	Word 1	Word 2	Word 3	Word 4	Word 5	Word 6
0000 (hex)	0000 (hex)	1020 (hex)	2000 (hex)	0F02 (hex)	0000 (hex)	0000 (hex)

Table 142: "Operat. mode AUTO" message

If an shutdown alarm of alarm class C through F occurs in AUTOMATIC operating mode, the control does not return to STOP operating mode if the alarm is cleared after acknowledgment. This means that a restart is initiated.

6.5.2.3.3 Configuration Of Remote Start/Stop, Shutdown, And Acknowledgment

Refer to “6.3.3 Performing Remote Start/Stop And Acknowledgment” for a detailed configuration of the LogicsManager via HMI or ToolKit.

The easY-I may start, stop, shut down, or acknowledge alarms with CAN/Modbus. Therefore, two logical command variables (04.13 and 04.14) have to be configured with the LogicsManager. 03.40 can handle Remote shutdown only.

- 04.13 Remote request
- 04.14 Remote acknowledge
- 03.40 Remote Shutdown

6.5.2.3.4 Configuration Of LogicsManager Function "Start Request in AUTO"

The LogicsManager function "Start req. in AUTO" (parameter 12120) can be configured in a way that a start request in AUTOMATIC operating mode is enabled as soon as a remote request is issued.

Refer to “6.3.3 Performing Remote Start/Stop And Acknowledgment” for a detailed configuration of the LogicsManager via HMI or ToolKit.

The remote request may be enabled by setting bit 0 (start) of the remote control word 503 to HIGH and may be disabled by setting bit 1 (stop) of the remote control word 503 to HIGH (refer to “9.3.2 Additional Data Identifier”).

Example



>

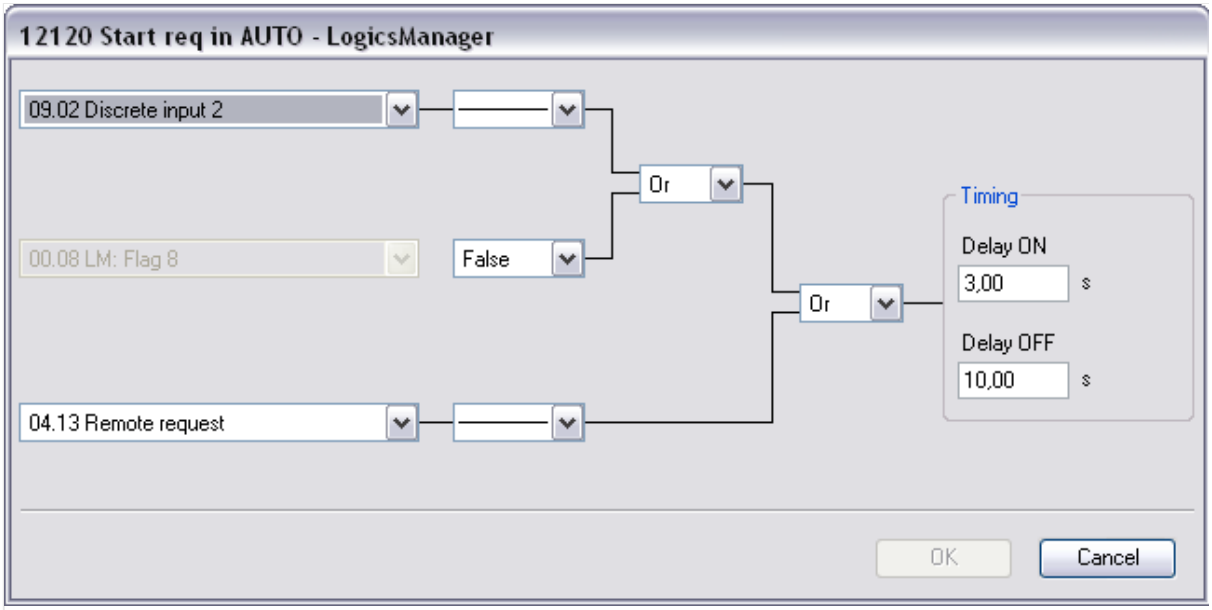


Fig. 290: LogicsManager function sample 12120

To configure the LogicsManager function "Start req. in AUTO " (parameter 12120) as indicated in (Fig. 290) the following Modbus message must be sent to the easY-I:
See table Table 143 below.

1. ▷

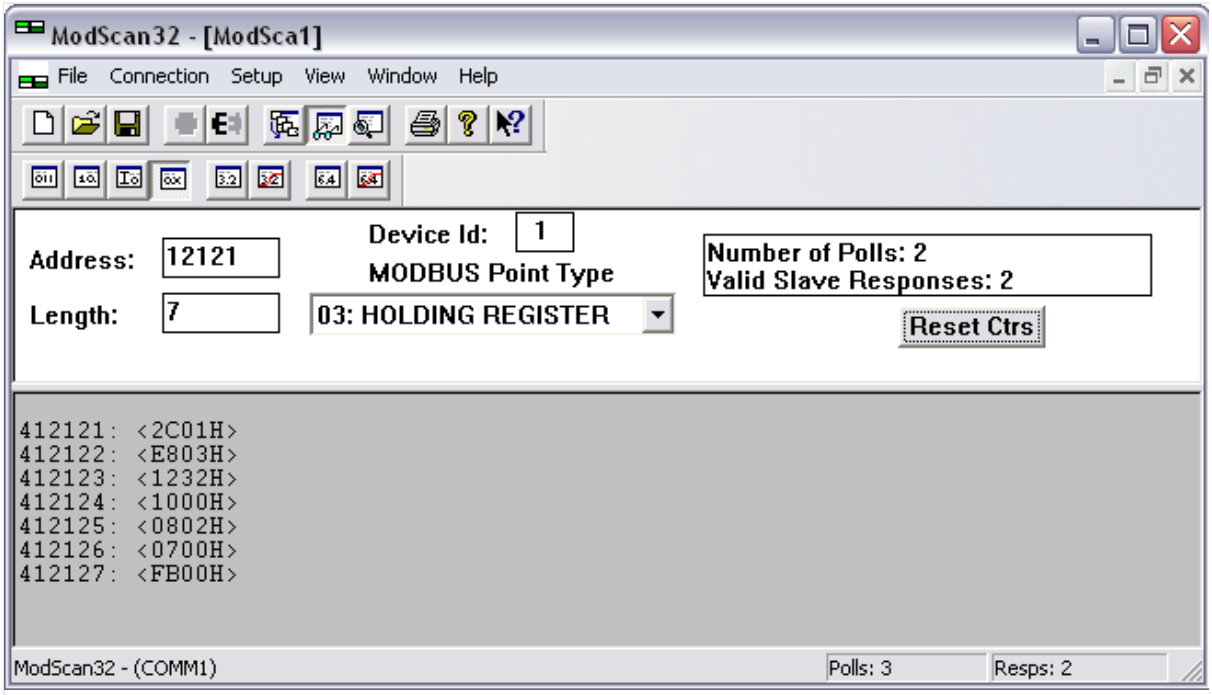


Fig. 291: Modscan32 at address 12121

Copy the complete message of 7 words to address 12121 ff (12120+1) in one step.
This is shown in (Fig. 291) using the ModScan32 software.

Word 0	Word 1	Word 2	Word 3	Word 4	Word 5	Word 6
Delay ON	Delay OFF	Logic equation 1*	Logic equation 2*	Command 1	Command 2	Command 3

Released

Word 0		Word 1		Word 2				Word 3				Word 4		Word 5		Word 6	
				Sign 1	Op. 1	Sign 2	Op. 2	Sign 3	-/-	-/-	-/-						
3.00 sec		10.00 sec		¾	Or	False	Or	¾	00	00	00	No. 09.02 ID = 520 dec		No. 96.08 ID = 7 dec		No. 04.13 ID = 251 dec	
012c (hex)		03E8 (hex)		1	2	3	2	1	0	0	0	0208 (hex)		0007 (hex)		00FB (hex)	
low byte	high byte	low byte	high byte	"as is"				"as is"				low byte	high byte	low byte	high byte	low byte	high byte
2C01 (hex)		E803 (hex)		1232 (hex)				1000 (hex)				0802 (hex)		0700 (hex)		FB00 (hex)	

Table 143: Start req. in AUTO message

6.5.2.3.5 Configuration Of LogicsManager Function "External Acknowledge"

The LogicsManager function "Ext. acknowledge" (parameter 12490) can be configured in a way that an external acknowledgment is performed as soon as the remote acknowledge signal is enabled.

Refer to "6.3.3 Performing Remote Start/Stop And Acknowledgment" for a detailed configuration of the LogicsManager via HMI or ToolKit.

External acknowledge may be enabled by setting bit 4 (external acknowledge) of the remote control word 503 to HIGH (refer to "9.3.2 Additional Data Identifier").

Example

⚙

>

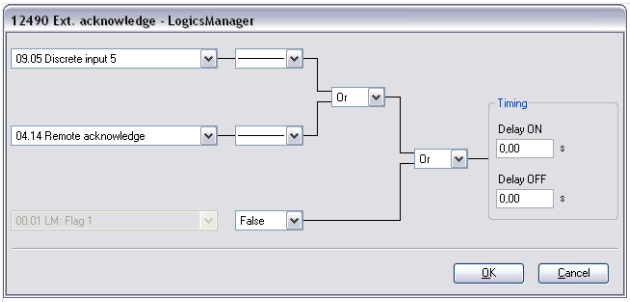


Fig. 292: LogicsManager function sample 12490

To configure the LogicsManager function "Ext. acknowledge" (parameter 12490) as indicated in (Fig. 292) the following Modbus message must be sent to the easY-I: See table Table 144 below.

1. ▷

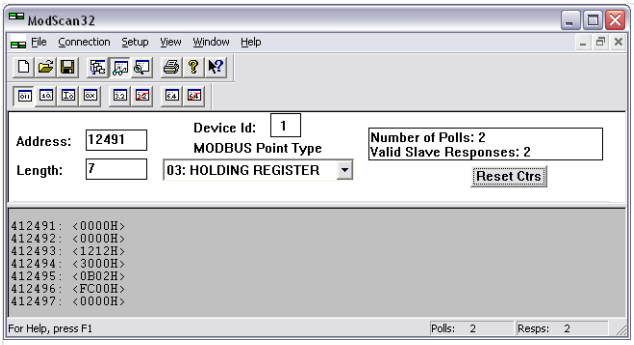


Fig. 293: Modscan32 at address 12491

Copy the complete message of 7 words to address 12491 ff (12490+1) in one step. This is shown in ↳▷ Fig. 293 using the ModScan32 software.

Word 0		Word 1		Word 2				Word 3				Word 4		Word 5		Word 6	
Delay ON		Delay OFF		Logic equation 1*				Logic equation 2*				Command 1		Command 2		Command 3	
				Sign 1	Op. 1	Sign 2	Op. 2	Sign 3	-/-	-/-	-/-						
0.00 sec		0.00 sec		¾	Or	¾	Or	False	00	00	00	No. 09.05 ID = 523 dec		No. 04.14 ID = 252 dec		No. 96.01 ID = 0 dec	
0000 (hex)		0000 (hex)		1	2	1	2	3	0	0	0	020B (hex)		00FC (hex)		0000 (hex)	
low byte	high byte	low byte	high byte	"as is"				"as is"				low byte	high byte	low byte	high byte	low byte	high byte
0000 (hex)		0000 (hex)		1212 (hex)				3000 (hex)				0B02 (hex)		FC00 (hex)		0000 (hex)	

Table 144: "Ext. acknowledge" message

6.5.2.3.6 Configuration Of LogicsManager Function "Start w/o load"

The Start w/o load LogicsManager function (parameter ↳▷ 12540) can be configured in a way that it is always enabled.

Refer to ↳▷ “6.3.3 Performing Remote Start/Stop And Acknowledgment” for a detailed configuration of the LogicsManager via HMI or ToolKit.

Example

⚙

>

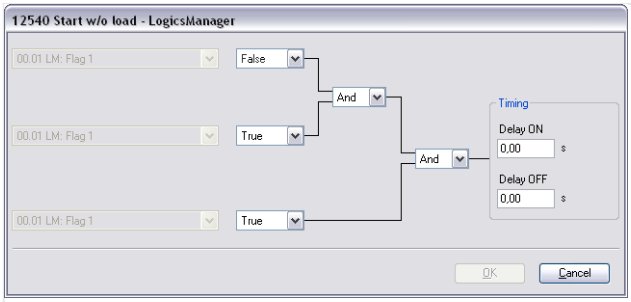


Fig. 294: LogicsManager function sample 12540

To configure the LogicsManager function "Start w/o load" (parameter ID 12540) as indicated in Fig. 294 the following Modbus message must be sent to the easY-I:
See table Table 145 below.

1. ▷

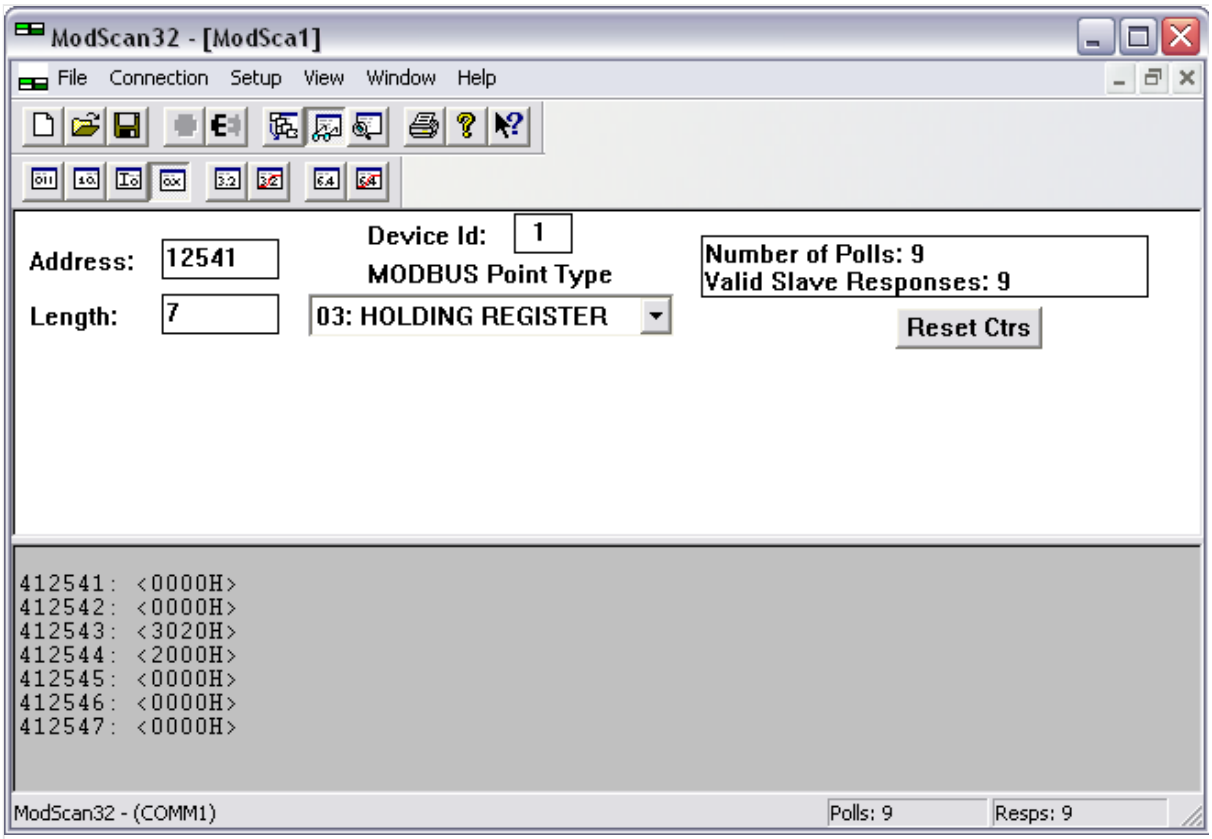


Fig. 295: Modscan32 at address 12541

Copy the complete message of 7 words to address 12541 ff (12540+1) in one step.
This is shown in Fig. 295 using the ModScan32 software.

Word 0	Word 1	Word 2				Word 3				Word 4	Word 5	Word 6
Delay ON	Delay OFF	Logic equation 1*				Logic equation 2*				Command 1	Command 2	Command 3
		Sign 1	Op. 1	Sign 2	Op. 2	Sign 3	-/-	-/-	-/-			
0.00 sec	0.00 sec	False	And	True	And	True	00	00	00	No. 00.01 ID = 0 dec	No. 96.01 ID = 0 dec	No. 96.01 ID = 0 dec
0000 (hex)	0000 (hex)	3	0	2	0	2	0	0	0	0000 (hex)	0000 (hex)	0000 (hex)

Released

Word 0		Word 1		Word 2	Word 3	Word 4		Word 5		Word 6	
low byte	high byte	low byte	high byte	"as is"	"as is"	low byte	high byte	low byte	high byte	low byte	high byte
0000 (hex)		0000 (hex)		3020 (hex)	2000 (hex)	0000 (hex)		0000 (hex)		0000 (hex)	

Table 145: "Start w/o Load" message

6.5.2.4 Remotely Acknowledge Single Alarm Messages

Single alarm messages can be acknowledged remotely through the Modbus by sending the respective parameter ID of the alarm to be acknowledged on parameter 522. The required procedure is detailed in the following steps.

ID	Parameter	Setting range	Data type
522	Reset alarm list	0 to 65535	UNSIGNED 16

The parameter ID of the alarm to be acknowledged must be written to object 220A (hex), i.e. parameter 522.

Example

A "Mains undervoltage 1" alarm (ID 3012) shall be acknowledged (refer to “9.6.5 Alarm Messages”).

- Modbus address = 40000 + (Par. ID + 1) = 40523
- Modbus length = 1 (UNSIGNED 16)

⚙

>

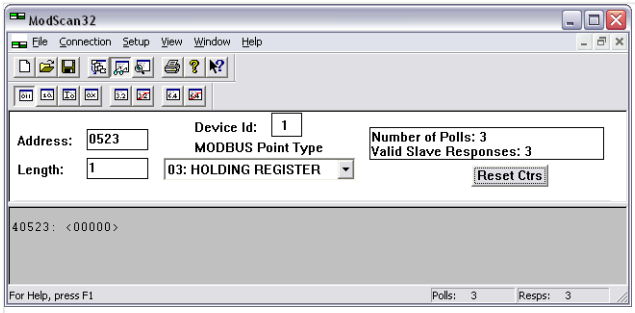


Fig. 296: ModScan32 at address 40523

1. ▷ Use the "display options" to set the format to decimal view.

2. ▷ Double-click the address to issue a `Write Register` command.

▶



Fig. 297: Write register - acknowledge alarm message

Released

↳▷ Fig. 297 shows how the parameter ID of the alarm to be acknowledged is written using the ModScan32 Software.

6.5.2.5 Remotely Clearing The Event History

The event history can be cleared remotely through the Modbus. The required procedure is detailed in the following steps.

ID	Parameter	Setting range	Data type
1706	Clear eventlog	Yes / No	UNSIGNED 16

In order to clear the event history, bit 0 of object 26AA (hex), i.e. parameter 1706, must be enabled.

☼ **Remotely clearing event history**

- Modbus address = 40000 + (Par. ID + 1) = 41707
- Modbus length = 1 (UNSIGNED 16)

⚙

>

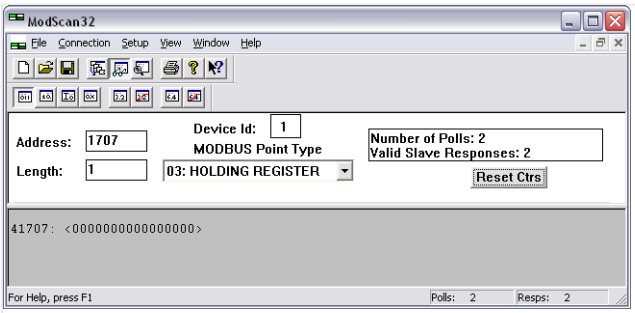


Fig. 298: Modscan32 at address 41707

1. ▷ Use the "display options" to set the value format to binary.

2. ▷ Double-click the address to issue a `Write Register` command.

▶

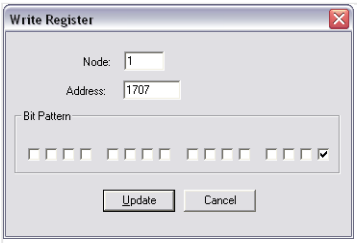


Fig. 299: Write register - clear event history

↳▷ Fig. 299 shows how bit 0 is enabled using the ModScan32 Software.

Released

6.5.2.6 Remotely Resetting The Default Values

6.5.2.6.1 Modbus

ID	Parameter	Setting range	Data type
10417	Factory default settings	Yes / No	UNSIGNED 16
1701	Set factory default values	Yes / No	UNSIGNED 16

In order to enable the resetting procedure, parameter 10417 must be enabled.

Example 1 (enable resetting)

The resetting procedure shall be enabled.

- Modbus address = 40000 + (Par. ID + 1) = 410418
- Modbus length = 1 (UNSIGNED 16)

⚙

>

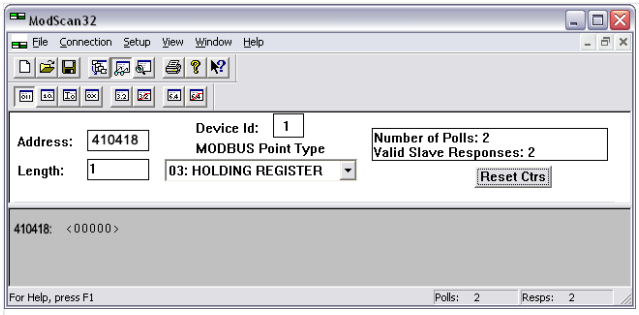


Fig. 300: Modscan32 at address 410418

1. ▷ Use the "display options" to set the value format to decimal.

2. ▷ Double-click the address to issue a `Write Register` command.

▶

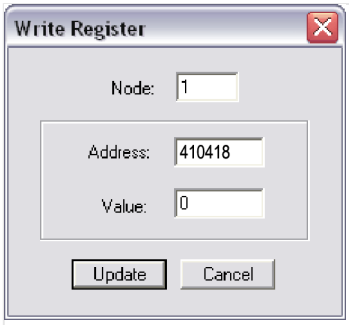


Fig. 301: Write register - enable the resetting procedure

↳▷ Fig. 301 shows how the parameter is enabled using the ModScan32 Software. The value must be set to "1" to enable the parameter.

Example 2 (reset to default)

In order to reset the default values, parameter ↳▷ 1701 must be enabled.

CAUTION!

Set factory default settings causes easY-I power cycle!

Don't run "Set factory default values" ↳ 1701 during controlling a genset because it causes a power cycle of the easY-I control.

The default values shall be reset.

- Modbus address = 40000 + (Par. ID + 1) = 41702
- Modbus length = 1 (UNSIGNED 16)

⚙

>

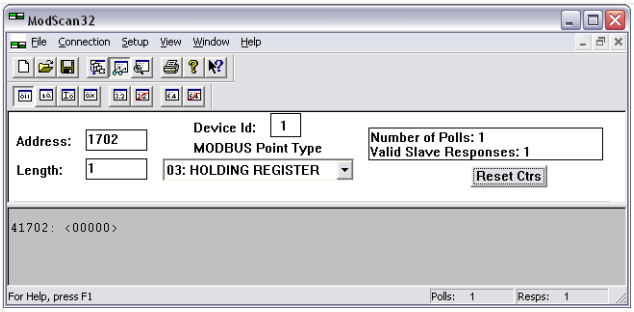


Fig. 302: Modscan32 at address 410418

1. ▷ Use the "display options" to set the value format to decimal.

2. ▷ Double-click the address to issue a `Write Register` command.

▶



Fig. 303: Write register - resetting the default values

↳ Fig. 303 shows how the parameter is enabled using the ModScan32 Software. The value must be set to "1" to enable the parameter.

6.5.3 Exception Responses

The Modbus protocol has multiple exception responses to show that a request could not be executed. Exception responses can be recognized if the response telegram contains the request function code with an offset of 128 (0x80 hex).

↳ Table 146 explains possible reasons for an exception response that occurred.

Released

Modbus exception responses		
Code	**Name**	**Reason**
01	ILLEGAL FUNCTION	The sent request function code is not supported by the Modbus protocol.
02	ILLEGAL ADDRESS	Permission to read/write the parameter is denied. The amount of requested registers is wrong to read/write this registers.
03	ILLEGAL DATA VALUE	The data value exceeds the min. and max. limitations of the parameter upon a write request. There is no parameter on the requested address.

Table 146: Modbus - exception responses

6.5.4 Modbus Telegram Mapper (Customer Written Data Protocols)

6.5.4.1 Introduction

The Modbus Telegram Mapper offers the possibility to generate customer defined Modbus protocols. It is possible to create individual Modbus Address Point lists for Modbus RTU and TCP. Therefore the address range (4)50000 can be taken. The user will be able to arrange contents from the easY-I database (Index No.), AnalogManager Variables and LogicsManager Command Variables to a customer specific protocol.

6.5.4.2 Configuration

Woodward offers the TelegramMapper PC software for free and enables easY-I-XT to import, make accessible, and proceed customer specific Modbus protocols. The TelegramMapper software can be installed separately from other Woodward software. After starting the program the HELP file can guide through the required settings

Data of the particular easY-I model will be available/selectable:

- AnalogManager variables
- LogicsManager variables
- the easY-I database (ID based)

The according data types must be defined and each address entry can be commented. There is a maximum length of 300 addresses.

The final protocol can be saved with a **protocol number from 65100 to 65199 used as file name(!)** as an

- SCP-file for import into the easY-I device
- HTML-file for easy to read documentation of the (self) created data protocol
- MAP-file for further edits with the TelegramMapper software

To load your created Data Protocol(s) - the scp-file(s) - into your easY-I device use ToolKit.

To switch to your Data Protocol and use it for communication: Configure parameter 3184 "Modbus protocol number" to your customer specific protocol number and reboot 10419 the control.

Summary: The self-mappable address range is defined with a protocol number from 65100 to 65199 and has a maximum length of 300 addresses. Communication using customer specific data protocols is configurable similar to other already existing protocols 5003, 5011 etc. Navigate to [Parameter / Configuration / Configure interfaces / Modbus protocol].

6.5.4.3 Status/diagnostic Modbus Telegram Mapper

The easY-I provides an information whether the Modbus TelegramMapper mapping file could be successful parsed and interpreted. Navigate to [STATUS MENU / Interfaces / >Ethernet / Modbus TCP/IP] to get an error code.

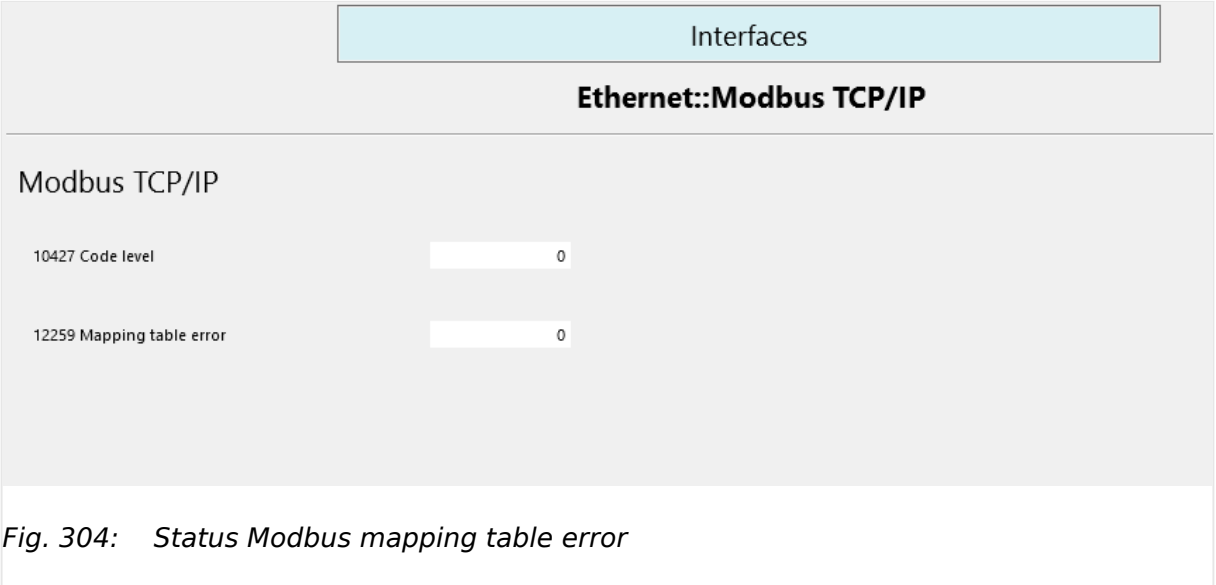


Fig. 304: Status Modbus mapping table error

Modbus: Mapping table error (12259):

Error codes:

- **0:** No error
- **100000 + error line:** There is a syntax error -- for any misformatted line
- **200000:** File not found -- when file corresponding to selected protocol does not exist
- **300000:** Too complex command discovered
- **700000:** Too many analog/logic manager indices (i.e. > 32)
- **800000:** Memory for the table exhausted (file too big)

Released

6.5.5 Modbus master

6.5.5.1 Introduction

The device can act as a configurable Modbus master, for Modbus/TCP. Up to 5 independent slaves can be accessed simultaneously.

Note: For the configuration the licensed ModbusMasterMapper PC software is required.



The Modbus Master does not work with the serial interface (RS-485, Modbus RTU).

Up to 99 analog values can be read and transferred into **AnalogManager group 54** (“54.01 Mapped AM value 1” to “54.99 Mapped AM value 99”) and up to 99 boolean values can be read and transferred into **LogicsManager group 54** (“54.01 Mapped LM flag 1” to “54.99 Mapped LM flag 99”).

All analog values which are present in the device as AnalogManager values and all flags which are present as LogicsManager values can be written. Boolean flags can be grouped into 16 bit values. Reading and writing each can be combined to read/write multiple values in one command. Different variable types and Modbus modes are supported.

Multiple write and read rates can be defined, in order to access some datapoints more often than others.

6.5.5.2 Configuration

Woodward offers a ModbusMasterMapper PC software to configure the Modbus Master behavior for free and enables the device to import, make accessible, and proceed customer specific settings. The ModbusMasterMapper software can be installed separately from other Woodward software. After starting the program the HELP file can guide through the required settings.

Data of the particular device will be available/selectable:

- AnalogManager variables
- LogicsManager variables
- the database (ID based)

The according data types, addresses, rates must be defined and each read/write entry can be commented.

Note: Modbus master has for read and write a limitation of maximum about 120 words. The ModbusMasterMapper PC software detects an overrun and will issue a warning.

The final protocol can be saved as a mapping file (*.mmap) file for further processing. The tool creates a *. SCP-file for uploading the Modbus Master control file into the device using Toolkit. After uploading and restarting the Modbus Master process can be started via configuring parameter 3219 to “On”. Now the configured communication will be executed.

ID	Parameter	CL	Setting range [Default]	Description
3219	**Modbus master**	2	**[Off]**	The Modbus master function is disabled and no Modbus master requests are sent.
			On	The Modbus master function is requesting data according to the control file. **Note** Take care that a Modbus master control file is already load into the device.

6.5.5.3 Status/diagnostic Modbus master

Toolkit is providing a screen for some Modbus master diagnostics.

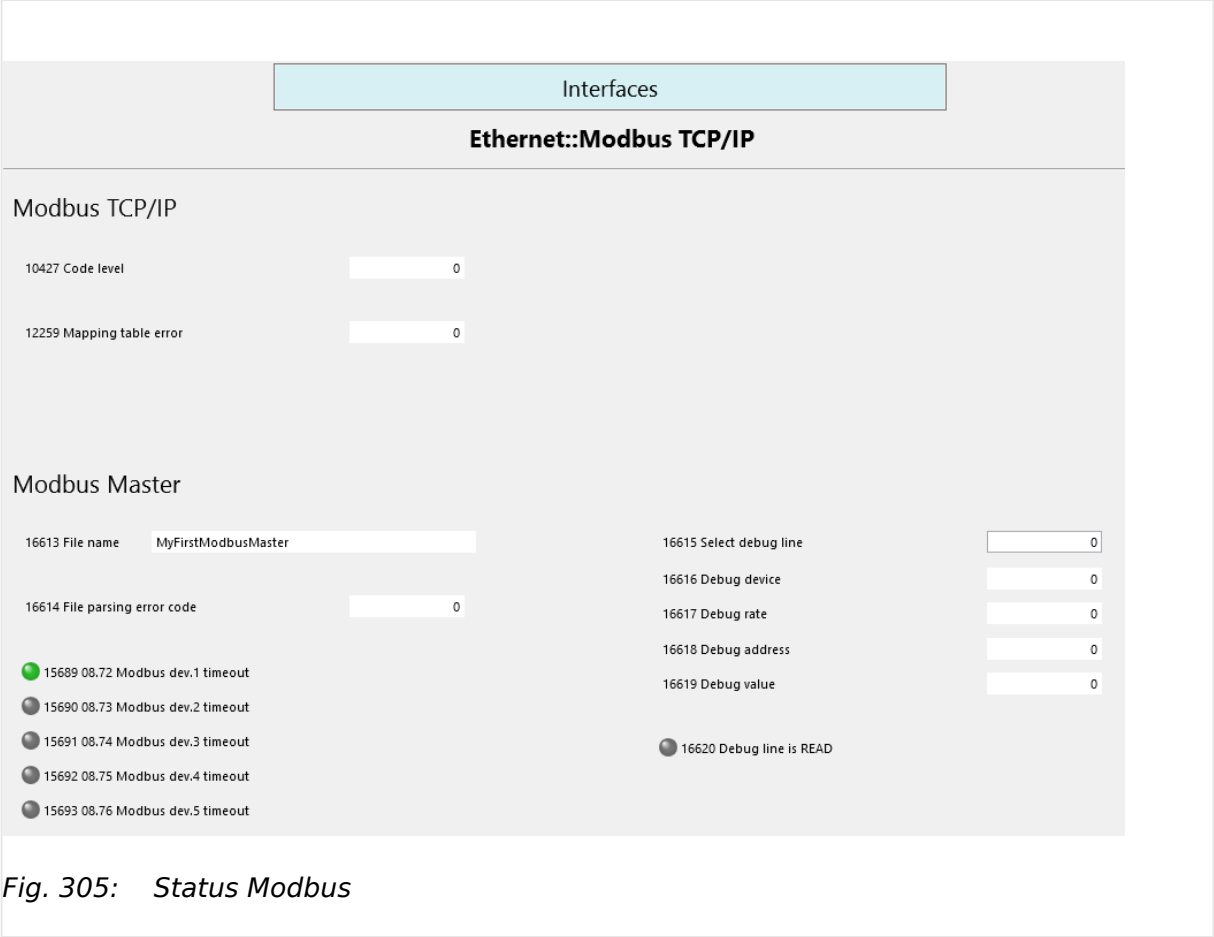


Fig. 305: Status Modbus

File name (16613):

This field shows the "Description" from the loaded Modbus Master config file. This will be read in at start-up.

File parsing error code (16614):

Released

File parsing error code (16614)	
Code	**Meaning**
0	No error
1	File error: File was not found or could not be opened
2	Not a mapping file: The file is not a Modbus master mapping file or a malformed one.
4	Wrong version of mapping file: The version of the mapping file does not match. This can appear when the file was generated by an older version of the PC tool.
8	Mapping file has wrong check-sum: The mapping file was corrupted and is invalid. It has to be newly created.
16	Wrong SIZES statement: This is an internal file error, this shall not happen when the file was correctly created by the PC tool.
32	APPLICATION line wrong in file. The file was created for an application which does not match to the application running on the device. It has to be newly created for this application.
64	RELEASE line wrong in file. The file was created for a software release which does not match to the application running on the device. It has to be newly created for this release.

"Select debug line"(16615):

This “parameter” activates a debug mode when a number is entered higher than 0. This function enables the user to test the connections to different devices separately.

Valid values are:

- 0: Debug mode off (default)
- 1000+x: WRITE line 1000+x will be executed
- 2000+x: READ line 2000+x will be executed

Only the selected WRITE or READ line of the mapping file will be executed. All other reads and writes are suppressed.

"Select debug line" (16615)	
Indication	**Meaning**
16616 Debug device	This output shows the device number [1..] as defined in the mapping file of the selected debug line command. It is 0, if "Select debug line" set to 0.
16617 Debug rate	This output shows the rate in [s] of the selected debug line command. It is 0, if "Select debug line" set to 0.
16618 Debug address	This output shows the Modbus address of the selected debug line command. It is 0, if "Select debug line" set to 0.
16619 Debug value	This output shows the read or wrote value for the selected Debug line command. When multiple read or multiple write was selected, it shows the first value. It is 0, if "Select debug line" set to 0.

Released

"Select debug line" (16615)	
Indication	**Meaning**
16620 Debug line is READ	This output is TRUE (LED is green), if the selected Debug line command was a read, otherwise FALSE. It is FALSE too if "Select debug line" set to 0.

Modbus Slave Devices 1-5 timeouts:

The LED s of LM variables "08.72 Modbus dev.1 timeout" to "08.76 Modbus dev.5 timeout" inform about time outs of the corresponding slave devices.

Timeouts can happen e.g. in this cases:

- The slave is not answering at all
- The slave is answering but in a rate slower than defined in the mapping file. This can happen, when the slave is inherently slow or when the mapping was set up in a way that too many requests were scheduled in the scheduled rate time.

One Modbus read or write command to one slave will take at least 50 msec. The minimum permitted rate group is 100 msec. If now a mapping is configured in a way that it requires more writes to a device than fits into the required rate, or the slave has very long answer times, there will be a timeout error. The device will still read/write but it will not do it as quickly as required. This issue can be mitigated by defining slower rate groups or reducing the number of read/write commands.

Released

7 Interfaces And Protocols

For interfaces terminal overview refer to “3.4 Setup Interfaces”

7.1 CAN Interfaces

7.1.1 CAN Interface 1 (Guidance level)

The CAN interface 1 is a freely configurable CANopen interface with 5 RPDOs (receive messages), 5 TPDOs (send messages) and 4 additional Server SDOs.

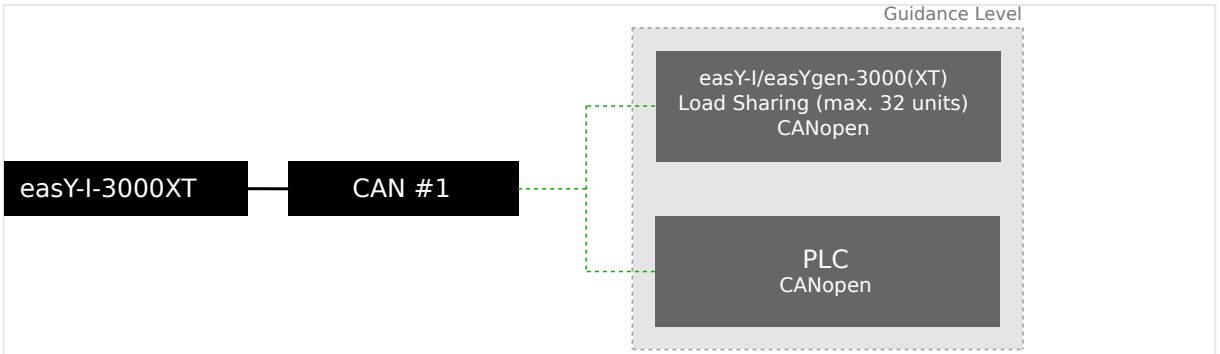


Fig. 306: CAN interface 1

7.1.2 CAN Interface 2 ("Engine" level)

The CAN interface 2 supports the CANopen. It supports the connection of a wide range of CANopen extension modules.

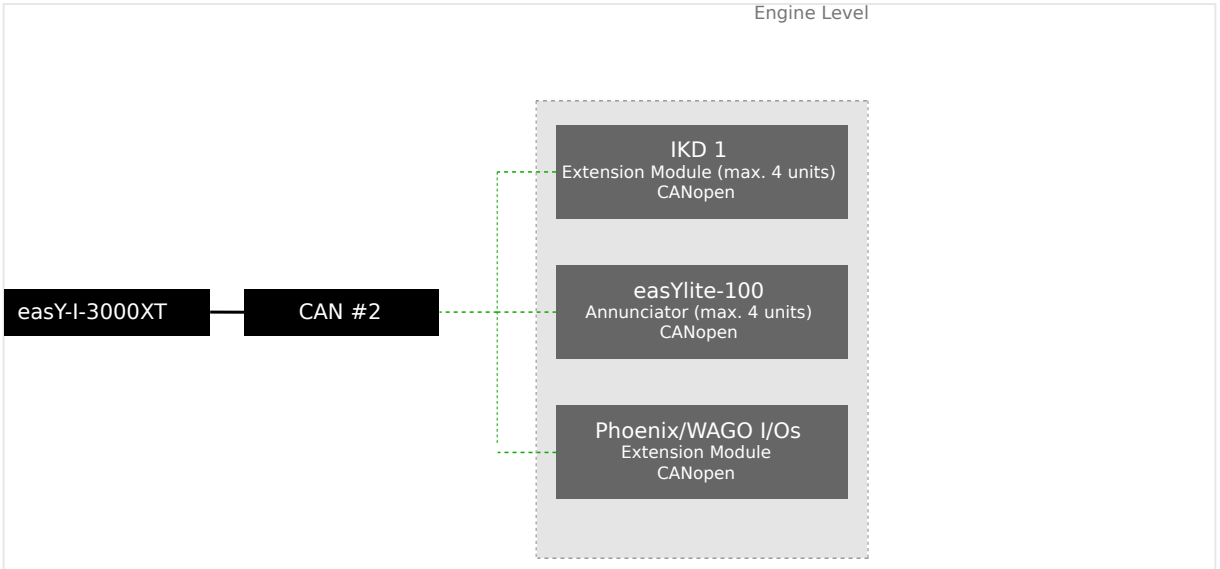


Fig. 307: CAN interface 2

Released

CAN interface 2 is pre-configured for several expansion units. These include the I/O expansion boards Woodward IKD 1, several combinations of the expansion boards of the Phoenix Inline Modular (IL) series, and the support of Wago terminals.

It is possible to connect several combinations of up to four Woodward IKD 1s and/or Phoenix Inline Modular (IL) modules and/or WAGO modules with up to

- 32 discrete inputs/outputs, 16 analog inputs, and 4 analog outputs.

7.1.3 CAN Interface 3 (System level)

The CAN interface 3 is used for load sharing and the LSx communication.

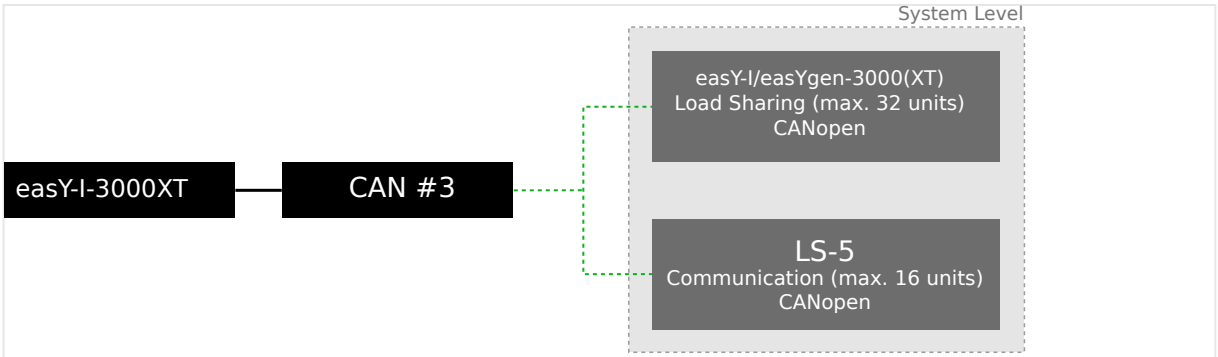


Fig. 308: CAN interface 3

7.2 Ethernet Interfaces

General notes

The Ethernet network provides a fast communication capability to different devices, like remote panel, PLC or SCADA systems. The common protocol Modbus TCP is there for the preferred communication protocol. Additionally the Ethernet connection supports the Woodward protocol Servlink for ToolKit and other Woodward own monitoring tools (like remote panel and SCADA visualization tool). At least the easY-I provides a UDP protocol for system relevant and time discrete information exchange.

Released

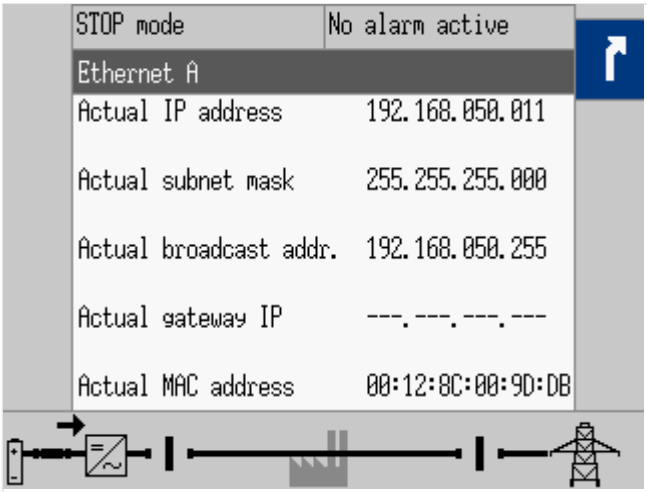


Fig. 309: Ethernet Network A screen

The actual IP address in Network A, subnet mask and gateway IP address can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet A.

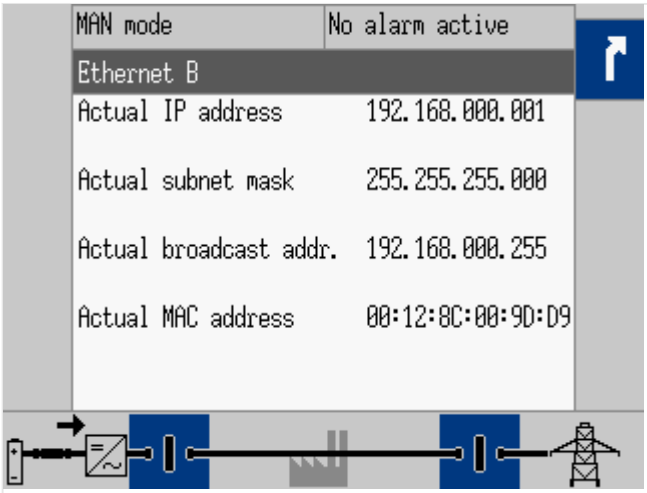


Fig. 310: Ethernet Network B screen

The actual IP address in Network B and the subnet mask can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet B.

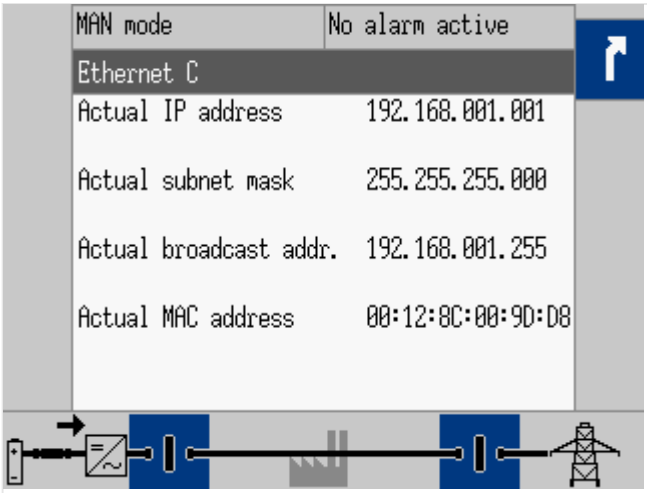


Fig. 311: Ethernet Network C screen

The actual IP address in Network C and the subnet mask can be viewed under Next Page (Status Menu) / Diagnostic / Interfaces / Ethernet / Ethernet C.

7.3 Serial Interfaces

7.3.1 RS-485 Interface (Serial Interface 2)

A freely configurable RS-485 Modbus RTU Slave interface is provided to add PLC connectivity. It is also possible to configure the unit, visualize measured data and alarm messages, and control the unit remotely.

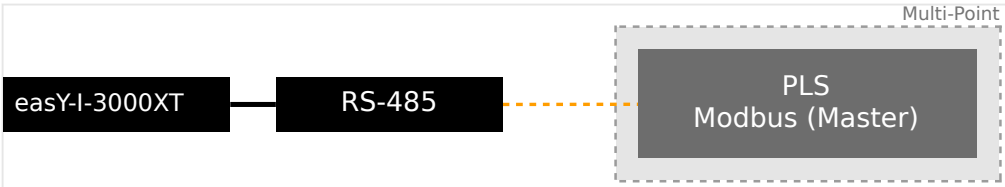


Fig. 312: RS-485 interface

7.3.2 USB interface (USB 2.0, slave)

Service port

The USB interface follows the USB 2.0 standard but is - as a service port - reserved for ToolKit and special Woodward usage.

7.4 CANopen Protocol

CANopen is a communication protocol and device profile specification for embedded systems used in automation. The CANopen standard consists of an addressing scheme, several small communication protocols and an application layer defined by a device

profile. The communication protocols have support for network management, device monitoring and communication between nodes, including a simple transport layer for message segmentation/de-segmentation.

Protocol description

If a data protocol is used, a CAN message looks like this:

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
MUX	Data byte	Data byte	Data byte	Data byte	Data byte	Data byte	Internal

The MUX byte is counted up, the meaning of the data byte changes according to the value of the MUX byte.

In the protocol tables is listed which parameter at which MUX on which position is transmitted. The meaning of the parameter can be taken by means of the number of the parameter description (For details refer to “9.3 Data Protocols”).

Example

MUX	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
1	118				147		Internal

In MUX 1 (byte 0 has got value 1) the value of parameter 118 is included in the byte 1 up to byte 4 (mains voltage 1-2). In byte 6 up to byte 6 the value of parameter 147 is included (mains frequency). Byte 7 includes internal definitions and can be ignored.

Data format "Unsigned Integer"

UNSIGNED type data has positive integers as values. The range is between 0 and 2n-1. The data is shown by the bit sequence of length n.

- Bit sequence:

  $b = b_0$ to b_{-1}

- Value shown:

  $UNSIGNEDn(b) = b_{-1} * 2^{-1} + ... + b_1 * 2^1 + b_0 * 2^0$

Please note that the bit sequence starts on the left with the least significant byte.

Example: Value 266 = 10A hex of type UNSIGNED16 is transmitted on the bus in two octets, first 0A hex and then 01 hex.

The following UNSIGNED data types are transmitted as follows:

Octet Number	1.	2.	3.	4.	5.	6.	7.	8.
UNSIGNED8	b_7 to b_0							
UNSIGNED16	b_7 to b_0	b_{15} to b_8						
UNSIGNED24	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}					
UNSIGNED32	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}				
UNSIGNED40	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}			

Octet Number	1.	2.	3.	4.	5.	6.	7.	8.
UNSIGNED48	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}		
UNSIGNED56	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}	b_{55} to b_{48}	
UNSIGNED64	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}	b_{55} to b_{48}	b_{63} to b_{56}

Table 147: Transfer syntax for data type UNSIGNEDn

Data format "Signed Integer"

SIGNED type data has integers as values. The range is between 0 and 2^{-1}. The data is shown by the bit sequence of length n.

- Bit sequence:

  $b = b_0$ to b_{-1}

- Value shown:

  $SIGNEDn(b) = b_{-2} * 2^{-2} + ... + b_1 * 2^1 + b_0 * 2^0$

  if $b_{-1} = 0$

- And with two's complement:

  SIGNEDn(b) = SIGNEDn(^b)-1

  if $b_{-1} = 1$



Please note that the bit sequence starts on the left with the least significant byte.

Example: The value -266 = FEF6 hex of type SIGNED16 is transmitted in two octets, first F6 hex and then FE hex.

Octet Number	1.	2.	3.	4.	5.	6.	7.	8.
SIGNED8	b_7 to b_0							
SIGNED16	b_7 to b_0	b_{15} to b_8						
SIGNED24	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}					
SIGNED32	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}				
SIGNED40	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}			
SIGNED48	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}		
SIGNED56	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}	b_{55} to b_{48}	
SIGNED64	b_7 to b_0	b_{15} to b_8	b_{23} to b_{16}	b_{31} to b_{24}	b_{39} to b_{32}	b_{47} to b_{40}	b_{55} to b_{48}	b_{63} to b_{56}

Table 148: Transfer syntax for data type INTEGER

Released

7.5 Modbus Protocol

Modbus is a serial communications protocol published by Modicon in 1979 for use with its programmable logic controllers (PLCs). It has become a de facto standard communications protocol in industry, and is now the most commonly available means of connecting industrial electronic devices.

The Woodward controller supports

- a **Modbus RTU Slave** module for RS-485 connections

The Modbus RTU Slave expects that a Master node polls the controller slave node. Modbus RTU can also be multi-dropped, or in other words, multiple Slave devices can exist on one Modbus RTU network, assuming that the serial interface is a RS-485.

The Modbus/TCP Server fulfills the same role as Modbus client for RTU mode. Also here it is possible to have one client connected to many servers.



Temporary restriction

With the current easY-I-XT one server can handle only one client at a time.

Detailed information about the Modbus protocol is available on the following website:

- ⟹ https://www.modbus.org/specs.php

There are also various tools available on the internet. We recommend using ModScan32 which is a Windows application designed to operate as a Modbus Master device for accessing data points in a connected Modbus Slave device. It is designed primarily as a testing device for verification of correct protocol operation in new or existing systems.

A trial version download is available from the following website:

- ⟹ https://www.win-tech.com/html/modscan32.htm

Address range

The controller Modbus Slave module distinguishes between visualization data and configuration & remote control data. The different data is accessible over a split address range and can be read via the "Read Holding Register" function.

Furthermore, controller parameters and remote control data can be written with the "Preset Single Registers" function or "Preset Multiple Registers" (⟹ Fig. 313)

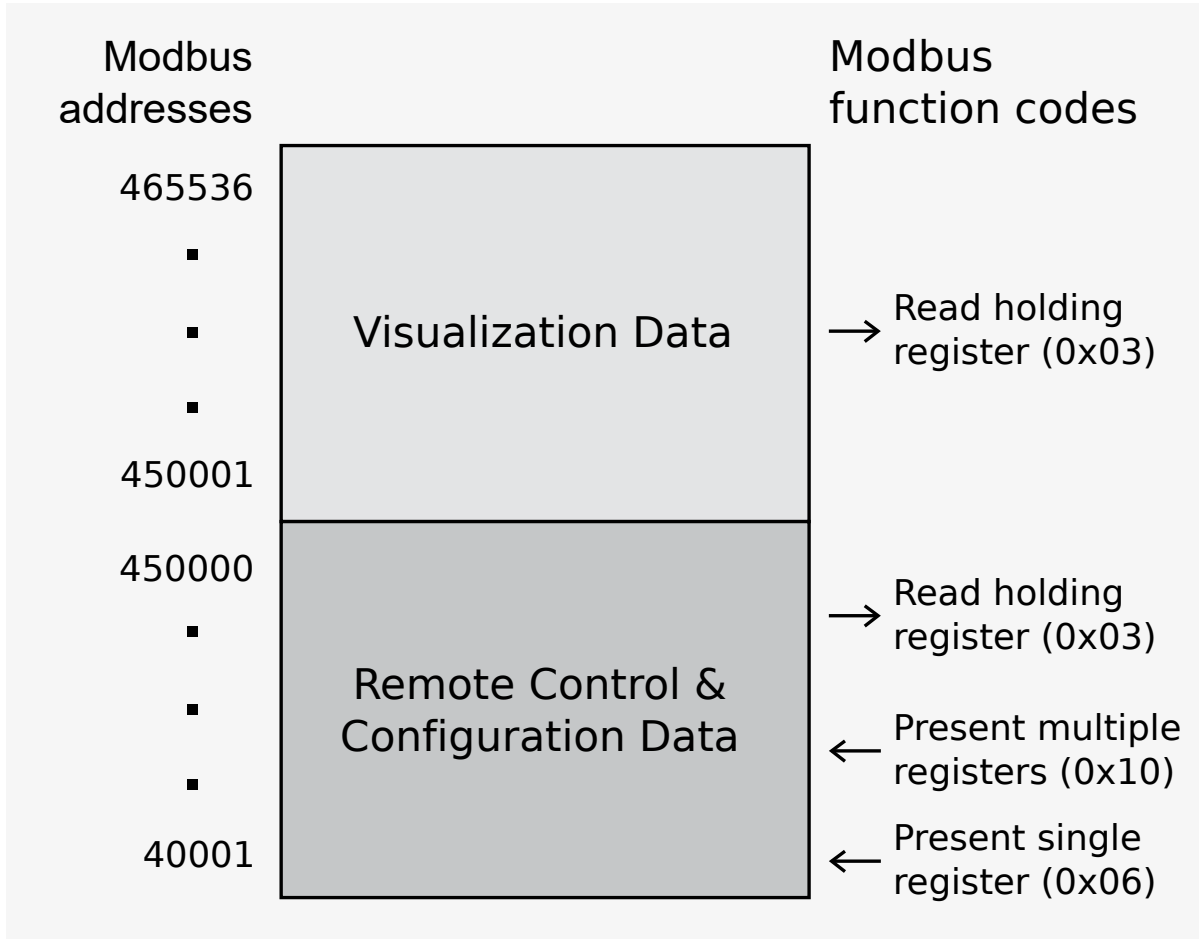


Fig. 313: Address range

All addresses in this document comply with the Modicon address convention. Some PLCs or PC programs use different address conventions depending on their implementation. Then the address must be increased and the leading 4 may be omitted.

Please refer to your PLC or program manual for more information. This determines the address sent over the bus in the Modbus telegram. The Modbus starting address 450001 of the visualization data may become bus address 50000 for example.

Visualization

The visualization over Modbus is provided in a very fast data protocol where important system data like alarm states, AC measurement data, switch states and various other information may be polled.

According to the Modbus addressing range, the visualization protocol can be reached on addresses starting at 450001. On this address range it is possible to do block reads from 1 up to 128 Modbus registers at a time.

Modbus read addresses	Description	Multiplier	Units
450001	Protocol-ID, always 5400		–
450002	Scaling Power (16 bits) Exponent 10x W (5;4;3;2)		

Released

Modbus read addresses	Description	Multiplier	Units
.....	.....	.....	.....
.....			
.....	.....	.....	.....
450594	Mains current slave pointer L1	1000	A

Table 149: Address range block read



“4.7.3 Modbus Protocol” is only an excerpt of the data protocol. It conforms to the data protocol 5400.

Please refer to the Data Protocols chapter, “9.3 Data Protocols”

The following ModScan32 screenshot shows the configurations made to read the visualization protocol with a block read of 128 registers.

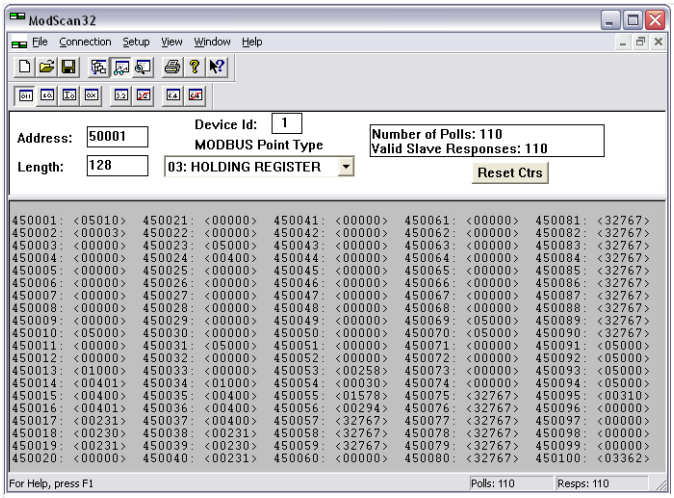


Fig. 314: Visualization configurations



Data Format(s)

Modbus registers are read and written according to the Modbus standard as Big-endian.

Composite data types like LOGMAN, ANALOGMANAGER, and TEXT use separate descriptions.

Configuration

The Modbus interface can be used to read/write parameters. According the Modbus addressing range for the configuration addresses, the range starts at 40001 and ends at 450000. You can always access only one parameter of the system in this address range. The Modbus address can be calculated depending on the parameter ID as illustrated below:

Released

	Parameter ID < 10,000	Parameter ID >= 10,000
Modbus address =	40000 + (Par. ID+1)	400000 + (Par. ID+1)

Table 150: Address calculation

Block reads in this address range depend on the data type of the parameter. This makes it important to set the correct length in Modbus registers which depends on the data type (UNSIGNED 8, INTEGER 16, etc.).

Refer to Table 151 for more information.

Types	Modbus registers	Remarks
UNSIGNED 8	1	
UNSIGNED 16	1	
INTEGER 16	1	
UNSIGNED 32	2	
INTEGER 32	2	
LOGMAN	7	Little-endian is used for LogicsManager to be compatible with (non-XT) easY-I series
ANALOGMANAGER	7	Big-endian is used for AnalogManager because it is the regular format for Modbus
TEXT/X	X/2	

Table 151: Data types

The Modbus RTU response time can increase under certain conditions (display versions / plastic housing only). But it is max. 2 seconds.

Woodward recommends to make a break time of 10 ms after receiving the data of the last Modbus request.

7.6 Load Sharing

General information

The maximum number of participating easY-I-3000XT Series devices for load sharing is 32. Both CAN and Ethernet interfaces can handle load share. Load share via Ethernet interface uses UDP broadcast messages.

(In the application mode "GCB/GC" A13 the maximum number of participating easY-Is in one group is resricted to 31 per group. Number 32 is used by the Group Controller.)

Multi-master principle

It is important to know that the load share and load-dependent start/stop functionality is subject to a multi-master principle. This means that there is no dedicated master and slave function. Each easY-I decides for itself how it has to behave.

The benefit is that there is no master control, which may cause a complete loss of this functionality in case it fails. Each control is also responsible for controlling common breakers like a mains circuit or generator group breaker.

Load share timeouts

The easY-I provides different timeout events to monitor a lost of loadshare messages. A lost of single loadshare messages may happen through bad connections, too much traffic on the bus or any other disturbances.

In general a timeout event occurs if no loadshare message was received for a configured timeout. An entry in the Event History is shown and the according LogicsManager flag goes TRUE, see listed below. With parameter Load share timeout event set to Off the timeout events will not show up in the Event History.

The timeout depends on the configured »Load share interface « 9924 and the related parameters, as follow:

- CAN: Timeout = 9921 * 9999
- ETHERNET A, B or B/C: Timeout = 7488 * 7489
- CAN/ETHERNET A: Max of (9921 * 9999) or (7488 * 7489)

Available timeout events:

- **easYgen LS timeout**

  Occurs if no loadshare message is received for the configured timeout of any teached in easY-I.

  In the Event History "easYgen LS timeout" is shown with state True and the LogicsManager flag "08.78 easYgen LS timeout" is TRUE until the loadshare message is received again.

- **LSx LS timeout**

  Occurs if no loadshare message is received for the configured timeout of any teached in LSx.

  In the Event History "LSx LS timeout" is shown with state True and the LogicsManager flag "08.79 LSx LS timeout" is TRUE until the loadshare message is received again.

- **Redundancy LS timeout**

  Occurs if no loadshare message (of one of the redundant interfaces) is received for the configured timeout of any teached in device.

  In the Event History "Redund. LS timeout" is shown with state True and the LogicsManager flag "08.80 Redundancy LS timeout" is TRUE until the loadshare message is received again.

Load share monitoring

The easY-I provides Load Share / LDSS parameters for monitoring load sharing:

- **Multi-unit parameter alignment**

The multi-unit parameter alignment functionality requires that the relevant LDSS parameters are all configured identically at all participating units. For additional information refer to “4.5.6.11 Multi-Unit Parameter Alignment”.

- **Multi-unit missing member**

  The multi-unit missing members monitoring function checks whether all participating units are available (sending data on the load share line). For additional information refer to “4.5.6.12 Multi-Unit Missing easY-I” and “4.5.6.13 Multi-Unit Missing LSx”.

- **Redundancy lost**

  The Redundancy lost monitoring function checks whether all participating units are available (sending data on both load share lines CAN/ETH A or ETH B/C). For additional information refer to “4.5.6.17 Load Share Interface Redundancy is Lost”.

Load share communication

The following parameters allows to select the interface for load share communication. Refer to “4.4.4.3.5 Load-Share Interface” for detailed information.

ID	Text	Setting range	Default value
9924	Load share Interface	**CAN** Off Ethernet A Ethernet B/C CAN/EthA by LM* CAN/Ethernet A Ethernet B	CAN
		Notes * CAN or Ethernet A depending on 11986 (described below)	
11986	LS interface Ethernet A (LM 86.13: LS interf. EthA = 11987)	**FALSE** TRUE	FALSE
		Notes Switches the load share interface between • FALSE: CAN • TRUE: Ethernet A	



Woodward recommends to configure the Node-IDs (parameter 8950) for units, which participate in load sharing, as low as possible to facilitate a fast establishing of communication.

Released

7.6.1 Load Share via CAN

Bus load

The bus load increases with the number of units participating in load sharing.

The following parameters affect the bus load:

- Number of CAN participants
- Baud rate
- Transfer rate of load share messages
- Transfer rate of visualization protocols

We recommend to consider whether all data has to be sent on the CAN bus when planning the CAN bus. It is also possible to send visualization data via RS-485 for example.

Measures to reduce the bus load

If you need to reduce the bus load of the load share CAN bus, the following methods may be used:

- Increase the baud rate (parameter 3156) under consideration of the bus length (refer to "3.4.4 CAN Bus Interfaces").
- Increase time of the transfer rate of the load share message (parameter 9921).
- Increase time of the transfer rate of the visualization message, i.e. the event timer (parameter 9604).
- Disable the transmission visualization data on the CAN bus and use the RS-485 interface to transmit visualization data.
- Disable SYNC message (parameter 9100) and/or TIME message (parameter 9101) and/or the producer heartbeat time SYNC message (parameter 9120), if possible.

CAN load share configuration

The following parameters are available for configuring the CAN bus interfaces. Refer to "4.7.4.4 CAN Load Share Parameters" for detailed information.

Open menu path [Parameter / Configuration / Configure interfaces / Configure CAN interfaces / Configure CAN load share]. Refer to "4.4.4.3.6 Load Sharing".

ID	Text	Setting range	Default value
9921	Transfer rate LS fast message	0.10 to 0.30 s	0.10 s
9999	Load share timeout factor	2 to 20	2
9920	Load share CAN-ID	2xx Hex / 3xx Hex / 4xx Hex / 5xx Hex	5xx Hex

7.6.2 Load Share via UDP Broadcast Messages (Ethernet)

Load Share UDP

Load share and other system relevant messages are handled with UDP messages. The construction of the UDP messages allows (load share) communication with other Woodward devices.

For configuration of the Ethernet interface see chapters “4.7.5 Ethernet Interfaces” and “7.2 Ethernet Interfaces”.

Released

8 Technical Specifications

8.1 Technical Data

Product label

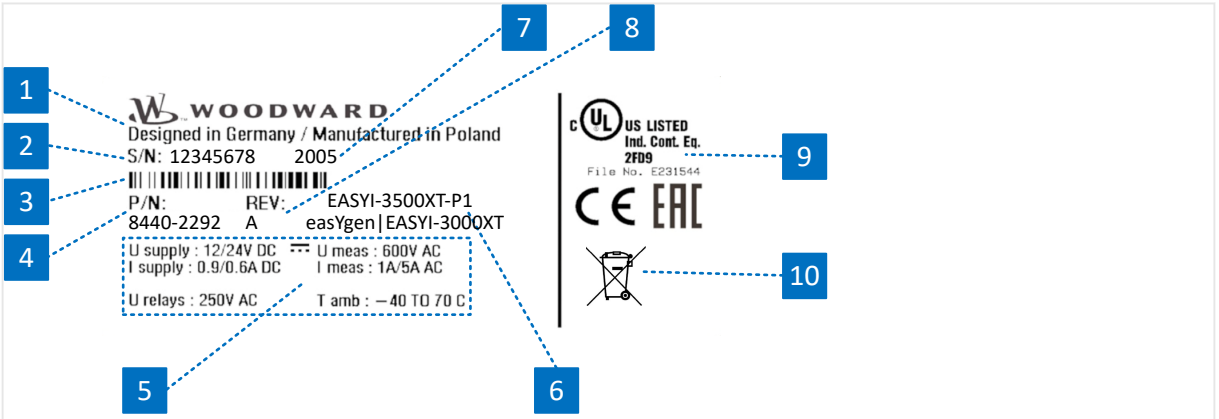


Fig. 315: Product label (example)

Number	Name	Description
1	Address	Manufacturer and manufacturing addresses
2	S/N	Serial number (numerical)
3	S/N	Serial number (barcode)
4	P/N	Item number
5	Details	Technical data
6	Type Description	Description (product name)
7	S/N	Date of production (year-month)
8	REV	Item revision number
9	Approval	Approvals
10	Environment	Separate collection symbol

Battery inside



Fig. 316: Waste Disposal

This device contains a battery, and therefore it is labeled with the symbol shown beside according to the EU Directive 2006/66/EC.

WARNING!



Batteries can be harmful to the environment. Damaged or unusable batteries must be disposed of in a container specially reserved for this purpose.

In general, appropriate local guidelines and regulations must be followed when disposing of electrical devices and batteries.

8.1.1 Measuring Values

Voltages

Measuring values, voltages	
Measuring voltages ⅄ / Δ	**398/690 V_{AC}**
: Range rated value ($V_{LLrated}$)	100 V_{AC} up to 690 V_{AC}
: Maximum value (V_{LLmax})	max. 897 V_{AC}
: Rated voltage phase – ground	600 V_{AC}
: Rated surge voltage	6.0 kV
Input resistance per path	2.5 MΩ
Maximum power consumption per path	< 0.15 W
Linear measuring range	1.3 × V_{rated}
Measuring frequency	50/60 Hz (30.0 to 85.0 Hz)

Currents



With External CT

For correct measuring with external CT the input has to be one side grounded by the customer.

Measuring values, currents		Galvanically isolated
Measuring current	Rated value (I_{rated})	../1 A or ../5 A
Linear measuring range	Generator	3.0 × I_{rated}
	Mains/ground current	approx. 1.5 × I_{rated}
Maximum power consumption per path		< 0.10 VA
Rated short-time current (1 s)		50.0 A

Battery Voltage

Measuring values, battery voltage	Galvanically isolated
Input voltage range	8 to 40 V_{DC}

Released

8.1.2 Ambient Variables

CAUTION!

Device Operating Voltage

Connect the unit only to a DC power source that complies with the safety extra-low voltage (SELV) requirements.

Power supply	12/24 V_{DC} (8 to 40.0 V_{DC}), SELV
Intrinsic consumption	max. 27 W
Degree of pollution	2
Maximum elevation	4,000 m ASL
Insulation voltage	100 V_{DC} Marine applications: 40 V_{DC}
Overvoltage (≤ 2 min)	80 V_{DC}
Reverse voltage protection	Over the full supply range
Input capacitance	5,000 µF
Unit Power Supply	Negative potential grounded or positive potential grounded or ungrounded

8.1.3 Inputs/Outputs

Discrete inputs 'DI xx'

Discrete inputs	Galvanically isolated
Input range ($V_{cont. dig. input}$)	Rated voltage 12/24 V_{DC} (8 to 40.0 V_{DC})
Input resistance	approx. 20 kΩ

Discrete outputs 'R xx' (relay outputs)

Discrete/relay outputs	Potential free Configurable via LogicsManager	Galvanically isolated
Contact material		AgNi
General purpose (GP) ($V_{cont, relays}$)	AC	2.00 A_{AC}@250 V_{AC}
	DC	2.00 A_{DC}@24 V_{DC}
		0.36 A_{DC}@125 V_{DC} Not suitable for USA and Canada applications. Not evaluated by UL.
		0.18 A_{DC}@250 V_{DC}

		Not suitable for USA and Canada applications. Not evaluated by UL.
Pilot Duty	AC	B300

Analog inputs 'AI 01-03' (Type 1: 0/4 to 20 mA | 0 to 2000 Ω | 0 to 1 V)

Analog inputs	FlexIn™	Freely scalable
Maximum permissible voltage against Engine Ground		9 V
Maximum permissible voltage between Engine Ground & PE		100 V
Resolution		16 Bit
0/4 to 20 mA input	Internal load	~50 Ω
0 to 2000 Ω input	Load current	≤ 2.3 mA
0 to 1V input	Input resistance	approx. ~91 kΩ

Analog outputs 'AO 01' "Speed Biasing" (Type 1: ±20 mA | ±10 V | PWM)

Analog output	Freely scalable Pre-configured to "11.03 Speed bias [%]"	Galvanically isolated
Resolution		min. 12 bit
Configurable as	(bipolar)	±20 mA, ±10 V_{DC}
PWM output		±10 V_{DC}, 500 Hz duty cycle
Shunt resistor		max. 500 Ω
Galvanically isolation to PE		min. 100 V_{AC}

Analog outputs 'AO 02' "Voltage Biasing" (Type 1: ±20 mA | ±10 V | PWM)

Analog output	Freely scalable Pre-configured to "11.02 Voltage bias [%]"	Galvanically isolated
Resolution		min. 12 bit
Configurable as	(bipolar)	±20 mA, ±10 V_{DC}
PWM output		±10 V_{DC}, 500 Hz duty cycle
Shunt resistor		max. 500 Ω
Basic isolation to PE		500 V_{RMS}
Reinforced isolation to PE		300 V_{RMS}

Released

8.1.4 Interfaces

USB (slave)

USB 2.0 interface	Galvanically isolated
Type	USB 2.0 standard; slave (Type B)
Data rate	max. 12 Mbit/s
Insulation	Galvanically isolated
Bus Voltage	5 V
Current consumption	approx. 10 mA

RS-485 interface

RS-485 interface	Galvanically isolated
Insulation voltage (continuously)	100 V_{AC}
Insulation test voltage (1 s)	1700 V_{DC}
Version	RS-485 Standard

CAN bus interface

CAN bus interface	Galvanically isolated
Insulation voltage (continuously)	100 V_{AC}
Insulation test voltage (1 s)	1700 V_{DC}
Version	CAN bus
Internal line termination	Not available

Ethernet interface

Ethernet bus interface	Galvanically isolated Only one MAC ID is required
Insulation voltage (continuously)	100 V_{AC}
Insulation test voltage (1 s)	1700 V_{DC}
Version	Ethernet 10/100Base-T/TX
Ethernet plug socket	RJ45 standard, shielded 2 LEDs to indicate communication.
Ethernet cable	CAT 5 or 5e (class D) Shielding: F/UTP according to ISO/IEC 11801 (foil overall shielding, pairs unshielded)
Green LED	Indicates link activity (blinking during data transmission)
Yellow LED	Indicates link status (regarding speed): 10 Mb/s: LED switched-off

	100 Mb/s: LED switched-on
Internal shield termination	Available

8.1.5 Real Time Clock Battery

Type	Lithium
Life span (operation without power supply)	approx. 5 years
Battery field replacement	Not allowed. Please contact your Woodward service partner.

8.1.6 Display (plastic housing variant, only)

Type	LCD display
Size	Diagonal: 5,7'' (144.8 mm)
Resolution	320 x 240 pixel
Picture quality	up to 8 bad dots allowed
Backlight luminance	550 cd/m^2 (max)
Temperature threshold (Heater ON/OFF)	-20 °C ambient (for "...-LT" variants, only)

8.1.7 Housing

Housing type

Type	**Plastic**	**Sheet metal**
	easYpack	Custom
Dimensions (W × H × D)	282 × 216 × 96.3 mm	250 × 227 × 50 mm
Front cutout (W × H)	249 [+1.1] × 183 [+1.0] mm	-/-
Weight	approx. 1890 g	approx. 1630 g
Wiring	Screw-plug-terminals 2.5 mm²	
Recommended locked torque	4 inch pounds / 0.5 Nm. Use 90 °C copper wire or better. Use class 1 wire only or equivalent.	

Protection

Protection system	Plastic	IP54 in the front with clamp fasteners
		IP66 in the front with screw kit

Released

		IP20 on the rear side
	Sheet metal	IP20
Front foil (plastic housing)		Insulating surface

8.1.8 Approvals

EMC test (CE)	Tested according to applicable EMC standards. Refer to “8.2 Environmental Data” for details
Listings	CE marking UL, Ordinary Locations, File No.: E231544 UL recognized component, category FTPM2/8, File No.: E347132 (pending) cUL CSA

8.2 Environmental Data

Vibration

Frequency range - sine sweep	5 Hz to 100 Hz
Acceleration	4 G
Standards	IEC 60068-2-6, Fc
	Lloyd’s Register, Vibration Test2
	SAEJ1455 Chassis Data
Frequency range - random	10 Hz to 2000 Hz
Power intensity	0.04 G^2/Hz
RMS value	8.2 Grms
Standards	MIL-STD 202F, M214A, SAE J1455

Shock

Shock	40 G, Saw tooth pulse, 11 ms
Standards	MIL-STD 810F, M516.5, Procedure 1

Temperature

Housing type			»...-LT« version, only
Plastic	Cold, Dry Heat (storage)	-30 °C (-22 °F) / 80 °C (176 °F)	-30 °C (-22 °F) / 80 °C (176 °F)
	Cold, Dry Heat (operating)	-20 °C (-4 °F) / 70 °C (158 °F)	-40 °C (-40 °F) / 70 °C (158 °F)
Sheet metal	Cold, Dry Heat (storage)	-40 °C (-40 °F) / 80 °C (176 °F)	

Released

	Cold, Dry Heat (operating)	-40 °C (-40 °F) / 70 °C (158 °F)
Standards	IEC 60068-2-2, Test Bb and Bd	
	IEC 60068-2-1, Test Ab and Ad	

Humidity

Humidity	60 °C, 95% RH, 5 days
Standards	IEC 60068-2-30, Test Db

Electromagnetic Compatibility

EN 61000-6-2	2005 - Electromagnetic compatibility (EMC). Generic standards. Immunity for industrial environment
EN 61000-6-4	2007 + A1: 2011 - Electromagnetic compatibility (EMC). Generic standards. Emission standard for industrial environments
EN 61326-1	2013 - Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements (according to industrial electromagnetic environment)

8.3 Accuracy

The accuracy declaration is defined by the according measurement ranges. The rated maximum of the single ranges are taken as 100%.

This results in the definitions:

- Range 1: 69/120 V rated = 100%
- Range 2: 277/480 V rated = 100%
- Range 3: 400/690 V rated = 100%

Measuring value	Display	Accuracy	Measuring start	Notes
Frequency				
Generator	15.0 to 85.0 Hz	0.1% (of 85 Hz)	5% (of PT secondary voltage setting)[1]	
Mains	30.0 to 85.0 Hz			
Voltage				
Wye generator / mains / busbar	0 to 650 kV	0.5% , Class 0.5 [2] related to: 69/277/400 V (Wye) 120/480/690 V (Delta)	1.5% (of PT secondary voltage setting)[1]	
Delta generator / mains / busbar			2% (of PT secondary voltage setting)[1]	

Released

Measuring value	Display	Accuracy	Measuring start	Notes
Power supply/Battery	0 to 40 V_{DC}	±0.5% related to 40 V	Related on the measurement range 8 to 40 V	0.5% equals 0.2 V (±0.2 V)
Current				
Generator	0 to 32,000 A	0.5% (of 1/5 A)[3] Class 0.5	1% (of 1.3/6.5 A)[3]	
Max. value				
Mains/ground current				
Real power				
Actual total real power value	-2 to 2 GW	1% (of 69/277/400 V x 1/5 A)[2/3]	Measuring starts with detecting the zero passage of current/ voltage	
Reactive power				
Actual value in L1, L2, L3	-2 to 2 Gvar	1% (of 69/277/400 V x 1/5 A)[2/3]	Measuring starts with detecting the zero passage of current/ voltage	
Power factor				
Actual value power factor L1	lagging 0.000 to 1.000 to leading 0.000	1%	1% (of 1.3/6.5 A)[3]	1.000 is displayed for measuring values below the measuring start
Miscellaneous				
Real energy	0 to 4,200 GWh		0.36% (of 1.3/6.5 A)[3]	Not calibrated
Operating hours	Max. 1 × 10^6 h			
Maintenance call hours	0 to 9,999 h			
Maintenance call days	0 to 999 d			
Start counter	0 to 65,535			
Battery voltage	8 to 40 V	±0.5% (of measurement range 0 to 40 V_{DC})		
Phase angle	-180 to 180°	± 1 degree	1.25% (of PT secondary volt. setting)	180° is displayed for measuring values below measuring start
Analog Inputs				
0 to 20 mA	Freely scalable	±0.5% related to 20 mA		2 wire input. 0.5% equals 0.1 mA ⇒ ± 0.1 mA)
0 to 2000 Ω	Freely scalable	±0.5% related to 2000 Ω		1 wire input (related to engine ground)[4]
0 to 1 V	Freely scalable	±0.5% related to 1 V		2 wire input. 0.5% equals 0.005 V⇒ ± 0.005 V)

Released

Measuring value	Display	Accuracy	Measuring start	Notes
Analog Outputs				
Type 1: ±20 mA | ±10 V | PWM	Freely scalable	≤1%		

[1] Setting of the parameter for the PT secondary rated voltage

[2] Depending on the used measuring range (120/480/690 V)

[3] Depending on the CT input definition (1/5 A) by customer settings. easY-I-XT hardware covers both 1 A and 5 A ranges.

[4] Some senders, like the VDO senders, are operating in the working range 0 to 200 Ohms. For sure, the 0.5% accuracy cannot be directly assigned to these senders. Therefore the accuracy percentage tolerance will be expanded accordingly. On the other hand, measurements have shown that under usual circumstances (at 20°C, no EMC surge or burst present) an accuracy of 1% for such senders can be kept.

Reference conditions

The reference conditions for measuring the accuracy are listed below.

Input voltage	Sinusoidal rated voltage
Input current	Sinusoidal rated current
Frequency	Rated frequency
Power supply	Rated voltage ± 2%
Power factor (cos φ)	1.000
Ambient temperature	23 °C ± 2 K
Warm-up period	20 minutes

8.4 Protection (ANSI)

"*ANSI Code*" *related Protection Functions*

Protection		related ANSI #
Generator:	Voltage / frequency	59 / 27 / 81O / 81U
	Overload, reverse/reduced power	32 / 32R / 32F
	Unbalanced load	46
	Synch Check	25
	Instantaneous overcurrent	50
	Time-overcurrent (IEC 255 compliant)	51 / 51 V
	Ground fault (measured ground current)	50G

Released

Protection		related ANSI #
	Power factor	55
	Rotation field	
Mains:	Voltage / frequency	59 / 27 / 81O / 81U /25
	Phase shift / rotation field / ROCOF (df/dt)	78
Busbar	Voltage	
	Frequency	

Released

9 Appendix

9.1 Paper strip (Metal Housing)

For labeling the LEDs, either the supplied paper strip or a paper strip labeled by the user can be inserted into the pocket of the front foil. The dimensions for a suitable paper strip can be taken from the following drawing.

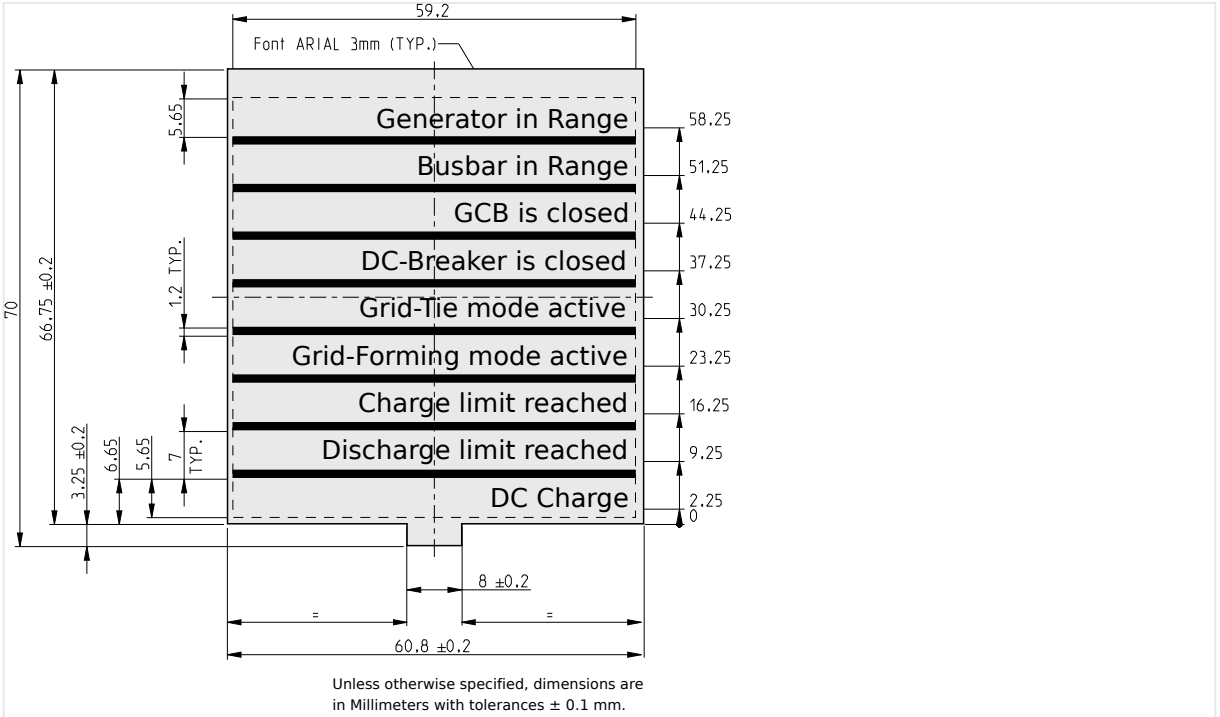


Fig. 317: Dimension of paper strip for easY-I-3000XT (Metal housing)

Released

9.2 Characteristics

9.2.1 Triggering Characteristics

Time-dependent overshoot monitoring

This triggering characteristic is used for time-dependent overcurrent monitoring.

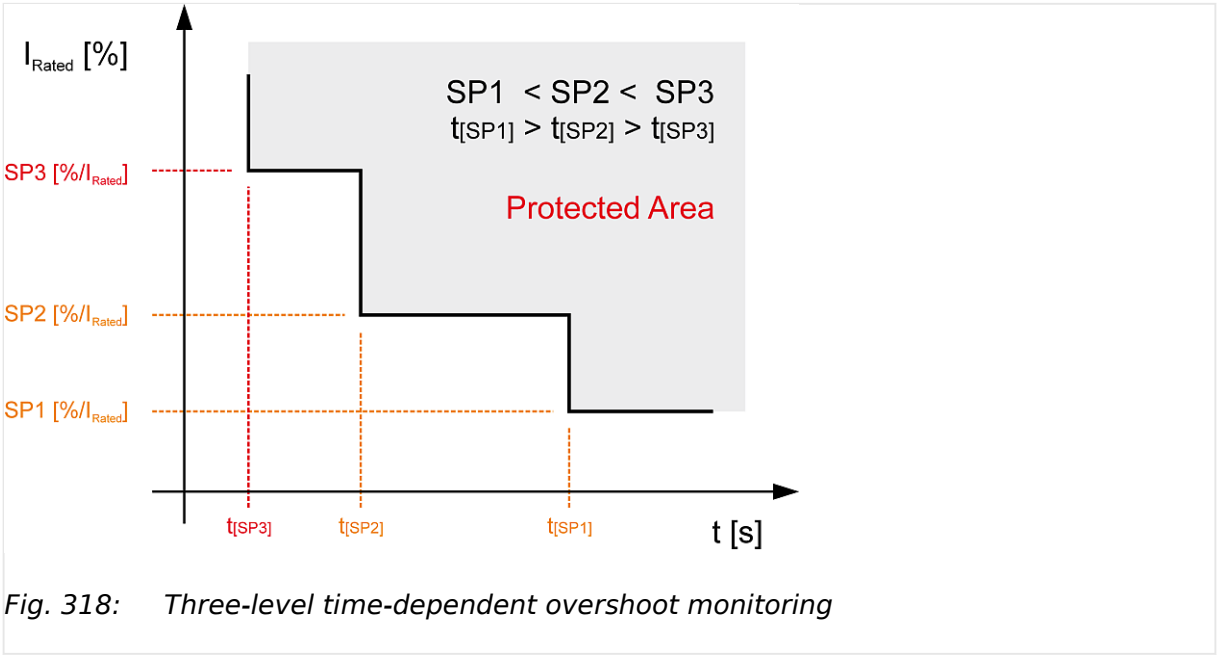


Fig. 318: Three-level time-dependent overshoot monitoring

Released

Two-level overshoot monitoring

This triggering characteristic is used for generator, mains and battery overvoltage, generator and mains overfrequency and overload IOP/MOP monitoring.

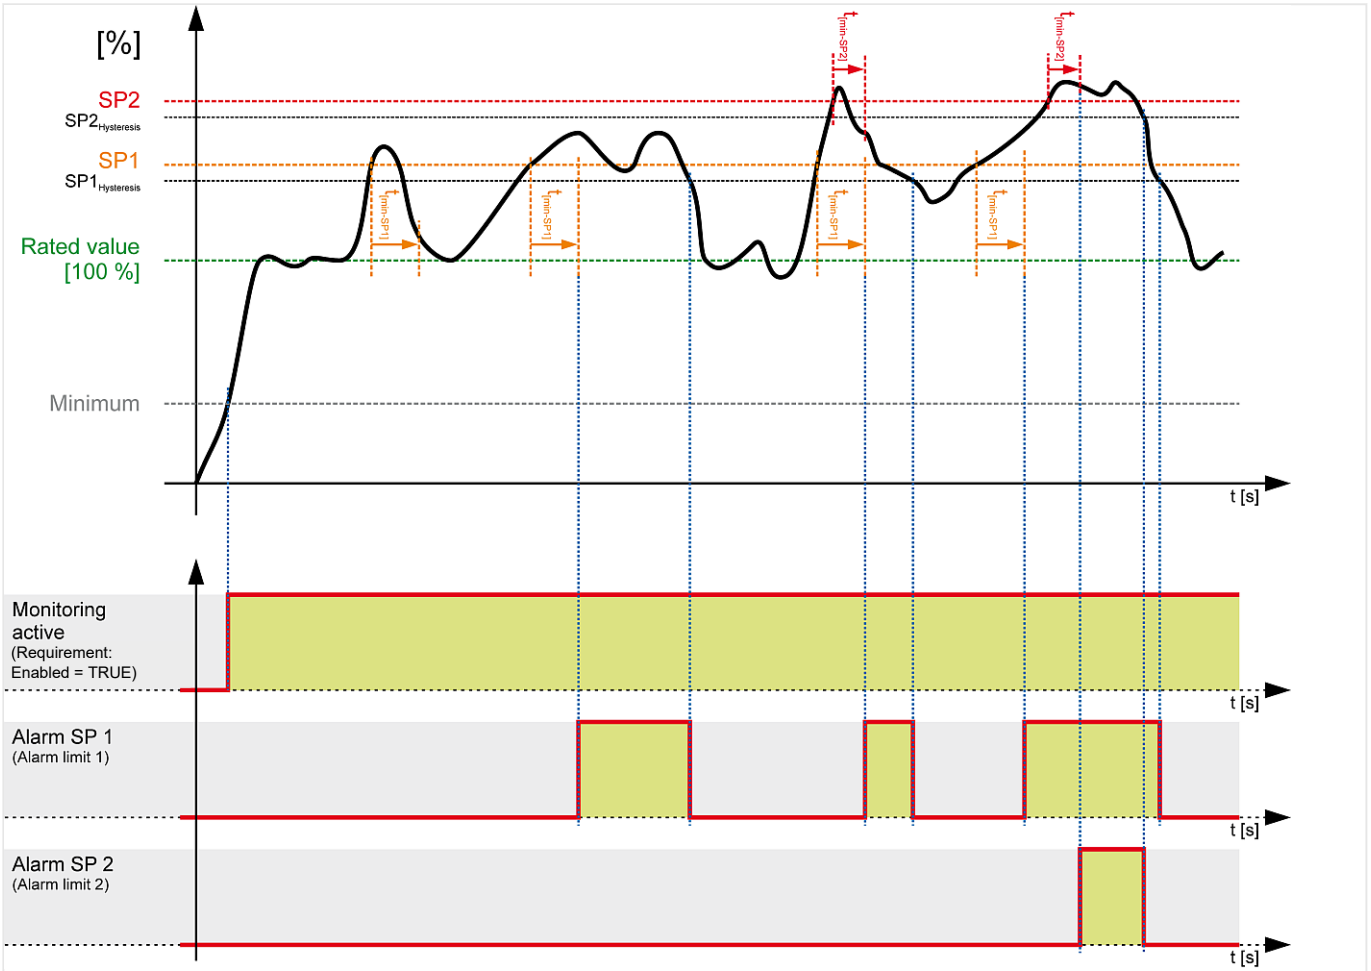


Fig. 319: Two-level overshoot monitoring

Released

Two-level undershoot monitoring

This triggering characteristic is used for generator, mains and battery undervoltage, generator and mains underfrequency monitoring.

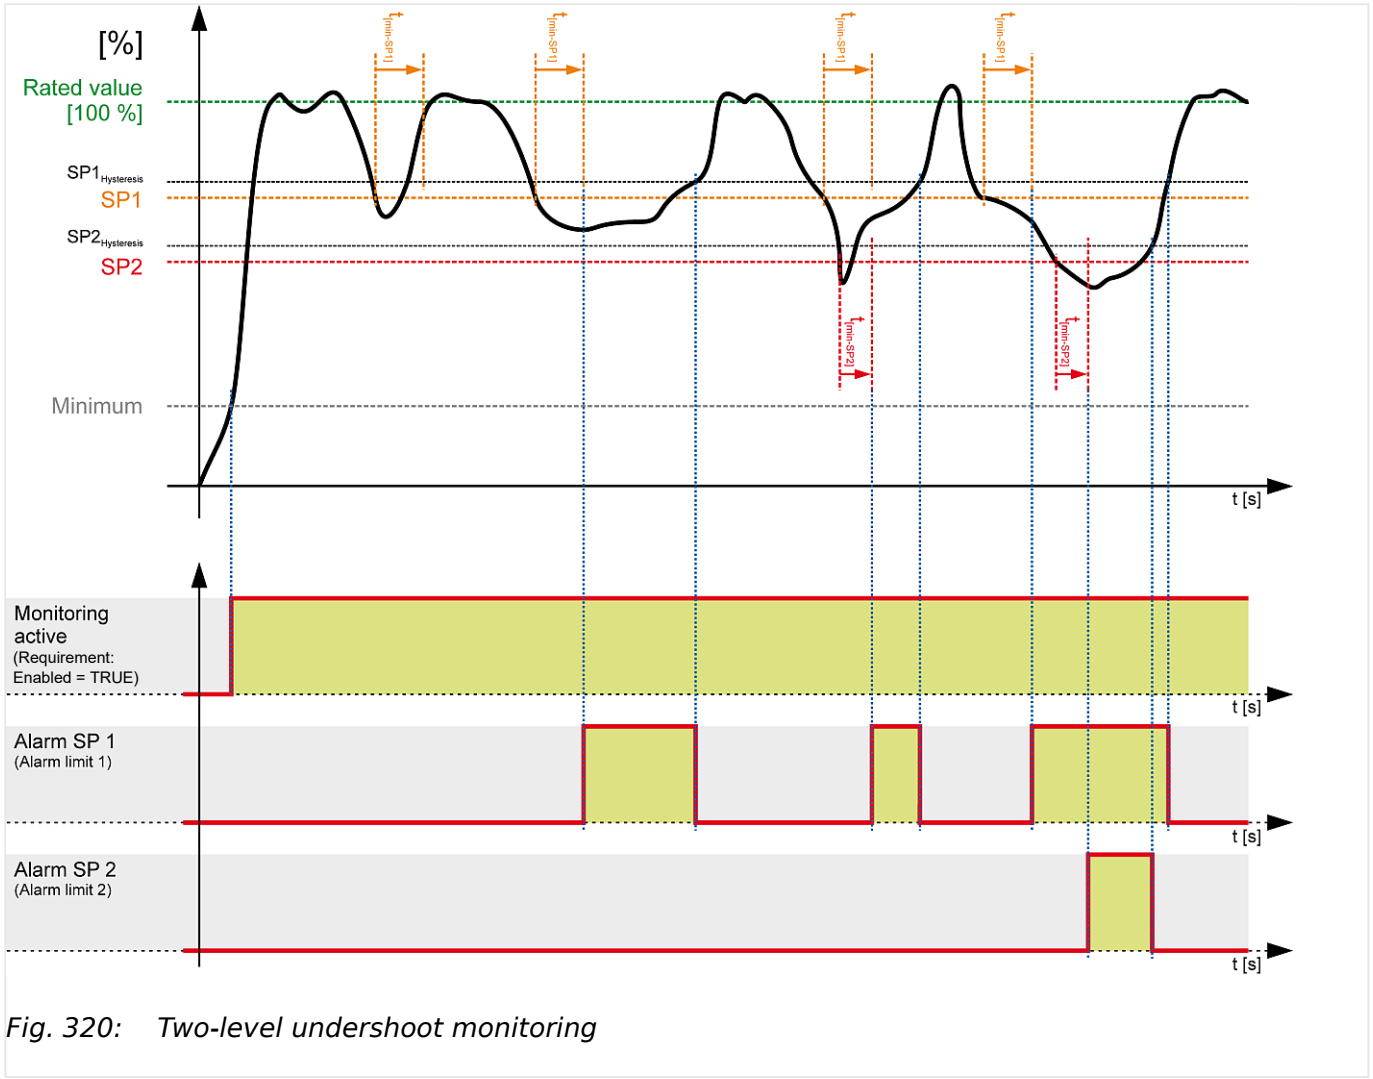


Fig. 320: Two-level undershoot monitoring

Two-level reversed/reduced load monitoring

This triggering characteristic is used for generator reversed/reduced load monitoring.

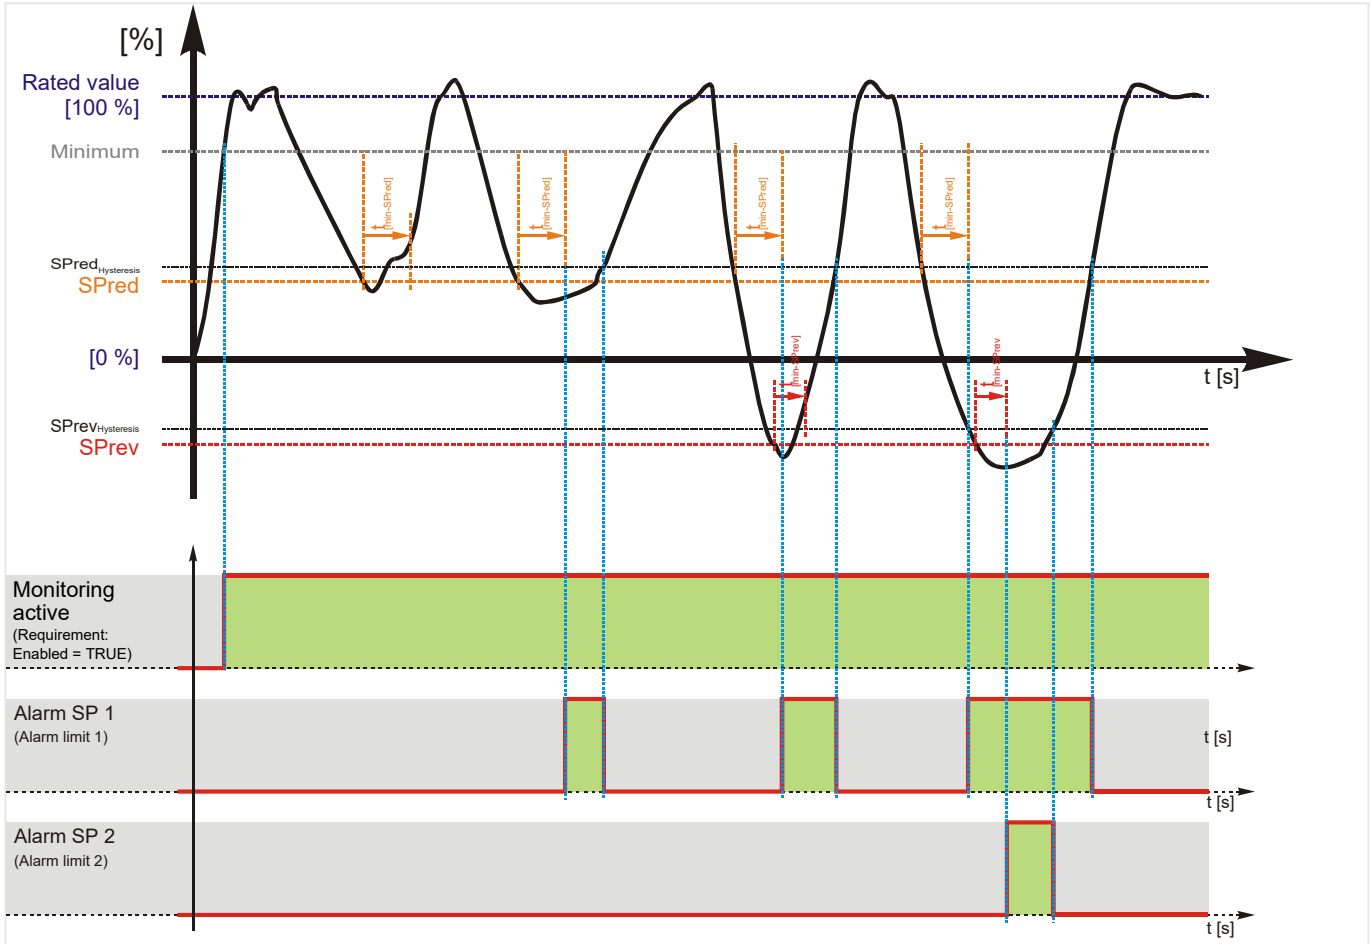


Fig. 321: Two-level reversed/reduced load monitoring

Released

Two-level unbalanced load monitoring

This triggering characteristic is used for generator unbalanced load monitoring.

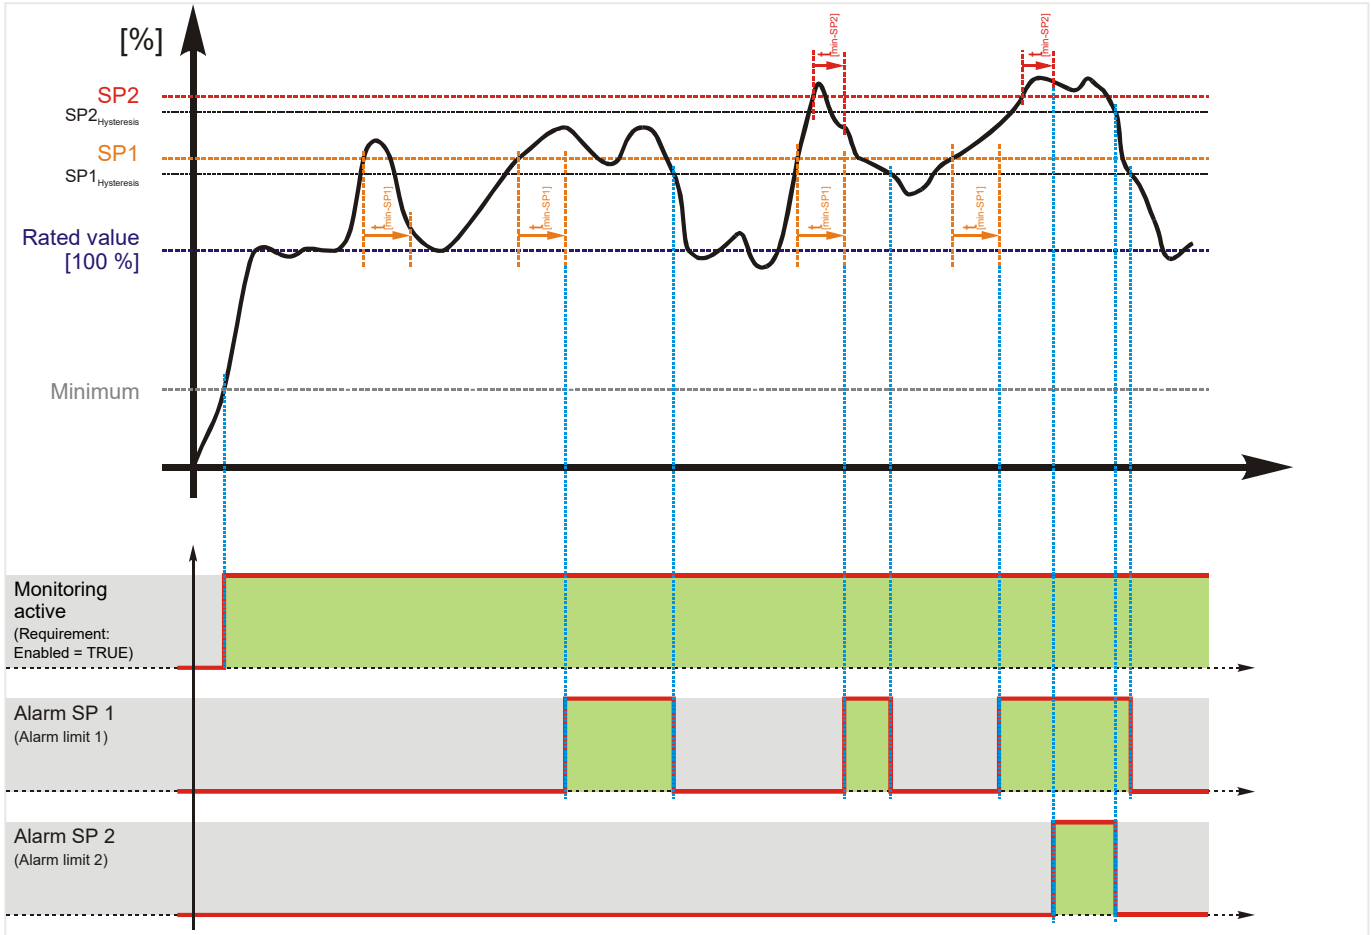


Fig. 322: Two-level unbalanced load monitoring

Released

One-level asymmetry monitoring

This triggering characteristic is used for generator voltage asymmetry monitoring.

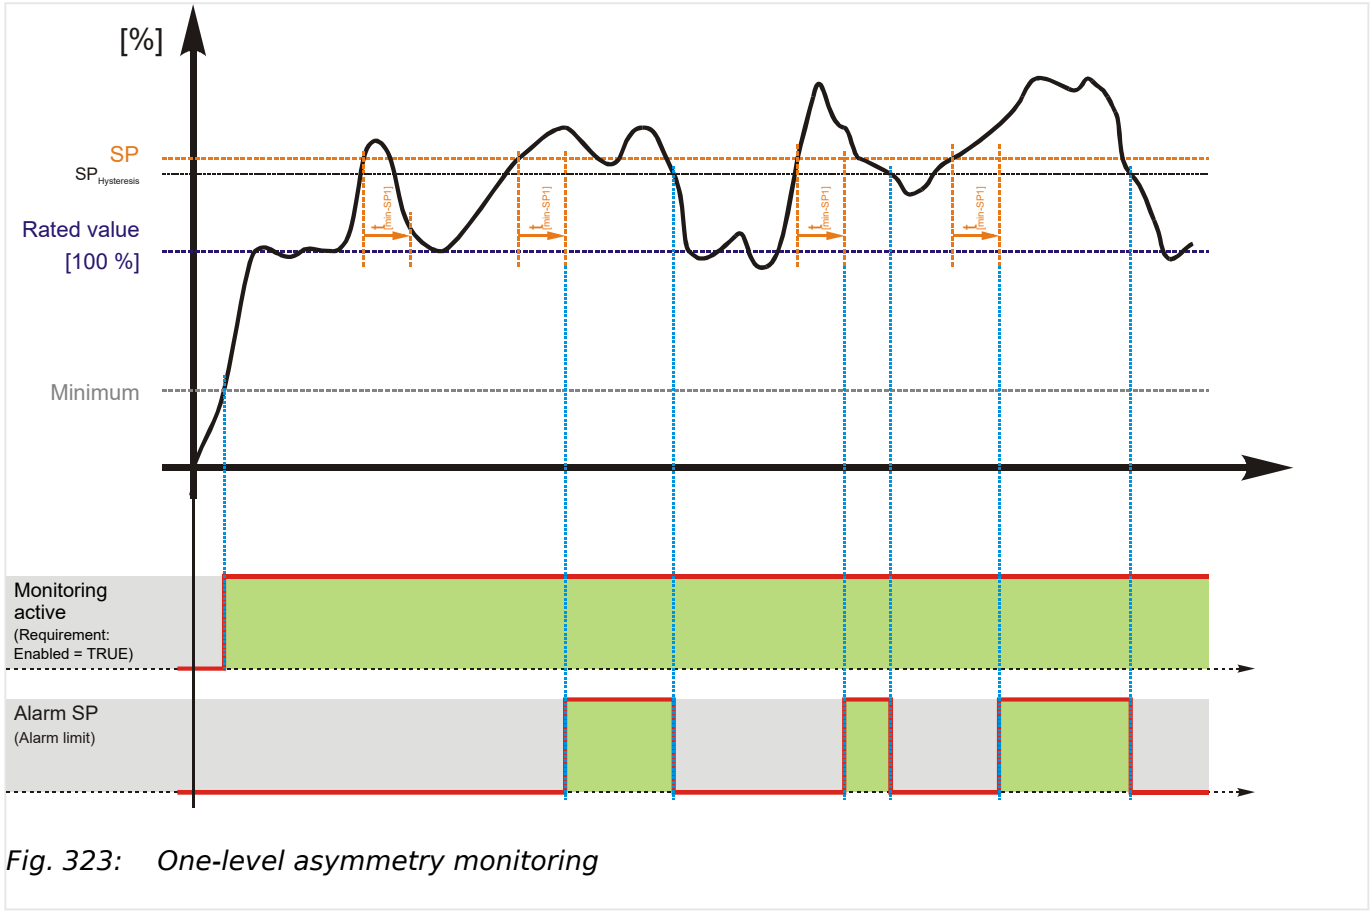


Fig. 323: One-level asymmetry monitoring

9.2.2 VDO Inputs Characteristics

Since VDO sensors are available in different types, the index numbers of the characteristic curve tables are listed.

⚙

1. ▷ Always order VDO sensors with the correct characteristic curve. Manufacturers of VDO sensors usually list these tables in their catalogs.

Released

9.2.2.1 VDO Input "Pressure"

0 to 5 bar/0 to 72 psi - Index "III"

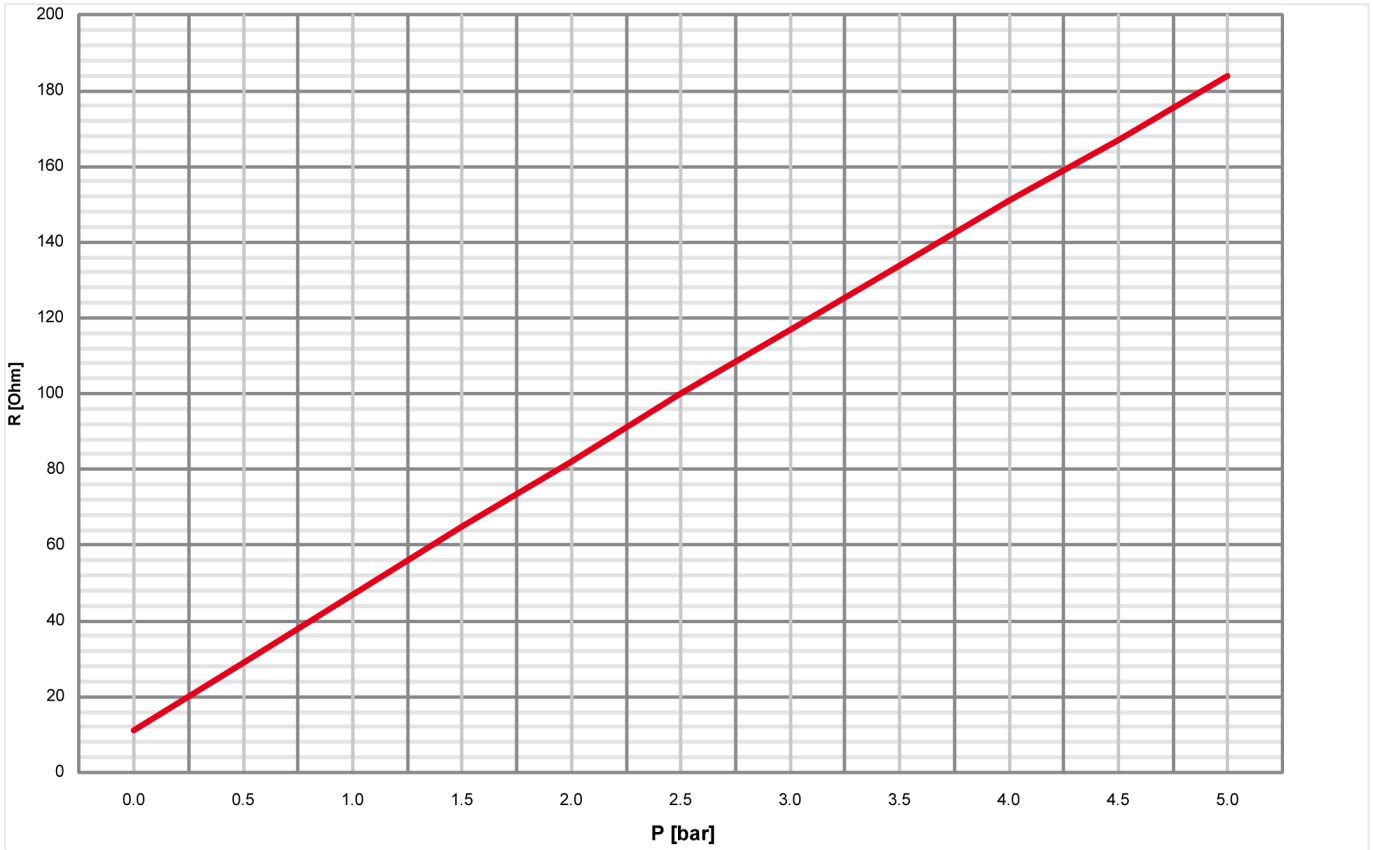


Fig. 324: Characteristics diagram VDO 0 to 5 bar, Index "III"

P [bar]	0	0.5	1	1.5	2	2.5	3	3.5	4	4.5	5
P [psi]	0	7.25	14.50	21.76	29.00	36.26	43.51	50.76	58.02	65.27	72.52
R [Ohm]	11	29	47	65	82	100	117	134	151	167	184

0 to 10 bar/0 to 145 psi - Index "IV"

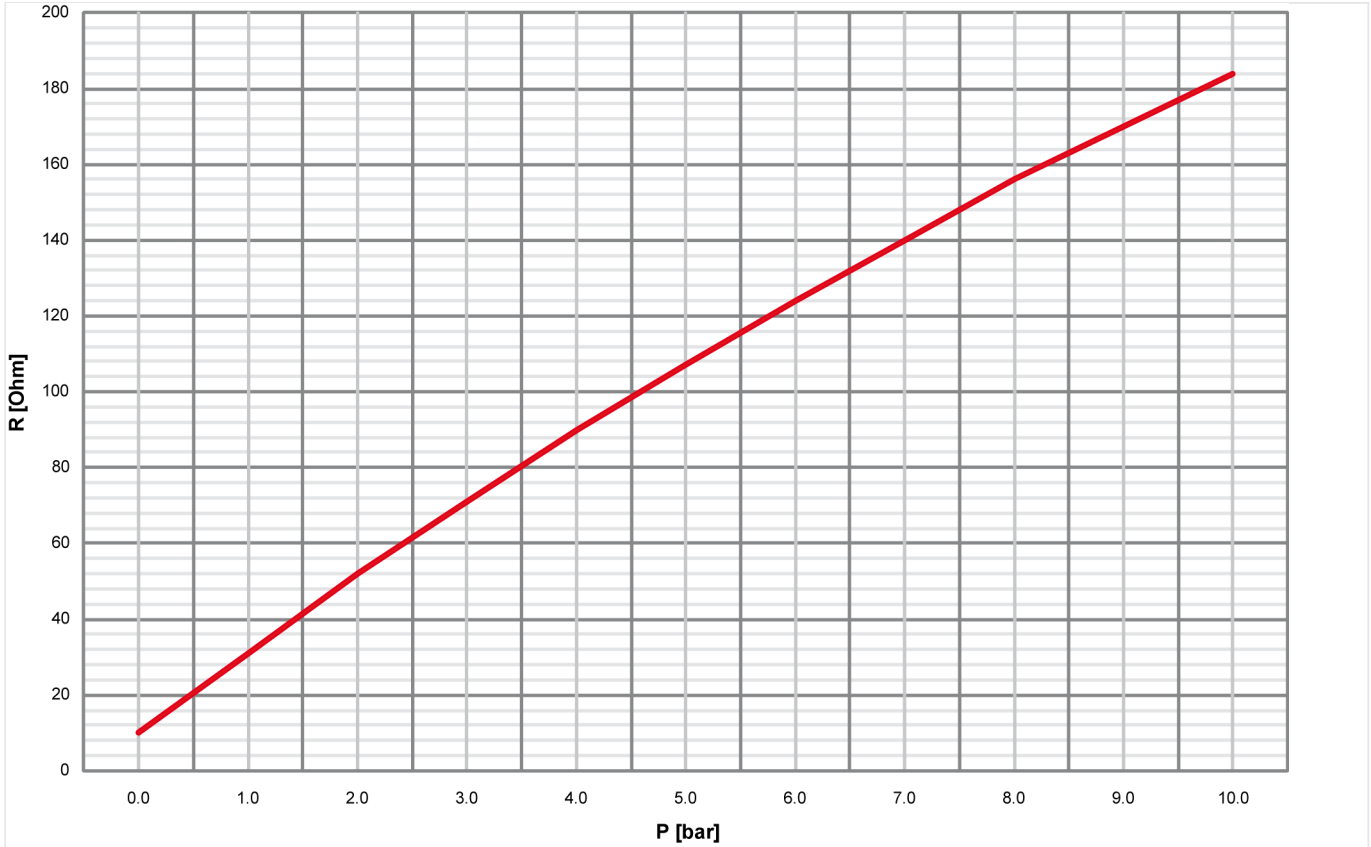


Fig. 325: Characteristics diagram VDO 0 to 10 bar, Index "IV"

P [bar]	0	0.5	1	1.5	2	3	4	5	6	7	8	8.5	9	10
P [psi]	0	7.25	14.50	21.76	29.00	43.51	58.02	72.52	87.02	101.53	116.03	123.28	130.53	145.04
R [Ohm]	10	21	31	42	52	71	90	107	124	140	156	163	170	184

Released

9.2.2.2 VDO Input "Temperature"

40 to 120 °C/104 to 248 °F - Index "92-027-004"

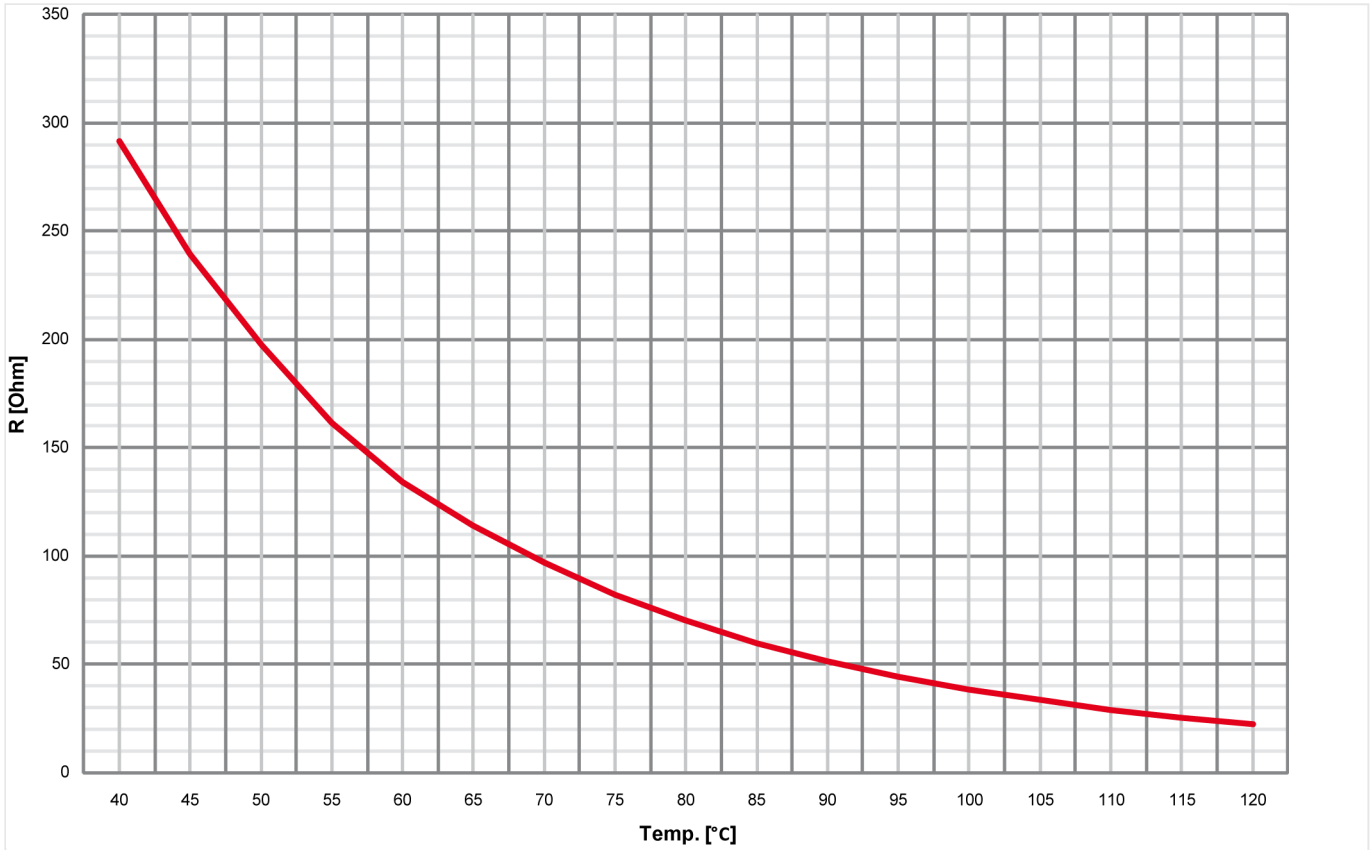


Fig. 326: Characteristics diagram VDO 40 to 120 °C - detail, Index "92-027-004"

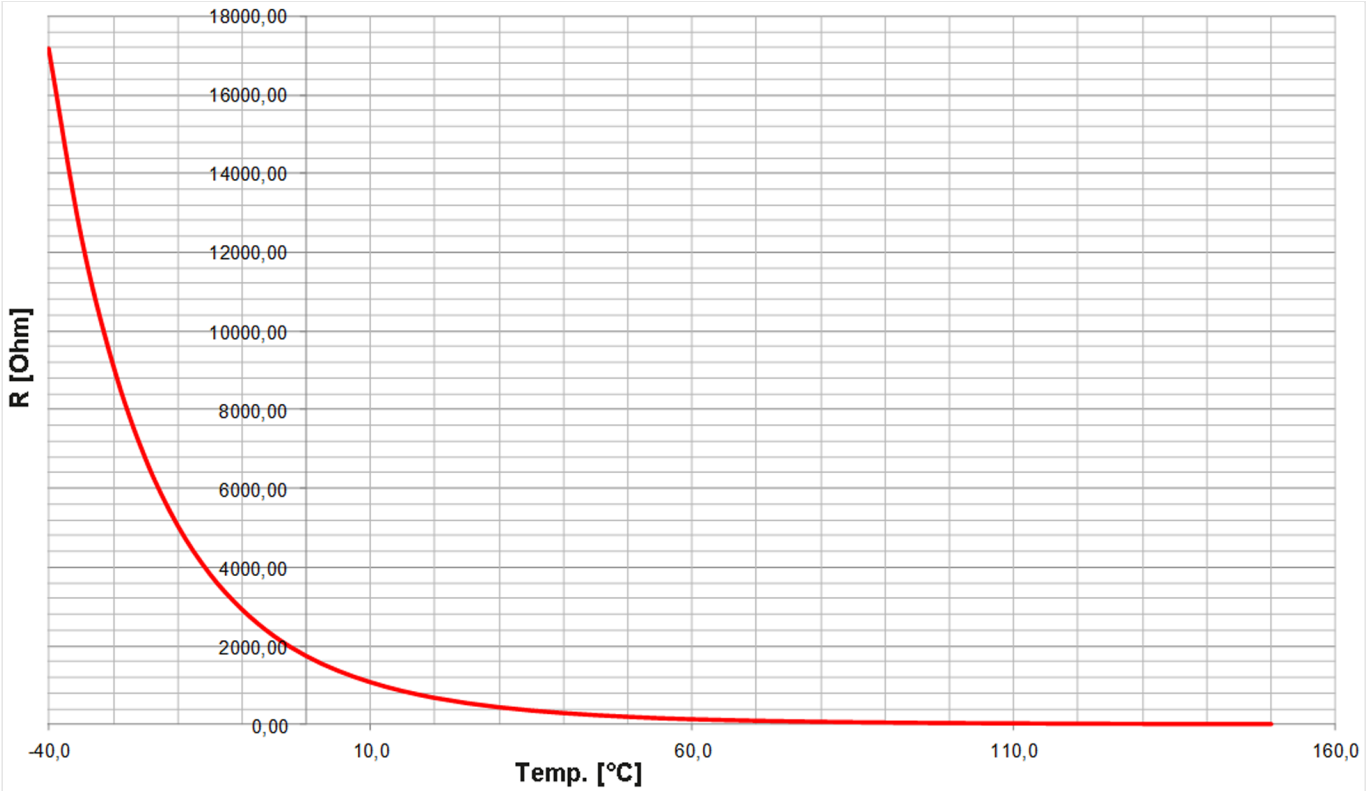


Fig. 327: Characteristics diagram VDO -40 to 120 °C - full range, Index "92-027-004"

Temp. [°C]	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
Temp. [°F]	-40	-31	-22	-13	-4	5	14	23	32	41	50
R [Ohm]	17162.4	12439.5	9134.5	6764.5	5067.6	3833.9	2929.9	2249.4	1743.1	1364.0	1075.6
... continued with further points:											
Temp. [°C]	15	20	25	30	35	40	45	50	55	60	65
Temp. [°F]	59	68	77	86	95	104	113	122	131	140	149
R [Ohm]	850.1	677.0	543.5	439.3	356.6	291.5	239.6	197.3	161.5	134.0	114.0
... continued with further points:											
Temp. [°C]	70	75	80	85	90	95	100	105	110	115	120
Temp. [°F]	158	167	176	185	194	203	212	221	230	239	248
R [Ohm]	97.1	82.4	70.1	59.7	51.2	44.3	38.5	33.4	29.1	25.5	22.4
... and finally continued with further points:											
Temp. [°C]	125	130	135	140	145	150					
Temp. [°F]	257	266	275	284	293	302					

R [Ohm]	19.75	17.44	15.46	13.75	12.26	10.96					

50 to 150 °C/122 to 302 °F - Index "92-027-006"

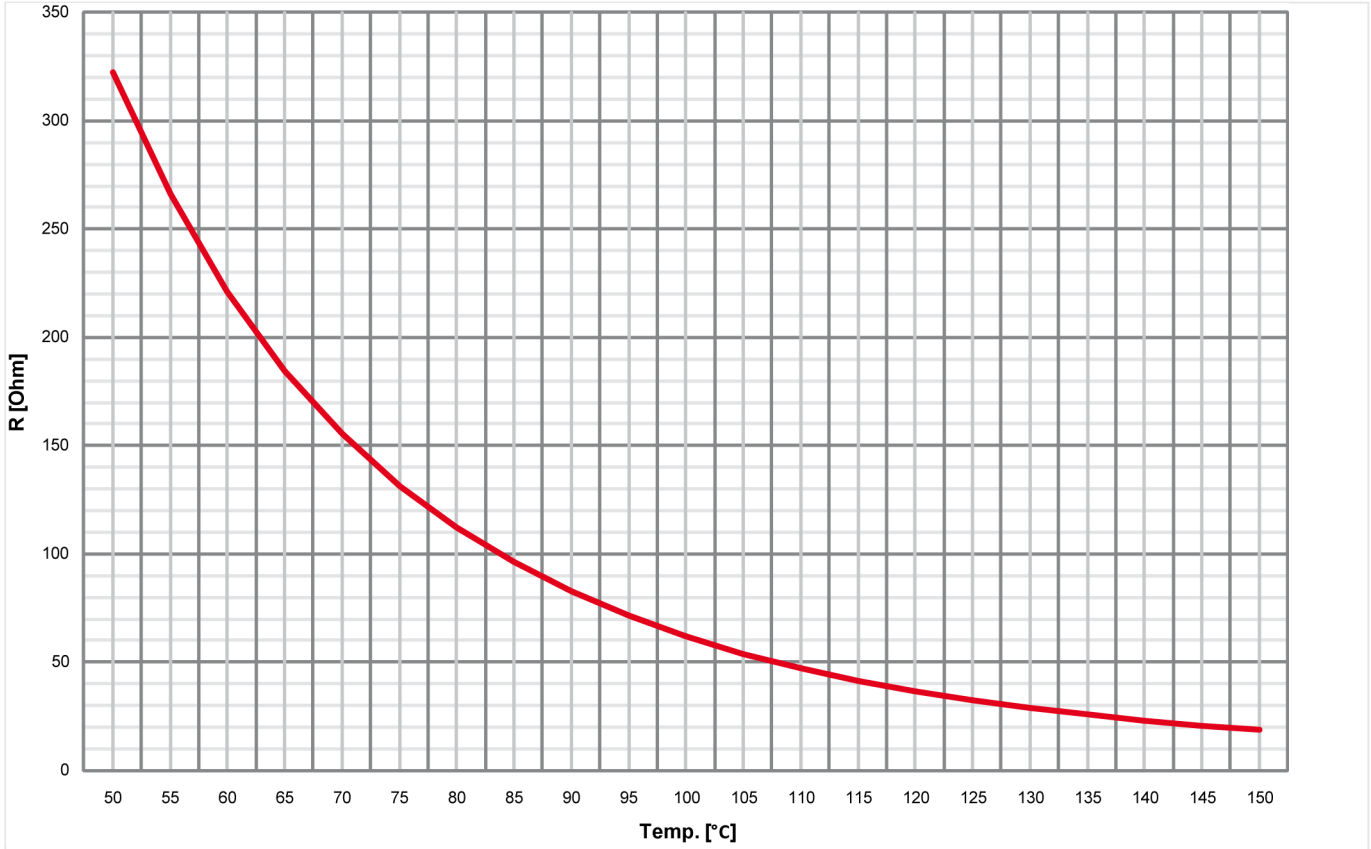


Fig. 328: Characteristics diagram VDO 50 to 150 °C - detail, Index "92-027-006"

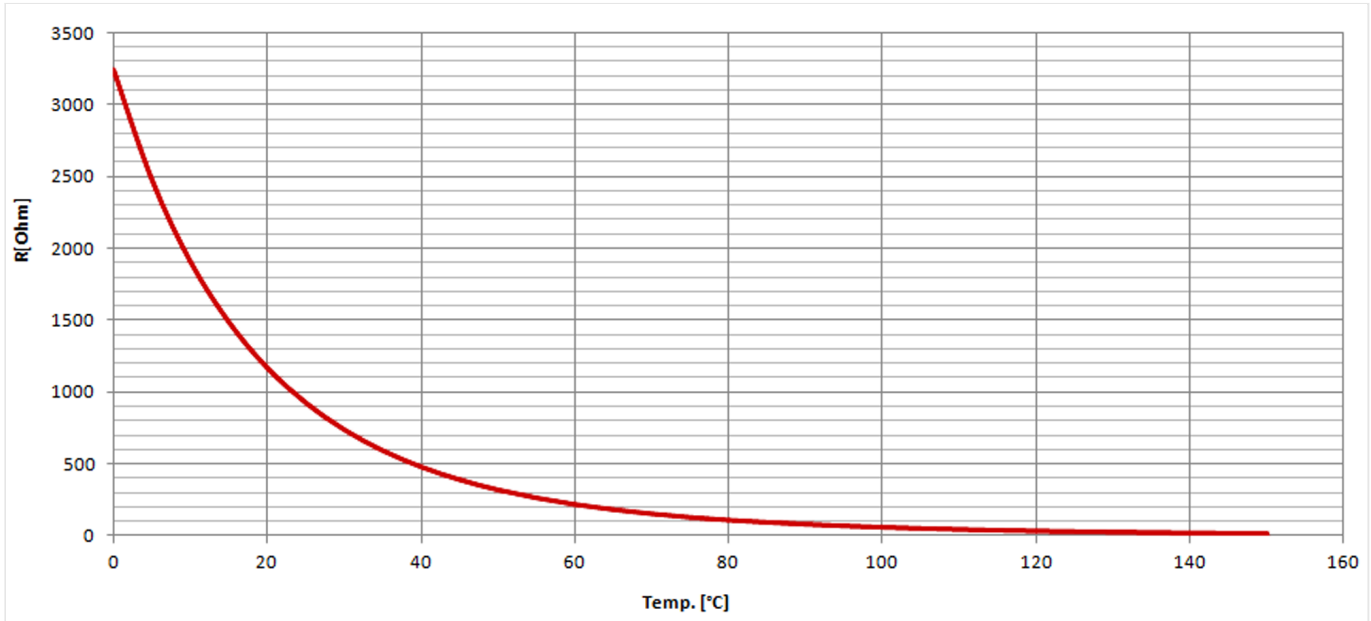


Fig. 329: Characteristics diagram VDO 0 to 120 °C - full range, Index "92-027-006"

Temp. [°C]	0	5	10	15	20	25	30	35	40	45	50
Temp. [°F]	32	41	50	59	68	77	86	95	104	113	122
R [Ohm]	3240.18	2743.6	1905.87	1486.65	1168.64	926.71	739.98	594,9	481,53	392.57	322.17

Temp. [°C]	55	60	65	70	75	80	85	90	95	100	105
Temp. [°F]	131	140	149	158	167	176	185	194	203	212	221
R [Ohm]	266.19	221.17	184.72	155.29	131.38	112.08	96.40	82.96	71.44	61.92	54.01

Temp. [°C]	110	115	120	125	130	135	140	145	150	
Temp. [°F]	230	239	248	257	266	275	284	293	302	
R [Ohm]	47.24	41.42	36.51	32.38	28.81	25.70	23.00	20.66	18.59	

9.2.2.3 Pt100 RTD

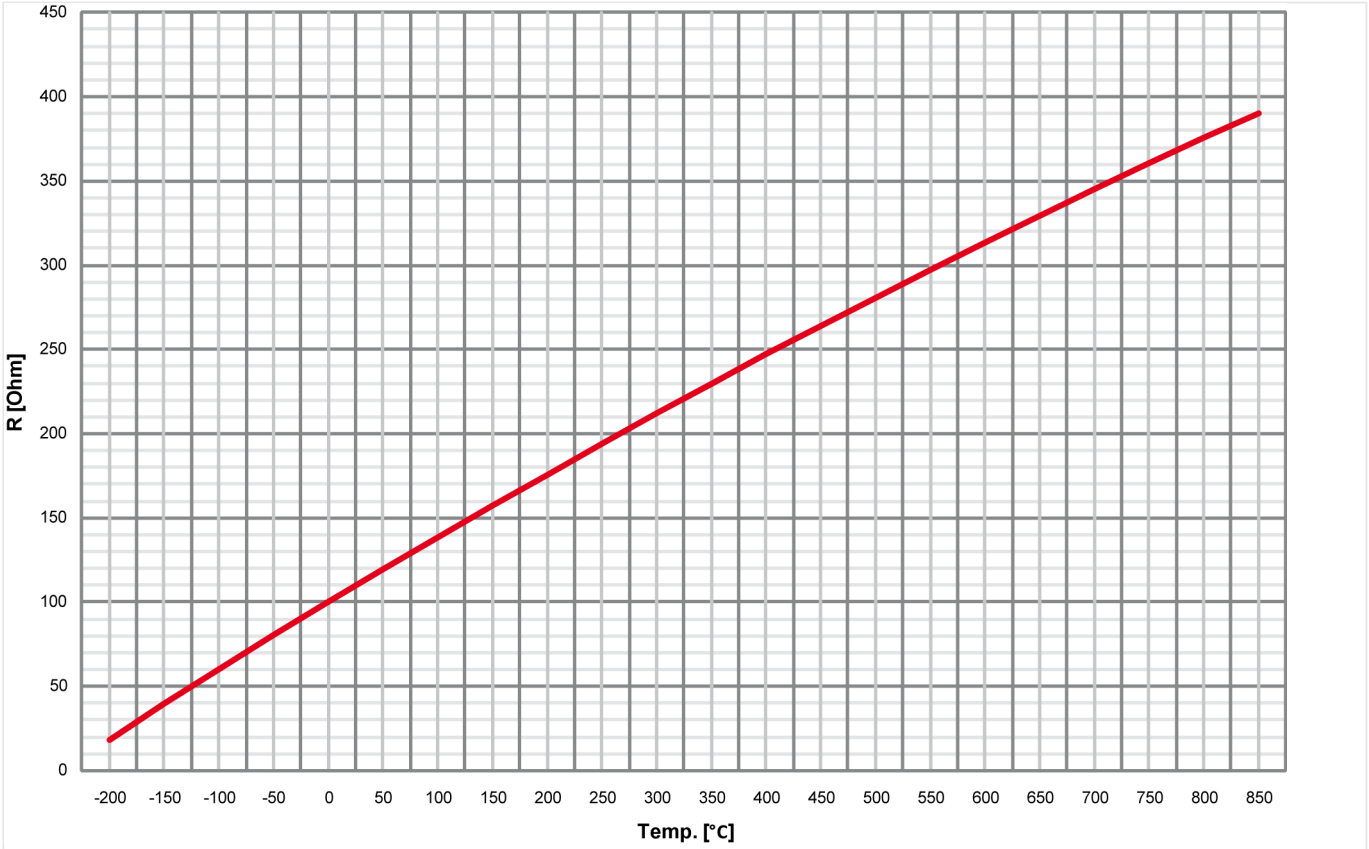


Fig. 330: Characteristics diagram Pt100

Released

Temp. [°C]	-200	-150	-100	-50	0	10	20	30	40	50	60
Temp. [°F]	-328	-238	-148	-58	32	50	68	86	104	122	140
R [Ohm]	18.5	39.7	60.25	80.7	100	103.9	107.8	111.7	115.5	119.4	123.2

Temp. [°C]	70	80	90	100	125	150	175	200	225	250	300
Temp. [°F]	158	176	194	212	257	302	347	392	437	482	572
R [Ohm]	127.1	130.9	134.7	138.5	147.9	157.3	166.6	175.8	188.6	194.1	212.0

Temp. [°C]	350	400	450	500	550	600	650	700	750	800	850
Temp. [°F]	662	752	842	932	1022	1112	1202	1292	1382	1472	1562
R [Ohm]	229.7	247.0	264.1	280.9	297.4	313.6	329.5	345.1	360.5	375.5	390.25

9.2.2.4 Pt1000 RTD

The characteristic of the Pt1000 temperature sender accords the characteristic diagram Pt100 at which the R value is to multiply with 10. Refer to “9.2.2.3 Pt100 RTD” for details.

9.2.2.5 NTC-Sender "AB_94099" (AB-Elektronik Sachsen GmbH)

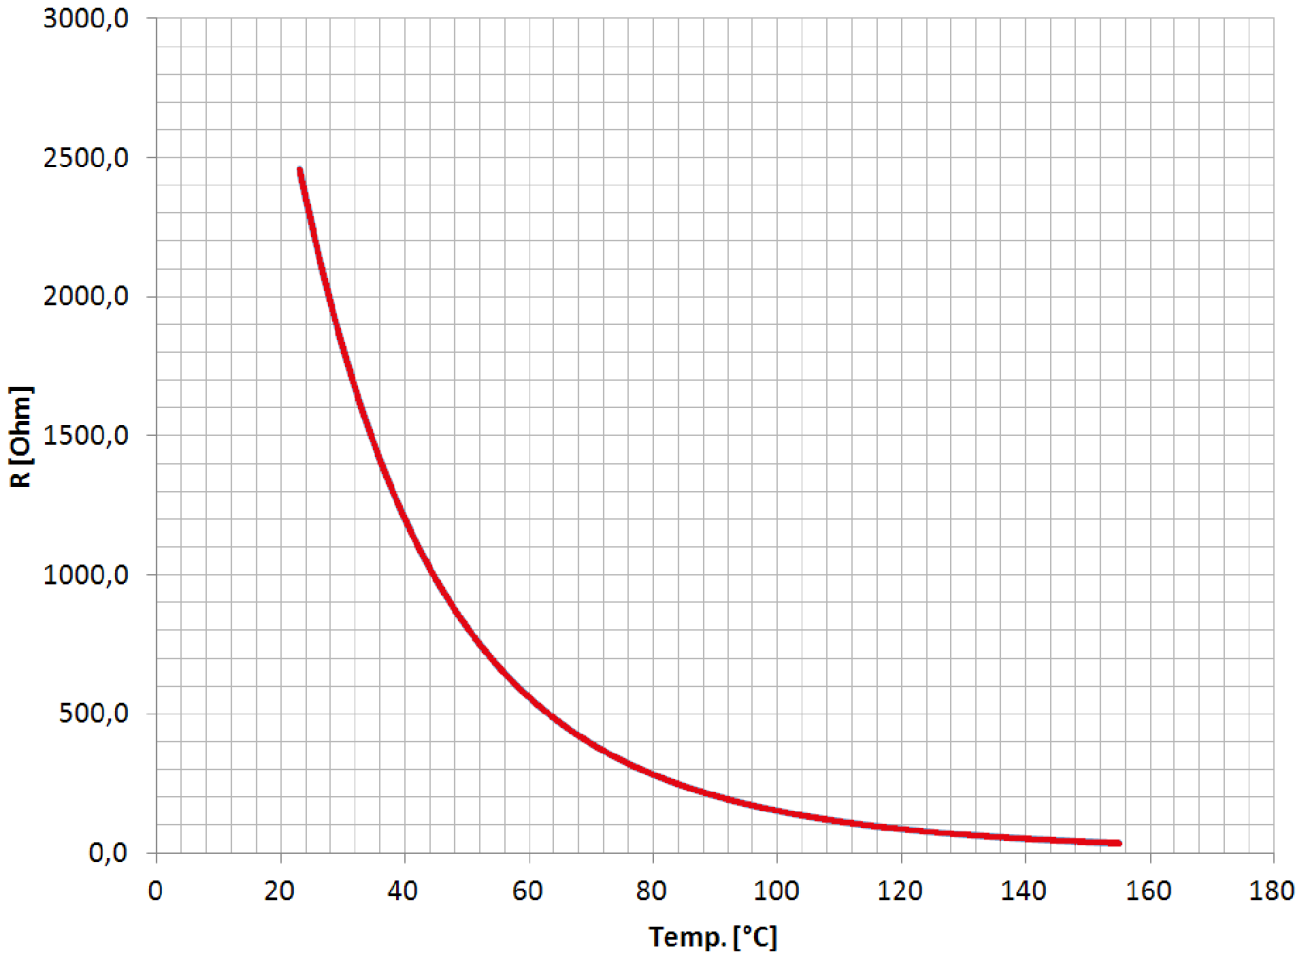


Fig. 331: Characteristic diagram "AB_94099"

9.3 Data Protocols

General note

The following data protocols / data telegrams are describing the currently defined full set of data for each protocol. Please ignore data your device does not support.

The following data protocols are implemented to be used

CANopen

- 65000: External Discrete I/O 1 to 8
- 65001: External Discrete I/O 9 to 16
- 65002: External Discrete I/O 17 to 24

Released

- 65003: External Discrete I/O 25 to 32

Modbus

- 5400: Basic Visualization



Protocol tables

Please browse the documentation server for data protocol tables as separate MS Excel files (for url see “QR Code”) .

9.3.1 Protocol 5400 (Basic Visualization)

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50000	int16		Protocoll-ID, always 5016			
50001	int16	3181	Skaling Power (16 bits) Exponent 10x W (5;4;3;2)			All
50002	int16	3182	Skaling Volts (16 bits) Exponent 10x V (2;1;0;-1)			All
50003	int16	3183	Skaling Amps (16 bits) Exponent 10x A (0;-1)			All
50004			Internal			
50005			Internal			
50006			Internal			
50007			Internal			
Topic AC Generator and Busbar values						
50008	int16	283	Busbar Voltage L3-N	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P2
50009	int16	144	Generator frequency	Hz	*100	All
50010	int16	246	Total generator power	W	format defined by index 3181 (Modbus-Address 50001)	All
50011	int16	247	Total generator reactive power	var	format defined by index 3181 (Modbus-Address 50001)	All
50012	int16	160	Generator power factor		*1000	All
50013	int16	248	Generator voltage L1-L2	V	format defined by index 3182 (Modbus-Address 50002)	All
50014	int16	249	Generator voltage L2-L3	V	format defined by	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
					index 3182 (Modbus-Address 50002)	
50015	int16	250	Generator voltage L3-L1	V	format defined by index 3182 (Modbus-Address 50002)	All
50016	int16	251	Generator voltage L1-N	V	format defined by index 3182 (Modbus-Address 50002)	All
50017	int16	252	Generator voltage L2-N	V	format defined by index 3182 (Modbus-Address 50002)	All
50018	int16	253	Generator voltage L3-N	V	format defined by index 3182 (Modbus-Address 50002)	All
50019	int16	255	Generator current L1	A	format defined by index 3183 (Modbus-Address 50003)	All
50020	int16	256	Generator current L2	A	format defined by index 3183 (Modbus-Address 50003)	All
50021	int16	257	Generator current L3	A	format defined by index 3183 (Modbus-Address 50003)	All
50022	int16	209	Busbar Frequency	Hz	*100	All
50023	int16	254	Busbar Voltage L1-L2	V	format defined by index 3182 (Modbus-Address 50002)	All
50024	int16	279	Busbar Voltage L2-L3	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P2
50025	int16	280	Busbar Voltage L3-L1	V	format defined by index 3182	EG3500XT-P2

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
					(Modbus-Address 50002)	
50026	int16	281	Busbar Voltage L1-N	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P2
50027	int16	282	Busbar Voltage L2-N	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P2
50028	int16	5541	Setpoint frequency	Hz	*100	All
50029	int16	5641	Setpoint power factor (cosphi)		*1000	All
Topic AC Mains values						
50030	int16	147	Mains frequency	Hz	*100	All
50031	int16	258	Total mains active power	W	format defined by index 3181 (Modbus-Address 50001)	All
50032	int16	259	Total mains reactive power	var	format defined by index 3181 (Modbus-Address 50001)	All
50033	int16	208	Mains power factor		*1000	All
50034	int16	260	Mains voltage L1-L2	V	format defined by index 3182 (Modbus-Address 50002)	All
50035	int16	261	Mains voltage L2-L3	V	format defined by index 3182 (Modbus-Address 50002)	All
50036	int16	262	Mains voltage L3-L1	V	format defined by index 3182 (Modbus-Address 50002)	All
50037	int16	263	Mains voltage L1-N	V	format defined by index 3182 (Modbus-Address 50002)	All
50038	int16	264	Mains voltage L2-N	V	format defined by index 3182	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
					(Modbus-Address 50002)	
50039	int16	265	Mains voltage L3-N	V	format defined by index 3182 (Modbus-Address 50002)	All
50040	int16	266	Mains current L1	A	format defined by index 3183 (Modbus-Address 50003)	All
50041			0 (prepared mains current L2)	A		
50042			0 (prepared mains current L3)	A		
50043	int16	267	Average LSx Delta Mains voltage L-L	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P1 EG3500XT-P1
50044	int16	268	Average LSx Wye Mains voltage L-N	V	format defined by index 3182 (Modbus-Address 50002)	EG3500XT-P1 EG3500XT-P2
Topic AC System values						
50045	int16	239	Nominal real power in system	%	*100	All
50046	int16	240	Real power in system	%	*100	All
50047	int16	241	Reserve real power in system	%	*100	All
50048	int16	269	Active power LSx	W	format defined by index 3181 (Modbus-Address 50001)	EG3500XT-P1 EG3500XT-P2
50049	int16	270	Reactive power LSx	var	format defined by index 3181 (Modbus-Address 50001)	EG3500XT-P1 EG3500XT-P2
50050	int16	4608	Average LSx Mains delta frequency L-L	Hz	*100	EG3500XT-P1 EG3500XT-P2
Topic DC Analogue Values (Engine Values)						
50051	int16	10100	Internal			
50052	int16	10110	Battery voltage	V	*10	All
50053	int16	10159	Internal			
50054	uint16	2540	Internal			
50055	int16	2558	Hours until next maintenance	h	*1	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50056	int16	10111	Analog input 1		configurable	All
50057	int16	10112	Analog input 2		configurable	All
50058	int16	10115	Analog input 3		configurable	All
50059	int16	10117	Analog input 4		configurable	EG3500XT-P2
50060	int16	10151	Analog input 5		configurable	EG3500XT-P2
50061	int16	10152	Analog input 6		configurable	EG3500XT-P2
50062	int16	10153	Analog input 7		configurable	EG3500XT-P2
50063	int16	10154	Analog input 8		configurable	EG3500XT-P2
50064	int16	10155	Analog input 9		configurable	EG3500XT-P2
50065	int16	10156	Analog input 10		configurable	EG3500XT-P2
50066	int16	10157	Analog input 11			
50067	int16	10158	Analog input 12			
50068	int16	10310	Analog output 1	%	configurable	All
50069	int16	10311	Analog output 2	%	configurable	All
50070	int16	10317	Analog output 3	%	configurable	EG3500XT-P2
50071	int16	10318	Analog output 4	%	configurable	EG3500XT-P2
50072	int16	10319	Analog output 5	%	configurable	EG3500XT-P2
50073	int16	10320	Analog output 6	%	configurable	EG3500XT-P2
50074	int16	10170	External Analog input 1		configurable	All
50075	int16	10171	External Analog input 2		configurable	All
50076	int16	10172	External Analog input 3		configurable	All
50077	int16	10173	External Analog input 4		configurable	All
50078	int16	10174	External Analog input 5		configurable	All
50079	int16	10175	External Analog input 6		configurable	All
50080	int16	10176	External Analog input 7		configurable	All
50081	int16	10177	External Analog input 8		configurable	All
50082	int16	10178	External Analog input 9		configurable	All
50083	int16	10179	External Analog input 10		configurable	All
50084	int16	10180	External Analog input 11		configurable	All
50085	int16	10181	External Analog input 12		configurable	All
50086	int16	10182	External Analog input 13		configurable	All
50087	int16	10183	External Analog input 14		configurable	All
50088	int16	10184	External Analog input 15		configurable	All
50089	int16	10185	External Analog input 16		configurable	All
50090	int16	10245	External Analog Output 1	%	configurable	All
50091	int16	10255	External Analog Output 2	%	configurable	All
50092	int16	10265	External Analog Output 3	%	configurable	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50093	int16	10275	External Analog Output 4	%	configurable	All
50094	int16	2556	Days until next maintenance	days	*1	All
50095			Internal			
50096	int16		Engine Coolant Temperature (other usage) (HMI Analogmanager 8901)	°C °F	*1	All
50097	int16		Engine Oil Pressure (other usage ??) (HMI Analogmanager 8893)	bar psi	*10 bar *1 psi	All
50098			Internal			
Topic Control and Status						
50099	uint16		BITLIST			
			Control mode (STOP/AUTO/MANUAL/TEST) 1=AUTO - 04.01 Operation Mode Auto 2=STOP - 04.02 Operation Mode Stop 4=MANUAL - 04.03 Operation Mode Man 8=TEST - 04.03 Operation Mode Test		Mask: 000Fh	All
50100	int16	10202	Status message. This is an index number. Refer to manual chapter Status messages for more information.			All
50101			Internal			
50102	uint16	4153	BITLIST ControlBits1			
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			04.12 Start without closing GCB		Mask: 2000h	All
			04.64 Key activation		Mask: 1000h	All
			A manual START has been requested		Mask: 0800h	All
			A manual STOP has been requested		Mask: 0400h	All
			Internal		Mask: 0200h	All
			Internal		Mask: 0100h	All
			03.07 Engine monitoring delay expired		Mask: 0080h	All
			03.08 Breaker delay timer has expired		Mask: 0040h	All
			03.25 Engine shall run		Mask: 0020h	All
			04.27 Critical mode is active		Mask: 0010h	All
			03.06 Engine release is active		Mask: 0008h	All
			Internal		Mask: 0004h	All
			Internal		Mask: 0002h	All
			04.61 Lamp test request		Mask: 0001h	All
50103	uint16	4154	BITLIST ControlBits2			

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			04.11 Mains settling		Mask: 1000h	All
			04.09 Emergency mode is currently active		Mask: 0800h	All
			03.40 Remote Shutdown (ID503, Bit9)		Mask: 0400h	All
			03.33 Free PID Controller 3: Lower Command		Mask: 0200h	All
			03.32 Free PID Controller 3: Raise Command		Mask: 0100h	All
			03.35 Free PID Controller 2: Lower Command		Mask: 0080h	All
			03.34 Free PID Controller 2: Raise Command		Mask: 0040h	All
			Internal		Mask: 0020h	All
			Internal		Mask: 0010h	EG3500XT-P1 EG3500XT-P2
			The genset runs mains parallel		Mask: 0008h	All
			03.37 Free PID Controller 1: Lower Command		Mask: 0004h	All
			03.36 Free PID Controller 1: Raise Command		Mask: 0002h	All
			Internal		Mask: 0001h	All
50104	uint16	4155	BITLIST ControlBits3			
			03.20 3-Pos. Controller Freq./Power raise		Mask: 8000h	All
			03.21 3-Pos. Controller Freq./Power lower		Mask: 4000h	All
			03.22 3-Pos. Controller Volt./ReactPow raise		Mask: 2000h	All
			03.23 3-Pos. Controller Volt./ReactPow lower		Mask: 1000h	All
			04.06 GCB is closed		Mask: 0800h	All
			04.07 MCB is closed		Mask: 0400h	All
			05.16 Derating active (freely)		Mask: 0200h	All
			04.18 Synchronisation GCB procedure is active		Mask: 0100h	All
			04.19 Opening GCB relay is active		Mask: 0080h	All
			04.20 Close command GCB is active		Mask: 0040h	All
			04.21 Synchronisation MCB procedure is active		Mask: 0020h	All
			04.22 Open command MCB is active		Mask: 0010h	All
			04.23 Close command MCB is active		Mask: 0008h	All
			04.28 Unloading generator is active		Mask: 0004h	All
			04.29 Unloading mains is active		Mask: 0002h	All
			Internal		Mask: 0001h	All
50105	uint16	4156	BITLIST ControlBits4			
			04.16 GGB is closed		Mask: 8000h	EG3500XT-P1 EG3500XT-P2

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			04.17 GGB is released		Mask: 4000h	EG3500XT-P1 EG3500XT-P2
			04.24 Synchronisation GGB procedure is active		Mask: 2000h	EG3500XT-P1 EG3500XT-P2
			04.25 Open command GGB is active		Mask: 1000h	EG3500XT-P1 EG3500XT-P2
			04.26 Close command GGB is active		Mask: 0800h	EG3500XT-P1 EG3500XT-P2
			Dead busbar closure requ. for GCB,MCB or GGB		Mask: 0400h	All
			4.62 Active power load share is active		Mask: 0200h	All
			4.63 Reactive power load share is active		Mask: 0100h	All
			Generator with a closed GCB is requested		Mask: 0080h	All
			LDSS: The Engine shall start		Mask: 0040h	All
			LDSS: The Engine shall stop		Mask: 0020h	All
			LDSS: The Engine shall stop, if possible		Mask: 0010h	All
			LDSS: Minimum Running Time is active		Mask: 0008h	All
			04.43 The LDSS function is active		Mask: 0004h	All
			Internal		Mask: 0002h	All
			AUTOMATIC Run: Switch to Operating Mode STOP		Mask: 0001h	All
50106	uint16	4150	BITLIST ControlBits5			
			04.13 Remote Start request		Mask: 8000h	All
			04.14 Remote acknowledge		Mask: 4000h	All
			05.17 Uprating active		Mask: 2000h	All
			86.25 LM Frequency Droop active		Mask: 1000h	All
			86.26 LM Voltage Droop active		Mask: 0800h	All
			Synchronization mode Check active		Mask: 0400h	All
			Synchronization mode Permissive active		Mask: 0200h	All
			Synchronization mode Run active		Mask: 0100h	All
			86.85 LM Enable MCB		Mask: 0080h	All
			86.41 LDSS IOP Reserve power 2 ready		Mask: 0040h	All
			86.42 LDSS MOP Reserve power 2 ready		Mask: 0020h	All
			02.39 Mains decoubling enabled		Mask: 0010h	All
			04.70 Opening GCB active		Mask: 0008h	All
			Parameter set 1-7 selection Bit 3		Mask: 0004h	Rental
			Parameter set 1-7 selection Bit 2		Mask: 0002h	Rental

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			Parameter set 1-7 selection Bit 1		Mask: 0001h	Rental
50107	uint16	4084	BITLIST ControlBits 21			
			02.03 Generator voltage in range		Mask: 8000h	All
			02.06 Busbar voltage in range		Mask: 4000h	All
			02.11 Mains voltage and frequency in range		Mask: 2000h	All
			02.21 Busbar is dead		Mask: 1000h	All
			86.27 LM Mains failure by external device		Mask: 0800h	All
			87.70 LM Release engine monitoring		Mask: 0400h	All
			87.72 LM Disable mains monitoring		Mask: 0200h	All
			87.73 LM Mains decoupling MCB		Mask: 0100h	All
			87.74 LM Inhibit dead bus GCB		Mask: 0080h	All
			Load share diagnostic: Own Unit is suspected		Mask: 0040h	All
			02.45 Mains release breaker		Mask: 0020h	All
			Internal		Mask: 0010h	
			Internal		Mask: 0008h	
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
Topic Discrete Outputs						
50108	uint16	10107	BITLIST Relay Outputs 1			
			13.01 Relay-Output 1 (Self-test-relay)		Mask: 8000h	All
			13.02 Relay-Output 2		Mask: 4000h	All
			13.03 Relay-Output 3		Mask: 2000h	All
			13.04 Relay-Output 4		Mask: 1000h	All
			13.05 Relay-Output 5		Mask: 0800h	All
			13.06 Relay-Output 6		Mask: 0400h	All
			13.07 Relay-Output 7		Mask: 0200h	All
			13.08 Relay-Output 8		Mask: 0100h	All
			13.09 Relay-Output 9		Mask: 0080h	All
			13.10 Relay-Output 10		Mask: 0040h	All
			13.11 Relay-Output 11		Mask: 0020h	All
			13.12 Relay-Output 12		Mask: 0010h	All
			Internal		Mask: 0008h	All
			Internal		Mask: 0004h	All
			Internal		Mask: 0002h	All
			Internal		Mask: 0001h	All
50109	uint16	10109	BITLIST Relay Outputs 2			

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			13.13 Relay-Output 13		Mask: 8000h	EG3500XT-P2
			13.14 Relay-Output 14		Mask: 4000h	EG3500XT-P2
			13.15 Relay-Output 15		Mask: 2000h	EG3500XT-P2
			13.16 Relay-Output 16		Mask: 1000h	EG3500XT-P2
			13.17 Relay-Output 17		Mask: 0800h	EG3500XT-P2
			13.18 Relay-Output 18		Mask: 0400h	EG3500XT-P2
			13.19 Relay-Output 19		Mask: 0200h	EG3500XT-P2
			13.20 Relay-Output 20		Mask: 0100h	EG3500XT-P2
			13.21 Relay-Output 21		Mask: 0080h	EG3500XT-P2
			13.22 Relay-Output 22		Mask: 0040h	EG3500XT-P2
			Internal		Mask: 0020h	All
			Internal		Mask: 0010h	All
			Internal		Mask: 0008h	All
			Internal		Mask: 0004h	All
			13.34 Transistor output 2		Mask: 0002h	EG3500XT-P2
			13.33 Transistor output 1		Mask: 0001h	EG3500XT-P2
50110	uint16	8005	BITLIST Relay Outputs 3			
			98.16 LM External DO 16		Mask: 8000h	All
			98.15 LM External DO 15		Mask: 4000h	All
			98.14 LM External DO 14		Mask: 2000h	All
			98.13 LM External DO 13		Mask: 1000h	All
			98.12 LM External DO 12		Mask: 0800h	All
			98.11 LM External DO 11		Mask: 0400h	All
			98.10 LM External DO 10		Mask: 0200h	All
			98.09 LM External DO 9		Mask: 0100h	All
			98.08 LM External DO 8		Mask: 0080h	All
			98.07 LM External DO 7		Mask: 0040h	All
			98.06 LM External DO 6		Mask: 0020h	All
			98.05 LM External DO 5		Mask: 0010h	All
			98.04 LM External DO 4		Mask: 0008h	All
			98.03 LM External DO 3		Mask: 0004h	All
			98.02 LM External DO 2		Mask: 0002h	All
			98.01 LM External DO 1		Mask: 0001h	All
50111	uint16	8009	BITLIST Relay Outputs 4			
			98.32 LM External DO 32		Mask: 8000h	All
			98.31 LM External DO 31		Mask: 4000h	All
			98.30 LM External DO 30		Mask: 2000h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			98.29 LM External DO 29		Mask: 1000h	All
			98.28 LM External DO 28		Mask: 0800h	All
			98.27 LM External DO 27		Mask: 0400h	All
			98.26 LM External DO 26		Mask: 0200h	All
			98.25 LM External DO 25		Mask: 0100h	All
			98.24 LM External DO 24		Mask: 0080h	All
			98.23 LM External DO 23		Mask: 0040h	All
			98.22 LM External DO 22		Mask: 0020h	All
			98.21 LM External DO 21		Mask: 0010h	All
			98.20 LM External DO 20		Mask: 0008h	All
			98.19 LM External DO 19		Mask: 0004h	All
			98.18 LM External DO 18		Mask: 0002h	All
			98.17 LM External DO 17		Mask: 0001h	All
50112	uint16	4157	BITLIST ControlBits6			
			28.01 Command 1 to LSx (OR)		Mask: 8000h	EG3500XT-P1 EG3500XT-P2
			28.02 Command 2 to LSx (OR)		Mask: 4000h	EG3500XT-P1 EG3500XT-P2
			28.03 Command 3 to LSx (OR)		Mask: 2000h	EG3500XT-P1 EG3500XT-P2
			28.04 Command 4 to LSx (OR)		Mask: 1000h	EG3500XT-P1 EG3500XT-P2
			28.05 Command 5 to LSx (OR)		Mask: 0800h	EG3500XT-P1 EG3500XT-P2
			28.06 Command 6 to LSx (OR)		Mask: 0400h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 0200h	All
			03.39 Neutral interlocking - Closed NC		Mask: 0100h	All
			05.17 Uprating active		Mask: 0080h	All
			Extended Busbar F okay		Mask: 0040h	Marine
			Extended Busbar V okay		Mask: 0020h	Marine
			Extended Busbar F/V okay		Mask: 0010h	Marine
			Extended Busbar is dead		Mask: 0008h	Marine
			Phaseangle MNS/BUS okay		Mask: 0004h	Marine
			Phaseangle GEN/BUS okay		Mask: 0002h	Marine
			Internal		Mask: 0001h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50113	int16		Internal			
Topic Alarm Management						
Subtopic General						
50114	uint16	10131	BITLIST Alarm General			
			01.11 New Alarm triggered		Mask: 8000h	All
			Internal		Mask: 4000h	
			Internal		Mask: 2000h	
			Internal		Mask: 1000h	
			Internal		Mask: 0800h	
			Internal		Mask: 0400h	
			Internal		Mask: 0200h	
			Internal		Mask: 0100h	
			Internal		Mask: 0080h	
			Internal		Mask: 0040h	
			01.06 Alarm class F latched		Mask: 0020h	All
			01.05 Alarm class E latched		Mask: 0010h	All
			01.04 Alarm class D latched		Mask: 0008h	All
			01.03 Alarm class C latched		Mask: 0004h	All
			01.02 Alarm class B latched		Mask: 0002h	All
			01.01 Alarm class A latched		Mask: 0001h	All
50115	uint16	10149	BITLIST Alarms 2 latched (unacknowledged)			
			08.30 Timeout Synchronisation GCB latched		Mask: 8000h	All
			08.31 Timeout Synchronisation MCB latched		Mask: 4000h	All
			08.32 Timeout Synchronisation GGB latched		Mask: 2000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 1000h	All
			Operating range failure 12 latched		Mask: 0800h	All
			08.45 CPU overload R1 trip latched		Mask: 0400h	All
			08.47 MCB failure 50BF		Mask: 0200h	All
			08.46 GCB failure 50BF		Mask: 0100h	All
			Internal		Mask: 0080h	All
			Internal		Mask: 0040h	All
			08.19 CANopen error at CAN Interface 2		Mask: 0020h	All
			08.16 Parameter Alignment LDSS		Mask: 0010h	All
			08.17 Missing members		Mask: 0008h	All
			08.48 MCB plausibility		Mask: 0004h	All
			Internal		Mask: 0002h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			Internal		Mask: 0001h	All
50116	uint16	4169	BITLIST Alarms 2 active			
			Timeout Synchronisation GCB		Mask: 8000h	All
			Timeout Synchronisation MCB		Mask: 4000h	All
			Timeout Synchronisation GGB		Mask: 2000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 1000h	All
			Gen/Busbar/Mains phase rotat.		Mask: 0800h	EG3500XT-P1 EG3500XT-P2
			CPU overload R1 trip		Mask: 0400h	All
			MCB failure 50BF		Mask: 0200h	All
			GCB failure 50BF		Mask: 0100h	All
			Internal		Mask: 0080h	All
			Internal		Mask: 0040h	All
			CANopen error at CAN Interface 2		Mask: 0020h	All
			Parameter Alignment LDSS		Mask: 0010h	All
			Missing members		Mask: 0008h	All
			MCB plausibility		Mask: 0004h	All
			Internal		Mask: 0002h	All
			Internal		Mask: 0001h	All
50117	uint16	10190	BITLIST Alarms 3 latched (unacknowledged)			
			08.34 GGB fail to close latched		Mask: 8000h	EG3500XT-P1 EG3500XT-P2
			08.35 GGB fail to open latched		Mask: 4000h	EG3500XT-P1 EG3500XT-P2
			08.27 Missing easYgen		Mask: 2000h	All
			08.28 Missing LS5		Mask: 1000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			Internal		Mask: 0100h	All
			08.44 Syst.update LS5		Mask: 0080h	EG3500XT-P1 EG3500XT-P2
			08.43 Syst.update easYgen		Mask: 0040h	All
			06.32 Gen.AC Wiring		Mask: 0020h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			06.33 Busbar1 AC Wiring		Mask: 0010h	EG3500XT-P2
			08.29 CANopen error interface 3		Mask: 0008h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50118	uint16	4193	BITLIST Alarms 3 active			
			GGB fail to close		Mask: 8000h	EG3500XT-P1 EG3500XT-P2
			GGB fail to open		Mask: 4000h	EG3500XT-P1 EG3500XT-P2
			Missing easYgen		Mask: 2000h	All
			Missing LS5		Mask: 1000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			Internal		Mask: 0100h	
			Syst.update LS5		Mask: 0080h	EG3500XT-P1 EG3500XT-P2
			Syst.update easYgen		Mask: 0040h	All
			Gen.AC Wiring		Mask: 0020h	All
			Busbar1 AC Wiring		Mask: 0010h	EG3500XT-P1 EG3500XT-P2
			CANopen error interface 3		Mask: 0008h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50119	uint16	4086	BITLIST ControlBits8			
			Operating Range Monitoring Code Number		Mask: FF00h	All
			The current segment number		Mask: 00FFh	All
Subtopic ??						
50120	uint16	10133	BITLIST Alarms 1 latched (unacknowledged)			
			Internal		Mask: 8000h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			Internal		Mask: 1000h	All
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			08.05 GCB fail to close latched		Mask: 0100h	All
			08.06 GCB fail to open latched		Mask: 0080h	All
			08.07 MCB fail to close latched		Mask: 0040h	All
			08.08 MCB fail to open latched		Mask: 0020h	All
			Internal		Mask: 0010h	All
			Internal		Mask: 0008h	All
			05.09 Maintenance days exceeded latched		Mask: 0004h	All
			05.10 Maintenance hours exceeded latched		Mask: 0002h	All
			08.18 CANopen error at CAN Interface 1		Mask: 0001h	All
50121	uint16	4167	BITLIST Alarms 1 active			
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			Internal		Mask: 1000h	All
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			GCB fail to close		Mask: 0100h	All
			GCB fail to open		Mask: 0080h	All
			MCB fail to close		Mask: 0040h	All
			MCB fail to open		Mask: 0020h	All
			Internal		Mask: 0010h	All
			Internal		Mask: 0008h	All
			Maintenance days exceeded		Mask: 0004h	All
			Maintenance hours exceeded		Mask: 0002h	All
			CANopen error at CAN Interface 1		Mask: 0001h	All
50122	uint16	10136	BITLIST Alarms AI 1 latched (unacknowledged)			
			Internal		Mask: 8000h	
			Internal		Mask: 4000h	
			Internal		Mask: 2000h	
			Internal		Mask: 1000h	

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			Internal		Mask: 0800h	
			Internal		Mask: 0400h	
			Internal		Mask: 0200h	
			Internal		Mask: 0100h	
			Internal		Mask: 0080h	
			Internal		Mask: 0040h	
			Internal		Mask: 0020h	
			Internal		Mask: 0010h	All
			08.02 Battery over voltage 2 latched		Mask: 0008h	All
			08.04 Battery under voltage 2 latched		Mask: 0004h	All
			08.01 Battery over voltage 1 latched		Mask: 0002h	All
			08.03 Battery under voltage 1 latched		Mask: 0001h	All
50123	uint16	4171	BITLIST Alarms Analog Inputs 1 active			
			Internal		Mask: 8000h	
			Internal		Mask: 4000h	
			Internal		Mask: 2000h	
			Internal		Mask: 1000h	
			Internal		Mask: 0800h	
			Internal		Mask: 0400h	
			Internal		Mask: 0200h	
			Internal		Mask: 0100h	
			Internal		Mask: 0080h	
			Internal		Mask: 0040h	
			Internal		Mask: 0020h	
			Internal		Mask: 0010h	All
			Battery over voltage 2		Mask: 0008h	All
			Battery under voltage 2		Mask: 0004h	All
			Battery over voltage 1		Mask: 0002h	All
			Battery under voltage 1		Mask: 0001h	All
50124	int16		Internal			
50125	int16		Internal			
Subtopic Generator/Inverter						
50126	uint16	10134	BITLIST Alarms Gen latched (unacknowledged)			
			06.01 Generator over frequency 1 latched		Mask: 8000h	All
			06.02 Generator over frequency 2 latched		Mask: 4000h	All
			06.03 Generator under frequency 1 latched		Mask: 2000h	All
			06.04 Generator under frequency 2 latched		Mask: 1000h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			06.05 Generator over voltage 1 latched		Mask: 0800h	All
			06.06 Generator over voltage 2 latched		Mask: 0400h	All
			06.07 Generator under voltage 1 latched		Mask: 0200h	All
			06.08 Generator under voltage 2 latched		Mask: 0100h	All
			06.09 Generator over current 1 latched		Mask: 0080h	All
			06.10 Generator over current 2 latched		Mask: 0040h	All
			06.11 Generator over current 3 latched		Mask: 0020h	All
			06.12 Reverse / reduced power 1 latched		Mask: 0010h	All
			06.13 Reverse / reduced power 2 latched		Mask: 0008h	All
			06.14 Generator overload IOP 1 latched		Mask: 0004h	All
			06.15 Generator overload IOP 2 latched		Mask: 0002h	All
			06.34 Busbar phase rotation mismatch latched		Mask: 0001h	EG3500XT-P2
50127	uint16	4161	BITLIST Alarms Generator active			
			Generator over frequency 1		Mask: 8000h	All
			Generator over frequency 2		Mask: 4000h	All
			Generator under frequency 1		Mask: 2000h	All
			Generator under frequency 2		Mask: 1000h	All
			Generator over voltage 1		Mask: 0800h	All
			Generator over voltage 2		Mask: 0400h	All
			Generator under voltage 1		Mask: 0200h	All
			Generator under voltage 2		Mask: 0100h	All
			Generator over current 1		Mask: 0080h	All
			Generator over current 2		Mask: 0040h	All
			Generator over current 3		Mask: 0020h	All
			Reverse / reduced power 1		Mask: 0010h	All
			Reverse / reduced power 2		Mask: 0008h	All
			Generator overload IOP 1		Mask: 0004h	All
			Generator overload IOP 2		Mask: 0002h	All
			Busbar phase rotation mismatch		Mask: 0001h	
50128	uint16	10138	BITLIST Alarms Gen 1 latched (unacknowledged)			
			06.16 Generator unbalanced load 1 latched		Mask: 8000h	All
			06.17 Generator unbalanced load 2 latched		Mask: 4000h	All
			06.18 Generator voltage asymmetry latched		Mask: 2000h	All
			06.19 Ground fault 1 latched		Mask: 1000h	All
			06.20 Ground fault 2 latched		Mask: 0800h	All
			06.21 Gen. Phase Rotation mismatch Latched		Mask: 0400h	All
			06.29 Gen. active power mismatch Latched		Mask: 0200h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			06.30 Generator unloading mismatch Latched		Mask: 0100h	All
			06.22 Inverse time over current Latched		Mask: 0080h	All
			06.31 Operating Range failed latched		Mask: 0040h	All
			06.23 Generator overload MOP 1 latched		Mask: 0020h	All
			06.24 Generator overload MOP 2 latched		Mask: 0010h	All
			06.25 Gen.Power Factor lagging 1 latched		Mask: 0008h	All
			06.26 Gen.Power Factor lagging 2 latched		Mask: 0004h	All
			06.27 Gen.Power Factor leading 1 latched		Mask: 0002h	All
			06.28 Gen.Power Factor leading 2 latched		Mask: 0001h	All
50129	uint16	4163	BITLIST Alarms Generator 1 active			
			Generator unbalanced load 1		Mask: 8000h	All
			Generator unbalanced load 2		Mask: 4000h	All
			Generator voltage asymmetry		Mask: 2000h	All
			Ground fault 1		Mask: 1000h	All
			Ground fault 2		Mask: 0800h	All
			Gen. Phase Rotation mismatch		Mask: 0400h	All
			Gen. active power mismatch		Mask: 0200h	All
			Generator unloading mismatch		Mask: 0100h	All
			Inverse time over current		Mask: 0080h	All
			Operating Range failed		Mask: 0040h	All
			Generator overload MOP 1		Mask: 0020h	All
			Generator overload MOP 2		Mask: 0010h	All
			Gen.Power Factor lagging 1		Mask: 0008h	All
			Gen.Power Factor lagging 2		Mask: 0004h	All
			Gen.Power Factor leading 1		Mask: 0002h	All
			Gen.Power Factor leading 2		Mask: 0001h	All
50130	int16		Internal			
50131	int16		Internal			
Subtopic Mains						
50132	uint16	10135	BITLIST Alarms Mains latched (unacknowledged)			
			07.06 Mains over frequency 1 latched		Mask: 8000h	All
			07.07 Mains over frequency 2 latched		Mask: 4000h	All
			07.08 Mains under frequency 1 latched		Mask: 2000h	All
			07.09 Mains under frequency 2 latched		Mask: 1000h	All
			07.10 Mains over voltage 1 latched		Mask: 0800h	All
			07.11 Mains over voltage 2 latched		Mask: 0400h	All
			07.12 Mains under voltage 1 latched		Mask: 0200h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			07.13 Mains under voltage 2 latched		Mask: 0100h	All
			07.14 Mains Phase shift latched		Mask: 0080h	All
			07.25 Mains decoupling latched		Mask: 0040h	All
			07.32 Mains AC Wiring		Mask: 0020h	All
			Internal		Mask: 0010h	
			Internal		Mask: 0008h	
			07.05 Mains Phase rotation mismatch latched		Mask: 0004h	All
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50133	uint16	4188	BITLIST Alarms Mains active			
			Mains over frequency 1		Mask: 8000h	All
			Mains over frequency 2		Mask: 4000h	All
			Mains under frequency 1		Mask: 2000h	All
			Mains under frequency 2		Mask: 1000h	All
			Mains over voltage 1		Mask: 0800h	All
			Mains over voltage 2		Mask: 0400h	All
			Mains under voltage 1		Mask: 0200h	All
			Mains under voltage 2		Mask: 0100h	All
			Mains Phase shift		Mask: 0080h	All
			Mains decoupling		Mask: 0040h	All
			Mains AC Wiring		Mask: 0020h	All
			Internal		Mask: 0010h	
			Internal		Mask: 0008h	
			Mains Phase rotation mismatch		Mask: 0004h	All
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50134	uint16	10278	BITLIST Alarms Mains 1 latched (unacknowledged)			
			07.21 Mains import power 1 latched		Mask: 8000h	All
			07.22 Mains import power 2 latched		Mask: 4000h	All
			07.23 Mains export power 1 latched		Mask: 2000h	All
			07.24 Mains export power 2 latched		Mask: 1000h	All
			07.17 Mains PF lagging 1 latched		Mask: 0800h	All
			07.18 Mains PF lagging 2 latched		Mask: 0400h	All
			07.19 Mains PF leading 1 latched		Mask: 0200h	All
			07.20 Mains PF leading 2 latched		Mask: 0100h	All
			07.15 Mains df/dt latched		Mask: 0080h	All
			07.16 Mains active power mismatch latched		Mask: 0040h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			07.28 Mains Time-dep. Voltage 1 (FRT) latched		Mask: 0020h	All
			07.33 Mains Time-dep. Voltage 3 (FRT) latched		Mask: 0010h	All
			07.27 Mains slow voltage increase (10 min)		Mask: 0008h	All
			07.31 Mains Time-dep. Voltage 2 (FRT) latched		Mask: 0004h	All
			07.29 Mains QV Monitoring step 1 latched		Mask: 0002h	All
			07.30 Mains QV Monitoring step 2 latched		Mask: 0001h	All
50135	uint16	4187	BITLIST Alarms Mains 1 active			
			Mains import power 1		Mask: 8000h	All
			Mains import power 2		Mask: 4000h	All
			Mains export power 1		Mask: 2000h	All
			Mains export power 2		Mask: 1000h	All
			Mains PF lagging 1		Mask: 0800h	All
			Mains PF lagging 2		Mask: 0400h	All
			Mains PF leading 1		Mask: 0200h	All
			Mains PF leading 2		Mask: 0100h	All
			Mains df/dt		Mask: 0080h	All
			Mains active power mismatch		Mask: 0040h	All
			Mains Time-dep. Voltage 1 (FRT)		Mask: 0020h	All
			Mains Time-dep. Voltage 3 (FRT)		Mask: 0010h	All
			Mains slow voltage increase (10 min)		Mask: 0008h	All
			Mains Time-dep. Voltage 2 (FRT)		Mask: 0004h	All
			QV Monitoring 1 tripped		Mask: 0002h	All
			QV Monitoring 2 tripped		Mask: 0001h	All
50136	uint16		BITLIST			
			Internal		Mask: F000h	
			Internal		Mask: 0F00h	All
			Reactive load control state 2: Static 3: Isochronous 4: Reactive load control 0, 1, 5, 6, 7, 8, 9, 11, ... : internal		Mask: 00F0h	All
			Real load control state 2: Static 3: Isochronous 4: Base load control 5: Export/import control 0, 1, 6, 7, 8, 9, 10, 11, ... : internal		Mask: 000Fh	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50137			Internal			
Subtopic Digital Inputs						
50138	uint16	10132	BITLIST Alarms DI 1 latched (unacknowledged)			
			09.01 Discrete input 1 latched		Mask: 8000h	All
			09.02 Discrete input 2 latched		Mask: 4000h	All
			09.03 Discrete input 3 latched		Mask: 2000h	All
			09.04 Discrete input 4 latched		Mask: 1000h	All
			09.05 Discrete input 5 latched		Mask: 0800h	All
			09.06 Discrete input 6 latched		Mask: 0400h	All
			09.07 Discrete input 7 latched		Mask: 0200h	All
			09.08 Discrete input 8 latched		Mask: 0100h	All
			09.09 Discrete input 9 latched		Mask: 0080h	All
			09.10 Discrete input 10 latched		Mask: 0040h	All
			09.11 Discrete input 11 latched		Mask: 0020h	All
			09.12 Discrete input 12 latched		Mask: 0010h	All
			Internal		Mask: 0008h	
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50139	uint16	4181	BITLIST Alarms DI 1 active			
			Discrete input 1		Mask: 8000h	All
			Discrete input 2		Mask: 4000h	All
			Discrete input 3		Mask: 2000h	All
			Discrete input 4		Mask: 1000h	All
			Discrete input 5		Mask: 0800h	All
			Discrete input 6		Mask: 0400h	All
			Discrete input 7		Mask: 0200h	All
			Discrete input 8		Mask: 0100h	All
			Discrete input 9		Mask: 0080h	All
			Discrete input 10		Mask: 0040h	All
			Discrete input 11		Mask: 0020h	All
			Discrete input 12		Mask: 0010h	All
			Internal		Mask: 0008h	
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50140	uint16	16377	BITLIST Alarms Ext. DI 1 latched (unacknowledged)			

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			12.16 External discrete input 16 latched		Mask: 8000h	All
			12.15 External discrete input 15 latched		Mask: 4000h	All
			12.14 External discrete input 14 latched		Mask: 2000h	All
			12.13 External discrete input 13 latched		Mask: 1000h	All
			12.12 External discrete input 12 latched		Mask: 0800h	All
			12.11 External discrete input 11 latched		Mask: 0400h	All
			12.10 External discrete input 10 latched		Mask: 0200h	All
			12.09 External discrete input 9 latched		Mask: 0100h	All
			12.08 External discrete input 8 latched		Mask: 0080h	All
			12.07 External discrete input 7 latched		Mask: 0040h	All
			12.06 External discrete input 6 latched		Mask: 0020h	All
			12.05 External discrete input 5 latched		Mask: 0010h	All
			12.04 External discrete input 4 latched		Mask: 0008h	All
			12.03 External discrete input 3 latched		Mask: 0004h	All
			12.02 External discrete input 2 latched		Mask: 0002h	All
			12.01 External discrete input 1 latched		Mask: 0001h	All
50141	uint16	4185	BITLIST Alarms Ext. DI 1 active			
			External discrete input 16		Mask: 8000h	All
			External discrete input 15		Mask: 4000h	All
			External discrete input 14		Mask: 2000h	All
			External discrete input 13		Mask: 1000h	All
			External discrete input 12		Mask: 0800h	All
			External discrete input 11		Mask: 0400h	All
			External discrete input 10		Mask: 0200h	All
			External discrete input 9		Mask: 0100h	All
			External discrete input 8		Mask: 0080h	All
			External discrete input 7		Mask: 0040h	All
			External discrete input 6		Mask: 0020h	All
			External discrete input 5		Mask: 0010h	All
			External discrete input 4		Mask: 0008h	All
			External discrete input 3		Mask: 0004h	All
			External discrete input 2		Mask: 0002h	All
			External discrete input 1		Mask: 0001h	All
50142	uint16	10284	BITLIST Alarm Ext. DI 2 latched (unacknowledged)			
			12.32 External discrete input 32 latched		Mask: 8000h	All
			12.31 External discrete input 31 latched		Mask: 4000h	All
			12.30 External discrete input 30 latched		Mask: 2000h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			12.29 External discrete input 29 latched		Mask: 1000h	All
			12.28 External discrete input 28 latched		Mask: 0800h	All
			12.27 External discrete input 27 latched		Mask: 0400h	All
			12.26 External discrete input 26 latched		Mask: 0200h	All
			12.25 External discrete input 25 latched		Mask: 0100h	All
			12.24 External discrete input 24 latched		Mask: 0080h	All
			12.23 External discrete input 23 latched		Mask: 0040h	All
			12.22 External discrete input 22 latched		Mask: 0020h	All
			12.21 External discrete input 21 latched		Mask: 0010h	All
			12.20 External discrete input 20 latched		Mask: 0008h	All
			12.19 External discrete input 19 latched		Mask: 0004h	All
			12.18 External discrete input 18 latched		Mask: 0002h	All
			12.17 External discrete input 17 latched		Mask: 0001h	All
50143	uint16	4195	BITLIST Alarm Ext. DI 2 active			
			External discrete input 32		Mask: 8000h	All
			External discrete input 31		Mask: 4000h	All
			External discrete input 30		Mask: 2000h	All
			External discrete input 29		Mask: 1000h	All
			External discrete input 28		Mask: 0800h	All
			External discrete input 27		Mask: 0400h	All
			External discrete input 26		Mask: 0200h	All
			External discrete input 25		Mask: 0100h	All
			External discrete input 24		Mask: 0080h	All
			External discrete input 23		Mask: 0040h	All
			External discrete input 22		Mask: 0020h	All
			External discrete input 21		Mask: 0010h	All
			External discrete input 20		Mask: 0008h	All
			External discrete input 19		Mask: 0004h	All
			External discrete input 18		Mask: 0002h	All
			External discrete input 17		Mask: 0001h	All
50144	uint16	10283	BITLIST Alarms DI 2 latched (unacknowledged)			
			09.13 Discrete input 13 latched		Mask: 8000h	EG3500XT-P2
			09.14 Discrete input 14 latched		Mask: 4000h	EG3500XT-P2
			09.15 Discrete input 15 latched		Mask: 2000h	EG3500XT-P2
			09.16 Discrete input 16 latched		Mask: 1000h	EG3500XT-P2
			09.17 Discrete input 17 latched		Mask: 0800h	EG3500XT-P2
			09.18 Discrete input 18 latched		Mask: 0400h	EG3500XT-P2

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			09.19 Discrete input 19 latched		Mask: 0200h	EG3500XT-P2
			09.20 Discrete input 20 latched		Mask: 0100h	EG3500XT-P2
			09.21 Discrete input 21 latched		Mask: 0080h	EG3500XT-P2
			09.22 Discrete input 22 latched		Mask: 0040h	EG3500XT-P2
			09.23 Discrete input 23 latched		Mask: 0020h	EG3500XT-P2
			Internal		Mask: 0010h	
			Internal		Mask: 0008h	
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50145	uint16	4183	BITLIST Alarms DI 2 active			
			Discrete input 13		Mask: 8000h	EG3500XT-P2
			Discrete input 14		Mask: 4000h	EG3500XT-P2
			Discrete input 15		Mask: 2000h	EG3500XT-P2
			Discrete input 16		Mask: 1000h	EG3500XT-P2
			Discrete input 17		Mask: 0800h	EG3500XT-P2
			Discrete input 18		Mask: 0400h	EG3500XT-P2
			Discrete input 19		Mask: 0200h	EG3500XT-P2
			Discrete input 20		Mask: 0100h	EG3500XT-P2
			Discrete input 21		Mask: 0080h	EG3500XT-P2
			Discrete input 22		Mask: 0040h	EG3500XT-P2
			Discrete input 23		Mask: 0020h	EG3500XT-P2
			Internal		Mask: 0010h	
			Internal		Mask: 0008h	
			Internal		Mask: 0004h	
			Internal		Mask: 0002h	
			Internal		Mask: 0001h	
50146	int16		Internal			
50147	int16		Internal			
50148	int16		Internal			
50149	int16		Internal			
Subtopic Flexible Thresholds						
50150	uint16	10279	BITLIST Alarms Flex.Thresholds 1-16 latched			
			15.16 Flexible limit 16 latched		Mask: 8000h	All
			15.15 Flexible limit 15 latched		Mask: 4000h	All
			15.14 Flexible limit 14 latched		Mask: 2000h	All
			15.13 Flexible limit 13 latched		Mask: 1000h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			15.12 Flexible limit 12 latched		Mask: 0800h	All
			15.11 Flexible limit 11 latched		Mask: 0400h	All
			15.10 Flexible limit 10 latched		Mask: 0200h	All
			15.09 Flexible limit 9 latched		Mask: 0100h	All
			15.08 Flexible limit 8 latched		Mask: 0080h	All
			15.07 Flexible limit 7 latched		Mask: 0040h	All
			15.06 Flexible limit 6 latched		Mask: 0020h	All
			15.05 Flexible limit 5 latched		Mask: 0010h	All
			15.04 Flexible limit 4 latched		Mask: 0008h	All
			15.03 Flexible limit 3 latched		Mask: 0004h	All
			15.02 Flexible limit 2 latched		Mask: 0002h	All
			15.01 Flexible limit 1 latched		Mask: 0001h	All
50151	uint16	4175	BITLIST Alarms Flex.Thresholds 1-16 active			
			Flexible limit 16		Mask: 8000h	All
			Flexible limit 15		Mask: 4000h	All
			Flexible limit 14		Mask: 2000h	All
			Flexible limit 13		Mask: 1000h	All
			Flexible limit 12		Mask: 0800h	All
			Flexible limit 11		Mask: 0400h	All
			Flexible limit 10		Mask: 0200h	All
			Flexible limit 9		Mask: 0100h	All
			Flexible limit 8		Mask: 0080h	All
			Flexible limit 7		Mask: 0040h	All
			Flexible limit 6		Mask: 0020h	All
			Flexible limit 5		Mask: 0010h	All
			Flexible limit 4		Mask: 0008h	All
			Flexible limit 3		Mask: 0004h	All
			Flexible limit 2		Mask: 0002h	All
			Flexible limit 1		Mask: 0001h	All
50152	uint16	10280	BITLIST Alarms Flex.Thresholds 17-32 latched			
			15.32 Flexible limit 32 latched		Mask: 8000h	All
			15.31 Flexible limit 31 latched		Mask: 4000h	All
			15.30 Flexible limit 30 latched		Mask: 2000h	All
			15.29 Flexible limit 29 latched		Mask: 1000h	All
			15.28 Flexible limit 28 latched		Mask: 0800h	All
			15.27 Flexible limit 27 latched		Mask: 0400h	All
			15.26 Flexible limit 26 latched		Mask: 0200h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			15.25 Flexible limit 25 latched		Mask: 0100h	All
			15.24 Flexible limit 24 latched		Mask: 0080h	All
			15.23 Flexible limit 23 latched		Mask: 0040h	All
			15.22 Flexible limit 22 latched		Mask: 0020h	All
			15.21 Flexible limit 21 latched		Mask: 0010h	All
			15.20 Flexible limit 20 latched		Mask: 0008h	All
			15.19 Flexible limit 19 latched		Mask: 0004h	All
			15.18 Flexible limit 18 latched		Mask: 0002h	All
			15.17 Flexible limit 17 latched		Mask: 0001h	All
50153	uint16	4177	BITLIST Alarms Flex.Thresholds 17-32 active			
			Flexible limit 32		Mask: 8000h	All
			Flexible limit 31		Mask: 4000h	All
			Flexible limit 30		Mask: 2000h	All
			Flexible limit 29		Mask: 1000h	All
			Flexible limit 28		Mask: 0800h	All
			Flexible limit 27		Mask: 0400h	All
			Flexible limit 26		Mask: 0200h	All
			Flexible limit 25		Mask: 0100h	All
			Flexible limit 24		Mask: 0080h	All
			Flexible limit 23		Mask: 0040h	All
			Flexible limit 22		Mask: 0020h	All
			Flexible limit 21		Mask: 0010h	All
			Flexible limit 20		Mask: 0008h	All
			Flexible limit 19		Mask: 0004h	All
			Flexible limit 18		Mask: 0002h	All
			Flexible limit 17		Mask: 0001h	All
50154	uint16	10281	BITLIST Alarms Flex.Thresholds 33-40 latched			
			Internal		Mask: 8000h	
			Internal		Mask: 4000h	
			Internal		Mask: 2000h	
			Internal		Mask: 1000h	
			Internal		Mask: 0800h	
			Internal		Mask: 0400h	
			Internal		Mask: 0200h	
			Internal		Mask: 0100h	
			15.40 Flexible limit 40 latched		Mask: 0080h	All
			15.39 Flexible limit 39 latched		Mask: 0040h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			15.38 Flexible limit 38 latched		Mask: 0020h	All
			15.37 Flexible limit 37 latched		Mask: 0010h	All
			15.36 Flexible limit 36 latched		Mask: 0008h	All
			15.35 Flexible limit 35 latched		Mask: 0004h	All
			15.34 Flexible limit 34 latched		Mask: 0002h	All
			15.33 Flexible limit 33 latched		Mask: 0001h	All
50155	uint16	4179	BITLIST Alarms Flex.Thresholds 33-40 active			
			Internal		Mask: 8000h	
			Internal		Mask: 4000h	
			Internal		Mask: 2000h	
			Internal		Mask: 1000h	
			Internal		Mask: 0800h	
			Internal		Mask: 0400h	
			Internal		Mask: 0200h	
			Internal		Mask: 0100h	
			Flexible limit 40		Mask: 0080h	All
			Flexible limit 39		Mask: 0040h	All
			Flexible limit 38		Mask: 0020h	All
			Flexible limit 37		Mask: 0010h	All
			Flexible limit 36		Mask: 0008h	All
			Flexible limit 35		Mask: 0004h	All
			Flexible limit 34		Mask: 0002h	All
			Flexible limit 33		Mask: 0001h	All
50156			Internal			
50157			Internal			
50158			Internal			
Subtopic DC Analogue Values Wirebreak						
50159	uint16	10137	BITLIST Alarms AI Wire Break latched			
			Internal		Mask: 0001h	
			10.01 Analog input 1 wire break		Mask: 0002h	All
			10.02 Analog input 2 wire break		Mask: 0004h	All
			10.03 Analog input 3 wire break		Mask: 0008h	All
			10.04 Analog input 4 wire break		Mask: 0010h	EG3500XT-P2
			10.05 Analog input 5 wire break		Mask: 0020h	EG3500XT-P2
			10.06 Analog input 6 wire break		Mask: 0040h	EG3500XT-P2
			10.07 Analog input 7 wire break		Mask: 0080h	EG3500XT-P2
			10.08 Analog input 8 wire break		Mask: 0100h	EG3500XT-P2

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			10.09 Analog input 9 wire break		Mask: 0200h	EG3500XT-P2
			10.10 Analog input 10 wire break		Mask: 0400h	EG3500XT-P2
			Internal		Mask: 0800h	
			Internal		Mask: 1000h	
			Internal		Mask: 2000h	
			Internal		Mask: 4000h	
			Internal		Mask: 8000h	
50160	uint16	4173	BITLIST Alarms AI Wire Break active			
			Internal		Mask: 0001h	
			Analog input 1 wire break		Mask: 0002h	All
			Analog input 2 wire break		Mask: 0004h	All
			Analog input 3 wire break		Mask: 0008h	All
			Analog input 4 wire break		Mask: 0010h	EG3500XT-P2
			Analog input 5 wire break		Mask: 0020h	EG3500XT-P2
			Analog input 6 wire break		Mask: 0040h	EG3500XT-P2
			Analog input 7 wire break		Mask: 0080h	EG3500XT-P2
			Analog input 8 wire break		Mask: 0100h	EG3500XT-P2
			Analog input 9 wire break		Mask: 0200h	EG3500XT-P2
			Analog input 10 wire break		Mask: 0400h	EG3500XT-P2
			Internal		Mask: 0800h	
			Internal		Mask: 1000h	
			Internal		Mask: 2000h	
			Internal		Mask: 4000h	
			Internal		Mask: 8000h	
50161	uint16	10285	BITLIST Alarms Ext.AI Wire Break latched			
			25.01 Ext. analog input 1 wire break		Mask: 0001h	All
			25.02 Ext. analog input 2 wire break		Mask: 0002h	All
			25.03 Ext. analog input 3 wire break		Mask: 0004h	All
			25.04 Ext. analog input 4 wire break		Mask: 0008h	All
			25.05 Ext. analog input 5 wire break		Mask: 0010h	All
			25.06 Ext. analog input 6 wire break		Mask: 0020h	All
			25.07 Ext. analog input 7 wire break		Mask: 0040h	All
			25.08 Ext. analog input 8 wire break		Mask: 0080h	All
			25.09 Ext. analog input 9 wire break		Mask: 0100h	All
			25.10 Ext. analog input 10 wire break		Mask: 0200h	All
			25.11 Ext. analog input 11 wire break		Mask: 0400h	All
			25.12 Ext. analog input 12 wire break		Mask: 0800h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			25.13 Ext. analog input 13 wire break		Mask: 1000h	All
			25.14 Ext. analog input 14 wire break		Mask: 2000h	All
			25.15 Ext. analog input 15 wire break		Mask: 4000h	All
			25.16 Ext. analog input 16 wire break		Mask: 8000h	All
50162	uint16	4196	BITLIST Alarms Ext.AI Wire Break active			
			Ext. analog input 1 wire break		Mask: 0001h	All
			Ext. analog input 2 wire break		Mask: 0002h	All
			Ext. analog input 3 wire break		Mask: 0004h	All
			Ext. analog input 4 wire break		Mask: 0008h	All
			Ext. analog input 5 wire break		Mask: 0010h	All
			Ext. analog input 6 wire break		Mask: 0020h	All
			Ext. analog input 7 wire break		Mask: 0040h	All
			Ext. analog input 8 wire break		Mask: 0080h	All
			Ext. analog input 9 wire break		Mask: 0100h	All
			Ext. analog input 10 wire break		Mask: 0200h	All
			Ext. analog input 11 wire break		Mask: 0400h	All
			Ext. analog input 12 wire break		Mask: 0800h	All
			Ext. analog input 13 wire break		Mask: 1000h	All
			Ext. analog input 14 wire break		Mask: 2000h	All
			Ext. analog input 15 wire break		Mask: 4000h	All
			Ext. analog input 16 wire break		Mask: 8000h	All
50163			Internal			
50164			Internal			
Subtopic Other Alarms						
50165	uint16	10286	BITLIST Other Alarms 1 latched (unacknowledged)			
			08.53 LS interface redundancy latched		Mask: 8000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 4000h	
			Free alarm 4		Mask: 2000h	All
			Free alarm 3		Mask: 1000h	All
			Free alarm 2		Mask: 0800h	All
			Free alarm 1		Mask: 0400h	All
			Internal		Mask: 0200h	ALL
			17.09 Neutral interl. reply mismatch latched		Mask: 0100h	All
			17.08 Decoupling GCB-MCB latched		Mask: 0080h	All
			17.07 Measurement difference 4105 latched		Mask: 0040h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			17.06 Parameter alignment 4105 latched		Mask: 0020h	All
			17.05 Missing member 4105 latched		Mask: 0010h	All
			08.22 Busbar v/f not ok latched		Mask: 0008h	All
			08.21 Feedback GCB mismatch latched		Mask: 0004h	MARINE
			17.02 Reactive load share mismatch latched		Mask: 0002h	All
			17.01 Active load share mismatch latched		Mask: 0001h	All
50166	uint16	5197	BITLIST Other Alarms 1 active			
			LS interface redundancy active		Mask: 8000h	EG3500XT-P1 EG3500XT-P2
			Internal		Mask: 4000h	
			Free alarm 4 active		Mask: 2000h	All
			Free alarm 3 active		Mask: 1000h	All
			Free alarm 2 active		Mask: 0800h	All
			Free alarm 1 active		Mask: 0400h	All
			Internal		Mask: 0200h	
			Neutral contactor failure active		Mask: 0100h	All
			Decoupling GCB-MCB active		Mask: 0080h	All
			Meas.difference 4105 VDE-AR-N 4105 active		Mask: 0040h	All
			Parameter alignment VDE-AR-N 4105 active		Mask: 0020h	All
			Missing member VDE-AR-N 4105 active		Mask: 0010h	All
			Busbar monitoring latched active		Mask: 0008h	All
			Internal		Mask: 0004h	
			Reactive load sharing mismatch latched		Mask: 0002h	All
			Active load sharing mismatch latched		Mask: 0001h	All
50167	uint16	4085	BITLIST Internal Flags 1-16			
			96.16 LM Internal Flag 16		Mask: 8000h	All
			96.15 LM Internal Flag 15		Mask: 4000h	All
			96.14 LM Internal Flag 14		Mask: 2000h	All
			96.13 LM Internal Flag 13		Mask: 1000h	All
			96.12 LM Internal Flag 12		Mask: 0800h	All
			96.11 LM Internal Flag 11		Mask: 0400h	All
			96.10 LM Internal Flag 10		Mask: 0200h	All
			96.09 LM Internal Flag 9		Mask: 0100h	All
			96.08 LM Internal Flag 8		Mask: 0080h	All
			96.07 LM Internal Flag 7		Mask: 0040h	All
			96.06 LM Internal Flag 6		Mask: 0020h	All
			96.05 LM Internal Flag 5		Mask: 0010h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			96.04 LM Internal Flag 4		Mask: 0008h	All
			96.03 LM Internal Flag 3		Mask: 0004h	All
			96.02 LM Internal Flag 2		Mask: 0002h	All
			96.01 LM Internal Flag 1		Mask: 0001h	All
50168	uint16	4095	BITLIST Internal Flags 17-32			
			96.32 LM Internal Flag 32		Mask: 8000h	All
			96.31 LM Internal Flag 31		Mask: 4000h	All
			96.30 LM Internal Flag 30		Mask: 2000h	All
			96.29 LM Internal Flag 29		Mask: 1000h	All
			96.28 LM Internal Flag 28		Mask: 0800h	All
			96.27 LM Internal Flag 27		Mask: 0400h	All
			96.26 LM Internal Flag 26		Mask: 0200h	All
			96.25 LM Internal Flag 25		Mask: 0100h	All
			96.24 LM Internal Flag 24		Mask: 0080h	All
			96.23 LM Internal Flag 23		Mask: 0040h	All
			96.22 LM Internal Flag 22		Mask: 0020h	All
			96.21 LM Internal Flag 21		Mask: 0010h	All
			96.20 LM Internal Flag 20		Mask: 0008h	All
			96.19 LM Internal Flag 19		Mask: 0004h	All
			96.18 LM Internal Flag 18		Mask: 0002h	All
			96.17 LM Internal Flag 17		Mask: 0001h	All
50169	uint16	10282	BITLIST Free Alarms 1 latched (unacknowledged)			
			16.16 Free alarm 16 latched		Mask: 8000h	All
			16.15 Free alarm 15 latched		Mask: 4000h	All
			16.14 Free alarm 14 latched		Mask: 2000h	All
			16.13 Free alarm 13 latched		Mask: 1000h	All
			16.12 Free alarm 12 latched		Mask: 0800h	All
			16.11 Free alarm 11 latched		Mask: 0400h	All
			16.10 Free alarm 10 latched		Mask: 0200h	All
			16.09 Free alarm 9 latched		Mask: 0100h	All
			16.08 Free alarm 8 latched		Mask: 0080h	All
			16.07 Free alarm 7 latched		Mask: 0040h	All
			16.06 Free alarm 6 latched		Mask: 0020h	All
			16.05 Free alarm 5 latched		Mask: 0010h	All
			16.04 Free alarm 4 latched		Mask: 0008h	All
			16.03 Free alarm 3 latched		Mask: 0004h	All
			16.02 Free alarm 2 latched		Mask: 0002h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			16.01 Free alarm 1 latched		Mask: 0001h	All
50170	uint16	4194	BITLIST Free Alarms 1 active			
			Free alarm 16 active		Mask: 8000h	All
			Free alarm 15 active		Mask: 4000h	All
			Free alarm 14 active		Mask: 2000h	All
			Free alarm 13 active		Mask: 1000h	All
			Free alarm 12 active		Mask: 0800h	All
			Free alarm 11 active		Mask: 0400h	All
			Free alarm 10 active		Mask: 0200h	All
			Free alarm 9 active		Mask: 0100h	All
			Free alarm 8 active		Mask: 0080h	All
			Free alarm 7 active		Mask: 0040h	All
			Free alarm 6 active		Mask: 0020h	All
			Free alarm 5 active		Mask: 0010h	All
			Free alarm 4 active		Mask: 0008h	All
			Free alarm 3 active		Mask: 0004h	All
			Free alarm 2 active		Mask: 0002h	All
			Free alarm 1 active		Mask: 0001h	All
Topic Inverter Alarms						
50171	int16		BITLIST Inverter Alarms latched (unacknowledged)			
			55.16 Unintent. Islanding		Mask: 8000h	All
			55.15 Heat sink over temp.		Mask: 4000h	All
			55.14 DC imbalance		Mask: 2000h	All
			55.13 DC neg. under voltage		Mask: 1000h	All
			55.12 DC neg. over voltage		Mask: 0800h	All
			55.11 DC pos. under voltage		Mask: 0400h	All
			55.10 DC pos. over voltage		Mask: 0200h	All
			55.09 DC Under voltage		Mask: 0100h	All
			55.08 DC Over voltage		Mask: 0080h	All
			55.07 AC Over current Ph. C		Mask: 0040h	All
			55.06 AC Over current Ph. B		Mask: 0020h	All
			55.05 AC Over current Ph. A		Mask: 0010h	All
			55.04 Gate drive fault		Mask: 0008h	All
			55.03 Emergency Stop		Mask: 0004h	All
			55.02 Hardware over current		Mask: 0002h	All
			55.01 Safe Stop		Mask: 0001h	All
50172			BITLIST Inverter Alarms active			All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.16 Unintent. Islanding		Mask: 8000h	All
			55.15 Heat sink over temp.		Mask: 4000h	All
			55.14 DC imbalance		Mask: 2000h	All
			55.13 DC neg. under voltage		Mask: 1000h	All
			55.12 DC neg. over voltage		Mask: 0800h	All
			55.11 DC pos. under voltage		Mask: 0400h	All
			55.10 DC pos. over voltage		Mask: 0200h	All
			55.09 DC Under voltage		Mask: 0100h	All
			55.08 DC Over voltage		Mask: 0080h	All
			55.07 AC Over current Ph. C		Mask: 0040h	All
			55.06 AC Over current Ph. B		Mask: 0020h	All
			55.05 AC Over current Ph. A		Mask: 0010h	All
			55.04 Gate drive fault		Mask: 0008h	All
			55.03 Emergency Stop		Mask: 0004h	All
			55.02 Hardware over current		Mask: 0002h	All
			55.01 Safe Stop		Mask: 0001h	All
50173	int16		BITLIST Inverter Alarms latched (unacknowledged)			All
			55.32 Parameter mismatch		Mask: 8000h	All
			55.31 ADC Error		Mask: 4000h	All
			55.30 Internal		Mask: 2000h	All
			55.29 Internal		Mask: 1000h	All
			55.28 Internale		Mask: 0800h	All
			55.27 DC Voltage deviation		Mask: 0400h	All
			55.26 Int. communicat. CPUs		Mask: 0200h	All
			55.25 Under frequency		Mask: 0100h	All
			55.24 Over frequency		Mask: 0080h	All
			55.23 Over voltage Ph. C		Mask: 0040h	All
			55.22 Over voltage Ph. B		Mask: 0020h	All
			55.21 Over voltage Ph. A		Mask: 0010h	All
			55.20 AC Under voltage		Mask: 0008h	All
			55.19 AC Over voltage		Mask: 0004h	All
			55.18 AC Voltage imbalance		Mask: 0002h	All
			55.17 AC Current imbalance		Mask: 0001h	All
50174			BITLIST Inverter Alarms active			All
			55.32 Parameter mismatch		Mask: 8000h	All
			55.31 ADC Error		Mask: 4000h	All
			55.30 Reserve		Mask: 2000h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.29 Reserve		Mask: 1000h	All
			55.28 Reserve		Mask: 0800h	All
			55.27 DC Voltage deviation		Mask: 0400h	All
			55.26 Int. communicat. CPUs		Mask: 0200h	All
			55.25 Under frequency		Mask: 0100h	All
			55.24 Over frequency		Mask: 0080h	All
			55.23 Over voltage Ph. C		Mask: 0040h	All
			55.22 Over voltage Ph. B		Mask: 0020h	All
			55.21 Over voltage Ph. A		Mask: 0010h	All
			55.20 AC Under voltage		Mask: 0008h	All
			55.19 AC Over voltage		Mask: 0004h	All
			55.18 AC Voltage imbalance		Mask: 0002h	All
			55.17 AC Current imbalance		Mask: 0001h	All
50175	int16		BITLIST Inverter Alarms latched (unacknowledged)			All
			55.48 Internal		Mask: 8000h	All
			55.47 Internal		Mask: 4000h	All
			55.46 Internal		Mask: 2000h	All
			55.45 Internal		Mask: 1000h	All
			55.44 Internal		Mask: 0800h	All
			55.43 Internal		Mask: 0400h	All
			55.42 Internal timeout GTC		Mask: 0200h	All
			55.41 Timeout with PLC		Mask: 0100h	All
			55.40 Internal		Mask: 0080h	All
			55.39 Internal		Mask: 0040h	All
			55.38 Internal		Mask: 0020h	All
			55.37 Internal		Mask: 0010h	All
			55.36 Internal		Mask: 0008h	All
			55.35 Ambient over temp.		Mask: 0004h	All
			55.34 DC Supply overload		Mask: 0002h	All
			55.33 Master fault		Mask: 0001h	All
50176			BITLIST Inverter Alarms active			All
			55.48 Reserve		Mask: 8000h	All
			55.47 Reserve		Mask: 4000h	All
			55.46 Reserve		Mask: 2000h	All
			55.45 Reserve		Mask: 1000h	All
			55.44 Reserve		Mask: 0800h	All
			55.43 Reserve		Mask: 0400h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.42 Internal timeout GTC		Mask: 0200h	All
			55.41 Timeout with PLC		Mask: 0100h	All
			55.40 Reserve		Mask: 0080h	All
			55.39 Reserve		Mask: 0040h	All
			55.38 Reserve		Mask: 0020h	All
			55.37 Reserve		Mask: 0010h	All
			55.36 Reserve		Mask: 0008h	All
			55.35 Ambient over temp.		Mask: 0004h	All
			55.34 DC Supply overload		Mask: 0002h	All
			55.33 Master fault		Mask: 0001h	All
50177	int16		BITLIST Inverter Alarms latched (unacknowledged)			All
			55.64 Internal		Mask: 8000h	All
			55.63 Internal		Mask: 4000h	All
			55.62 Internal		Mask: 2000h	All
			55.61 Internal		Mask: 1000h	All
			55.60 Internal		Mask: 0800h	All
			55.59 Internal		Mask: 0400h	All
			55.58 Internal		Mask: 0200h	All
			55.57 Internal		Mask: 0100h	All
			55.56 Internal		Mask: 0080h	All
			55.55 Internal		Mask: 0040h	All
			55.54 Master not detected		Mask: 0020h	All
			55.53 Internal		Mask: 0010h	All
			55.52 Internal		Mask: 0008h	All
			55.51 Fan fault		Mask: 0004h	All
			55.50 Slave not detected		Mask: 0002h	All
			55.49 AC Curr. imbalance GF		Mask: 0001h	All
50178			BITLIST Inverter Alarms active			All
			55.64 Reserve		Mask: 8000h	All
			55.63 Reserve		Mask: 4000h	All
			55.62 Reserve		Mask: 2000h	All
			55.61 Reserve		Mask: 1000h	All
			55.60 Reserve		Mask: 0800h	All
			55.59 Reserve		Mask: 0400h	All
			55.58 Reserve		Mask: 0200h	All
			55.57 Reserve		Mask: 0100h	All
			55.56 Reserve		Mask: 0080h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.55 Reserve		Mask: 0040h	All
			55.54 Master not detected		Mask: 0020h	All
			55.53 Reserve		Mask: 0010h	All
			55.52 Reserve		Mask: 0008h	All
			55.51 Fan fault		Mask: 0004h	All
			55.50 Slave not detected		Mask: 0002h	All
			55.49 AC Curr. imbalance GF		Mask: 0001h	All
Topic DC Source BMS Alarms						
50179	int16		BITLIST DC Source BMS Alarms latched (unacknowledged)			All
			55.80 Permanent under volt.		Mask: 8000h	All
			55.79 Rack fuse fail		Mask: 4000h	All
			55.78 Rack current sensor fail		Mask: 2000h	All
			55.77 Rack volt. sensing difference		Mask: 1000h	All
			55.76 Rack over voltage		Mask: 0800h	All
			55.75 Rack under voltage		Mask: 0400h	All
			55.74 Rack Discharge over curr.		Mask: 0200h	All
			55.73 Rack Charge over curr.		Mask: 0100h	All
			55.72 Rack-System communication		Mask: 0080h	All
			55.71 Rack-Module communication		Mask: 0040h	All
			55.70 Cell temp. Imbalance		Mask: 0020h	All
			55.69 Cell volt. Imbalance		Mask: 0010h	All
			55.68 Cell over volt.		Mask: 0008h	All
			55.67 Cell under volt.		Mask: 0004h	All
			55.66 Cell over temp.		Mask: 0002h	All
			55.65 Cell under temp.		Mask: 0001h	All
50180	uint16		BITLIST DC Source BMS Alarms active			
			55.80 Permanent under volt.		Mask: 8000h	All
			55.79 Rack fuse fail		Mask: 4000h	All
			55.78 Rack current sensor fail		Mask: 2000h	All
			55.77 Rack volt. sensing difference		Mask: 1000h	All
			55.76 Rack over voltage		Mask: 0800h	All
			55.75 Rack under voltage		Mask: 0400h	All
			55.74 Rack Discharge over curr.		Mask: 0200h	All
			55.73 Rack Charge over curr.		Mask: 0100h	All
			55.72 Rack-System communication		Mask: 0080h	All
			55.71 Rack-Module communication		Mask: 0040h	All
			55.70 Cell temp. Imbalance		Mask: 0020h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.69 Cell volt. Imbalance		Mask: 0010h	All
			55.68 Cell over volt.		Mask: 0008h	All
			55.67 Cell under volt.		Mask: 0004h	All
			55.66 Cell over temp.		Mask: 0002h	All
			55.65 Cell under temp.		Mask: 0001h	All
50181	int16		BITLIST DC Source BMS Alarms latched (unacknowledged)			All
			55.96 Reserve		Mask: 8000h	All
			55.95 Reserve		Mask: 4000h	All
			55.94 Reserve		Mask: 2000h	All
			55.93 Rack string imbalance curr.		Mask: 1000h	All
			55.92 Rack string imbalance volt.		Mask: 0800h	All
			55.91 Rack DC Switch count fail		Mask: 0400h	All
			55.90 Module BMS over temp.		Mask: 0200h	All
			55.89 Module BMS under temp.		Mask: 0100h	All
			55.88 Cell discharge operation limit		Mask: 0080h	All
			55.87 Cell charge operation limit		Mask: 0040h	All
			55.86 Additional protection fail		Mask: 0020h	All
			55.85 Fan fail		Mask: 0010h	All
			55.84 Rack DC Switch 2 (-) fail		Mask: 0008h	All
			55.83 Rack DC Switch 1 (+) fail		Mask: 0004h	All
			55.82 Rack DC Switch 2 (-) sensing		Mask: 0002h	All
			55.81 Rack DC Switch 1 (+) sensing		Mask: 0001h	All
50182	uint16		BITLIST DC Source BMS Alarms active			
			55.96 Reserve		Mask: 8000h	All
			55.95 Reserve		Mask: 4000h	All
			55.94 Reserve		Mask: 2000h	All
			55.93 Rack string imbalance curr.		Mask: 1000h	All
			55.92 Rack string imbalance volt.		Mask: 0800h	All
			55.91 Rack DC Switch count fail		Mask: 0400h	All
			55.90 Module BMS over temp.		Mask: 0200h	All
			55.89 Module BMS under temp.		Mask: 0100h	All
			55.88 Cell discharge operation limit		Mask: 0080h	All
			55.87 Cell charge operation limit		Mask: 0040h	All
			55.86 Additional protection fail		Mask: 0020h	All
			55.85 Fan fail		Mask: 0010h	All
			55.84 Rack DC Switch 2 (-) fail		Mask: 0008h	All
			55.83 Rack DC Switch 1 (+) fail		Mask: 0004h	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
			55.82 Rack DC Switch 2 (-) sensing		Mask: 0002h	All
			55.81 Rack DC Switch 1 (+) sensing		Mask: 0001h	All
50183	int16		BITLIST DC Source BMS Alarms latched (unacknowledged			All
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			Internal		Mask: 1000h	All
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			Internal		Mask: 0100h	All
			Internal		Mask: 0080h	All
			Internal		Mask: 0040h	All
			Internal		Mask: 0020h	All
			Internal		Mask: 0010h	All
			Internal		Mask: 0008h	All
			55.99 Reserve		Mask: 0004h	All
			55.98 Reserve		Mask: 0002h	All
			55.97 Reserve		Mask: 0001h	All
50184	uint16		BITLIST DC Source BMS Alarms active			
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			Internal		Mask: 1000h	All
			Internal		Mask: 0800h	All
			Internal		Mask: 0400h	All
			Internal		Mask: 0200h	All
			Internal		Mask: 0100h	All
			Internal		Mask: 0080h	All
			Internal		Mask: 0040h	All
			Internal		Mask: 0020h	All
			Internal		Mask: 0010h	All
			Internal		Mask: 0008h	All
			55.99 Reserve		Mask: 0004h	All
			55.98 Reserve		Mask: 0002h	All
			55.97 Reserve		Mask: 0001h	All
Topic Inverter / DC Source BMS states						

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50185	int16		BITLIST Inverter / DC Source BMS states			All
			56.16 DC breaker closed		Mask: 8000h	All
			56.15 Opening DC breaker		Mask: 4000h	All
			56.14 Closing DC breaker		Mask: 2000h	All
			56.13 Status CESSATION		Mask: 1000h	All
			56.12 Status RUNNING		Mask: 0800h	All
			56.11 Status STAND-BY		Mask: 0400h	All
			56.10 Status READY		Mask: 0200h	All
			56.09 Status SYNCH.		Mask: 0100h	All
			56.08 Status PRE-CHARGE		Mask: 0080h	All
			56.07 Status INIT.		Mask: 0040h	All
			56.06 Status ALARM		Mask: 0020h	All
			56.05 Running condition		Mask: 0010h	All
			56.04 Prepare condition		Mask: 0008h	All
			56.03 DC supply active		Mask: 0004h	All
			56.02 Grid forming active		Mask: 0002h	All
			56.01 Grid tie mode active		Mask: 0001h	All
50186	uint16		BITLIST Inverter / DC Source BMS states			
			Internal		Mask: 8000h	All
			Internal		Mask: 4000h	All
			Internal		Mask: 2000h	All
			Internal		Mask: 1000h	All
			Internal		Mask: 0800h	All
			56.27 Status DC DISCHARGE		Mask: 0400h	All
			56.26 Status DC CHARGE		Mask: 0200h	All
			56.25 Status MAIN SW OFF		Mask: 0100h	All
			56.24 Status MAIN SW ON		Mask: 0080h	All
			56.23 Status DC OFF-LINE		Mask: 0040h	All
			56.22 Status DC IDLE		Mask: 0020h	All
			56.21 Status DC READY		Mask: 0010h	All
			56.20 Disconnect DC source		Mask: 0008h	All
			56.19 Connect DC source		Mask: 0004h	All
			56.18 Charging allowed		Mask: 0002h	All
			56.17 Discharging allowed		Mask: 0001h	All
50187	int16		Internal (Reserve)			All
50188	uint16		Internal			
50189	int16		Internal			All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50190	uint16		Internal			
??						
50191	uint16	15395	BITLIST			
			Internal		Mask 8000h	
			Internal		Mask 4000h	
			Internal		Mask 2000h	All
			Internal		Mask 1000h	All
			Internal		Mask 0800h	
			Internal		Mask 0400h	
			Internal		Mask 0200h	All
			Internal		Mask 0100h	All
			Internal		Mask 0080h	
			Internal		Mask 0040h	
			Internal		Mask 0020h	All
			Internal		Mask 0010h	All
			Internal		Mask 0008h	
			Internal		Mask 0004h	
			Internal		Mask 0002h	All
			Internal		Mask 0001h	All
??						
50192	uint16		BITLIST			
			Internal		Mask 8000h	
			Internal		Mask 4000h	
			Internal		Mask 2000h	All
			Internal		Mask 1000h	All
			Internal		Mask 0800h	
			Internal		Mask 0400h	
			Internal		Mask 0200h	All
			Internal		Mask 0100h	All
			Internal		Mask 0080h	
			Internal		Mask 0040h	
			Internal		Mask 0020h	All
			Internal		Mask 0010h	All
			Internal		Mask 0008h	
			Internal		Mask 0004h	
			Internal		Mask 0002h	All
			Internal		Mask 0001h	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
Subtopic Especially Failure Codes						
50193	int16		Internal			All
50194	int16		Internal			
50195	uint16		Internal			All
50196	int16		Internal			
50197	uint16		BITLIST			
			Internal		Mask 8000h	All
			Internal		Mask 4000h	All
			Internal		Mask 2000h	All
			Internal		Mask 1000h	All
			Internal		Mask 0800h	All
			Internal		Mask 0400h	All
			Internal		Mask 0200h	All
			Internal		Mask 0100h	All
			Internal		Mask 0080h	All
			Internal		Mask 0040h	All
			Internal		Mask 0020h	All
			Internal		Mask 0010h	All
			Internal		Mask 0008h	All
			Internal		Mask 0004h	All
			Internal		Mask 0002h	All
			Internal		Mask 0001h	All
50198			Internal			
50199			Internal			
50200			Internal			
Subtopic Values						
50201	int16		Internal			All
50202	int16		Internal			All
50203	int16		Internal			All
50204	int16		Internal			All
50205	int16		Internal			All
50206	int16		Internal			All
50207	int16		Internal			All
50208	int16		Internal			All
50209	int16		Internal			All
50210	int16		Internal			All
50211	int16		Internal			All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50212	int16		Internal			All
50213	int16		Internal			All
50214	int16		Internal			All
50215	int16		Internal			All
50216	int16		Internal			All
50217	int16		Internal			All
50218	int16		Internal			All
50219	int16		Internal			All
50220	int16		Internal			All
50221	int16		Internal			All
50222	int16		Internal			All
50223	int16		Internal			All
50224	int16		Internal			All
50225	int16		Internal			All
50226	int16		Internal			All
50227	int16		Internal			All
50228	int16		Internal			All
50229	int16		Internal			All
50230	int16		Internal			All
50231	int16		Internal			All
50232	int16		Internal			All
50233	int16		Internal			All
50234	int16		Internal			All
50235	int16		Internal			All
50236	int16		Internal			All
50237	int16		Internal			All
50238	int16		Internal			All
50239	int16		Internal			All
50240	int16		Internal			All
50241	int16		Internal			All
50242	int16		Internal			All
50243	int16		Internal			All
50244	int16		Internal			All
50245	int16		Internal			All
50246	int16		Internal			All
50247	int16		Internal			All
50248	int16		Internal			All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50249	int16		Internal			All
50250	int16		Internal			All
50251	int16		Internal			All
50252	int16		Internal			All
50253	int16		Internal			All
50254	int16		Internal			All
50255	int16		Internal			All
50256	int16		Internal			All
50257	int16		Internal			All
50258	int16		Internal			All
50259	int16		Internal			All
50260	int16		Internal			All
50261	int16		Internal			All
50262	int16		Internal			All
50263	int16		Internal			All
50264	int16		Internal			All
50265	int16		Internal			All
50266	int16		Internal			All
50267	int16		Internal			All
50268	int16		Internal			All
50269	int16		Internal			All
50270	int16		Internal			All
50271	int16		Internal			All
50272	int16		Internal			All
50273	int16		Internal			All
50274	int16		Internal			All
50275	int16		Internal			All
50276	int16		Internal			All
50277	int16		Internal			All
50278	int16		Internal			All
50279	int16		Internal			All
50280	int16		Internal			All
50281	int16		Internal			All
50282	int16		Internal			All
50283	int16		Internal			All
50284	int16		Internal			All
50285	int16		Internal			All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50286	int16		Internal			All
50287	int16		Internal			All
50288	int16		Internal			All
50289	int16		Internal			All
50290	int16		Internal			All
50291	int16		Internal			All
50292	int16		Internal			All
50293	int16		Internal			All
50294	int16		Internal			All
50295	int16		Internal			All
50296	int16		Internal			All
50297	int16		Internal			All
50298	int16		Internal			All
50299	int16		Internal			All
50300	int16		Internal			All
50301	int16		Internal			All
50302	int16		Internal			All
50303	int16		Internal			All
50304	int16		Internal			All
50305	int16		Internal			All
50306	int16		Internal			All
50307	int16		Internal			All
50308	int16		Internal			All
50309	int16		Internal			All
50310	int16		Internal			All
50311	int16		Internal			All
50312	int16		Internal			All
50313	int16		Internal			All
50314	int16		Internal			All
50315	int16		Internal			All
50316	int16		Internal			All
50317	int16		Internal			All
50318	int16		Internal			All
50319	int16		Internal			All
50320	int16		Internal			All
50321	int16		Internal			All
50322	int16		Internal			All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50323	int16		Internal			All
50324	int16		Internal			All
50325	int16		Internal			All
50326	int16		Internal			All
50327	int16		Internal			All
50328	int16		Internal			All
50329	int16		Internal			All
50330	int16		Internal			All
50331	int16		Internal			All
50332	int16		Internal			All
50333	int16		Internal			
50334	int16		Internal			
50335	int16		Internal			
50336	int16		Internal			
50337	int16		Internal			
50338	int16		Internal			
50339	int16		Internal			
50340	int16		Internal			
50341	int16		Internal			
50342	int16		Internal			
50343	int16		Internal			
50344	int16		Internal			
50345	int16		Internal			
50346	int16		Internal			
50347	int16		Internal			
50348	int16		Internal			
50349	int16		Internal			
50350	int16		Internal			
50351	int16		Internal			
50352	int16		Internal			
50353	int16		Internal			
50354	int16		Internal			
50355	int16		Internal			
50356	int16		Internal			
50357	int16		Internal			
50358	int16		Internal			
50359	int16		Internal			

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50360	int16		Internal			
50361	int16		Internal			
50362	int16		Internal			
50363	int16		Internal			
50364	int16		Internal			
50365	int16		Internal			
50366	int16		Internal			
50367	int16		Internal			
50368	int16		Internal			
50369	int16		Internal			
Topic Miscellenous						
50370	int16	9202	91.01 AM Internal value 1			All
50371	int16	9203	91.02 AM Internal value 2			All
50372	int16	9204	91.03 AM Internal value 3			All
50373	int16	9205	91.04 AM Internal value 4			All
50374	int16	9206	91.05 AM Internal value 5			All
50375	int16	9207	91.06 AM Internal value 6			All
50376	int16	9208	91.07 AM Internal value 7			All
50377	int16	9209	91.08 AM Internal value 8			All
50378	int16	9210	91.09 AM Internal value 9			All
50379	int16	9211	91.10 AM Internal value 10			All
50380	int16	9212	91.11 AM Internal value 11			All
50381	int16	9213	91.12 AM Internal value 12			All
50382	int16	9214	91.13 AM Internal value 13			All
50383	int16	9215	91.14 AM Internal value 14			All
50384	int16		Internal			
50385	int16		Internal			
50386	uint16	4096	BITLIST			
			Monitored Number of easYgen communicating		Mask FF00h	All
			Number of easYgens currently communicating		Mask 00FFh	All
50387	uint16	4097	BITLIST			
			Monitored Number of LS5 communicating		Mask FF00h	EG3500XT-P1 EG3500XT-P2
			Number of LS5 currently communicating		Mask 00FFh	EG3500XT-P1 EG3500XT-P2
50388	uint16	4098	BITLIST			
			Device number of missing LS-5 (33-48)		Mask FFFFh	EG3500XT-P1

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
						EG3500XT-P2
			LS-5 Device Nr. 48		Mask 8000h	
			LS-5 Device Nr. 47		Mask 4000h	
			LS-5 Device Nr. 46		Mask 2000h	
			LS-5 Device Nr. 45		Mask 1000h	
			LS-5 Device Nr. 44		Mask 0800h	
			LS-5 Device Nr. 43		Mask 0400h	
			LS-5 Device Nr. 42		Mask 0200h	
			LS-5 Device Nr. 41		Mask 0100h	
			LS-5 Device Nr. 40		Mask 0080h	
			LS-5 Device Nr. 39		Mask 0040h	
			LS-5 Device Nr. 38		Mask 0020h	
			LS-5 Device Nr. 37		Mask 0010h	
			LS-5 Device Nr. 36		Mask 0008h	
			LS-5 Device Nr. 35		Mask 0004h	
			LS-5 Device Nr. 34		Mask 0002h	
			LS-5 Device Nr. 33		Mask 0001h	
50389	uint16	4099	BITLIST			
			Device number of missing LS-5 (49-64)		Mask FFFFh	EG3500XT-P1 EG3500XT-P2
			LS-5 Device Nr. 64		Mask 8000h	
			LS-5 Device Nr. 63		Mask 4000h	
			LS-5 Device Nr. 62		Mask 2000h	
			LS-5 Device Nr. 61		Mask 1000h	
			LS-5 Device Nr. 60		Mask 0800h	
			LS-5 Device Nr. 59		Mask 0400h	
			LS-5 Device Nr. 58		Mask 0200h	
			LS-5 Device Nr. 57		Mask 0100h	
			LS-5 Device Nr. 56		Mask 0080h	
			LS-5 Device Nr. 55		Mask 0040h	
			LS-5 Device Nr. 54		Mask 0020h	
			LS-5 Device Nr. 53		Mask 0010h	
			LS-5 Device Nr. 52		Mask 0008h	
			LS-5 Device Nr. 51		Mask 0004h	
			LS-5 Device Nr. 50		Mask 0002h	
			LS-5 Device Nr. 49		Mask 0001h	
50390	int16	181	Phase angle busbar1-generator L1-L2	°	*10	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50391	int16	184	Phase angle mains-busbar1 L1-L2	°	*10	All
50392	int16	4641	Delta voltage busbar1-generator	%	*10	All
50393	int16	4640	Delta frequency busbar1-generator	Hz	*100	All
50394	int16	4607	Phase angle compensated generator-busbar1 L1-L2	°	*10	All
50395	int16	139	Generator power factor L1		*1000	All
50396	int16	203	Generator power factor L2		*1000	All
50397	int16	204	Generator power factor L3		*1000	All
50398	int16	8850	Voltage increase monitored value	%	*100	All
50399	int16		Phase angle compensated mains-busbar1 L1-L2	°	*10	All
50400	int16		Internal			
50401	int16		Internal			
50402	int16		Internal			
50403	int16		Internal			
50404	int16		Internal			
50405	int16		Internal			
50406	int16		Internal			
50407	int16		Internal			
50408	int16		Internal			
50409	int16		Internal			
Int32 (Long)						
Topic AC Generator and Busbar values						
50410	int32	135	Total gen. active power	W	*1	All
50412	int32	136	Total gen. reactive power	var	*1	All
50414	int32	137	Total gen. apparent power	VA	*1	All
50416	int32	170	Average Gen. Wye-Voltage	V	*10	All
50418	int32	171	Average Gen. Delta-Voltage	V	*10	All
50420	int32	216	Average Busbar Delta-Voltage	V	*10	All
50422	int32	185	Av. Gen. Current	A	*1000	All
50424	int32	111	Gen. current L1	A	*1000	All
50426	int32	112	Gen. current L2	A	*1000	All
50428	int32	113	Gen. current L3	A	*1000	All
50430	int32	161	Meas. ground current	A	*1000	All
50432	int32	159	Calculated ground current	A	*1000	All
50434	int32	108	Gen. voltage L1-L2	V	*10	All
50436	int32	109	Gen. voltage L2-L3	V	*10	All
50438	int32	110	Gen. voltage L3-L1	V	*10	All

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50440	int32	114	Gen. voltage L1-N	V	*10	All
50442	int32	115	Gen. voltage L2-N	V	*10	All
50444	int32	116	Gen. voltage L3-N	V	*10	All
50446	int32	125	Gen. active power L1	W	*1	All
50448	int32	126	Gen. active power L2	W	*1	All
50450	int32	127	Gen. active power L3	W	*1	All
50452	int32	182	Busbar 1: voltage L1-L2	V	*10	All
50454	int32	2520	Gen. real energy	MWh	*100	All
50456	int32	2522	Gen. positive reactive energy	Mvarh	*100	All
50458	int32	2568	Gen. hours of operation	h	*100	All
50460	int32	5542	Setpoint active power	kW	*10	All
50462	int32	5640	Setpoint voltage	V	*1	All
50464	int32	234	Average Busbar Wye-Voltage	V	*10	All
50466	int32	189	Busbar 1: voltage L2-L3	V	*10	EG3500XT-P1 EG3500XT-P2
50468	int32	193	Busbar 1: voltage L3-L1	V	*10	EG3500XT-P1 EG3500XT-P2
50470	int32	2526	Gen. negative reactive energy	Mvarh	*100	All
Topic AC Mains values						
50472	int32	140	Total mains active power	W	*1	All
50474	int32	150	Total mains reactive power	var	*1	All
50476	int32	173	Average Mains Wye-Voltage	V	*10	All
50478	int32	174	Av. Mains Delta-Voltage	V	*10	All
50480	int32	207	Av. Mains Current	A	*1000	All
50482	int32	134	Mains current L1	A	*1000	All
50484	int32		Internal			
50486	int32		Internal			
50488	int32	118	Mains voltage L1-L2	V	*10	All
50490	int32	119	Mains voltage L2-L3	V	*10	All
50492	int32	120	Mains voltage L3-L1	V	*10	All
50494	int32	121	Mains voltage L1-N	V	*10	All
50496	int32	122	Mains voltage L2-N	V	*10	All
50498	int32	123	Mains voltage L3-N	V	*10	All
Topic AC System values						
50500	int32	217	Reserve real power in system (valid if LDSS is on)	kW	*1	All
50502	int32	218	Real power in system (vaild if LDSS is on)	kW	*1	All

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50504	int32	219	Nominal real power in system (vaild if LDSS is on)	kW	*1	All
50506	int32	-	05.70 Active power set point ramped	kW	*10	All
50508	int32	-	05.92 Reactive power set point ramped	kvar	*10	All
50510	int32		Internal			
Topic??						
Subtopic ??						
50512	int32		Internal			All
50514	int32		Internal			All
50516	int32		Internal			All
50518	int32		Internal			All
50520	int32		Internal			All
50522	int32		Internal			All
50524	int32		Internal			All
50526	int32		Internal			All
50528	int32		Internal			All
50530	int32		Internal			All
Subtopic Values						
50532	int32	15201	Internal			All
50534	uint32	2580	Internal			All
50536	int32	15319	Internal			All
50538	int32		Internal			
50540	int32		Internal			
Topic LS5						
50542	uint32	267	Average LSx Delta Mains voltage L-L	V	*10	EG3500XT-P1 EG3500XT-P2
50544	uint32	268	Average LSx Wye Mains voltage L-N	V	*10	EG3500XT-P1 EG3500XT-P2
50546	int32	269	Active power LSx (Active mains power in own segment)	W	*1	EG3500XT-P1 EG3500XT-P2
50548	int32	270	Reactive power LSx (Reactive mains power in own segment)	var	*1	EG3500XT-P1 EG3500XT-P2
50550	int32		Internal			
50552	int32		Internal			
50554	int32		Internal			
50556	int32		Internal			
50558	int32		Internal			

Released

Modbus-Address	Size	Index	Description	Unit	Scale	Model
50560	int32		Internal			
Topic Miscellenous						
50562	int32	231	Busbar Voltage L1-N	V	*10	EG3500XT-P2
50564	int32	232	Busbar Voltage L2-N	V	*10	EG3500XT-P2
50566	int32	233	Busbar Voltage L3-N	V	*10	EG3500XT-P2
50568	int32	5646	Setpoint reactive power	kvar	*10	All
50570	int32	9698	91.15 AM Internal value 15 (long)			All
50572	int32	9702	91.16 AM Internal value 16 (long)			All
50574	int32	155	Generator current slave pointer L1	A	*1000	All
50576	int32	156	Generator current slave pointer L2	A	*1000	All
50578	int32	157	Generator current slave pointer L3	A	*1000	All
50580	int32	128	Generator reactive power L1	var	*1	All
50582	int32	129	Generator reactive power L2	var	*1	All
50584	int32	130	Generator reactive power L3	var	*1	All
50586	int32	131	Generator apparent power L1	VA	*1	All
50588	int32	132	Generator apparent power L2	VA	*1	All
50590	int32	133	Generator apparent power L3	VA	*1	All
50592	int32	152	Mains total apparent power	VA	*1	All
50594	int32	158	Mains current slave pointer L1	A	*1000	All
50596	int32		0 (prepared Mains current slave pointer L2)			
50598	int32		0 (prepared Mains current slave pointer L3)			
50600	int32	12043	Internal			All

9.3.2 Additional Data Identifier

9.3.2.1 Receive Data (sent from remote control to the easY-I)

General notes

The device accepts receive data from outside. These data are usually remote control data, with which the genset control starts and stops the operation or runs different setpoints.

These data do not require a password level to be accepted. They are overtaken into a non-volatile memory and are lost, if the device is powered down.

Ensure Security!

Transmitting data from outside of the remote control needs secure (network) communication. Do not connect the easY-I with the internet as long the security aspects are not considered! Consider an IP responsible person to discuss proper security procedures like placing routers and fire walls.

Take care for sufficient protection of Ethernet communication.

Remote control word 1

Object 21F7h (Parameter 503)

This object is required for remote control. The data type is UNSIGNED16.

The internal parameter 503 of the easY-I must be set to react on the remote control instructions. This is performed by sending rising signals for the respective bits (refer to Fig. 332 for the priority of start and stop signals).

Para-meter no.	Object ID	Name		Unit	Data type	Note
503	21F7h	Control word 1		Bit field	unsigned16	
		Bit 15	Not used			
		Bit 14	Not used			
		Bit 13	Not used			
		Bit 12	Not used			
		Bit 11	Not used			
		Bit 10	Not used			
		Bit 9	Shutdown command			To shut down, a "0" must be written and then a "1"
		Bit 8	Not used			
		Bit 7	Not used			
		Bit 6	Not used			
		Bit 5	Not used			
		Bit 4	Ext. Acknowledge (rising edge) Must be set twice to acknowledge			To acknowledge, a 0 must be written and then a 1
		Bit 3	Must always be set to 0			
		Bit 2	Must always be set to 0			
		Bit 1	Stop bit (rising edge)			To stop, a 0 must be written and then a 1
		Bit 0	Start bit (rising edge)			To start, a 0 must be written and then a 1

Table 152: Remote control telegram

Bit 0 Start bit	With the rising edge of the bit, the easY-I activates the remote request command (LogicsManager input command variable 04.13). The condition of the start command will be stored and may be used as command variable for the LogicsManager.
Bit 1 Stop bit	With the rising edge of the bit, the easY-I deactivates the remote request command (LogicsManager input command variable 04.13). The condition of the start command will be stored and may be used as command variable for the LogicsManager.
Bit 4 "Reset alarms"	This bit controls the LogicsManager input command variable 04.14. The remote acknowledge bit must be set and reset twice to acknowledge an alarm completely. The first rising edge disables the horn and the second rising edge resets the alarm.
Bit 9 "Shutdown command"	This bit is directly influencing the LogicsManager command variable: “03.40 Remote Shutdown“ and can be taken to create an engine shut down and/or an alarm over an internal flag.
Remote start /stop	The command variable "04.13 Remote request" changes to "1" (high) if the start bit is enabled and changes back to "0" (low) if the stop bit is enabled.
Ext. acknowledge	The command variable "04.14 Remote acknowledge" is the reflection of the control bit. The easY-I deactivates the horn with the first change from "0" to "1" of the logical output "External acknowledge", and acknowledges all alarm messages, which have occurred and are no longer active, with the second change from "0" to "1".

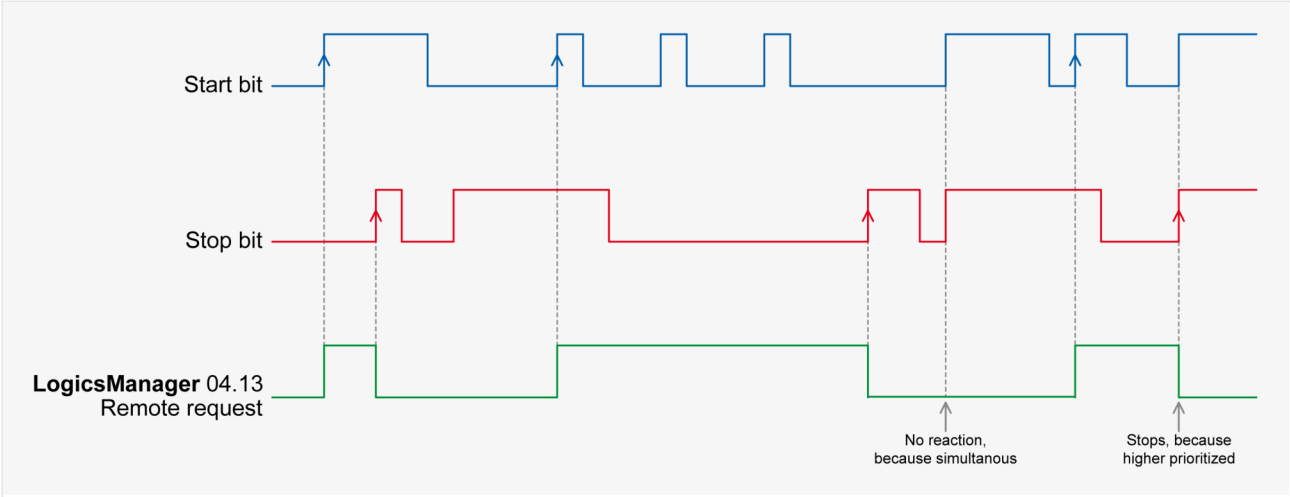


Fig. 332: Remote control - start/stop priority

Fig. 332 shows the reaction of the command variable on the various status changes of the bits.

The easY-I does **not** react on the disabling of the start bit, but only on the enabling of the stop bit. This has the advantage that it is not required to maintain the connection established for the whole time in case of a remote start via a modem.

Remote control word 2

Object 21F8h (Parameter 504)

This object is required for remote control. The data type is UNSIGNED16.

Bit 15 = 1	
Bit 14 = 1	
Bit 13 = 1	
Bit 12 = 1	
Bit 11 = 1	
Bit 10 = 1	
Bit 9 = 1	
Bit 8 = 1	
Bit 7 = 1	Request active power setpoint 2 – this bit activates the LogicsManager command variable [04.40] "Remote power setpoint 2" and is dedicated for switching from active power setpoint 1 to active power setpoint 2
Bit 6 = 1	Request power factor setpoint 2 – this bit activates the LogicsManager command variable [04.39] "Remote PF setpoint 2" and is dedicated for switching from power factor setpoint 1 to power factor setpoint 2
Bit 5 = 1	Request frequency setpoint 2 – this bit activates the LogicsManager command variable [04.38] "Remote frequency setpoint 2" and is dedicated for switching from frequency setpoint 1 to frequency setpoint 2
Bit 4 = 1	Request voltage setpoint 2 – this bit activates the LogicsManager command variable [04.37] "Remote voltage setpoint 2" and is dedicated for switching from voltage setpoint 1 to voltage setpoint 2
Bit 3 = 1	
Bit 2 = 1	
Bit 1 = 1	
Bit 0 = 1	

Remote control word 3



Object 21F9h (Parameter 505)

This object is required for remote control. These remote control bits can be used by a PLC to send control signals via SDO or PDO, which can then be used as command variables in the LogicsManager to control the easY-I. The data type is UNSIGNED16.

Bit 15 = 1 (ID 541)	Remote control bit 16 (command variable 04.59)
Bit 14 = 1 (ID 542)	Remote control bit 15 (command variable 04.58)
Bit 13 = 1 (ID 543)	Remote control bit 14 (command variable 04.57)
Bit 12 = 1 (ID 544)	Remote control bit 13 (command variable 04.56)
Bit 11 = 1 (ID 545)	Remote control bit 12 (command variable 04.55)
Bit 10 = 1 (ID 546)	Remote control bit 11 (command variable 04.54)
Bit 9 = 1 (ID 547)	Remote control bit 10 (command variable 04.53)
Bit 8 = 1 (ID 548)	Remote control bit 9 (command variable 04.52)
Bit 7 = 1 (ID 549)	Remote control bit 8 (command variable 04.51)
Bit 6 = 1 (ID 550)	Remote control bit 7 (command variable 04.50)
Bit 5 = 1 (ID 551)	Remote control bit 6 (command variable 04.49)

Released

Bit 4 = 1 (ID 552)	Remote control bit 5 (command variable 04.48)
Bit 3 = 1 (ID 553)	Remote control bit 4 (command variable 04.47)
Bit 2 = 1 (ID 554)	Remote control bit 3 (command variable 04.46)
Bit 1 = 1 (ID 555)	Remote control bit 2 (command variable 04.45)
Bit 0 = 1 (ID 556)	Remote control bit 1 (command variable 04.44)

Remote active power setpoint

Object 21FBh (Parameter 507)

This value may be used as data source "[05.56] Interface P setp [kW]" via the AnalogManager. No password is required to write this value.

This object is required to transmit the active power setpoint for active power control.

The data type is INTEGER32.

The value is scaled in [kW * 10].

Example

- 100 kW = 1000 = 03E8h

Remote power factor setpoint

Object 21FCh (Parameter 508)

This value may be used as data source "[05.12] Interface PF sp [%]" via the AnalogManager. No password is required to write this value.

This object is required to transmit the power factor setpoint for power factor control.

The data type is INTEGER16.

The valid range for this value is [-710 to 1000 to 710].

Example

- PF (cosphi) = c0.71 (capacitive) = -710 = FD3Ah
- PF (cosphi) = 1.00 = 1000 = 03E8h
- PF (cosphi) = i0.71 (inductive) = 710 = 02C6h

Remote Frequency Setpoint - Object 21FDh

Remote frequency setpoint

Object 21FDh (Parameter 509)

This value may be used as data source "[05.53] Interface f setp [Hz]" via the AnalogManager. No password is required to write this value.

This object is required to transmit the frequency setpoint for frequency control.

The data type is INTEGER16.

The valid range for this value is [Hz * 100].

Example

- 50.00 Hz = 5000 = 1388h

Remote voltage setpoint

Object 21FEh (Parameter 510)

This value may be used as data source "[05.59] Interface V setp [V]" via the AnalogManager. No password is required to write this value.

This object is required to transmit the voltage setpoint for voltage control.

The data type is UNSIGNED32.

The value is scaled in [V].

Example

- 400 V » 400 = 190h
- 10000 V » 10000 = 2710h

Remote reactive power setpoint

Object 21FFh (Parameter 511)

This value may be used as data source "[05.83] Interf.kvar sp [kvar]" via the AnalogManager. No password is required to write this value. This object is required to transmit the reactive power setpoint for the kvar control.

The data type is signed INTEGER32.

The value is scaled in [kvar*10].

Examples:

- 100.0 kvar » 1000 = 3E8h
- 100.2 kvar » 1002 = 3EAh

Released

Q(V) voltage shift VQ0

Object 2200h (Parameter 512)

This is the Setpoint for the reactive power - voltage function Q(V). [VDE-AR-N 4110]

Interface reference value VQ0 has the resolution of (1/100) steps. The “starting” value is 1.00. A value limitation is included.

Remote LDSS IOP reserve power

Object 2232h (Parameter 562)

This value may be used to modify LDSS reserve power value [kW] for island operation via interface.

Notes:

- Parameters “5760 IOP Reserve power”, “5648 IOP Reserve power 2” and LM “120604 IOP Reserve power 2” are not overwritten by this write command.
- The last change either via interface or via the parameter selected with the LM is effective.
- If there is no change anymore, the last change will be kept until power cycling the device.
- After power cycling, the parameter value is used until the easY-I receives a different value via interface.
- The parameter alignment is still done with the active parameter value.

Remote LDSS MOP reserve power

Object 2233h (Parameter 563)

This value may be used to modify LDSS reserve power value [kW] for parallel to mains operation via interface.

Notes:

- Parameter “5768 MOP Reserve power”, “5649 MOP Reserve power 2” and LM “120605 MOP Reserve power 2” are not overwritten by this write command.
- The last change either via interface or via the parameter selected with the LM is effective.
- If there is no change anymore, the last change will be kept until power cycling the device.
- After power cycling, the parameter value is used until the easY-I receives a different value via interface.
- The parameter alignment is still done with the active parameter value.

Free analog values

The device provides identifier “Free analog values” for receiving 16 bit signed integers for free purposes. The values are available in the AnalogManager group 24. Refer to “9.3.2.3.4 Free Analog Values”

External DI request (1 to 16)



Object 3F4Eh (Parameter 8014)

This object is required to receive the state of the external discrete inputs 1 to 16 (e.g. of a Phoenix expansion card). The data type is UNSIGNED16.

Bit 15	External discrete input 16 [DIex16]
Bit 14	External discrete input 15 [DIex15]
Bit 13	External discrete input 14 [DIex14]
Bit 12	External discrete input 13 [DIex13]
Bit 11	External discrete input 12 [DIex12]
Bit 10	External discrete input 11 [DIex11]
Bit 9	External discrete input 10 [DIex10]
Bit 8	External discrete input 9 [DIex09]
Bit 7	External discrete input 8 [DIex08]
Bit 6	External discrete input 7 [DIex07]
Bit 5	External discrete input 6 [DIex06]
Bit 4	External discrete input 5 [DIex05]
Bit 3	External discrete input 4 [DIex04]
Bit 2	External discrete input 3 [DIex03]
Bit 1	External discrete input 2 [DIex02]
Bit 0	External discrete input 1 [DIex01]

External DI request (17 to 32)



Object 3F4Fh (Parameter 8015)

This object is required to receive the state of the external discrete inputs 17 to 32 (e.g. of a Phoenix expansion card). The data type is UNSIGNED16.

Bit 15	External discrete input 32 [DIex32]
Bit 14	External discrete input 31 [DIex31]
Bit 13	External discrete input 30 [DIex30]
Bit 12	External discrete input 29 [DIex29]
Bit 11	External discrete input 28 [DIex28]
Bit 10	External discrete input 27 [DIex27]
Bit 9	External discrete input 26 [DIex26]
Bit 8	External discrete input 25 [DIex25]
Bit 7	External discrete input 24 [DIex24]
Bit 6	External discrete input 23 [DIex23]
Bit 5	External discrete input 22 [DIex22]

Released

Bit 4	External discrete input 21 [DIex21]
Bit 3	External discrete input 20 [DIex20]
Bit 2	External discrete input 19 [DIex19]
Bit 1	External discrete input 18 [DIex18]
Bit 0	External discrete input 17 [DIex17]

External Analog Inputs

Object 4008h ff, Subindex 1 (Parameter 8200 ff)

This unscaled value is transmitted by the external expansion board. The easY-I must be configured to format this value accordingly. The data type is UNSIGNED16.

The external analog inputs 1 to 16 have the following parameter IDs:

AI #	1	2	3	4	5	6	7	8
Object	4008	4009	400A	400B	400C	400D	400E	400F
ID	8200	8201	8202	8203	8204	8205	8206	8207

AI #	9	10	11	12	13	14	15	16
Object	4010	4011	4012	4013	4014	4015	4016	4017
ID	8208	8209	8210	8211	8212	8213	8214	8215

9.3.2.2 Transmit Data (sent from easY-I to control external devices)

The device sends data out which are receipt by external devices. These data usually are commands to control expansion boards or annunciators running CANopen.

External DO control (1 to 16)

Object 3F45h (Parameter 8005)

This object is required to control the external outputs (relays) 1 to 16 (e.g. of a Phoenix expansion card). The data type is UNSIGNED16.

Bit 15	External discrete output 16 [Rex16]
Bit 14	External discrete output 15 [Rex15]
Bit 13	External discrete output 14 [Rex14]
Bit 12	External discrete output 13 [Rex13]
Bit 11	External discrete output 12 [Rex12]
Bit 10	External discrete output 11 [Rex11]
Bit 9	External discrete output 10 [Rex10]
Bit 8	External discrete output 9 [Rex09]
Bit 7	External discrete output 8 [Rex08]

Bit 6	External discrete output 7 [Rex07]
Bit 5	External discrete output 6 [Rex06]
Bit 4	External discrete output 5 [Rex05]
Bit 3	External discrete output 4 [Rex04]
Bit 2	External discrete output 3 [Rex03]
Bit 1	External discrete output 2 [Rex02]
Bit 0	External discrete output 1 [Rex01]

External DO control (17 to 32)

Object 3F49h (Parameter 8009)

This object is required to control the external outputs (relays) 17 to 32 (e.g. of a Phoenix expansion card). The data type is UNSIGNED16.

Bit 15	External discrete output 32 [Rex32]
Bit 14	External discrete output 31 [Rex31]
Bit 13	External discrete output 30 [Rex30]
Bit 12	External discrete output 29 [Rex29]
Bit 11	External discrete output 28 [Rex28]
Bit 10	External discrete output 27 [Rex27]
Bit 9	External discrete output 26 [Rex26]
Bit 8	External discrete output 25 [Rex25]
Bit 7	External discrete output 24 [Rex24]
Bit 6	External discrete output 23 [Rex23]
Bit 5	External discrete output 22 [Rex22]
Bit 4	External discrete output 21 [Rex21]
Bit 3	External discrete output 20 [Rex20]
Bit 2	External discrete output 19 [Rex19]
Bit 1	External discrete output 18 [Rex18]
Bit 0	External discrete output 17 [Rex17]

External Analog Outputs

Object 4806h ff, Subindex 1 (Parameter ID 10246 ff)

This unscaled value is transmitted by the external expansion board. The easY-I must be configured to format this value accordingly. The data type is UNSIGNED16.

The external analog outputs 1 to 4 have the following parameter IDs:

AI #	**1**	**2**	**3**	**4**
Object	4806hex	4810hex	481Ahex	4824hex

AI #	1	2	3	4
ID	10245	10255	10265	10275

9.3.2.3 Data Receive (interconnectivity)

9.3.2.3.1 Introduction

The easY-I provides different possibilities to receive data from other CAN or Modbus devices. The received data are available in the AnalogManager or LogicsManager system.

There are:

- Analog variables called CAN1 RPDO...
- Command variables (single bits of some Analog variables)
- Free analog values

9.3.2.3.2 Analog variables CAN1 RPDO

The table below shows data which can be received via **CAN RPDO** or **Modbus** from any other devices. These data are available as analog variables (of group 21) and can be assigned to analog manager equations e.g. for free alarms or setpoints. For usage with CAN the corresponding indices must be mapped to the RPDOs. It is also possible to write via Modbus to these indices.



If “LDSS with predicted load” is used in “External” mode, RPDOx Word1 and RPDOx Word2 are used for LDSS and are not available for other functions. (Refer to “6.3.11 LDSS with predicted load”).

Analog variable	Receive PDO	Index
21.01 CAN1 RPDO1.1	RPDO1 Word1 (signed short)	3371
21.02 CAN1 RPDO1.2	RPDO1 Word2 (signed short)	3372
21.03 CAN1 RPDO1.3	RPDO1 Word3 (signed short)	3373
21.04 CAN1 RPDO1.4	RPDO1 Word4 (signed short)	3374
21.05 CAN1 RPDO2.1	RPDO2 Word1 (signed short)	3375
21.06 CAN1 RPDO2.2	RPDO2 Word2 (signed short)	3376
21.07 CAN1 RPDO2.3	RPDO2 Word3 (signed short)	3377
21.08 CAN1 RPDO2.4	RPDO2 Word4 (signed short)	3378
21.09 CAN1 RPDO3.1	RPDO3 Word1 (signed short)	3379
21.10 CAN1 RPDO3.2	RPDO3 Word2 (signed short)	3380
21.11 CAN1 RPDO3.3	RPDO3 Word3 (signed short)	3381
21.12 CAN1 RPDO3.4	RPDO3 Word4 (signed short)	3382
21.13 CAN1 RPDO4.1	RPDO4 Word1 (signed short)	3383
21.14 CAN1 RPDO4.2	RPDO4 Word2 (signed short)	3384
21.15 CAN1 RPDO4.3	RPDO4 Word3 (signed short)	3385

Analog variable	Receive PDO	Index
21.16 CAN1 RPDO4.4	RPDO4 Word4 (signed short)	3386
21.17 CAN1 RPDO5.1	RPDO5 Word1 (signed short)	3387
21.18 CAN1 RPDO5.2	RPDO5 Word2 (signed short)	3388
21.19 CAN1 RPDO5.3	RPDO5 Word3 (signed short)	3389
21.20 CAN1 RPDO5.4	RPDO5 Word4 (signed short)	3390

9.3.2.3.3 Commnand variables CAN 1 RPDO

The single bits 1-16 of RPDO1 Word1 (3371), RPDO2 Word1 (3375), RPDO3 Word1 (3379), RPDO4 Word1 (3383) and RPDO5 Word1 (3387) are available as command variables of groups 32 to 36 which can be assigned to LogicsManagers.

LogicsManager variable	Index
32.01 CAN1 RPDO1.1.1	3371
32.02 CAN1 RPDO1.1.2	
32.03 CAN1 RPDO1.1.3	
32.04 CAN1 RPDO1.1.4	
32.05 CAN1 RPDO1.1.5	
32.06 CAN1 RPDO1.1.6	
32.07 CAN1 RPDO1.1.7	
32.08 CAN1 RPDO1.1.8	
32.09 CAN1 RPDO1.1.9	
32.10 CAN1 RPDO1.1.10	
32.11 CAN1 RPDO1.1.11	
32.12 CAN1 RPDO1.1.12	
32.13 CAN1 RPDO1.1.13	
32.14 CAN1 RPDO1.1.14	
32.15 CAN1 RPDO1.1.15	
32.16 CAN1 RPDO1.1.16	
33.01CAN1 RPDO2.1.01	3375
33.02 CAN1 RPDO2.1.2	
33.03 CAN1 RPDO2.1.3	
33.04 CAN1 RPDO2.1.4	
33.05 CAN1 RPDO2.1.5	
33.06 CAN1 RPDO2.1.6	
33.07 CAN1 RPDO2.1.7	
33.08 CAN1 RPDO2.1.8	
33.09 CAN1 RPDO2.1.9	
33.10 CAN1 RPDO2.1.10	
33.11 CAN1 RPDO2.1.11	

LogicsManager variable	Index
33.12 CAN1 RPDO2.1.12	
33.13 CAN1 RPDO2.1.13	
33.14 CAN1 RPDO2.1.14	
33.15 CAN1 RPDO2.1.15	
33.16 CAN1 RPDO2.1.16	
34.01 CAN1 RPDO3.1.1	3379
34.02 CAN1 RPDO3.1.2	
34.03 CAN1 RPDO3.1.3	
34.04 CAN1 RPDO3.1.4	
34.05 CAN1 RPDO3.1.5	
34.06 CAN1 RPDO3.1.6	
34.07 CAN1 RPDO3.1.7	
34.08 CAN1 RPDO3.1.8	
34.09 CAN1 RPDO3.1.9	
34.10 CAN1 RPDO3.1.10	
34.11 CAN1 RPDO3.1.11	
34.12 CAN1 RPDO3.1.12	
34.13 CAN1 RPDO3.1.13	
34.14 CAN1 RPDO3.1.14	
34.15 CAN1 RPDO3.1.15	
34.16 CAN1 RPDO3.1.16	
35.01 CAN1 RPDO4.1.1	3383
35.02 CAN1 RPDO4.1.2	
35.03 CAN1 RPDO4.1.3	
35.04 CAN1 RPDO4.1.4	
35.05 CAN1 RPDO4.1.5	
35.06 CAN1 RPDO4.1.6	
35.07 CAN1 RPDO4.1.7	
35.08 CAN1 RPDO4.1.8	
35.09 CAN1 RPDO4.1.9	
35.10 CAN1 RPDO4.1.10	
35.11 CAN1 RPDO4.1.11	
35.12 CAN1 RPDO4.1.12	
35.13 CAN1 RPDO4.1.13	
35.14 CAN1 RPDO4.1.14	
35.15 CAN1 RPDO4.1.15	
35.16 CAN1 RPDO4.1.16	
36.01 CAN1 RPDO5.1.1	3387

LogicsManager variable	Index
36.02 CAN1 RPDO5.1.2	
36.03 CAN1 RPDO5.1.3	
36.04 CAN1 RPDO5.1.4	
36.05 CAN1 RPDO5.1.5	
36.06 CAN1 RPDO5.1.6	
36.07 CAN1 RPDO5.1.7	
36.08 CAN1 RPDO5.1.8	
36.09 CAN1 RPDO5.1.9	
36.10 CAN1 RPDO5.1.10	
36.11 CAN1 RPDO5.1.11	
36.12 CAN1 RPDO5.1.12	
36.13 CAN1 RPDO5.1.13	
36.14 CAN1 RPDO5.1.14	
36.15 CAN1 RPDO5.1.15	
36.16 CAN1 RPDO5.1.16	

The figure below shows how the name of these Command Variables are composed. (The naming of the variables was chosen with regard to their usage as CAN1 RPDOs.)

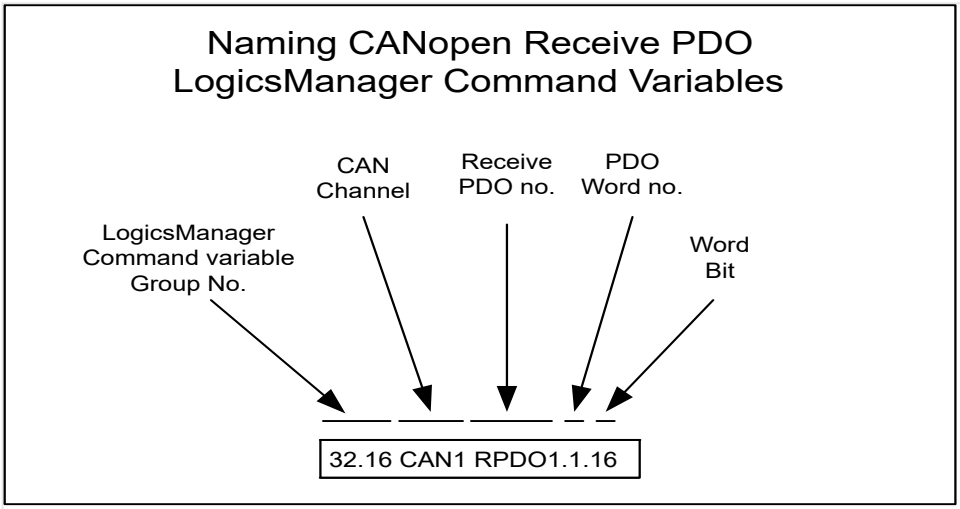


Fig. 333: Naming of the Command Variables.

The figure below shows an example of how CAN 1 RPDOs can be configured for interconnectivity. The 4 data words received at

- COB-ID 1026 (dec) are assigned to the Analog Variables 21.01, 21.02, 21.03 and 21.04 via configuration. The bits of 21.01 are assigned internally to the Command Variables 32.01 - 32.16.
- COB-ID 1030 (dec) are assigned to the Analog Variables 21.17, 21.18, 21.19 and 21.20 via configuration. The bits of 21.17 are assigned internally to the Command Variables 36.01 - 36.16.

These Analog Variables and Command Variables can be used in AnalogManagers and LogicsManagers equations to control different functions.

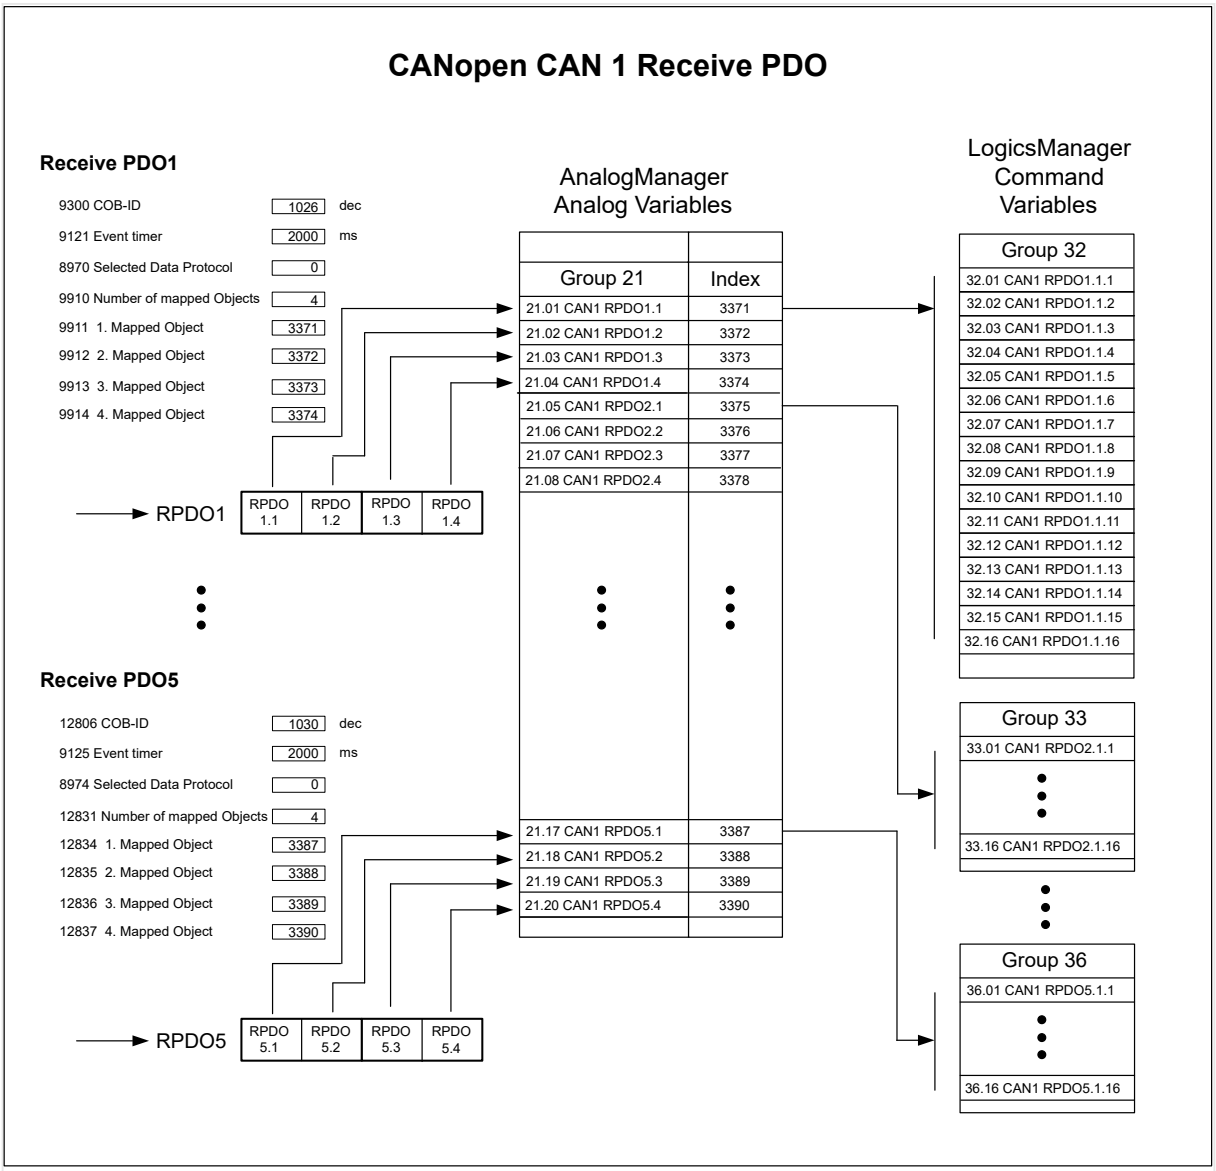


Fig. 334: Example of a CAN 1 RPDO configuration for interconnectivity.

9.3.2.3.4 Free Analog Values

Additionally the device provides “**Free analog values**” for receiving data for free purposes. These indices can be mapped to RPDOs or can be written via Modbus. The values are available in the AnalogManager group 24.



In future releases (higher than 2.10-0) the variables 24.05-24.08 will be write-protected with code level CL1.

Index	Name	Format	Usable as
587	Free analog value 1	INT16 signed	AnalogManager 24.01

Index	Name	Format	Usable as
588	Free analog value 2	INT16 signed	AnalogManager 24.02
589	Free analog value 3	INT16 signed	AnalogManager 24.03
590	Free analog value 4	INT16 signed	AnalogManager 24.04
591	Free analog value 5	INT16 signed	AnalogManager 24.05
592	Free analog value 6	INT16 signed	AnalogManager 24.06
593	Free analog value 7	INT16 signed	AnalogManager 24.07
594	Free analog value 8	INT16 signed	AnalogManager 24.08

9.3.2.4 Data Identifiers in General

The communication interface programmer needs often for single data transfer the identifier of the easY-I variable. To figure that out he has here some tips.

Data Protocol Document: Identifier Information in Column "Parameter ID"

The data protocol document shows usually in the column “Parameter ID” the identifier for a single use. Please check the type. Usually it is a signed INT16 (Short) variable but depending on the function it can also be a signed INT32 (Long). Typical values for long are voltages, currents and power measurement values.

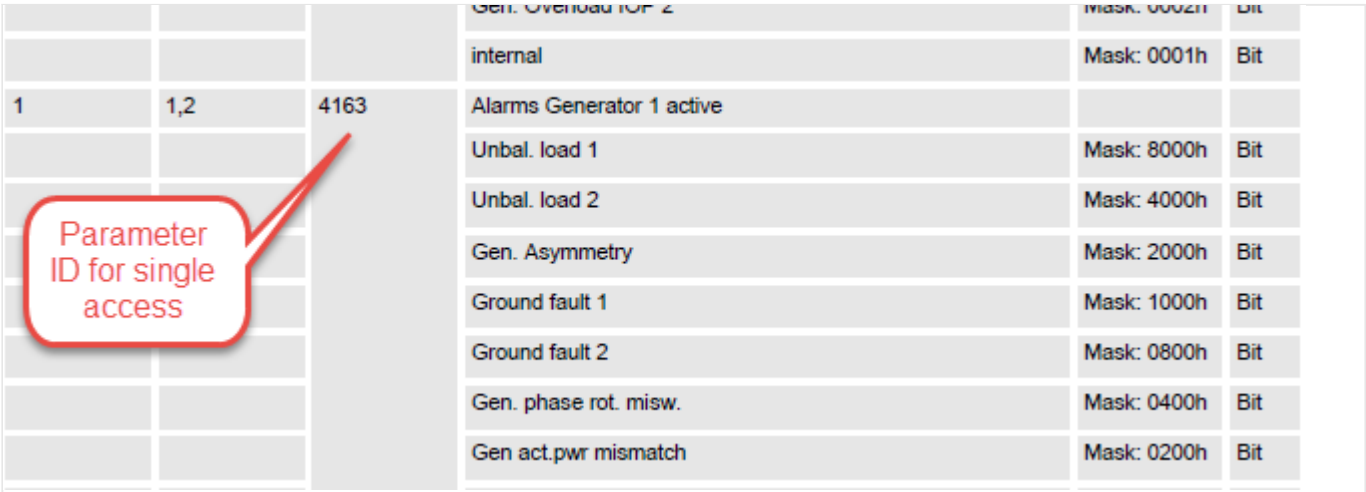


Fig. 335: Data Protocol Document in Columns "Parameter ID"

ToolKit: Identifier in front of the parameter or visualization

Nearly each parameter in ToolKit shows the according identifier in front of the data. The data type is to check. Usually it is a signed INT16 (Short) variable but depending on the function it can also be a signed INT32 (Long). Typical values for long are voltages, currents and power measurement values.

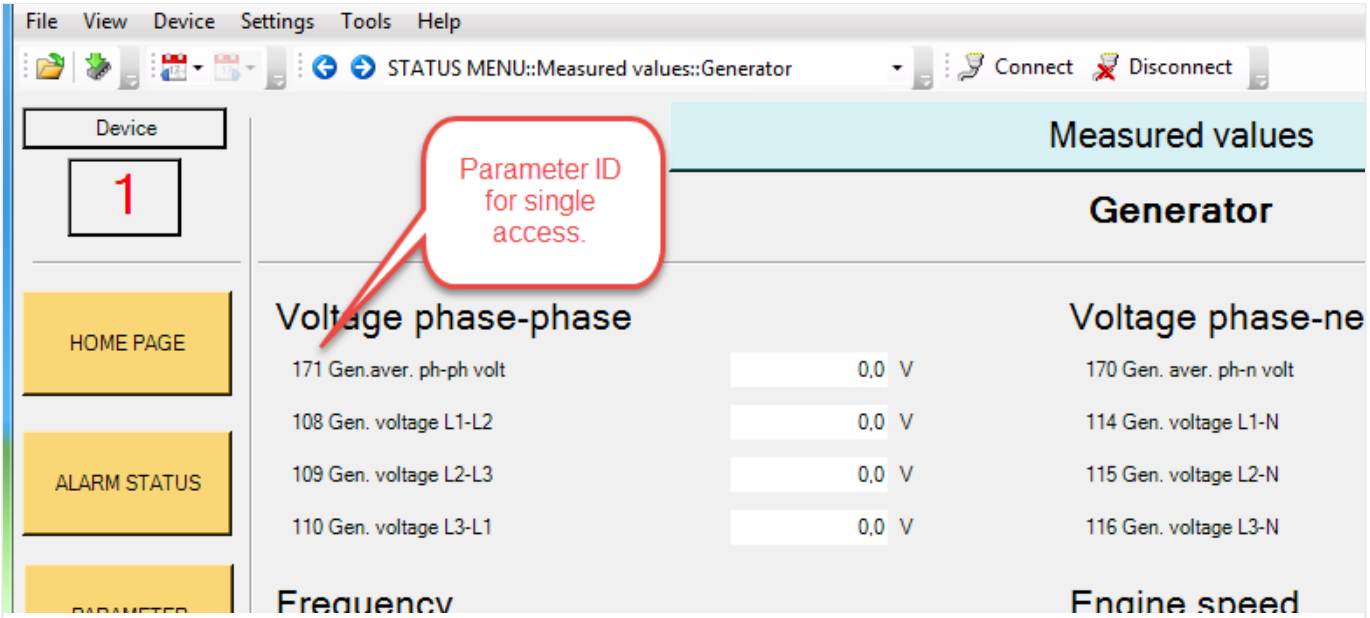


Fig. 336: ToolKit page with generator visualization data

With a few minor exceptions the reading of parameter are always possible. Writing of parameter is only accepted if the correct code level was passed for the according interface channel.

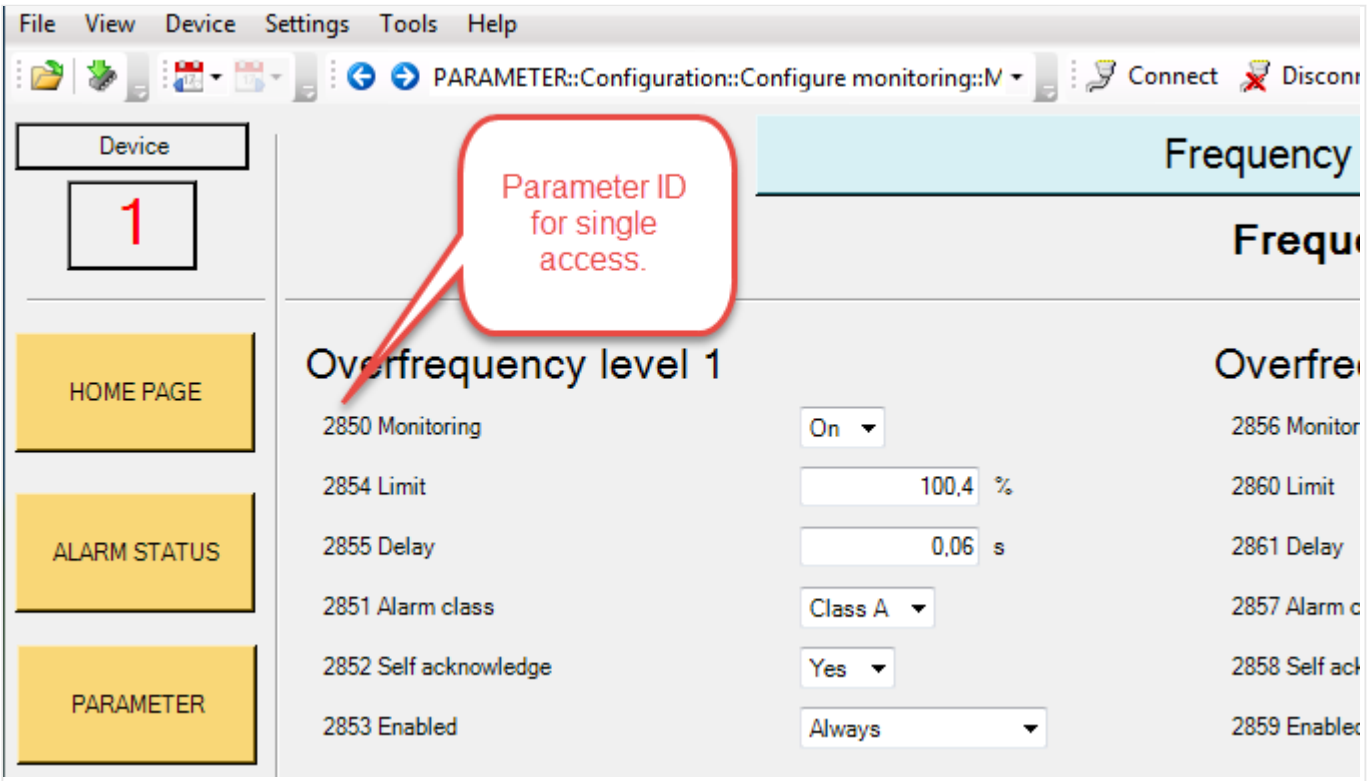


Fig. 337: ToolKit page with configuration data

The access on AnalogManager variables is provided as a signed 4 byte float value without decimals.

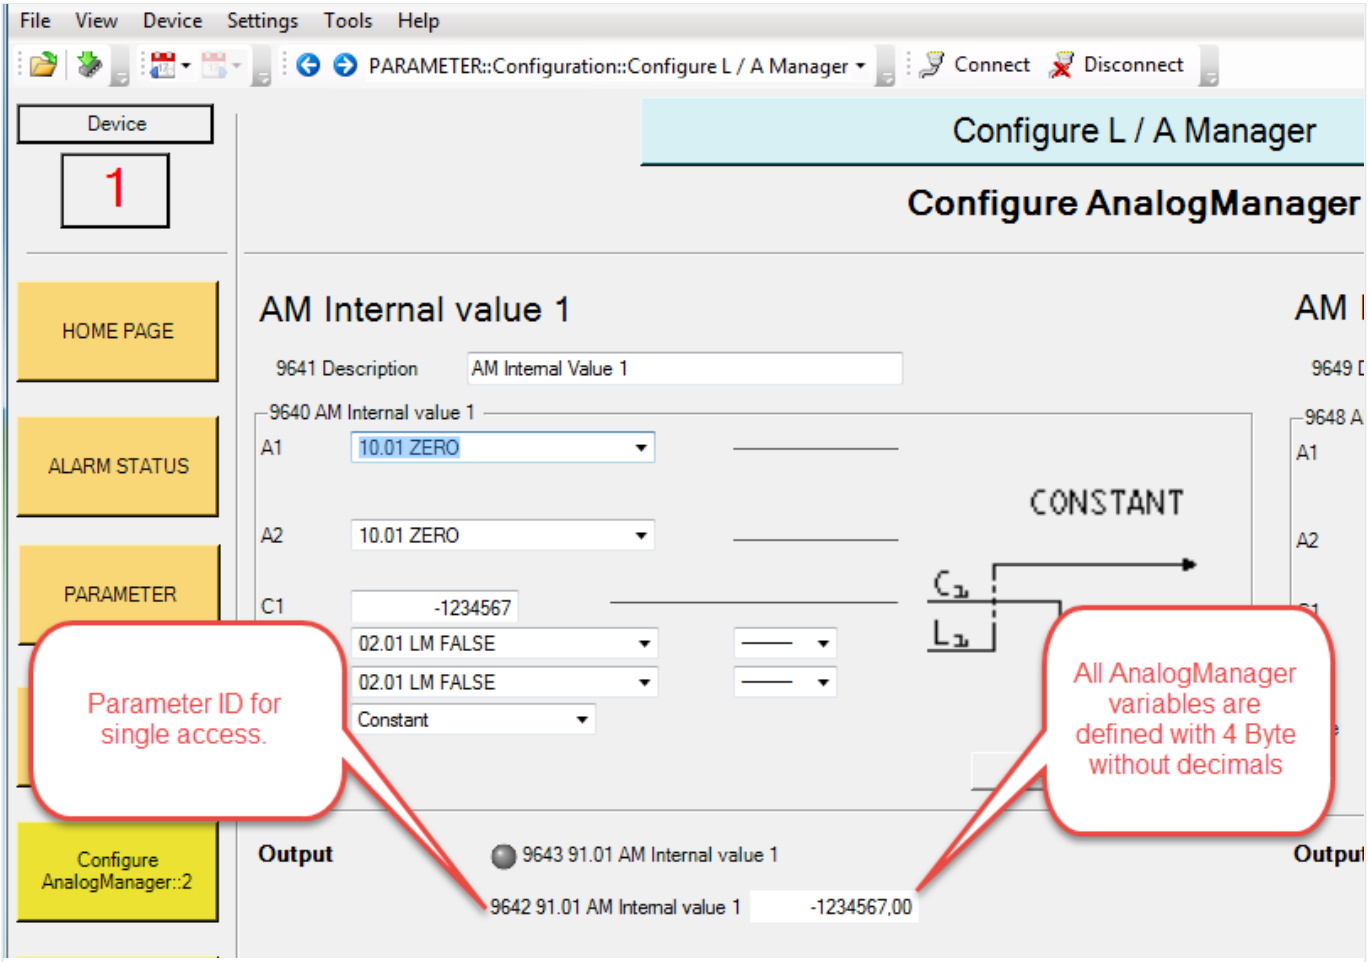


Fig. 338: ToolKit page with Analog manager data

9.4 LogicsManager Reference

9.4.1 LogicsManager Overview

The LogicsManager is used to customize the sequence of events in the control unit such as the start command of the engine or the operation of control unit relay outputs. For example, the start routine may be programmed so that it requires the closing of a discrete input or a preset time of day.

Depending on the application mode of the unit, the number of available relays that may be programmed with the LogicsManager will vary.

Two independent time delays are provided for the configured action to take place and be reset.

Please do not use the output of an equation as input at the same time. Such a configuration could decrease the performance of the interface.

Structure and description of the LogicsManager

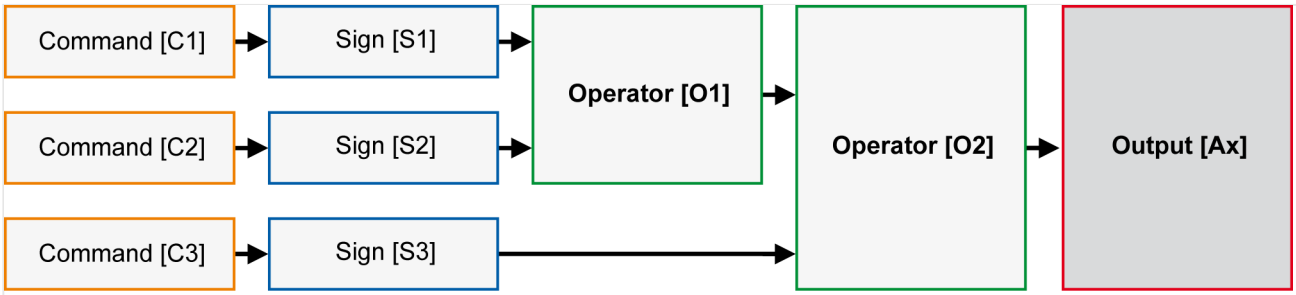


Fig. 339: LogicsManager - function overview

- **Command (variable)**

  A list of over 400 parameters and functions is provided for the command inputs.

  Examples of the parameters that may be configured into these commands are generator undervoltage thresholds 1 and 2, start fail, and cool down.

  These command variables are used to control the output function or relay.

  Refer to “9.4.2 Logical Command Variables” for a complete list of all command variables.

- **Sign**

  The sign field can be used to invert the state of the command or to fix its output to a logical true or false if the command is not needed. Setting the sign to the NOT state changes the output of the command variable from true to false or vice versa.

- **Operator**

  A logical device such as AND or OR.

- **(Logical) output**

  The action or control sequence that occurs when all parameters set into the LogicsManager are met.

  For a complete list of all logical outputs refer to “9.4.4 Logical Outputs”.

[Sx] - Sign {x}		
	Value {[Cx]}	The value [Cx] is passed 1:1.
	NOT Value {[Cx]}	The opposite of the value [Cx] is passed.
	0 [False; always "0"]	The value [Cx] is ignored and this logic path will always be FALSE.
	1 [True; always "1"]	The value [Cx] is ignored and this logic path will always be TRUE.

Table 153: Signs

[Ox] - Operator {x}	
AND	Logical AND

[Ox] - Operator {x}	
NAND	Logical negated AND
OR	Logical OR
NOR	Logical negated OR
XOR	Exclusive OR
NXOR	Exclusive negated OR

Table 154: Operators

For the various display formats of the corresponding logical symbols refer to “9.4.3 Logical Symbols”.

Configuration of the command chain

Using the values specified in the above table, the chain of commands of the LogicsManager (for example: operating the relays, setting the flags, specification of the automatic functions) is configured as follows:

```
[Ax] = ( ( [C1] & [S1] ) & [O1] & ( [C2] & [S2] ) ) & [O2] & ( [C3] & [S3] )
```

Programming example for the LogicsManager

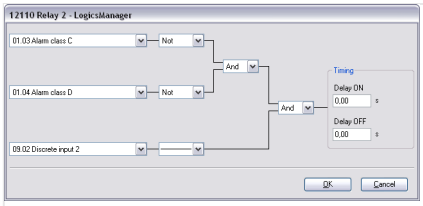


Fig. 340: Programming example (ToolKit)

- Relay [R2] shall energize, whenever "Discrete input [DI 02]" is energized "AND" the control does "NOT" have a fault that is "Alarm class C" "AND" does "NOT" have a fault that is "Alarm class D"

The logical command variables are grouped into different categories.

Part 1: LM variables (1 to 39)

Part 2: LM variables (40 to 79)

Part 3: AM and LM results (80 to 99)

Cascading: Use digital results

This digital **results** of AnalogManagers and LogicsManagers are available as LogicsManager Variables additionally. Like the other LM Variables they can be used as input signal for (further) AnalogManagers or LogicsManagers. The calculation of cascading goes in the sequence from 80 to 99.

Released

9.4.2 Logical Command Variables

9.4.2.1 Group 01: Global alarms

01.01 Alarm class A	TRUE as long as an alarm of alarm class A is active or latched.
01.02 Alarm class B	TRUE as long as an alarm of alarm class B is active or latched
01.03 Alarm class C	TRUE as long as an alarm of alarm class C is active or latched.
01.04 Alarm class D	TRUE as long as an alarm of alarm class D is active or latched.
01.05 Alarm class E	TRUE as long as an alarm of alarm class E is active or latched
01.06 Alarm class F	TRUE as long as an alarm of alarm class F is active or latched.
01.07 All alarm classes	TRUE as long as at least one alarm of the alarm classes A/B/C/D/E/F is active or latched.
01.08 Warning alarm	TRUE as long as at least one alarm of the alarm classes A/B is active or latched.
01.09 Shutdown alarm	TRUE as long as at least one alarm of the alarm classes C/D/E/F is active or latched.
01.10 Centralized alarm	TRUE as long as at least one alarm of the alarm classes B/C/D/E/F is active or latched.
01.11 New alarm triggered	TRUE if any alarm of the Alarm classes B/C/D/E/F has been triggered until it is acknowledged.

9.4.2.2 Group 02: System conditions

02.01 LM FALSE	Fixed value - often used for default setting
02.02 LM TRUE	Fixed value - often used for default setting
02.03 Gen. voltage ok	TRUE as long as the generator voltage is within the operating range.
02.04 Gen. frequency ok	TRUE as long as the generator frequency is within the operating range.

02.05 Gen. volt./freq. ok	TRUE as long as the generator voltage and frequency are within the operating ranges (02.03. and 02.04 are TRUE).
02.06 Busbar 1 voltage ok	TRUE as long as the busbar 1 voltage is within the generator voltage operating range.
02.07 Busbar 1 freq. ok	TRUE as long as the busbar 1 frequency is within the generator frequency operating range.
02.08 Busb1 volt./freq. ok	TRUE as long as the busbar 1 voltage and frequency are within the generator operating ranges (02.06. and 02.07 are TRUE).
02.09 Mains voltage ok	TRUE as long as the mains voltage is within the operating range. This command variable is derived from the easYgen mains measuremend, not from the LS5!
02.10 Mains frequency ok	TRUE as long as the mains frequency is within the operating range. This command variable is derived from the easYgen mains measuremend, not from the LS5!
02.11 Mains volt./freq. ok	TRUE as long as the mains voltage and frequency are within the operating ranges (02.09. and 02.10 are TRUE). This command variable is derived from the easYgen mains measurement, not from the LS5!
02.12 Gen. rotation CCW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location
02.13 Gen. rotation CW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location
02.14 Mains rotation CCW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location. These command variables are derived from the easYgen mains measurement, not from the LS5!
02.15 Mains rotation CW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location. These command variables are derived from the

	easYgen mains measurement, not from the LS5!
02.16 Busb.1 rotation CCW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location.
02.17 Busbar 1 rotation CW	TRUE as long as the respective rotation field is detected in case of a three-phase voltage measurement at the respective measuring location.
02.21 Dead busbar1	TRUE as long as the busbar voltage is below the value configured in parameter 5820 (Dead bus detection max. volt.)
02.29 Sync.Check gen./busb	Synchronize Check Relay: Generator / Busbar (ANSI 25) TRUE, if all of the following ranges matches: • voltage • frequency • phase angle • acceleration range • lead angle
02.32 Sync.Check mns/busb	Synchronize Check Relay: Mains / Busbar (ANSI 25) TRUE, if all of the following ranges matches: • voltage • frequency • phase angle • acceleration range • lead angle
02.38 Gen excitation lim.	TRUE if generator excitation limit has exceeded.
02.39 Mains decoupl.enabl.	TRUE if "3110 Mains decoupling" is not Off and "87.31 LM: Enable Mns dec." is TRUE
02.40 Own GC not recognized	TRUE if own GC is not recognized.
02.41 GC Inhibit DBCL GCB	TRUE if a GC requires to block dead bus closure of the GCB.
02.42 GC Neighbor GC miss.	TRUE if a GC has detected that at least one GC is missing.
02.43 GC any EG is missing	TRUE if a GC have detected that at least one easYgen is missing in at least one group.
02.44 GC Droop request	TRUE if 02.42 Or 02.43 is TRUE. It is recommended to or this flag for the droop.

02.45 Mns.release breaker	TRUE if mains breaker reconnection is released.
02.46 f dep.power change	True if frequency depending up- or derating is active.

9.4.2.3 Group 03: General control

03.05 Horn	True if a new alarm (higher A) is triggered and time (parameter 1756) for horn reset has not exceeded.
03.20 Governor raise	TRUE if the "Three Position Controller Frequency / Active Power" raise pulse is active.
03.21 Governor lower	TRUE if the "Three Position Controller Frequency / Active Power" lower pulse is active.
03.22 AVR raise	TRUE if the "Three Position Controller Output Voltage / Reactive Power" raise pulse is active.
03.23 AVR lower	TRUE if the "Three Position Controller Output Voltage / Reactive Power" lower pulse is active.
03.32 + PID1 controller	TRUE if the "Free PID 1" raise pulse is active
03.33 - PID1 controller	TRUE if the "Free PID 1" lower pulse is active.
03.34 + PID2 controller	TRUE if the "Free PID 2" raise pulse is active.
03.35 - PID2 controller	TRUE if the "Free PID 2" lower pulse is active.
03.36 + PID3 controller	TRUE if the "Free PID 3" raise pulse is active.
03.37 - PID3 controller	TRUE if the "Free PID 3" lower pulse is active.
03.39 Close neutral cont.	TRUE if neutral contactor close command is active.
03.40 Remote Shutdown	TRUE if remote shutdown (ID 503, Bit 9) is active.

9.4.2.4 Group 04: Application conditions

04.01 Operat. mode AUTO	TRUE if operating mode AUTOMATIC is active
04.02 Operat. mode STOP	TRUE if operating mode STOP is active.
04.03 Operat. mode MAN	TRUE if operating mode MANUAL is active.
04.04 Operat. mode TEST	TRUE if operating mode TEST is active.
04.05 Acknowledge	TRUE if "Acknowledge" push button has been pressed or an external acknowledgment via LogicsManager is active. (This condition is TRUE for approx. 40 ms and must be extended utilizing a delay time.)
04.06 GCB closed	TRUE if DI 8 (Reply GCB) is de-energized.
04.07 MCB closed	TRUE if DI 7 (Reply MCB) is de-energized.
04.09 Emergency mode	TRUE if the emergency "Mains fail delay time" has exceed. False if the MCB is closed after the mains settling time

Released

04.11 Mains settling	TRUE if a mains failure detected. FALSE if the mains settling timer has expired.
04.12 Start w/o load	TRUE if start without closing GCB is active.
04.13 Remote request	TRUE if a remote start request is active (Control word 503)
04.14 Remote acknowledge	TRUE if a remote acknowledge is active (Control word 503)
04.16 GGB closed	TRUE if DI 9 (Reply GGB) is de-energized
04.17 GGB released	TRUE if GGB is released.
04.18 Synchron. GCB active	TRUE if the GCB shall be synchronized.
04.19 Opening GCB relay act	TRUE if the GCB open relay is energized.
04.20 Closing GCB active	TRUE if the GCB close relay is energized.
04.21 Syn. MCB is active	TRUE if the MCB shall be synchronized.
04.22 Opening MCB active	TRUE if an MCB open command is active.
04.23 Closing MCB active	TRUE if an MCB close command is active.
04.24 Syn. GGB active	TRUE if the GGB shall be synchronized.
04.25 Opening GGB active	TRUE if a GGB open command is active.
04.26 Closing GGB active	TRUE if a GGB close command is active.
04.27 Critical mode	TRUE if critical mode is enabled
04.28 Generator unloading	TRUE if generator is unloading.
04.29 Mains unloading	TRUE if mains unloading is active.
04.31 Segment no.2 act.	TRUE if the result LM "12929 segment number 2" is true.
04.32 Segment no.3 act.	TRUE if the result LM "12928 segment number 3" is true. (LM 12929 has priority.)
04.33 Segment no.4 act.	TRUE if the result LM "12927 segment number 4" is true. (LMs 12929, 12928 have priority.)
04.34 LDSS Priority 2	TRUE if the result of LM "12926 LDSS Priority 2" is true.
04.35 LDSS Priority 3	TRUE if the result of LM "12925 LDSS Priority 3" is true. (LM 12926 has priority.)
04.36 LDSS Priority 4	TRUE if the result of LM "12924 LDSS Priority 3" is true. (LMs 12926, 12925 have priority.)
04.37 Remote volt. setp. 2	TRUE if "Request Voltage Setpoint 2" is set via interface (control word 504).
04.38 Remote freq. setp. 2	TRUE if "Request Frequency Setpoint 2" is set via interface (control word 504).
04.39 Remote PF setp. 2	TRUE if "Request Power Factor Setpoint 2" is set via interface (control word 504).
04.40 Remote pwr. setp. 2	TRUE if "Request Active Power Setpoint 2" is set via interface (control word 504).
04.41 Transition mode 1	TRUE if the result LM "12931 Transition mode 1" is true.
04.42 Transition mode 2	TRUE if the result LM "12932 Transition mode

	2" is true. (LM 12931 has priority.)
04.43 LD start stop	TRUE if LDSS is active (Main conditions: the result LM "12930 Load dependent start/stop" is true, "Operation mode" is automatic and engine shall run.
04.44 RemoteControl Bit 1	TRUE if remote control bit 1 is activated. (Control word 505)
04.45 RemoteControl Bit 2	TRUE if remote control bit 2 is activated. (Control word 505)
04.46 RemoteControl Bit 3	TRUE if remote control bit 3 is activated. (Control word 505)
04.47 RemoteControl Bit 4	TRUE if remote control bit 4 is activated. (Control word 505)
04.48 RemoteControl Bit 5	TRUE if remote control bit 5 is activated. (Control word 505)
04.49 RemoteControl Bit 6	TRUE if remote control bit 6 is activated. (Control word 505)
04.50 RemoteControl Bit 7	TRUE if remote control bit 7 is activated. (Control word 505)
04.51 RemoteControl Bit 8	TRUE if remote control bit 8 is activated. (Control word 505)
04.52 RemoteControl Bit 9	TRUE if remote control bit 9 is activated. (Control word 505)
04.53 RemoteControl Bit 10	TRUE if remote control bit 10 is activated. (Control word 505)
04.54 RemoteControl Bit 11	TRUE if remote control bit 11 is activated. (Control word 505)
04.55 RemoteControl Bit 12	TRUE if remote control bit 12 is activated. (Control word 505)
04.56 RemoteControl Bit 13	TRUE if remote control bit 13 is activated. (Control word 505)
04.57 RemoteControl Bit 14	TRUE if remote control bit 14 is activated. (Control word 505)
04.58 RemoteControl Bit 15	TRUE if remote control bit 15 is activated. (Control word 505)
04.59 RemoteControl Bit 16	TRUE if remote control bit 16 is activated. (Control word 505)
04.61 Lamp test	TRUE if lamp test is active.
04.62 Act.pwr.LS active	TRUE if load share of active power is active.
04.63 React.pwr.LS active	TRUE if load share of reactive power is active.
04.64 Key activation	TRUE as long as the "Key activation time" is running. Only relevant for versions with front panel (HMI).
04.65 System update active	TRUE if System Update (teach in process) is active.
04.66 Mains failure ended	TRUE if "Mains Settling Time" is triggered OR mains frequency dependent power up-/derating becomes deactive. Reset if power setpoint after resynchronization is reached OR GCB is opened OR mains is ok again for the time configured with parameter 5015.
04.67 Reserve power avail.	TRUE if reserve power is available.
04.68 ATS start request	TRUE if LDSS with predicted load wants to start the engines. This command variable can be assigned to the LM "Start request in AUTO"

Released

04.69 Inhibit ATS	TRUE if "04.68 ATS start request" is true and the rated power on the bus bar is lower than the predicted load. It shall be passed to a relay to inhibit the ATS control to switch load in any direction.
04.70 Opening GCB active	TRUE if the GCB is to be opened. (Independent of the relay NC/NO.)
04.71 GC LDSS start request	TRUE if the GC is requesting a LDSS start.
04.74 PV load ref. 0%	TRUE if the PV inverter shall be limited to 0 % of rated.
04.75 PV load ref. 30%	TRUE if the PV inverter shall be limited to 30 % of rated.
04.76 PV load ref. 60%	TRUE if the PV inverter shall be limited to 60 % of rated.
04.77 PV load ref. 100%	TRUE if the PV inverter shall provide up to 100 % of rated.
04.85 No GCB is closed	No GCB in the system is closed
04.86 Other GCB closed	Minimum one other GCB in the system is closed (without me)

9.4.2.5 Group 05: General alarms

TRUE if the alarm is active or latched.

05.09 Maint. days exceeded	Maintenance days exceeded
05.10 Maint. hrs exceeded	Maintenance hours exceeded
05.16 Derating active	Derating active (event, no alarm)
05.17 Uprating active	Uprating active (event, no alarm)

9.4.2.6 Group 06: Generator related alarms

TRUE if the alarm is active or latched.

06.01 Gen. overfrequency 1	Generator over frequency threshold 1
06.02 Gen. overfrequency 2	Generator over frequency threshold 2
06.03 Gen.underfrequency 1	Generator under frequency threshold 1
06.04 Gen.underfrequency 2	Generator under frequency threshold 2
06.05 Gen. overvoltage 1	Generator over voltage threshold 1
06.06 Gen. overvoltage 2	Generator over voltage threshold 2
06.07 Gen. undervoltage 1	Generator under voltage threshold 1
06.08 Gen. undervoltage 2	Generator under voltage threshold 2
06.09 Gen. overcurrent 1	Generator over current threshold 1
06.10 Gen. overcurrent 2	Generator over current threshold 2
06.11 Gen. overcurrent 3	Generator over current threshold 3
06.12 Gen. rev./red. pwr.1	Reverse / reduced power threshold 1
06.13 Gen. rev./red. pwr.2	Reverse / reduced power threshold 2
06.14 Gen. overload IOP 1	Generator overload IOP threshold 1

06.15 Gen. overload IOP 2	Generator overload IOP threshold 2
06.16 Unbalanced load 1	Generator unbalanced load threshold 1
06.17 Unbalanced load 2	Generator unbalanced load threshold 2
06.18 Gen. volt. asymmetry	Generator voltage asymmetry
06.19 Ground fault 1	Ground fault threshold 1
06.20 Ground fault 2	Ground fault threshold 2
06.21 Gen.ph.rot. mismatch	Generator Phase Rotation mismatch
06.22 Inv. time overcurr.	Inverse time over current
06.23 Gen. overload MOP 1	Generator overload MOP threshold 1
06.24 Gen. overload MOP 2	Generator overload MOP threshold 2
06.25 Gen. PF lagging 1	Generator Power Factor lagging 1
06.26 Gen. PF lagging 2	Generator Power Factor lagging 2
06.27 Gen. PF leading 1	Generator Power Factor leading 1
06.28 Gen. PF leading 2	Generator Power Factor leading 2
06.29 Gen.act.pwr.mismatch	Generator active power mismatch
06.30 Gen. unload.mismatch	Generator unloading mismatch
06.31 Operat. range failed	Operating Range failed
06.32 Gen. AC wiring	Generator AC wiring plausibility
06.33 Busbar 1 AC wiring	Busbar 1 AC wiring plausibility
06.34 Busb.ph.rot.mismatch	Busbar phase rotation mismatch

9.4.2.7 Group 07: Mains related alarms

TRUE if the alarm is active or latched.

07.05 Mns.ph.rot. mismatch	Mains Phase rotation mismatch
07.06 Mains overfreq. 1	Mains over frequency threshold 1
07.07 Mains overfreq. 2	Mains over frequency threshold 2
07.08 Mains underfreq. 1	Mains under frequency threshold 1
07.09 Mains underfreq. 2	Mains under frequency threshold 2
07.10 Mains overvoltage 1	Mains over voltage threshold 1
07.11 Mains overvoltage 2	Mains over voltage threshold 2
07.12 Mains undervoltage 1	Mains under voltage threshold 1
07.13 Mains undervoltage 2	Mains under voltage threshold 2
07.14 Mains phase shift	Mains phase shift
07.15 Mains df/dt	Mains df/dt (Change of frequency)
07.16 Mns.act.pwr.mismatch	Mains active power mismatch
07.17 Mains PF lagging 1	Mains Power Factor inductive 1

Released

07.18 Mains PF lagging 2	Mains Power Factor inductive 2
07.19 Mains PF leading 1	Mains Power Factor capacitive 1
07.20 Mains PF leading 2	Mains Power Factor capacitive 2
07.21 Mains import power 1	Mains import power threshold 1
07.22 Mains import power 2	Mains import power threshold 2
07.23 Mains export power 1	Mains export power threshold 1
07.24 Mains export power 2	Mains export power threshold 2
07.25 Mains decoupling	Mains decoupling
07.27 Mains volt.incr.	Mains slow voltage (10 minutes moving average)
07.28 Time-dep. voltage 1	Time-dependent voltage monitoring 1 (FRT)
07.29 QV monitoring 1	QV Monitoring step 1
07.30 QV monitoring 2	QV Monitoring step 2
07.31 Time-dep. voltage 2	Time-dependent voltage monitoring 2 (FRT)
07.32 Mains AC wiring	Mains AC wiring plausibility
07.33 Time-dep. voltage 3	Time-dependent voltage monitoring 3 (FRT)
07.34 FRT ROCOF enable	This flag is FALSE if any "Time-dependent voltage monitoring" (FRT) is initialized. Otherwise it is TRUE. It can be used to block temporary "Phase shift" and "df/dt" monitoring if FRT is initialized. . (This is no alarm, only a LM.)
07.37 LSx Syst. A rot. CW	LSx System A: phase rotation CW. Usable in dedicated LSx modes: GCB/L-MCB, GCB/GGB/L-MCB, GCB/L-GGBMCB, GCB/L-GGB/L-MCB. The value comes from the mains LSx (device number 33) connected with system A on mains. (Active, not latched)
07.38 LSx Syst. A rot. CCW	LSx System A: phase rotation CCW. Usable in dedicated LSx modes: GCB/L-MCB, GCB/GGB/L-MCB, GCB/L-GGBMCB, GCB/L-GGB/L-MCB. The value comes from the mains LSx (device number 33) connected with system A on mains. (Active, not latched)
07.39 LSx Syst. B rot. CW	LSx System B: phase rotation CW. Usable in dedicated LSx modes: GCB/L-MCB, GCB/GGB/L-MCB, GCB/L-GGBMCB, GCB/L-GGB/L-MCB. The value comes from the mains LSx (device number 33) connected with system A on mains. (Active, not latched)
07.40 LSx Syst. B rot. CCW	LSx System B: phase rotation CCW. Usable in dedicated LSx modes: GCB/L-MCB, GCB/GGB/L-MCB, GCB/L-GGBMCB, GCB/L-GGB/L-MCB. The value comes from the mains LSx (device number 33) connected with system A on mains. (Active, not latched)
07.41 LSx System A ok	LSx System A is ok. System A is in the operating ranges. Usable in all LSx modes and GC mode. The value comes only from the LSx device number 33. (Active, not latched)
07.42 LSx System B ok	LSx System B is ok. System B is in the operating ranges.

	Usable in all LSx modes and GC mode. The value comes only from the LSx device number 33. (Active, not latched)
07.43 LSx Mains voltage	LSx Mains Voltage is ok. This flag is true if the measured mains voltage of the LSx with the smallest device number is higher than 50 % of the rated mains voltage configured in the easYgen. (Active, not latched)

9.4.2.8 Group 08: Syst. related alarms

TRUE if the alarm is active or latched.

08.01 Bat. overvoltage 1	Battery over voltage threshold 1
08.02 Bat. overvoltage 2	Battery over voltage threshold 2
08.03 Bat. undervoltage 1	Battery under voltage threshold 1
08.04 Bat. undervoltage 2	Battery under voltage threshold 2
08.05 GCB fail to close	GCB close not successful
08.06 GCB fail to open	GCB open not successful
08.07 MCB fail to close	MCB close not successful
08.08 MCB fail to open	MCB open not successful
08.16 Parameter alignment	Parameter Alignment LDSS
08.17 Missing members	Number of members mismatched
08.18 CANopen Interface 1	CANopen error interface 1
08.19 CANopen Interface 2	CANopen error interface 2
08.22 Busbar v/f not ok	Busbar voltage or frequency is not ok.
08.27 Missing easYgen	At least one easYgen is missing.
08.28 Missing LSx	At least one LSx (Layer 1) is missing.
08.29 CANopen Interface 3	CANopen error interface 3
08.30 Synchron. time GCB	Timeout Synchronization GCB
08.31 Synchron. time MCB	Timeout Synchronization MCB
08.32 Synchron. time GGB	Timeout Synchronization GGB
08.34 GGB fail to close	GGB close not successful
08.35 GGB fail to open	GGB open not successful
08.41 Ethernet B LS fault	Ethernet B loadshare fault if load sharing with Ethernet B is selected and no device detected. (This is no alarm, only a LM.)
08.42 Ethernet C LS fault	Ethernet C loadshare fault if load sharing with Ethernet C is selected and no device detected. (This is no alarm, only a LM.)
08.43 Syst.update easYgen	System update easYgen There is an easYgen detected in the communication network which is not taught in (A system update is required)
08.44 Syst.update LSx	System update LSx There is a LSx detected in the communication network which is not taught in.

Released

	(A system update is required)
08.45 CPU overload R1 trip	CPU overload R1 trip (alarm class B, not selfackn.) becomes active if CPU overload is longer than 10s.
08.46 GCB failure 50BF	GCB failure 50BF
08.47 MCB failure 50BF	MCB failure 50BF
08.48 MCB plausibility	MCB plausibility
08.50 Syst.upd.r/y twinkle	System update red or yellow LED twinkling Red twinkle: if there is no device recognized according to the last system update. Yellow twinkle: if there is no device detected according to the last system update on one redundant interface. (This is no alarm, only a LM.)
08.51 CAN LS fault	CAN loadshare fault if load sharing with CAN is selected and no device detected. (This is no alarm, only a LM.)
08.52 Ethernet A LS fault	Ethernet A loadshare fault if load sharing with Ethernet A is selected and no device detected. (This is no alarm, only a LM.)
08.53 EthB EthC redundancy	Load share interface redundancy (Ethernet B/C) lost
08.54 Eth. configuration	Ethernet configuration mismatch There is configuration mismatch between Eth A/B OR Eth. A/C OR Eth. B/C
08.62 Ethernet issue	Ethernet issue (E.g. broadcast storm)
08.65 Syst.update Layer 1	System Update Layer 1 There is a device detected in the layer 1 communication network which is not taught in. (A system update is required.)
08.66 Syst.update Layer 3	System Update Layer 3 There is a device detected in the layer 3 communication network which is not taught in. (A system update is required.)
08.70 CAN EthA redundancy	Load share interface redundancy CAN1 / Ethernet A lost
08.71 PV disconnect	PV disconnect level under run
08.72 Modbus dev.1 timeout	Modbus Master communication timeout device 1 (This is no alarm, only a LM.)
08.73 Modbus dev.2 timeout	Modbus Master communication timeout device 2 (This is no alarm, only a LM.)
08.74 Modbus dev.3 timeout	Modbus Master communication timeout device 3 (This is no alarm, only a LM.)
08.75 Modbus dev.4 timeout	Modbus Master communication timeout device 4 (This is no alarm, only a LM.)
08.76 Modbus dev.5 timeout	Modbus Master communication timeout device 5 (This is no alarm, only a LM.)
08.78 easYgen LS timeout	No received loadshare message for a specified timeout of any teached in easYgen
08.79 LSx LS timeout	No received loadshare message for a specified timeout of any teached in LSx
08.80 Redundancy LS timeout	No received loadshare message (of one of the redundant interfaces) for a specified timeout of any teached in device
08.85 DC fail to close	DC breaker close not successful

Released

08.86 DC fail to open	DC breaker open not successful

9.4.2.9 Group 09: Alarms discrete inputs

TRUE if the alarm is active or latched.

09.01 Discrete input 1	
09.02 Discrete input 2	
09.03 Discrete input 3	
09.04 Discrete input 4	
09.05 Discrete input 5	
09.06 Discrete input 6	
09.07 Discrete input 7	
09.08 Discrete input 8	
09.09 Discrete input 9	
09.10 Discrete input 10	
09.11 Discrete input 11	
09.12 Discrete input 12	

9.4.2.10 Group 10: Alarms analog inputs

TRUE if the alarm is active or latched.

10.01 AI 1 wire break	Analog Input 1 out of range
10.02 AI 2 wire break	Analog Input 2 out of range
10.03 AI 3 wire break	Analog Input 3 out of range

9.4.2.11 Group 11: Clock and timer

11.01 Timer 1	TRUE if Timer 1 overrun
11.02 Timer 2	TRUE if Timer 2 overrun
11.03 Active weekday	TRUE if configured weekday is active.
11.04 Active day	TRUE if configured day in month is active.
11.05 Active hour	TRUE if configured hour is active.
11.06 Active minute	TRUE if configured minute is active.
11.07 Active second	TRUE if configured second is active.
11.08 Operating hours 1h	Operating hours 1h over (toggles every running hour)
11.09 Operating hours 10h	Operating hours 10h over (toggles every 10 running hours)
11.10 Operating hours 100h	Operating hours 100h over (toggles every 100 running hours)

Released

11.11 Pulse every 20 ms	Pulse toggling every 20 ms (only for LM system)
11.12 Pulse every 100 ms	Every 100 ms for 20 ms TRUE (only for LM system)
11.13 Pulse every 1000 ms	Every 1000 ms for 20 ms TRUE (only for LM system)

9.4.2.12 Group 12: External discrete inputs

TRUE if the alarm is active or latched.

12.01 External DI 1	External discrete input 1
12.02 External DI 2	External discrete input 2
12.03 External DI 3	External discrete input 3
12.04 External DI 4	External discrete input 4
12.05 External DI 5	External discrete input 5
12.06 External DI 6	External discrete input 6
12.07 External DI 7	External discrete input 7
12.08 External DI 8	External discrete input 8
12.09 External DI 9	External discrete input 9
12.10 External DI 10	External discrete input 10
12.11 External DI 11	External discrete input 11
12.12 External DI 12	External discrete input 12
12.13 External DI 13	External discrete input 13
12.14 External DI 14	External discrete input 14
12.15 External DI 15	External discrete input 15
12.16 External DI 16	External discrete input 16
12.17 External DI 17	External discrete input 17
12.18 External DI 18	External discrete input 18
12.19 External DI 19	External discrete input 19
12.20 External DI 20	External discrete input 20
12.21 External DI 21	External discrete input 21
12.22 External DI 22	External discrete input 22
12.23 External DI 23	External discrete input 23
12.24 External DI 24	External discrete input 24
12.25 External DI 25	External discrete input 25
12.26 External DI 26	External discrete input 26
12.27 External DI 27	External discrete input 27
12.28 External DI 28	External discrete input 28
12.29 External DI 29	External discrete input 29
12.30 External DI 30	External discrete input 30
12.31 External DI 31	External discrete input 31

12.32 External DI 32	External discrete input 32

9.4.2.13 Group 13: Discrete outputs (physical state)

TRUE if relay / transitor is energized

13.01 Discrete output 1	Relay 1 (ready for operation)
13.02 Discrete output 2	Relay 2
13.03 Discrete output 3	Relay 3
13.04 Discrete output 4	Relay 4
13.05 Discrete output 5	Relay 5
13.06 Discrete output 6	Relay 6
13.07 Discrete output 7	Relay 7
13.08 Discrete output 8	Relay 8
13.09 Discrete output 9	Relay 9
13.10 Discrete output 10	Relay 10
13.11 Discrete output 11	Relay 11
13.12 Discrete output 12	Relay 12
13.13 Discrete output 13	Relay 13
13.14 Discrete output 14	Relay 14
13.15 Discrete output 15	Relay 15
13.16 Discrete output 16	Relay 16
13.17 Discrete output 17	Relay 17
13.18 Discrete output 18	Relay 18
13.19 Discrete output 19	Relay 19
13.20 Discrete output 20	Relay 20
13.21 Discrete output 21	Relay 21
13.22 Discrete output 22	Relay 22

9.4.2.14 Group 15: Flexible limits

TRUE if the alarm is active or latched

15.01 Flexible limit 1	
15.02 Flexible limit 2	
15.03 Flexible limit 3	
15.04 Flexible limit 4	
15.05 Flexible limit 5	
15.06 Flexible limit 6	
15.07 Flexible limit 7	

Released

15.08 Flexible limit 8	
15.09 Flexible limit 9	
15.10 Flexible limit 10	
15.11 Flexible limit 11	
15.12 Flexible limit 12	
15.13 Flexible limit 13	
15.14 Flexible limit 14	
15.15 Flexible limit 15	
15.16 Flexible limit 16	
15.17 Flexible limit 17	
15.18 Flexible limit 18	
15.19 Flexible limit 19	
15.20 Flexible limit 20	
15.21 Flexible limit 21	
15.22 Flexible limit 22	
15.23 Flexible limit 23	
15.24 Flexible limit 24	
15.25 Flexible limit 25	
15.26 Flexible limit 26	
15.27 Flexible limit 27	
15.28 Flexible limit 28	
15.29 Flexible limit 29	
15.30 Flexible limit 30	
15.31 Flexible limit 31	
15.32 Flexible limit 32	
15.33 Flexible limit 33	
15.34 Flexible limit 34	
15.35 Flexible limit 35	
15.36 Flexible limit 36	
15.37 Flexible limit 37	
15.38 Flexible limit 38	
15.39 Flexible limit 39	
15.40 Flexible limit 40	

9.4.2.15 Group 16: Free alarms latched

TRUE if the alarm is active or latched.

16.01 Free alarm 1 latched	

16.02 Free alarm 2 latched	
16.03 Free alarm 3 latched	
16.04 Free alarm 4 latched	
16.05 Free alarm 5 latched	
16.06 Free alarm 6 latched	
16.07 Free alarm 7 latched	
16.08 Free alarm 8 latched	
16.09 Free alarm 9 latched	
16.10 Free alarm 10 latched	
16.11 Free alarm 11 latched	
16.12 Free alarm 12 latched	
16.13 Free alarm 13 latched	
16.14 Free alarm 14 latched	
16.15 Free alarm 15 latched	
16.16 Free alarm 16 latched	

9.4.2.16 Group 17: System alarms

TRUE if the alarm is active or latched.

17.01 Act. load shar.mism.	Monitor Active load share mismatch
17.02 React.load shar.mism	Monitor Reactive load share mismatch
17.05 Missing member 4105	Missing member 4105
17.06 Para.alignment 4105	Parameter alignment VDE 4105
17.07 Meas.difference 4105	Meas.difference VDE 4105
17.08 Decoupling GCB<->MCB	Tripping according to parameter 3110.
17.09 N-cont. reply mism.	Neutral interlocking reply mismatch

9.4.2.17 Group 22: GC alarm flags

These alarms were transmitted from the Group Controller (GC) to the easYgen. They are not in the alarm system of the easYgen.

But they could be used in LogicsManagers e.g. to generate Free Alarms.

22.01 GC NW CAN 1 error	TRUE if the GC sees no taught in easYgen at all on CAN 1 is recognized.
22.02 GC NW EthA error	TRUE if the GC sees no taught in easYgen at all on Ethernet A is recognized
22.03 GC NW EthB error	TRUE if no other taught in GC on Ethernet B is recognized.

Released

22.04 GC NW EthC error	TRUE if no other taught in GC on Ethernet C is recognized.
22.05 GC CAN1 EthA redund.	TRUE if there is no easYgen recognized either at CAN1 or Ethernet A . (Only in redundant mode.)
22.06 GC EthB EthC redund.	TRUE if there is no GC recognized either at Ethernet B or Ethernet C. (Only in redundant mode.)
22.07 GC Syst. upd. Layer 1	TRUE if a GC System update Layer 1 (easYgen) is required.
22.08 GC Syst. upd. Layer 3	TRUE if a GC System update Layer 3 (GC) is required.
22.09 GC Missing easYgen	TRUE if a taught in easYgen is missing
22.10 GC Missing GC	TRUE if a taught in GC is missing
22.11 GC Group not ok	TRUE if at least one of these failures becomes active: easYgen is missing OR CAN1 EthA redundancy lost
22.17 GC GGB fail to close	TRUE if the GC has attempted to close the GGB for the configured maximum number of attempts and failed.
22.18 GC GGB fail to open	TRUE if the GC is still receiving the reply "GGB closed" after the GGB open monitoring timer has expired.
22.19 GC Gen.gr.ph.rot.mism	TRUE if the measured phase rotation of the generator group does not match the configured one.
22.20 GC Mains ph.rot.mism.	TRUE if the measured phase rotation of the mains does not match the configured one
22.21 GC Ph. rot. mismatch	TRUE if different phase rotation of mains and the generator group are detected.
22.22 GC GGB feedback check	TRUE if the GGB reply indicates a closed GGB, but the phase angle between the load busbar and the Generator Group is outside the 12° -window.
22.23 GC Gen. AC wiring	TRUE if one or more of the generator voltages are wrongly wired (detected by the plausibility checking of frequencies).
22.24 GC Busbar 1 AC wiring	TRUE if one or more of the bus bar voltages are wrongly wired (detected by the plausibility checking of frequencies).
22.25 GC Mains AC wiring	TRUE if one or more of the mains voltages are wrongly wired (detected by the plausibility checking of frequencies)
22.26 GC MCB fail to close	TRUE if the GC has attempted to close the MCB for the configured maximum number of attempts and failed
22.27 GC MCB fail to open	TRUE if the GC is still receiving the reply "MCB closed" after the MCB open monitoring timer has expired
22.28 GC Wb:Analog input 1	TRUE if there is a wire break according to the AI 1 configuration (in GC) detected.
22.29 GC Wb:Analog input 2	TRUE if there is a wire break according to the AI 2 configuration (in GC) detected.
22.30 GC Paramet. alignment	TRUE if GCs have different LDSS settings
22.33 GC common alarm	TRUE if there is at least one active or latched alarm in the GC.

	(As exception this flag is available in the alarm system of the easYgen with alarm class A.) An acknowledgement of this alarm in the easYgen causes an acknowledgement of all not active alarm in the GC. The common alarm itself can only be acknowledged if there is no active alarm anymore in GC.

9.4.2.18 Group 25: External analog inputs out of range

TRUE, if "out of range" or "wire break" of the external analog input is detected. (Only if this function is supported by the external device.)

25.01 Ext AI 1 wire break	
25.02 Ext AI 2 wire break	
25.03 Ext AI 3 wire break	
25.04 Ext AI 4 wire break	
25.05 Ext AI 5 wire break	
25.06 Ext AI 6 wire break	
25.07 Ext AI 7 wire break	
25.08 Ext AI 8 wire break	
25.09 Ext AI 9 wire break	
25.10 Ext AI 10 wire break	
25.11 Ext AI 11 wire break	
25.12 Ext AI 12 wire break	
25.13 Ext AI 13 wire break	
25.14 Ext AI 14 wire break	
25.15 Ext AI 15 wire break	
25.16 Ext AI 16 wire break	

9.4.2.19 Group 26: Flags from LSx 33-48 (Layer 1)

TRUE if the flag in the corresponding LSx device is set.

26.01 Flag 1 LSx device 33	
26.02 Flag 2 LSx device 33	
26.03 Flag 3 LSx device 33	
26.04 Flag 4 LSx device 33	
26.05 Flag 5 LSx device 33	
26.06 Flag 1 LSx device 34	
26.07 Flag 2 LSx device 34	
26.08 Flag 3 LSx device 34	
26.09 Flag 4 LSx device 34	

Released

26.10 Flag 5 LSx device 34	
26.11 Flag 1 LSx device 35	
26.12 Flag 2 LSx device 35	
26.13 Flag 3 LSx device 35	
26.14 Flag 4 LSx device 35	
26.15 Flag 5 LSx device 35	
26.16 Flag 1 LSx device 36	
26.17 Flag 2 LSx device 36	
26.18 Flag 3 LSx device 36	
26.19 Flag 4 LSx device 36	
26.20 Flag 5 LSx device 36	
26.21 Flag 1 LSx device 37	
26.22 Flag 2 LSx device 37	
26.23 Flag 3 LSx device 37	
26.24 Flag 4 LSx device 37	
26.25 Flag 5 LSx device 37	
26.26 Flag 1 LSx device 38	
26.27 Flag 2 LSx device 38	
26.28 Flag 3 LSx device 38	
26.29 Flag 4 LSx device 38	
26.30 Flag 5 LSx device 38	
26.31 Flag 1 LSx device 39	
26.32 Flag 2 LSx device 39	
26.33 Flag 3 LSx device 39	
26.34 Flag 4 LSx device 39	
26.35 Flag 5 LSx device 39	
26.36 Flag 1 LSx device 40	
26.37 Flag 2 LSx device 40	
26.38 Flag 3 LSx device 40	
26.39 Flag 4 LSx device 40	
26.40 Flag 5 LSx device 40	
26.41 Flag 1 LSx device 41	
26.42 Flag 2 LSx device 41	
26.43 Flag 3 LSx device 41	
26.44 Flag 4 LSx device 41	
26.45 Flag 5 LSx device 41	
26.46 Flag 1 LSx device 42	
26.47 Flag 2 LSx device 42	

26.48 Flag 3 LSx device 42	
26.49 Flag 4 LSx device 42	
26.50 Flag 5 LSx device 42	
26.51 Flag 1 LSx device 43	
26.52 Flag 2 LSx device 43	
26.53 Flag 3 LSx device 43	
26.54 Flag 4 LSx device 43	
26.55 Flag 5 LSx device 43	
26.56 Flag 1 LSx device 44	
26.57 Flag 2 LSx device 44	
26.58 Flag 3 LSx device 44	
26.59 Flag 4 LSx device 44	
26.60 Flag 5 LSx device 44	
26.61 Flag 1 LSx device 45	
26.62 Flag 2 LSx device 45	
26.63 Flag 3 LSx device 45	
26.64 Flag 4 LSx device 45	
26.65 Flag 5 LSx device 45	
26.66 Flag 1 LSx device 46	
26.67 Flag 2 LSx device 46	
26.68 Flag 3 LSx device 46	
26.69 Flag 4 LSx device 46	
26.70 Flag 5 LSx device 46	
26.71 Flag 1 LSx device 47	
26.72 Flag 2 LSx device 47	
26.73 Flag 3 LSx device 47	
26.74 Flag 4 LSx device 47	
26.75 Flag 5 LSx device 47	
26.76 Flag 1 LSx device 48	
26.77 Flag 2 LSx device 48	
26.78 Flag 3 LSx device 48	
26.79 Flag 4 LSx device 48	
26.80 Flag 5 LSx device 48	

9.4.2.20 Group 27: Flags from LSx 49-64 (Layer 1)

TRUE if the flag in the corresponding LSx device is set

27.01 Flag 1 LSx device 49	

Released

27.02 Flag 2 LSx device 49	
27.03 Flag 3 LSx device 49	
27.04 Flag 4 LSx device 49	
27.05 Flag 5 LSx device 49	
27.06 Flag 1 LSx device 50	
27.07 Flag 2 LSx device 50	
27.08 Flag 3 LSx device 50	
27.09 Flag 4 LSx device 50	
27.10 Flag 5 LSx device 50	
27.11 Flag 1 LSx device 51	
27.12 Flag 2 LSx device 51	
27.13 Flag 3 LSx device 51	
27.14 Flag 4 LSx device 51	
27.15 Flag 5 LSx device 51	
27.16 Flag 1 LSx device 52	
27.17 Flag 2 LSx device 52	
27.18 Flag 3 LSx device 52	
27.19 Flag 4 LSx device 52	
27.20 Flag 5 LSx device 52	
27.21 Flag 1 LSx device 53	
27.22 Flag 2 LSx device 53	
27.23 Flag 3 LSx device 53	
27.24 Flag 4 LSx device 53	
27.25 Flag 5 LSx device 53	
27.26 Flag 1 LSx device 54	
27.27 Flag 2 LSx device 54	
27.28 Flag 3 LSx device 54	
27.29 Flag 4 LSx device 54	
27.30 Flag 5 LSx device 54	
27.31 Flag 1 LSx device 55	
27.32 Flag 2 LSx device 55	
27.33 Flag 3 LSx device 55	
27.34 Flag 4 LSx device 55	
27.35 Flag 5 LSx device 55	
27.36 Flag 1 LSx device 56	
27.37 Flag 2 LSx device 56	
27.38 Flag 3 LSx device 56	
27.39 Flag 4 LSx device 56	

27.40 Flag 5 LSx device 56	
27.41 Flag 1 LSx device 57	
27.42 Flag 2 LSx device 57	
27.43 Flag 3 LSx device 57	
27.44 Flag 4 LSx device 57	
27.45 Flag 5 LSx device 57	
27.46 Flag 1 LSx device 58	
27.47 Flag 2 LSx device 58	
27.48 Flag 3 LSx device 58	
27.49 Flag 4 LSx device 58	
27.50 Flag 5 LSx device 58	
27.51 Flag 1 LSx device 59	
27.52 Flag 2 LSx device 59	
27.53 Flag 3 LSx device 59	
27.54 Flag 4 LSx device 59	
27.55 Flag 5 LSx device 59	
27.56 Flag 1 LSx device 60	
27.57 Flag 2 LSx device 60	
27.58 Flag 3 LSx device 60	
27.59 Flag 4 LSx device 60	
27.60 Flag 5 LSx device 60	
27.61 Flag 1 LSx device 61	
27.62 Flag 2 LSx device 61	
27.63 Flag 3 LSx device 61	
27.64 Flag 4 LSx device 61	
27.65 Flag 5 LSx device 61	
27.66 Flag 1 LSx device 62	
27.67 Flag 2 LSx device 62	
27.68 Flag 3 LSx device 62	
27.69 Flag 4 LSx device 62	
27.70 Flag 5 LSx device 62	
27.71 Flag 1 LSx device 63	
27.72 Flag 2 LSx device 63	
27.73 Flag 3 LSx device 63	
27.74 Flag 4 LSx device 63	
27.75 Flag 5 LSx device 63	
27.76 Flag 1 LSx device 64	
27.77 Flag 2 LSx device 64	

27.78 Flag 3 LSx device 64	
27.79 Flag 4 LSx device 64	
27.80 Flag 5 LSx device 64	

9.4.2.21 Group 28: LSx System conditions (Layer 1)

TRUE if at least one easYgen sets the command variable to TRUE (OR operation)

28.01 Command 1 to LSx(OR)	
28.02 Command 2 to LSx(OR)	
28.03 Command 3 to LSx(OR)	
28.04 Command 4 to LSx(OR)	
28.05 Command 5 to LSx(OR)	
28.06 Command 6 to LSx(OR)	

9.4.2.22 Group 32: CAN1 Receive PDO1

Bits of CAN RPDO1 WORD 1 (ID 3371)

32.01 CAN1 RPDO1.1.1	CAN1 RPDO1 Word1 Bit1
32.02 CAN1 RPDO1.1.2	CAN1 RPDO1 Word1 Bit2
32.03 CAN1 RPDO1.1.3	CAN1 RPDO1 Word1 Bit3
32.04 CAN1 RPDO1.1.4	CAN1 RPDO1 Word1 Bit4
32.05 CAN1 RPDO1.1.5	CAN1 RPDO1 Word1 Bit5
32.06 CAN1 RPDO1.1.6	CAN1 RPDO1 Word1 Bit6
32.07 CAN1 RPDO1.1.7	CAN1 RPDO1 Word1 Bit7
32.08 CAN1 RPDO1.1.8	CAN1 RPDO1 Word1 Bit8
32.09 CAN1 RPDO1.1.9	CAN1 RPDO1 Word1 Bit9
32.10 CAN1 RPDO1.1.10	CAN1 RPDO1 Word1 Bit10
32.11 CAN1 RPDO1.1.11	CAN1 RPDO1 Word1 Bit11
32.12 CAN1 RPDO1.1.12	CAN1 RPDO1 Word1 Bit12
32.13 CAN1 RPDO1.1.13	CAN1 RPDO1 Word1 Bit13
32.14 CAN1 RPDO1.1.14	CAN1 RPDO1 Word1 Bit14
32.15 CAN1 RPDO1.1.15	CAN1 RPDO1 Word1 Bit15
32.16 CAN1 RPDO1.1.16	CAN1 RPDO1 Word1 Bit16

9.4.2.23 Group 33: CAN1 Receive PDO2

Bits of CAN RPDO2 WORD 1 (ID 3375)

Released

33.01 CAN1 RPDO2.1.1	CAN1 RPDO2 Word1 Bit1
33.02 CAN1 RPDO2.1.2	CAN1 RPDO2 Word1 Bit2
33.03 CAN1 RPDO2.1.3	CAN1 RPDO2 Word1 Bit3
33.04 CAN1 RPDO2.1.4	CAN1 RPDO2 Word1 Bit4
33.05 CAN1 RPDO2.1.5	CAN1 RPDO2 Word1 Bit5
33.06 CAN1 RPDO2.1.6	CAN1 RPDO2 Word1 Bit6
33.07 CAN1 RPDO2.1.7	CAN1 RPDO2 Word1 Bit7
33.08 CAN1 RPDO2.1.8	CAN1 RPDO2 Word1 Bit8
33.09 CAN1 RPDO2.1.9	CAN1 RPDO2 Word1 Bit9
33.10 CAN1 RPDO2.1.10	CAN1 RPDO2 Word1 Bit10
33.11 CAN1 RPDO2.1.11	CAN1 RPDO2 Word1 Bit11
33.12 CAN1 RPDO2.1.12	CAN1 RPDO2 Word1 Bit12
33.13 CAN1 RPDO2.1.13	CAN1 RPDO2 Word1 Bit13
33.14 CAN1 RPDO2.1.14	CAN1 RPDO2 Word1 Bit14
33.15 CAN1 RPDO2.1.15	CAN1 RPDO2 Word1 Bit15
33.16 CAN1 RPDO2.1.16	CAN1 RPDO2 Word1 Bit16

9.4.2.24 Group 34: CAN1 Receive PDO3

Bits of CAN RPDO3 WORD 1 (ID 3379)

34.01 CAN1 RPDO3.1.1	CAN1 RPDO3 Word1 Bit1
34.02 CAN1 RPDO3.1.2	CAN1 RPDO3 Word1 Bit2
34.03 CAN1 RPDO3.1.3	CAN1 RPDO3 Word1 Bit3
34.04 CAN1 RPDO3.1.4	CAN1 RPDO3 Word1 Bit4
34.05 CAN1 RPDO3.1.5	CAN1 RPDO3 Word1 Bit5
34.06 CAN1 RPDO3.1.6	CAN1 RPDO3 Word1 Bit6
34.07 CAN1 RPDO3.1.7	CAN1 RPDO3 Word1 Bit7
34.08 CAN1 RPDO3.1.8	CAN1 RPDO3 Word1 Bit8
34.09 CAN1 RPDO3.1.9	CAN1 RPDO3 Word1 Bit9
34.10 CAN1 RPDO3.1.10	CAN1 RPDO3 Word1 Bit10
34.11 CAN1 RPDO3.1.11	CAN1 RPDO3 Word1 Bit11
34.12 CAN1 RPDO3.1.12	CAN1 RPDO3 Word1 Bit12
34.13 CAN1 RPDO3.1.13	CAN1 RPDO3 Word1 Bit13
34.14 CAN1 RPDO3.1.14	CAN1 RPDO3 Word1 Bit14
34.15 CAN1 RPDO3.1.15	CAN1 RPDO3 Word1 Bit15
34.16 CAN1 RPDO3.1.16	CAN1 RPDO3 Word1 Bit16

Released

9.4.2.25 Group 35: CAN1 Receive PDO4

Bits of CAN RPDO4 WORD 1 (ID 3383)

35.01 CAN1 RPDO4.1.1	CAN1 RPDO4 Word1 Bit1
35.02 CAN1 RPDO4.1.2	CAN1 RPDO4 Word1 Bit2
35.03 CAN1 RPDO4.1.3	CAN1 RPDO4 Word1 Bit3
35.04 CAN1 RPDO4.1.4	CAN1 RPDO4 Word1 Bit4
35.05 CAN1 RPDO4.1.5	CAN1 RPDO4 Word1 Bit5
35.06 CAN1 RPDO4.1.6	CAN1 RPDO4 Word1 Bit6
35.07 CAN1 RPDO4.1.7	CAN1 RPDO4 Word1 Bit7
35.08 CAN1 RPDO4.1.8	CAN1 RPDO4 Word1 Bit8
35.09 CAN1 RPDO4.1.9	CAN1 RPDO4 Word1 Bit9
35.10 CAN1 RPDO4.1.10	CAN1 RPDO4 Word1 Bit10
35.11 CAN1 RPDO4.1.11	CAN1 RPDO4 Word1 Bit11
35.12 CAN1 RPDO4.1.12	CAN1 RPDO4 Word1 Bit12
35.13 CAN1 RPDO4.1.13	CAN1 RPDO4 Word1 Bit13
35.14 CAN1 RPDO4.1.14	CAN1 RPDO4 Word1 Bit14
35.15 CAN1 RPDO4.1.15	CAN1 RPDO4 Word1 Bit15
35.16 CAN1 RPDO4.1.16	CAN1 RPDO4 Word1 Bit16

9.4.2.26 Group 36: CAN1 Receive PDO5

Bits of CAN RPDO5 WORD 1 (ID 3387)

36.01 CAN1 RPDO5.1.1	CAN1 RPDO5 Word1 Bit1
36.02 CAN1 RPDO5.1.2	CAN1 RPDO5 Word1 Bit2
36.03 CAN1 RPDO5.1.3	CAN1 RPDO5 Word1 Bit3
36.04 CAN1 RPDO5.1.4	CAN1 RPDO5 Word1 Bit4
36.05 CAN1 RPDO5.1.5	CAN1 RPDO5 Word1 Bit5
36.06 CAN1 RPDO5.1.6	CAN1 RPDO5 Word1 Bit6
36.07 CAN1 RPDO5.1.7	CAN1 RPDO5 Word1 Bit7
36.08 CAN1 RPDO5.1.8	CAN1 RPDO5 Word1 Bit8
36.09 CAN1 RPDO5.1.9	CAN1 RPDO5 Word1 Bit9
36.10 CAN1 RPDO5.1.10	CAN1 RPDO5 Word1 Bit10
36.11 CAN1 RPDO5.1.11	CAN1 RPDO5 Word1 Bit11
36.12 CAN1 RPDO5.1.12	CAN1 RPDO5 Word1 Bit12
36.13 CAN1 RPDO5.1.13	CAN1 RPDO5 Word1 Bit13
36.14 CAN1 RPDO5.1.14	CAN1 RPDO5 Word1 Bit14
36.15 CAN1 RPDO5.1.15	CAN1 RPDO5 Word1 Bit15

36.16 CAN1 RPDO5.1.16	CAN1 RPDO5 Word1 Bit16

9.4.2.27 Group 54: Modbus Master flags

TRUE if the flag is active

54.01 Mapped LM flag 1	Modbus Master mapped flag 1
54.02 Mapped LM flag 2	Modbus Master mapped flag 2
54.03 Mapped LM flag 3	Modbus Master mapped flag 3
54.04 Mapped LM flag 4	Modbus Master mapped flag 4
54.05 Mapped LM flag 5	Modbus Master mapped flag 5
54.06 Mapped LM flag 6	Modbus Master mapped flag 6
54.07 Mapped LM flag 7	Modbus Master mapped flag 7
54.08 Mapped LM flag 8	Modbus Master mapped flag 8
54.09 Mapped LM flag 9	Modbus Master mapped flag 9
54.10 Mapped LM flag 10	Modbus Master mapped flag 10
54.11 Mapped LM flag 11	Modbus Master mapped flag 11
54.12 Mapped LM flag 12	Modbus Master mapped flag 12
54.13 Mapped LM flag 13	Modbus Master mapped flag 13
54.14 Mapped LM flag 14	Modbus Master mapped flag 14
54.15 Mapped LM flag 15	Modbus Master mapped flag 15
54.16 Mapped LM flag 16	Modbus Master mapped flag 16
54.17 Mapped LM flag 17	Modbus Master mapped flag 17
54.18 Mapped LM flag 18	Modbus Master mapped flag 18
54.19 Mapped LM flag 19	Modbus Master mapped flag 19
54.20 Mapped LM flag 20	Modbus Master mapped flag 20
54.21 Mapped LM flag 21	Modbus Master mapped flag 21
54.22 Mapped LM flag 22	Modbus Master mapped flag 22
54.23 Mapped LM flag 23	Modbus Master mapped flag 23
54.24 Mapped LM flag 24	Modbus Master mapped flag 24
54.25 Mapped LM flag 25	Modbus Master mapped flag 25
54.26 Mapped LM flag 26	Modbus Master mapped flag 26
54.27 Mapped LM flag 27	Modbus Master mapped flag 27
54.28 Mapped LM flag 28	Modbus Master mapped flag 28
54.29 Mapped LM flag 29	Modbus Master mapped flag 29
54.30 Mapped LM flag 30	Modbus Master mapped flag 30
54.31 Mapped LM flag 31	Modbus Master mapped flag 31
54.32 Mapped LM flag 32	Modbus Master mapped flag 32
54.33 Mapped LM flag 33	Modbus Master mapped flag 33

Released

54.34 Mapped LM flag 34	Modbus Master mapped flag 34
54.35 Mapped LM flag 35	Modbus Master mapped flag 35
54.36 Mapped LM flag 36	Modbus Master mapped flag 36
54.37 Mapped LM flag 37	Modbus Master mapped flag 37
54.38 Mapped LM flag 38	Modbus Master mapped flag 38
54.39 Mapped LM flag 39	Modbus Master mapped flag 39
54.40 Mapped LM flag 40	Modbus Master mapped flag 40
54.41 Mapped LM flag 41	Modbus Master mapped flag 41
54.42 Mapped LM flag 42	Modbus Master mapped flag 42
54.43 Mapped LM flag 43	Modbus Master mapped flag 43
54.44 Mapped LM flag 44	Modbus Master mapped flag 44
54.45 Mapped LM flag 45	Modbus Master mapped flag 45
54.46 Mapped LM flag 46	Modbus Master mapped flag 46
54.47 Mapped LM flag 47	Modbus Master mapped flag 47
54.48 Mapped LM flag 48	Modbus Master mapped flag 48
54.49 Mapped LM flag 49	Modbus Master mapped flag 49
54.50 Mapped LM flag 50	Modbus Master mapped flag 50
54.51 Mapped LM flag 51	Modbus Master mapped flag 51
54.52 Mapped LM flag 52	Modbus Master mapped flag 52
54.53 Mapped LM flag 53	Modbus Master mapped flag 53
54.54 Mapped LM flag 54	Modbus Master mapped flag 54
54.55 Mapped LM flag 55	Modbus Master mapped flag 55
54.56 Mapped LM flag 56	Modbus Master mapped flag 56
54.57 Mapped LM flag 57	Modbus Master mapped flag 57
54.58 Mapped LM flag 58	Modbus Master mapped flag 58
54.59 Mapped LM flag 59	Modbus Master mapped flag 59
54.60 Mapped LM flag 60	Modbus Master mapped flag 60
54.61 Mapped LM flag 61	Modbus Master mapped flag 61
54.62 Mapped LM flag 62	Modbus Master mapped flag 62
54.63 Mapped LM flag 63	Modbus Master mapped flag 63
54.64 Mapped LM flag 64	Modbus Master mapped flag 64
54.65 Mapped LM flag 65	Modbus Master mapped flag 65
54.66 Mapped LM flag 66	Modbus Master mapped flag 66
54.67 Mapped LM flag 67	Modbus Master mapped flag 67
54.68 Mapped LM flag 68	Modbus Master mapped flag 68
54.69 Mapped LM flag 69	Modbus Master mapped flag 69
54.70 Mapped LM flag 70	Modbus Master mapped flag 70
54.71 Mapped LM flag 71	Modbus Master mapped flag 71

54.72 Mapped LM flag 72	Modbus Master mapped flag 72
54.73 Mapped LM flag 73	Modbus Master mapped flag 73
54.74 Mapped LM flag 74	Modbus Master mapped flag 74
54.75 Mapped LM flag 75	Modbus Master mapped flag 75
54.76 Mapped LM flag 76	Modbus Master mapped flag 76
54.77 Mapped LM flag 77	Modbus Master mapped flag 77
54.78 Mapped LM flag 78	Modbus Master mapped flag 78
54.79 Mapped LM flag 79	Modbus Master mapped flag 79
54.80 Mapped LM flag 80	Modbus Master mapped flag 80
54.81 Mapped LM flag 81	Modbus Master mapped flag 81
54.82 Mapped LM flag 82	Modbus Master mapped flag 82
54.83 Mapped LM flag 83	Modbus Master mapped flag 83
54.84 Mapped LM flag 84	Modbus Master mapped flag 84
54.85 Mapped LM flag 85	Modbus Master mapped flag 85
54.86 Mapped LM flag 86	Modbus Master mapped flag 86
54.87 Mapped LM flag 87	Modbus Master mapped flag 87
54.88 Mapped LM flag 88	Modbus Master mapped flag 88
54.89 Mapped LM flag 89	Modbus Master mapped flag 89
54.90 Mapped LM flag 90	Modbus Master mapped flag 90
54.91 Mapped LM flag 91	Modbus Master mapped flag 91
54.92 Mapped LM flag 92	Modbus Master mapped flag 92
54.93 Mapped LM flag 93	Modbus Master mapped flag 93
54.94 Mapped LM flag 94	Modbus Master mapped flag 94
54.95 Mapped LM flag 95	Modbus Master mapped flag 95
54.96 Mapped LM flag 96	Modbus Master mapped flag 96
54.97 Mapped LM flag 97	Modbus Master mapped flag 97
54.98 Mapped LM flag 98	Modbus Master mapped flag 98
54.99 Mapped LM flag 99	Modbus Master mapped flag 99

9.4.2.28 Group 55: Modbus master flags 2 (Inverter and DC Source alarms)

The values of these flags are the row data mapped from the modbus. Latched flags are not offered in this release. But they are indicated in the alarm list.

55.01 Safe Stop	
55.02 Hardware over current	
55.03 Emergency Stop	
55.04 Gate drive fault	
55.05 AC Over current Ph. A	

Released

55.06 AC Over current Ph. B	
55.07 AC Over current Ph. C	
55.08 DC Over voltage	
55.09 DC Under voltage	
55.10 DC pos. over voltage	
55.11 DC pos. under voltage	
55.12 DC neg. over voltage	
55.13 DC neg. under voltage	
55.14 DC imbalance	
55.15 Heat sink over temp.	
55.16 Unintent. islanding	
55.17 AC Current imbalance	
55.18 AC Voltage imbalance	
55.19 AC Over voltage	
55.20 AC Under voltage	
55.21 Over voltage Ph. A	
55.22 Over voltage Ph. B	
55.23 Over voltage Ph. C	
55.24 Over frequency	
55.25 Under frequency	
55.26 Int. communicat. CPUs	
55.27 DC Voltage deviation	
55.28 Reserve	
55.29 Reserve	
55.30 Reserve	
55.31 ADC Error	
55.32 Parameter mismatch	
55.33 Master fault	
55.34 DC Supply overload	
55.35 Ambient over temp.	
55.36 Reserve	
55.37 Reserve	
55.38 Reserve	
55.39 Reserve	
55.40 Reserve	
55.41 Timeout with PLC	
55.42 Internal timeout GTC	
55.43 Reserve	

55.44 Reserve	
55.45 Reserve	
55.46 Reserve	
55.47 Reserve	
55.48 Reserve	
55.49 AC Curr. imbalance GF	
55.50 Slave not detected	
55.51 Fan fault	
55.52 Reserve	
55.53 Reserve	
55.54 Master not detected	
55.55 Reserve	
55.56 Reserve	
55.57 Reserve	
55.58 Reserve	
55.59 Reserve	
55.60 Reserve	
55.61 Reserve	
55.62 Reserve	
55.63 Reserve	
55.64 Reserve	
55.65 Cell under temp.	
55.66 Cell over temp.	
55.67 Cell under volt.	
55.68 Cell over volt.	
55.69 Cell volt. imbalance	
55.70 Cell temp. imbalance	
55.71 R-M communication	
55.72 R-S communication	
55.73 R Charge over curr.	
55.74 R Discharge ov. curr.	
55.75 Rack under voltage	
55.76 Rack over voltage	
55.77 R volt. sensing diff.	
55.78 R current sensor fail	
55.79 Rack fuse fail	
55.80 Permanent under volt.	
55.81 R DC Sw1 (+) sensing	

Released

55.82 R DC Sw2 (-) sensing	
55.83 R DC Sw1 (+) fail	
55.84 R DC Sw2 (-) fail	
55.85 Fan fail	
55.86 Addit. protect. fail	
55.87 C charge op. limit	
55.88 C discharge op. lim.	
55.89 M BMS under temp.	
55.90 M BMS over temp.	
55.91 R DC SW count fail	
55.92 R string imbal. volt.	
55.93 R string imbal. curr.	
55.94 Reserve	
55.95 Reserve	
55.96 Reserve	
55.97 Reserve	
55.98 Reserve	
55.99 Reserve	

9.4.2.29 Group 56: Inverter/DC source conditions

56.01 Grid tie mode active	Grid tie mode is active (inverter controls active and reactive power)
56.02 Grid forming active	Grid forming mode is active (inverter controls frequency and voltage)
56.03 DC supply active	DC supply mode is active (inverter charges the DC source)
56.04 Prepare condition	Trigger command, prepare the inverter.
56.05 Running condition	Trigger command, start the inverter.
56.06 Status ALARM	Internal state of the inverter or there is no Modbus connection to the inverter.
56.07 Status INIT.	Internal state of the inverter
56.08 Status PRE-CHARGE	Internal state of the inverter
56.09 Status SYNCH.	Internal state of the inverter
56.10 Status READY	Internal state of the inverter
56.11 Status STAND-BY	Internal state of the inverter
56.12 Status RUNNING	Internal state of the inverter
56.13 Status CESSATION	Internal state of the inverter
56.14 Closing DC breaker	Command to close the DC breaker.
56.15 Opening DC breaker	Command to open the DC breaker.
56.16 DC breaker closed	Reply DC breaker is closed.
56.17 Discharging allowed	Conditions for discharging the DC source are matched.

56.18 Charging allowed	Conditions for charging the DC source are matched.
56.19 Connect DC source	Connect the DC source.
56.20 Disconnect DC source	Disconnect the DC source.
56.21 Status DC READY	Internal state of the DC Source
56.22 Status DC IDLE	Internal state of the DC Source
56.23 Status DC OFF-LINE	Internal state of the DC Source
56.24 Status MAIN SW ON	Internal state of the DC Source
56.25 Status MAIN SW OFF	Internal state of the DC Source
56.26 Status DC CHARGE	Internal state of the DC Source
56.27 Status DC DISCHARGE	Internal state of the DC Source
56.28 Mon.delay expired	Monitoring delay is expired until the inverter is in operation.
56.29 Inverter shall run	The inverter start condition are fulfilled.
56.30 Rack in service	At least one rack in service (connected)
56.31 Fault rack 1	Rack has at least one fault.
56.32 Fault rack 2	Rack has at least one fault.
56.33 Fault rack 3	Rack has at least one fault
56.34 Fault rack 4	Rack has at least one fault
56.35 Fault rack 5	Rack has at least one fault
56.36 Fault rack 6	Rack has at least one fault
56.37 Fault rack 7	Rack has at least one fault
56.38 Fault rack 8	Rack has at least one fault
56.47 Inverter response	Watchdog response from the inverter
56.48 DC source response	Watchdog response from the DC source

9.4.2.30 Group 80: AnalogManager boolean results 0 (Inverter/DC source)

TRUE if the boolean result of the corresponding AnalogManager equation is true.

80.01 AM DC volt.setp [V]	AM DC voltage setpoint source
80.02 AM Charg. Power [kW]	AM Charging power setpoint source
80.03 AM Discharge P [kW]	AM Discharging power setpoint source

9.4.2.31 Group 81: AnalogManager boolean results 1

TRUE if the boolean result of the corresponding AnalogManager equation is true.

81.03 AM Frequency SP1[Hz]	AM Frequency setpoint 1 source
81.04 AM Frequency SP2[Hz]	AM Frequency setpoint 2 source
81.05 AM ActPower SP1 [kW]	AM Active power setpoint 1 source
81.06 AM ActPower SP2 [kW]	AM Active power setpoint 2 source

Released

81.07 AM ActPower SP3 [kW]	AM Active power setpoint 3 source
81.08 AM ActPower SP4 [kW]	AM Active power setpoint 4 source
81.09 AM Voltage SP1 [V]	AM Voltage setpoint 1 source
81.10 AM Voltage SP2 [V]	AM Voltage setpoint 2 source
81.11 AM PF/var SP1[-/kvar]	AM Reactive power setpoint 1 source
81.12 AM PF/var SP2[-/kvar]	AM Reactive power setpoint 2 source
81.13 AM PID1 setpoint	AM PID 1 control setpoint
81.14 AM PID1 actual value	AM PID 1 control actual value
81.15 AM PID2 setpoint	AM PID 2 control setpoint
81.16 AM PID2 actual value	AM PID 2 control actual value
81.17 AM PID3 setpoint	AM PID 3 control setpoint
81.18 AM PID3 actual value	AM PID 3 control actual value
81.19 AM Ext.mains act.pwr.	AM External measured mains active power
81.20 AM Ext.mains RPower	AM External measured mains reactive power
81.21 AM Derating source	AM Free derating source
81.30 AM Consumer load [kW]	AM Consumer load [kW]
81.31 AM Reference VQ0	AM Reference VQ0
81.32 AM Q/P ref.offset	AM Q/P reference offset

9.4.2.32 Group 82: AnalogManager boolean results 2 (Flexible Limits)

TRUE if the boolean result of the corresponding AnalogManager equation is true.

82.01 AM Flexible limit 1	AM Monitored flexible limit 1
82.02 AM Flexible limit 2	AM Monitored flexible limit 2
82.03 AM Flexible limit 3	AM Monitored flexible limit 3
82.04 AM Flexible limit 4	AM Monitored flexible limit 4
82.05 AM Flexible limit 5	AM Monitored flexible limit 5
82.06 AM Flexible limit 6	AM Monitored flexible limit 6
82.07 AM Flexible limit 7	AM Monitored flexible limit 7
82.08 AM Flexible limit 8	AM Monitored flexible limit 8
82.09 AM Flexible limit 9	AM Monitored flexible limit 9
82.10 AM Flexible limit 10	AM Monitored flexible limit 10
82.11 AM Flexible limit 11	AM Monitored flexible limit 11
82.12 AM Flexible limit 12	AM Monitored flexible limit 12
82.13 AM Flexible limit 13	AM Monitored flexible limit 13
82.14 AM Flexible limit 14	AM Monitored flexible limit 14
82.15 AM Flexible limit 15	AM Monitored flexible limit 15
82.16 AM Flexible limit 16	AM Monitored flexible limit 16

82.17 AM Flexible limit 17	AM Monitored flexible limit 17
82.18 AM Flexible limit 18	AM Monitored flexible limit 18
82.19 AM Flexible limit 19	AM Monitored flexible limit 19
82.20 AM Flexible limit 20	AM Monitored flexible limit 20
82.21 AM Flexible limit 21	AM Monitored flexible limit 21
82.22 AM Flexible limit 22	AM Monitored flexible limit 22
82.23 AM Flexible limit 23	AM Monitored flexible limit 23
82.24 AM Flexible limit 24	AM Monitored flexible limit 24
82.25 AM Flexible limit 25	AM Monitored flexible limit 25
82.26 AM Flexible limit 26	AM Monitored flexible limit 26
82.27 AM Flexible limit 27	AM Monitored flexible limit 27
82.28 AM Flexible limit 28	AM Monitored flexible limit 28
82.29 AM Flexible limit 29	AM Monitored flexible limit 29
82.30 AM Flexible limit 30	AM Monitored flexible limit 30
82.31 AM Flexible limit 31	AM Monitored flexible limit 31
82.32 AM Flexible limit 32	AM Monitored flexible limit 32
82.33 AM Flexible limit 33	AM Monitored flexible limit 33
82.34 AM Flexible limit 34	AM Monitored flexible limit 34
82.35 AM Flexible limit 35	AM Monitored flexible limit 35
82.36 AM Flexible limit 36	AM Monitored flexible limit 36
82.37 AM Flexible limit 37	AM Monitored flexible limit 37
82.38 AM Flexible limit 38	AM Monitored flexible limit 38
82.39 AM Flexible limit 39	AM Monitored flexible limit 39
82.40 AM Flexible limit 40	AM Monitored flexible limit 40

9.4.2.33 Group 85: LM results 0 (Inverter/DC source)

85.01 LM: Inv.ready operat	
85.02 LM: start inverter	
85.03 LM: Grid Tie mode	
85.04 LM: Grid Forming	
85.05 LM: DC Supply	
85.06 LM: Enable DC break	
85.07 LM: Open DC breaker	
85.08 LM: Acknow.Inverter	
85.09 LM: Acknow.DC source	
85.10 LM: Delayed mon.	
85.11 LM: DC breaker open	

Released

85.12 LM: Charge condit. 1	
85.13 LM: Charge condit. 2	
85.14 LM: Charge condit.1/2	
85.15 LM: High.volt. first	If there is no rack connected, rack with the highest voltage will be connected at first else the rack with the lowest voltage.

9.4.2.34 Group 86: LM Results 1

86.09 LM: Start req.in AUTO	LM Start request in automatic mode
86.10 LM: Stop req. in AUTO	LM Stop request in automatic mode
86.11 LM: Inhibit emerg.run	LM Inhibit or interrupt emergency run
86.13 LM: LS interf. EthA	LM Load share interface Ethernet A
86.15 LM: Ext. acknowledge	LM External acknowledge
86.16 LM: Operat. mode AUTO	LM External "Set mode Auto"
86.17 LM: Operat. mode MAN	LM External "Set mode Man"
86.18 LM: Operat. mode STOP	LM External "Set mode Stop"
86.19 LM: Start w/o load	LM Start without load
86.21 LM: Discrete f/P +	LM Frequency / Active Power Setpoint raise
86.22 LM: Discrete f/P -	LM Frequency / Active Power Setpoint low
86.23 LM: Discrete V/PF +	LM Voltage / Reactive Power Setpoint raise
86.24 LM: Discrete V/PF -	LM Voltage / Reactive Power Setpoint low
86.25 LM: Freq. droop act.	LM Frequency Droop active
86.26 LM: Volt. droop act.	LM Voltage Droop active
86.27 LM: Ext. mns.decoupl.	LM Mains failure by external device is requested
86.28 LM: Critical mode	LM Critical mode is requested
86.29 LM: Operat. mode TEST	LM External "Set mode Test"
86.30 LM: Lock keypad 1	LM Lock keypad 1
86.33 LM: 2nd disp.bright.	LM Enable second display brightness
86.34 LM: Enable heater	LM: Enable heater
86.35 LM: Syst. update	LM System update
86.36 LM: LDSS predicted	LM LDSS with predicted load
86.38 LM: Syn. mode CHECK	LM Synchronization mode CHECK
86.39 LM: Syn. mode PERMIS.	LM Synchronization mode PERMISSIVE
86.40 LM: Syn. mode RUN	LM Synchronization mode RUN
86.41 LM: IOP Res.power 2	LM IOP Reserve Power 2
86.42 LM: MOP Res.power 2	LM MOP Reserve Power 2
86.43 LM: RP Full mode	LM Remote Panel "Full Mode"
86.44 LM: RP Annunciator	LM Remote Panel "Annunciator mode"

Released

86.45 LM: RP Off mode	LM Remote Panel "Off mode"
86.51 LM: Open GCB immed.	LM: Open GCB immediately
86.81 LM: Setpoint 2 freq.	LM Setpoint 2 Frequency
86.82 LM: Setp. 2 load	LM Setpoint 2 Active Power
86.83 LM: Setp. 2 voltage	LM Setpoint 2 Voltage
86.84 LM: Setp.2 pwr.factor	LM Setpoint 2 Reactive Power
86.85 LM: Enable MCB	LM Enable MCB
86.86 LM: LDSS enabled	LM activate load dependend start stop
86.87 LM: Segment no.2 act.	LM set group / node number to 2 for load share
86.88 LM: Segment no.3 act.	LM set group / node number to 3 for load share
86.89 LM: Segment no.4 act.	LM set group / node number to 4 for load share
86.90 LM: LDSS Priority 2	LM load dependend start/stop priority 2
86.91 LM: LDSS Priority 3	LM load dependend start/stop priority 3
86.92 LM: LDSS Priority 4	LM load dependend start/stop priority 4
86.93 LM: Transition mode 1	LM Breaker Transition Mode Alternative 1
86.94 LM: Transition mode 2	LM Breaker Transition Mode Alternative 2
86.95 LM: Enable GCB	LM Enable GCB
86.96 LM: Release f-control	LM Release Frequency control
86.97 LM: Release V-control	LM Release Voltage control
86.98 LM: P-control active	LM Active power control active
86.99 LM: Q control active	LM React.power control active

9.4.2.35 Group 87: LM Results 2

TRUE if the result of the corresponding LogicsManager equation is true.

87.17 LM: PID1 ctrl.release	LM Free PID 1 Control Release
87.18 LM: PID2 ctrl.release	LM Free PID 2 Control Release
87.19 LM: PID3 ctrl.release	LM Free PID 3 Control Release
87.23 LM: LSx command 1	LM: System command 1
87.24 LM: LSx command 2	LM: System command 2
87.25 LM: LSx command 3	LM: System command 3
87.26 LM: LSx command 4	LM: System command 4
87.27 LM: LSx command 5	LM: System command 5
87.28 LM: LSx command 6	LM: System command 6
87.29 LM: Bypass min. Pgen.	LM Bypass minimum generator power for closing GGB
87.31 LM: Enable Mns dec.	LM Enable Mains Decoupling
87.36 LM: Open GGB immed.	LM: Open GGB immediately
87.37 LM: Enable GGB	LM: Enable GGB

Released

87.46 LM: GCB open in MAN	LM Open GCB in Manual
87.47 LM: GCB close in MAN	LM Close GCB in Manual
87.48 LM: MCB open in MAN	LM Open MCB in Manual
87.49 LM: MCB close in MAN	LM Close MCB in Manual
87.50 LM: MAN inv. start	LM Start Inverter in Manual
87.51 LM: LED 1	only metal housing
87.52 LM: LED 2	only metal housing
87.53 LM: LED 3	only metal housing
87.54 LM: LED 4	only metal housing
87.55 LM: LED 5	only metal housing
87.56 LM: LED 6	only metal housing
87.57 LM: LED 7	only metal housing
87.58 LM: LED 8	only metal housing
87.59 LM: MAN inv. stop	LM Stop Inverter in Manual
87.60 LM: Free derating	LM Enable freely derating
87.61 LM: GGB open in MAN	LM Open GGB in Manual
87.62 LM: GGB close in MAN	LM Close GGB in Manual
87.67 LM: Setp. 3 load	LM Setpoint 3 Active Power
87.72 LM: Disable mns.mon.	LM Disable mains monitoring
87.73 LM: Mains decoupl.MCB	LM Mains decoupling MCB
87.74 LM: Inh.dead bus GCB	LM Inhibit dead bus GCB
87.75 LM: Setp. 4 load	LM Setpoint 4 Active Power
87.76 LM: Disable load ramp	LM Disable load control ramp
87.77 LM: 2nd load SP ramp	LM Enable 2nd load setpoint ramp
87.78 LM: 2nd frequency PID	LM Enable 2nd Frequency PID
87.79 LM: 3rd load SP ramp	LM Enable 3rd load setpoint ramp
87.80 LM: PV regulation	LM Release PV load regulation
87.88 LM: LED 9	only metal housing

9.4.2.36 Group 88: LM Results 3 (Free alarms)

TRUE if the result of the corresponding LogicsManager equation is true.

88.01 LM: Free alarm 1	LM Free alarm 1 active
88.02 LM: Free alarm 2	LM Free alarm 2 active
88.03 LM: Free alarm 3	LM Free alarm 3 active
88.04 LM: Free alarm 4	LM Free alarm 4 active
88.05 LM: Free alarm 5	LM Free alarm 5 active
88.06 LM: Free alarm 6	LM Free alarm 6 active

88.07 LM: Free alarm 7	LM Free alarm 7 active
88.08 LM: Free alarm 8	LM Free alarm 8 active
88.09 LM: Free alarm 9	LM Free alarm 9 active
88.10 LM: Free alarm 10	LM Free alarm 10 active
88.11 LM: Free alarm 11	LM Free alarm 11 active
88.12 LM: Free alarm 12	LM Free alarm 12 active
88.13 LM: Free alarm 13	LM Free alarm 13 active
88.14 LM: Free alarm 14	LM Free alarm 14 active
88.15 LM: Free alarm 15	LM Free alarm 15 active
88.16 LM: Free alarm 16	LM Free alarm 16 active

9.4.2.37 Group 90: AnalogManager Internal values 0 (Customer screens)

TRUE if the boolean result of the corresponding AnalogManager equation is true.

90.01 AM Cust.screen 1.1	AM Customer screen 1 row 1
90.02 AM Cust.screen 1.2	AM Customer screen 1 row 2
90.03 AM Cust.screen 1.3	AM Customer screen 1 row 3
90.04 AM Cust.screen 1.4	AM Customer screen 1 row 4
90.05 AM Cust.screen 1.5	AM Customer screen 1 row 5
90.06 AM Cust.screen 1.6	AM Customer screen 1 row 6
90.07 AM Cust.screen 1.7	AM Customer screen 1 row 7
90.08 AM Cust.screen 1.8	AM Customer screen 1 row 8
90.09 AM Cust.screen 1.9	AM Customer screen 1 row 9
90.51 AM Cust.screen 2.1	AM Customer screen 2 row 1
90.52 AM Cust.screen 2.2	AM Customer screen 2 row 2
90.53 AM Cust.screen 2.3	AM Customer screen 2 row 3
90.54 AM Cust.screen 2.4	AM Customer screen 2 row 4
90.55 AM Cust.screen 2.5	AM Customer screen 2 row 5
90.56 AM Cust.screen 2.6	AM Customer screen 2 row 6
90.57 AM Cust.screen 2.7	AM Customer screen 2 row 7
90.58 AM Cust.screen 2.8	AM Customer screen 2 row 8
90.59 AM Cust.screen 2.9	AM Customer screen 2 row 9

9.4.2.38 Group 91: AnalogManager Internal values 1

TRUE if the boolean result of the corresponding AnalogManager equation is true.

91.01 AM Internal value 1	
91.02 AM Internal value 2	

Released

91.03 AM Internal value 3	
91.04 AM Internal value 4	
91.05 AM Internal value 5	
91.06 AM Internal value 6	
91.07 AM Internal value 7	
91.08 AM Internal value 8	
91.09 AM Internal value 9	
91.10 AM Internal value 10	
91.11 AM Internal value 11	
91.12 AM Internal value 12	
91.13 AM Internal value 13	
91.14 AM Internal value 14	
91.15 AM Internal value 15	
91.16 AM Internal value 16	

9.4.2.39 Group 93: AnalogManager Analog outputs 1

TRUE if the boolean result of the corresponding AnalogManager equation is true.

93.01 AM Data source AO1	AM Analog output 1 data source
93.02 AM Data source AO2	AM Analog output 2 data source
93.21 AM Data s. ext. AO1	AM External Analog output 1 data source
93.22 AM Data s. ext. AO2	AM External Analog output 2 data source
93.23 AM Data s. ext. AO3	AM External Analog output 3 data source
93.24 AM Data s. ext. AO4	AM External Analog output 4 data source

9.4.2.40 Group 96: LM Internal flags 1

TRUE if the result of the corresponding LogicsManager equation is true.

96.01 LM: Flag 1	LM Internal flag 1
96.02 LM: Flag 2	LM Internal flag 2
96.03 LM: Flag 3	LM Internal flag 3
96.04 LM: Flag 4	LM Internal flag 4
96.05 LM: Flag 5	LM Internal flag 5
96.06 LM: Flag 6	LM Internal flag 6
96.07 LM: Flag 7	LM Internal flag 7
96.08 LM: Flag 8	LM Internal flag 8
96.09 LM: Flag 9	LM Internal flag 9
96.10 LM: Flag 10	LM Internal flag 10

96.11 LM: Flag 11	LM Internal flag 11
96.12 LM: Flag 12	LM Internal flag 12
96.13 LM: Flag 13	LM Internal flag 13
96.14 LM: Flag 14	LM Internal flag 14
96.15 LM: Flag 15	LM Internal flag 15
96.16 LM: Flag 16	LM Internal flag 16
96.17 LM: Flag 17	LM Internal flag 17
96.18 LM: Flag 18	LM Internal flag 18
96.19 LM: Flag 19	LM Internal flag 19
96.20 LM: Flag 20	LM Internal flag 20
96.21 LM: Flag 21	LM Internal flag 21
96.22 LM: Flag 22	LM Internal flag 22
96.23 LM: Flag 23	LM Internal flag 23
96.24 LM: Flag 24	LM Internal flag 24
96.25 LM: Flag 25	LM Internal flag 25
96.26 LM: Flag 26	LM Internal flag 26
96.27 LM: Flag 27	LM Internal flag 27
96.28 LM: Flag 28	LM Internal flag 28
96.29 LM: Flag 29	LM Internal flag 29
96.30 LM: Flag 30	LM Internal flag 30
96.31 LM: Flag 31	LM Internal flag 31
96.32 LM: Flag 32	LM Internal flag 32

9.4.2.41 Group 98: LM External DOs 1

TRUE if the result of the corresponding LogicsManager equation is true.

98.01 LM: External DO 1	
98.02 LM: External DO 2	
98.03 LM: External DO 3	
98.04 LM: External DO 4	
98.05 LM: External DO 5	
98.06 LM: External DO 6	
98.07 LM: External DO 7	
98.08 LM: External DO 8	
98.09 LM: External DO 9	
98.10 LM: External DO 10	
98.11 LM: External DO 11	
98.12 LM: External DO 12	

Released

98.13 LM: External DO 13	
98.14 LM: External DO 14	
98.15 LM: External DO 15	
98.16 LM: External DO 16	
98.17 LM: External DO 17	
98.18 LM: External DO 18	
98.19 LM: External DO 19	
98.20 LM: External DO 20	
98.21 LM: External DO 21	
98.22 LM: External DO 22	
98.23 LM: External DO 23	
98.24 LM: External DO 24	
98.25 LM: External DO 25	
98.26 LM: External DO 26	
98.27 LM: External DO 27	
98.28 LM: External DO 28	
98.29 LM: External DO 29	
98.30 LM: External DO 30	
98.31 LM: External DO 31	
98.32 LM: External DO 32	

9.4.2.42 Group 99: LM Internal DOs 1

TRUE if the result of the corresponding LogicsManager equation is true.

99.01 LM: Ready for op. OFF	LM Relay 1 ready for operation (This flag has negative logic: if the LM flag is true, the relay is not energized.)
99.02 LM: Relay 2	
99.03 LM: Relay 3	
99.04 LM: Relay 4	
99.05 LM: Relay 5	
99.06 LM: Relay 6	
99.07 LM: Relay 7	
99.08 LM: Relay 8	
99.09 LM: Relay 9	
99.10 LM: Relay 10	
99.11 LM: Relay 11	

Released

99.12 LM: Relay 12	

9.4.3 Logical Symbols

The following symbols are used for the graphical programming of the LogicsManager. The symbols are shown according to the IEC standard by default.

- Use parameter 4117 to change display mode to ASA standard.

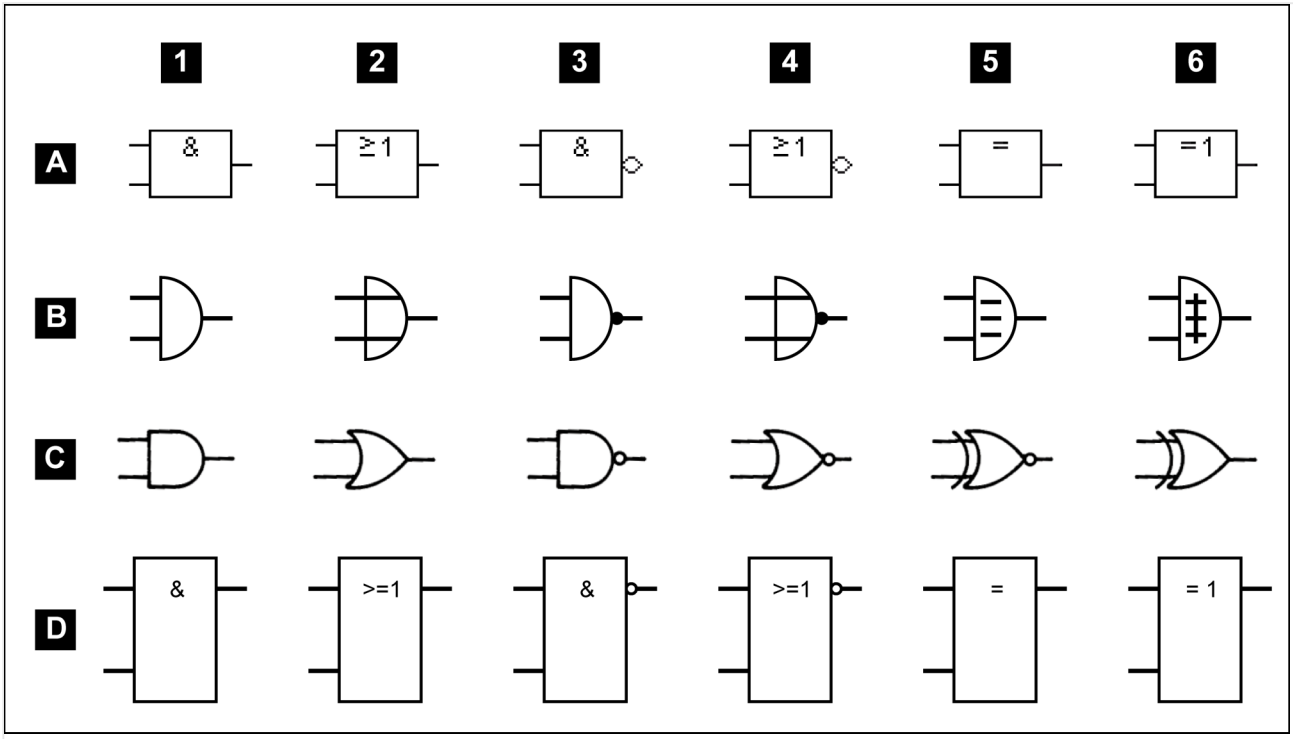


Fig. 341: Logical symbols

Row	... according to standard:
A	IEC (default)
B	DIN 40 700
C	ASA US MIL (configurable)
D	IEC617-12

Meaning of the columns					
1	**2**	**3**	**4**	**5**	**6**
AND	OR	NAND	NOR	NXOR	XOR

Released

AND				OR				NAND				NOR				NXOR				XOR		
x1	x2	y		x1	x2	y		x1	x2	y		x1	x2	y		x1	x2	y		x1	x2	y
0	0	0		0	0	0		0	0	1		0	0	1		0	0	1		0	0	0
0	1	0		0	1	1		0	1	1		0	1	0		0	1	0		0	1	1
1	0	0		1	0	1		1	0	1		1	0	0		1	0	0		1	0	1
1	1	1		1	1	1		1	1	0		1	1	0		1	1	1		1	1	0

Table 155: Truth table

9.4.4 Logical Outputs

The logical outputs or combinations may be grouped into three categories:

- Internal logical flags
- Internal functions
- Relay outputs
- External digital outputs



The numbers of the logical outputs in the third column may again be used as input variable for other outputs in the LogicsManager.

Internal flags

32 internal logical flags may be programmed to activate/deactivate functions. This permits more than 3 commands to be included in a logical function. They may be used like "auxiliary flags".

Name	Function	ID
96.01 LM: Flag 1	Internal flag 1	10700
96.02 LM: Flag 2	Internal flag 2	10701
96.03 LM: Flag 3	Internal flag 3	10702
96.04 LM: Flag 4	Internal flag 4	10703
96.05 LM: Flag 5	Internal flag 5	10704
96.06 LM: Flag 6	Internal flag 6	10705
96.07 LM: Flag 7	Internal flag 7	10706
96.08 LM: Flag 8	Internal flag 8	10707
96.09 LM: Flag 9	Internal flag 9	11609
96.10 LM: Flag 10	Internal flag 10	11610
96.11 LM: Flag 11	Internal flag 11	11611

Name	Function	ID
96.12 LM: Flag 12	Internal flag 12	11612
96.13 LM: Flag 13	Internal flag 13	11613
96.14 LM: Flag 14	Internal flag 14	11614
96.15 LM: Flag 15	Internal flag 15	11615
96.16 LM: Flag 16	Internal flag 16	11616
96.17 LM: Flag 17	Internal flag 17	12232
96.18 LM: Flag 18	Internal flag 18	12234
96.19 LM: Flag 19	Internal flag 19	12236
96.20 LM: Flag 20	Internal flag 20	12238
96.21 LM: Flag 21	Internal flag 21	12242
96.22 LM: Flag 22	Internal flag 22	12244
96.23 LM: Flag 23	Internal flag 23	12246
96.24 LM: Flag 24	Internal flag 24	12248
96.25 LM: Flag 25	Internal flag 25	12252
96.26 LM: Flag 26	Internal flag 26	12254
96.27 LM: Flag 27	Internal flag 27	12256
96.28 LM: Flag 28	Internal flag 28	12258
96.29 LM: Flag 29	Internal flag 29	12262
96.30 LM: Flag 30	Internal flag 30	12264
96.31 LM: Flag 31	Internal flag 31	12266
96.32 LM: Flag 32	Internal flag 32	12268

Internal functions

The following logical functions may be used to activate/deactivate functions.

Name	Function	ID
Unit	Inverter is ready for operation (parameter ⮡ 16927)	16298
85.02 LM: start inverter	Start inverter operation (parameter ⮡ 16929)	16930
85.03 LM: Grid Tie mode	Grid tie mode (parameter ⮡ 16931)	16932
85.04 LM: Grid Forming	Grid forming mode (parameter ⮡ 16933)	16934
85.05 LM: DC Supply	DC supply mode (parameter ⮡ 16935)	16936

Name	Function	ID
85.06 LM: Enable DC break	Enable DC breaker (parameter 16940)	16941
85.07 LM: Open DC breaker	Open DC breaker (parameter 16942)	16943
85.08 LM: Acknow.Inverter	Acknowledge inverter (parameter 16956)	16957
85.09 LM: Acknow.DC source	Acknowledge DC source (parameter 16958)	16959
85.10 LM: Delayed mon.	Release delayed monitoring (parameter 16971)	16972
85.11 LM: DC breaker open	Reply DC breaker is open (parameter 16976)	16977
85.12 LM: Charge condit. 1	Charging conditions 1 (parameter 16982)	16984
85.13 LM: Charge condit. 2	Charging conditions 2 (parameter 16983)	16985
85.15 LM: High.volt. first	Connect rack with the highest voltage at first (parameter 18362)	18363
86.09 LM: Start req.in AUTO	Start in AUTOMATIC operating mode (parameter 12120)	10708
86.10 LM: Stop req. in AUTO	Stop in AUTOMATIC operating mode (parameter 12190)	10709
86.11 LM: Inhibit emerg.run	Blocking or interruption of an emergency power operating in AUTOMATIC operating mode (parameter 12200)	10710
86.13 LM: LS interf. EthA	Enables to switch load share interface between CAN and Ethernet A (parameter 11986)	11987
86.15 LM: Ext. acknowledge	The alarm acknowledgement is performed from an external source (parameter 12490)	10714
86.16 LM: Operat. mode AUTO	Activation of the AUTOMATIC operating mode (parameter 12510)	10715
86.17 LM: Operat. mode MAN	Activation of the MANUAL operating mode (parameter 12520)	10716
86.18 LM: Operat. mode STOP	Activation of the STOP operating mode (parameter 12530)	10717
86.19 LM: Start w/o load	Starting the inverter without closing the GCB (parameter 12540)	10718
86.21 LM: Discrete f/P +	Raise frequency / real power setpoint (parameter 12900)	11600
86.22 LM: Discrete f/P -	Lower frequency / real power setpoint (parameter 12901)	11601

Name	Function	ID
L86.23 LM: Discrete V/PF +	Raise voltage / power factor setpoint (parameter 12902)	11602
86.24 LM: Discrete V/PF -	Lower voltage / power factor setpoint (parameter 12903)	11603
86.25 LM: Freq. droop act.	Activation of the frequency droop (parameter 12904)	11604
86.26 LM: Volt. droop act.	Activation of the voltage droop (parameter 12905)	11605
86.27 LM: Ext. mns.decoupl.	Activation of the mains decoupling function (parameter 12922)	11606
86.28 LM: Critical mode	Activation of critical mode operation (parameter 12220)	11607
86.29 LM: Operat. mode TEST	Activation of the TEST operating mode (parameter 12271)	12272
86.30 LM: Lock keypad 1	Activation of the Lock keypad 1 (parameter 12978)	11924
86.33 LM: 2nd disp.bright.	Enabling of the 2nd display brightness (parameter 7794)	11971
86.34 LM: Enable heater	Enabling of the front foil heater (parameter 7799)	11972
86.35 LM: Syst. update	Trigger system update (parameter 7801)	11974
86.38 LM: Syn. mode CHECK	Activation of CHECK synchronization mode (parameter 12906)	11617
86.39 LM: Syn. mode PERMIS.	Activation of PERMISSIVE synchronization mode (parameter 12907)	11618
86.40 LM: Syn. mode RUN	Activation of RUN synchronization mode (parameter 12908) edge controlled	11619
86.41 LM: IOP Res.power 2	Select IOP Reserve power 2 (parameter 12604)	11975
86.42 LM: MOP Res.power 2	Select MOP Reserve power 2 (parameter 12605)	11976
86.43 LM: RP Full mode	Select remote panel full mode (parameter 7857)	11994
86.44 LM: RP Annunciator	Select remote panel annunciator mode (parameter 7858)	11995
86.45 LM: RP Off mode	Select remote panel off mode (parameter 7859)	11996
86.51 LM: Open GCB immed.	Open the GCB immediately (parameter 12886)	12052

Name	Function	ID
86.81 LM: Setpoint 2 freq.	Activates the frequency setpoint 2 (parameter 12918)	11910
86.82 LM: Setp. 2 load	Activates the load setpoint 2 (parameter 12919)	11911
86.83 LM: Setp. 2 voltage	Activates the voltage setpoint 2 (parameter 12920)	11912
86.84 LM: Setp.2 pwr.factor	Activates the power factor setpoint 2 (parameter 12921)	11913
86.85 LM: Enable MCB	Enables the MCB (parameter 12923)	11914
86.86 LM: LDSS enabled	Activation of load-dependent start/stop (parameter 12930)	11915
86.87 LM: Segment no.2 act.	Assigns the genset to load share segm. #2 (parameter 12929)	11916
86.88 LM: Segment no.3 act.	Assigns the genset to load share segm. #3 (parameter 12928)	11917
86.89 LM: Segment no.4 act.	Assigns the genset to load share segm. #4 (parameter 12927)	11918
86.90 LM: LDSS Priority 2	Sets the LDSS priority to 2 (parameter 12926)	11919
86.91 LM: LDSS Priority 3	Sets the LDSS priority to 3 (parameter 12925)	11920
86.92 LM: LDSS Priority 4	Sets the LDSS priority to 4 (parameter 12924)	11921
86.93 LM: Transition mode 1	Activates breaker transition mode 1 (parameter 12931)	11922
86.94 LM: Transition mode 2	Activates breaker transition mode 2 (parameter 12932)	11923
86.95 LM: Enable GCB	Enables the GCB (parameter 12887)	12051
86.96 LM: Release f-control	Release frequency control (parameter 12909)	11925
86.97 LM: Release V-control	Release voltage control (parameter 12938)	11926
86.98 LM: P-control active	Activates P-control (parameter 12940)	11927
86.99 LM: Q control active	Activates Q-control (parameter 12941)	11928
87.17 LM: PID1 ctrl.release	Release PID1 control (parameter 5580)	11406
87.18 LM: PID2 ctrl.release	Release PID2 control (parameter 5593)	11407

Name	Function	ID
87.19 LM: PID3 ctrl.release	Release PID3 control (parameter 5679)	11408
87.23 LM: LSx command 1	Activates LSx command 1 (parameter 12979)	11412
87.24 LM: LSx command 2	Activates LSx command 2 (parameter 12980)	11413
87.25 LM: LSx command 3	Activates LSx command 3 (parameter 12981)	11414
87.26 LM: LSx command 4	Activates LSx command 4 (parameter 12982)	11415
87.27 LM: LSx command 5	Activates LSx command 5 (parameter 12983)	11416
87.28 LM: LSx command 6	Activates LSx command 6 (parameter 12984)	11417
87.29 LM: Bypass min. Pgen.	Bypass minimum generator power for GGB (parameter 12936)	11418
87.31 LM: Enable Mns dec.	Enables mains decoupling (parameter 12942)	11420
87.36 LM: Open GGB immed.	Open the GGB immediately (parameter 12947)	11425
87.37 LM: Enable GGB	Enable the GGB (parameter 12948)	11426
87.46 LM: GCB open in MAN	Opens GCB in manual (parameter 12976)	11435
87.47 LM: GCB close in MAN	Closes GCB in manual (parameter 12977)	11436
87.48 LM: MCB open in MAN	Opens MCB in manual (parameter 12974)	11437
87.49 LM: MCB close in MAN	Closes MCB in manual (parameter 12975)	11438
87.50 LM: MAN inv. start	Starts the unit in manual (parameter 12970)	11439
87.59 LM: MAN inv. stop	Stops the unit in manual (parameter 12971)	11448
87.60 LM: Free derating	Activates free derating (parameter 15146)	11449
87.61 LM: GGB open in MAN	Opens GGB in manual (parameter 12972)	11450
87.62 LM: GGB close in MAN	Closes GGB in manual (parameter 12973)	11451
87.67 LM: Setp. 3 load	Activates the load setpoint 3 (parameter 12998)	11456

Name	Function	ID
87.72 LM: Disable mns.mon.	Disables mains monitoring (parameter 15159)	11461
87.73 LM: Mains decoupl.MCB	Enables mains decoupling via MCB (parameter 15160)	11462
87.74 LM: Inh.dead bus GCB	Inhibit dead bus closure GCB (parameter 15161)	11463
87.75 LM: Setp. 4 load	Activates the load setpoint 4 (parameter 12269)	11464
87.76 LM: Disable load ramp	Disable load setpoint ramp (parameter 12853)	11465
87.77 LM: 2nd load SP ramp	Select 2nd load control setpoint ramp (parameter 11978)	11979
87.79 LM: 3rd load SP ramp	Select 3rd load control setpoint ramp (parameter 11998)	11999
87.80 LM: PV regulation	Release PV regulation (parameter 8928)	8929
88.01 LM: Free alarm 1	Select source of free alarm 1 (parameter 8120)	11550
88.02 LM: Free alarm 2	Select source of free alarm 2 (parameter 8124)	11551
88.03 LM: Free alarm 3	Select source of free alarm 3 (parameter 8128)	11552
88.04 LM: Free alarm 4	Select source of free alarm 4 (parameter 8132)	11553
88.05 LM: Free alarm 5	Select source of free alarm 5 (parameter 8136)	11554
88.06 LM: Free alarm 6	Select source of free alarm 6 (parameter 8140)	11555
88.07 LM: Free alarm 7	Select source of free alarm 7 (parameter 8144)	11556
88.08 LM: Free alarm 8	Select source of free alarm 8 (parameter 8148)	11557
88.09 LM: Free alarm 9	Select source of free alarm 9 (parameter 8154)	11558
88.10 LM: Free alarm 10	Select source of free alarm 10 (parameter 8158)	11559
88.11 LM: Free alarm 11	Select source of free alarm 11 (parameter 8165)	11560
88.12 LM: Free alarm 12	Select source of free alarm 12 (parameter 8170)	11561
88.13 LM: Free alarm 13	Select source of free alarm 13 (parameter 8174)	11562

Name	Function	ID
88.14 LM: Free alarm 14	Select source of free alarm 14 (parameter 8178)	11563
88.15 LM: Free alarm 15	Select source of free alarm 15 (parameter 8182)	11564
88.16 LM: Free alarm 16	Select source of free alarm 16 (parameter 8186)	11565

Priority hierarchy of the logical outputs

The following table contains the priority relationships between the start conditions of the logical outputs in the LogicsManager:

Prioritized function	Overrides	Reaction
Critical mode	Stop req. in AUTO	A start will still be performed.
	Start req. in AUTO	The behavior of the system depends on the configuration of the related parameters.
Stop req. in AUTO	Start req. in AUTO	No start will be performed.
	Emergency	No start will be performed.
Start w/o load	Start req. in AUTO	The GCB remains open / will be opened.
Emergency	Start w/o load	The GCB will be closed nevertheless.
	Critical mode	The GCB will be closed nevertheless. The alarm class management is still performed like for the critical mode. If emergency power is already enabled and the critical mode will be enabled then, a pause time may be configured for the emergency power operation.
Inhibit emerg.run	Emergency	No start will be performed.
	Emergency during Start w/o load	The generator keeps on running without taking over load.

Relay outputs

All relays may be controlled directly by the LogicsManager depending on the respective application mode.

For more detailed relay description refer to “3.3.9 Relay Outputs (LogicsManager)”

Name LM:	Function	ID
99.01 LM: Ready for op. OFF (Ready for operation OFF)	If this logical output becomes true, the relay output 1 will be **deactivated**	11870
99.02 LM: Relay 2	If this logical output becomes true, the relay output 2 will be activated	11871
99.03 LM: Relay 3	If this logical output becomes true, the relay output 3 will be activated	11872
99.04 LM: Relay 4	If this logical output becomes true, the relay output 4 will be activated	11873

Released

Name LM:	Function	ID
99.05 LM: Relay 5	If this logical output becomes true, the relay output 5 will be activated	11874
99.06 LM: Relay 6	If this logical output becomes true, the relay output 6 will be activated	11875
99.07 LM: Relay 7	If this logical output becomes true, the relay output 7 will be activated	11876
99.08 LM: Relay 8	If this logical output becomes true, the relay output 8 will be activated	11877
99.09 LM: Relay 9	If this logical output becomes true, the relay output 9 will be activated	11878
99.10 LM: Relay 10	If this logical output becomes true, the relay output 10 will be activated	11879
99.11 LM: Relay 11	If this logical output becomes true, the relay output 11 will be activated	11880
99.12 LM: Relay 12	If this logical output becomes true, the relay output 12 will be activated	11881

Name	Function	ID
99.13 LM: Relay 13	If this logical output becomes true, the relay output 2 will be activated	11882
99.14 LM: Relay 14	If this logical output becomes true, the relay output 3 will be activated	11883
99.15 LM: Relay 15	If this logical output becomes true, the relay output 4 will be activated	11884
99.16 LM: Relay 16	If this logical output becomes true, the relay output 5 will be activated	11885
99.17 LM: Relay 17	If this logical output becomes true, the relay output 6 will be activated	11886
99.18 LM: Relay 18	If this logical output becomes true, the relay output 7 will be activated	11887
99.19 LM: Relay 19	If this logical output becomes true, the relay output 8 will be activated	11888
99.20 LM: Relay 20	If this logical output becomes true, the relay output 9 will be activated	11889
99.21 LM: Relay 21	If this logical output becomes true, the relay output 10 will be activated	11890
99.22 LM: Relay 22	If this logical output becomes true, the relay output 11 will be activated	11891

Released

External digital outputs

Name	Function	ID
External DO 1	If this logical output becomes true, the external relay output 1 will be activated	11892
External DO 2	If this logical output becomes true, the external relay output 2 will be activated	11893
External DO 3	If this logical output becomes true, the external relay output 3 will be activated	11894
External DO 4	If this logical output becomes true, the external relay output 4 will be activated	11895
External DO 5	If this logical output becomes true, the external relay output 5 will be activated	11896
External DO 6	If this logical output becomes true, the external relay output 6 will be activated	11897
External DO 7	If this logical output becomes true, the external relay output 7 will be activated	11898
External DO 8	If this logical output becomes true, the external relay output 8 will be activated	11899
External DO 9	If this logical output becomes true, the external relay output 9 will be activated	11900
External DO 10	If this logical output becomes true, the external relay output 10 will be activated	11901
External DO 11	If this logical output becomes true, the external relay output 11 will be activated	11902
External DO 12	If this logical output becomes true, the external relay output 12 will be activated	11903
External DO 13	If this logical output becomes true, the external relay output 13 will be activated	11904
External DO 14	If this logical output becomes true, the external relay output 14 will be activated	11905
External DO 15	If this logical output becomes true, the external relay output 15 will be activated	11906
External DO 16	If this logical output becomes true, the external relay output 16 will be activated	11907
External DO 17	If this logical output becomes true, the external relay output 17 will be activated	11390
External DO 18	If this logical output becomes true, the external relay output 18 will be activated	11391
External DO 19	If this logical output becomes true, the external relay output 19 will be activated	11392
External DO 20	If this logical output becomes true, the external relay output 20 will be activated	11393

Released

Name	Function	ID
External DO 21	If this logical output becomes true, the external relay output 21 will be activated	11394
External DO 22	If this logical output becomes true, the external relay output 22 will be activated	11395
External DO 23	If this logical output becomes true, the external relay output 23 will be activated	11396
External DO 24	If this logical output becomes true, the external relay output 24 will be activated	11397
External DO 25	If this logical output becomes true, the external relay output 25 will be activated	11398
External DO 26	If this logical output becomes true, the external relay output 26 will be activated	11399
External DO 27	If this logical output becomes true, the external relay output 27 will be activated	11400
External DO 28	If this logical output becomes true, the external relay output 28 will be activated	11401
External DO 29	If this logical output becomes true, the external relay output 29 will be activated	11402
External DO 30	If this logical output becomes true, the external relay output 30 will be activated	11403
External DO 31	If this logical output becomes true, the external relay output 31 will be activated	11404
External DO 32	If this logical output becomes true, the external relay output 32 will be activated	11405

9.4.5 Factory Settings

LogicsManager's default definition

ID	Name	Function
5580	PID1 ctrl.release	(False And True) And True
5593	PID2 ctrl.release	(False And True) And True
5679	PID3 ctrl.release	(False And True) And True
7794	Enable 2nd display brightness	(Not 04.64 Key activation And True) And True
7799	Enable front foil heater	(True And True) And True
7801	System update	(False And True) And True
7857	RP Full mode	(02.01 LM FALSE And True) And True
7858	RP Annunciator	(02.01 LM FALSE And True) And True
7859	RP Off mode	(02.01 LM FALSE And True) And True
8120	Free alarm 1	(02.01 LM FALSE And True) And True

Released

ID	Name	Function
8124	Free alarm 2	(02.01 LM FALSE And True) And True
8128	Free alarm 3	(02.01 LM FALSE And True) And True
8132	Free alarm 4	(02.01 LM FALSE And True) And True
8136	Free alarm 5	(02.01 LM FALSE And True) And True
8140	Free alarm 6	(02.01 LM FALSE And True) And True
8144	Free alarm 7	(02.01 LM FALSE And True) And True
8148	Free alarm 8	(02.01 LM FALSE And True) And True
8154	Free alarm 9	(02.01 LM FALSE And True) And True
8158	Free alarm 10	(02.01 LM FALSE And True) And True
8165	Free alarm 11	(02.01 LM FALSE And True) And True
8170	Free alarm 12	(02.01 LM FALSE And True) And True
8174	Free alarm 13	(02.01 LM FALSE And True) And True
8178	Free alarm 14	(02.01 LM FALSE And True) And True
8182	Free alarm 15	(02.01 LM FALSE And True) And True
8186	Free alarm 16	(02.01 LM FALSE And True) And True
8928	Release PV regulation	(False And True) And True
11978	2nd load control setpoint ramp	(False And 02.02 LM TRUE) And 02.02 LM TRUE
11986	LS interface Ethernet A	(02.01 LM FALSE And True) And True
11998	3rd load control setpoint ramp	(02.01 LM FALSE And True) And True
12110	Relay 2	(03.05 Horn And True) And True
12120	Start req. in AUTO	(09.02 Discrete input 2 Or False) Or 04.13 Remote request
12130	Relay 5	(02.01 LM FALSE And True) And True
12140	Relay 6	(False And True) And True
12150	Relay 7	(False And True) And True
12160	Relay 8	(False And True) And True
12170	Relay 9	(False And True) And True
12180	Relay 10	(02.01 LM FALSE And True) And True
12190	Stop req. in AUTO	(False And True) And True
12200	Inhibit emerg.run	(False And True) And True
12220	Critical mode	(False And Not 02.01 LM FALSE) And Not 09.01 Discrete input 1
12230	Flag 1	(02.01 LM FALSE And True) And True
12231	Flag 17	(02.01 LM FALSE And True) And True
12233	Flag 18	(02.01 LM FALSE And True) And True
12235	Flag 19	(02.01 LM FALSE And True) And True
12237	Flag 20	(02.01 LM FALSE And True) And True
12240	Flag 2	(02.01 LM FALSE And True) And True
12241	Flag 21	(02.01 LM FALSE And True) And True
12243	Flag 22	(02.01 LM FALSE And True) And True

Released

ID	Name	Function
12245	Flag 23	(02.01 LM FALSE And True) And True
12247	Flag 24	(02.01 LM FALSE And True) And True
12250	Flag 3	(02.01 LM FALSE And True) And True
12251	Flag 25	(02.01 LM FALSE And True) And True
12253	Flag 26	(02.01 LM FALSE And True) And True
12255	Flag 27	(02.01 LM FALSE And True) And True
12257	Flag 28	(02.01 LM FALSE And True) And True
12260	Flag 4	(02.01 LM FALSE And True) And True
12261	Flag 29	(02.01 LM FALSE And True) And True
12263	Flag 30	(02.01 LM FALSE And True) And True
12265	Flag 31	(02.01 LM FALSE And True) And True
12267	Flag 32	(02.01 LM FALSE And True) And True
12269	Setp. 4 load	(False And True) And True
12270	Flag 5	(02.01 LM FALSE And True) And True
12271	Operat. mode TEST	(False And True) And True
12280	Flag 6	(02.01 LM FALSE And True) And True
12290	Flag 7	(02.01 LM FALSE And True) And True
12300	Flag 8	(02.01 LM FALSE And True) And True
12310	Relay 3	(02.01 LM FALSE And True) And True
12320	Relay 4	(02.01 LM FALSE And True) And True
12330	External DO 1	(False And True) And True
12331	External DO 17	(False And True) And True
12332	External DO 18	(False And True) And True
12333	External DO 19	(False And True) And True
12334	External DO 20	(False And True) And True
12335	External DO 21	(False And True) And True
12336	External DO 22	(False And True) And True
12337	External DO 23	(False And True) And True
12338	External DO 24	(False And True) And True
12339	External DO 25	(False And True) And True
12340	External DO 2	(False And True) And True
12341	External DO 26	(False And True) And True
12342	External DO 27	(False And True) And True
12343	External DO 28	(False And True) And True
12344	External DO 29	(False And True) And True
12345	External DO 30	(False And True) And True
12346	External DO 31	(False And True) And True
12347	External DO 32	(False And True) And True

ID	Name	Function
12350	External DO 3	(False And True) And True
12360	External DO 4	(False And True) And True
12370	External DO 5	(False And True) And True
12380	External DO 6	(False And True) And True
12390	External DO 7	(False And True) And True
12400	External DO 8	(False And True) And True
12410	External DO 9	(False And True) And True
12420	External DO 10	(False And True) And True
12430	External DO 11	(False And True) And True
12440	External DO 12	(False And True) And True
12450	External DO 13	(False And True) And True
12460	External DO 14	(False And True) And True
12470	External DO 15	(False And True) And True
12480	External DO 16	(False And True) And True
12490	Ext. acknowledge	(09.05 Discrete input 5 And True) Or 04.14 Remote acknowledge
12510	Operat. mode AUTO	(False And True) And True
12520	Operat. mode MAN	(False And True) And True
12530	Operat. mode STOP	(False And True) And True
12540	Start w/o load	(False And True) And True
12560	Relay 11	(01.08 Warning alarm And True) And True
12580	Ready for op. OFF	(False And False) And True
12590	Relay 12	(01.09 Shutdown alarm And True) And True
12604	IOP Reserve power 2	(False And True) And True
12605	MOP Reserve power 2	(False And True) And True
12853	Disable load setpoint ramp	(02.01 LM FALSE And True) And True
12886	Open GCB immediately	(False And True) And True
12887	Enable GCB	(True And True) And True
12900	Discrete f/P +	(False And True) And True
12901	Discrete f/P -	(False And True) And True
12902	Discrete V/PF +	(False And True) And True
12903	Discrete V/PF -	(False And True) And True
12904	Freq. droop act.	(08.17 Missing members Or 08.06 GCB fail to open) And True
12905	Volt. droop act.	(08.17 Missing members Or 08.06 GCB fail to open) And True
12906	Syn. mode CHECK	(False And True) And True
12907	Syn. mode PERMIS.	(False And True) And True
12908	Syn. mode RUN	(False And True) And True
12909	Release f-control	(True And True) And True
12910	Flag 9	(02.01 LM FALSE And True) And True

Released

ID	Name	Function
12911	Flag 10	(02.01 LM FALSE And True) And True
12912	Flag 11	(02.01 LM FALSE And True) And True
12913	Flag 12	(02.01 LM FALSE And True) And True
12914	Flag 13	(02.01 LM FALSE And True) And True
12915	Flag 14	(02.01 LM FALSE And True) And True
12916	Flag 15	(02.01 LM FALSE And True) And True
12917	Flag 16	(02.01 LM FALSE And True) And True
12918	Setpoint 2 freq.	(False And True) And True
12919	Setp. 2 load	(False And True) And True
12920	Setp. 2 voltage	(False And True) And True
12921	Setp.2 pwr.factor	(False And True) And True
12922	Ext. mns.decoupl.	(False And True) And True
12923	Enable MCB	(09.06 Discrete input 6 And Not 08.07 MCB fail to close) And Not 07.05 Mns.ph.rot. mismatch
12924	LDSS Priority 4	(02.01 LM FALSE And True) And True
12925	LDSS Priority 3	(02.01 LM FALSE And True) And True
12926	LDSS Priority 2	(02.01 LM FALSE And True) And True
12927	Segment no.4 act.	(02.01 LM FALSE And True) And True
12928	Segment no.3 act.	(02.01 LM FALSE And True) And True
12929	Segment no.2 act.	(02.01 LM FALSE And True) And True
12930	LD start stop	(False And True) And True
12931	Transition mode 1	(False And True) And True
12932	Transition mode 2	(False And True) And True
12936	Bypass min. Pgen.	(False And True) And True
12938	Release V-control	(True And True) And True
12940	P control	(04.07 MCB closed And 04.06 GCB closed) And True
12941	Q control	(04.07 MCB closed And 04.06 GCB closed) And True
12942	Enable mains decoupl.	(02.02 LM TRUE And True) And True
12947	Open GGB immediately	(False And True) And True
12948	Enable GGB	(Not 04.02 Operat. mode STOP And True) And True
12962	LED 1 (only metal housing)	(02.05 Gen. volt./freq. ok And True) And True
12963	LED 2 (only metal housing)	(02.08 Busb1 volt./freq. ok And True) And True
12964	LED 3 (only metal housing)	(04.06 GCB closed AND True) And True
12965	LED 4 (only metal housing)	(56.16 DC breaker closed And True) And True
12966	LED 5 (only metal housing)	(56.01 Grid tie mode active And True) And True
12967	LED 6 (only metal housing)	(56.02 Grid forming active And True) And True
12968	LED 7 (only metal housing)	(55.87 C charge op. limit And True) And True
12969	LED 8 (only metal housing)	(55.88 C discharge op. lim. And True) And True






Released






ID	Name	Function
12970	MAN inverter start	(False And True) And True
12971	MAN inverter stop	(False And True) And True
12972	GGB open in MAN	(False And True) And True
12973	GGB close in MAN	(False And True) And True
12974	MCB open in MAN	(False And True) And True
12975	MCB close in MAN	(False And True) And True
12976	GCB open in MAN	(False And True) And True
12977	GCB close in MAN	(False And True) And True
12978	Lock keypad 1	(False And True) And True
12979	LSx command 1	(02.01 LM FALSE And True) And True
12980	LSx command 2	(02.01 LM FALSE And True) And True
12981	LSx command 3	(02.01 LM FALSE And True) And True
12982	LSx command 4	(02.01 LM FALSE And True) And True
12983	LSx command 5	(02.01 LM FALSE And True) And True
12984	LSx command 6	(02.01 LM FALSE And True) And True
12990	2nd Frequency PID	(False And True) And True
12998	Setp. 3 load	(False And True) And True
13451	LED 9 (only metal housing)	(56.26 Status DC CHARGE And True) And True
15026	LDSS with predicted load	(False And True) And True
15146	Free derating	(02.01 LM FALSE And True) And True
15159	Disable mns.mon.	(False And True) And True
15160	Mains decoupl.MCB	(False And True) And True
15161	Inh.dead bus GCB	(False And True) And True
16907	LM GCB is closed	(Not 09.08 Discrete input 8 And 56.12 Status RUNNING) And True
16927	Inv. ready for operation	(Not 56.06 Status ALARM And True) And True
16929	Inv. start operation	(56.10 Status READY And True) And True
16931	Grid Tie mode	(04.07 MCB closed And 04.16 GGB closed) Or 04.86 Other GCB closed
16933	Grid Forming mode	(Not 85.03 LM: Grid Tie mode And True) And True
16935	DC Supply mode	(02.01 LM FALSE And True) And True
16940	Enable DC breaker	(02.01 LM FALSE And Not 08.85 DC fail to close) And True
16942	Open DC breaker	(02.01 LM FALSE And True) And True
16956	Acknowledge Inverter	(02.01 LM FALSE And True) And True
16958	Acknowledge DC source	(02.01 LM FALSE And True) And True
16971	Release delayed mon.	(04.06 GCB closed And 56.05 Running condition) And True
16976	DC breaker is open	(02.01 LM FALSE And True) And True
16982	Charging conditions 1	(02.01 LM FALSE And True) And True
16983	Charging conditions 2	(02.01 LM FALSE And True) And True





ID	Name	Function
18362	Rack with highest volt. first	(02.01 LM FALSE And True) And True

Table 156: Factory settings by ID: LogicsManager

Relay outputs

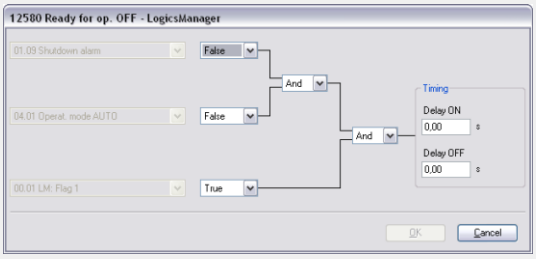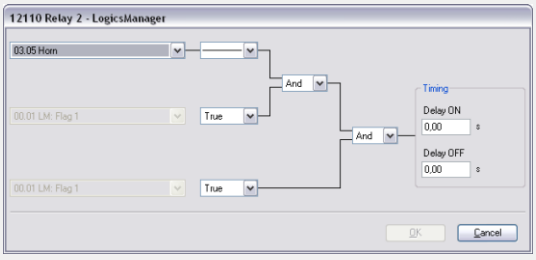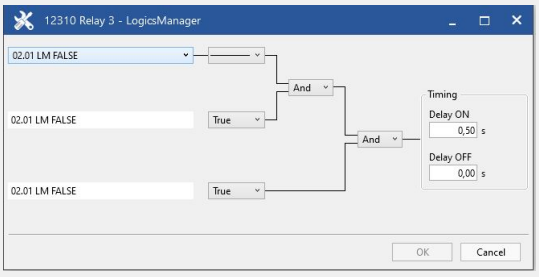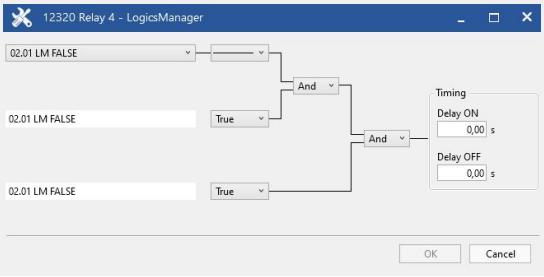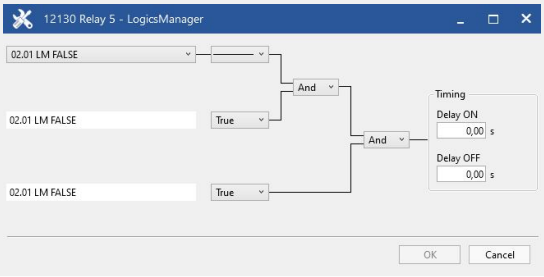Simple (function)	Extended (configuration)	Result
[99.01] Relay 1 [R01] - Ready for operation OFF Relay will be de-energized if unit is not ready for operation or the logics manager output is TRUE. Deactivated by default Note: This function is pre-configured and may be activated by passing through the command variables [01.09] Shutdown alarm or [04.01] Operating mode AUTO or [00.01] LM: Flag 1 ('—' instead of '0'). The unit is only ready for operation after an start-up delay following the power supply connection.		FALSE
[99.02] Relay 2 [R02] - Centralized alarm (horn) / freely configurable Relay energizes if the internal condition "Horn" is TRUE		dependent on Logics Command Variable [03.05]
[99.03] Relay 3 [R03] - freely configurable		FALSE
[99.04] Relay 4 [R04] - freely configurable		FALSE
[99.05] Relay 5 [R05] - freely configurable		FALSE

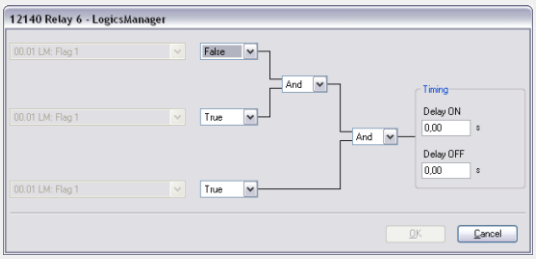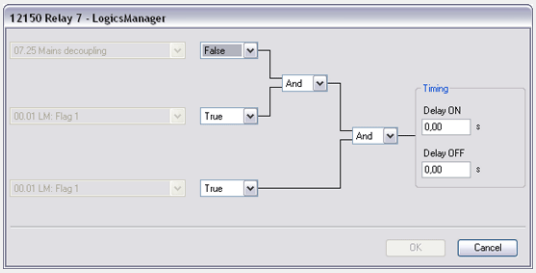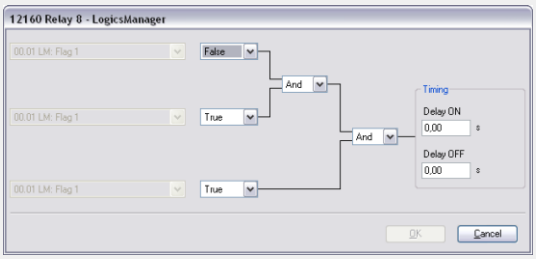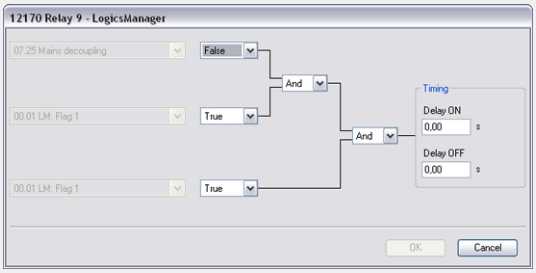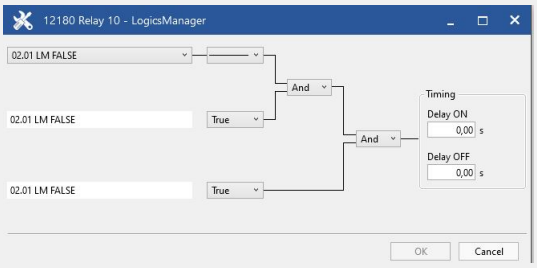Simple (function)	Extended (configuration)	Result
[99.06] Relay 6 [R06] - Free / Command: close GCB		FALSE
In application mode A01 and A02 = freely configurable relay (unassigned) In application mode A03 to A13 "Command: close GCB" Deactivated by default		
[99.07] Relay 7 [R07] - Mains decoupling / freely configurable / Command: open GCB		dependent on application mode and Logics Command Variable [07.25]
In application mode A01 pre-configured to mains decoupling. Relay energizes if the internal condition "Mains decoupling" is TRUE to decouple the genset from the mains. In application mode A02 to A13 "Command: open GCB" Deactivated by default		
[99.08] Relay 8 [R08] - Free / Command: close MCB		FALSE
In application mode A01, A02, A03, A05, A07, A08, A09, A10 and A11 to A13 freely configurable relay (unassigned) In application mode A04 and A06 "Command: close MCB" Deactivated by default		
[99.09] Relay 9 [R09] - Mains decoupling / freely configurable / Command: open MCB		dependent on application mode and Logics Command Variable [07.25]
In application mode A01, A02, A03, A05, A07, A08, A09, A10 and A11 to A13 pre-configured to mains decoupling. Relay energizes if the internal condition "Mains decoupling" is TRUE to decouple the genset from the mains. In application mode A04 and A06 "Command: open MCB" Deactivated by default		
[99.10] Relay 10 [R10] - freely configurable		FALSE
In application mode A05, A06 and A09 fixed to "Command: close GGB" In application mode A05, A06 and A09 "Command: open GGB"		

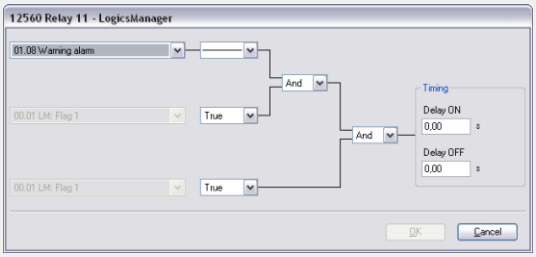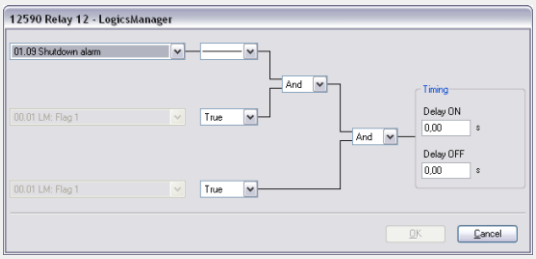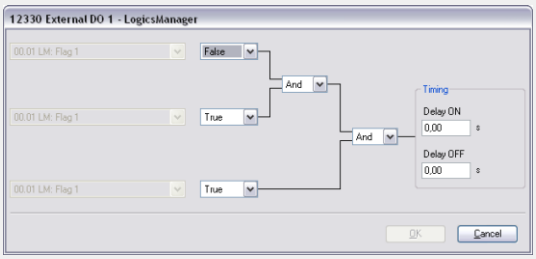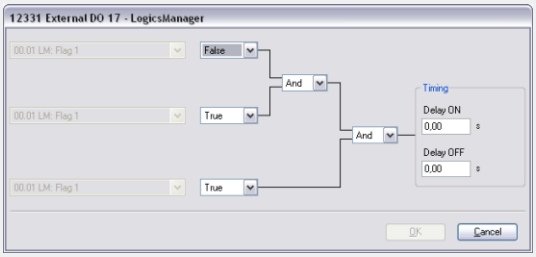Simple (function)	Extended (configuration)	Result
[99.11] Relay 11 [R11] - Warning alarm class active / freely configurable In application mode A01, A02, A03, A04, A07, A08, A10 and A11 to A13 pre-configured to alarm class A or B. Relay energizes if one of the alarm classes A or B is active In application mode A05, A06 and A09 "Command: open GGB"		dependent on Logics Command Variable [01.08]
[99.12] Relay 12 [R12] - Shutdown alarm class active / freely configurable Relay energizes if one of the alarm classes C, D, E or F is active		dependent on Logics Command Variable [01.09]
[98.xx] External discrete output {y} - {xx} = 01 to 32 ; {y} = 1 to 32) Control of the external relay {y}, if this is connected Prepared for: Deactivated by default		FALSE
[98.xx] External discrete output {y} - Free (external expansion card, if connected; {xx} = 01 to 16 ; {y} = 17 to 32). Control of the external relay {y}, if this is connected Prepared for: Deactivated by default		FALSE

Discrete inputs

Number	LM	ID	Alarm class		Pre-assigned to
DI 01	09.01	10900	F	freely configurable	EMERGENCY STOP
DI 02	09.02	10901	CONTROL	freely configurable	LogicsManager Start in AUTO
DI 03	09.03	10902	CONTROL	freely configurable	DC breaker is closed
DI 04	09.04	10903	CONTROL	freely configurable	unassigned
DI 05	09.05	10904	CONTROL	freely configurable	LogicsManager External acknowledgment
DI 06	09.06	10905	CONTROL	freely configurable	LogicsManager Enable MCB
DI 07	09.07	10906		fixed	Reply MCB
DI 08	09.08	10907		fixed	Reply GCB

Released

Number	LM	ID	Alarm class		Pre-assigned to
DI 09	09.09	10908	B	freely configurable	unassigned
DI 10	09.10	10909	B	freely configurable	unassigned
DI 11	09.11	10910	B	freely configurable	unassigned
DI 12	09.12	10911	B	freely configurable	unassigned

9.5 AnalogManager Reference

9.5.1 AnalogManager Overview

To enhance flexibility of programming the functions of the easY-I-3000XT series, an AnalogManager is used.

All analog values may be used as data sources for the analog outputs (refer to “4.4.2.5 Analog Outputs”), the flexible limit monitoring (refer to “4.5.5 Flexible Limits”), and the controller setpoints (refer to “4.4.4 Configure Controller”).



- Every data source is indicated by a group number and a sub-number.
- Some values are percentage values and relate to reference values.

AnalogManager Variables

Groups 1 to 79 make available even more than the already arranged analog variables out of the easY-I system.

AnalogManager Results



Cascading: Use analog results

This analog **results** of an AnalogManager is available as AnalogManager input additionally. Like the other AnalogManager inputs they can be used as input signal for (further) AnalogManagers.

The groups 80.xx to 89.xx contain analog outputs (results) of function-related AnalogManagers.

The description/name of these analog variables starts always with 'AM ...'.

'Internal'/Fixed AnalogManager Values

The groups 90.xx to 99.xx contain analog outputs of fixed AnalogManagers.

The description/name of these analog variables starts always with 'AM ...'.

Released

9.5.2 Data Sources AM

9.5.2.1 Group 01: Generator values

The percentage value is related on the following values:

• generator rated voltage

• system rated frequency

• generator rated current

• power factor:

Lagging: value [%] = (2 - PF) * 50%

e.g. PF = 0.8: value [%] = (2 - 0.8) * 50% = 60%

Leading: value [%] = PF * (-1) * 50%

e.g. PF = - 0.8: value [%] = (- 0.8) * (-1) * 50% = 40%

• generator rated active power

• generator rated reactive power

• generator rated active and generator rated reactive power

HMI Text	Note
01.01 Gen.volt.L-N [%]	Generator voltage wye average
01.02 Gen.volt.L1-N [%]	Generator voltage L1-N
01.03 Gen.volt.L2-N [%]	Generator voltage L2-N
01.04 Gen.volt.L3-N [%]	Generator voltage L3-N
01.05 Gen.volt.L-L [%]	Generator voltage delta average
01.06 Gen.volt.L1-L2 [%]	Generator voltage L1-L2
01.07 Gen.volt.L2-L3 [%]	Generator voltage L2-L3
01.08 Gen.volt.L3-L1 [%]	Generator voltage L3-L1
01.09 Gen.frequency [%]	Generator frequency
01.10 Gen.freq.L1-L2 [%]	Generator frequency L1-L2
01.11 Gen.freq.L2-L3 [%]	Generator frequency L2-L3
01.12 Gen.freq.L3-L1 [%]	Generator frequency L3-L1
01.13 Gen.current [%]	Generator average current
01.14 Gen.current L1 [%]	Generator current L1
01.15 Gen.current L2 [%]	Generator current L2
01.16 Gen.current L3 [%]	Generator current L3
01.17 Gen.curr.max. L1 [%]	Dragged generator current L1
01.18 Gen.curr.max. L2 [%]	Dragged generator current L2
01.19 Gen.curr.max. L3 [%]	Dragged generator current L3
01.20 Gen. PF [%]	Generator power factor

Released

HMI Text	Note
01.21 Gen. PF L1 [%]	Generator power factor L1
01.22 Gen. PF L2 [%]	Generator power factor L2
01.23 Gen. PF L3 [%]	Generator power factor L3
01.24 Gen.act.power [%]	Total generator active power
01.25 Gen.act.pwr. L1 [%]	Generator active power L1-N
01.26 Gen.act.pwr. L2 [%]	Generator active power L2-N
01.27 Gen.act.pwr. L3 [%]	Generator active power L3-N
01.28 Gen.react.pwr. [%]	Total generator reactive power
01.29 Gen.react.pwr.L1 [%]	Generator reactive power L1-N
01.30 Gen.react.pwr.L2 [%]	Generator reactive power L2-N
01.31 Gen.react.pwr.L3 [%]	Generator reactive power L3-N
01.32 Gen.app.power [%]	Total generator apparent power
01.33 Gen.app.pwr. L1 [%]	Generator apparent power L1-N
01.34 Gen.app.pwr. L2 [%]	Generator apparent power L2-N
01.35 Gen.app.pwr. L3 [%]	Generator apparent power L3-N
01.51 Gen.volt.L-N [V]	Generator voltage wye average
01.52 Gen.volt.L1-N [V]	Generator voltage L1-N
01.53 Gen.volt.L2-N [V]	Generator voltage L2-N
01.54 Gen.volt.L3-N [V]	Generator voltage L3-N
01.55 Gen.volt.L-L [V]	Generator voltage delta average
01.56 Gen.volt.L1-L2 [V]	Generator voltage L1-L2
01.57 Gen.volt.L2-L3 [V]	Generator voltage L2-L3
01.58 Gen.volt.L3-L1 [V]	Generator voltage L3-L1
01.59 Gen.frequency [Hz]	Generator frequency
01.60 Gen.freq.L1-L2 [Hz]	Generator frequency L1-L2
01.61 Gen.freq.L2-L3 [Hz]	Generator frequency L2-L3
01.62 Gen.freq.L3-L1 [Hz]	Generator frequency L3-L1
01.63 Gen.current [A]	Generator average current
01.64 Gen.current L1 [A]	Generator current L1
01.65 Gen.current L2 [A]	Generator current L2
01.66 Gen.current L3 [A]	Generator current L3
01.67 Gen.curr.max. L1 [A]	Dragged generator current L1
01.68 Gen.curr.max. L2 [A]	Dragged generator current L2
01.69 Gen.curr.max. L3 [A]	Dragged generator current L3
01.70 Gen. PF	Generator power factor
01.71 Gen. PF L1	Generator power factor L1
01.72 Gen. PF L2	Generator power factor L2
01.73 Gen. PF L3	Generator power factor L3

Released

HMI Text	Note
01.74 Gen.act.power [W]	Total Generator active power
01.75 Gen.act.pwr. L1 [W]	Generator active power L1-N
01.76 Gen.act.pwr. L2 [W]	Generator active power L2-N
01.77 Gen.act.pwr. L3 [W]	Generator active power L3-N
01.78 Gen.react.pwr. [var]	Total generator reactive power
01.79 Gen.react.pwr.L1[var]	Generator reactive power L1-N
01.80 Gen.react.pwr.L2[var]	Generator reactive power L2-N
01.81 Gen.react.pwr.L3[var]	Generator reactive power L3-N
01.82 Gen.app.power [VA]	Total generator apparent power
01.83 Gen.app.pwr. L1 [VA]	Generator apparent power L1-N
01.84 Gen.app.pwr. L2 [VA]	Generator apparent power L2-N
01.85 Gen.app.pwr. L3 [VA]	Generator apparent power L3-N

9.5.2.2 Group 02: Mains values

The percentage value is related on the following values:

- mains rated voltage
- system rated frequency
- mains rated current
- power factor:

Lagging: value [%] = (2 - PF) * 50%

e.g. PF = 0.8: value [%] = (2 - 0.8) * 50% = 60%

Leading: value [%] = PF * (-1) * 50%

e.g. PF = - 0.8: value [%] = (- 0.8) * (-1) * 50% = 40%

- mains rated active power
- mains rated reactive power
- mains rated active and mains rated reactive power

HMI Text	Note
02.01 Mains volt.L-N [%]	Mains voltage wye average
02.02 Mains volt.L1-N [%]	Mains voltage 1-N
02.03 Mains volt.L2-N [%]	Mains voltage 2-N
02.04 Mains volt.L3-N [%]	Mains voltage 3-N
02.05 Mains volt.L-L [%]	Mains voltage delta average
02.06 Mains volt.L1-L2 [%]	Mains voltage 1-2
02.07 Mains volt.L2-L3 [%]	Mains voltage 2-3

HMI Text	Note
02.08 Mains volt.L3-L1 [%]	Mains voltage 3-1
02.09 Mains frequency [%]	Mains frequency
02.10 Mains freq.L1-L2 [%]	Mains frequency 1-2
02.11 Mains freq.L2-L3 [%]	Mains frequency 2-3
02.12 Mains freq.L3-L1 [%]	Mains frequency 3-1
02.13 Mains current [%]	Mains average current
02.14 Mains current L1 [%]	Mains current 1
02.15 Mains current L2 [%]	Mains current 2
02.16 Mains current L3 [%]	Mains current 3
02.17 Mns.curr.max.L1 [%]	Dragged mains current 1
02.18 Mns.curr.max.L2 [%]	Dragged mains current 2
02.19 Mns.curr.max.L3 [%]	Dragged mains current 3
02.20 Mains PF [%]	Mains power factor
02.21 Mains PF L1 [%]	Mains power factor 1
02.22 Mains PF L2 [%]	Mains power factor 2
02.23 Mains PF L3 [%]	Mains power factor 3
02.24 Mains act.power [%]	Total mains active power
02.25 Mns.act.pwr.L1 [%]	Mains power 1-N
02.26 Mns.act.pwr.L2 [%]	Mains power 2-N
02.27 Mns.act.pwr.L3 [%]	Mains power 3-N
02.28 Mns.react.pwr. [%]	Total mains reactive power
02.29 Mns.react.pwr.L1 [%]	Mains reactive power 1-N
02.30 Mns.react.pwr.L2 [%]	Mains reactive power 2-N
02.31 Mns.react.pwr.L3 [%]	Mains reactive power 3-N
02.32 Mns.app.power [%]	Total mains apparent power
02.33 Mns.app.pwr.L1 [%]	Mains apparent power 1-N
02.34 Mns.app.pwr.L2 [%]	Mains apparent power 2-N
02.35 Mns.app.pwr.L3 [%]	Mains apparent power 3-N
02.36 Mns.ext.act.pwr.[%]	Mains external measured active power by AI
02.37 Mns.ext.react.pwr.[%]	Mains external measured reactive power by AI
02.38 Mains ext. PF [%]	Mains calculated Power Factor by AI
02.40 Mains freq.200ms [%]	Mains frequency average 200ms
02.51 Mains volt.L-N [V]	Mains voltage wye average
02.52 Mains volt.L1-N [V]	Mains voltage 1-N
02.53 Mains volt.L2-N [V]	Mains voltage 2-N
02.54 Mains volt.L3-N [V]	Mains voltage 3-N
02.55 Mains volt.L-L [V]	Mains voltage delta average
02.56 Mains volt.L1-L2 [V]	Mains voltage 1-2

Released

HMI Text	Note
02.57 Mains volt.L2-L3 [V]	Mains voltage 2-3
02.58 Mains volt.L3-L1 [V]	Mains voltage 3-1
02.59 Mains frequency [Hz]	Mains frequency
02.60 Mains freq.L1-L2 [Hz]	Mains frequency 1-2
02.61 Mains freq.L2-L3 [Hz]	Mains frequency 2-3
02.62 Mains freq.L3-L1 [Hz]	Mains frequency 3-1
02.63 Mains current [A]	Mains average current
02.64 Mains current L1 [A]	Mains current 1
02.65 Mains current L2 [A]	Mains current 2
02.66 Mains current L3 [A]	Mains current 3
02.67 Mns.curr.max.L1 [A]	Mains dragged current 1
02.68 Mns.curr.max.L2 [A]	Mains dragged current 2
02.69 Mns.curr.max.L3 [A]	Mains dragged current 3
02.70 Mains PF	Mains power factor
02.71 Mains PF L1	Mains power factor 1
02.72 Mains PF L2	Mains power factor 2
02.73 Mains PF L3	Mains power factor 3
02.74 Mains act.power [W]	Total mains active power
02.75 Mns.act.pwr. L1 [W]	Mains active power 1-N
02.76 Mns.act.pwr. L2 [W]	Mains active power 2-N
02.77 Mns.act.pwr. L3 [W]	Mains active power 3-N
02.78 Mns.react.pwr. [var]	Total mains reactive power
02.79 Mns.react.pwr.L1[var]	Mains reactive power 1-N
02.80 Mns.react.pwr.L2[var]	Mains reactive power 2-N
02.81 Mns.react.pwr.L3[var]	Mains reactive power 3-N
02.82 Mns.app.power [VA]	Total mains apparent power
02.83 Mns.app.pwr.L1 [VA]	Mains apparent power 1-N
02.84 Mns.app.pwr.L2 [VA]	Mains apparent power 2-N
02.85 Mns.app.pwr.L3 [VA]	Mains apparent power 3-N
02.86 Mns.ext.act.pwr.[W]	Mains external measured active power by AI
02.87 Mns.ext.reac.pwr[var]	Mains external measured reactive power by AI
02.88 Mains ext. PF	Mains calculated Power Factor by AI
02.89 Mains settl.time [s]	Mains settling time
02.90 Mains freq.200ms [Hz]	Mains frequency average 200ms

9.5.2.3 Group 03: Busbar 1 values

The percentage value is related on the following values:

Released

- busbar 1 rated voltage
- system rated frequency

HMI Text	Note
03.01 Busb1 volt.L-L [%]	Busbar 1: voltage delta average [%]
03.02 Busb1 volt.L1-L2 [%]	Busbar 1: voltage L1-L2 [%]
03.05 Busb1 frequency [%]	Busbar 1: frequency [%]
03.06 Busb1 freq.L1-L2 [%]	Busbar 1: frequency L1-L2 [%]
03.51 Busb1 volt.L-L [V]	Busbar 1: voltage delta average [V]
03.52 Busb1 volt.L1-L2 [V]	Busbar 1: voltage L1-L2 [V]
03.55 Busb1 frequency [Hz]	Busbar 1: frequency [Hz]
03.56 Busb1 freq.L1-L2 [Hz]	Busbar 1: frequency L1-L2 [Hz]
03.63 Phase Busb1-Gen [°]	Phase angle between busbar 1 and generator (Phase L1)
03.64 Phase Mains-Busb1 [°]	Phase angle between mains and busbar 1 (Phase L1)

9.5.2.4 Group 05: Controller setpoints

The percentage value is related on the following values:

- generator rated voltage
- system rated frequency
- generator rated current
- power factor 1
- generator rated active power
- generator rated reactive power
- generator rated active and generator rated reactive power

HMI Text	Note
05.01 Internal f setp1 [%]	Internal frequency setpoint 1
05.02 Internal f setp2 [%]	Internal frequency setpoint 2
05.03 Interface f setp [%]	Interface frequency setpoint
05.04 Internal P setp1 [%]	Internal power setpoint 1
05.05 Internal P setp2 [%]	Internal power setpiont 2
05.06 Interface P setp [%]	Interface power setpoint
05.07 Internal v setp1 [%]	Internal voltage setpoint 1
05.08 Internal v setp2 [%]	Internal voltage setpoint 2
05.09 Interface v setp [%]	Interface voltage setpoint
05.10 Intern. PF setp1 [%]	Internal power factor setpoint 1
05.11 Intern. PF setp2 [%]	Internal power factor setpoint 2
05.12 Interface PF sp [%]	Interface power factor setpoint

Released

HMI Text	Note
05.13 Discrete f +/- [%]	Digital poti frequency
05.14 Discrete P +/- [%]	Digital poti power
05.15 Discrete v +/- [%]	Digital poti voltage
05.16 Discrete PF +/- [%]	Digital poti power factor
05.17 Used f setp. [%]	Used frequency setpoint
05.18 Used f setp.ramp [%]	Used frequency setpoint ramp
05.19 Used P setp. [%]	Used power setpoint
05.20 Used P setp.ramp [%]	Used power setpoint ramp
05.21 Used v setp. [%]	Used voltage setpoint
05.22 Used v setp.ramp [%]	Used voltage setpoint ramp
05.23 Used PF setp [%]	Used power factor setpoint
05.24 Used PF sp ramp [%]	Used power factor setpoint ramp
05.28 P derating(f) [%]	Generator acive power derating dependent on mains ferquency, value of reduction
05.29 PF characteristic [%]	Power factor corresponding to characteristic
05.30 Internal P setp3 [%]	Internal power setpoint 3
05.31 Int. kvar setp1 [%]	Internal kvar setpoint 1
05.32 Int. kvar setp2 [%]	Internal kvar setpoint 2
05.33 Interf. kvar sp [%]	Interface kvar setpoint
05.34 Internal P setp4 [%]	Internal power setpoint 4
05.35 F/P control setp [%]	F/P controller setpoint
05.36 V/Q control setp [%]	V/Q controller setpoint
05.37 Manual f setp. [%]	Manual setpoint frequency
05.38 Manual P setp. [%]	Manual setpoint real power
05.39 Manual V setp. [%]	Manual setpoint voltage
05.40 Manual PF setp. [%]	Manual setpoint power factor
05.41 Used Q setp. [%]	Used kvar setpoint
05.42 Q setp. ramp [%]	Used kvar setpoint ramp
05.43 QV reference [%]	Reactive power characteristic QV
05.44 QP reference [%]	Reactive power characteristic QP
05.45 QV lim.reference [%]	Reactive power characteristic QV limit
05.46 VQ0 reference	Reactive power characteristic reference VQ0
05.47 Interface QP offset	Offset to Q/P characteristic curve, received by interface
05.48 P uprating(f) [%]	P uprating (F)
05.51 Internal f setp1 [Hz]	Internal frequency setpoint 1
05.52 Internal f setp2 [Hz]	Internal frequency setpoint 2
05.53 Interface f setp [Hz]	Interface frequency setpoint
05.54 Internal P setp1 [kW]	Internal power setpoint 1
05.55 Internal P setp2 [kW]	Internal power setpoint 2

Released

HMI Text	Note
05.56 Interface P setp [kW]	Interface power setpoint
05.57 Internal v setp1 [V]	Internal voltage setpoint 1
05.58 Internal v setp2 [V]	Internal voltage setpoint 2
05.59 Interface v setp [V]	Interface voltage setpoint
05.63 Discrete f +/- [Hz]	Digital poti frequency
05.64 Discrete P +/- [kW]	Digital poti power
05.65 Discrete v +/- [V]	Digital poti voltage
05.67 Used f setp. [Hz]	Used frequency setpoint
05.68 Used f setp.ramp [Hz]	Used frequency setpoint ramp
05.69 Used P setp. [kW]	Used power setpoint
05.70 Used P setp.ramp [kW]	Used power setpoint ramp
05.71 Used v setp. [V]	Used voltage setpoint
05.72 Used v setp.ramp [V]	Used voltage setpoint ramp
05.75 Int. PID1 setpoint	Internal PID 1 setpoint
05.76 Int. PID2 setpoint	Internal PID 2 setpoint
05.77 Int. PID3 setpoint	Internal PID 3 setpoint
05.80 Internal P setp3 [kW]	Internal power setpoint 3
05.81 Int.kvar setp1 [kvar]	Internal kvar setpoint 1
05.82 Int.kvar setp2 [kvar]	Internal kvar setpoint 2
05.83 Interf.kvar sp [kvar]	Interface kvar setpoint
05.84 Internal P setp4 [kW]	Internal power setpoint 4
05.87 Manual f setp. [Hz]	Manual setpoint frequency
05.88 Manual P setp. [kW]	Manual setpoint real power
05.89 Manual V setp. [V]	Manual setpoint voltage
05.91 Used Q setp. [kvar]	Used kvar setpoint
05.92 Q setp. ramp [kvar]	Used kvar setpoint ramp
05.93 QV reference [kvar]	Reactive power charateristic QV
05.94 QP reference [kvar]	Reactive power charateristic QP
05.95 QV limit ref.[kvar]	Reactive power charateristic QV limit
05.99 GC P setpoint [kW]	GC P setpoint

9.5.2.5 Group 06: DC analog inputs

HMI Text	Note
06.01 Analog input 1	Analog input 1
06.02 Analog input 2	Analog input 2
06.03 Analog input 3	Analog input 3
08.01 Ext. analog input 1	External analog input 1

Released

HMI Text	Note
08.02 Ext. analog input 2	External analog input 2
08.03 Ext. analog input 3	External analog input 3
08.04 Ext. analog input 4	External analog input 4
08.05 Ext. analog input 5	External analog input 5
08.06 Ext. analog input 6	External analog input 6
08.07 Ext. analog input 7	External analog input 7
08.08 Ext. analog input 8	External analog input 8
08.09 Ext. analog input 9	External analog input 9
08.10 Ext. analog input 10	External analog input 10
08.11 Ext. analog input 11	External analog input 11
08.12 Ext. analog input 12	External analog input 12
08.13 Ext. analog input 13	External analog input 13
08.14 Ext. analog input 14	External analog input 14
08.15 Ext. analog input 15	External analog input 15
08.16 Ext. analog input 16	External analog input 16

9.5.2.6 Group 10: Internal values

HMI Text	Note
10.01 ZERO	Zero
10.02 ONE	One
10.04 Battery voltage [%]	Battery voltage (percentage value related on battery voltage 24V)
10.06 Calc.ground curr.[%]	Calculated ground current (percentage value related on generator rated current)
10.07 Meas.ground curr.[%]	Direct measured ground current (percentage value related on generator rated current)
10.08 AM PID1 bias	Free PID 1 analog output (PID1 bias)
10.09 AM PID2 bias	Free PID 2 analog output (PID2 bias)
10.10 AM PID3 bias	Free PID 3 analog output (PID3 bias)
10.11 System nominal P [%]	Active nominal power in system (percentage value related on system rated active power index 1825)
10.12 System real P [%]	Total real power in system (percentage value related on system rated active power index 1825)
10.13 System.res.real P [%]	Reserve real power in system (percentage value related on system rated active power index 1825)
10.39 PV load ref. [%]	PV load reference (PV set-point value 0% - 100%)
10.40 Generator load [%]	Generator load (same like value of index 237). Calculated by "active power in system" / "rated active power in system"
10.54 Battery voltage [V]	Battery voltage
10.56 Calc.ground curr.[A]	Calculated ground current
10.57 Meas.ground curr.[A]	Direct measured ground current

HMI Text	Note
10.61 System nominal P [W]	Active nominal power in system [W]
10.62 System real P [W]	Total real power in system [W]
10.63 System.res.real P[W]	Reserve real power in system [W]
10.64 Act.power LSx [W]	Active power LSx (Active mains power in own segment)
10.65 React.power LSx [var]	Reactive power LSx (Reactive mains power in own segment)
10.66 Syst.react.pwr.[var]	Total reactive power in system [var]
10.70 LSx freq.L-L [Hz]	LSx frequency L-L Mains frequency of the LSx with the smallest device number OR frequency of the LSx with a close wish to the own segment.
10.71 LSx volt.L-L [V]	LSx voltage L-L Mains delta voltage of the LSx with the smallest device number
10.72 LSx volt.L-N [V]	LSx voltage L-N Mains wye voltage of the LSx with the smallest device number
10.73 Average load 1 [kW]	Average load 1
10.74 Average load 2 [kW]	Average load 2
10.75 Average load 3 [kW]	Average load 3
10.76 Average load 4 [kW]	Average load 4
10.77 Average load 5 [kW]	Average load 5
10.78 Average load sum [kW]	Average load sum
10.79 RTC Year	RTC Year
10.80 RTC Month	RTC Month
10.81 RTC Day	RTC Day
10.82 RTC Hour	RTC Hour
10.83 RTC Minute	RTC Minute
10.84 RTC Second	RTC Second
10.85 RTC Weekday	RTC Weekday
10.90 Generator load [kW]	Generator load from the generators with closed GCB [kW]

9.5.2.7 Group 11: General values

HMI Text	Note
11.02 Voltage bias [%]	Biasing Voltage/Reactive power
11.03 Speed bias [%]	Biasing Frequency/Active power
11.55 Eng.oper.hours [h]	Operating hours
11.58 Period of use [h]	Period of use hours

Released

HMI Text	Note
11.66 Number of starts	Number of starts

9.5.2.8 Group 13: Constants

HMI Text	Note
13.01 Free constant 1	Free constant 1
13.02 Free constant 2	Free constant 2
13.03 Free constant 3	Free constant 3
13.04 Free constant 4	Free constant 4
13.05 Free constant 5	Free constant 5
13.06 Free constant 6	Free constant 6
13.07 Free constant 7	Free constant 7
13.08 Free constant 8	Free constant 8
13.09 Free constant 9	Free constant 9
13.10 Free constant 10	Free constant 10
13.11 Free constant 11	Free constant 11
13.12 Free constant 12	Free constant 12
13.13 Free constant 13	Free constant 13
13.14 Free constant 14	Free constant 14
13.15 Free constant 15	Free constant 15
13.16 Free constant 16	Free constant 16

9.5.2.9 Group 15: Controller setpoints 2

HMI Text	Note
15.01 Int.SP gen.load [%]	PV load reference function: Internal setpoint generator load

9.5.2.10 Group 21: CAN1 Receive

HMI Text	Note
21.01 CAN1 RPDO1.1	CAN1 RPDO1.1 (value index 3371, signed short)
21.02 CAN1 RPDO1.2	CAN1 RPDO1.2 (value index 3372, signed short)
21.03 CAN1 RPDO1.3	CAN1 RPDO1.3 (value index 3373, signed short)
21.04 CAN1 RPDO1.4	CAN1 RPDO1.4 (value index 3374, signed short)
21.05 CAN1 RPDO2.1	CAN1 RPDO2.1 (value index 3375, signed short)
21.06 CAN1 RPDO2.2	CAN1 RPDO2.2 (value index 3376, signed short)

Released

HMI Text	Note
21.07 CAN1 RPDO2.3	CAN1 RPDO2.3 (value index 3377, signed short)
21.08 CAN1 RPDO2.4	CAN1 RPDO2.4 (value index 3378, signed short)
21.09 CAN1 RPDO3.1	CAN1 RPDO3.1 (value index 3379, signed short)
21.10 CAN1 RPDO3.2	CAN1 RPDO3.2 (value index 3380, signed short)
21.11 CAN1 RPDO3.3	CAN1 RPDO3.3 (value index 3381, signed short)
21.12 CAN1 RPDO3.4	CAN1 RPDO3.4 (value index 3382, signed short)
21.13 CAN1 RPDO4.1	CAN1 RPDO4.1 (value index 3383, signed short)
21.14 CAN1 RPDO4.2	CAN1 RPDO4.2 (value index 3384, signed short)
21.15 CAN1 RPDO4.3	CAN1 RPDO4.3 (value index 3385, signed short)
21.16 CAN1 RPDO4.4	CAN1 RPDO4.4 (value index 3386, signed short)
21.17 CAN1 RPDO5.1	CAN1 RPDO5.1 (value index 3387, signed short)
21.18 CAN1 RPDO5.2	CAN1 RPDO5.2 (value index 3388, signed short)
21.19 CAN1 RPDO5.3	CAN1 RPDO5.3 (value index 3389, signed short)
21.20 CAN1 RPDO5.4	CAN1 RPDO5.4 (value index 3390, signed short)

9.5.2.11 Group 24: Free analog values

Note: In future releases (higher than 2.10-0) the variables 24.05-24.08 will be write-protected with code level CL1.

HMI Text	Note
24.01 Free analog value 1	Free analog value 1 (value index 587, signed short)
24.02 Free analog value 2	Free analog value 2 (value index 588, signed short)
24.03 Free analog value 3	Free analog value 3 (value index 589, signed short)
24.04 Free analog value 4	Free analog value 4 (value index 590, signed short)
24.05 Free analog value 5	Free analog value 5 (value index 591, signed short)
24.06 Free analog value 6	Free analog value 6 (value index 592, signed short)
24.07 Free analog value 7	Free analog value 7 (value index 593, signed short)
24.08 Free analog value 8	Free analog value 8 (value index 594, signed short)

9.5.2.12 Group 54: Modbus Master pulled flags

TRUE if the flag is active

HMI Text	Note
54.01 Mapped AM value 1	Modbus Master mapped AM value 1
54.02 Mapped AM value 2	Modbus Master mapped AM value 2
54.03 Mapped AM value 3	Modbus Master mapped AM value 3
54.04 Mapped AM value 4	Modbus Master mapped AM value 4
54.05 Mapped AM value 5	Modbus Master mapped AM value 5

Released

HMI Text	Note
54.06 Mapped AM value 6	Modbus Master mapped AM value 6
54.07 Mapped AM value 7	Modbus Master mapped AM value 7
54.08 Mapped AM value 8	Modbus Master mapped AM value 8
54.09 Mapped AM value 9	Modbus Master mapped AM value 9
54.10 Mapped AM value 10	Modbus Master mapped AM value 10
54.11 Mapped AM value 11	Modbus Master mapped AM value 11
54.12 Mapped AM value 12	Modbus Master mapped AM value 12
54.13 Mapped AM value 13	Modbus Master mapped AM value 13
54.14 Mapped AM value 14	Modbus Master mapped AM value 14
54.15 Mapped AM value 15	Modbus Master mapped AM value 15
54.16 Mapped AM value 16	Modbus Master mapped AM value 16
54.17 Mapped AM value 17	Modbus Master mapped AM value 17
54.18 Mapped AM value 18	Modbus Master mapped AM value 18
54.19 Mapped AM value 19	Modbus Master mapped AM value 19
54.20 Mapped AM value 20	Modbus Master mapped AM value 20
54.21 Mapped AM value 21	Modbus Master mapped AM value 21
54.22 Mapped AM value 22	Modbus Master mapped AM value 22
54.23 Mapped AM value 23	Modbus Master mapped AM value 23
54.24 Mapped AM value 24	Modbus Master mapped AM value 24
54.25 Mapped AM value 25	Modbus Master mapped AM value 25
54.26 Mapped AM value 26	Modbus Master mapped AM value 26
54.27 Mapped AM value 27	Modbus Master mapped AM value 27
54.28 Mapped AM value 28	Modbus Master mapped AM value 28
54.29 Mapped AM value 29	Modbus Master mapped AM value 29
54.30 Mapped AM value 30	Modbus Master mapped AM value 30
54.31 Mapped AM value 31	Modbus Master mapped AM value 31
54.32 Mapped AM value 32	Modbus Master mapped AM value 32
54.33 Mapped AM value 33	Modbus Master mapped AM value 33
54.34 Mapped AM value 34	Modbus Master mapped AM value 34
54.35 Mapped AM value 35	Modbus Master mapped AM value 35
54.36 Mapped AM value 36	Modbus Master mapped AM value 36
54.37 Mapped AM value 37	Modbus Master mapped AM value 37
54.38 Mapped AM value 38	Modbus Master mapped AM value 38
54.39 Mapped AM value 39	Modbus Master mapped AM value 39
54.40 Mapped AM value 40	Modbus Master mapped AM value 40
54.41 Mapped AM value 41	Modbus Master mapped AM value 41
54.42 Mapped AM value 42	Modbus Master mapped AM value 42
54.43 Mapped AM value 43	Modbus Master mapped AM value 43

HMI Text	Note
54.44 Mapped AM value 44	Modbus Master mapped AM value 44
54.45 Mapped AM value 45	Modbus Master mapped AM value 45
54.46 Mapped AM value 46	Modbus Master mapped AM value 46
54.47 Mapped AM value 47	Modbus Master mapped AM value 47
54.48 Mapped AM value 48	Modbus Master mapped AM value 48
54.49 Mapped AM value 49	Modbus Master mapped AM value 49
54.50 Mapped AM value 50	Modbus Master mapped AM value 50
54.51 Mapped AM value 51	Modbus Master mapped AM value 51
54.52 Mapped AM value 52	Modbus Master mapped AM value 52
54.53 Mapped AM value 53	Modbus Master mapped AM value 53
54.54 Mapped AM value 54	Modbus Master mapped AM value 54
54.55 Mapped AM value 55	Modbus Master mapped AM value 55
54.56 Mapped AM value 56	Modbus Master mapped AM value 56
54.57 Mapped AM value 57	Modbus Master mapped AM value 57
54.58 Mapped AM value 58	Modbus Master mapped AM value 58
54.59 Mapped AM value 59	Modbus Master mapped AM value 59
54.60 Mapped AM value 60	Modbus Master mapped AM value 60
54.61 Mapped AM value 61	Modbus Master mapped AM value 61
54.62 Mapped AM value 62	Modbus Master mapped AM value 62
54.63 Mapped AM value 63	Modbus Master mapped AM value 63
54.64 Mapped AM value 64	Modbus Master mapped AM value 64
54.65 Mapped AM value 65	Modbus Master mapped AM value 65
54.66 Mapped AM value 66	Modbus Master mapped AM value 66
54.67 Mapped AM value 67	Modbus Master mapped AM value 67
54.68 Mapped AM value 68	Modbus Master mapped AM value 68
54.69 Mapped AM value 69	Modbus Master mapped AM value 69
54.70 Mapped AM value 70	Modbus Master mapped AM value 70
54.71 Mapped AM value 71	Modbus Master mapped AM value 71
54.72 Mapped AM value 72	Modbus Master mapped AM value 72
54.73 Mapped AM value 73	Modbus Master mapped AM value 73
54.74 Mapped AM value 74	Modbus Master mapped AM value 74
54.75 Mapped AM value 75	Modbus Master mapped AM value 75
54.76 Mapped AM value 76	Modbus Master mapped AM value 76
54.77 Mapped AM value 77	Modbus Master mapped AM value 77
54.78 Mapped AM value 78	Modbus Master mapped AM value 78
54.79 Mapped AM value 79	Modbus Master mapped AM value 79
54.80 Mapped AM value 80	Modbus Master mapped AM value 80
54.81 Mapped AM value 81	Modbus Master mapped AM value 81

HMI Text	Note
54.82 Mapped AM value 82	Modbus Master mapped AM value 82
54.83 Mapped AM value 83	Modbus Master mapped AM value 83
54.84 Mapped AM value 84	Modbus Master mapped AM value 84
54.85 Mapped AM value 85	Modbus Master mapped AM value 85
54.86 Mapped AM value 86	Modbus Master mapped AM value 86
54.87 Mapped AM value 87	Modbus Master mapped AM value 87
54.88 Mapped AM value 88	Modbus Master mapped AM value 88
54.89 Mapped AM value 89	Modbus Master mapped AM value 89
54.90 Mapped AM value 90	Modbus Master mapped AM value 90
54.91 Mapped AM value 91	Modbus Master mapped AM value 91
54.92 Mapped AM value 92	Modbus Master mapped AM value 92
54.93 Mapped AM value 93	Modbus Master mapped AM value 93
54.94 Mapped AM value 94	Modbus Master mapped AM value 94
54.95 Mapped AM value 95	Modbus Master mapped AM value 95
54.96 Mapped AM value 96	Modbus Master mapped AM value 96
54.97 Mapped AM value 97	Modbus Master mapped AM value 97
54.98 Mapped AM value 98	Modbus Master mapped AM value 98
54.99 Mapped AM value 99	Modbus Master mapped AM value 99

9.5.2.13 GROUP: 55: Modbus Master flags2 (Inverter and DC source)

HMI Text	Note
55.01 Inverter status	
55.02 Inv.Input DC voltage	
55.03 Inv.max Module temp.	
55.04 Inv. Active power	
55.05 Inv. Reactive power	
55.06 Inv. Apparent power	
55.07 Inv. Power factor	
55.08 Inv. Voltage L1-L2	
55.09 Inv. Voltage L2-L3	
55.10 Inv. Voltage L3-L1	
55.11 Inv. Voltage L1-N	
55.12 Inv. Voltage L2-N	
55.13 Inv. Voltage L3-N	
55.14 Inv. Current L1	
55.15 Inv. Current L2	
55.16 Inv. Current L3	

HMI Text	Note
55.17 Inv. WD response	For Inverter watchdog procedure: This is the query value from the Inverter control.
55.18 Mapped AM value	
55.19 Mapped AM value	
55.20 Mapped AM value	
55.21 Mapped AM value	
55.22 Mapped AM value	
55.23 Mapped AM value	
55.24 Mapped AM value	
55.25 Mapped AM value	
55.26 Mapped AM value	
55.27 Mapped AM value	
55.28 Mapped AM value	
55.29 Mapped AM value	
55.30 Mapped AM value	
55.31 Mapped AM value	
55.32 Mapped AM value	
55.33 Mapped AM value	
55.34 Mapped AM value	
55.35 Mapped AM value	
55.36 Mapped AM value	
55.37 Mapped AM value	
55.38 Mapped AM value	
55.39 Mapped AM value	
55.40 Mapped AM value	
55.41 Mapped AM value	
55.42 Mapped AM value	
55.43 Mapped AM value	
55.44 Mapped AM value	
55.45 Mapped AM value	
55.46 Mapped AM value	
55.47 Source total racks	
55.48 Source service SOC	
55.49 Source service volt.	
55.50 Source system volt.	
55.51 Source system curr.	
55.52 Source system SOC	
55.53 Source system SOH	
55.54 Source system mode	

Released

HMI Text	Note
55.55 Source max.Cell volt	
55.56 Source min.Cell volt	
55.57 Source max.Cell temp	
55.58 Source min.Cell temp	
55.59 Source discharge lim	
55.60 Source charge limit	
55.61 Source racks online	
55.62 Source WD response	For DC source watchdog procedure: This is the inverted query value from the DC source control.
55.63 Source WD query	For DC source watchdog procedure: This is the query value to the DC source control.
55.64 Mapped AM value	
55.65 Mapped AM value	
55.66 Mapped AM value	
55.67 Mapped AM value	
55.68 Mapped AM value	
55.69 Mapped AM value	
55.70 Mapped AM value	
55.71 Mapped AM value	
55.72 Mapped AM value	
55.73 Mapped AM value	
55.74 Mapped AM value	
55.75 Mapped AM value	
55.76 Mapped AM value	
55.77 Mapped AM value	
55.78 Mapped AM value	
55.79 Mapped AM value	
55.80 Mapped AM value	
55.81 Mapped AM value	
55.82 Mapped AM value	
55.83 Mapped AM value	
55.84 Mapped AM value	
55.85 Mapped AM value	
55.86 Mapped AM value	
55.87 Mapped AM value	
55.88 Mapped AM value	
55.89 Mapped AM value	
55.90 Mapped AM value	
55.91 Mapped AM value	

HMI Text	Note
55.92 Mapped AM value	
55.93 Mapped AM value	
55.94 Mapped AM value	
55.95 Mapped AM value	
55.96 Mapped AM value	
55.97 Mapped AM value	
55.98 Mapped AM value	
55.99 Mapped AM value	

9.5.2.14 GROUP: 56: (Inverter/DC source)

HMI Text	Note
56.01 Inv. freq. setp.[%]	Inverter frequency setpoint [%]
56.02 Max.charge P [%]	Maximum charging power [%]
56.03 Max.discharge P [%]	Maximum discharging power [%]
56.05 DC discharge lim [%]	DC source discharging limit [%]
56.06 DC charge limit [%]	DC source charging limit [%]
56.51 Inv. freq. setp.[Hz]	Inverter frequency setpoint [Hz]
56.52 Max.charge P [kW]	Maximum charging power [kW]
56.53 Max.discharge P [kW]	Maximum discharging power [kW]
56.54 Inverter watchdog	For Inverter watchdog procedure: This is the query value to the Inverter control.
56.55 DC discharge lim [A]	DC source discharging limit [A]
56.56 DC charge limit [A]	DC source charging limit [A]
56.57 DC SP Charging [V]	DC source charging setpoint [V]

9.5.2.15 GROUP: 80: Results 0

HMI Text	Note
80.01 AM DC volt.setp [V]	DC source voltage setpoint source [V]
80.02 AM Charg. power [kW]	Charging power setpoint source [kW], (positive Entry)
80.03 AM Discharge P [kW]	Discharging power setpoint source [kW]

9.5.2.16 Group 81: Results 1

Analog outputs of function-related AnalogManagers.

HMI Text	Note
81.03 AM Frequency SP1[Hz]	Frequency setpoint 1 source [Hz]
81.04 AM Frequency SP2[Hz]	Frequency setpoint 2 source [Hz]

Released

HMI Text	Note
81.05 AM ActPower SP1 [kW]	Active power setpoint 1 source [kW]
81.06 AM ActPower SP2 [kW]	Active power setpoint 2 source [kW]
81.07 AM ActPower SP3 [kW]	Active power setpoint 3 source [kW]
81.08 AM ActPower SP4 [kW]	Active power setpoint 4 source [kW]
81.09 AM Voltage SP1 [V]	Voltage setpoint 1 source [V]
81.10 AM Voltage SP2 [V]	Voltage setpoint 2 source [V]
81.11 AM PF/var SP1[-/kvar]	PF/kvar setpoint 1 source [-/var]
81.12 AM PF/var SP2[-/kvar]	PF/kvar setpoint 2 source [-/var]
81.13 AM PID1 setpoint	PID 1 control setpoint
81.14 AM PID1 actual value	PID 1 control actual value
81.15 AM PID2 setpoint	PID 2 control setpoint
81.16 AM PID2 actual value	PID 2 control actual value
81.17 AM PID3 setpoint	PID 3 control setpoint
81.18 AM PID3 actual value	PID 3 control actual value
81.19 AM Ext.mains act.pwr.	External measured mains active power
81.20 AM Ext.mains RPower	External measured mains reactive power
81.21 AM Derating source	Free derating source
81.30 AM Consumer load [kW]	Consumer load [kW]
81.31 AM Reference VQ0	Reference VQ0
81.32 AM Q/P ref.offset	Q/P reference offset
81.34 AM PV SP gen.min.load	PV control: Setpoint generator load

9.5.2.17 Group 82: Results 2

Analog outputs of function-related AnalogManagers.

HMI Text	Note
82.01 AM FlexLim 1 source	Flexible Limit 1 data source
82.02 AM FlexLim 2 source	Flexible Limit 2 data source
82.03 AM FlexLim 3 source	Flexible Limit 3 data source
82.04 AM FlexLim 4 source	Flexible Limit 4 data source
82.05 AM FlexLim 5 source	Flexible Limit 5 data source
82.06 AM FlexLim 6 source	Flexible Limit 6 data source
82.07 AM FlexLim 7 source	Flexible Limit 7 data source
82.08 AM FlexLim 8 source	Flexible Limit 8 data source
82.09 AM FlexLim 9 source	Flexible Limit 9 data source
82.10 AM FlexLim 10 source	Flexible Limit 10 data source
82.11 AM FlexLim 11 source	Flexible Limit 11 data source
82.12 AM FlexLim 12 source	Flexible Limit 12 data source

HMI Text	Note
82.13 AM FlexLim 13 source	Flexible Limit 13 data source
82.14 AM FlexLim 14 source	Flexible Limit 14 data source
82.15 AM FlexLim 15 source	Flexible Limit 15 data source
82.16 AM FlexLim 16 source	Flexible Limit 16 data source
82.17 AM FlexLim 17 source	Flexible Limit 17 data source
82.18 AM FlexLim 18 source	Flexible Limit 18 data source
82.19 AM FlexLim 19 source	Flexible Limit 19 data source
82.20 AM FlexLim 20 source	Flexible Limit 20 data source
82.21 AM FlexLim 21 source	Flexible Limit 21 data source
82.22 AM FlexLim 22 source	Flexible Limit 22 data source
82.23 AM FlexLim 23 source	Flexible Limit 23 data source
82.24 AM FlexLim 24 source	Flexible Limit 24 data source
82.25 AM FlexLim 25 source	Flexible Limit 25 data source
82.26 AM FlexLim 26 source	Flexible Limit 26 data source
82.27 AM FlexLim 27 source	Flexible Limit 27 data source
82.28 AM FlexLim 28 source	Flexible Limit 28 data source
82.29 AM FlexLim 29 source	Flexible Limit 29 data source
82.30 AM FlexLim 30 source	Flexible Limit 30 data source
82.31 AM FlexLim 31 source	Flexible Limit 31 data source
82.32 AM FlexLim 32 source	Flexible Limit 32 data source
82.33 AM FlexLim 33 source	Flexible Limit 33 data source
82.34 AM FlexLim 34 source	Flexible Limit 34 data source
82.35 AM FlexLim 35 source	Flexible Limit 35 data source
82.36 AM FlexLim 36 source	Flexible Limit 36 data source
82.37 AM FlexLim 37 source	Flexible Limit 37 data source
82.38 AM FlexLim 38 source	Flexible Limit 38 data source
82.39 AM FlexLim 39 source	Flexible Limit 39 data source
82.40 AM FlexLim 40 source	Flexible Limit 40 data source

9.5.2.18 Group 90: Internal Values 0

Analog outputs of function-related AnalogManagers.

HMI Text	Note
90.01 AM Cust.screen 1.1	Customer defined screen 1 row 1
90.02 AM Cust.screen 1.2	Customer defined screen 1 row 2
90.03 AM Cust.screen 1.3	Customer defined screen 1 row 3
90.04 AM Cust.screen 1.4	Customer defined screen 1 row 4
90.05 AM Cust.screen 1.5	Customer defined screen 1 row 5

Released

HMI Text	Note
90.06 AM Cust.screen 1.6	Customer defined screen 1 row 6
90.07 AM Cust.screen 1.7	Customer defined screen 1 row 7
90.08 AM Cust.screen 1.8	Customer defined screen 1 row 8
90.09 AM Cust.screen 1.9	Customer defined screen 1 row 9
90.51 AM Cust.screen 2.1	Customer defined screen 2 row 1
90.52 AM Cust.screen 2.2	Customer defined screen 2 row 2
90.53 AM Cust.screen 2.3	Customer defined screen 2 row 3
90.54 AM Cust.screen 2.4	Customer defined screen 2 row 4
90.55 AM Cust.screen 2.5	Customer defined screen 2 row 5
90.56 AM Cust.screen 2.6	Customer defined screen 2 row 6
90.57 AM Cust.screen 2.7	Customer defined screen 2 row 7
90.58 AM Cust.screen 2.8	Customer defined screen 2 row 8
90.59 AM Cust.screen 2.9	Customer defined screen 2 row 9

9.5.2.19 Group 91: Internal Values 1

Analog outputs of function-related AnalogManagers.

HMI Text	Note
91.01 AM Internal value 1	Internal value 1
91.02 AM Internal value 2	Internal value 2
91.03 AM Internal value 3	Internal value 3
91.04 AM Internal value 4	Internal value 4
91.05 AM Internal value 5	Internal value 5
91.06 AM Internal value 6	Internal value 6
91.07 AM Internal value 7	Internal value 7
91.08 AM Internal value 8	Internal value 8
91.09 AM Internal value 9	Internal value 9
91.10 AM Internal value 10	Internal value 10
91.11 AM Internal value 11	Internal value 11
91.12 AM Internal value 12	Internal value 12
91.13 AM Internal value 13	Internal value 13
91.14 AM Internal value 14	Internal value 14
91.15 AM Internal value 15	Internal value 15
91.16 AM Internal value 16	Internal value 16

9.5.2.20 Group 93: Analog Outputs 1

Analog outputs of function-related AnalogManagers.

Released

HMI Text	Note
93.01 AM Data source AO1	Analog output 1 data source
93.02 AM Data source AO2	Analog output 2 data source
93.21 AM Data s. ext. AO1	External Analog output 1 data source
93.22 AM Data s. ext. AO2	External Analog output 2 data source
93.23 AM Data s. ext. AO3	External Analog output 3 data source
93.24 AM Data s. ext. AO4	External Analog output 4 data source

9.5.3 Factory Settings

AnalogManager's default settings

ID	Name	Operator	Default setting/value
5518	AM Frequency SP1[Hz]	Analog1 ("A1 =")	05.51 Internal f setp1 [Hz]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5519	AM Frequency SP2[Hz]	Analog1 ("A1 =")	05.52 Internal f setp2 [Hz]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
15147	AM Derating source	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————

Released

ID	Name	Operator	Default setting/value
		Operators-Unary2	—————
5539	AM ActPower SP1 [kW]	Analog1 ("A1 =")	05.54 Internal P setp1 [kW]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5540	AM ActPower SP2 [kW]	Analog1 ("A1 =")	05.55 Internal P setp2 [kW]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5606	AM ActPower SP3 [kW]	Analog1 ("A1 =")	05.80 Internal P setp3 [kW]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5609	AM ActPower SP4 [kW]	Analog1 ("A1 =")	05.84 Internal P setp4 [kW]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5638	AM PF/kvar SP1[-/kvar]	Analog1 ("A1 =")	05.10 Intern. PF setp1 [%]

ID	Name	Operator	Default setting/value
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5639	AM PF/kvar SP2[-/kvar]	Analog1 ("A1 =")	05.11 Intern. PF setp2 [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
3346	AM Preglow criterion	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5618	AM Voltage SP1 [V]	Analog1 ("A1 =")	05.57 Internal v setp1 [V]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5619	AM Voltage SP2 [V]	Analog1 ("A1 =")	05.58 Internal v setp2 [V]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0

Released

ID	Name	Operator	Default setting/value
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5577	AM PID1 setpoint	Analog1 ("A1 =")	05.75 Int. PID1 setpoint
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5578	AM PID1 actual value	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5590	AM PID2 setpoint	Analog1 ("A1 =")	05.76 Int. PID2 setpoint
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
5591	AM PID2 actual value	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE

Released

ID	Name	Operator	Default setting/value
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5676	AM PID3 setpoint	Analog1 ("A1 =")	05.77 Int. PID3 setpoint
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5677	AM PID3 actual value	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5200	AM Data source AO1	Analog1 ("A1 =")	11.03 Speed bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5214	AM Data source AO2	Analog1 ("A1 =")	11.02 Voltage bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	

Released

ID	Name	Operator	Default setting/value
		Operators-Unary1	—————
		Operators-Unary2	—————
10237	AM Data source ext.AO1	Analog1 ("A1 =")	11.03 Speed bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
10247	AM Data source ext.AO2	Analog1 ("A1 =")	11.03 Speed bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
10257	AM Data source ext.AO3	Analog1 ("A1 =")	11.03 Speed bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
10267	AM Data source ext.AO4	Analog1 ("A1 =")	11.03 Speed bias [%]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————

ID	Name	Operator	Default setting/value
9640	AM Internal value 1	Analog1 ("A1 =")	10.01 ZERO
9644	AM Internal value 2	Analog2 ("A2 =")	10.01 ZERO
9648	AM Internal value 3	Constant1 ("C1 =")	0
9652	AM Internal value 4	Function Type ("Type =")	Pass through
9656	AM Internal value 5	Logic1 "L1"	02.01 LM FALSE
9660	AM Internal value 6	Logic2 "L2"	02.01 LM FALSE
9664	AM Internal value 7	Operators:	
9668	AM Internal value 8	Operators-Unary1	————
9672	AM Internal value 9	Operators-Unary2	————
9676	AM Internal value 10		
9680	AM Internal value 11		
9684	AM Internal value 12		
9688	AM Internal value 13		
9692	AM Internal value 14		
9696	AM Internal value 15		
9700	AM Internal value 16		
5780	AM Ext.mains act.pwr	Analog1 ("A1 =")	06.01 Analog input 1
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
5794	AM Ext.mains RPower	Analog1 ("A1 =")	06.02 Analog input 2
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	————
		Operators-Unary2	————
4206	AM FlexLim 1 source	Analog1 ("A1 =")	10.01 ZERO
4223	AM FlexLim 2 source	Analog2 ("A2 =")	10.01 ZERO
4240	AM FlexLim 3 source	Constant1 ("C1 =")	0
4257	AM FlexLim 4 source		

Released

ID	Name	Operator	Default setting/value
4276	AM FlexLim 5 source	Function Type ("Type =")	Pass through
4286	AM FlexLim 6 source	Logic1 "L1"	02.01 LM FALSE
4296	AM FlexLim 7 source	Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
6006	AM FlexLim 8 source	Analog1 ("A1 =")	10.01 ZERO
6016	AM FlexLim 9 source	Analog2 ("A2 =")	10.01 ZERO
6026	AM FlexLim 10 source	Constant1 ("C1 =")	0
6026 + (N x (+10))	AM FlexLim 11 source - AM FlexLim 39 source	Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
...	...	Logic2 "L2"	02.01 LM FALSE
6326	AM FlexLim 40 source	Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
7690	AM Customer screen 1.1	Analog1 ("A1 =")	10.01 ZERO
7695	AM Customer screen 1.2	Analog2 ("A2 =")	10.01 ZERO
7700	AM Customer screen 1.3	Constant1 ("C1 =")	0
7705	AM Customer screen 1.4	Function Type ("Type =")	Pass through
7710	AM Customer screen 1.5	Logic1 "L1"	02.01 LM FALSE
7715	AM Customer screen 1.6	Logic2 "L2"	02.01 LM FALSE
7720	AM Customer screen 1.7	Operators:	—————
7725	AM Customer screen 1.8	Operators-Unary1	—————
7730	AM Customer screen 1.9	Operators-Unary2	
7735	AM Customer screen 2.1		
7740	AM Customer screen 2.2		
7745	AM Customer screen 2.3		
7750	AM Customer screen 2.4		
7755	AM Customer screen 2.5		
7760	AM Customer screen 2.6		
7765	AM Customer screen 2.7		
7770	AM Customer screen 2.8		
7775	AM Customer screen 2.9		
9059	AM Consumer load [kW]	Analog1 ("A1 =")	02.74 Mains act.power [W]
		Analog2 ("A2 =")	10.02 ONE
		Constant1 ("C1 =")	-0.001
		Function Type ("Type =")	Multiply type C

ID	Name	Operator	Default setting/value
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
16909	AM DC voltage setp. [V]	Analog1 ("A1 =")	56.57 DC SP Charging [V]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
16913	AM Charging power [kW]	Analog1 ("A1 =")	10.01 ZERO
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	0
		Function Type ("Type =")	Pass through
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————
16917	Max.discharge power [kW]	Analog1 ("A1 =")	56.53 Max.discharge P [kW]
		Analog2 ("A2 =")	10.01 ZERO
		Constant1 ("C1 =")	200
		Function Type ("Type =")	Constant
		Logic1 "L1"	02.01 LM FALSE
		Logic2 "L2"	02.01 LM FALSE
		Operators:	
		Operators-Unary1	—————
		Operators-Unary2	—————

Table 157: Factory settings: AnalogManager

Released

9.6 Status, Event And Alarm Reference

9.6.1 Status messages

Message text	ID	Meaning
STOP mode	14354	Operation mode STOP is active
Operation mode TEST	4685	Operation mode TEST is active The unit is running a test procedure according to the configuration.
MAN mode	14355	Operation mode MANUAL is active
AUTO mode	14353	Operation mode AUTOMATIC is active
AUTO mode ready	13253	Automatic mode ready for start The unit is waiting for a start signal in Automatic operating mode and no alarm of class C, D, E, or F is present.
Inverter prepared	16674	Inverter is ready in any mode, Inverter shall run, DC breaker is closed and discharging is allowed.
Inverter is running	16675	Inverter is running in any mode.
Closing DC breaker	16676	Close command DC breaker is active.
Discharge limit	18458	Is indicated if the unit is discharging and at least one discharge limit (capacity, voltage or cell voltage) is no longer fulfilled. It is reset if -charging becomes active OR -all limits become ok OR -Inverter shall run (56.29) is false
Charging limit	18459	Is indicated if the unit is charging and at least one charging limit (e.g. SOC, temperature, voltage or cell voltage) is no longer fulfilled. It is reset if -discharging becomes active OR -all limits become ok OR -Inverter shall run (56.29) is false
Charging	18326	Is indicated if active power is less than -1kW.
Opening DC breaker	16677	Open command DC breaker is active.
Emergency run	13211	Emergency power operation After the control unit detects that a mains fault has occurred, the inverter is started after the emergency delay timer expires. The MCB is opened, the GCB is closed, and the inverter/generator set assumes the load. If the inverter/generator set is already running, operations continue until the emergency power operation conditions no longer exist. If the mains return, the mains settling timer becomes active first.
Derating active	13281	Derating active As long as the derating function is activated, this text message is shown.

Message text	ID	Meaning
Uprating active	13287	Uprating active As long as the uprating function is activated, this text message is shown.
Gen excitation lim.	13288	Generator excitation limit is reached During regulation kvar at the interchange point the maximum allowed excitation current is reached.
System update	14763	System update is active The system update procedure is ongoing.
Keypad locked	14775	The keypad easYgen is locked
Loading generator	13258	The generator power will be increased to the setpoint The generator power will be increased to the configured setpoint with a rate defined by the power control setpoint ramp.
Unloading mains	13264	The mains power will be decreased The real power setpoint is increased with the configured rate after synchronizing the generator in interchange transition mode. After the mains have been unloaded, the MCB will be opened.
Unloading generator	13256	The generator power will be decreased The generator power will be decreased after a stop command has been issued with a rate defined by the power control setpoint ramp before the GCB will be opened.
GCB -> MCB Delay	13261	GCB - MCB delay time is active If the breaker logic is configured to Open Transition and a transfer from generator to mains supply is initiated, the transfer time delay will start after the replay "GCB is open" is received. The MCB close command will be issued after the transfer time has expired.
MCB dead bus close	13210	Dead bus closing of the MCB The MCB is closed onto the de-energized busbar. The measured busbar voltage is below the configured dead bus detection limit.
MCB -> GCB Delay	13262	MCB - GCB delay time is active If the breaker logic is configured to Open Transition and a transfer from mains to generator supply is initiated, the transfer time delay will start after the reply "MCB is open" is received. The GCB close command will be issued after the transfer time has expired.
Synchronization GCB	13259	The GCB will be synchronized The control tries to synchronize the GCB.
Synchronization MCB	13260	The MCB will be synchronized The control tries to synchronize the MCB.
Mains settling	13205	Mains settling time is active When the control unit detects that the mains fault is no longer present and power has been restored, the mains settling timer begins counting down. If the mains are stable after the expiration of the timer (the mains voltage has not fallen below or risen over the configured monitoring limits), the load is transferred from the generator supply to the mains supply.
Open GCB	13255	The GCB is being opened

Released

Message text	ID	Meaning
		A GCB open command has been issued.
Open MCB	13257	The MCB is being opened An MCB open command has been issued.
Critical mode	13202	Critical mode (Sprinkler operation) is active The sprinkler operation is activated.
Emergency/Critical	13215	Emergency operation during active critical operation Both Critical mode and Emergency run are activated.
GCB dead bus close	13209	Dead bus closing of the GCB The GCB is closed onto the de-energized busbar. The measured busbar voltage is below the configured dead bus detection limit.
Synch. PERMISSIVE	13265	Synchronization mode PERMISSIVE. The frequency / voltage regulation for synchronization is disabled. The according breaker close pulse is enabled.
Synch. CHECK	13266	Synchronization mode CHECK The frequency / voltage regulation for synchronization is enabled. The according breaker close pulse is disabled.
Synch. OFF	13267	Synchronization mode OFF The frequency / voltage regulation for synchronization is disabled. The close pulse is disabled.
Open GGB	13268	The GGB is being opened A GGB open command has been issued.
Synchronization GGB	13269	The GGB will be synchronized The control tries to synchronize the GGB.
GGB dead bus close	13270	Dead bus closing of the GGB The GGB is closed when the busbar is inside the operating range and the load busbar is dead.
MCB -> GGB Delay	13273	MCB - GGB delay time is active If the breaker logic is configured to Open Transition and a transfer from mains to generator supply is initiated, the transfer time delay will start after the reply "MCB is open" is received. The GGB close command will be issued after the transfer time has expired.
Unloading LSx	13282	Unloading the LSx The LSx performs a power reduction to make sure that there is little power in the system before opening the breaker.
Synchronization LSx	13283	The LSx will be synchronized The control supports the synchronization of the LSx.
Inh.dead bus closure	13311	Inhibit dead bus closure The dead busbar closure is inhibited.

Message text	ID	Meaning
GCB closure disabled	13247	GCB shall be closed but is not enabled by LM
GGB closure disabled	13248	GGB shall be closed but is not enabled by LM
GC System update	14776	GC System update is active

9.6.2 Event History

General notes

The event history is a 1000 entry FIFO (First In/First Out) memory for logging alarm events and operation states of the unit. As new event messages are entered into the history, the oldest messages are deleted once 1000 events have occurred.

For additional information refer to “5 Operation”.

Resetting event history

Make sure to have set the appropriate code level to reset the event history.

If you have not entered the correct password for the required code level, the parameters for resetting the event history are not available (for additional information refer to “4.3.4.1 Password System - Parameter Overview”).

Three ways to reset Event History

- **ToolKit**: Click the »Clear all « button at [STATUS MENU / Diagnostic / Event History].

  (Read Event History at the same page)

- **HMI/display**: Go to [Parameter / Configure system management / Factory default settings] and select »Yes«, then »Clear eventlog« appears. Select »Yes« for »Clear event log«

  (To read Event History go to: [Next Page / Diagnostic / Event History])

- **Parameter/remote**:Set parameter 1706»Clear eventlog«) to "TRUE" (1)

- The complete event history is now being cleared

9.6.3 Event Message

Message text	ID	Meaning
Grid tie mode	16671	The unit is switched to Grid tie mode
Grid forming mode	16672	The unit is switched to Grid forming mode mode
DC supply mode	16673	The unit is switched to DC supply mode mode
Inverter prepared	16674	The unit is preparing the inverter
Inverter is running	16675	The inverter has started to run.
Closing DC breaker	16676	Control commands close DC breaker
Opening DC breaker	16677	Control commands open DC breaker

Message text	ID	Meaning
DC breaker closed	16678	Reply DC breaker is closed
AUTO mode	14353	The unit is switched to AUTO mode
STOP mode	14354	The unit is switched to STOP mode
MAN mode	14355	The unit is switched to MANUAL mode
No load test	4683	Test mode started without load
Load test	4684	Test mode started with load
Operation mode TEST	4685	The unit is switched to TEST mode
MCB opened	14700	The MCB reply signals MCB is open
MCB closed	14701	The MCB reply signals MCB is closed
GCB opened	14702	The GCB reply signals GCB is open
GCB closed	14703	The GCB reply signals GCB is closed
Mains failure	14704	Mains frequency or voltage is not ok
Emergency run	14705	The emergency run is initiated
Critical mode	14707	The critical mode is initiated
Open command GCB	14718	Control commands GCB open
Close command GCB	14719	Control commands GCB close
Enable GCB	1866	GCB is enabled (86.95 LM: Enable GCB is TRUE)
Enable GGB	1867	GGB is enabled (87.37 LM: Enable GGB is TRUE)
Open command MCB	14720	Control commands MCB open
Close command MCB	14721	Control commands MCB close
System update	14763	System update is active
easYgen LS timeout	2440	easYgen loadshare timeout detected. This event logg entry can be enabled by parameter "2442 Load share timeout event ".
LSx LS timeout	2441	LSx loadshare timeout detected. This event logg entry can be enabled by parameter "2442 Load share timeout event ".
Redund. LS timeout	2443	Redundancy loadshare timeout detected. This event logg entry can be enabled by parameter "2442 Load share timeout event ".
Startup power supply	14778	Start up power supply
Power derating act.	16192	Power derating is activated
Power uprating act.	16193	Power uprating is activated
Neutral cont. opened	1842	Neutral contactor is opened
Neutral cont. closed	1843	Neutral contactor is closed
Gen excitation lim.	13288	The limit of the generator's excitation is exceeded
GGB opened	14712	The GGB reply signals GGB is open
GGB closed	14717	The GGB reply signals GGB is closed
Open command GGB	14722	Control commands GGB open
Close command GGB	14723	Control commands GGB close

Released

9.6.4 Alarm Classes

The control functions are structured in the following alarm classes:

Alarm class	Visible in the display	LED "Alarm" & horn	Relay "Command: open GCB"	Shut-down engine	Engine blocked until ack. sequence has been performed
A	Yes	No	No	No	No
Warning Alarm	This alarm does not interrupt the unit operation. A message output without a centralized alarm occurs: • Alarm text.				
B	Yes	Yes	No	No	No
Warning Alarm	This alarm does not interrupt the unit operation. An output of the centralized alarm occurs and the command variable 3.05 (horn) is issued. • Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn).				
C	Yes	Yes	Soft unloading	Cool down time	Yes
Shutdown Alarm	With this alarm the GCB is opened and the engine is stopped. Coasting occurs. • Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Coasting + Engine stop.				
D	Yes	Yes	Immediately	Cool down time	Yes
Shutdown Alarm	With this alarm the GCB is opened and the engine is stopped. Coasting occurs. • Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Coasting + Engine stop.				
E	Yes	Yes	Soft unloading	Immediately	Yes
Shutdown Alarm	With this alarm the GCB is opened immediately and the engine is stopped. • Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Engine stop.				
F	Yes	Yes	Immediately	Immediately	Yes
Shutdown Alarm	With this alarm the GCB is opened immediately and the engine is stopped. • Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Engine stop.				
Control	No	No	No	No	No
Control Signal	This signal issues a control command only. It may be assigned to a discrete input for example to get a control signal, which may be used in the LogicsManager. No alarm message and no entry in the alarm list or the event history will be issued. This signal is always self-acknowledging, but considers a delay time and may also be configured with an engine delay.				

In manual mode all stopping alarms are without cool down.

Released

CAUTION!

If an alarm of class C, D, or E is present and the GCB cannot be opened, the engine will not be stopped. This can only be achieved by enabling GCB monitoring (parameter 2600) with the alarm class configured to "F" (parameter 2601).

If an alarm has been configured with a shutdown alarm that has been enabled to self-acknowledge, and has been configured as engine delayed the following scenario may happen:

- The alarm shuts down the engine because of its alarm class.
- Due to the engine stopping, all engine delayed alarms are ignored.
- The alarm class is acknowledged automatically.
- The alarm will self-acknowledge and clear the fault message that shut the engine down.

  This prevents the fault from being analyzed. After a short delay, the engine will restart.
- After the engine monitoring delay expires, the fault that originally shut down the engine will do so again.

  This cycle will continue to repeat until corrected.

9.6.5 Alarm Messages

9.6.5.1 No alarm

Message text	ID	Meaning
No alarm active	13328	There is no alarm active.

9.6.5.2 Generator monitoring

Message text	ID	Meaning
Gen. overfrequency 1	1912	Generator overfrequency, limit value 1 The generator frequency has exceeded the limit value 1 for generator overfrequency.
Gen. overfrequency 2	1913	Generator overfrequency, limit value 2 The generator frequency has exceeded the limit value 2 for generator overfrequency.
Gen.underfrequency 1	1962	Generator underfrequency, limit value 1 The generator frequency has fallen below the limit value 1 for generator underfrequency.
Gen.underfrequency 2	1963	Generator underfrequency, limit value 2

Released

Message text	ID	Meaning
		The generator frequency has fallen below the limit value 2 for generator underfrequency.
Gen. overvoltage 1	2012	Generator overvoltage, limit value 1 The generator voltage has exceeded the limit value 1 for generator overvoltage.
Gen. overvoltage 2	2013	Generator overvoltage, limit value 2 The generator voltage has exceeded the limit value 2 for generator overvoltage.
Gen. undervoltage 1	2062	Generator undervoltage, limit value 1 The generator voltage has fallen below the limit value 1 for generator undervoltage.
Gen. undervoltage 2	2063	Generator undervoltage, limit value 2 The generator voltage has fallen below the limit value 2 for generator undervoltage.
Gen. overcurrent 1	2218	Generator overcurrent, limit value 1 The generator current has exceeded the limit value 1 for the generator overcurrent.
Gen. overcurrent 2	2219	Generator overcurrent, limit value 2 The generator current has exceeded the limit value 2 for the generator overcurrent.
Gen. overcurrent 3	2220	Generator overcurrent, limit value 3 The generator current has exceeded the limit value 3 for the generator overcurrent.
Inv. time overcurr.	4038	Generator inverse time-overcurrent The generator current has exceeded the limit based on the inverse time overcurrent setting.
Gen. rev./red. pwr.1	2262	Generator reverse power, limit value 1 / Generator reduced power, limit value 1 The generator power has exceeded the limit value 1 for generator reverse power / generator reduced power.
Gen. rev./red. pwr.2	2263	Generator reverse power, limit value 2 / Generator reduced power, limit value 2 The generator power has exceeded the limit value 2 for generator reverse power / generator reduced power.
Gen. overload IOP 1	2314	Generator overload IOP, limit value 1 The generator power has exceeded the limit value 1 for generator overload in islanded operation (MCB is open).
Gen. overload IOP 2	2315	Generator overload IOP, limit value 2 The generator power has exceeded the limit value 2 for generator overload in islanded operation (MCB is open).
Gen. overload MOP 1	2362	Generator overload MOP, limit value 1 The generator power has exceeded the limit value 1 for generator overload in mains parallel operation.
Gen. overload MOP 2	2363	Generator overload MOP, limit value 2

Released

Message text	ID	Meaning
		The generator power has exceeded the limit value 2 for generator overload in mains parallel operation.
Unbalanced load 1	2412	Generator unbalanced load, limit value 1 The generator current has exceeded the limit value 1 for generator unbalanced load.
Unbalanced load 2	2413	Generator unbalanced load, limit value 2 The generator current has exceeded the limit value 2 for generator unbalanced load.
Gen. volt. asymmetry	3907	Voltage asymmetry The generator phase-to-phase voltages have higher differences between each other than the configured limit value.
Ground fault 1	3263	Generator ground current, limit value 1 The measured or calculated ground current has exceeded the limit value 1 for the generator ground current.
Ground fault 2	3264	Generator ground current, limit value 2 The measured or calculated ground current has exceeded the limit value 2 for the generator ground current.
Gen.ph.rot. mismatch	3955	Generator rotating field mismatch The generator rotating field does not correspond with the configured direction.
Gen. PF lagging 1	2337	Generator overexcited, limit value 1 The power factor limit 1 has been exceeded at the generator towards inductive.
Gen. PF lagging 2	2338	Generator overexcited, limit value 2 The power factor limit 2 has been exceeded at the generator towards inductive.
Gen. PF leading 1	2387	Generator underexcited, limit value 1 The power factor limit 1 has fallen below at the generator towards capacitive.
Gen. PF leading 2	2388	Generator underexcited, limit value 2 The power factor limit 2 has fallen below at the generator towards capacitive.
Gen.act.pwr.mismatch	2924	Generator active power mismatch The deviation between the generator power and the active power setpoint has exceeded the limit.
Gen. unloading fault	3124	Generator unloading mismatch The easY-I failed to reduce the generator power below the configured unload limit.

9.6.5.3 Busbar monitoring

Message text	ID	Meaning
Busbar v/f not ok	5123	Busbar voltage or frequency is not ok

Message text	ID	Meaning
		Busbar voltage and frequency are not in range according to the configured limits.

9.6.5.4 Mains monitoring

Message text	ID	Meaning
Mains overfreq. 1	2862	Mains overfrequency, limit value 1 The mains frequency has exceeded the limit value 1 for mains overfrequency.
Mains overfreq. 2	2863	Mains overfrequency, limit value 2 The mains frequency has exceeded the limit value 2 for mains overfrequency.
Mains underfreq. 1	2912	Mains underfrequency, limit value 1 The mains frequency has fallen below the limit value 1 for mains underfrequency.
Mains underfreq. 2	2913	Mains underfrequency, limit value 2 The mains frequency has fallen below the limit value 2 for mains underfrequency.
Mains overvoltage 1	2962	Mains overvoltage, limit value 1 The mains voltage has exceeded the limit value 1 for mains overvoltage.
Mains overvoltage 2	2963	Mains overvoltage, limit value 2 The mains voltage has exceeded the limit value 2 for mains overvoltage.
Mains undervoltage 1	3012	Mains undervoltage, limit value 1 The mains voltage has fallen below the limit value 1 for mains undervoltage.
Mains undervoltage 2	3013	Mains undervoltage, limit value 2 The mains voltage has fallen below the limit value 2 for mains undervoltage.
Mains phase shift	3057	Mains phase shift A mains phase shift, which has exceeded the configured limit, has occurred.
Mains df/dt	3106	Mains df/dt (ROCOF) A mains df/dt, which has exceeded the configured limit, has occurred. Triggering this monitoring function causes the mains decoupling function to trigger.
Mains decoupling	3114	Mains decoupling is initiated One or more monitoring function(s) considered for the mains decoupling functionality has triggered.
Decoupling GCB<->MCB	5147	Decoupling GCB < - > MCB During decoupling there was a change over from the preferred breaker to the other.
Mns.ph.rot. mismatch	3975	Mains rotating field mismatch The mains rotating field does not correspond with the configured direction.
Mains import power 1	3217	Mains import power, limit value 1

Released

Message text	ID	Meaning
		The mains import power has exceeded or fallen below the limit value 1 for mains import power.
Mains import power 2	3218	Mains import power, limit value 2 The mains import power has exceeded or fallen below the limit value 2 for mains import power.
Mains export power 1	3241	Mains export power, limit value 1 The mains export power has exceeded or fallen below the limit value 1 for mains export power.
Mains export power 2	3242	Mains export power, limit value 2 The mains export power has exceeded or fallen below the limit value 2 for mains export power.
Mains PF lagging 1	2985	Mains power factor lagging exceeded, limit value 1 The power factor limit 1 has been exceeded at the mains interchange point towards inductive.
Mains PF lagging 2	2986	Mains power factor lagging exceeded, limit value 2 The power factor limit 2 has been exceeded at the mains interchange point towards inductive.
Mains PF leading 1	3035	Mains power factor leading exceeded, limit value 1 The power factor limit 1 has fallen below at the mains interchange point towards capacitive.
Mains PF leading 2	3036	Mains power factor leading exceeded, limit value 2 The power factor limit 1 has fallen below at the mains interchange point towards capacitive.
Mns act.pwr.mismatch	2934	Mains active power mismatch The deviation between the import/export power and the active import/export power setpoint has exceeded the limit.
Mains volt. incr.	8834	Mains voltage increase monitor has tripped The mains voltage has exceeded for a longer time period the voltage increase criteria.
QV monitoring 1	3288	QV monitoring, delay time 1 The generator reactive power has exceeded the limit with delay time 1.
QV monitoring 2	3289	QV monitoring, delay time 2 The generator reactive power has exceeded the limit with delay time 2.
Time dep. voltage 1	4958	Time-dependent voltage, limit value 1 The measured voltage falls below/exceeds the configured criteria.
Time dep. voltage 2	5022	Time-dependent voltage, limit value 2 The measured voltage falls below/exceeds the configured criteria.
Time dep. voltage 3	4980	Time-dependent voltage, limit value 3 The measured voltage falls below/exceeds the configured criteria.

Released

Message text	ID	Meaning
Active LS mismatch	5105	Active power loadsharing mismatch. The percentage load value of this device is different to the others.
Reactive LS mismatch	5111	Reactive power loadsharing mismatch The percentage load value of this device is different to the others.
Maint. days exceeded	2560	Maintenance days exceeded The generator run time has exceeded the configured number of days since the last maintenance call RESET.
Maint. hrs exceeded	2561	Maintenance hours exceeded The generator run time has exceeded the configured number of operating hours since the last maintenance call RESET.

9.6.5.5 Operating Range Monitoring

Message text	ID	Meaning
		Operating range monitoring alarm. The device stocks because of a logical circumstance. The operating range monitor indicates an alarm with an error number. The number stands for a failed check procedure. For more information refer to chapter "Operating Range Failure".
Oper.range failed 1	2665	Check 1: The easY-I wants close the GCB, but the generator is not within its operating range. • (GCB shall be closed OR Emergency run is active) AND • Inverter is in operation AND • GCB is open AND • Generator is not okay
Oper.range failed 2	2666	Check 2: The easY-I wants close the GCB, but the busbar is not within the generator operating range. • (GCB shall be closed OR Emergency run is active) AND • Inverter is in operation AND • GCB is open AND • Busbar is undefined (Busbar not dead AND not within the operation range)
Oper.range failed 3	2667	Check 3: The easY-I wants close the GCB in breaker transistion mode "Open transition" with GCB and MCB open status. In this condition the busbar is expected as dead, but there is still voltage on busbar measured. • GCB shall be closed AND • Inverter is in operation AND • GCB is open AND • Breaker mode "open transition" is active AND • MCB is open AND • Busbar is okay AND • No GCB in the system is closed

Released

Message text	ID	Meaning
Oper.range failed 4	2668	Check 4: The easY-I wants close the GCB onto a dead busbar. The device cannot close the breaker onto busbar, because there is minimum one neighbor device recognized with a GCB closed. • GCB shall be closed AND • Inverter is in operation AND • GCB is open AND • Generator is okay AND • Busbar is dead AND • Minimum one GCB in the system is closed
Oper.range failed 5	2669	Check 5: The easY-I wants synchronize the GCB, the MCB is closed, but the mains or busbar is not within its operating range. • GCB shall be closed AND • Inverter is in operation AND • GCB is open AND • MCB is closed AND • Breaker mode with GGB is not active AND • Mains OR Busbar is not okay
Oper.range failed 6	2670	Check 6: The easY-I wants close the GGB, but the generator minimum power is not reached. • GGB shall be closed with deadbus closure AND • GGB request minimum power is not available AND • LM Bypass min. power for closing GGB is not active
Oper.range failed 7	2671	Check 7: The easY-I wants close the GGB in the Open Transition Mode, but the generator minimum power is not reached. • GGB shall be closed in breaker mode "open transition" AND • GGB request minimum power isn't available AND • LM Bypass min. power for closing GGB isn't active
Oper.range failed 8	2672	Check 8: The easY-I wants synchronize the GGB, but the generator minimum power is not reached. • Synchronization GGB is active AND • GGB request minimum power is not available AND • LM Bypass min. power for closing GGB is not active
Oper.range failed 9	2673	Check 9: GGB control mode: The MCB or the GGB is closed with min. one neighbour GCB is closed to the busbar. There is a conflict, the external voltage monitoring of the Load Busbar signals a "Dead load busbar", which cannot be the case. Notice: This monitoring is not activ in operating mode STOP. • (MCB is closed OR (GGB is closed AND min. one GCB is closed)) AND • Load busbar monitoring is active AND • Load busbar is dead AND • Breaker mode with GGB is active AND

Message text	ID	Meaning
		• Operation mode STOP is not active
Oper.range failed 10	2674	Check 10: The easY-I wants synchronize the GGB, the MCB is closed, but the mains is not in operating range. Notice: This monitoring is not activ in operating mode STOP. • Mains is not okay AND • MCB is closed AND • GCB is released AND • Breaker mode with GGB is active AND • Operation mode STOP isn't active AND • GGB is open
Oper.range failed 11	2675	Check 11: The easY-I checks the plausibility of generator and busbar, if the inverter is in operation and the GCB is closed, but the operating range of generator OR busbar is not matched. • (Busbar is not okay OR Generator is not okay OR Phase angle difference is > 12°) AND • GCB is closed AND • Inverter is released
Oper.range failed 12	2676	Check 12: The easY-I checks the phase rotation of generator, busbar and mains. If the phase rotation of all systems does not match and a synchronisation shall be executed this will occur. (Synchronisation is blocked) • Synchronisation (GCB, GGB or MCB) shall be executed AND • Phase rotation of all systems does not match

9.6.5.6 Breaker Monitoring

Message text	ID	Meaning
GCB fail to close	2603	GCB failed to close The easY-I has attempted to close the GCB the configured maximum number of attempts and failed.
GCB fail to open	2604	GCB failed to open The easY-I has attempted to open the GCB within the configured time and failed.
GCB syn. timeout	3064	GCB synchronization time exceeded The easY-I has failed to synchronize the GCB within the configured synchronization time.
GCB failure 50BF	10668	GCB failure 50BF Generator current is measured even if the mains repliy signals GCB open.
GGB fail to open	3090	Failed GGB open The easY-I is still receiving the reply "GGB closed" after the GGB open monitoring timer has expired.
GGB fail to close	3089	Failed GGB close

Released

Message text	ID	Meaning
		The easY-I is still receiving the reply "GGB opened" after the configured maximum number of close attempts and failed.
Timeout syn. GGB	3084	GGB synchronization time exceeded The easY-I has failed to synchronize the GGB within the configured synchronization time.
MCB fail to close	2623	MCB failed to close The easY-I has attempted to close the MCB the configured maximum number of attempts and failed. Depending on the configuration, the easY-I will continue to attempt to close the GCB as long as the conditions for closing the MCB are fulfilled.
MCB fail to open	2624	Failed MCB open The easY-I is still receiving the reply MCB closed" after the MCB open monitoring timer has expired.
MCB fail to close	2623	MCB failed to close The GC has attempted to close the MCB the configured maximum number of attempts and failed. Depending on the configuration, the GC will continue to attempt to close the GCB as long as the conditions for closing the MCB are fulfilled.
MCB fail to open	2624	Failed MCB open The GC is still receiving the reply MCB closed" after the MCB open monitoring timer has expired.
MCB syn. timeout	3074	MCB synchronization time exceeded The easY-I has failed to synchronize the MCB within the configured synchronization time.
MCB failure 50BF	10670	MCB failure 50BF There is a mains current measured even the MCB reply signals MCB open.
MCB plausibility	10672	MCB plausibility The number of closed MCBs is different to the number of easYgen and/or easY-I devices in the same segment.
N-cont. reply mism.	5153	Neutral contactor reply mismatch Neutral contactor reply mismatch to the NC command.
DC fail to close	17525	DC breaker failed to close The easY-I has attempted to close the DC breaker with the configured maximum number of attempts and failed.
DC fail to open	17526	DC breaker failed to open The easY-I has attempted to open the DC breaker within the configured time and failed.

9.6.5.7 CANopen Monitoring

Message text	ID	Meaning
CANopen Interface 1	10087	Interface alarm CANopen on CAN bus 1 No Receive Process Data Object (RPDO) is received within the configured time.
CANopen Interface 2	10088	Interface alarm CANopen on CAN bus 2 No message is received from the external expansion board (Node-ID) within the configured time.
CANopen Interface 3	10090	Interface alarm CANopen on CAN bus 3 No Receive Process Data Object (RPDO) is received within the configured time.

9.6.5.8 Ethernet Communication Monitoring

Message text	ID	Meaning
Ethernet issue	11852	Abnormal rate of Ethernet messages. The device detects an abnormal high rate of Ethernet UDP-messages per time scale.
Eth. configuration	15055	Wrong configuration of Ethernet network address performed.

9.6.5.9 Multi-unit Monitoring

Message text	ID	Meaning
Parameter alignment	4073	LDSS parameter mismatch detected The easY-I has detected that not all LDSS parameters are configured identically at all participating units. Refer in the manual to the chapter "Multi-unit Parameter Alignment" to see the relevant LDSS parameter.
Missing easYgen	4059	Missing easYgen At least one easYgen or easY-I is missing. Check the status of the communication diagnostic.
Missing LSx	4069	Missing LSx device in layer 1 region At least one LSx device in layer 1 region is missing. Check the status of the communication diagnostic.
Syst.update easYgen	4074	System update easYgen The communication topology of easYgens and/or easY-I have changed. Check the communication easYgen and/or easY-I.
Syst.update LSx	4075	System update LSx device The communication topology of LSx devices have changed. Check the communication LSx devices.
Syst.update Layer1	4197	System update Layer 1

Released

Message text	ID	Meaning
		The communication topology within of communication Layer 1 has changed. Check the communication easYgen and/or easY-I respectively LSx devices in Layer 1.
EthB EthC redundancy	2430	The Load share interface Ethernet B / Ethernet C redundancy is lost. The device warns that the Ethernet redundancy B/C is lost. Check the communication diagnostic screen of the according layer.
CAN EthA redundancy	2439	The Load share interface CAN / Ethernet A redundancy is lost. The device warns that the Ethernet redundancy CAN/EthA is lost. Check the communication diagnostic screen of the layer 1.

9.6.5.10 Flexible Limits Monitoring

Message text	ID	Meaning
		40 flexible limits. This text may be assigned customer defined. The Indication here is the default text.
Flexible limit 1	10018	
Flexible limit 2	10019	
Flexible limit 3	10020	
Flexible limit 4	10021	
Flexible limit 5	10022	
Flexible limit 6	10023	
Flexible limit 7	10024	
Flexible limit 8	10025	
Flexible limit 9	10026	
Flexible limit 10	10027	
Flexible limit 11	10028	
Flexible limit 12	10029	
Flexible limit 13	10030	
Flexible limit 14	10031	
Flexible limit 15	10032	
Flexible limit 16	10033	
Flexible limit 17	10034	
Flexible limit 18	10035	
Flexible limit 19	10036	
Flexible limit 20	10037	
Flexible limit 21	10038	
Flexible limit 22	10039	
Flexible limit 23	10040	
Flexible limit 24	10041	
Flexible limit 25	10042	

Released

Message text	ID	Meaning
Flexible limit 26	10043	
Flexible limit 27	10044	
Flexible limit 28	10045	
Flexible limit 29	10046	
Flexible limit 30	10047	
Flexible limit 31	10048	
Flexible limit 32	10049	
Flexible limit 33	10050	
Flexible limit 34	10051	
Flexible limit 35	10052	
Flexible limit 36	10053	
Flexible limit 37	10054	
Flexible limit 38	10055	
Flexible limit 39	10056	
Flexible limit 40	10057	

9.6.5.11 Digital Inputs Monitoring

Message text	ID	Meaning
		Discrete input 1-12, energized / de-energized The actual state of the monitored discrete input is energized / de-energized (depending on the configuration) for at least the configured time. This text may be assigned customer defined. The Indication here is the default text.
Discrete input 1	10600	
Discrete input 2	10601	
Discrete input 3	10602	
Discrete input 4	10603	
Discrete input 5	10604	
Discrete input 6	10605	
Discrete input 7	10607	
Discrete input 8	10608	
Discrete input 9	10609	
Discrete input 10	10610	
Discrete input 11	10611	
Discrete input 12	10612	

Released

9.6.5.12 External Digital Inputs Monitoring

Message text	ID	Meaning
		External discrete input 1-32, energized / de-energized The actual state of the monitored discrete input is energized / de-energized (depending on the configuration) for at least the configured time. This text may be assigned customer defined. The Indication here is the default text.
Ext. Discrete input 1	16360	
Ext. Discrete input 2	16361	
Ext. Discrete input 3	16362	
Ext. Discrete input 4	16364	
Ext. Discrete input 5	16365	
Ext. Discrete input 6	16366	
Ext. Discrete input 7	16367	
Ext. Discrete input 8	16368	
Ext. Discrete input 9	16369	
Ext. Discrete input 10	16370	
Ext. Discrete input 11	16371	
Ext. Discrete input 12	16372	
Ext. Discrete input 13	16373	
Ext. Discrete input 14	16374	
Ext. Discrete input 15	16375	
Ext. Discrete input 16	16376	
Ext. Discrete input 17	16202	
Ext. Discrete input 18	16212	
Ext. Discrete input 19	16222	
Ext. Discrete input 20	16232	
Ext. Discrete input 21	16242	
Ext. Discrete input 22	16252	
Ext. Discrete input 23	16262	
Ext. Discrete input 24	16272	
Ext. Discrete input 25	16282	
Ext. Discrete input 26	16292	
Ext. Discrete input 27	16302	
Ext. Discrete input 28	16312	
Ext. Discrete input 29	16322	
Ext. Discrete input 30	16332	
Ext. Discrete input 31	16342	

Message text	ID	Meaning
Ext. Discrete input 32	16352	

9.6.5.13 Wire Break Monitoring (of internal and external analog inputs)

Message text	ID	Meaning
		Wb: Analog input 1-3, wire break (internal analog inputs) Wb: External Analog input 1-16, wire break (external analog inputs) During the measurement of the analog input a wire break was detected. The text begins with Wb: for wire break. The second part of the text may be assigned customer defined. The Indication here is the default text.
Wb:Analog input 1	10014	
Wb:Analog input 2	10015	
Wb:Analog input 3	10060	
Wb:External Analog input 1	10221	
Wb:External Analog input 2	10222	
Wb:External Analog input 3	10223	
Wb:External Analog input 4	10224	
Wb:External Analog input 5	10225	
Wb:External Analog input 6	10226	
Wb:External Analog input 7	10227	
Wb:External Analog input 8	10228	
Wb:External Analog input 9	10229	
Wb:External Analog input 10	10230	
Wb:External Analog input 11	10231	
Wb:External Analog input 12	10232	
Wb:External Analog input 13	10233	
Wb:External Analog input 14	10234	
Wb:External Analog input 15	10235	
Wb:External Analog input 16	10236	

Released

9.6.5.14 Free Configurable Alarms

Message text	ID	Meaning
		16 free configurable Alarms. The alarm text is configurable. The indication here is the default text.
Free alarm 1	8120	
Free alarm 2	8124	
Free alarm 3	8128	
Free alarm 4	8132	
Free alarm 5	8136	
Free alarm 6	8140	
Free alarm 7	8144	
Free alarm 8	8148	
Free alarm 9	8154	
Free alarm 10	8158	
Free alarm 11	8165	
Free alarm 12	8170	
Free alarm 13	8174	
Free alarm 14	8178	
Free alarm 15	8182	
Free alarm 16	8186	

9.6.5.15 Miscellaneous Monitoring

Message text	ID	Meaning
Bat. overvoltage 1	10007	Battery overvoltage, limit value 1 The battery voltage has exceeded the limit value 1 for battery overvoltage.
Bat. overvoltage 2	10008	Battery overvoltage, limit value 2 The battery voltage has exceeded the limit value 2 for battery overvoltage.
Bat. undervoltage 1	10005	Battery undervoltage, limit value 1 The battery voltage has fallen below the limit value 1 for battery undervoltage.
Bat. undervoltage 2	10006	Battery undervoltage, limit value 2 The battery voltage has fallen below the limit value 2 for battery undervoltage.
Gen. AC wiring	10093	AC wiring issue of Generator voltages One or more of the generator voltages are wrong wired (detected by plausibility checking of frequencies).
Busbar 1 AC wiring	10094	AC wiring issue of Busbar voltages One or more of the busbar voltages are wrong wired (detected by plausibility checking of frequencies).

Message text	ID	Meaning
Mains AC wiring	10095	AC wiring issue of Mains voltages One or more of the mains voltages are wrong wired (detected by plausibility checking of frequencies).
PV disconnect level	8927	The PV source level drives generator into revers power. The generator power has reached a reverse power with a critical rate. The PV source penetration is interrupted.
GC common alarm	11849	Common Group Controller alarm A "GC common alarm" is reported from the connected GC. Check the GC.
CPU overload R1 trip	14799	A CPU overload has occured. With the CPU overload the self-test relais R1 was tripped.
Meas.difference 4105	5141	Measurement difference 4105 The own 4105 relevant mains measurement is different to the 4105 partner.
Missing member 4105	5129	Missing 4105 diagnostic partner The easY-I finds no partner anymore to do 4105 diagnostic.
Para.alignment 4105	5135	Parameter alignment 4105 failure The own 4105 relevant parameter are different to the 4105 partner.

9.6.5.16 Inverter Monitoring

Message text	ID	Meaning
		37 Inverter Alarms. This text may be assigned by customer according to the Modbus mapping AM 55.x. (Where x is the number of the inverter alarm.) The Indication here is the default text.
Inverter alarm 1	17993	
Inverter alarm 2	17994	
Inverter alarm 3	17995	
Inverter alarm 4	17996	
Inverter alarm 5	17997	
Inverter alarm 6	17998	
Inverter alarm 7	17999	
Inverter alarm 8	18000	
Inverter alarm 9	18001	
Inverter alarm 10	18002	
Inverter alarm 11	18003	
Inverter alarm 12	18004	
Inverter alarm 13	18005	
Inverter alarm 14	18006	
Inverter alarm 15	18007	

Released

Message text	ID	Meaning
Inverter alarm 16	18008	
Inverter alarm 17	18009	
Inverter alarm 18	18010	
Inverter alarm 19	18011	
Inverter alarm 20	18012	
Inverter alarm 21	18013	
Inverter alarm 22	18014	
Inverter alarm 23	18015	
Inverter alarm 24	18016	
Inverter alarm 25	18017	
Inverter alarm 26	18018	
Inverter alarm 27	18019	
Inverter alarm 31	18023	
Inverter alarm 32	18024	
Inverter alarm 33	18025	
Inverter alarm 34	18026	
Inverter alarm 35	18027	
Inverter alarm 41	18033	
Inverter alarm 42	18034	
Inverter alarm 49	18041	
Inverter alarm 50	18042	
Inverter alarm 51	18043	

9.6.5.17 DC Source Monitoring (Individual rack faults)

Message text	ID	Meaning
		These alarms indicate that a specific rack has at least one fault. For this purpose, 4 registers are evaluated which must be assigned to the corresponding data of the DC source with the Modbus Mapper. If at least one bit of one of these registers is true, "Fault rack x" with alarm class A is indicated and the corresponding LogicsManager becomes TRUE. These alarms are self acknowledging. The corresponding registers and LogicsManagers are listed below: Fault rack 1: registers 18372 to 18375, LM 56.31 Fault rack 2: registers 18382 to 18385, LM 56.32 Fault rack 3: registers 18392 to 18395, LM 56.33 Fault rack 4: registers 18402 to 18405, LM 56.34 Fault rack 5: registers 18412 to 18415, LM 56.35 Fault rack 6: registers 18422 to 18425, LM 56.36

Message text	ID	Meaning
		Fault rack 7: registers 18432 to 18435, LM 56.37 Fault rack 8: registers 18442 to 18445, LM 56.38
Fault rack 1	18340	
Fault rack 2	18341	
Fault rack 3	18342	
Fault rack 4	18343	
Fault rack 5	18344	
Fault rack 6	18345	
Fault rack 7	18346	
Fault rack 8	18347	

9.6.5.18 DC Source Monitoring (System alarms)

Message text	ID	Meaning
		35 DC Source alarms. This text may be assigned by customer according to the Modbus mapping of AM 55.65 to 55.99. The Indication here is the default text.
DC Source alarm 1	18245	
DC Source alarm 2	18246	
DC Source alarm 3	18247	
DC Source alarm 4	18248	
DC Source alarm 5	18249	
DC Source alarm 6	18250	
DC Source alarm 7	18251	
DC Source alarm 8	18252	
DC Source alarm 9	18253	
DC Source alarm 10	18254	
DC Source alarm 11	18255	
DC Source alarm 12	18256	
DC Source alarm 13	18257	
DC Source alarm 14	18258	
DC Source alarm 15	18259	
DC Source alarm 16	18260	
DC Source alarm 17	18261	
DC Source alarm 18	18262	
DC Source alarm 19	18263	
DC Source alarm 20	18264	
DC Source alarm 21	18265	
DC Source alarm 22	18266	

Released

Message text	ID	Meaning
DC Source alarm 23	18267	
DC Source alarm 24	18268	
DC Source alarm 25	18269	
DC Source alarm 26	18270	
DC Source alarm 27	18271	
DC Source alarm 28	18272	
DC Source alarm 29	18273	
DC Source alarm 30	18274	
DC Source alarm 31	18275	
DC Source alarm 32	18276	
DC Source alarm 33	18277	
DC Source alarm 34	18278	
DC Source alarm 35	18279	

9.7 Formulas

9.7.1 Conversion Factors

Temperature

°C → °F	T [°F] = (T [°C] x 1.8) + 32
°F → °C	T [°C] = (T [°F] – 32) / 1.8

Pressure

bar → psi	P [psi] = P [bar] x 14.503
psi → bar	P [bar] = P [psi] / 14.503

9.7.2 Load Dependent Start Stop (LDSS) Formulas

The following formulas are used by the load-dependent start/stop function to determine whether a genset is to be started or stopped.

Abbreviations

Abbreviation	Parameter	
$PGN_{\text{real active}}$		Momentary active generator real power on the busbar
$P_{\text{rated active}}$		Momentary active generator rated power on the busbar
Preserve		$P_{\text{rated active}} - PGN_{\text{real active}}$
$P_{\text{reserve islanded}}$	5760	Minimum permissible reserve power on busbar in islanded operation

Abbreviation	Parameter	
$P_{hysteresis\ IOP}$	5761	hysteresis in islanded operation
$PMN_{\ setpoint}$		Export / import power control setpoint
$PMN_{\ real}$		Momentary active power at the interchange point
$PMOP_{\ minimum}$	5767	Minimum requested generator load
$P_{reserve\ parallel}$	5768	Minimum permissible reserve power on busbar in mains parallel operation
$P_{hysteresis\ MOP}$	5769	$P_{hysteresis}$ in mains parallel operation
$P_{max.\ load\ islanded}$	5762	Maximum permissible generator load in islanded operation
$P_{min.\ load\ islanded}$	5763	Minimum permissible generator load in islanded operation
$P_{max.\ load\ parallel}$	5770	Maximum permissible generator load in mains parallel operation
$P_{min.\ load\ parallel}$	5771	Minimum permissible generator load in mains parallel operation

LDSS mode "Reserve Power"

Task	Formula
Islanded Operation	
Changing the Engine Combination to Increase Rated Power	$PGN_{real\ active} + P_{reserve\ islanded} > P_{rated\ active}$
Changing the Engine Combination to Reduce Rated Power	$PGN_{\ real\ active} + P_{reserve\ islanded} + P_{hysteresis\ IOP} < P_{rated\ active}$
Mains Parallel Operation (Import/Export Control)	
Starting the First Engine Combination (no engine supplies the busbar)	$PMN_{setpoint} - PMN_{\ real} + PGN_{\ real\ active} > PMOP_{\ minimum}$
Changing the Engine Combination to Increase Rated Power	$PMN_{setpoint} - PMN_{\ real} + PGN_{\ real\ active} + P_{reserve\ parallel} > P_{rated\ active}$
Changing the Engine Combination to Reduce Rated Power	$PMN_{setpoint} - PMN_{real} + PGN_{real\ active} + P_{reserve\ parallel} + P_{hysteresis\ MOP} < P_{rated\ active}$
Stopping the Last Engine Combination (load close to minimum load)	$PMN\ setpoint - PMN_{\ real} + PGN_{\ real\ active} < PMOP_{minimum} - P_{hysteresis\ MOP}$

LDSS mode "Generator Load"

Task	Formula
Islanded Operation	
Changing the Engine Combination to Increase Rated Power	$PGN_{\ real\ active} > P_{max.\ load\ islanded}$
Changing the Engine Combination to Reduce Rated Power (except dynamic setpoint is not matched)	$PGN_{\ real\ active} < P_{min.\ load\ islanded}$
Mains Parallel Operation (Import/Export Control)	
Starting the First Engine Combination (no engine supplies the busbar)	$PMN_{setpoint} - PMN_{\ real} + PGN_{\ real\ active} > PMOP_{minimum}$
Changing the Engine Combination to Increase Rated Power	$PGN_{real\ active} > P_{max.\ load\ parallel}$
Changing the Engine Combination to Reduce Rated Power	$PGN_{\ real\ active} < P_{min.\ load\ parallel}$

Released

Task	Formula
(except dynamic setpoint is not matched)	
Stopping the Last Engine Combination (load close to minimum load)	PMN setpoint – PMN_{real} + $PGN_{real\ active}$ < $PMOP_{minimum}$ – $P_{hysteresis}$ MOP

LDSS dynamic

Dynamic characteristic		= [(max. generator load – min. generator load) * dynamic] + (min. generator load)
Dynamic power level		= (dynamic characteristic) * (generator rated power)
Constants	Low dynamic	= 25 %
	Moderate dynamic	= 50 %
	High dynamic	= 75 %

☼

Example for moderate dynamic

- Dynamic characteristic = [(80 % – 40 %) * 50 %] + (40 %) = 60 %
- Dynamic power level = (60 %) * (200 kW) = 120 kW

Released

10 List Of Abbreviations

AC	Alternating current
AI	Analog input
AM	AnalogManager
AO	Analog output
AVR	Automatic voltage regulator
BDEW	German community of 1,800 companies represented by the German Association of Energy and Water Industries (Bundesverband der Energie- und Wasserwirtschaft)
BMS	Battery management system
CB	Circuit Breaker
CCW	Counter clock wise
CL	Code Level
COB-ID	Communication Object Identifier (CAN)
CT	Current Transformer
CW	Clock wise
DBCL	Dead bus closure
DI	Discrete Input
DO	Discrete (Relay) Output
DEF	Diesel exhaust fluid
DPF	Diesel Particulate Filter
ECU	Engine Control Unit
EG	Name of device ‘easYgen’
EIO	Emergency inducement override
EX-10	Woodward excitation module “easYgen | exciter 10"
FMI	Failure Mode Indicator (J1939)
FRT	Fault ride through
GAP	Graphical Application Programmer (GAP™)
GC	Name of device ‘Group Controller’
GCB	Generator Circuit Breaker
GCP	Woodward device series (Genset Control) - not preferred for new design!
GGB	Generator Group Breaker
GOV	(speed) Governor; rpm regulator

Released

Hc	Hydrocarbon
HMI	Human Machine Interface e.g., a front panel with display and buttons for interaction
I	Current
IOP	Island Operation
LDSS	Load-Dependent Start/Stop operation
LM	LogicsManager©
LS	Load share
LSG	Woodward device: Load Share Gateway (communication converter)
LS5	Name of a device LS-5
LSx	Name of a device LS-5 or LS-6XT
MCB	Mains Circuit Breaker
MFR	Woodward device series (multifunctional relays) - not preferred for new design!
MOP	Mains Operation in Parallel
MPU	Magnetic Pickup Unit
MS	Mobile systems
N.C.	Normally Closed (break) contact
N.O.	Normally Open (make) contact
NC	Neutral Contactor
NOx	Nitrogen oxide
NW	Network
OC	Occurrence Count
P	Active power
P/N	Part Number
PDO	Process Data Object (CAN)
PF	Power Factor
PGN	Parameter Group Number (J1939)
PID	Proportional and Integral and Differential
PLC	Programmable Logic Control
PT	Potential (Voltage) Transformer
PV	Photovoltaic
Q	Reactive power
S	Apparent power

Released

SAE	Society of Automotive Engineers (defines J1939 CAN protocol standard)
SCR	Selective Catalytic Reduction
SDO	Service Data Object (CAN)
S/N	Serial Number
SNTP	Simple Network Time Protocol
SOC	State of charge
SOH	State of health
SP	Setpoint
SPN	Suspect Parameter Number (J1939)
V	Voltage
va	Unit of apparent power (S). Often also as kva
var	Unit of reactive power (Q). Often also as kvar
W	Unit of active power (P). Often also as kW
Wb	Wire break

Released

Index

A

Alarms 531
Free configurable 533
AnalogManager sample 628, 629

B

BDEW 468
Battery
Monitoring 540, 542

C

CAN
Monitoring 535, 536, 538
Contact person 27
Critical Mode 372
Cust. Buttons
customize 40
Customer Service 27

D

DC Breaker
Configuration 189
DC Source
Balancing 196
Charging 192
Configuration 191
Monitoring 509
DC breaker 524
Data Identifiers 892
Droop 325

Released

E

Engine/Mains
Active Power Mismatch . . . 503
Ethernet
Monitoring . . . 539

F

Front Panel . . . 35

G

GCB . . . 512
Application . . . 257
Synchronization . . . 515
GCB 50BF . . . 513
GGB . . . 516
Application . . . 264
GGB Handling . . . 250
Generator
Ground Fault . . . 444
Inverse Time-Overcurrent . . . 419
Lagging Power Factor . . . 439
Overfrequency . . . 414
Overvoltage . . . 408
Phase Rotation . . . 448
Reverse/Reduced Power . . . 429
Unbalanced Load . . . 431
Underfrequency . . . 416
Undervoltage . . . 410
Unloading Mismatch . . . 438
Voltage asymmetry . . . 412
Grid Code . . . 468

Released

H

HMI 34
Translation Tool 151
Home Screen 39, 114

I

IOP 388
Intended use 33
Inverter
Active Power Mismatch 437
Configuration 185
Monitoring 450
islanded Parallel Operation 388

L

LDSS 377
Load Control 337
Load Dependent Start Stop 377
Load Share Control 313
Localization Tool (for customized language) 151

M

MCB 518
Application 269
MOP 394
Mains
Blocking protection 456
Change Of Frequency 493
Decoupling 459
Export Power 502
General Mains Operating Range 457
Import Power 500

Released

Lagging Power Factor . . . 505
Leading Power Factor . . . 507
QV Monitoring . . . 490
Reconnecting Mains Operating Range . . . 459
Time-Dependent Voltage . . . 479
Underfrequency . . . 471
Undervoltage . . . 475
Voltage Increase . . . 477
Voltage Phase Rotation . . . 498
Mains Parallel Operation . . . 394
Measurement
Parameters . . . 555
Modbus
Master . . . 783
Modbus Protocol . . . 571
Telegram Mapper . . . 781

O

Operating Range Failure . . . 550

P

PID Control . . . 360
PV Photovoltaic
Configuration . . . 357
Monitoring load reference . . . 543
Personnel . . . 28
Power Factor Control . . . 288
Reactive Power Q(P) . . . 307
Reactive Power Q(V) . . . 303
Protective equipment . . . 32

S

Service . . . 27

Released

Symbols
in the instructions 25
System Update 666
Diagnostic Screens 668
Monitoring 549

T

Toolkit 144

U

Use 33

V

VDE-AR-N 4105 464
Voltage Control 282

W

Warranty 27

Released



Woodward GmbH
Handwerkstraße 29 — 70565 Stuttgart — Germany
Phone +49 (0) 711 789 54-510
Fax +49 (0) 711 789 54-101
stgt-info@woodward.com