WOODWARD



MotoHawk Control Solutions

ECM-0555-080-0701-F **Engine Control Module**

(Part No. 1751-6396)

Description

The ECM-0555-080-0701-F electronic control unit is a rugged embedded control system capable operating in harsh automotive, marine, and off-highway applications. Over 300,000 successful marine applications prove the capability of this module. Based on a proven microprocessor, the ECM-0555-080-0701-F is capable of delivering complex control strategies. The onboard floating point unit and the high clock frequency allow software to be developed in shorter times. Dual CAN 2.0B datalinks ensure interoperability with other system components.

The ECM-0555-080-0701-F module is part of the ControlCore[®] family of embedded control systems. MotoHawk Control Solutions' ControlCore operating system, MotoHawk[®] code-generation product, and MotoHawk's suite of development tools enable rapid development of complex control systems.

IMPORTANT Woodward does not warranty these ECMs based on information supplied in this datasheet, but only with an express and specific production supply agreement based on customer's operating mode. Information in this datasheet is subject to change without prior notice. Please contact MotoHawk Control Solutions sales for more information.

- Microprocessor: Freescale MPC555. 40 MHz
- Memory: 448K Flash, 26K RAM, 8K EEPROM, 128Kx8 parallel EEPROM (ECM-0555-080-0702-C)
- **Operating Voltage:** 9-16 Vdc
- Operating Temperature: -40 to +105 °C
- Sealed connectors • operable to 10 ft (3 m) submerged
- Inputs: • 19 Analog **3 Low Frequency** Digital 1 VR Frequency Up to 2 Hall Effect Frequency **Dual Sensor Wide** Band Knock Detection
 - 1 Emergency Stop

• Outputs:

- 12x 3 A Peak/1 A Hold Injector Drivers 8x TTL Level Ignition System 6x 6 A Low Side PWM 1x 5 A Discrete
 - H-Bridge
- 1x 5 A PWM H-Bridge
- 1x Relay Driver (Main Power)
- 2x 1.5 A Low Side PWM
- Datalinks: 2 CAN 2.0B Channels 1 RS-485 Channel

1-Input Signal Conditioning

1.1 ECUP (A1), DRVP (B17, B18), DRVG (C15, C16, C24)

Power (Key) switch input ECUP supplies module power to initiate the process under control. The DRVP inputs are wired to the Main Power Relay which will supply the process while the MPRD signal is asserted and will hold the module power on after the ECUP signal is removed until the MPRD signal is released by the application (see below). Inputs are monitored by the processor. The DRVG inputs are the system (battery) ground connections.

ADC inputs are the system (battery) ground connections. DRVG C16 2.21K Process Power DRVG C24 DRVP \forall Vcc B17, B18 STOP MPRD Vbatt (ECUP A1 Reg B4 STOP B23 10K erer ECUP ADC A1 ON/KEY 2.21K Ū 1.2 XDRP, XDRP B 2.21K (A23, B24) XDRP X Cn-Pn ADC The XDRP monitors are scaled for 10 V 5 V = 512 counts. 2.21K 10 nF (See Sec. 2.1) 1.3 AN1M...AN3M, 33K ANnM: XN ADC (A3, A4, A5) These inputs are 10-bit 0–5 V ADC's, τ = 1 ms. 51.1K 0.033uF They are intended for pressure sensors. ∇ 1.4 AN4M...AN8M 33K ADC ANnM XN (A6, A7, A8, A9, A10) These inputs are 10-bit 0–5 V ADC's, τ = 1 ms. 220K 0.033uF They are intended for potentiometers. \Diamond 1.5 AN9M...AN12M Vcc (A14, A15, A16, A17) These inputs are 10-bit 0–5 V ADC's, τ = 1 ms. 1K They are intended for variable resistance sensors such as 33K thermistors. ANnM XN - ADC 0.033uF

See Freescale MPC555 datasheet for description of processor resources.


-Ю-

10K


DRVP B18


DRVP B17

DRVG C15

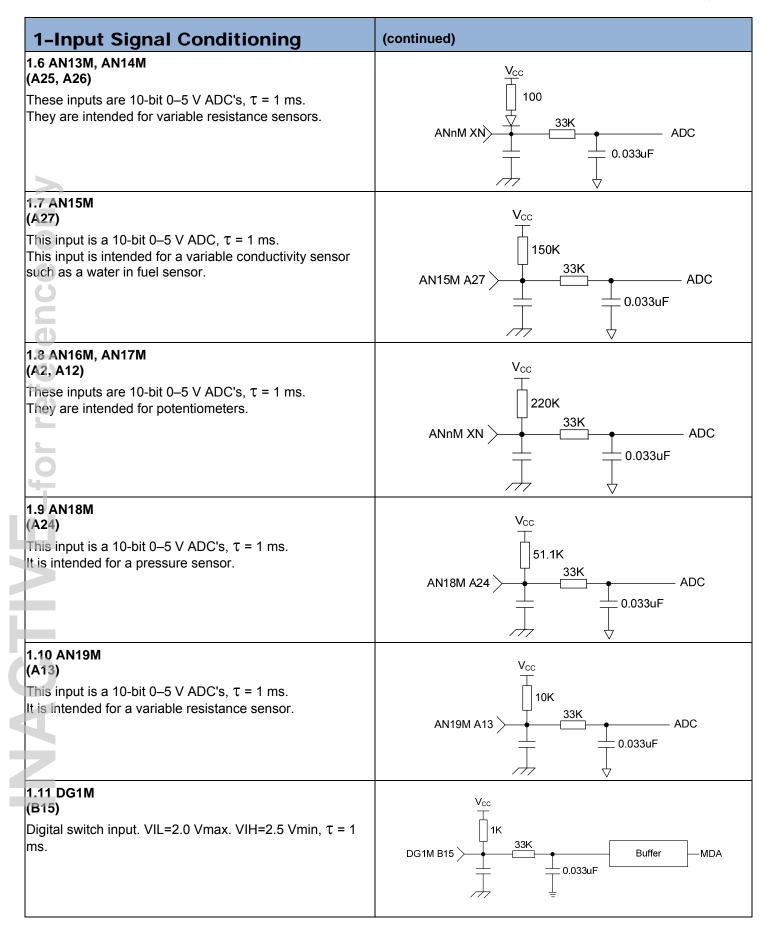

1-Input Signal Conditioning	(continued)
1.12 DG2M, DG4M (B16, B3) Digital switch input. VIL=2.0 Vmax. VIH=2.5 Vmin, τ = 5.1 μs.	DGnM XN
1.13 STOP (B23) This is the emergency stop input. Switching to ground will disable the fuel pump and spark coil outputs. Note: Loss of ECUP will also trigger the STOP function.	ECUP TIK STOP B23 TO FUELA & EST'S
1.14 CNK+, CNK-, CNK_DG (B13, B5, B14) CNK+ and CNK- are variable reluctance sensor inputs. CNK_DG is a switch input for a Hall Effect sensor or switch to ground. Only one should be wired in at a time.	CNK+BI3 CNK+BI3 CNK-BS CNK-BS CNK-DS CNK-DS CNK-DS CNK-DS CNK-DS CNK-DS CNK-DS CNK-BI3 CNK
1.15 CAM_DG (B6) CAM_DG is a switch input for a Hall Effect sensor or switch to ground.	CAMDG B6
1.16 EK0P, EK0N, EK1P, EK1N (A29, A19, A30, A20) These inputs are for wide band piezoelectric knock sensors.	EKOP A29 PROSAK IC

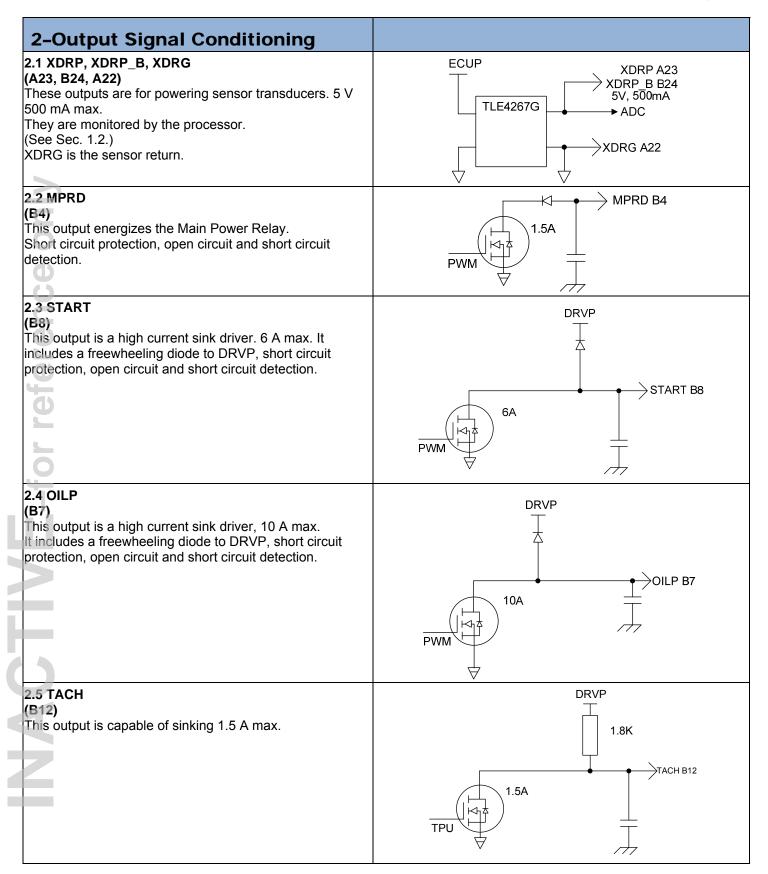

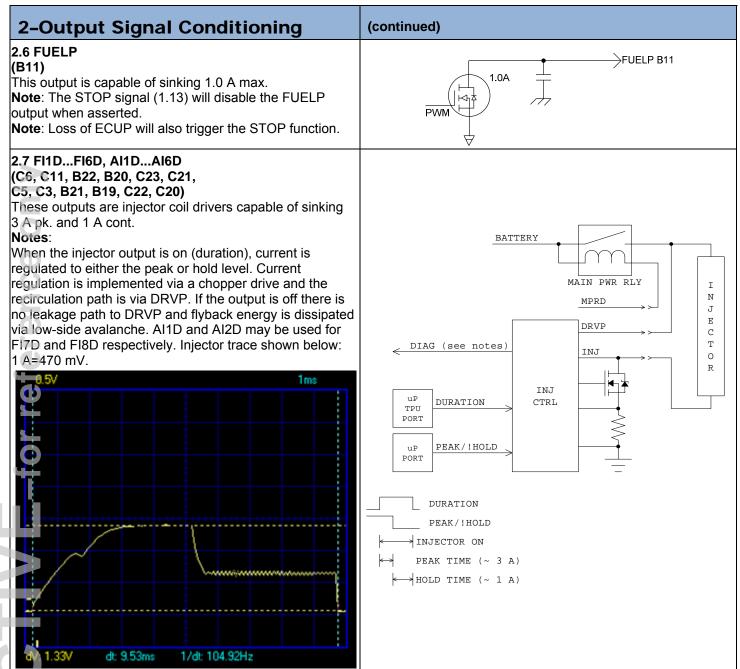



NA

		_
Woodward	36314	p.7

2-Output Signal Conditioning	(continued)
2.8 EST1EST8 (B2, C8, B10, C7, B9, C12, C13, C14) These are TTL level outputs. Note: Since EST_RTN (2.13) is a direct path to the ECM ground care must be taken not to introduce ground loops. EST_RTN is not designed to carry any significant current; it is a reference only. It should be open circuit unless the smart coil electronics provides an isolated logic ground reference. Care must also be taken not to introduce noise on EST_RTN (2.9). Electrical transients on EST_RTN can cause module upsets. The STOP signal (1.13) will disable these outputs when asserted. Note: Loss of ECUP (1.1) will also trigger the STOP function.	5 V 130K TPU PORT PORT EST_CTRL DIAG (see notes)
2.9 EST_RTN (B1) Low current ground reference for SmartCoils.	EST_RTN B1

3-Communications	
3.1 CAN1+, CAN1- (A11, A21) CAN1 also useful for programming the unit.	CAN 2.0B, Standard or Extended ID, up to 1 Mbps.
3.2 SCL+, SCL- (A28, A18) RS-485 is also used for programming the unit, but not when applications use this channel.	RS-485, programmable baud rate 1200 - 57600. 8 Bits, No parity, 1 Stop Bit.

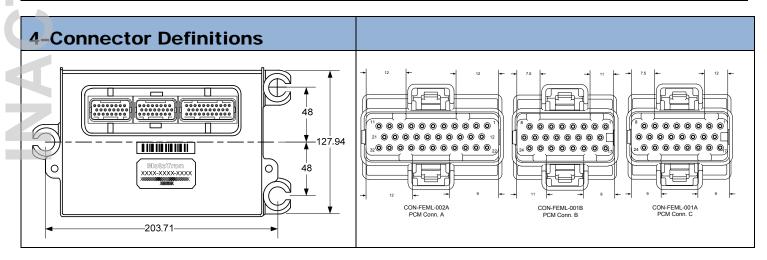

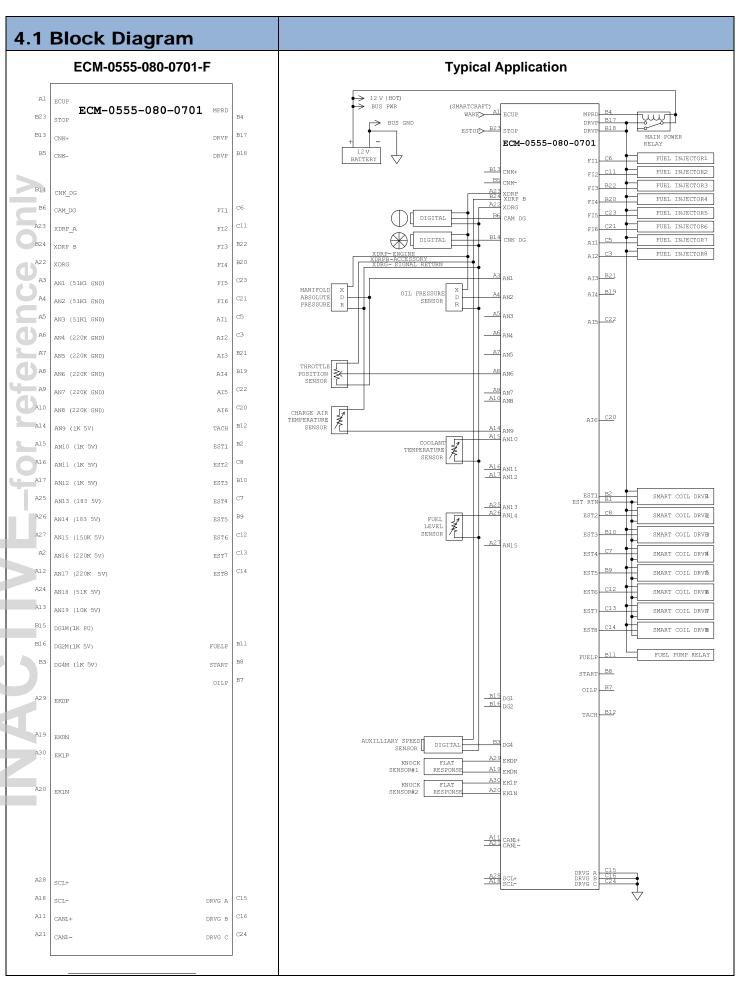

5-Connector Pinouts			5.1 Resource by Connector Pin		
Pin # ECM	ControlCore Resource Name	Function Name	Notes	Wire Number Color Code	
A1	ECUP	ECM Power	Power to Module	1 Purple/White	
A2	AN16	Potentiometer Input	220K Pull Up	2 White/Yellow	
A3	AN1	Pressure Input	51K Pull Down	3 Yellow	
A4	AN2	Pressure Input	51K Pull Down	4 Blue/Black	
A5	AN3	Pressure Input	51K Pull Down	5 White/ Orange	
A6	AN4	Potentiometer Input	220K Pull Down	6 Light Blue/White	
A7	AN5	Potentiometer Input	220K Pull Down	7 White/Yellow	
A8	AN6	Potentiometer Input	220K Pull Down	8 Brown/White	
A9	AN7	Potentiometer Input	220K Pull Down	9 Yellow/Pink	
A10	AN8	Potentiometer Input	220K Pull Down	10 Red/Pink	
A11	CAN1+	Serial Communications	Terminating Resistance Required	11 White	
A12	AN17	Potentiometer Input	220K Pull Up	12 White/Red	
A13	AN19	Variable Resistance Input (e.g.: thermistor)	10K Pull Up	13 Tan/Orange	
A14	AN9	Variable Resistance Input	1K Pull Up	14 Tan	
A15	AN10	Variable Resistance Input	1K Pull Up	15 Tan/Green	
A16	AN11	Variable Resistance Input	1K Pull Up	16 Green	
A17	AN12	Variable Resistance Input	1K Pull Up	17 Brown	
A18	SCL-	RS-485 LO		18 White/Dark Blue	
A19	EK0N	Knock Sensor Negative	Motorola PROSAK	19 Black/Red	
A20	EK1N	Knock Sensor Negative	Compatible	20 Yellow/Orange	
A21	CAN1-	Serial Communications	Terminating Resistance Required	21 Dark Blue	
A22	XDRG	Transducer Ground	Return for Transducers	22 Black/ Orange	
A23	XDRP	Transducer Power (5 V)	500 mA Source for Transducers	23 Purple/ Yellow	
A24	AN18	Pressure Input	51K Pull Up	24 Red/Purple	
A25	AN13	Variable Resistance Input	180 Ω Pull Up	25 Light Blue/ Black	
A26	AN14	Variable Resistance Input	180 Ω Pull Up	26 Pink/Black	
A27	AN15	Variable Resistance Input	150 Ω Pull Up	27 Orange/Pink	
A28	SCL+	RS-485 HI		28 Dark Blue/ White	
A29	EK0P	Knock Sensor Positive	Motorola PROSAK	29 White/Light Blue	
A30	EK1P	Knock Sensor Positive	Compatible	30 White/Black	
A31		No Internal Occurrentia		31 Yellow	
A32		No Internal Connections		32 Brown	


Pin # ECM	ControlCore Resource Name	Function Name	Notes	Wire Number Color Code
B1	EST_RTN	Electronic Spark Timing Return	Low Current Return from Spark Coils	33 Black/Green
B2	EST1	Electronic Spark Timing	SmartCoil Driver	34 Green/Black
B3	DG4	Discrete Switch, Frequency, IRQ	1K Pull Up	35 Gray/Dark Blue
B4	MPRD	Main Power Relay Driver	Wire to Main Power Relay Coil	36 Yellow/Purple
B5	CNK-	Crank Position LO	Variable Reluctance Sensor Compatible with LM1815	37 White
B6	CAM_DG	Hall Effect Cam Sensor	150K Pull Up	38 White/Purple
B7	OILP	Oil Pump	20 A	39 Light Blue/Black
B8	START	Starter Solenoid Relay	High Current (6 A)	40 Yellow/Black
B9	EST5	Electronic Spark Timing	SmartCoil Driver	41 Green/Purple
B10	EST3	Electronic Spark Timing	SmartCoil Driver	42 Green/Brown
B11	FUELP	FUEL Pump	PWM	43 Orange
B12	TACH	Tachometer Output	1.8K Pull Up	44 Gray
B13	CNK+	Crank Position HI	Variable Reluctance Sensor Compatible with LM1815	45 Red
B14	CNK_DG	Hall Effect Crank Sensor	150K Pull Up	46 White/Brown
B15	DG1	Discrete Switch, Frequency, IRQ	1K Pull Up	47 Black/Blue
B16	DG2	Discrete Switch, Frequency, IRQ	1K Pull Up	48 Orange/Black
B17, 18	DRVP	Driver Power (VBATT)	Power to Module and Loads	49 & 50 Red/Blue
B19	Al4D	Air Injector 4 Driver		51 Yellow/White
B20	FI4D	Fuel Injector 4 Driver	$2 \wedge nook/1 \wedge hold$	52 Pink/Light Blue
B21	AI3D	Air Injector 3 Driver	3 A peak/1 A hold	53 Orange/White
B22	FI3D	Fuel Injector 3 Driver		54 Pink/Dark Blue
B23	STOP	Discrete Switch	1K Pull Up to ECUP, 15K Pull Down, Wire to Ground via E-STOP Switch	55 Black/Yellow
B24	XDRP_B	Transducer Power B (5 V)	500 mA Source for Transducers	56 Purple/Pink

5-Connector Pinouts			5.1 Resource by Connector Pin (continued)	
Pin # ECM	ControlCore Resource Name	Function Name	Notes	Wire Number Color Code
C1		No Internal Composition		57 Yellow/Orange
C2		No Internal Connection		58 Brown/White
C3	AI2D/FI8D		3 A peak/1 A hold	59 Red/White
C4				60 Brown/Yellow
C5	AI1D/FI7D	Air Injector 1 Driver/ Fuel Injector 7 Driver	3 A peak/1 A hold	61 Brown/White
C6	FI1D	Fuel Injector 1 Driver		62 Pink/Black
C7	EST4	Electronic Spark Timing	SmartCoil Driver	63 Green/Orange
C8	EST2	Electronic Spark Timing	SmartCoil Driver	64 Green/Blue
C9		No Internal Connection		65 Yellow/Red
C10		No Internal Connection		66 Yellow/White
C11	FI2D		3 A peak/1 A hold	67 Pink/Brown
C12	EST6	Electronic Spark Timing	SmartCoil Driver	68 Green/Red
C13	EST7	Electronic Spark Timing	SmartCoil Driver	69 Green/White
C14	EST8	Electronic Spark Timing	SmartCoil Driver	70 Green/Yellow
C15, 16, 24	DRVG	Driver Ground	Connect to Battery Ground	71, 72 & 80 Black
Č17				73 Gray/White
C18		No Internal Connection		74 Gray/Red
C19				75 Yellow/Pink
Ċ20	AI6D	Air Injector 6 Driver		76 Green/White
C21	FI6D	Fuel Injector 6 Driver	2 A pook/1 A hold	77 Pink/Purple
C22	AI5D	Air Injector 5 Driver	3 A peak/1 A hold	78 Light Blue/ White
C23	FI5D	Fuel Injector 5 Driver		79 Pink/Orange

5-Connector Pinouts		5.2 Resource by Name		
ControlCore Resource Name	Pin # ECM	Function Name	Notes	Wire Number Color Code
AI1D/FI7D	C5	Air Injector 1 Driver/ Fuel Injector 7 Driver		61 Brown/White
AI2D/FI8D	C3	Air Injector 2 Driver/ Fuel Injector 8 Driver		59 Red/White
AI3D	B21	Air Injector 3 Driver	3 A peak/1 A hold	53 Orange/White
AI4D	B19	Air Injector 4 Driver		51 Yellow/White
AI5D	C22	Air Injector 5 Driver		78 Light Blue/ White
AI6D	C20	Air Injector 6 Driver		76 Green/White
AN1	A3	Pressure Input	51K Pull Down	3 Yellow
O AN2	A4	Pressure Input	51K Pull Down	4 Blue/Black
O AN3	A5	Pressure Input	51K Pull Down	5 White/ Orange
AN4	A6	Potentiometer Input	220K Pull Down	6 Light Blue/ White
O AN5	A7	Potentiometer Input	220K Pull Down	7 White/Yellow
AN6	A8	Potentiometer Input	220K Pull Down	8 Brown/White
O AN7	A9	Potentiometer Input	220K Pull Down	9 Yellow/Pink
AN8	A10	Potentiometer Input	220K Pull Down	10 Red/Pink
AN9	A14	Variable Resistance Input	1K Pull Up	14 Tan
AN10	A15	Variable Resistance Input	1K Pull Up	15 Tan/Green
AN11	A16	Variable Resistance Input	1K Pull Up	16 Green
AN12	A17	Variable Resistance Input	1K Pull Up	17 Brown
AN13	A25	Variable Resistance Input	180 Ω Pull Up	25 Light Blue/ Black
AN14	A26	Variable Resistance Input	180 Ω Pull Up	26 Pink/Black
AN15	A27	Variable Resistance Input	150 Ω Pull Up	27 Orange/Pink
AN16	A2	Potentiometer Input	220K Pull Up	2 White/Yellow
AN17	A12	Potentiometer Input	220K Pull Up	12 White/Red
AN18	A24	Pressure Input	51K Pull Up	24 Red/Purple
AN19	A13	Variable Resistance Input	10K Pull Up	13 Tan/Orange
CAM_DG	B6	Hall Effect Cam Sensor	150K Pull Up	38 White/Purple
CAN1-	A21		Terminating Resistance	21 Dark Blue
CAN1+	A11	Serial Communications	Required	11 White
CNK-	B5	Crank Position LO	Variable Reluctance Sensor Compatible with LM1815	37 White
CNK_DG	B14	Hall Effect Crank Sensor	150K Pull Up	46 White/Brown
CNK+	B13	Crank Position HI	Variable Reluctance Sensor Compatible with LM1815	45 Red
DG1	B15	Discrete Switch, Frequency	1K Pull Up	47 Black/Blue
DG2	B16	Discrete Switch, Frequency	1K Pull Up	48 Orange/Black
DG4	B3	Discrete Switch, Frequency	1K Pull Up	35 Gray/ Dark Blue
DRVG	C15, 16, 24	Driver Ground	Connect to Battery Ground	71, 72 & 80 Black
DRVP	B17, 18	Driver Power (VBATT)	Power to Module and Loads	49 & 50 Red/Blue
ECUP	A1	ECM Power	Power to Module	1 Purple/White

5-Connector Pinouts		5.2 Resource by Name (continued)		
ControlCore Resource Name	Pin # ECM	Function Name	Notes	Wire Number Color Code
EK0N	A19	Knock Sensor Negative	Motorola PROSAK Compatible	19 Black/Red
EK0P	A29	Knock Sensor Positive	Motorola PROSAK Compatible	29 White/ Light Blue
EK1N	A20	Knock Sensor Negative		20 Yellow/Orange
EK1P	A30	Knock Sensor Positive		30 White/Black
EST_RTN	B1	Spark Timing Return	Return from Spark Coils	33 Black/Green
EST1	B2	Electronic Spark Timing	SmartCoil Driver	34 Green/Black
EST2	C8	Electronic Spark Timing	SmartCoil Driver	64 Green/Blue
EST3	B10	Electronic Spark Timing	SmartCoil Driver	42 Green/Brown
EST4	C7	Electronic Spark Timing	SmartCoil Driver	63 Green/Orange
EST5	B9	Electronic Spark Timing	SmartCoil Driver	41 Green/Purple
EST6	C12	Electronic Spark Timing	SmartCoil Driver	68 Green/Red
EST7	C13	Electronic Spark Timing	SmartCoil Driver	69 Green/White
EST8	C14	Electronic Spark Timing	SmartCoil Driver	70 Green/Yellow
FI1D	C6	Fuel Injector 1 Driver		62 Pink/Black
FI2D	C11	Fuel Injector 2 Driver	7	67 Pink/Brown
FI3D	B22	Fuel Injector 3 Driver	1	54 Pink/Dark Blue
FI4D	B20	Fuel Injector 4 Driver	3 A peak/1 A hold	52 Pink/Light Blue
FI5D	C23	Fuel Injector 5 Driver	7	79 Pink/Orange
FI6D	C21	Fuel Injector 6 Driver	7	77 Pink/Purple
FUELP	B11	FUEI Pump	1.5 A	43 Orange
MPRD	B4	Main Power Relay Driver	Wire to Main Power Relay Coil	36 Yellow/Purple
OILP	B7	Oil Pump	High Current (10 A)	39 Light Blue/Black
SCL-	A18	RS-485 LO		18 White/ Dark Blue
SCL+	A28	RS-485 HI		28 Dark Blue/White
START	B8	Starter Solenoid Relay	High Current (5 A)	40 Yellow/ Black
STOP	B23	Discrete Switch	1K Pull Up to ECUP, 15K Pull Down, Wire to Ground via E- STOP Switch	55 Black/ Yellow
TACH	B12	Tachometer Output	1.8K Pull Up, 1.5 A	44 Gray
XDRG	A22	Transducer Ground	Ground Return for Transducers	22 Black/ Orange
XDRP	A23	Transducer Power (5 V)	500 mA Source for Transducers	23 Purple/ Yellow
XDRP_B	B24	Transducer Power B (5 V)	500 mA Source for Transducers	•

Woodward 36314 p.14

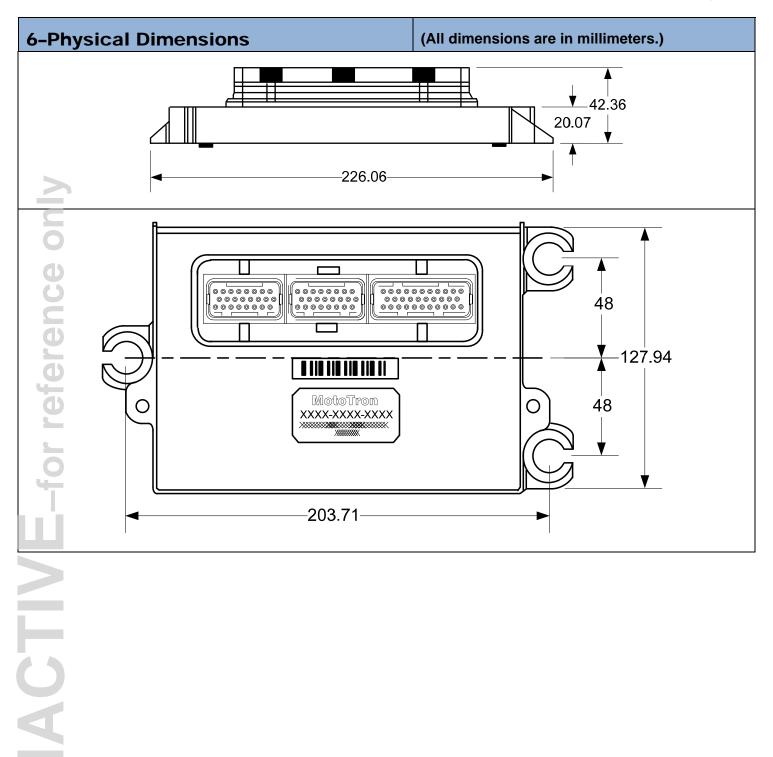

7-Environmental		
7.1 General	The ECM is designed to meet automotive industry standard under-hood environmental requirements for 12-volt systems, and also meets marine industry environmental requirements.	
	Validation tests included extreme operating temperatures (–40 to +105 °C), thermal shock, humidity, salt spray, salt fog, immersion, fluid resistance, mechanical shock, vibration, and EMC.	
	It is the responsibility of the application engineer to assure that the application does not exceed the demonstrated capabilities of the unit; vibration or thermal. It may be necessary to perform additional tests to validate the unit in the application.	
7.2 Vibration		
Engine mountable and tested to high-performance levels, the ECM has been successfully deployed on engines having the vibration profiles shown at right:		
Electrical and mechanical isolation is via a bushing, grommet, and washer, as shown below:		
for		
7.3 Transient Power Spike	Resistance: ±200 Vdc	
B		
Y		
woo woo	DOWARD For more information contact:	

WOODWARD

PO Box 1519, Fort Collins CO, USA 80522-1519 1000 East Drake Road, Fort Collins CO 80525 Tel.: +1 (970) 482-5811 + Fax: +1 (970) 498-3058 mcsinfo@woodward.com + mcs.woodward.com www.woodward.com

Distributors & Service

Woodward has an international network of distributors and service facilities. For your nearest representative, call the Fort Collins plant or see the Worldwide Directory on our website.

This document is distributed for informational purposes only. It is not to be construed as creating or becoming part of any Woodward Governor Company contractual or warranty obligation unless expressly stated in a written sales contract.

