



GCP-30 Series Packages Genset Control



Configuration
Software version starting from 4.3046

**WARNING**

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment. Practice all plant and safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage.

The engine, turbine, or other type of prime mover should be equipped with an overspeed (overtemperature, or overpressure, where applicable) shutdown device(s), that operates totally independently of the prime mover control device(s) to protect against runaway or damage to the engine, turbine, or other type of prime mover with possible personal injury or loss of life should the mechanical-hydraulic governor(s) or electric control(s), the actuator(s), fuel control(s), the driving mechanism(s), the linkage(s), or the controlled device(s) fail.

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.

**CAUTION**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts.

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

**OUT-OF-DATE PUBLICATION**

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, be sure to check the Woodward website:

<http://www.woodward.com/pubs/current.pdf>

The revision level is shown at the bottom of the front cover after the publication number. The latest version of most publications is available at:

<http://www.woodward.com/publications>

If your publication is not there, please contact your customer service representative to get the latest copy.

Important definitions**WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION**

Indicates a potentially hazardous situation that, if not avoided, could result in damage to equipment.

**NOTE**

Provides other helpful information that does not fall under the warning or caution categories.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, Woodward assumes no responsibility unless otherwise expressly undertaken.

© Woodward
All Rights Reserved.

Revision History

| Rev. | Date | Editor | Changes |
|------|----------|--------|--------------------------------------|
| NEW | 06-01-11 | TP | Release |
| A | 07-02-07 | TP | Minor corrections; linguistic review |

Contents



NOTE

The functions described in this manual are included in the different packages of the GCP-30 series. Some functions are only available in specific packages. Specific model numbers at the beginning of the parameter/function text will indicate package specific parameters/functionality.

[GCP-32] This function is only found in GCP-32 controllers.

[GCP-31] This function is only found in GCP-31 controllers.

BPQ This function is only found in controllers with the **BPQ** Package (GCP-31/**BPQ** and GCP-32/**BPQ**).

XPQ This function is only found in controllers with the **XPQ** Package (GCP-31/**XPQ** and GCP-32/**XPQ**).

XPQ This function is only found in controllers with the **XPQ** Package (GCP-31/**XPQ** and GCP-32/**XPQ**).

SB03 This function is only found in controllers with the **SB03** Option (GCP-31/**XPQ+SB03** and GCP-32/**XPQ+SB03**).

SC10 This function is only found in controllers with the **SC10** Option (GCP-31/**XPQ+SC10** and GCP-32/**XPQ+SC10**).

| | |
|---|-----------|
| CHAPTER 1. GENERAL INFORMATION..... | 7 |
| Functional Overview..... | 8 |
| CHAPTER 2. FUNCTION..... | 9 |
| Considerations To Be Taken: | 9 |
| Different Options | 9 |
| Systems Without a Mains Circuit Breaker | 9 |
| Signals..... | 10 |
| Discrete Inputs..... | 10 |
| Control Outputs..... | 12 |
| CHAPTER 3. CONFIGURATION | 14 |
| Basic Data..... | 15 |
| Version Number (Software Version)..... | 15 |
| Password | 15 |
| Direct Configuration | 16 |
| Generator Number..... | 17 |
| Language Manager (XPQ , XPQ)..... | 17 |
| Service Display | 20 |
| Event Logger (XPQ , XPQ)..... | 21 |
| Possible Event Logger Entries..... | 21 |
| Analog Inputs..... | 23 |

| | |
|--|-----|
| Measuring | 24 |
| Rated Frequency | 24 |
| Potential Transformers (Voltage Transformers)..... | 24 |
| Rated Voltage | 26 |
| Generator Current | 27 |
| Mains Current/Mains Power Measurement..... | 28 |
| LS 4 Mode (GCP-31: XPD, XPQ) | 31 |
| Measurement Units | 31 |
| Password Configuration | 32 |
| Controller | 33 |
| Analog Controller Outputs (BPQ, XPQ) | 34 |
| Real Power Controller, Set Point Values | 37 |
| Table Of Set Point Values | 38 |
| Frequency Controller | 39 |
| Voltage Controller..... | 43 |
| Power Factor Controller | 47 |
| Real Power Controller | 49 |
| Load and/or var Sharing..... | 53 |
| Automatic..... | 57 |
| Load Management | 57 |
| Stop Of The Engine At Mains Failure [GCP-31] | 66 |
| Interface..... | 67 |
| Breaker | 68 |
| Functional Description..... | 68 |
| Breaker Logic | 74 |
| Start/Stop Ramp, Open GCB With F2 Alarm | 81 |
| GCB/MCB Pulse/Continuous Pulse | 82 |
| Open/Close GCB..... | 84 |
| Synchronization..... | 85 |
| Synchronization Time Monitoring..... | 86 |
| Dead Bus Start | 87 |
| Breaker Monitoring..... | 88 |
| Mains Decoupling..... | 89 |
| Emergency Power (AMF) (GCP-32; GCP-31: XPD, XPQ) | 91 |
| Emergency Power With Breaker Logic "PARALLEL" | 92 |
| Emergency Power With Breaker Logic "OPEN TRANSIT." | 92 |
| Emergency Power With Breaker Logic "CLOSED TRANSIT." | 93 |
| Emergency Power With Breaker Logic "INTERCHANGE" | 93 |
| Emergency Power With Breaker Logic "EXTERNAL"..... | 93 |
| Emergency power With MCB Malfunction..... | 94 |
| Emergency Power Operation; Parameters | 94 |
| Protection..... | 95 |
| Generator Power Monitoring | 95 |
| Mains Power Monitoring..... | 97 |
| Generator Overload Monitoring..... | 98 |
| Generator Reverse/Reduced Power Monitoring | 99 |
| Unbalanced Load Monitoring | 100 |
| Independent Time-Overcurrent Monitoring | 101 |
| Generator Frequency Monitoring | 103 |
| Engine Overspeed Monitoring..... | 103 |
| Generator Voltage Monitoring | 104 |
| Mains Frequency Monitoring..... | 105 |
| Mains Voltage Monitoring..... | 106 |
| Phase/Vector Shift Monitoring $d\phi/dt$ | 107 |
| Mains Settling Time | 108 |
| Battery Voltage Monitoring..... | 109 |
| Time Of Active Horn | 109 |

| | |
|--|-------------------|
| Discrete Inputs | 110 |
| Alarm Inputs | 111 |
| Configuring The Text For The Discrete Inputs | 112 |
| Control Inputs | 113 |
| Terminal 6 Function | 116 |
| Analog Inputs (XPD, XPQ) | 119 |
| Setting The Analog Inputs | 119 |
| Outputs | 127 |
| Analog Outputs (XPD, XPQ) | 127 |
| Relay Manager | 128 |
| Engine | 129 |
| Start/Stop Sequence 'Gas Engine' | 130 |
| Start/Stop Sequence 'Diesel Engine' | 133 |
| Cool Down | 135 |
| Delayed Engine Monitoring And Firing Speed | 136 |
| Magnetic Pick-Up Input | 138 |
| Counter / Real Time Clock | 139 |
| Maintenance Call | 139 |
| Operating Hours Counter | 140 |
| Start Counter | 140 |
| kWh Counter | 141 |
| Real Time Clock (XPD, XPQ) | 142 |
| Current Slave Pointer | 143 |
| <u>CHAPTER 4. COMMISSIONING</u> | <u>144</u> |
| <u>APPENDIX A. ANALOG OUTPUT MANAGER (XPD, XPQ)</u> | <u>146</u> |
| <u>APPENDIX B. RELAY MANAGER</u> | <u>149</u> |
| <u>APPENDIX C. INTERFACE PROTOCOL</u> | <u>153</u> |
| Transmission Telegram | 153 |
| Receiving Telegram | 162 |
| CAN Bus Structure | 163 |
| Transmission Telegram | 163 |
| Current Direction Message | 163 |
| Power Set Point Value Message | 164 |
| CAN Bus Address Requirements | 164 |
| <u>APPENDIX D. LIST OF PARAMETERS</u> | <u>165</u> |
| <u>APPENDIX E. SERVICE OPTIONS</u> | <u>174</u> |
| Product Service Options | 174 |
| Returning Equipment For Repair | 174 |
| Packing A Control | 175 |
| Return Authorization Number RAN | 175 |
| Replacement Parts | 175 |
| How To Contact Woodward | 176 |
| Engineering Services | 177 |
| Technical Assistance | 178 |

Illustrations And Tables

Illustrations

| | |
|---|-----|
| Figure 3-1: Control loop | 34 |
| Figure 3-2: Step response (Example)..... | 34 |
| Figure 3-3: Step responds - governor configuration | 36 |
| Figure 3-4: CAN bus load/var sharing, diagram | 55 |
| Figure 3-5: Breaker control logic 'Impulse' for MCB | 82 |
| Figure 3-6: Breaker control logic 'Impulse' for GCB..... | 83 |
| Figure 3-7: Breaker control logic 'Continuous' | 83 |
| Figure 3-8: Characteristic of the time-overcurrent monitoring | 101 |
| Figure 3-11: Sprinkler operation..... | 118 |
| Figure 3-12: VDO transmitter 323.425 (slope)..... | 124 |
| Figure 3-13: Start-Stop sequence: Gas engine | 130 |
| Figure 3-14: Wiring diagram for opening gas valves with the GCP-30 from V4.1001 | 131 |
| Figure 3-15: Start-stop sequence: Diesel engine..... | 133 |
| Figure 3-16: Delayed engine monitoring | 136 |
| Figure 4-1: Analog outputs - power factor scaling | 148 |

Tables

| | |
|---|-----|
| Table 1-1: Manual - Overview..... | 7 |
| Table 1-2: Functional overview | 8 |
| Table 3-1: Event recorder - Messages, part 1 | 22 |
| Table 3-2: Event recorder – Messages, part 2..... | 23 |
| Table 3-3: Set point value table | 38 |
| Table 3-4: Limit values, permissible limits..... | 68 |
| Table 3-5: Limit values generator, dead bus start | 71 |
| Table 3-6: Limit values mains, dead bus start..... | 72 |
| Table 3-7: Limit values, Emergency power..... | 91 |
| Table 3-9: Discrete alarm inputs - delay stages | 111 |
| Table 3-10: Function - external operation mode selection..... | 113 |

Chapter 1.

General Information

| Type | English | German |
|---|-------------------------------|---------|
| GCP-31/32 Series | | |
| GCP-31/32 Packages - Installation | 37364 | GR37364 |
| GCP-31/32 Packages - Configuration | this manual ⇨ | GR37365 |
| GCP-31/32 - Function/Operation | 37238 | GR37238 |
| GCP-31/32 - Application | 37240 | GR37240 |
| GCP-31/RPQ - Installation | 37366 | GR37366 |
| GCP-31/RPQ - Configuration | 37367 | GR37367 |
| Option SB - Caterpillar CCM coupling | 37200 | GR37200 |
| Option SC09/SC10 - CAN bus coupling | 37382 | GR37382 |
| Additional Manuals | | |
| IKD 1 - Manual Discrete expansion board with 8 discrete inputs and 8 relay outputs that can be coupled via the CAN bus to the control unit. Assessment of the discrete inputs as well as control of the relay outputs is done via the control unit. | 37135 | GR37135 |
| LeoPC1 - Manual PC program for visualization, configuration, remote control, data logging, language upload, alarm and user management and management of the event recorder. This manual describes the use of the program. | 37146 | GR37146 |
| LeoPC1 - Manual PC program for visualization, configuration, remote control, data logging, language upload, alarm and user management and management of the event recorder. This manual describes the programming of the program. | 37164 | GR37164 |
| GW 4 - Manual Gateway for transferring the CAN bus to any other interface or bus. | 37133 | GR37133 |
| ST 3 - Manual Control to govern the air fuel ratio of a gas engine. The ratio will be directly measured through a Lambda probe and controlled to a configured value. | 37112 | GR37112 |

Table 1-1: Manual - Overview

Functional Overview



| Function | Package | | | | | | | | | |
|--|---------|-----|-----|----------|----------|--------|-----|-----|----------|----------|
| | GCP-31 | | | | | GCP-32 | | | | |
| | BPQ | XPQ | XPQ | XPQ+SB03 | XPQ+SC10 | BPQ | XPQ | XPQ | XPQ+SB03 | XPQ+SC10 |
| Common Functions | | | | | | | | | | |
| 1× readiness for operation relay | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 4/6× control relay (form A, make contact) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 7× freely configurable relay outputs (form A, make contact) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2× three-position controller for n/f/V/P, power factor * | -- | ✓ | -- | -- | -- | -- | ✓ | -- | -- | -- |
| 2× three position controller for n/f/V/P, power factor via relay manager * | ✓ | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ |
| 2× analog controller outputs for n/f/V/P/Q and PWM output * | ✓ | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ |
| up to 8× discrete control inputs | 6 | 8 | 8 | 8 | 8 | 6 | 8 | 8 | 8 | 8 |
| 16× discrete alarm inputs | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 |
| CAN bus interface 'guidance level' | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| CAN bus interface to 2× IKD 1 and ST 3 | -- | -- | -- | -- | ✓ | -- | -- | -- | -- | ✓ |
| CAN bus communications with mtu MDEC and Scania EMS/S6 | -- | -- | -- | -- | ✓ | -- | -- | -- | -- | ✓ |
| CAN bus communications with SAE J1939 | -- | -- | -- | -- | ✓ | -- | -- | -- | -- | ✓ |
| RS-232 communications via Caterpillar CCM with ECM & EMCP-II | -- | -- | -- | ✓ | ✓ | -- | -- | -- | -- | ✓ |
| 7× analog inputs | -- | ✓ | -- | ✓ | ✓ | -- | ✓ | -- | ✓ | ✓ |
| 1× Magnetic Pick-Up input | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2× analog outputs + external operation mode selection by term. 127/128 | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ | ✓ |
| Password system | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Configuration via DPC possible (direct configuration) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Event recorder with real-time clock | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ | ✓ |
| Language manager for LCD texts | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Running hours, maintenance, start, and kWh counter | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Control/Synchronization | | | | | | | | | | |
| Synchronization of 1 breaker with V and f correction * | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Synchronization of 2 breakers with V and f correction * | -- | -- | -- | -- | -- | ✓ | ✓ | ✓ | ✓ | ✓ |
| Closing to a dead/voltage free busbar (dead bus start) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Voltage control | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Power factor control | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Speed/frequency control | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Generator real power control & import/export real power control | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Real power & var sharing | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Analog set point value for real power | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ | ✓ |
| Analog mains interchange (import/export) real power measuring | -- | ✓ | ✓ | ✓ | ✓ | -- | ✓ | ✓ | ✓ | ✓ |
| "Open transition" & "closed transition" breaker logic | -- | -- | -- | -- | -- | ✓ | ✓ | ✓ | ✓ | ✓ |
| "Soft loading" breaker logic | -- | -- | -- | -- | -- | ✓ | ✓ | ✓ | ✓ | ✓ |
| "Parallel operation" breaker logic | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| "External" breaker logic | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Remote control via CAN bus interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Protective Functions | | | | | | | | | | |
| Over-/undervoltage monitoring, generator $V_{Gen}>/<$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Over-/undervoltage monitoring, mains $V_{Mains}>/<$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Over-/underfrequency monitoring $f>/<$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| dφ/dt vector/phase jump monitoring $dφ/dt$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Reverse/reduce power monitoring $+/-P_{Gen}<$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Overload monitoring $P_{Gen}>$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Unbalanced load monitoring $\Delta P_{Gen}>$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Independent time-overcurrent monitoring $I>/I>>$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Battery voltage monitoring $V_{Bat}<$ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |

* n = speed / f = frequency / V = voltage / P = real power / Q = reactive power

Table 1-2: Functional overview

Chapter 2.

Function

Considerations To Be Taken:



Different Options

Depending how a control unit is configured, different parameters will be displayed and only the relevant parameters will be able to be accessed:

- Various inputs and outputs will be present or deleted, corresponding to the control configuration (depending on the ordered [package](#)). Please refer to the wiring diagram and the notes regarding the [packages](#) contained in these. The control inputs and outputs will vary by the specific [package](#) ordered. Refer to the wiring diagram and notes that correspond to them.
- Specific display screens correspond to specific types of interfaces.

Systems Without a Mains Circuit Breaker

If a control with 2-circuit-breaker logic [[GCP-32](#)] or 1-circuit-breaker logic [[GCP-31](#)] is installed for use with one circuit breaker, the following shall apply:

- If the control unit is to be operated in an isolated or an isolated parallel application (the MCB is opened), the following terminals must be energized/de-energized:
 - "Reply: MCB is open" / "Isolated operation" (terminal 54): energized (logical "1")
 - "Enable MCB" (terminal 53): de-energized (logical "0")
 - Condition: Parameter 137 "Emergency power" must be configured as "OFF".
- If the control unit is to be operated in a mains parallel application (the MCB always is closed if the generator operates in mains parallel), the following terminals must be energized/de-energized:
 - "Reply: MCB is open" / "Isolated operation" (terminal 54): de-energized (logical "0")
 - "Enable MCB" (terminal 53): energized (logical "1")
- If the control unit is to be operated in an isolated parallel as well as a mains parallel application (the MCB can be opened or closed), the following terminals must be energized/de-energized:
 - "Reply: GCB is open" (terminal 4): de-energized (logical "0")
 - "Reply: MCB is open" (terminal 54): de-energized (logical "0")
 - "Enable MCB" (terminal 53): energized (logical "1")

Case A - The MCB must remain closed (except during an emergency power operation): Terminal 53 must be energized.

Case B - The MCB can be opened (except during an emergency power operation): If a mains parallel operation is to be initiated, terminal 53 must be energized to initiate synchronization of the MCB. During the synchronization of the MCB (GCP-31: This is performed by an LS-4 or external control) the generator frequency is increased to a level slightly higher than the mains frequency (df max/2). A message is shown in the LC display that the unit is synchronizing. If the system is to be disconnected from the mains and operated in an island mode, terminal 53 must be de-energized.

Signals



Discrete Inputs



NOTE

Emergency power and critical operation modes will be carried out while the GCP-30 is in TEST or AUTOMATIC mode regardless if the discrete inputs for "Automatic 1" and/or "Automatic 2" are enabled. This is dependent upon if Parameter 137 (Emergency power) has been configured as ON and if Parameter 211 (Terminal 6) is configured for a critical/sprinkler mode.



NOTE

If terminals 3 and 5 are enabled simultaneously, terminal 3 has precedence over terminal 5 and the generator will operate in accordance with how "Automatic 1" is configured.

Automatic 1 (Start/Stop the engine)

Terminals 3/7

Enabling this input while the control is in the AUTOMATIC operation mode will result in the GCP-30 controlling the real power in accordance with how "P controller: set point 1" is configured and may be used to initiate the engine start/stop sequence.

Energize..... If the AUTOMATIC operation mode has been enabled the real power is controlled in the manner configured in "P controller: set point 1" (Parameter 35) while in parallel with the mains. If "P controller: set point 1" is configured for baseload (C), import (I), or export (E) the engine will start when terminal 3 is energized and a mains parallel operation will be performed following the synchronization of the GCB. If the generator is not connected to the mains, the generator will start, perform a dead bus closure, and assume the load. Additional generators will synchronize and share the load proportionally.

If the controller is in the AUTOMATIC operation mode and "P controller: set point 1" (Parameter 35) is configured for 000kW and "Load.start/stop at ter.3" (Parameter 95) is configured OFF, the engine will start and the GCB will synchronize. The load may be increased or decreased by raising or lowering the load set point manually. The load for the control is changed by pressing the SETPOINT button until the "P set 1" screen is displayed and increasing or decreasing the load set point to the desired value by pressing either the Setpoint raise or lower buttons.

De-energize .. The generator will unload, the GCB will open, and the engine will perform a cool down and stop unless an emergency power or critical/sprinkler mode operation is active. The generator will shutdown after the emergency power or critical/sprinkler mode operation has terminated.

Automatic 2 (Start/Stop the engine)

Terminals 5/7

Enabling this input while the control is in the AUTOMATIC operation mode will result in the GCP-30 controlling the real power in accordance with how "P controller: set point 2" is configured and may be used to initiate the engine start/stop sequence.

EnergizeIf the AUTOMATIC operation mode has been enabled the real power is controlled in the manner configured in "P controller: set point 2" (Parameter 36) while in parallel with the mains. If "P controller: set point 2" is configured for baseload (C), import (I), or export (E) the engine will start when terminal 5 is energized and a mains parallel operation will be performed following the synchronization of the GCB. If the generator is not connected to the mains, the generator will start, perform a dead bus closure, and assume the load. Additional generators will synchronize and share the load proportionally.

If the controller is in the AUTOMATIC operation mode and "P controller: set point 2" (Parameter 36) is configured for 000kW and "Load.start/stop at ter.5" (Parameter 96) is configured OFF, the engine will start and the GCB will synchronize. The load may be increased or decreased by raising or lowering the load set point manually. The load for the control is changed by pressing the SETPOINT button until the "P set 2" screen is displayed and increasing or decreasing the load set point to the desired value by pressing either the Setpoint raise or lower buttons.

De-energize ...The generator will unload, the GCB will open, and the engine will perform a cool down and stop unless an emergency power or critical/sprinkler mode operation is active. The generator will shutdown after the emergency power or critical/sprinkler mode operation has terminated.

If a set point value is specified externally (e.g. via an 0/4 to 20 mA analog input or a bi-directional interface), the external set point value is the discrete input enabled by energizing terminal 5 (refer to Table 3-3: Set point value table).

Multifunction

Terminals 6/7

Terminal 6 may be configured to perform one of several functions. Parameter 211 lists the available functions.

Note: When the Critical (Sprinkler) mode is configured, the input operates on negative logic. The Critical (Sprinkler) mode is disabled when terminal 6 is energized and enabled when terminal 6 is de-energized.

Reply: GCB is open

Terminals 4/7

When this input is energized, the controller recognizes that the GCB is open (the "GCB ON" LED is not illuminated).

[GCP-32] Reply: MCB is open

Terminals 54/7

When this input is energized, the controller recognizes that the MCB is open (the "MCB ON" LED is not illuminated).

[GCP-31] Isolated operating / reply external breaker

Terminals 54/7

When this input is energized, the controller recognizes that the genset is operating isolated from the mains (the "Mains parallel" LED is not illuminated). This discrete input determines if the controller performs frequency control (terminal 54 = energized) or real power control (terminal 54 = de-energized) after the GCB has been closed.

Enable MCB

Terminals 53/7

EnergizedThe MCB has been enabled and a mains parallel operation will be performed. The GCP-31 uses the LS-4 or an external controller to operate the MCB.

De-energized. The MCB is disabled and cannot be closed. The controller will operate as an isolated or mains parallel operation dependent upon the state of the input "Reply MCB is open".

Discrete inputs

Terminals 34 to 36/33 and 61 to 73/60

These freely programmable alarm inputs may be configured with user defined text, alarm classes, time delays, whether alarm monitoring should be delayed by the engine speed, and if the contacts are N.O. or N.C. contacts.

Control Outputs

Ready for operation

Terminals 18/19

This relay output is used to ensure that the internal functions of the controller are operating properly. If this relay is bypassed or disabled, proper functionality of the control cannot be guaranteed. This relay should be used in conjunction with an alarm that ensures proper actions are initiated upon activation of this relay output (i.e. GCB opening, engine shutdown). It is recommended that this contact be put in series with an emergency stop function.

Preheating (Diesel engine)

pre-assigned to terminals 37/38

When this relay is enabled, the diesel engine's glow plugs are energized (refer to the "Diesel Engine" section). This function only occurs if the control has been configured for diesel engine start/stop logic.

Ignition "ON" (Gas engine)

pre-assigned to terminals 37/38

When this relay is enabled, the ignition of the gas engine is energized (refer to the "Gas Engine" section). This function only occurs if the control has been configured for gas engine start/stop logic.

Fuel relay / gas valve

Terminals 43/44

a) Diesel engine: fuel relay (Parameter 269)

a.1) Open to stop

A start/run command will initiate the start sequence for the diesel engine and close the contacts for this relay energizing the fuel solenoid relay. This relay will disable (contacts open) when a stop command is issued or the engine speed drops below the configured firing speed (Parameter 272).

Refer to the "Diesel Engine" section.

a.2) Close to stop

A start/run command will initiate the start sequence for the diesel engine and open the contacts for this relay. This relay will enable (contacts close) when a stop command is issued or the engine speed drops below the configured firing speed (Parameter 272). Refer to the "Diesel Engine" section.

b) Gas engine: gas valve

A start/run command will initiate the start sequence for the gas engine and close the contacts for this relay energizing the gas valve relay. This relay will disable (contacts open) when a stop command is issued or the engine speed drops below the configured firing speed (Parameter 272). Refer to the "Gas Engine" section.

Starter

Terminals 45/46

The starter relay is enabled when a start command is issued. The starter relay output is de-energized when firing speed (Parameter 272) has been achieved, the configured crank time (Parameter 259 or Parameter 265) has expired, or the STOP mode is enabled.

Centralized alarm

pre-assigned to terminals 47/48

This relay is enabled when a centralized alarm is issued. An external horn, buzzer, or beacon may be operated by this relay output during a fault condition. Pressing the "RESET" button will reset the relay. The relay will re-energize if another alarm condition is detected. The centralized alarm is issued for fault classes F1 through F3.

Command: close GCB

Terminals 14/15

The "Command: close GCB" relay issues the signal for the GCB to close. This relay may be configured for a momentary pulse to operate an external holding coil for the GCB or for a continuous current (Parameter 114).

If the relay is configured for a momentary pulse, the relay will energize for the time configured in "Synchronize time pulse" (Parameter 119).

If the relay is configured for a constant current, the relay will energize and remain energized when the discrete input "Reply: GCB is open" de-energizes and the generator and busbar voltages are identical. If an F2 alarm condition is detected, the generator load is reduced and the GCB is opened when the measured power is less than 3% of rated or the time configured for "Add on/off max. time" (Parameter 112) expires, whichever occurs first. If an F3 alarm condition is detected, this relay de-energizes immediately.

Command: open GCB

Terminals 41/42

The "Command: open GCB" relay issues the signal to open the GCB. After the open command has been issued this relay is de-energized.

[GCP-32] Command: close MCB

Terminals 16/17

The "Command: close MCB" relay issues the signal for the MCB to close. This relay is a momentary pulse and must be used with an external holding coil for the MCB.

[GCP-32] Command: open MCB

Terminals 39/40

The "Command: open MCB" relay issues the signal to open the MCB. After the open command has been issued this relay is de-energized.

Relay Manager

Terminals 74 to 83, 37/38, 47/48

The "Relay Manager" (Parameter 250) permits specific logical functions to be assigned to specific relay outputs.

Default values:

- Relay 1 to 5 = relay number (e.g. relay 1 = alarm class F1, relay 2 = alarm class F2, etc.)
- Relay 6 = Ignition / preheating
- Relay 7 = Centralized alarm

Refer to Appendix B for a description of the Relay Manager functions.

Chapter 3. Configuration

Configuration may be performed via the front panel keys or using a PC and the LeoPC1 program via the serial interface. LeoPC1 version 3.1 or higher is required to perform this. Configuration via a CAN bus converter is also possible. The following communication protocols require the following baud rates:

- Direct configuration (RS-232) = 9,600 Baud (8 Bit, no parity, 1 Stop bit)
- CAN bus (CiA) (RS-485) = 125 kBaud



CAUTION

A PC with configuration software with the following revision number or higher is required to configure this control (applies to firmware versions 4.3xxx or higher):

LeoPC1 from 3.1

GCP controllers with **Option SC10** cannot be completely configured through the face panel. Therefore, it is recommended to have LeoPC1 and the correct configuration files available when commissioning.

Due to functional enhancements of the GCP-30 control series, it is necessary (beginning with firmware version 4.3xxx) to use a newer version of the configuration software LeoPC1. This requires that LeoPC1 version 3.1 or higher be used. If your current LeoPC1 software is an earlier version, the latest version can be ordered from our technical sales or can be downloaded from our homepage at <http://www.woodward.com/software>.

Older project files may still be used with the updated version of LeoPC1 after installation has been completed. These files should be transferred to the appropriate file locations within the updated version of LeoPC1.



WARNING

Please note that configuration only should be performed while the system is not operating.



NOTE

Prior to configuring a control unit, familiarize yourself with the parameters listed in this manual.

You can advance through the individual parameter screens if you are in configuration mode (simultaneously pressing of "Digit↑" and "Cursor→" push buttons permits access to the configuration mode) by using the "Select" button. If you press and hold the "Select" push button, the scroll function will be activated, allowing for the parameter screens to be advanced through more rapidly. The control unit will permit the operator to reverse up to four previous screens (exception: it is not possible to reverse from the first parameter to the last parameter or to backup through the service screens). To perform the reverse function through the parameter screens, the "Select" and "Cursor→" push buttons must be pressed and released simultaneously. The control unit will revert to automatic mode if an entry isn't performed, a change made, or any other action performed for 90 seconds.



NOTE

Two hardware versions are described in this manual. The differences between these versions are 120 Vac and 480 Vac voltage-measuring inputs. Configuration screens and permissible limits of these units will differ as well. These models are differentiated by numerals in the applicable text. The 120 Vac model is identified by a [1] and the 480 Vac is identified by a [4] in front of the text that applies to the unit.

Basic Data



Version Number (Software Version)

Parameter 1

Software version
Vx.xxxxx

Software version

This screen displays the software version loaded into the control (the last two xx are for software revisions which do not affect the function of the unit).

Password

The unit is equipped with a three-level code and configuration hierarchy, which allows different user access to the control. A distinction is made between:

Code level CS0 (User Level)

Factory password = none

This code level allows for monitoring of the system and does not permit access to the parameters. Configuration is blocked.

Code level CS1 (Basis Service Level)

Factory password = "0 0 0 1"

This code level entitles the user to change selected parameters, like setting Bar/PSI, °C/°F, and clock adjustment. Changing a password is not permitted at this level. This password expires two hours after entering the password and the user is returned to the CS0 level.

Code level CS2 (Commissioning Level)

Factory password = "0 0 0 2"

Allows direct access to all parameters (displaying and changing). In addition, the user may also set the password for levels CS1 and CS2. This password expires two hours after entering the password and the user is returned to the CS0 level.



NOTE

Once the code level is entered, access to the configuration menus will be allowed for two hours or until another password is entered into the control. If a user needs to exit a code level, then code level CS0 should be entered. This will block any configuration of the control.

Specific code levels may also be accessed using the LeoPC1 program.

Parameter 2

Enter code
0000

Enter code number

0000 to 9999

Upon enabling the configuration mode, the user is required to enter an access code number, which identifies the various users. The displayed number 0000 is a randomly generated number. If the random number is confirmed by pressing the "Select" button without being changed, the current level of access maintained. Upon entering either a level 1 or level 2 access code, the corresponding level of access is granted. If an incorrect access code is entered the control unit changes to code level 0 and all access is blocked until a code level 1 or 2 access code is entered.

Direct Configuration



NOTE

A direct configuration cable DPC (P/N 5417-557), the LeoPC1 program (supplied with the cable), and the corresponding configuration files are required to perform direct configuration. After the program has been installed, consult the online help for a description of the PC program and its setup.

Configuration files may be downloaded from the Woodward homepage at:

<http://www.woodward.com/software/ConfigFiles/>

The unit part number and revision number will be required to locate the appropriate configuration files.

Remote configuration: For remote configuration, the level CS2 password of must be entered via the parameter "Enter code", otherwise, the values can only be read but not written. Configuring via the communication bus has no effect on the unit display screen. This means that the control unit remains in code level 0 and configuration is only permitted via the communication bus. The control may remain idle for 2 hours before configuration via the communication bus is disabled. The password must be re-entered to re-enable configuration via the communication bus again. The password must also be entered prior to loading a language file. If the code for level 2 is entered on the unit itself, configuration via the communication bus is automatically enabled.



WARNING

If Parameter 3 "Direct para." is configured to "YES", communication via the interface terminals X1 to X5 is **disabled**. If the interface communication is to be re-established after the unit is configured, Parameter 3 must be configured to "NO"!

The GCP-30 will automatically disable the direct configuration port (Parameter 3 is automatically switched from YES to NO) when the unit detects that firing speed has been achieved (Parameter 272). Additional configuration may be performed while the generator is running through the display panel or via a CAN bus converter (i.e. IXXAT USB to CAN 1 converter). The direct configuration port is disabled and the communication interface is re-enabled upon detection firing speed as a safety precaution. This is done to prevent a simultaneous closing of GCBs to the de-energized bus bar in the event conditions for a multiple unit start-up (i.e. emergency power situation) are detected.

Parameter 3

| | |
|--------------|-----|
| Direct para. | YES |
|--------------|-----|

Direct configuration YES/NO

- YES**The direct configuration port is enabled, and **CAN bus communications via X1 to X5 terminals are disabled**. The following conditions must be met in order to carry out configuration via the configuration port:
- A connection must be established via the direct configuration cable between the control and the PC
 - The baud rate of the LeoPC1 program must be set to 9,600 Baud
 - The corresponding configuration file for the controller must be used (file name: "xxxx-xxxx-yyy-zz.asm").
- NO**The direct configuration port is disabled and **CAN bus communications via X1 to X5 terminals are enabled**.

Generator Number

Parameter 4

| |
|-----------------------|
| Generator number 0 |
|-----------------------|


Generator number (controller CAN bus address)**1 to 14**

If a power plant is composed of multiple generators with controllers, the controllers must be coupled via a CAN bus. Each controller must be assigned a unique CAN bus address to differentiate the units. Generator address number 1 should be assigned even if the power plant is composed of only a single generator and controller. The address assigned in this parameter corresponds to the control number used in the LeoPC1 program.

Language Manager (XPD, XPQ)

The following steps must be accomplished in order to load a different language into the control:


- 1.) A communication link between your PC and the control unit must be established via the direct configuration cable (DPC). To do this insert the serial cable into the COM port of your PC and the RJ45 plug into the communication port of the control unit (communication via the CAN bus or a GW 4 is also possible).
- 2.) Enter the CS 2 level password into the control (Parameter 2).
- 3.) If the direct configuration cable (DPC) is to be utilized, Parameter 3 "Direct para." must be configured as "YES". If a GW 4 or the CAN bus is to be utilized for configuration, Parameter 3 "Direct para." must be configured as "NO".
- 4.) If a language is to be loaded via the CAN bus, enter the desired CAN bus address (1 to 14) into the "Generator number" screen (Parameter 4), so that LeoPC1 is able to communicate with the correct control unit.
- 5.) Scroll the configuration screen on the controller to "Language" (Parameter 5) and select either the primary language for the control unit by selecting "first" or the secondary language by selecting "second".
- 6.) Start the program LeoPC1, and log into the program by selecting "System" from the tool bar and "User login..." from the drop down menu or clicking on the key icon.

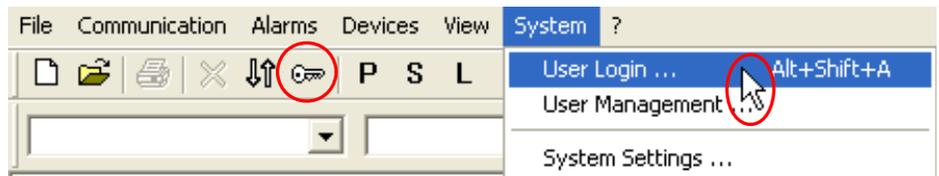

- 7.) Enter the user name and password and click the "OK" button. The default user ID is "system" and the default password is "system".




- 8.) Open the applicable *.cfg file for the application by selecting "File" from the tool bar and "open" from the drop down menu. Select the proper *.cfg file from the window that appears.

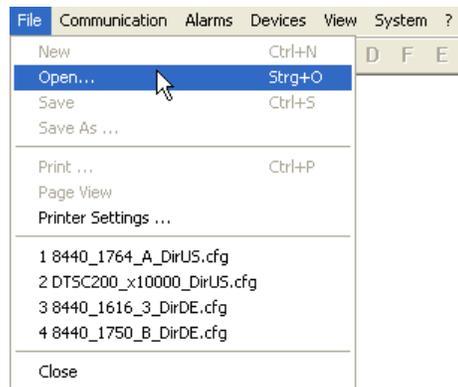


- 9.) To start communication between the control unit and LeoPC1 select "Communication" from the tool bar and "Connect" from the drop down menu or click on the up and down arrow icon.



- 10.) Select "Devices" from the tool bar and "Parameterize..." from the drop down menu or click on the letter P icon.

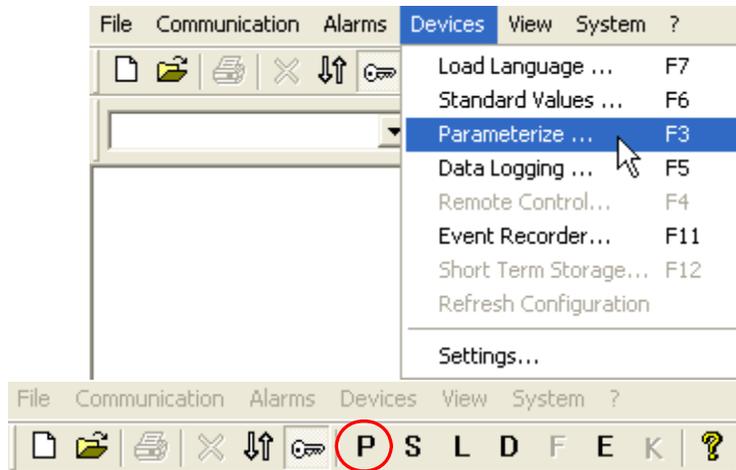


- 11.) A window will appear with all the tunable parameters in it. Move the cursor over the numbers for the password and double click.

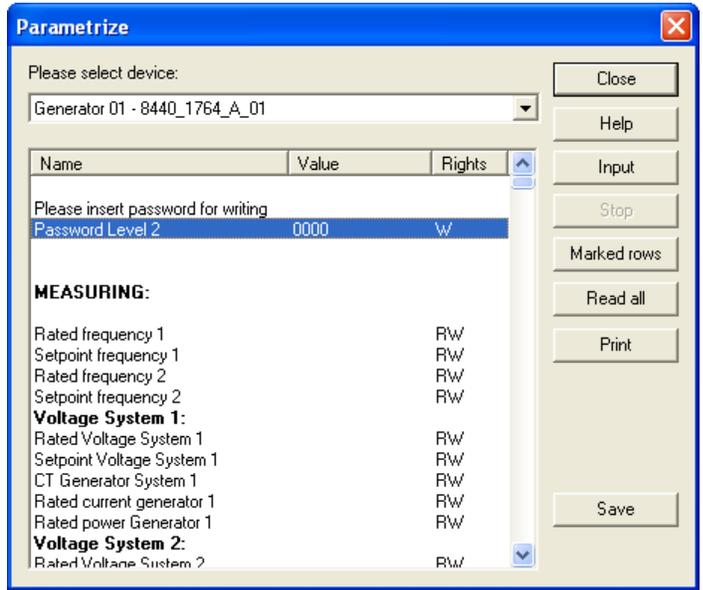


- 12.) Enter the password for code level CS 2 (Parameter 2).
- 13.) Close the parameterization window.
- 14.) Select "Devices" from the tool bar and "Load language..." from the drop down menu or click on the letter L icon.



15.) Load the desired language file using the button "Load LNG file ..."

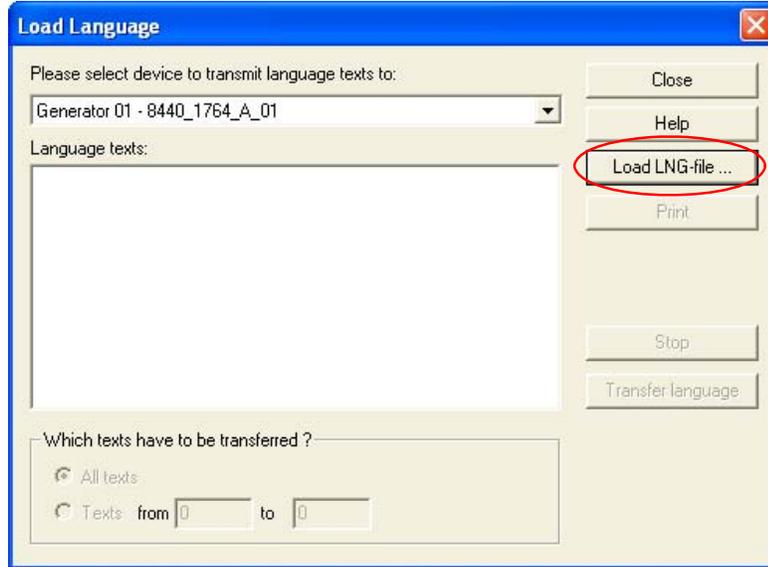

16.) Select the desired language and click the "Transfer language" button.

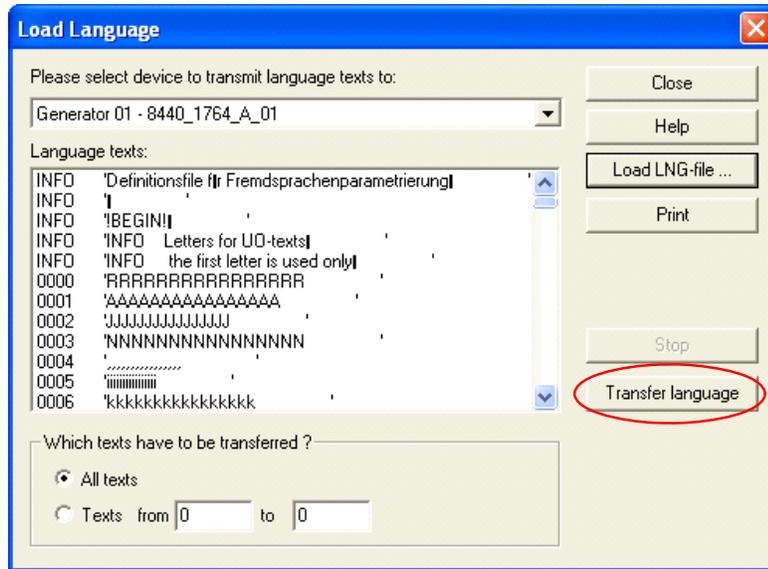

17.) If an additional language is to be loaded into the control unit, return to step 5 and change the language selection from the currently active language to the inactive language and acknowledge the change with the "Select" button. This is cannot be accomplished via LeoPC1. Repeat the sequence of step use to load the previous language.

Parameter 5

| | |
|----------|------|
| Language | ---- |
|----------|------|

Language

first / second

firstAll texts are displayed in the primary language.
 second.....All texts are displayed in the secondary language.

Service Display

Refer to manual 37238 for a description of these screens.

Event Logger (XPD, XPQ)



NOTE

Displaying and clearing of events depends on access authorization:

- Displaying of events Access authorization CS# 1 und CS# 2
- Clearing of events Access authorization CS# 2

CS = Code level (see chapter "Password" on page 15).

When an event listed on Table 3-1 or Table 3-2 occurs, it is stored in the event logger. The following information is recorded:

- Event
- Date of occurrence
- Time of occurrence

Up to 50 events can be stored in the event logger. The stored events are listed in chronological order starting with the most recent event. The oldest event entries are automatically deleted when the event log reaches 50 entries and a new event is recorded. Pressing the "RESET" button while an event is displayed will clear the event from the event log. The events are displayed on two lines. The top line indicates the date and time of the event that has occurred; the lower line shows the type of event.

Parameter 6

| |
|------------------|
| check event list |
| YES |

Event logging

YES/NO

-
- YES..... Events can be viewed and acknowledged.
 - NO..... Events cannot be viewed and acknowledged.



NOTE

Starting from version 4.3010, the event logger can also be read via CAN. This makes it possible for the event logger to be read via a GW4/modem for example.

If the event logger is to be read via CAN, the respective connection protocol (i.e. Gateway-RS232, IX-XAT VCI2-CAN, etc.), must be selected in LeoPC1. Reading the event logger is then performed in the same manner as for direct configuration.

Possible Event Logger Entries

| |
|----------------------|
| YY-MM-DD ss:mm |
| xxxxxxxxxxxxxxxxxxxx |

50 x alarm log

-
- YY-MM-DD ss:mm Display of date and time of the event.
 - xxxxxxxxxxxxxxxxxxxx ... Refer to Table 3-1 or Table 3-2 for event text.

| Event type | XXXXXXXXXXXXXXXXXXXX | |
|---|----------------------|---------------------|
| | German | English |
| Internal events | | |
| Engine overspeed (Pickup) | Überdrehzahl | Over speed |
| Generator overfrequency | Überfrequenz | Overfrequency |
| Generator underfrequency | Unterfrequenz | Underfrequency |
| Generator overvoltage | Gen.-Überspg. | Gen. overvolt. |
| Generator undervoltage | Gen.-Unterspg. | Gen. undervolt. |
| Generator overcurrent, level 1 | Gen.-Überstrom 1 | Gen. overcurr. 1 |
| Generator overcurrent, level 2 | Gen.-Überstrom 2 | Gen. overcurr. 2 |
| Reverse/reduced power | Rück/Minderleist | Revers/min. power |
| Overload | Gen.-Überlast | Gen. overload |
| Unbalanced(asymmetrical load | Schiefplast | Load unbalance |
| Mains overvoltage | Netz-Überspg. | Mains- overvolt. |
| Mains undervoltage | Netz-Unterspg. | Mains- undervolt. |
| Mains overfrequency | Netz-Überfreq. | Mains- underfreq. |
| Mains underfrequency | Netz-Unterfreq. | Mains- overfreq. |
| Mains phase/vector jump | Phasensprung | Phase shift |
| Battery undervoltage | Batt.-Unterspg. | Batt. undervolt. |
| GCB synchronization time monitoring expired | Synch. Zeit GLS | GCB syn. failure |
| MCB synchronization time monitoring expired | Synch. Zeit NLS | MCB syn. failure |
| CB closure to dead busbar time monitoring expired | Stör. df/dU-max. | Failure df/dVmax |
| The unload ramp rate timer has expired and the breaker was opened prior to the load reaching the minimum load | R-Rampe:GLS auf | P-ramp:open GCB |
| GCB closing malfunction | Störung GLS ZU | GCBclose failure |
| MCB closing malfunction | Störung NLS ZU | MCBclose failure |
| GCB opening malfunction | Störung GLS AUF | GCB open failure |
| MCB opening malfunction | Störung NLS AUF | MCB open failure |
| Zero power transfer control failure at GCB interchange synchronization | Bezugsleist. <>0 | Power not zero |
| Maintenance call timer expired | Wartung | Service |
| Control unit CAN bus (X1 to X5) interface monitoring failure | Fehl.Schnit.X1X5 | Interf.err. X1X5 |
| ECU CAN bus (Y1 to Y5) interface monitoring failure | Fehl.Schnit.Y1Y5 | Interf.err. Y1Y5 |
| Magnetic Pickup/generator frequency mismatch | Pickup/Gen.Freq. | Pickup/Gen.freq. |
| Engine failed to stop | Abstellstörung | Stop failure |
| Engine failed to start | Fehlstart | Start failure |
| Engine stopped unintentionally | ungewollter Stop | unintended stop |
| GCP Discrete Inputs | | |
| Discrete input [D01] | frei parametrierbar | freely configurable |
| Discrete input [D02] | | |
| Discrete input [D03] | | |
| Discrete input [D04] | | |
| Discrete input [D05] | | |
| Discrete input [D06] | | |
| Discrete input [D07] | | |
| Discrete input [D08] | | |
| Discrete input [D09] | | |
| Discrete input [D10] | | |
| Discrete input [D11] | | |
| Discrete input [D12] | | |
| Discrete input [D13] | | |
| Discrete input [D14] | | |
| Discrete input [D15] | | |
| Discrete input [D16] | | |

Table 3-1: Event recorder - Messages, part 1

| External expansions | | | | | |
|---|--------------------|---------------------|---------------------|-------------|--------------|
| Discrete input [D1.01] of IKD1.1 | Option SC10 + IKD1 | frei parametrierbar | freely configurable | | |
| Discrete input [D1.02] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.03] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.04] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.05] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.06] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.07] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D1.08] of IKD1.1 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.01] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.02] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.03] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.04] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.05] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.06] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.07] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Discrete input [D2.08] of IKD1.2 | Option SC10 + IKD1 | | | | |
| Air-fuel-ratio sender alarm from ST 3 | Option SC10 + ST 3 | | | Lambdasonde | Lambda probe |
| Other Events | | | | | |
| MANUAL operation mode enabled | BAW Hand | Manual mode | | | |
| AUTOMATIC operation mode enabled | BAW Automatik | Automatic mode | | | |
| STOP operation mode enabled | BAW Stop | Stop mode | | | |
| TEST operation mode enabled | BAW Probe | Test mode | | | |
| Load TEST operation mode enabled | BAW Lastprobe | Loadtest mode | | | |
| "MCB OFF" button pressed (in MANUAL MODE) | Taste NLS AUS | Button MCB OFF | | | |
| "GCB OFF" button pressed (in MANUAL MODE) | Taste GLS AUS | Button GCB OFF | | | |
| "GCB ON" button pressed (in MANUAL MODE) | Taste GLS EIN | Button GCB ON | | | |
| "MCB ON" button pressed (in MANUAL MODE) | Taste NLS EIN | Button MCB ON | | | |
| "START" button pressed (in MANUAL MODE) | Taste Hand START | Button START | | | |
| "STOP" button pressed (in MANUAL MODE) | Taste Hand STOP | Button STOP | | | |
| Remote start initiated | Fernstart | Remote start | | | |
| Remote stop initiated | Fernstop | Remote stop | | | |
| Remote acknowledgment via interface | Fernquittierung | Remote acknowl. | | | |
| Remote acknowledgment via terminal 6 | Quittierung Kl.6 | Acknowledg-ter 6 | | | |
| Acknowledgment via "RESET" button | Quittierg. Taste | Ackn.button QUIT | | | |
| Mains failure (AMF) | Netzausfall | Mains failure | | | |
| Mains settling time has expired | Netzwiederkehr | Mains o.k. | | | |
| Emergency power (AMF) started | Notstrom Anfang | Emerg. run start | | | |
| Emergency power (AMF) ended | Notstrom Ende | Emerg. run stop | | | |
| Engine successfully started (engine enabled, firing speed exceeded) | Aggr. gestartet | Start of engine | | | |
| Engine intentionally stopped | Aggregatestop | Stop of engine | | | |

Table 3-2: Event recorder – Messages, part 2

Analog Inputs

The display of the control unit is the analog alarm texts. Six digits on the left side of the screen are reserved for the monitored analog values. If the texts for these alarms are expanded to the complete message, the monitored values will be overwritten and not displayed. The text below is displayed when the controller detects the listed fault conditions.

WIRE _____ Wire break (Analog input wire broken)

ALARM _____ Limit 1 value exceeded

STOP _____ Limit 2 value exceeded

| |
|------------------------------------|
| YY-MM-DD ss:mm STOP Analog inpu |
|------------------------------------|

Example

Limit 2 value (STOP) of analog input 1 was exceeded. The text for the analog input shifts 6 digits to the right. This results in the measured value not being displayed. Ensure you take the text displacement into account when configuring the analog input!

Measuring



WARNING

It is absolutely necessary for correct rated values to be entered in the following parameters, as numerous measurements and monitoring functions refer to these values. Failure to do so may lead to incorrect measuring of parameters resulting in damage to or destruction of the generator and/or personal injury or death.



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 7

| | |
|---------------------|-----|
| Configure measuring | YES |
|---------------------|-----|

Configuration of the measuring values YES/NO

The basic generator measuring values are configured in this block of parameters. This parameter has the following effect:

YESThe parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NOThe parameters in this block are not displayed, cannot be modified, and are skipped.

Rated Frequency

Parameter 8

| | |
|-----------------------|--------|
| Generator freq. f set | 00.0Hz |
|-----------------------|--------|

Generator frequency set point 40.0 to 70.0 Hz

The generator frequency set point is configured here. This is the reference frequency that the generator will control at when operating in an isolated and/or no-load applications.. In most cases, the value entered into this screen will be 50 Hz or 60 Hz. It is possible to configure a value other than 50 Hz or 60 Hz into this parameter.

Parameter 9

| | |
|------------------------|--------|
| Rated system frequency | 00.0Hz |
|------------------------|--------|

System rated frequency 50/60 Hz

The frequency of the system that the generator is going to connect to must be configured in this parameter. This parameter is dependent on the individual country or individual system.

Potential Transformers (Voltage Transformers)



WARNING

The values of the following parameters must be verified to ensure that they are compatible with the configured values for the potential transformers:

- Generator rated voltage (Parameter 16)
- Voltage controller dead band (Parameter 58)
- Maximum voltage differential (dV max) for synchronization (Parameter 118)
- Maximum voltage differential (dV max) for a GCB dead bus closure (Parameter 127)
- Generator overvoltage threshold (Parameter 175)
- Generator undervoltage threshold (Parameter 177)

Parameter 10

| |
|------------------------------------|
| Gen.volt.transf. secondary 000V |
|------------------------------------|

| | |
|---|----------------------------------|
| Generator potential transformer secondary | [1] 50 to 125 V; [4] 50 to 480 V |
|---|----------------------------------|

- ① This value corresponds to the rated voltage on the **secondary** side of the PTs, which are directly connected to the control.

The potential transformer secondary voltage is set here in V. This parameter is utilized to calculate the generator voltage in the display. For voltages of 400 V measured without a potential transformer, 400 V must be entered here.

Parameter 11

| |
|--------------------------------------|
| Gen.volt.transf. primary 00.000kV |
|--------------------------------------|

| | |
|---|--------------------|
| Generator potential transformer primary | 0.050 to 65.000 kV |
|---|--------------------|

- ① This value corresponds to the rated voltage on the **primary** side of the PTs.

The potential transformer primary voltage is entered here in kV. This entry is used to show the generator voltage in the display. For voltages measured without a potential transformer such as 400V, the value must be entered as 00.400 kV.

Parameter 12

| |
|------------------------------------|
| Bus.volt.transf. secondary 000V |
|------------------------------------|

| | |
|--|----------------------------------|
| Busbar potential transformer secondary | [1] 50 to 125 V; [4] 50 to 480 V |
|--|----------------------------------|

- ① This value corresponds to the **rated** voltage on the secondary side of the PTs, which are directly connected to the control.

The potential transformer secondary voltage is set here in V. This parameter is utilized to calculate the busbar voltage in the display. For voltages of 400 V measured without a potential transformer, 400 V must be entered here.

Parameter 13

| |
|--------------------------------------|
| Bus.volt.transf. primary 00.000kV |
|--------------------------------------|

| | |
|--------------------------------------|--------------------|
| Busbar potential transformer primary | 0.050 to 65.000 kV |
|--------------------------------------|--------------------|

- ① This value corresponds to the **rated voltage** on the primary side of the PTs.

The potential transformer primary voltage is entered here in kV. This entry is used to show the busbar voltage in the display. For voltages measured without a potential transformer such as 400V, the value must be entered as 00.400 kV.



WARNING

The values of the following parameters must be verified to ensure that they are compatible with the configured values for the potential transformers:

- Mains overvoltage threshold (Parameter 185)
- Mains undervoltage threshold (Parameter 187)

Parameter 14

| |
|------------------------------------|
| mains volt.trans secondary 000V |
|------------------------------------|

| | |
|---------------------------------------|----------------------------------|
| Mains potential transformer secondary | [1] 50 to 125 V; [4] 50 to 480 V |
|---------------------------------------|----------------------------------|

- ① This value corresponds to the **rated** voltage on the secondary side of the PTs, which are directly connected to the control.

The potential transformer secondary voltage is set here in V. This parameter is utilized to calculate the mains voltage in the display. For voltages of 400 V measured without a potential transformer, 400 V must be entered here.

Parameter 15

| |
|--------------------------------------|
| mains volt.trans primary 00.000kV |
|--------------------------------------|

| | |
|-------------------------------------|--------------------|
| Mains potential transformer primary | 0.050 to 65.000 kV |
|-------------------------------------|--------------------|

- ① This value corresponds to the **rated voltage** on the primary side of the PTs.

The potential transformer primary voltage is entered here in kV. This entry is used to show the mains voltage in the display. For voltages measured without a potential transformer such as 400V, the value must be entered as 00.400 kV.

Rated Voltage

Parameter 16

| | |
|----------------------|------|
| Gen.voltage V set | 000V |
|----------------------|------|

Generator voltage set point

[1] 50 to 125 V; [4] 50 to 530 V

i This value corresponds to the **rated** voltage on the secondary side of the PTs, which are directly connected to the control.

The generator voltage set point is configured here. This is the reference voltage that the generator will control at when operating in an isolated and/or no-load applications. The voltage controller enable set point (Parameter 55) refers to the value configured in this parameter.

Parameter 17

| | |
|----------------------------|------|
| Rated voltage in system | 000V |
|----------------------------|------|

Rated system voltage

[1] 50 to 125 V; [4] 50 to 480 V

The system rated voltage (V_{L-L}) is defined in this parameter. The following parameters use the value configured here as a protection and control reference point:

- Generator voltage monitoring
- Mains voltage monitoring
- Voltage controller dead band
- Maximum voltage differential (dV max) for synchronization
- Maximum voltage differential (dV max) for a GCB dead bus closure

Parameter 18

| |
|--------------------------|
| Volt.meas./mon. ----- |
|--------------------------|

This parameter affects the display.

Voltage measuring/voltage monitoring

Ph-neut./Ph-Ph

The control can monitor either the phase-neutral voltages (four-wire system) or the phase-phase voltages (three-wire system). Generally, low-voltage systems are configured to monitor the phase-neutral voltages, while medium- and high-voltage systems are configured to monitor the phase-phase voltages only. The monitoring of the phase-phase voltages is recommended to avoid a phase-earth fault in a compensated or isolated mains resulting in the voltage protection tripping.

Ph-neut/Ph-neut System voltage measurement is performed phase-neutral (WYE connected system). The phase voltages and the neutral must be connected for proper calculation. This requires that the neutral terminal (terminal 0) be connected to the ground reference. The voltage measurement and protection functions are performed in accordance with WYE connected systems. The phase-phase and phase-neutral voltages are displayed.

Ph-neut/Ph-Ph System voltage measurement is performed phase-neutral (WYE connected system). The phase voltages and the neutral must be connected for proper calculation. This requires that the neutral terminal (terminal 0) be connected to the ground reference. The phase-phase and phase-neutral voltages are displayed. The voltage protection is performed phase-phase only.

Ph-Ph/Ph-Ph System voltage measurement is performed phase-phase (Delta connected system). Phase voltages must be connected for proper calculation. This does not require the neutral terminal (terminal 0) be connected to the ground reference. The voltage measurement and protection functions performed in accordance with Delta connected systems. Only the phase-phase voltages are displayed.

Note:

- Ph-neut** = Four-wire system (3ph 4w)/Wye
- Ph-Ph** = Three-wire system (3ph 3w)/Delta

**NOTE**

If a three-wire system is connected, terminal 0 must remain disconnected. If terminal 0 is connected, the control may monitor a voltage that exceeds the permissible limits.

Generator Current

Parameter 19

| |
|-------------------------------------|
| Current transf. generator 0000/x |
|-------------------------------------|

Generator CTs**10 to 7,000/{x} A**

The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5A CT should output 3A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and may affect the functionality of the control. The control may be ordered with either ../1 A or ../5 A current transformer inputs. The CT inputs will dictate how this parameter is displayed on the control. Information about the current transformers inputs may be found on the unit data plate.

{x} = 1 A GCP30x1B/xxx = Current transformer inputs rated for ../1 A

{x} = 5 A GCP30x5B/xxx = Current transformer inputs rated for ../5 A

Parameter 20

| |
|------------------------------|
| Power measuring gen.----- |
|------------------------------|

Generator power measurement**singlephase / threephase**

This controller may be configured to measure generator power single-phase or three-phase. If "single-phase power measurement" is selected, only the voltage and current from L1 phase will be used to calculate power. If "three-phase power measurement" is selected, the voltage and current from all three phases will be used to calculate power.

- single-phase power measurement: $P = \sqrt{3} \times V_{L12} \times I_{L1} \times \text{power factor}$
- three-phase power measurement:

$$P = (V_{L1N} \times I_{L1} \times \text{power factor}) + (V_{L2N} \times I_{L2} \times \text{power factor}) + (V_{L3N} \times I_{L3} \times \text{power factor})$$

**NOTE**

When the generator is supplying positive real power to a load, the current should flow from the generator to the load through the CT in the "S1 to S2" direction. When positive real power is being supplied, the inductive reactive (lagging) power flows in the same direction through the CT. If the S1 terminal/polarity dot is facing the generator and the s1 terminal of the CT is connected to the s1 terminal of the GCP-30, the control will display that positive real power is being supplied. If a CT is installed backwards, that phase will display negative real power for that phase.

Parameter 21

| |
|---------------------------------|
| Rated power generator 0000kW |
|---------------------------------|

Generator rated power**5 to 9,999 kW**

The generator rated power is configured here. It is crucial to ensure that the correct generator power rating is entered. Multiple measuring, control, and protective functions refer to the value configured in this parameter (i.e. the percentage configured for generator overload).

Parameter 22

| |
|----------------------------------|
| Rated current generator 0000A |
|----------------------------------|

Generator rated current**10 to 7,000 A**

The generator rated current is configured here. The percentages configured for the protective function refer to the value input in this parameter.

Mains Current/Mains Power Measurement

Mains current measurement via mains CT

Parameter 23

| | |
|-----------------|--------|
| Current transf. | |
| mains | 0000/x |

Mains current transformer

5 to 7,000/{x} A

The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5A CT should output 3A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and may affect the functionality of the control.

The control may be ordered with either ../1 A or ../5 A current transformer inputs. The CT inputs will dictate how this parameter is displayed on the control. Information about the current transformers inputs may be found on the unit data plate.

{x} = 1 A.....GCP30x1B/xxx = Current transformer inputs rated for ../1 A

{x} = 5 A.....GCP30x5B/xxx = Current transformer inputs rated for ../5 A

Mains power **actual value** measurement via analog input (XPD, XPQ)

The **actual value** measurement of the mains power via an analog input T{x} [x = 1 to 7] is possible if at least one of the analog inputs T{x} [x = 1 to 7] is a 0/4 to 20 input. Selection of the analog input is performed with the following parameters.

Parameter 24

| |
|--------------------------------|
| Analog in Pmains OFF |
|--------------------------------|

Analog input P-mains: Selection

OFF / T{x}

OFF..... The mains power analog input functionality is not used. The **actual value** for the mains interchange (import/export) real power is calculated from the measured mains current and the measured mains voltage. The analog inputs can either be used as real power **set point inputs** or as freely configurable alarm inputs. The following screens of this function are not displayed.

T{x}..... The mains interchange (import/export) real power **actual value** can be transmitted as a 0/4 to 20 mA signal to the control from a measuring transducer and measured via the configured scalable 0/4 to 20 mA input T{x} (x = 1 to 7). The controller will not accept other types of analog signals for this function (i.e. 0 to 5 Vdc). The following screens of this function are displayed.

Note

The analog input used (T{x}) for the mains power analog input must be configured as follows:

- "Generator external power set point" (Parameter 78) must be configured as OFF.
- "Analog input {x} scalable" (Parameter 215) must be configured as OFF (refer to the "Analog inputs" section in this manual).
- The GCP-30 may be purchased with various types of analog inputs. If the controller being configured has analog inputs, only a 0/4 to 20 mA input may be used for this input.
- Due to the fact that LeoPC1 is not a dynamic program, the graphic display of the generator/plant does not automatically update to reflect any changes made during reconfiguration. To update the program's graphical display, LeoPC1 must be shutdown and restarted.

Priority of the functions of the analog inputs

If more than one function has been assigned to a analog input, the following is the priority that the control assigns to functions:

- Highest priority: Mains interchange (import/export) real power **actual value**
- Middle priority: Generator real power **set point value**
- Lowest priority: Measuring input as common analog value

Parameter 25

| |
|----------------------------|
| Analog in Pmains 0-00mA |
|----------------------------|

Analog input P mains: Range **0 to 20 mA / 4 to 20 mA**

The mains power analog input measuring range is defined here. 0 to 20 mA or 4 to 20 mA may be selected for this parameter. If the 4 to 20 mA range is selected and the current for the input drops below 2 mA, a broken wire alarm is issued.

Note

The text and number of significant digits to be displayed for the mains interchange analog input are defined in "name and unit" (Parameter 216). Refer to the "Analog Inputs (XPD, XPO)" section starting on page 119.



NOTE

When determining the measuring range for an import/export real power control application, ensure that the the measuring range is in the middle of the of the selected set point values. This will utilize the unit control dynamics to the fullest extent.

Parameter 26

| |
|--|
| Analog in Pmains 0% 0000kW |
|--|

Mains real power 0/4 mA **[1] -9,990 to 9,990 kW; [4] -6,900 to 6,900 kW**

The scaleable analog input is assigned a numerical value, which corresponds to the lowest input value → (0 % (0 or 4 mA) corresponds to -500 kW or 500kW imported from the mains).

Parameter 27

| |
|--|
| Analog in Pmains 100% 0000kW |
|--|

Mains real power 20 mA **[1] -9,990 to 9,990 kW; [4] -6,900 to 6,900 kW**

The scaleable analog input is assigned a numerical value, which corresponds to the highest input value → (100 % (20 mA) corresponds to 500 kW or 500kW exported to the mains).

LS 4 Mode (GCP-31: XPD, XPQ)

Parameter 28

| | |
|-----------|----|
| LS 4 mode | ON |
|-----------|----|

[GCP-31]

LS 4 mode **ON/OFF**

ON..... The GCP has been enabled to operate with LS 4 breaker controllers. The GCP controller monitors the CAN bus for messages from an LS 4 and reacts accordingly. Additionally the GCP controller transmits messages to the LS 4.

OFF..... The control GCP operates as a genset control without LS 4 functionality.

Parameter 29

| | |
|-----------------------|--------|
| Rated power in system | 0000kW |
|-----------------------|--------|

[GCP-31]

Rated power in the system **0 to 16,000 kW**

The GCP-31 uses the value configured in this parameter to display the real power at the mains interchange. The LS 4 transmits the measured real power at the mains interchange as a percentage to the GCP-31. The GCP-31 calculates that percentage with the value configured here and displays the power level as a kW reading.

Note

This parameter is only utilized if the LS 4 mode has been enabled.

IMPORTANT!

Since the LS 4 only transmits a percentage value related to the rated system power, it is absolutely necessary that this parameter and the system rated power parameter in the LS 4 be configured identically.

Measurement Units



NOTE

LeoPC1 is not a dynamic program. Changes made to a controller during configuration will not be automatically updated in the graphic display of LeoPC1. LeoPC1 must be shutdown and restarted for any changes to be reflected in the graphic display.

Parameter 30

| | |
|----------------|-------|
| Temperature in | ----- |
|----------------|-------|

Analog inputs; temperature measurement in ... **Celsius / Fahrenheit**

The analog input for temperature measurement may be configured to display in °C or °F. The configured engineering unit is displayed in the LC display or transmitted via the CAN bus to other HMIs communicating with the GCP-30.

| | |
|-------------------------------------|--------------------------------|
| °C ⇔ °F | °F ⇔ °C |
| $T [°F] = (T [°C] \times 1.8) + 32$ | $T [°C] = (T [°F] - 32) / 1.8$ |

Parameter 31

| | |
|-------------|-------|
| Pressure in | ----- |
|-------------|-------|

Analog inputs; pressure measurement in ... **bar / psi**

The analog input for pressure measurement may be configured to display in bar or phi. The configured engineering unit is displayed in the LC display or transmitted via the CAN bus to other HMIs communicating with the GCP-30.

| | |
|---------------------------------|----------------------------|
| bar ⇔ psi | psi ⇔ bar |
| $P [psi] = P [bar] \times 14.5$ | $P [bar] = P [psi] / 14.5$ |

Password Configuration



NOTE

Once the code level is entered, access to the configuration menus will be allowed for two hours or until another password is entered into the control. If a user needs to exit a code level, then the control should have the CS0 code level enabled. This will block access to all of the control's parameters. A user may re-enable the CS0 code level by changing any one digit of the randomly generated number on the password screen and entering it into the unit.

The control unit automatically reverts to code level CS0 two hours after the entry of a password, or if the power supply is disconnected from the control unit. By entering the correct password, the corresponding level may again be accessed.

Parameter 32

```
Define level 1
code          0000
```

Code level 1 (Customer) 0000 to 9999

Access to this parameter is only enabled when the CS2 access code has been entered into the controller. Personnel assigned the CS1 password will be permitted access only to select parameters.

The default access code for this code level (CS) is **CS1 = 0 0 0 1**

Parameter 33

```
Define level 2
code          0000
```

Code level 2 (Commissioner) 0000 to 9999

Access to this parameter is only enabled when the CS2 access code has been entered into the controller. Personnel assigned the CS2 password will be permitted access to all parameters.

The default access code for this code level (CS) is **CS2 = 0 0 0 2**

Controller



WARNING

The following parameters dictate how the GCP-30 controls voltage, frequency, load, and power factor. It is vital that the correct setting be entered in these parameters. Failure to do so may lead to incorrect measurements and failures within the control unit resulting in damage to or destruction of the generator and/or personal injury or death.



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 34

| | |
|----------------------|-----|
| Configure controller | YES |
|----------------------|-----|

Configuration of the controller

YES/NO

The basic generator control functions are configured in this block of parameters. This parameter has the following effects:

YES..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NO..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Analog Controller Outputs (BPQ, XPQ)

Some controls may be purchased with the BPQ or XPQ packages. These packages offers an alternative to a three-position controller output to a voltage regulator or speed control. If this option is selected, additional configuration screens are displayed for tuning. The analog PID controller is a closed-loop control loop with the controlled system (usually a first-order lag element). The PID loop parameters (gain K_{PR} , reset T_N , and derivative T_V) can each be modified individually.

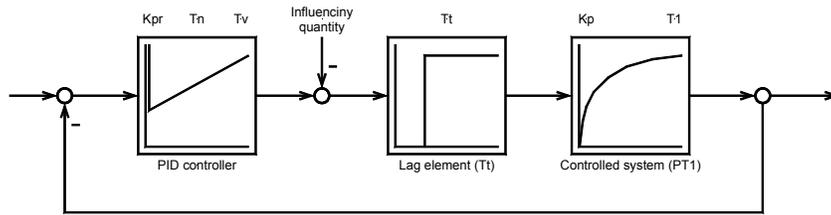


Figure 3-1: Control loop

If an abrupt disturbance variable is applied to the control loop, the reaction of the controlled system can be recorded at the output as a function of time (step response).

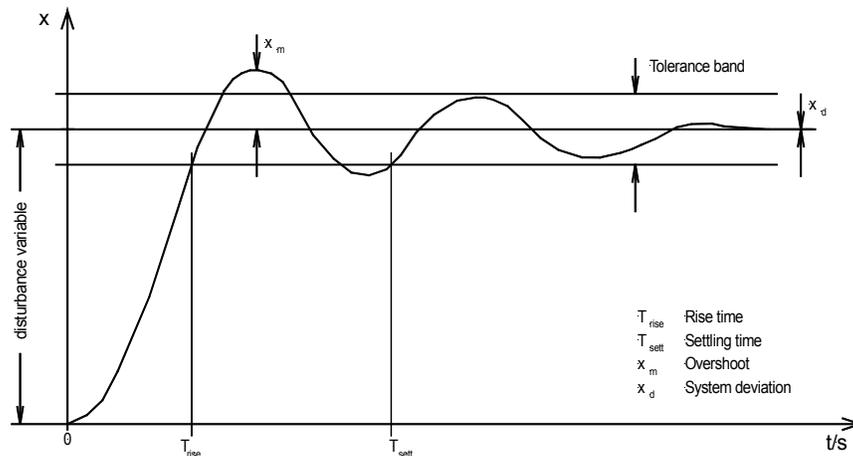


Figure 3-2: Step response (Example)

The step response consists of multiple values; these are required for adjusting the controller to its optimum setting:

Rise time T_{rise} : The period of time it takes for a control variable to re-enter a predefined tolerance range after a disturbance has been applied or the reference input has been changed. The time starts when the control variable leaves the predefined tolerance range and ends when the control variable first re-enters the predefined tolerance range.

Settling time T_{sett} : The period of time it takes for a control variable to permanently re-enter a predefined tolerance range after a disturbance has been applied or the reference input has been changed. The time starts when the control variable leaves the predefined tolerance range and ends when the control variable permanently re-enters the predefined tolerance range.

Overshoot x_m : The greatest deviation passed the defined set point value when the system is transitioning from one steady-state condition to a new steady-state condition following the application of a disturbance to the system or reference input variable ($x_{m\text{Optimal}} \leq 10\%$).

System deviation x_d : Permanent deviation from the final value (PID controller: $x_d = 0$).



CAUTION

The following must be ensured when tuning a controller:

- Ensure that the emergency shutdown system is operational
- While determining the critical frequency, pay attention to the amplitude and frequency
- If the two values change uncontrollably, initiate

→ EMERGENCY SHUTDOWN ←

Initial state: The start position of the speed or voltage controller is determined using the initial state of the controller. If the controller output is disabled, the basic setting can be used to output a fixed controller position. If the MANUAL operation mode has been selected, the initial state signal is output only after the engine "START" button has been pressed. Even when the analog controller output is disabled, the initial state can be freely adjusted (e.g. the speed controller can be controlled in a linear manner). When the "STOP" button is been pressed, the analog controller is turned off.

| |
|--------------------------------------|
| Controller outp. Init.state= 000% |
|--------------------------------------|

Initial state of the actuator

0 to 100 %

The value entered for the initial state is the start reference point for a speed or voltage controller. If the output to that particular controller has been disabled, the output will act as a control position reference point.

General settings: The setting rule described below only serves as an example. It cannot be assumed that this is the proper method of control for your system since every system behaves uniquely.

There are various methods of setting a controller. The setting rules of Ziegler and Nichols are explained below (determination for abrupt disturbances on the system input); this setting method assumes a pure lag element connected in series with a first-order lag system.

1. The controller is operated as a P-loop only controller (where $T_n = \infty$ [screen setting: $T_n = 0$], $T_v = 0$).
2. Increase gain K_{PR} (P-gain) until $K_P = K_{Pcrit}$ and the control loop starts to oscillates continuously.



ATTENTION

If the engine starts to oscillate uncontrollably, carry out an emergency shutdown and alter the screen setting accordingly.

3. At the same time, measure the critical cycle duration T_{crit}
4. Set the parameters:

PID-controller

$$K_{PR} = 0.6 \times K_{Pcrit}$$

$$T_n = 0.5 \times T_{crit}$$

$$T_V = 0.125 \times T_{crit}$$

PI-controller

$$K_{PR} = 0.45 \times K_{Pcrit}$$

$$T_n = 0.83 \times T_{crit}$$

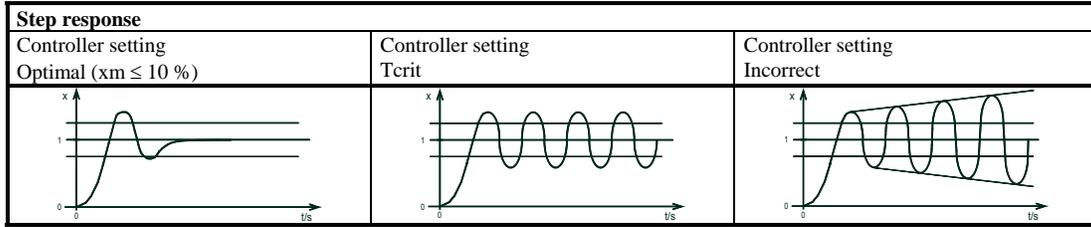


Figure 3-3: Step responds - governor configuration

P-gain
Kpr = 000

P-gain (K_{PR}) Proportional-action coefficient

1 to 240

The proportional-action coefficient K_{PR} indicates the closed-loop control system gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Reset time
Tn = 00.0s

Reset time (T_n)

0.2 to 60.0 s

The reset time T_n represents the I-component of the PID controller. The reset time corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The reset time constant must be greater than the derivative time constant. If the reset time constant is too small, the engine will continually oscillate. If the reset time constant is too large, the engine will take an excessive amount of time to settle at a steady state.

Derivative time
Tv=0.00s

Derivative-action time (T_V)

0.00 to 6.00 s

The derivative-action time T_V represents the D-component of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

Real Power Controller, Set Point Values

These screens appear only if the generator real power controller (Parameter 74) has been configured to "ON".



NOTE

The fixed-value power controller does not monitor the mains interchange point. If excess power for the load requirements is generated, the excess power is exported to the mains. If insufficient power for the load requirements is generated, remaining power required is imported from the mains.

Engine starting depends on whether an automatic start/stop operation has been enabled or disabled (Parameter 95 or Parameter 96). If it has been disabled, the engine will always start.

Parameter 35

| | |
|------------------|---------|
| Power controller | |
| Pset1 | I0000kW |

Power controller: set point 1

C/I/E 0 to 9,999 kW

Set point 1 is enabled when **Automatic 1** (terminal 3) is energized. The mains interchange (import/export) real power is then controlled to the configured value.

Generator real power control

C..... The letter C stands for constant power set point (= base load). The generator shall always supply the value entered for the constant power level. All load swings are absorbed by the utility. The generator will always start when a constant power (base load) operation is enabled.

Mains interchange (import/export) real power control

I..... The letter I stands for import power (power supplied by the mains). The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will start when the power imported from the utility exceeds the level configured in this parameter.

E..... The letter E stands for export power (power supplied to the mains). The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.

Parameter 36

Power controller: set point 2

C/I/E 0 to 9,999 kW

| | |
|-------------------------|---------|
| Power controller | |
| Pset2 | I0000kW |

Set point 2 is enabled when **Automatic 2** (terminal 5) is energized and the external set point value (0/4 to 20 mA or interface) has not been enabled. If set point 1 and set point 2 are enabled at the same time, the power will be controlled in the manner specified by set point 1. The mains interchange (import/export) real power is controlled to the configured value.

Generator real power control

CThe letter C stands for constant power set point (= base load). The generator shall always supply the value entered for the constant power level. All load swings are absorbed by the utility. The generator will always start when a constant power (base load) operation is enabled.

Mains interchange (import/export) real power control

IThe letter I stands for import power (power supplied by the mains). The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will start when the power imported from the utility exceeds the level configured in this parameter.

EThe letter E stands for export power (power supplied to the mains). The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.

Table Of Set Point Values

| Automatic 1 (terminal 3) | Automatic 2 (terminal 5) | Control via interface | External set point value | Specification of the set point value through |
|--------------------------|--------------------------|-----------------------|--------------------------|---|
| energized | insignificant | insignificant | insignificant | Set point 1 (Parameter 35) |
| de-energized | energized | OFF | OFF | Set point 2 (Parameter 36) |
| de-energized | energized | insignificant | ON | Externally via 0/4-20 mA input (XPD, XPQ; Parameter 78) |
| de-energized | energized | ON | OFF | Externally via interface |
| de-energized | de-energized | OFF | OFF | Standby only: Emergency power (AMF) |

Table 3-3: Set point value table

Frequency Controller

Parameter 37

| | |
|----------------------------|------|
| Initial state Frequency | 000% |
|----------------------------|------|

BPQ, XPQ

Frequency controller: initial state of the actuator

0 to 100 %

The value entered for this parameter is the start reference point for the analog output to the speed controller. If the output to the speed control has been disabled, the output will act as a control position reference point. The percentage value configured here refers to the range of the analog signal configured by "Stepper sign.frq (min.)" (Parameter 48) and "Stepper sign.frq (max)" (Parameter 49).

Example: If a 0 to 10 V signal is configured with a min. limit of 10% and a max. limit of 90%, the reference range is 1 to 9 V. A setting of 25% would result a start reference point of 3 V. Refer to the Special Applications chapter of the Application Manual 37240 for more detailed information about this setting.

Parameter 38

| | |
|------------------|----|
| Freq. controller | ON |
|------------------|----|

Frequency controller: enable

ON/OFF

ON..... The generator frequency is controlled by the GCP-30. The method of generator frequency is determined by the application (isolated operation / synchronization). The subsequent screens of this function are displayed.

OFF..... The generator frequency is not controlled by the GCP-30 The subsequent screens of this function are not displayed.

Parameter 39

| | |
|------------------------|--------|
| f-contr. active at: | 00.0Hz |
|------------------------|--------|

Frequency controller: activation frequency

0.0 to 70.0 Hz

The frequency controller is activated when the monitored generator frequency has exceeded the value configured in this parameter. This prevents the GCP-30 from attempting to control the frequency while the engine is completing its start sequence.

Parameter 40

| | |
|----------------------------|------|
| Delay time for f-contr. | 000s |
|----------------------------|------|

Frequency controller: activation delay

0 to 999 s

The frequency controller is enabled after the configured time for this parameter expires.

Parameter 41

| | |
|-------------------------|--------|
| Freq.controller ramp | 00Hz/s |
|-------------------------|--------|

Frequency controller: set point ramp

1 to 50 Hz/s

Different sized generators and applications require different ramp rates for the speed control when starting. The rate at which the GCP-30 changes the speed reference point is defined by this parameter. A more rapid change to the speed reference requires a larger value to be configured here.



NOTE

The parameters for the speed/frequency controller influence the generator real power controller.

Parameter 42

F/P contr.type

BPQ, XPQ

Frequency controller: type

THREESTEP / ANALOG / PWM

THREESTEP The signal to the speed control to increase/decrease the speed/frequency/real power is output via the relay manager to any two configurable relays. The following relay functions must be assigned to the individual relays.

- function 114 = increase RPM (n+) / frequency (f+) / power (P+)
- function 115 = decrease RPM (n-) / frequency (f-) / power (P-)

Refer to the Controller Outputs section of manual 37364 for wiring an external Resistive/Capacitive protection circuit.

ANALOG.....Speed control is performed via the analog outputs (terminals 8/9/10). The control of speed/frequency/real power is performed via either a voltage or current signal. The amplitude and signal type (mA or V) to be utilized is configured in "F/P contr.output" (Parameter 46). If a voltage signal is used, a jumper must be installed between terminals 8/9 (refer to the wiring diagram in manual 37364).

PWM.....Speed control is performed via the analog outputs (terminals 8/9/10). The control of speed/frequency/real power is performed via a PWM signal. The amplitude of the PWM signal to be utilized is configured in "Level PWM" (Parameter 47). If a PWM signal is used, a jumper must be installed between terminals 8/9 (refer to the wiring diagram in manual 37364).

Three-Position Controller (XPD; BPQ, XPQ: Setting 'THREESTEP')

Parameter 43

Freq.controller
deadband 0.00Hz

Frequency controller: dead band

0.02 to 1.00 Hz

Isolated operation The generator frequency is controlled in such a manner that the measured frequency does not deviate from the configured set point by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts.

Synchronization The generator frequency is controlled in such a manner that the measured frequency does not deviate from the monitored reference (mains or busbar) frequency by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts. The value configured for this parameter must be less than the value configured for the df max (maximum frequency differential) for synchronization.

Parameter 44

Freq.controller
time pulse>000ms

Frequency controller: three-step minimum pulse

10 to 250 ms

When "F/P contr.type" (Parameter 42) has been configured as THREESTEP, a minimum pulse on time must be configured. The shortest possible pulse time should be configured to limit overshoot of the desired speed reference point.

Parameter 45

Freq.controller
gain Kp 00.0

Frequency controller: gain

0.1 to 99.9

The gain factor K_p influences the the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the power factor reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Analog Controller Output (BPQ, XPQ: Setting 'ANALOG/PWM')

Parameter 46

F/P contr.output

BPQ, XPQ

Frequency controller: output range

see below

If "F/P contr.type" (Parameter 42) has been configured as "ANALOG", this parameter must be configured to the appropriate type of analog controller signal. The range of the analog output is configured here. To switch from a current to a voltage or PWM signal output a jumper must be installed between terminals 8/9. The available ranges are listed below

| Type | Setting in above configuration screen | Jumper between term. 8/9 | Range | Lower level | Upper level |
|---------|---------------------------------------|--------------------------|-------------|-------------|-------------|
| Current | +/-20mA (+/-10V) | no | +/-20mA | -20 mA | +20 mA |
| | +/-10mA (+/-5V) | | +/-10mA | -10 mA | +20 mA |
| | 0 to 10mA (0 to 5V) | | 0-10mA | 0 mA | 10 mA |
| | 0 to 20mA (0 to 10V) | | 0-20mA | 0 mA | 20 mA |
| | 4 to 20mA | | 4-20mA | 4 mA | 20 mA |
| | 10 to 0mA (5 to 0V) | | 10-0mA | 10 mA | 0 mA |
| | 20 to 0mA (10 to 0V) | | 20-0mA | 20 mA | 0 mA |
| | 20 to 4mA | | 20-4mA | 20 mA | 4 mA |
| Voltage | +/-20mA (+/-10V) | yes | +/-10V | -10 Vdc | +10 Vdc |
| | +/-10mA (+/-5V) | | +/-5V | -5 Vdc | +5 Vdc |
| | +/-3V | | +/-3V | -3 Vdc | +3 Vdc |
| | +/-2.5V | | +/-2.5V | -2.5Vdc | +2.5 Vdc |
| | +/-1V | | +/-1V | -1 Vdc | +1 Vdc |
| | 0 to 10mA (0 to 5V) | | 0 to 5V | 0 Vdc | 5 Vdc |
| | 0.5V to 4.5V | | 0.5 to 4.5V | 0.5 Vdc | 4.5 Vdc |
| | 0 to 20mA (0 to 10V) | | 0 to 10V | 0 Vdc | 10 Vdc |
| | 10 to 0mA (5 to 0V) | | 5 to 0V | 5 Vdc | 0 Vdc |
| | 4.5V to 0.5V | | 4.5 to 0.5V | 4.5 Vdc | 0.5 Vdc |
| | 20 to 0mA (10 to 0V) | | 10 to 0V | 10 Vdc | 0 Vdc |



NOTE

The control logic of the PWM signal can be inverted by following steps:

- Configure "F/P contr.type" (Parameter 42) as ANALOG.
- Configure "F/P contr.output" (Parameter 46 "F/P contr.output") with any of above inverted control outputs (i.e. "10 to 0mA (5 to 0V)", "4.5V to 0.5V", "20 to 0mA (10 to 0V)" or "20 to 4mA").
- Return to "F/P contr.type" (Parameter 42) by pressing "Select" and "Cursor→" simultaneously.
- Configure "F/P contr.type" (Parameter 42) as PWM.

The PWM signal is now inverted.

Parameter 47

Level PWM

BPQ, XPQ

Frequency controller: PWM level

3.0 to 10.0 V

If PWM has been selected in Parameter 42 the amplitude of the PWM signal can be adjusted here.

Parameter 48

Stepper sign.frq (min.) 000%

BPQ, XPQ

Frequency controller: minimum value

0 to 100%

This parameter permits the operator to clamp or limit the lower limit of the analog output signal.

Example: A 1 to 4V analog output is needed for the voltage controller to operate properly. A jumper is installed on terminals 8/9 as described above and the analog output signal of 0 to 5V is selected. The number to be configured as the minimum output signal in this parameter is determined by dividing the desired lower limit by the range of the signal (1V/5V = 0.20 or 20%). 20% is the value to be configured in this parameter.

Parameter 49

| | |
|----------------------------|------|
| Stepper sign.frq (max.) | 000% |
|----------------------------|------|

BPQ, XPQ

Frequency controller: maximum value**0 to 100%**

This parameter permits the operator to clamp or limit the upper limit of the analog output signal.

Example: A 1 to 4V analog output is needed for the voltage controller to operate properly. A jumper is installed on terminals 8/9 as described above and the analog output signal of 0 to 5V is selected. The number to be configured as the maximum output signal in this parameter is determined by dividing the desired upper limit by the range of the signal ($4V/5V = 0.80$ or 80%). 80% is the value to be configured in this parameter.

Parameter 50

| | |
|-----------------------------|-----|
| Freq.controller gain Kpr | 000 |
|-----------------------------|-----|

BPQ, XPQ

Frequency controller: P gain**1 to 240**

The gain coefficient K_{pr} specifies the Proportional portion of the PID control loop. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Parameter 51

| | |
|-----------------------------|-------|
| Freq.controller reset Tn | 00.0s |
|-----------------------------|-------|

BPQ, XPQ

Frequency controller: reset time (integration)**0.0 to 60.0 s**

The reset time T_n identifies the Integral portion of the PID control loop. The reset time corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The reset time constant must be greater than the derivative time constant. If the reset time constant is too small, the engine will continually oscillate. If the reset time constant is too large, the engine will take an excessive amount of time to settle at a steady state.

Parameter 52

| | |
|-------------------------------|-------|
| Freq.controller derivat.Tv | 0.00s |
|-------------------------------|-------|

BPQ, XPQ

Frequency controller: derivative-action time**0.00 to 6.00 s**

The derivative-action time T_v identifies the Derivative portion of the PID control loop. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

Voltage Controller

Parameter 53

| | |
|--------------------------|------|
| Initial state voltage | 000% |
|--------------------------|------|

BPQ, XPQ

Voltage controller: initial state of the actuator

0 to 100 %

The value entered for this parameter is the start reference point for the analog output to the voltage controller. If the output to the voltage control has been disabled, the output will act as a control position reference point. The percentage value configured here refers to the range of the analog signal configured by "Stepper sign.vol (min.)" (Parameter 62) and "Stepper sign.vol (max.)" (Parameter 63).

Example: If a 0 to 10 V signal is configured with a min. limit of 10% and a max. limit of 90%, the reference range is 1 to 9 V. A setting of 25% would result a start reference point of 3 V. Refer to the Special Applications chapter of the Application Manual 37240 for more detailed information about this setting.

Parameter 54

| | |
|-----------------|----|
| Volt.controller | ON |
|-----------------|----|

Voltage controller: activation

ON/OFF

ON..... Generator voltage control is performed by the GCP-30. The subsequent screens of this function are displayed.
OFF..... Generator voltage control is not performed by the GCP-30. The subsequent screens of this function are not displayed.

Parameter 55

| | |
|-----------------------------|------|
| Start voltage V control. | 000V |
|-----------------------------|------|

Voltage controller: start voltage

12.0 to 100.0 %

i This value refers to the generator voltage set point (Parameter 16).

The voltage controller is activated when the monitored generator voltage has exceeded the value configured in this parameter. This prevents the GCP-30 from attempting to control the voltage while the engine is completing its start sequence.

Parameter 56

| | |
|----------------------------|------|
| Delayed. Start V contr. | 000s |
|----------------------------|------|

Voltage controller: delayed start

0 to 999 s

The voltage controller is enabled after the configured time for this parameter expires.



NOTE

The following parameters for the voltage controller influence the power factor is controlled.

Parameter 57

| | |
|----------------|-------|
| V/Q contr.type | ----- |
|----------------|-------|

BPQ, XPQ

Voltage controller: type

THREESTEP / ANALOG

THREESTEP The signal to the voltage control to increase/decrease the voltage/power factor is output via the relay manager to any two configurable relays. The following relay functions must be assigned to the individual relays.

- function 116 = increase voltage (V+) / power factor (Q+)
- function 117 = decrease voltage (V-) / power factor (Q-)

Refer to the Controller Outputs section of manual 37364 for wiring an external Resistive/Capacitive protection circuit.

ANALOG Voltage control is performed via the analog outputs (terminals 11/12/13). The control of voltage/reactive power is performed via either a voltage or current signal. The amplitude and signal type (mA or V) to be utilized is configured in "V/Q contr.output" (Parameter 61). If a voltage signal is use, a jumper must be installed between terminals 11/12 (refer to the wiring diagram in manual 37364).

Three-Position Controller (XPD; BPQ, XPQ: Setting 'THREESTEP')

Parameter 58

Volt.controller
dead band 00.0%

Voltage controller: dead band 00.1 to 15.0 %

| ⓘ This value refers to the rated system voltage (Parameter 17). |

Isolated operation The generator voltage is controlled in such a manner that the measured voltage does not deviate from the configured set point by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts.

Synchronization The generator voltage is controlled in such a manner that the measured voltage does not deviate from the monitored reference (mains or busbar) voltage by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts. The value configured for this parameter must be less than the value configured for the dV max (maximum voltage differential) for synchronization.

Parameter 59

Volt.controller
time pulse>000ms

Voltage controller: minimum voltage 20 to 250 ms

When "V/Q contr.type" (Parameter 57) has been configured as THREESTEP, a minimum pulse on time must be configured. The shortest possible pulse time should be configured to limit overshoot of the desired speed reference point.

Parameter 60

Volt.controller
gain Kp 00.0

Voltage controller: gain 0.1 to 99.9

The gain factor K_p influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the power factor reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Analog Controller (BPQ, XPQ: Setting 'ANALOG')

Parameter 61

V/Q contr.output

BPQ, XPQ

Voltage controller: range

see below

If "V/Q contr.type" (Parameter 57) has been configured as "ANALOG", this parameter must be configured to the appropriate type of analog controller signal. The range of the analog output is configured here. To switch from a current to a voltage signal output, a jumper must be installed between terminals 11/12. The available ranges are listed below.

| Type | Setting in above configuration screen | Jumper between term. 11/12 | Range | Lower level | Upper level |
|---------|---------------------------------------|----------------------------|-------------|-------------|-------------|
| Current | +/-20mA (+/-10V) | no | +/-20mA | -20 mA | +20 mA |
| | +/-10mA (+/-5V) | | +/-10mA | -10 mA | +20 mA |
| | 0 to 10mA (0 to 5V) | | 0-10mA | 0 mA | 10 mA |
| | 0 to 20mA (0 to 10V) | | 0-20mA | 0 mA | 20 mA |
| | 4 to 20mA | | 4-20mA | 4 mA | 20 mA |
| | 10 to 0mA (5 to 0V) | | 10-0mA | 10 mA | 0 mA |
| | 20 to 0mA (10 to 0V) | | 20-0mA | 20 mA | 0 mA |
| | 20 to 4mA | | 20-4mA | 20 mA | 4 mA |
| Voltage | +/-20mA (+/-10V) | yes | +/-10V | -10 Vdc | +10 Vdc |
| | +/-10mA (+/-5V) | | +/-5V | -5 Vdc | +5 Vdc |
| | +/-3V | | +/-3V | -3 Vdc | +3 Vdc |
| | +/-2.5V | | +/-2.5V | -2.5Vdc | +2.5 Vdc |
| | +/-1V | | +/-1V | -1 Vdc | +1 Vdc |
| | 0 to 10mA (0 to 5V) | | 0 to 5V | 0 Vdc | 5 Vdc |
| | 0.5V to 4.5V | | 0.5 to 4.5V | 0.5 Vdc | 4.5 Vdc |
| | 0 to 20mA (0 to 10V) | | 0 to 10V | 0 Vdc | 10 Vdc |
| | 10 to 0mA (5 to 0V) | | 5 to 0V | 5 Vdc | 0 Vdc |
| | 4.5V to 0.5V | | 4.5 to 0.5V | 4.5 Vdc | 0.5 Vdc |
| | 20 to 0mA (10 to 0V) | | 10 to 0V | 10 Vdc | 0 Vdc |

Parameter 62

Stepper sign.vol (min.) 000%

BPQ, XPQ

Voltage controller: minimum value

0 to 100%

This parameter permits the operator to clamp or limit the lower limit of the analog output signal.

Example: A 1 to 4V analog output is needed for the voltage controller to operate properly. A jumper is installed on terminals 8/9 as described above and the analog output signal of 0 to 5V is selected. The number to be configured as the minimum output signal in this parameter is determined by dividing the desired lower limit by the range of the signal (1V/5V = 0.20 or 20%). 20% is the value to be configured in this parameter.

Parameter 63

Stepper sign.vol (max.) 000%

BPQ, XPQ

Voltage controller: maximum value

0 to 100%

This parameter permits the operator to clamp or limit the upper limit of the analog output signal.

Example: A 1 to 4V analog output is needed for the voltage controller to operate properly. A jumper is installed on terminals 8/9 as described above and the analog output signal of 0 to 5V is selected. The number to be configured as the maximum output signal in this parameter is determined by dividing the desired upper limit by the range of the signal (4V/5V = 0.80 or 80%). 80% is the value to be configured in this parameter.

Parameter 64

| |
|------------------------------|
| <code>Volt.controller</code> |
| <code>gain Kpr</code> 000 |

BPQ, XPQ

Voltage controller: P-gain

1 to 240

The gain coefficient K_{pr} specifies the Proportional portion of the PID control loop. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Parameter 65

| |
|------------------------------|
| <code>Volt.controller</code> |
| <code>reset Tn</code> 00.0s |

BPQ, XPQ

Voltage controller: reset time (integration)

0.0 to 60.0 s

The reset time T_n identifies the Integral portion of the PID control loop. The reset time corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The reset time constant must be greater than the derivative time constant. If the reset time constant is too small, the engine will continually oscillate. If the reset time constant is too large, the engine will take an excessive amount of time to settle at a steady state.

Parameter 66

| |
|-------------------------------|
| <code>Volt.controller</code> |
| <code>derivat.Tv</code> 0.00s |

BPQ, XPQ

Voltage controller: derivative-action time

0.00 to 6.00 s

The derivative-action time T_v identifies the Derivative portion of the PID control loop. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

Power Factor Controller

Parameter 67

| |
|-------------------------|
| Pow. fact. contr. ON |
|-------------------------|

Power factor controller: enable **ON/OFF**

ON..... Power factor control is automatically performed by the GCP-30 when in a mains parallel operation. The power factor cannot be accurately measured if the monitored current is excessively low (secondary current less than 5 % I_{rated}). The GCP-30 will lock the power factor at the value configured in Parameter 68 if the monitored secondary current is less than 5% of the input rating. The subsequent screens of this function are displayed.

OFF..... Power factor is not controlled by the GCP-30 The subsequent screens of this function are not displayed.

Parameter 68

| |
|------------------------------------|
| Pow. fact. contr. setpoint 0.00 |
|------------------------------------|

Power factor controller: set point **i0.70 to 1.00 to c0.70**

The GCP-30 is capable of producing power at a specified power factor when in parallel with the mains. The desired power factor is configured here so that the reactive power is regulated in the system. The designations "i" and "c" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator under excited) reactive power. The power factor is only controlled to the value configured here when the generator is in a mains parallel operation.



NOTE

Please note the settings for the voltage controller will also influence the power factor controller. Refer to the "Voltage Controller" section on page 43.

Three-Position Controller (XPD; BPQ, XPQ: Setting 'THREESTEP')

Parameter 69

| |
|--------------------------------------|
| Pow. fact. contr. dead band 00.0% |
|--------------------------------------|

Power factor controller: dead band **0.5 to 25.0 %**

The generator reactive power is controlled in such a manner, when paralleled with the mains, so that the monitored power factor does not deviate from the configured power factor set point by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the raise/lower relay contacts. The configured percentage for the dead band refers to the generator rated power (Parameter 21).

Parameter 70

| |
|-----------------------------------|
| Pow. fact. contr. gain Kp 00.0 |
|-----------------------------------|

Power factor controller: gain **0.1 to 99.9**

The gain factor K_p influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the power factor reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Analog Controller (BPQ, XPQ: Setting 'ANALOG')

Parameter 71

| | |
|-----------------|-----|
| Pow.fact.contr. | |
| gain Kpr | 000 |

BPQ, XPQ

Power factor controller: P-gain

1 to 240

The gain coefficient K_{pr} specifies the Proportional portion of the PID control loop. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Parameter 72

| | |
|-----------------|-------|
| Pow.fact.contr. | |
| reset Tn | 00.0s |

BPQ, XPQ

Power factor controller: reset time (integration)

0.0 to 60.0 s

The reset time T_n identifies the Integral portion of the PID control loop. The reset time corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The reset time constant must be greater than the derivative time constant. If the reset time constant is too small, the engine will continually oscillate. If the reset time constant is too large, the engine will take an excessive amount of time to settle at a steady state.

Parameter 73

| | |
|-----------------|-------|
| Pow.fact.contr. | |
| derivat.Tv | 0.00s |

BPQ, XPQ

Power factor controller: derivative-action time

0.00 to 6.00 s

The derivative-action time T_v identifies the Derivative portion of the PID control loop. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

Real Power Controller

Parameter 74

Power controller
ON

Power controller: enable **ON/OFF**

ON..... Real power control is enabled. The generator will automatically load with real power to the level configured in Pset1 (Parameter 35) or Pset2 (Parameter 36) when the corresponding inputs (terminal 3 or 5) are energized and the system is in parallel with the mains. The subsequent screens of this function are displayed.
OFF..... Real power control is not performed, and the subsequent screens of this function are not displayed.

Parameter 75

power controller
ramp 000.0%/s

Power controller: set point ramp %/s **0.1 to 100.0 %/s**

The GCP-30 controller has the ability to softly load and unload when paralleled. The load reference point is changed by the control at the rate of a configured percent per second. This percentage refers to the generator rated power (Parameter 21). A smaller configured percentage for the ramp rate will result in a slower ramp rate. Conversely a larger configured percentage will result in a faster ramp rate.

Power Limitation

Parameter 76

Power limit
P max. 000%

Power controller: maximum power limitation **10 to 120 %**

If the maximum generator real load is to be limited, a percentage based on the generator rated power (Parameter 21) is entered here. The GCP-30 will not permit the load to exceed the configured power limitation value. This parameter is only functional when the generator is in a mains parallel operation.

Parameter 77

Power limit
P min. 00%

Power controller: minimum power limitation **0 to 50 %**

If the generator minimum real load is to be limited, a percentage based on the generator rated power (Parameter 21) is entered here. The GCP-30 will not permit the load to drop below the configured power limitation value. This parameter is only functional when the generator is in a mains parallel operation.

External Generator Power Set Point Value (XPD, XPQ)

The generator real power **set point value** may be regulated via an analog input T{x} [x = 1 to 7] if one of the analog inputs T{x} [x = 1 to 7] is a 0/4 to 20 mA input. The selection of the analog input is done using the following parameters.

Parameter 78

| | |
|----------------|-----|
| Power setpoint | |
| external | OFF |

XPD, XPQ

Power set point value: external input **OFF / T{x}**

- OFF**External regulation of the generator real power **set point value** via the 0/4 to 20 mA input is disabled. If this parameter is configured to "OFF" a generator real power **set point value** is not monitored via the 0/4 to 20 mA input to the control. The analog inputs can be used either as a mains interchange (import/export) real power **actual value** or as freely configurable alarm inputs. If terminal 5 is utilized, the internal set point value 2 "Pset2" (Parameter 36) is used as set point value. The subsequent screens of this function are not displayed.
- T{x}**External regulation of the generator real power **set point value** via the 0/4 to 20 mA input is enabled. If terminal 5 is utilized, the internal set point value 2 "Pset2" (Parameter 36) is used as the set point value. The subsequent screens of this function are displayed.

Note

Please note the following if analog input T{x} has been selected:

- "Analog in Pmains" (Parameter 24) in the "Measuring" section must be configured as OFF.
- "Analog input {x} scalable" (Parameter 215) in the "Analog inputs" section must be configured as OFF.
- The GCP-30 is may be purchased with various types of analog inputs. If the controller being configured has analog inputs, only a 0/4 to 20 mA input may be used for this input.
- Due to the fact that LeoPC1 is not a dynamic program, the graphic display of the generator/plant does not automatically update to reflect any changes made during reconfiguration. To update the program's graphical display, LeoPC1 must be shutdown and restarted.

Priority of the functions of the analog inputs

If more than one function has been assigned to an analog input, the following is the priority that the control assigns to functions:

- Highest priority: Mains interchange real power **actual value** measurement
- Middle priority: Real power **set point value**
- Lowest priority: Measuring input as common analog value

Parameter 79

Analog input
0-00mA

XPD, XPQ

Power set point value: range **0 to 20 / 4 to 20 mA**

The analog input measurement range is selected in this parameter. The user may select from 0 to 20 mA or 4 to 20 mA to match the source of the input.

0 to 20 mA ... Minimum set point value corresponds to 0 mA; maximum set point value corresponds to 20 mA.

4 to 20 mA ... Minimum set point value corresponds to 4 mA; maximum set point value corresponds to 20 mA.



CAUTION

It is possible to scale the real power interchange set point. **Do not** configure a base load operation (C) with an import (I) or export (E) operation. The chart below shows permissible combinations of the analog input current levels and import, export, and base load power operations.

| | | | | | | |
|---------------------------|---------------|----------|----------|----------|----------|----------|
| External set point | 0/4 mA | C | I | E | I | E |
| External set point | 20 mA | C | I | E | E | I |

Parameter 80

Ext. setpoint
0mA 0000kW

XPD, XPQ

Power set point value: scaling-minimum value **C/I/E 0 to 9,999 kW**

The minimum value of the generator real power that corresponds to 0/4 mA is defined here (e. g. 0 kW).

Parameter 81

Ext. setpoint
20mA 0000kW

XPD, XPQ

Power set point value: scaling-maximum value **C/I/E 0 to 9,999 kW**

The maximum value of the generator real power that corresponds to 20 mA is defined here (e. g. 100 kW).

Three-Position Controller (XPD; BPQ, XPQ: Setting 'THREESTEP')

Parameter 82

Power controller
dead band 00.0%

Power controller: dead band **0.1 to 25.0 %**

The generator real power is controlled in such a manner, when paralleled with the mains, so that the monitored real power does not deviate from the configured real power set point by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the speed control. This prevents unneeded wear on the raise/lower relay contacts. The configured percentage for the dead band refers to the generator rated power (Parameter 21).

Parameter 83

Power controller
gain Kp 00.0

Power controller: gain factor **0.1 to 99.9**

The gain factor K_p influences the operating time of the relays. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Parameter 84

Powercontr. dead
band ratio *0.0

Power controller: dead band factor **1.0 to 9.9**

The GCP-30 has the capability to increase the power controller dead band. This function may be desired as a method of reducing wear on the voltage regulator as a result of frequent actuation due to minor fluctuation of the load. If adjusting pulses have not been output for at least 5 seconds, the dead band is increased by this factor.

Example: A dead band of 2.5 % and a factor of 2.0 have been configured and the GCP-30 has not issued an adjustment pulse in the last 5 seconds. The dead band is increased to 5.0 % of the rated power. If the monitored power deviates from the 5% dead band, the controller automatically returns to the original dead band (2.5 %) and controls the power at that level.

Analog Controller (BPQ, XPQ: Setting 'ANALOG')

Parameter 85

| | |
|--|-----|
| Power controller gain K _{pr} | 000 |
|--|-----|

BPQ, XPQ

Power controller: P gain

1 to 240

The gain coefficient K_{pr} specifies the Proportional portion of the PID control loop. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Parameter 86

| | |
|--|-------|
| Power controller reset T _n | 00.0s |
|--|-------|

BPQ, XPQ

Power controller: reset time (integration)

0.0 to 60.0 s

The reset time T_n identifies the Integral portion of the PID control loop. The reset time corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The reset time constant must be greater than the derivative time constant. If the reset time constant is too small, the engine will continually oscillate. If the reset time constant is too large, the engine will take an excessive amount of time to settle at a steady state.

Parameter 87

| | |
|--|-------|
| Power controller derivat.T _v | 0.00s |
|--|-------|

BPQ, XPQ

Power controller: derivative-action time

0.00 to 6.00 s

The derivative action time T_v identifies the Derivative portion of the PID control loop. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

Partial Load Lead

Parameter 88

| | |
|-----------------------------|------|
| Warm up load limit value | 000% |
|-----------------------------|------|

Power controller: partial-load limit

5 to 110 %

The GCP-30 is capable of partially loading the generator to a specified limit for a designated time period to permit warming up of the prime mover prior assuming service loads. The partial load level is specified as a percentage in this parameter. The configured percentage for the partial load limit refers to the generator rated power (Parameter 21).

Parameter 89

| | |
|----------------------|------|
| Warm up load time | 000s |
|----------------------|------|

Power controller: partial-load limit

0 to 600 s

The GCP-30 is capable of partially loading the generator to a specified limit for a designated time period so the prime mover may be warmed up prior assuming service loads. The length of the warm-up period with partial load following the initial closure of the GCB in mains parallel operation is configured here. If an engine warm-up period is not desired, this parameter must be set to zero.

Load and/or var Sharing

The GCP-30 performs proportional load and/or var sharing. This means each generator will share the load at the same percentage level of the generator rated power when paralleled against the mains, in an isolated operation with multiple generators paralleled, or when re-synchronizing the common bus to the mains. Proportional load/var sharing will not be performed when the GCP-30 has the GCB closed and is in the constant power/base load mode. The GCP-30 is capable of controlling up to 14 generators. The GCP-30 is also capable of controlling any generator rated up to 10 MW. The total rated system power for all generators may not exceed 32 MW.

Mains parallel operation with mains interchange real power control (import/export): The GCP-30 controllers maintain the real load level on the individually controlled generators at a level so that the real power set point at the mains interchange remains at the configured set point. The real power set point for the mains interchange must be configured identically for each GCP.

The GCP-30 controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor. An example of this would be a 100 kW generator with a configured 1000 kW generator and a mains interchange of 825 kW. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

Reactive load sharing is not performed when operating in parallel with the mains. The reactive power control will be defined by the configured power factor set point of the individual controllers. If "Pow.fact.contr. setpoint" (Parameter 68) is configured as i0.95, the GCP will proportionally share the real load with all generators in parallel with the mains while controlling the reactive power at a 0.95 lagging power factor regardless of the what power factor the mains is operating at.

The parameter "kW/kvar sharing: reference variable kW" (Parameter 91) can be used now to define the priority of the real power sharing reference variable (real power at interchange). A higher configured percentage influences the control more towards maintaining the real power set point for the interchange. A lower configured percentage influences the control more towards maintaining real power sharing between units.

The parameter "kW/kvar sharing: reference variable kvar" (Parameter 93) has no influence here.

Isolated operation in parallel: The GCP-30 controllers maintain the voltage and frequency of the individually controlled generators at a constant level. This makes it imperative that the voltage and frequency set points are configured identically for each GCP.

The GCP-30 controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor. An example of this would be a 100 kW generator and a 1000 kW generator with an 825 kW load. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

The reactive power will be shared proportionally among all generators involved.

The parameter "kW/kvar sharing: reference variable kW" (Parameter 91) can be used to define the priority of the reference variable for real power sharing. A higher configured percentage influences the control more towards frequency control. A lower configured percentage influences the control more towards real power sharing.

The parameter "kW/kvar sharing: reference variable kvar" (Parameter 93) can be used now to define the priority of the reference variable for reactive power sharing. A higher configured percentage influences the control more towards voltage control. A lower configured percentage influences the control more towards reactive power sharing.

Re-synchronization of the busbar to the mains: The system is operating as an isolated system, for synchronization to be performed the voltage and frequency differentials of the mains and bus must be within the configured windows.

The bus frequency reference point is dictated by the monitored mains frequency and the configured frequency differential ($+df_{\max}/2$).

Example: If $+df_{\max} = 0.2$ Hz, the GCP-30 will calculate the bus frequency reference point as:

$$[\text{monitored mains frequency}] + [df_{\max}/2] = \text{bus frequency reference point}$$

A practical example of this would be:

The monitored mains frequency is 60 Hz

Configured $+df_{\max} = 0.2$ Hz

$$[60 \text{ Hz}] + [0.2\text{Hz}/2] = 60.1 \text{ Hz bus frequency reference point}$$

The differential voltage is configured as a window. The monitored voltage from the potential transformers secondary for the mains and the bus must be within the configured voltage differential limit. This means that if the secondary voltage inputs have been configured for 120 V and a dV of 2 V is configured, then synchronization will be permitted when the monitored voltage on the secondary of the main and bus are within 2 V of each other.

When the monitored bus frequency and voltage are within the configured differential limits, the "Command: close MCB" relay will enable, closing the MCB, and the system will be paralleled to the mains.

Prerequisites: All GCP-30 controllers connected to the system must have rated system frequencies and breaker logic configured identically and the parameter "Active power load-share" (Parameter 90) must be enabled.

Description of the load-share interface: The GCP-30 utilizes a peer relationship between units to control the system. This permits for parallel applications of up to 14 generators.



NOTE

Refer to the Interface section of the Installation Manual 37364 for information about the CAN bus connection.

Diagram of load/var sharing via the CAN bus (refer to Figure 3-4 on page 36): The parameter "Active load sharing factor" determines if and how a generator performs real power or frequency control when paralleled with other generators in an isolated operation. This parameter is defined as a percentage. In the figure below 10 % means increased real power control and 99 % increased frequency control. This parameter must be configured individually for each generator.

In the illustrated control system, it must be noted that each control calculates the mean utilization factor of all controls from the data transmitted via the CAN bus and then compares this with its own utilization factor. The utilization factor is compared with the reference variable and results in a new reference variable set point. Frequency and real power control are carried out simultaneously in these controls (corresponding to the reference variable).

Frequency control is carried out via the measured voltage/frequency of the voltage system. The Pickup is used merely for monitoring functions, or is available as a control value to the secondary controller.

Parameter 90

Active power load-share ON

kW sharing: load sharing **ON/OFF**

ONReal power sharing is enabled. When multiple generators are operating in parallel, the real power is shared proportionally. The subsequent screens of this function are displayed.
OFFReal power sharing is disabled. The subsequent screens of this function are not displayed.

Parameter 91

Act. load share factor 00%

kW sharing: reference variable kW **10 to 99 %**

It is possible to change the emphasis placed on maintaining control variables. By increasing or decreasing the percentage value in this parameter, the control places a higher priority on maintaining the primary or secondary control reference variable. If the value for this parameter is configured higher, maintaining the primary control variable has more priority. If the value for this parameter is configured lower, maintaining the secondary control variable has a greater priority.

Primary control variable

- Isolated operation = frequency maintained
- Mains parallel operation = real power level at the mains interchange point maintained

Secondary control variable

- Isolated operation = real power sharing with other generators maintained
- Mains parallel operation = real power sharing with other generators maintained

The smaller this factor the higher the priority to equally share the load among all generators.

Parameter 92

Reactive power load share ON

kvar sharing: var sharing **ON/OFF**

ONReactive power sharing is enabled. When multiple generators are operating in parallel, the reactive power is shared proportionally. The subsequent screens of this function are displayed.
OFFReactive power sharing is disabled. The subsequent screens of this function are not displayed.

Parameter 93

React. load share factor 00%

kvar sharing: reference variable kvar **10 to 99 %**

It is possible to change the emphasis placed on maintaining control variables. By increasing or decreasing the percentage value in this parameter, the control places a higher priority on maintaining the primary or secondary control reference variable. If the value for this parameter is configured higher, maintaining the primary control variable has a greater priority. If the value for this parameter is configured lower, maintaining the secondary control variable has a greater priority.

Primary control variable

- Isolated operation = voltage maintained
- Mains parallel operation = power factor maintained

Secondary control variable

- Isolated operation = reactive power sharing with other generators maintained
- Mains parallel operation = power factor maintained

Automatic



Parameter 94

| | |
|---------------------|-----|
| Configure automatic | YES |
|---------------------|-----|

Configuration of automatic

YES/NO

The automatic control functions are configured in this block of parameters. This parameter has the following effects:

- YES**..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).
- NO**..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Load Management



NOTE

To enable the automatic start/stop function, "Active power load-share" (Parameter 90) must be configured to "ON", regardless if additional generators are available for load sharing.



NOTE

The automatic start/stop functionality of the engine, requires that **identical rated power** (Parameter 21) be configured in **all** participating controls.

Load-Dependent Start/Stop in Mains Parallel Operation

Parameter 95

| | |
|---------------------------|----|
| Loadd.start/stop at ter.3 | ON |
|---------------------------|----|

Load dependent start/stop: enable via terminal 3

ON/OFF

- ON**..... The automatic start/stop functionality is enabled. When the discrete input "Automatic 1" (terminal 3) is energized, the GCP-30 will automatically start/stop dependent upon the measured load in accordance with how generator real power set point 1 (Parameter 35) is configured. If terminal 5 is energized simultaneously, terminal 3 has priority and will override terminal 5. The subsequent screens of this function are displayed.
- OFF**..... The automatic start/stop functionality is disabled. The generator will start only when terminal 3 is energized and stop when de-energized. The generator is loaded in accordance with how generator real power set point 1 (Parameter 35) is configured. The subsequent screens of this function are not displayed.

Parameter 96

| | |
|---------------------------|----|
| Loadd.start/stop at ter.5 | ON |
|---------------------------|----|

Load dependent start/stop: enable via terminal 5

ON/OFF

- ON**..... The automatic start/stop functionality is enabled. When the discrete input "Automatic 2" (terminal 5) is energized, the GCP-30 will automatically start/stop dependent upon the measured load in accordance with how generator real power set point 2 (Parameter 36) is configured. If terminal 3 is energized simultaneously, terminal 3 has priority and will override terminal 5. The subsequent screens of this function are displayed.
- OFF**..... The automatic start/stop functionality is disabled. The generator will start only when terminal 3 is energized and stop when de-energized. The generator is loaded in accordance with how generator real power set point 1 (Parameter 35) is configured. The subsequent screens of this function are not displayed.

Single generator in mains parallel operation

The load-dependent start/stop function is enabled when all of the following conditions have been met:

- The control has been placed in the AUTOMATIC operation mode
- The mains interchange power control (import/export power) has been enabled by either the "Automatic 1" or "Automatic 2" discrete inputs (terminals 3 or 5) and are configured for import or export operations
- One or both parameters "Load-dependent start/stop on terminal 3/5" (Parameter 95 or Parameter 96) has been configured to "ON".

Parameter 97

**Minimum load
generator 0000kW**

Load dependent start/stop: generator minimum power start set point 0 to 6,900 kW

For the mains interchange (import/export) real power control to function, a minimum generator power set point value is required. In many cases, it is desirable that the engine is prevented from starting unless the generator will operate at a specific kW level or higher to ensure a reasonable degree of efficiency.

Example: The mains interchange must reach a level that will permit an 80kW generator to operate at a minimum load of 40kW prior to the engine starting.

Parameter 98

**Add-on delay
mains oper. 000s**

Load dependent start/stop: start delay 0 to 999 s

Load swings may exceed the "Minimum load generator" (Parameter 97) set point momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The load must remain above the minimum load set point without interruption for the delay time, configured in seconds, prior to a start command being issued. If the load falls below the minimum load set point before the delay time expires, the delay time is reset and a start command is not issued.

Parameter 99

**Shed-off delay
mains oper. 000s**

Load dependent start/stop: stop delay 0 to 999 s

Load swings may fall below the "Hysteresis add on/off op." (Parameter 100) set point momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis set point without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis set point before the delay time expires, the delay time is reset and a stop command is not issued.

Stopping hysteresis



NOTE

Parameter 100 is used to determine the stopping hysteresis for a single generator in a mains parallel operation and multiple paralleled generators in an isolated operation.

Parameter 100

**Hysteresis add-.
on/off op.0000kW**

Load dependent start/stop: stopping hysteresis 0 to 9,999 kW

The shutdown power limit of the generator is determined via a hysteresis. The hysteresis is used to prevent the engine continuously starting and shutting down due to minor load swings. The hysteresis should be configured so that the system has time to bring an additional generator online during the largest possible load swing that the plant may experience.

Single generator mains parallel operation (mains interchange (import/export) real power control)**NOTE**

The "desired mains interchange power level" will equal 0 in the formulas below if the breaker logic is configured as Open Transition, Closed Transition, Interchange, or External. The desired mains interchange power level is utilized for import and export power operations.

GeneralFormula A: Determining the start set point

An engine start command is issued when:

Desired mains interchange power level – Minimum load generator = Mains power level when generator started

Formula B: Stop of the engine

An engine stop command is issued when:

Desired mains interchange power level + Monitored mains power + Minimum load generator – Generator hysteresis = Mains power level when generator stopped

Example

Situation: A customer wants to import only 50kW from the utility. The minimum efficient load to start the generator is 30kW. The generator should be shut down when the generator load drops below 20kW.

Desired mains interchange power level = the power to be imported or exported to the mains

Imported power is always calculated as a negative number since the generator does not produce it. Exported power is always calculated as a positive number since the generator produces it. The desired import level should be entered as "I0050kW" for Pset1 or Pset2 (Parameter 35 or Parameter 36).

Desired mains interchange power level = -50 kW

Minimum load generator = the minimum efficient load that a start request will be issued

"Minimum load generator" (Parameter 97) should be configured as "0030kW".

Minimum load generator = 30 kW

Generator hysteresis = the power level that a stop command will be issued

This value is calculated by subtracting the minimum generator load for a shut down command from the minimum load that a start command is issued. In this example the calculation would be [30kW – 20kW = 10kW]. "Hysteresis add on / off op." (Parameter 100) should be configured as "10kW".

Generator hysteresis = 10 kW

Monitored mains power = the monitored power level and direction at the mains breaker

The situation above will be calculated as follows:

Case 1:

An engine start command is issued when the monitored mains power reaches a specified level. Formula A is used as follows:

Desired mains interchange power level – minimum load generator = mains power level when generator starts
- 50 kW - 30 kW = -80 kW

The power supplied by the mains must be equal to or greater than 80 kW in order for the GCP-30 to issue a start command. After the engine starts and the GCB closes, the generator will assume load until the mains interchange is importing 50kW.

Case 2:

An engine stop command is issued when the monitored mains power falls to a specified level. Formula B is used as follows:

Desired mains interchange power level + monitored mains power + minimum load generator – generator hysteresis = generator power level when generator stops
- 50 kW + 50 kW + 30 kW - 10 kW = 20 kW

The power supplied by the generator must be equal to or less than 20 kW for the delay time without interruption prior to the GCP-30 issuing a stop command. After the GCP-30 issues the stop command, the generator will transfer the remaining load to the mains (increasing the mains import level to 70kW), open the GCB, and shut-down the engine.

Load sharing with multiple generators in a mains parallel operation

The load-dependent start/stop functionality is enabled when the following conditions have been met for all controls:

- The control has been placed in the AUTOMATIC operation mode
- The mains interchange power control (import/export power) has been enabled by energizing either the "Automatic 1" or "Automatic 2" discrete inputs (terminals 3 or 5) and are these discrete inputs are configured for import or export operations
- All parameters, such as start power (Parameter 97), stop power (Parameter 100), start delay (Parameter 98), stop delay (Parameter 99), and the frequency set point value (Parameter 8) are configured identically for all generators that will be load sharing
- One or both parameters "Load-dependent stop/start on terminal 3/5" (Parameter 95 and/or Parameter 96) has been configured "ON"
- The parameters "Load sharing" (Parameter 90) and/or "var sharing" (Parameter 92) have been configured "ON"
- All generators are configured for the **same rated power** (Parameter 21)



NOTE

"Reserve power mains op." (Parameter 101) is only utilized when multiple generators are to be paralleled with the mains. The first engine will be started as described in the section: Single generator mains parallel operation (mains interchange (import/export) real power control) on page 59.

Parameter 101

| |
|-----------------------------------|
| Reserve power mains op. 0000kW |
|-----------------------------------|

Load dependent start/stop: reserve power

0 to 9,999 kW

The value configured for the reserve power determines when an additional generator will be started. The reserve power is the desired spinning reserve of a generator or generators. The reserve power is usually configured as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. The available generator power is calculated by multiplying the number of generators with closed GCBs by the generator real power rating of a generator. The reserve generator power is calculated by subtracting the power currently being produced by all generators with closed GCBs from the total available generator power. If the actual reserve power of the generators is less than the value configured in this parameter, the next generator will be started.

$$\begin{aligned} & \text{Currently available total generator rated real power} \\ & - \text{Currently available total generator actual real power} \\ & = \text{Reserve power} \end{aligned}$$

Parameter 102

| |
|-----------------------------|
| Priority of generators 0 |
|-----------------------------|

Load dependent start/stop: priority of generators

0 to 14

This parameter specifies the sequence in which the individual generators are started. The control with the lowest configured number has the highest priority. This generator will be the first started and the last stopped. In the event two or more generators have been assigned identical priorities, the starting sequence is determined by the operating hours. In this case, the generator with the lowest operating hours will be started first. In the event the generators have the same number of operating hours, the generator with the lowest generator number (CAN bus address, Parameter 4) is started.

Mains parallel operation(mains interchange (import/export) real power control with multiple generators)**NOTE**

The "desired mains interchange power level" will equal 0 in the formulas below if the breaker logic is configured as Open Transition, Closed Transition, Interchange, or External. The desired mains interchange power level is utilized for import and export power operations.

GeneralFormula C: Start of the first generator

All GCBs are open.

The first engine is started when:

desired mains interchange power level – minimum load generator = mains power level when generator starts

Formula D: Starting of additional generators

At least one GCB in the group is closed.

The next engine is started when:

$[(\text{generator rating})(\text{number of closed GCBs}) - \text{parallel reserve power}] / \text{number of closed GCBs} = \text{individual generator power level at next start}$

Formula E: Stopping a generator

At least two GCBs in the group are closed.

An engine is stopped when:

$(\text{number of generators needed for load} - 1)(\text{generator rating}) - \text{parallel reserve power} - \text{generator hysteresis} = \text{power level next generator stopped}$

Formula F: Stopping of the last generator

Only one GCB in the group is closed.

The last engine is stopped when:

$[\text{desired mains interchange power level} + \text{monitored mains power} + \text{minimum load generator} - \text{generator hysteresis}] = \text{mains power level when generator stops}$

Example

When the generators are running the customer wishes to remain paralleled with the mains but does not want the mains to supply any power to the system. This value has been configured as "I0000kW" (refer to "Real Power Controller, Set Point Values on page 37"). The same functionality may be achieved by configuring the main interchange power as "E0000kW". The largest load swing the system will encounter is 40 kW. The customer wants a 20 kW buffer to prevent restarting of generators due to load swings. A reserve power for the system of 40 kW and a generator hysteresis of 20 kW is desired for this application. The power plant consists of three generators capable of paralleling. Each generator is rated for 200 kW of real power. It is not economical to start a generator unless it will carry 30 kW of load.

Variables

Generator rating = the power rating for an individual generator (all generators used in this application must be of the same power rating). "Rated power generator" (Parameter 21) should be configured as "200 kW".

Generator rating = 200 kW

Number of closed GCBs = all generator that are used to calculate available generation power must have their circuit breaker closed.

Number of closed GCBs = varies

Desired mains interchange power level = the power to be imported or exported to the mains

Imported power is always calculated as a negative number since the generator does not produce it. Exported power always calculated as a positive number since the generator produces it. The desired import level should be entered as "I0000 kW" for Automatic 1 or 2 (Parameter 35 or Parameter 36).

Desired mains interchange power level = 0 kW

Minimum load generator = the minimum load that the first start request will be issued

"Minimum load generator" (Parameter 97) should be configured as "0030kW".

Minimum load generator = 30 kW

Generator hysteresis = the power level that a stop command will be issued

This value is calculated by subtracting the minimum generator load for a shut down command to be issued from the minimum load that a start command is issued. In this example the calculation would be [30 kW – 10 kW = 20 kW]. "Hysteresis add on / off op." (Parameter 100) should be configured as "20 kW".

Generator_hysteresis = 20 kW

Parallel reserve power = the real load that a generator or generators are able to absorb while the next generator is started. The reserve power is usually configured as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. "Reserve power mains op." (Parameter 101) should be configured as "40 kW".

Reserve power = 40 kW

Monitored mains power = the monitored power level and direction at the mains breaker

Case 3:

An engine start command is issued when the monitored mains power reaches a specified level. Formula C is used as follows:

Desired mains interchange power level – Minimum load generator = Mains power level when generator starts
 0 kW - 30 kW = -30 kW

The power supplied by the mains must be at equal to or greater than 30 kW in order for the GCP-30 to issue a start command. After the engine starts and the GCB closes, the generator will assume load until the mains interchange is importing 0 kW.

Case 4:

An engine start command is issued to the second generator when the monitored mains power reaches a specified level. Formula D is used as follows:

[(generator rating)(number of closed GCBs) – parallel reserve power] / number of closed GCBs = generator power level at next start

[(200 kW)(1) – 40 kW] / 1 = 160 kW

The single generator that is providing power has a total load rating of 200 kW (200 kW x 1). This generator has an available load of 160 kW (200 kW – 40 kW). When the individual generator load exceeds 160 kW, the next generator will be started and brought online to share the load.

Case 5:

An engine start command is issued to the second generator when the monitored mains power reaches a specified level. Formula D is used as follows:

$$[(\text{generator rating})(\text{number of closed GCBs}) - \text{parallel reserve power}] / \text{number of closed GCBs} = \text{generator power level at next start}$$

$$[(200 \text{ kW})(2) - 40 \text{ kW}] / 2 = 180 \text{ kW}$$

The two generators that are providing power have a total load rating of 400 kW (200 kW x 2). Both generators combined have an available load of 360 kW (400 kW – 40 kW). The reserve power limit is split equally between the two generators giving each generator an effective load of 180 kW each. When the individual generator loads exceed 180 kW, the next generator will be started and brought online to share the load.

Case 6:

An engine stop command is issued to the first generator when the monitored system power falls to a specified level. Formula E is used as follows:

$$(\text{number of generators needed for load} - 1 \text{ generator})(\text{generator rating}) - \text{reserve power} - \text{generator hysteresis} = \text{Power level next generator stopped}$$

$$(3 - 1)(200 \text{ kW}) - 40 \text{ kW} - 20 \text{ kW} = 340 \text{ kW}$$

$$(3 - 1)(200 \text{ kW}) - 40 \text{ kW} - 20 \text{ kW} = 340 \text{ kW}$$

$$\text{System power level} / \text{number of closed GCBs} = \text{individual generator load level}$$

$$340 \text{ kW} / 3 = 113.3 \text{ kW}$$

The three generators that are providing power have a total load rating of 600 kW (200 kW x 3). Before a generator can be shut down as the load decreases, the two generators that will remain online must be able to sustain the remaining load. This requires that the above formula be used to determine the load level that a shutdown command is issued. According to the calculations above that level is 340 kW. This load is shared equally among the online generators. To determine the individual generator load levels the shut down power level must be divided by the number of generators online (340 / 3 = 113.3 kW). When the individual loads for the generators drop below 113.3 kW, a stop command will be issued and a generator will shed its load to the remaining generators, open its GCB, and shut down.

Case 7:

An engine stop command is issued to the second generator when the monitored system power falls to a specified level. Formula E is used as follows:

$$(\text{number of generators needed for load} - 1 \text{ generator})(\text{generator rating}) - \text{parallel reserve power} - \text{generator hysteresis} = \text{system power level next generator stopped}$$

$$(2 - 1)(200 \text{ kW}) - 40 \text{ kW} - 20 \text{ kW} = 140 \text{ kW}$$

$$\text{System power level} / \text{number of closed GCBs} = \text{individual generator load level}$$

$$140 \text{ kW} / 2 = 70 \text{ kW}$$

The two generators that are providing power have a total load rating of 400 kW (200 kW x 2). Before a generator can be shut down as the load decreases, the generator that will remain online must be able to sustain the remaining load. This requires that the above formula be used to determine the load level that a shutdown command is issued. According to the calculations above that level is 140 kW. This load is shared equally among the online generators. To determine the individual generator load levels the shut down power level must be divided by the number of generators online (140 / 2 = 70 kW). When the individual loads for the generators drop below 70 kW, a stop command will be issued and a generator will shed its load to the remaining generator, open its GCB, and shut down.

Case 8:

An engine stop command is issued to the last generator when the monitored system power falls to a specified level. Formula F is used as follows:

$$\text{desired mains interchange power level} + \text{monitored mains power} + \text{minimum load generator} - \text{generator hysteresis} = \text{mains power level when generator stops}$$

$$0 \text{ kW} + 0 \text{ kW} + 30 \text{ kW} - 20 \text{ kW} = 10 \text{ kW}$$

The final remaining generator will be taken offline after the load supplied by the generator drops below the configured mains interchange level plus the monitored power at the mains interchange minus the minimum configured load for the generator minus the generator hysteresis or 10 kW in this case. When the load drops to 10 kW, the load is shed from the generator to the mains, the GCB is opened, and the generator is shut down. The mains will now import 10 kW. If the load increases again, the previous steps are repeated.

Isolated operation in parallel with other generators

The load-dependent start/stop functionality is enabled when the following conditions have been met for all controls:

- The control has been placed in the AUTOMATIC operation mode
- The mains interchange power control (import/export power) has been enabled by either the "Automatic 1" or "Automatic 2" discrete inputs (terminals 3 or 5) and are configured for import or export operations
- All parameters, such as start power (Parameter 97), stop power (Parameter 100), start delay (Parameter 98), stop delay (Parameter 99), and the frequency set point value (Parameter 8) are configured identically for all generators that will be load sharing
- One or both parameters "Load-dependent stop/start on terminal 3/5" (Parameter 95 and/or Parameter 96) has been configured to "ON"
- The parameters "Load sharing" (Parameter 90) and/or "var sharing" (Parameter 92) have been configured to "ON"
- **All generators** are configured for the **same rated power** (Parameter 21)



NOTE

In order to prevent a generator from becoming overloaded, ensure that the value configured for the reserve power (Parameter 103) is larger than the largest load swing any one generator might endure while an additional generator is brought online.

Parameter 103

```
Reserve power
isol.op. 0000kW
```

Load dependent start/stop: reserve power (isolated operation) 0 to 9,999 kW

The value configured for the reserve power determines when an additional generator will be started. The reserve power is the desired spinning reserve of a generator or generators. The reserve power is usually estimated as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. The available generator power is calculated by multiplying the number of generators with closed GCBs by the generator real power rating of a generator. The reserve generator power is calculated by subtracting the power currently being produced by all generators with closed GCBs from the total available generator power. If the actual reserve power of the generators is less than the value configured in this parameter, the next generator will be started.

$$\begin{aligned} & \text{Currently available total generator rated real power} \\ & - \text{Currently available total generator actual real power} \\ & = \text{Reserve power} \end{aligned}$$

Parameter 104

```
Add-on delay
isol.op. 000s
```

Load dependent start/stop: start delay (isolated operation) 0 to 999 s

Load swings may exceed the "Reserve power isol. op." (Parameter 97) set point momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The load must remain above the reserve power set point without interruption for the delay time, configured in seconds, prior to a start command being issued. If the load falls below the reserve power set point before the delay time expires, the delay time is reset and a start command is not issued.

Parameter 105

```
Shed-off delay
isol.op. 000s
```

Load dependent start/stop: stop delay (isolated operation) 0 to 999 s

Load swings may fall below the "Hysteresis add on/off op." (Parameter 100) set point momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis set point without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis set point before the delay time expires, the delay time is reset and a stop command is not issued.

General**Formula G: Start of the engine**

$[(\text{generator rated power})(\text{number of closed GCBs}) - \text{isolated reserve power}] / \text{number of closed GCBs} =$
generator power level that a generator is started

Formula H: Stop of the engine

$(\text{number of generators needed for load} - 1 \text{ generator})(\text{generator rating}) - \text{isolated reserve power} - \text{generator hysteresis} =$
generator power level that a generator is stopped

Example

Two generators are in an isolated parallel operation application. One generator will always be in operation. The second generator is used to share large loads.

Generator rating = the power rating for an individual generator (all generators used in this application must be of the same power rating). "Rated power generator" (Parameter 21) should be configured as "200 kW".

Generator rating = 200 kW

Number of closed GCBs = all generator that are used to calculate available generation power must have their circuit breaker closed.

Number of closed GCBs = varies

Isolated reserve power = the real load that a generator or generators are able to absorb while the next generator is started. The reserve power is usually configured as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. "Reserve power isol.op." (Parameter 103) should be configured as "60 kW".

Isolated reserve power = 60 kW

Generator hysteresis = the power level that a stop command will be issued

This value is calculated by subtracting the minimum generator load for a shut down command to be issued from the minimum load that a start command is issued. In this example the calculation would be $[60 \text{ kW} - 30 \text{ kW} = 30 \text{ kW}]$. "Hysteresis add on / off op." (Parameter 100) should be configured as "30 kW".

Generator hysteresis = 30 kW

Case 11:

An engine start command is issued to the second generator when the monitored system power reaches a specified level. Formula G is used as follows:

$[(\text{generator rating})(\text{number of closed GCBs}) - \text{isolated reserve power}] / \text{number of closed GCBs} =$ generator power level that a generator is started

$(200 \text{ kW})(1) - 60 \text{ kW} / 1 = 140 \text{ kW}$

The generator that is providing power has a total load rating of 200 kW (200 kW x 1). The online generator has an available load of 140 kW (200 kW - 60 kW). When the online generator load exceeds 140 kW, the second generator will be started and brought online to share the load.

Case 12:

An engine stop command is issued to a generator when the monitored system power falls to a specified level.

Formula H is used as follows:

$(\text{Number of generators needed for load} - 1 \text{ generator})(\text{generator rating}) - \text{isolated reserve power} - \text{generator hysteresis} =$ system power level next generator stopped $400 \text{ kW} - 60 \text{ kW} - 200 \text{ kW} - 30 \text{ kW} = 110 \text{ kW}$

system power level / number of closed GCBs = individual generator load level

$110 \text{ kW} / 2 = 55 \text{ kW}$

The two generators providing power have a total load rating of 400 kW (200 kW x 2). Before a generator can be shut down as the load decreases, the generator that will remain online must be able to sustain the remaining load. This requires that the above formula be used to determine the load level that a shutdown command is issued. According to the calculations above that level is 110 kW. This load is shared equally among the online generators. To determine the individual generator load levels the shut down power level must be divided by the number of generators online ($110 / 2 = 55 \text{ kW}$). When the individual loads for the generators drop below 55 kW, a stop command will be issued and a generator will shed its load to the remaining generator, open its GCB, and shut down.

Stop Of The Engine At Mains Failure [GCP-31]

Parameter 106

| | |
|----------------------------|----|
| Mains error - stop eng. | ON |
|----------------------------|----|

Engine stop at mains failure

ON/OFF

- ON**The GCB will open and the engine will shut down if a mains failure is detected for at least the time configured for "Emergency power start delay" (Parameter 138) and the discrete input "Isolated operation" (terminal 54) is de-energized (mains parallel operation enabled). When the mains return and the mains settling time (Parameter 194) has expired, the engine will start and the GCB will synchronize.
- OFF**The GCB will open and the engine will continue running at rated speed with no load if a mains failure is detected for at least the time configured for "Emergency power start delay" (Parameter 138) and the discrete input "Isolated operation" (terminal 54) is de-energized (mains parallel operation enabled). When the mains returns and the mains settling time (Parameter 194) has expired, the GCB is synchronized.

Interface



NOTE

For remote acknowledgement of alarms, a remote stop while in idle mode must be performed. If the control is in an isolated operation, an acknowledgement combined with a remote start must be performed.

Parameter 107

| | |
|-------------------------|----|
| Control via COM X1X5 | ON |
|-------------------------|----|

Control via interface COM X1-X5

ON/OFF

ON..... The remote control interface via the CAN bus (X1X5 terminals) is enabled. This parameter requires that "Direct configuration" (Parameter 3) be configured "OFF", the AUTOMATIC operation mode must be enabled, and the discrete input "Automatic 2" (terminal 5) has been energized.

When remote control of a unit has been enabled, it is possible to start and stop the engine, acknowledge alarms, and change the real power and power factor set points via CAN bus communication. The measured values and states of the controller may be monitored as well.

OFF..... The remote control interface via the CAN bus (X1X5 terminals) is disabled. The generator real power is controlled in the accordance with how "Automatic 2" (Parameter 36) and the "Power factor control set point" (Parameter 68) are configured when the "Automatic 2" discrete input is energized.

Parameter 108

| | |
|------------------------|----|
| Supervision COMX1X5 | ON |
|------------------------|----|

if COMX1X5 = ON only

Remote monitoring of the interface

ON/OFF

ON..... Monitoring of the remote control interface is enabled. The controller monitors to ensure the control signal (CAN ID 503) is received every 90 seconds. If the control signal is not received every 90 seconds, a class 1 (warning) alarm is issued.

OFF..... Monitoring of the interface is disabled.

Parameter 109

| | |
|-------------------------------|----|
| Ackn. F2,F3 via COM interf | ON |
|-------------------------------|----|

if COMX1X5 = ON only

Remote acknowledgment of F2/F3 alarms via the interface

ON/OFF

ON..... Acknowledgement of class F2/F3 alarms via the remote control interface is enabled.

OFF..... Acknowledgement of class F2/F3 alarms via the remote control interface is disabled. Acknowledgment of alarms is performed by energizing the "Acknowledgment" discrete input (terminal 6) or by pressing the "RESET" push button.



NOTE

For the description of the second interface (**Option SB03** and **Option SC10**) refer to the following manuals:

- **Option SB03** = manual 37200
- **Option SC10** = manual 37382

Breaker



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 110

| | |
|-------------------|-----|
| Configure breaker | YES |
|-------------------|-----|

Configuration of the breakers YES/NO

The breaker control functions are configured in this block of parameters. This parameter has the following effects:

YESThe parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NO..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Functional Description

Permissible Limits

If the generator or mains monitoring for over-/undervoltage (Parameter 174) or over-/underfrequency (Parameter 168) is disabled, the CB logic (Parameter 111), the control uses internally defined default limits for generator and mains monitoring.

The internally defined default limits always are used to monitor the busbar.

| | Voltage | Frequency |
|-----------|---|---|
| Generator | $V_{Gen}: 75 \text{ to } 115 \% V_{Rated}$ | $f_{Gen}: 80 \text{ to } 110 \% f_{Rated}$ |
| Busbar | $V_{Busbar}: 85 \text{ to } 112.5 \% V_{Rated}$ | $f_{Busbar}: 90 \text{ to } 110 \% f_{Rated}$ |
| Mains | $V_{Mains}: 85 \text{ to } 112.5 \% V_{Rated}$ | $f_{Mains}: 90 \text{ to } 110 \% f_{Rated}$ |

Table 3-4: Limit values, permissible limits

The permissible limits refer to the respective rated values in the system, such as the system rated voltage (Parameter 17) and the system rated frequency (Parameter 9).

Synchronization

Synchronization of the GCB

GCB synchronization will be performed with frequency and voltage correction when the following conditions have been met:



NOTE

The GCP-30series controller does not have maximum phase angle limit for synchronization. The GCP-30 uses the parameters "Closing time GCB" (Parameter 120) and/or "Closing time MCB" (Parameter 121) to calculates the optimum time for a breaker closure signal to be issued with the measured frequency differential. The typical maximum tolerances are 1.5° to 3.5° with a frequency differential ranging of 0.2 Hertz to 0.49 hertz. If the parameters "Closing time GCB" and/or "Closing time MCB" are not configured accurately, these tolerances will increase due to inaccurate information being provided for the close command calculation resulting in a larger phase angle at closing.

Automatic mode

- The control has been placed in the AUTOMATIC operation mode
- The circuit breaker logic (Parameter 111) is configured as "PARALLEL" (mains parallel operation), "INTERCHANGE" (mains interchange (import/export) real power control), or "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- An F2 or F3 class alarm has not been detected
- The "Automatic 1" (terminal 3) or "Automatic 2" (terminal 5) discrete input has been energized, a remote starting signal has been activated via the interface, or an emergency power operation has been initiated resulting in additional engines being started
- The busbar is energized (the control measures voltage on the bus)
- The engine is running and the generator voltage and frequency are within the permissible limits
- The delayed engine monitoring (Parameter 271) has expired (this does not apply in the case of emergency power)
- The rotating field of the generator and the mains voltages are identical and no alarms are displayed

Manual mode

- The control has been placed in the MANUAL operation mode
- The circuit breaker logic (Parameter 111) is configured as "PARALLEL" (mains parallel operation), "INTERCHANGE" (mains interchange (import/export) real power control), or "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- An F2 or F3 class alarm has not been detected
- The busbar is energized (the control measures voltage on the bus)
- The engine is running and the generator voltage and frequency are within the permissible limits
- The "GCB ON" push-button has been pressed
- The rotating field of the generator and the mains voltages are identical and no alarms are displayed

Load test mode

- The control has been placed in the MANUAL operation mode
- The circuit breaker logic (Parameter 111) is configured as "PARALLEL" (mains parallel operation), "INTERCHANGE" (mains interchange (import/export) real power control), or "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- An F2 or F3 class alarm has not been detected
- The busbar is energized (the control measures voltage on the bus)
- The engine is running and the generator voltage and frequency are within the permissible limits
- The "GCB ON" push-button has been pressed
- The rotating field of the generator and the mains voltages are identical and no alarms are displayed

Synchronization of the MCB [GCP-32]

MCB synchronization will be performed with frequency and voltage correction when the following conditions have been met:

Automatic mode

- The control has been placed in the AUTOMATIC operation mode
- The circuit breaker logic (Parameter 111) is configured as "PARALLEL" (mains parallel operation), "INTERCHANGE" (mains interchange (import/export) real power control), or "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- An F2 or F3 class alarm has not been detected
- The busbar is energized (the control measures voltage on the bus)
- The mains voltage is present and within the permissible limits
- The engine is running and the generator voltage and frequency are within the permissible limits
- The discrete input "Reply: GCB is open" is not energized (the GCB is closed)
- The discrete input "Enable MCB" is energized
- The rotating field of the generator and the mains voltages are identical and no alarms are displayed

Manual operation

- The control has been placed in the MANUAL operation mode
- The circuit breaker logic (Parameter 111) is configured as "PARALLEL" (mains parallel operation), "INTERCHANGE" (mains interchange (import/export) real power control), or "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- An F2 or F3 class alarm has not been detected
- The busbar is energized (the control measures voltage on the bus)
- The mains voltage is present and within the permissible limits
- The engine is running and the generator voltage and frequency are within the permissible limits
- The discrete input "Reply: GCB is open" is not energized (the GCB is closed)
- The discrete input "Enable MCB" is energized
- The "MCB ON" push-button has been pressed
- Load test: The GCB is opened in accordance with the configured breaker logic (INTERCHANGE, or CLOSED TRANSIT.) after the load test has been terminated
- The rotating field of the generator and the mains voltages are identical and no alarms are displayed

Dead Bus Start

Dead bus start of the GCB

The GCB will close without synchronization when the following conditions have been met:

Automatic mode

- The control has been placed in the AUTOMATIC operation mode
- An F2 or F3 class alarm has not been detected
- "GCB dead bus start" (Parameter 125) has been configured as "ON"
- The busbar is de-energized (the control does not measure voltage on the bus)
- The engine is running and the generator voltage and frequency are within the permissible limits
- The discrete input "Reply: MCB is open" is energized (the MCB is open)
- If load sharing is performed via the CAN bus
 - All GCBs must be open if the system has multiple generators in an isolated parallel application
 - The generator with the lowest CAN bus address/generator number (Parameter 4) will be the first to close its GCB

Manual mode

- The control has been placed in the MANUAL operation mode
- An F2 or F3 class alarm has not been detected
- The busbar is de-energized (the control does not measure voltage on the bus)
- The engine is running and the generator voltage and frequency are within the permissible limits
- The discrete input "Reply: MCB is open" is energized (the MCB is open)
- If load sharing is performed via the CAN bus
 - All GCBs must be open if the system has multiple generators in an isolated parallel application
 - The generator with the lowest CAN bus address/generator number (Parameter 4) will be the first to close its GCB
- The "GCB ON" push-button has been pressed

Disabled generator monitoring:

If the generator monitoring for over-/undervoltage (Parameter 174) or over-/underfrequency (Parameter 168) is disabled, the control uses internally defined default limits for generator monitoring.

| Generator monitors | Voltage | Frequency |
|--------------------|---|---|
| ON | Monitor values | Monitor values |
| OFF | $V_{Gen} > 75 \% V_{Rated}$ $V_{Gen} < 115 \% V_{Rated}$ | $f_{Gen} > 80 \% f_{Rated}$ $f_{Gen} < 110 \% f_{Rated}$ |

Table 3-5: Limit values generator, dead bus start

The permissible limits refer to the respective rated values in the system, such as the system rated voltage (Parameter 17) and the system rated frequency (Parameter 9).

Dead bus start of the MCB [GCP-32]

The MCB will close without synchronization when the following conditions are met:

Automatic mode

- The control has been placed in the AUTOMATIC operation mode
- "MCB dead bus start" (Parameter 129) has been configured as "ON"
- The busbar is de-energized (the control does not measure voltage on the bus)
- The mains voltage is present and within the permissible limits
- The discrete input "Reply: GCB is open" is energized (the GCB is open)
- The discrete input "Enable MCB" is energized

Manual mode

- The control has been placed in the MANUAL operation mode
- The busbar is de-energized (the control does not measure voltage on the bus)
- The mains voltage is present and within the permissible limits
- The discrete input "Reply: GCB is open" is energized (the GCB is open)
- The discrete input "Enable MCB" is energized
- The "MCB ON" push button has been pressed

Operation mode STOP

- If "Enable MCB" (terminal 53) is energized and "Switch MCB in stop mode" (Parameter 135) is configured as "YES", the MCB will close when all generators are in STOP mode

Disabled mains monitoring:

If the mains monitoring for over-/undervoltage (Parameter 184) or over-/underfrequency (Parameter 179) is disabled, the control uses internally defined default limits for generator monitoring.

| Mains monitors | Voltage | Frequency |
|----------------|---|---|
| ON | Monitor values | Monitor values |
| OFF | $V_{Mains} > 85 \% V_{Rated}$ $V_{Mains} < 112.5 \% V_{Rated}$ | $f_{Mains} > 90 \% f_{Rated}$ $f_{Mains} < 110 \% f_{Rated}$ |

Table 3-6: Limit values mains, dead bus start

The permissible limits refer to the respective rated values in the system, such as the system rated voltage (Parameter 17) and the system rated frequency (Parameter 9).

Open Breaker

Open GCB

The GCB will be opened through one of two methods that is dependent upon how the breaker closure signal is configured. If the breaker closure signal is configured as a "continuous pulse" (Parameter 115), the "Command: GCB close" relay output will be de-energized. If the breaker closure signal is configured as a "momentary pulse" (Parameter 115), the GCB will open when the "Command: GCB open" relay is energized. The GCB will be opened under the following circumstances:

- If a mains failure is detected and the mains decoupling is configured to occur at the GCB (Parameter 132 or Parameter 133 depending on control unit)
- In the STOP operation mode
- If a F2 or F3 class alarm is detected
- Upon pressing the "GCB OFF" or [GCP-32] "MCB ON" push-button (dependent upon the configured breaker logic) in the MANUAL operation mode
- Upon pressing the "STOP" push-button in the MANUAL operation mode
- Upon pressing the "GCB OFF" or [GCP-32] "MCB ON" push-button (dependent upon the configured breaker logic) in the LOAD TEST operation mode
- In the event of an automatic shutdown in the AUTOMATIC operation mode
- [GCP-32] After the MCB has closed when the breaker logic is configured as "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- [GCP-32] Prior to closing the MCB to the dead busbar when the breaker logic is configured as "OPEN TRANSIT." (break-before-make/changeover)
- In a critical mode/sprinkler operation, provided that an emergency power operation is not enabled
- [GCP-32] Following the load transfer from the generator(s) to the mains so that a zero power transfer occurs at the GCB when the breaker logic is configured for "INTERCHANGE" (mains interchange (import/export) real power control)

Open MCB [GCP-32]

The MCB will be opened when the "Command: GCB open" relay is energized (configuration of "continuous pulse" is not possible for the MCB). The MCB will be opened under the following circumstances:

- If a mains fault is detected and the mains decoupling is configured to EXT (Parameter 133)
- If emergency power (AMF) is enabled (mains failure)
- After the GCB has closed when the breaker logic is configured as "CLOSED TRANSIT." (make-before-break/overlap synchronization)
- Before the GCB is closed to the dead busbar when the breaker logic is configured as "OPEN TRANSIT." (break-before-make/changeover)
- Upon pressing the "MCB OFF" or "GCB ON" push-button (dependent upon the configured breaker logic) in the MANUAL operation mode
- Upon pressing the "MCB OFF" or "GCB ON" push-button (dependent upon the configured breaker logic) in the LOAD TEST operation mode
- Following the load transfer from the mains to the generator(s) so that a zero power transfer occurs at the MCB when the breaker logic is configured for "INTERCHANGE" (mains interchange (import/export) real power control)

Breaker Logic



NOTE

Using the discrete input "Change breaker logic via terminal 64" (Parameter 207), the breaker logic may be switched between two different breaker logics (description on page 113). The primary breaker logic is configured in Parameter 111. If Parameter 206 is configured as "ON", the discrete input terminal 64 is used as a control input. When terminal 64 is energized, the secondary breaker logic configured in Parameter 207 is enabled. When terminal 64 is de-energized, the primary breaker logic configured in Parameter 111 is enabled. Therefore it is possible during operation to change between the breaker logic "PARALLEL" (automatic synchronizing) and "EXTERNAL" (manual synchronizing) with the flip of a switch.

Parameter 111

Breaker logic:

only accessible via LeoPC1

Breaker logic

see below

The GCP may be configured to utilized two different breaker logics. Depending on the unit, there are up to five breaker logic modes to select from. The available breaker logic modes are:

GCP-31
EXTERNAL
PARALLEL

GCP-32
EXTERNAL
PARALLEL
OPEN TRANSIT.
CLOSED TRANSIT.
INTERCHANGE

A detailed explanation for each mode may be found in the following text.

"PARALLEL" Breaker Logic

Configuring Parameter 111 to "PARALLEL" enables parallel operation.



NOTE

Parallel breaker logic must be selected for the following operation modes:

- Isolated operation
- Isolated operation with multiple generators in parallel
- Mains parallel operation

In the event of an add-on request, the following occurs:

- The GCB is synchronized and closed
- The necessary generator assumes load and real power and/or reactive power is controlled

Following the add-off request, the following occurs:

- The generator sheds load and the generator power factor is controlled to "1.00" (unity)
- The GCB is opened
- The engine is shut down following the configured cool down period

[GCP-32] The MCB is synchronized with the energized common bus and closed if:

- Terminal 53 "Enable MCB" is energized
- The GCB is closed

[GCP-32] The MCB is closed onto the de energized common bus and closed if:

- The GCB is open
- The MCB is open
- The busbar is dead (de-energized)
- Terminal 53 "Enable MCB" is energized



NOTE

Soft unloading (power reduction) is carried out prior to opening the GCB when a stop command is issued to the engine unless an F3 class alarm has been detected.

"INTERCHANGE" Breaker Logic [GCP-32]

Configuring Parameter 111 to "INTERCHANGE" enables real power control (import/export) through a mains interchange operation.

 **NOTE**
For this breaker logic to function correctly, the mains power measurement must be connected properly. The power controller must also be assigned the properly process identifier (C, I, or E).

In the event of an add-on request, a change is made from mains to generator supply, the following occurs:

- The GCB is synchronized and closed
- The generator assumes load until the mains interchange (import/export) real power is "zero"
- The MCB is opened

When an add-off request has been issued, the load is transferred from the generator to the mains supply. The following occurs:

- The MCB is synchronized and closed
- The generator sheds load until a "zero" power transfer is measured across the GCB
- The GCB is opened

"CLOSED TRANSIT." Breaker Logic [GCP-32]

Configuring Parameter 111 to "CLOSED TRANSIT." enables the MCB and GCB to perform a closed transition (make-before-break/overlap synchronization) when transferring from the mains to the generator and back.

 **NOTE**
The GCP does not perform a "zero" power transfer when opening or closing the MCB or GCB. The circuit breakers will be opened regardless of the monitored power.

In the event of an add-on request, the load is transferred from mains to the generator. The following occurs:

- The GCB is synchronized and closed
- The MCB is opened and the generator assumes all loads

After the engine shed-off request has been issued, the load is transferred from the generator to mains. The following occurs:

- The MCB is synchronized and closed
- The GCB is opened and the mains assume all load

 **NOTE**
When the GCP is configured for a closed transition, the maximum time of the transition between the MCB and the GCB is 500ms. This time is measured from the moment that the breaker closure reply is received until the moment that the CB open command is issued.

"OPEN TRANSIT." Breaker Logic [GCP-32]

Configuring Parameter 111 to "OPEN TRANSIT." enables the MCB and GCB to perform an open transition (break-before-make/change over logic) when transferring from the mains to the generator and back.

In the event of an add-on request, the load is transferred from mains to generator supply. The following occurs:

- The MCB is opened
- The GCB is closed

After the add-off request has been issued, the load is transferred from generator to mains supply. The following occurs:

- The GCB is opened
- The MCB is closed

"EXTERNAL" Breaker Logic

Configuring Parameter 111 to "EXTERNAL" enables the MCB and GCB breaker logic to be controlled from an external source.

All breaker control must be carried out via a master controller such as a PLC. The GCP will only issue opening and closing pulses to the MCB and GCB when in the MANUAL operating mode. The GCP will always issue a breaker open command under fault conditions.

Overview GCP-32

| STOP | TEST | MANUAL | AUTOMATIC |
|---|--|--|--|
| <p>Breaker logic: EXTERNAL (External breaker control)</p> | | | |
| <p>The MCB and the GCB are primarily operated by an external control such as a PLC. The breakers may be operated through the GCP only if the MANUAL operation mode has been enabled when this breaker logic is used. In a mains parallel operation, decoupling from the mains is carried out via the MCB or the GCB in the event of a mains failure. The GCP will not automatically close the breakers in an emergency power operation. Emergency power operations are not possible when this circuit breaker logic is utilized in accordance with European Community Specification DIN VDE 0108.</p> | | | |
| <p>The GCB is opened.</p> | <p>The GCB and the MCB are not operated.</p> <p><u>Exception:</u> The breakers are opened to decouple from the mains.</p> | <p>The MCB and the GCB may be manually opened and closed without synchronization. The circuit breakers are opened to decouple from the mains.</p> | <p>The GCB is opened if the genset is stopped or if decoupling from the mains but will not close if the engine is started unless given a close command from an external controller. The MCB is opened only if decoupling from the mains and is never closed unless given a close command from an external controller.</p> |
| <p>Breaker logic: PARALLEL: (Mains parallel operation)</p> | | | |
| <p>The MCB and GCB are synchronized to permit continuous mains parallel operation in this breaker logic mode.</p> | | | |
| <p>The GCB is opened; the MCB is not operated.</p> | <p>The GCB and the MCB are not operated.</p> <p><u>Exception:</u> Pressing the "GCB ON" push-button enables load tests. Pressing the "GCB OFF" push-button terminates the load test.</p> <p><u>Emergency power:</u> If a mains failure occurs while in the TEST mode, the control initiates an emergency power operation. The respective breaker enable discrete inputs must be energized.</p> | <p>Synchronization of either the generator or the mains can be initiated by pressing the "GCB ON" or "MCB ON" push-button.</p> | <p>The GCB is synchronized via an add-on request and a mains parallel operation is performed. When an add-off request is issued, the generator sheds load and opens the GCB and the engine is shut down following completion of the configured cool down period.</p> <p><u>Emergency power:</u> The emergency power operation is terminated after mains voltage is detected without interruption for the entire mains settling time. The MCB is synchronized and closed, returning the system to a mains parallel operation.</p> |
| <p>Breaker logic: OPEN TRANSIT.: (Open transition / change-over / brake-before-make)</p> | | | |
| <p>The MCB and GCB are never synchronized in this breaker logic mode.</p> | | | |
| <p>The GCB is opened; the MCB is not operated.</p> | <p>The GCB and the MCB are not operated.</p> <p><u>Exception:</u> Pressing the "GCB ON" push-button enables load tests. Pressing the "GCB OFF" or the "MCB ON" push-button terminates the load test.</p> <p><u>Emergency power:</u> If a mains failure occurs while in the TEST mode, the control initiates an emergency power operation. The respective breaker enable discrete inputs must be energized.</p> | <p>Pressing the "GCB ON" push-button will open the MCB and close the GCB. Pressing the "MCB ON" push-button will open the GCB and close the MCB. Pressing the "STOP" push-button will open the GCB and shut the engine down.</p> | <p>A generator is started and brought online through an add-on command. When an add-off command is initiated, the load is returned to the mains. If the bust bar is de-energized and an add-on command has not been issued, the MCB will be closed.</p> <p><u>Emergency power:</u> The emergency power operation is terminated after mains voltage is detected without interruption for the entire mains settling time. The GCB is opened and the MCB closed, returning the load back to then mains.</p> |

| STOP | TEST | MANUAL | AUTOMATIC |
|---|--|--|---|
| <p>Breaker logic: CLOSED TRANSIT.: (Closed transition / make-before-brake / overlap synchronization) The MCB and the GCB are synchronized; preventing the busbar from being de-energized while the load is transferred. Immediately after the synchronization of one breaker, the other is opened. Continuous mains parallel operation is not possible.</p> | | | |
| <p>The GCB is opened; the MCB is not operated.</p> | <p>The GCB and the MCB are not operated.</p> <p><u>Exception:</u> Pressing the "GCB ON" push-button enables load tests. Pressing the "GCB OFF" or "MCB ON" push-button terminates the load test.</p> <p><u>Emergency power:</u> If a mains failure occurs while in the TEST mode, the control initiates an emergency power operation. The respective breaker enable discrete inputs must be energized.</p> | <p>Synchronization of either the generator or the mains can be initiated by pressing the "GCB ON" or "MCB ON" push-button.</p> | <p>The GCB is synchronized via an add-on request. After the GCB closes the MCB is opened, transferring the load to the generator. Following the add-off request being issued, the MCB is synchronized and closed. The GCB is opened immediately after the MCB closure, returning the load to the mains.</p> <p><u>Emergency power:</u> The emergency power operation is terminated after mains voltage is detected without interruption for the entire mains settling time. The MCB is synchronized to the generator and the MCB is closed. The GCB is opened immediately after the MCB closure, returning the load to the mains.</p> |

| | | | |
|---|--|--|---|
| <p>Breaker logic: INTERCHANGE: (Soft loading / interchange synchronization) The MCB and the GCB are synchronized; preventing the busbar from being de-energized while the load is transferred. The operation of a breaker under load is avoided by utilizing the ability to softly transfer the load from one source to the other. Continuous mains parallel operation is not possible with this breaker logic. Following the add-off request, the MCB synchronizes and closes, the generator soft unloads to the mains and the GCB opens. After the GCB is open the engine is stopped following the expiration of the configured cool down period.</p> | | | |
| <p>The GCB is opened; the MCB is not operated.</p> | <p>The GCB and the MCB are not operated.</p> <p><u>Exception:</u> Pressing the "GCB ON" push-button enables load tests. Pressing the "GCB OFF" or "MCB ON" push-button terminates the load test.</p> <p><u>Emergency power:</u> If a mains failure occurs while in the TEST mode, the control initiates an emergency power operation. The respective breaker enable discrete inputs must be energized.</p> | <p>Synchronization of either the generator or the mains can be initiated by pressing the "GCB ON" or "MCB ON" push-button.</p> | <p>The GCB is synchronized via an add-on request. The MCB is opened after the load has been softly transferred from the mains to the generator and a "zero" power condition has been achieved at the MCB. Following the add-off request being issued, the MCB is synchronized to the generator and the MCB is closed. The GCB is opened after the load has been softly transferred to the mains and a "zero" power condition has been achieved at the GCB.</p> <p><u>Emergency power:</u> The emergency power operation is terminated after mains voltage is detected without interruption for the entire mains settling time. The MCB is synchronized to the generator and the MCB is closed. The GCB is opened after the load has been softly transferred to the mains and a "zero" power condition has been achieved at the GCB.</p> |

Overview GCP-31

| STOP | TEST | MANUAL | AUTOMATIC |
|------|------|--------|-----------|
|------|------|--------|-----------|

| | | | |
|---|---|---|---|
| <p>Breaker logic: EXTERNAL: (External) GCB is primarily operated by an external control such as a PLC. The GCB may be operated through the GCP only if the MANUAL operation mode has been enabled when this breaker logic is used. In a mains parallel operation, decoupling from the mains is carried out via the GCB in the event of a mains failure. The GCB will not automatically close in an emergency power operation.</p> | | | |
| <p>The GCB is opened.</p> | <p>The GCB is not operated. <u>Exception</u>: The GCB is opened to decouple from the mains.</p> | <p>The GCB can be manually opened and closed without synchronization. The GCB is opened to decouple from the mains.</p> | <p>The GCB is opened if the genset is stopped or if decoupling from the mains but will not close if the engine is started unless given a close command from an external controller. The GCB is opened only if decoupling from the mains and is never closed unless given a close command from an external controller.</p> |

| | | | |
|--|--|---|--|
| <p>Breaker logic: PARALLEL: (Mains parallel) The GCB is synchronized to permit continuous mains parallel operation or paralleling multiple generators in an isolated application. This mode may also be used to operate a single isolated generator.</p> | | | |
| <p>The GCB is opened.</p> | <p>The GCB is not operated. <u>Exception</u>: Pressing the "GCB ON" push-button enables load tests. Pressing the "GCB OFF" push-button terminates the load test. <u>Emergency power</u>: If a mains failure occurs while in the TEST mode, the control can be configured to open the GCB to decouple from the mains.</p> | <p>Synchronization of either the generator can be initiated by pressing the "GCB ON" or push-button. This will enable a mains parallel operation.</p> | <p>The GCB is synchronized via an add-on request and a mains parallel operation is performed. When an add-off request is issued, the generator sheds load and opens the GCB and the engine is shut down following completion of the configured cool down period.</p> |

Start/Stop Ramp, Open GCB With F2 Alarm

Parameter 112

| | |
|------------------------|------|
| Add-on/off ramp | |
| max.time | 000s |

Start/stop ramp**0 to 999 s**

The add-on/add-off timer can be used to influence two functions:

Stopping: The maximum amount of time generator should take to shed all load is configured here. If the generator load fails to drop below 3 % of the generator rated power (Parameter 21) within the amount of time configured, the GCB is opened regardless of the load.

Start with soft loading: If the mains interchange (import/export) real power value fails to reach 0 kW while in the "INTERCHANGE" breaker logic within the time configured here, an F1 class alarm and alarm message are issued. Concurrently the relay, which is programmed with relay manager function 78 (Appendix B), is enabled and the MCB is prevented from opening.

Parameter 113

| | |
|-------------------------|------|
| Open GCB with F2 | |
| max.time | 000s |

Max. permissible time with F2 alarms for starting an additional engine**0 to 999 s**

Prerequisite: Load sharing (Parameter 90) and automatic start/stop (Parameter 95 or Parameter 96) are configured to "ON". The generator is operating in an isolated parallel application and at least one additional generator is connected to a busbar.

If an F2 class alarm occurs, the engine shutdown may be delayed by the time configured here. This delay time should be configured so that an additional engine may be started and brought online to assume the load from the generator with the F2 alarm. After the configured delay time expires the engine with the F2 alarm condition will shutdown regardless if an additional engine was able to start and assume the load.

GCB/MCB Pulse/Continuous Pulse

The closing and opening processes of the GCB and the MCB are described in Figure 3-5 and Figure 3-7. Changing of the generator breaker control logic to either a momentary pulse or a continuous signal is configured using Parameter 114 (the MCB can only be configured for a momentary pulse). If "Automatic breaker deblocking" (Parameter 122) is configured to "ON", an open pulse is issued prior issuing a close pulse. Energizing the discrete input "Enable MCB" (terminal 54) enables/disables closing the MCB. De-energizing terminal 54 will not result in a closed MCB being opened.

• **Breaker logic: 'Impulse' for MCB**

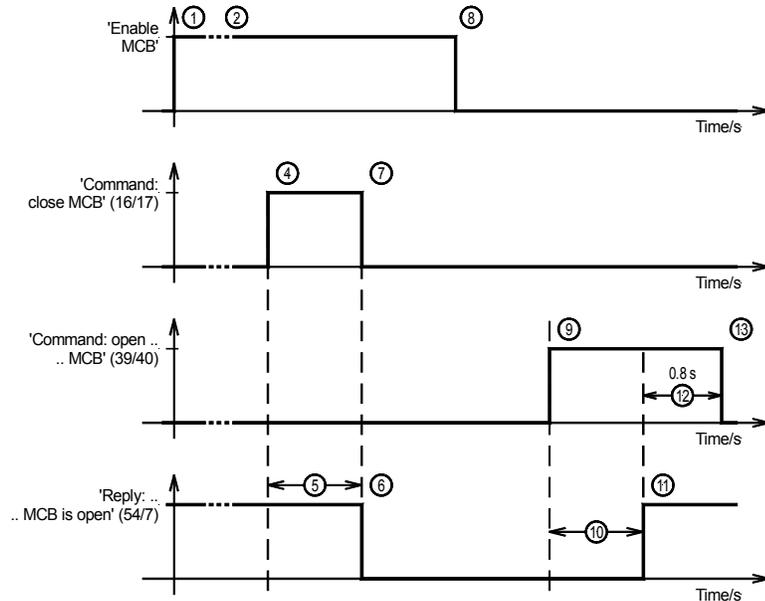


Figure 3-5: Breaker control logic 'Impulse' for MCB

'Impulse' logic (MCB):

- **Enable MCB:** 1 Terminal 53 (Enable MCB) energized; 2 Systems synchronizing; 8 Terminal 53 (Enable MCB) de-energized
- **Close MCB:** 4 Closing pulse for MCB issued; 5 Inherent breaker closure delay; 6 Reply MCB closed received; 7 Closing pulse terminated
- **Open MCB:** 9 Opening pulse MCB issued; 10 Inherent breaker opening delay; 11 Reply MCB open received; 12 Time delay (MCB: 0.8 s); 13 Opening pulse terminated

• Breaker logic: 'Impulse' for GCB

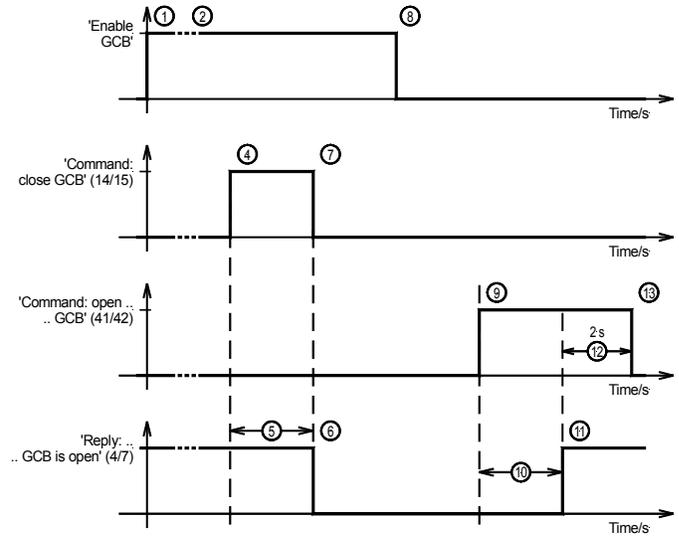


Figure 3-6: Breaker control logic 'Impulse' for GCB

'Impulse' logic (GCB):

- **Enable GCB:** 1 GCB enabled internally; 2 Systems synchronizing
- **Close GCB:** 4 Closing pulse for GCB issued; 5 Inherent breaker closure delay; 6 Reply GCB closed received; 7 Closing pulse terminated
- **Open GCB:** 9 Opening pulse GCB issued; 10 Inherent breaker opening delay; 11 Reply GCB open received; 12 Time delay (GCB: 2 s); 13 Opening pulse terminated

• Breaker logic: 'Continuous'

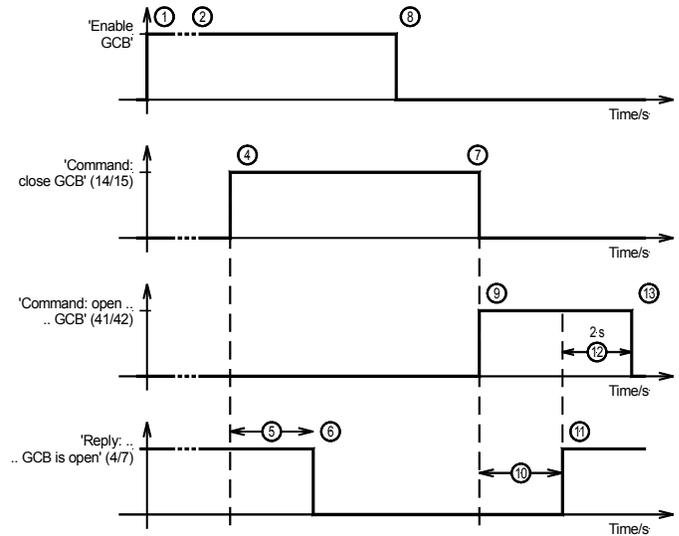


Figure 3-7: Breaker control logic 'Continuous'

'Continuous' logic (GCB only):

- **GCB enabled:** 1 GCB enabled internally; 2 Systems synchronizing
- **Close GCB:** 4 Continuous GCB close pulse issued; 5 Inherent breaker closure delay; 6 Reply GCB closed received; 7 Closing pulse terminated
- **Open GCB:** 9 Continuous GCB pulse disabled and GCB open pulse issued; 10 Inherent breaker opening delay; 11 Reply GCB open received; 12 Time delay (GCB: 2 s); 13 Opening pulse terminated

Parameter 114

GCB close.relay

Signal logic for the GCB

Impulse/Constant

ConstantThe "Command: close GCB" relay can be utilized as part of the holding circuit of the breaker. The "Command: close GCB" relay remains energized after the connect impulse has been issued and the circuit breaker closed reply has been received provided the following conditions are met:

- The "Reply: GCB is open" discrete input (terminal 4) is de-energized when the GCB is closed
- The phase angle between generator voltage and busbar voltage does not exceed +/-14°.
- The "Command: close GCB" relay de-energizes if the GCB must be opened

ImpulseThe "Command: close GCB" relay issues a momentary pulse. An external holding circuit keeps the GCB closed. The "Reply: GCB is open" discrete input (terminal 4) is de-energized when the GCB is closed to signal that the GCB is closed.

The "Command: open GCB" relay (terminals 41/42) is energized to open the GCB regardless of how the breaker closing logic is configured.

Open/Close GCB

Parameter 115

GCB open relay

Opening the GCB (terminal 41/42)

NO-contact/NC-contact

NC-contact...The "Command: open GCB" relay (terminals 41/42) energizes when the GCB is to be opened. Following the "Reply: GCB is open" the relay de-energizes.

NO-contact .The "Command: open GCB" relay (terminals 41/42) de-energizes when the GCB is to be opened. Following the "Reply: GCB is open" the relay energizes again.

Synchronization

Parameter 116

| | |
|--------------------|--------|
| Synchronize | |
| df max | 0.00Hz |

Max. permissible synchronization frequency differential (positive slip) 0.02 to 0.49 Hz

The prerequisite for a breaker closure command being issued is that the monitored frequency differential of the two systems being synchronized is less than the configured frequency differential. The value configured in this parameter specifies the upper limit of the frequency differential.

A positive value corresponds to positive slip → the generator frequency is greater than the busbar frequency in the case of GCB synchronization; busbar frequency is higher than the mains frequency in the case of MCB synchronization.

Parameter 117

| | |
|--------------------|---------|
| Synchronize | |
| df min | -0.00Hz |

Max. permissible synchronization frequency differential (negative slip) 0.00 to -0.49 Hz

The prerequisite for a breaker closure command being issued is that the monitored frequency differential of the two systems being synchronized is greater than the configured frequency differential. The value configured in this parameter specifies the lower limit of the frequency differential.

A negative value corresponds to negative slip → the generator frequency is less than the busbar frequency in the case of GCB synchronization; busbar frequency is less than the mains frequency for MCB synchronization.

Parameter 118

| | |
|--------------------|-------|
| Synchronize | |
| dV max | 00.0% |

Max. permissible synchronization voltage differential 01.0 to 20.0 %

| ⓘ This value refers to the parameter "Rated volt. in system" (Parameter 17). |

A breaker closure command will only be issued when the measured voltage differential of the systems being synchronized falls below the configured voltage differential.

Parameter 119

| | |
|--------------------|-------|
| Synchronize | |
| time pulse> | 0.00s |

Min. pulse duration of connect relay for synchronization 0.02 to 0.26 s

The duration of the close pulse can be adjusted to the breaker (valid for synchronization and dead bus start).

Parameter 120

| | |
|---------------------|-------|
| Closing time | |
| GCB | 000ms |

Inherent closing delay of GCB for synchronization 40 to 300 ms

The inherent closing time of the GCB corresponds to the lead-time of the close command being issued. The GCP uses the frequency differential to calculate when the breaker closure command should be issued. The value configured in this parameter dictates how many milliseconds at the measure frequency differential that the breaker closure command is issued prior to the two systems reaching the synchronous point.

Parameter 121

| | |
|---------------------|-------|
| Closing time | |
| MCB | 000ms |

Inherent closing delay of MCB for synchronization 40 to 300 ms

The inherent closing time of the MCB corresponds to the lead-time of the close command being issued. The GCP uses the frequency differential to calculate when the breaker closure command should be issued. The value configured in this parameter dictates how many milliseconds at the measure frequency differential that the breaker closure command is issued prior to the two systems reaching the synchronous point.

[GCP-32]

Parameter 122

Automat.breaker
deblocking ON

Automatic circuit breaker deblocking ON/OFF

- ON** Depending if the MCB or the GCB is being closed, a breaker open command is issued for 1 second prior to the breaker closure command being issued. The breaker close command is then enabled until the breaker is closed.
- OFF** A breaker open command is not issued prior to issuing the breaker closure command. The GCP will only issue a breaker closure command.

Synchronization Time Monitoring

If Parameter 123) is configured to "ON", synchronization time monitoring is enabled: The synchronization time monitoring will be activated after the delayed engine monitoring has terminated. The synchronization time monitoring will start when synchronization of the GCB or MCB [GCP-32] is initiated. If the time configured for the synchronization time monitoring expires prior to the breaker closing, an F1 alarm is issued.



NOTE

If "MCB monitoring" (Parameter 131) is enabled and an alarm is detected while closing the MCB, an emergency power operation will be performed if "Emergency power" (Parameter 137) has been configured as ON.

Parameter 123

Sync.time contr.
ON

Monitoring of synchronization time ON/OFF

- ON** Synchronization time monitoring is enabled. The subsequent screens of this function are displayed.
- OFF** Synchronization time monitoring is disabled. Synchronization will be attempted until the breaker closes. The subsequent screens of this function are not displayed.

Parameter 124

Sync.time contr.
delay 000s

Maximum synchronization time 10 to 999 s

When synchronization of the GCB or MCB is initiated, the synchronization timer is started following the termination of the delayed engine monitoring. If the breaker cannot be closed prior to the expiration of this time, an alarm message is issued and the control continues to attempt to close the breaker. The relay assigned relay manager function 16 (GCB) and/or 70 (MCB) is energized.

Issuing of F1 class alarm

Dead Bus Start

If the busbar is de-energized, a dead bus start of the GCB or the MCB is performed. If closing commands for the MCB and the GCB are issued simultaneously, priority is given to the MCB provided the discrete input "Enable MCB" (terminal 54) has been energized.

Parameter 125

| |
|------------------------|
| GCB dead bus op. ON |
|------------------------|

GCB dead bus start **ON/OFF**

- ON**..... A dead bus start is performed in the event of a de-energized busbar and an open MCB. The subsequent screens of this function are displayed.
- OFF**..... A dead bus start will not be performed. The subsequent screens of this function are not displayed.

Parameter 126

| |
|-----------------------------------|
| GCB dead bus op. df max 0.00Hz |
|-----------------------------------|

Maximum frequency differential for GCB dead bus start **0.05 to 5.00 Hz**

Prior to issuing a breaker close command, the frequency differential between the monitored generator frequency and the rated generator frequency must be less than the value configured here. The higher the frequency differential is configured, the more rapidly a generator may be permitted to close to a dead bus.

Parameter 127

| |
|-----------------------------------|
| GCB dead bus op. dV max. 00.0% |
|-----------------------------------|

Maximum voltage differential for GCB dead bus start **01.0 to 15.0 %**

ⓘ This value refers to the parameter "rated voltage in system" (Parameter 19). |

Prior to issuing a breaker close command, the voltage differential between the monitored generator voltage and the rated generator voltage must be less than the value configured here. The higher the voltage differential is configured, the more rapidly a generator may be permitted to close to a dead bus.

Parameter 128

| |
|----------------------------------|
| GCB dead bus op max.time 000s |
|----------------------------------|

Maximum time for closing the GCB **0 to 999 s**

This timer is initiated at the start of the breaker closing sequence when the GCB is to be closed to a dead busbar. If the breaker fails to close prior to the configured time expiring, an F1 class alarm is issued.

| |
|----------------------------------|
| Issuing of F1 class alarm |
|----------------------------------|

Parameter 129

| |
|------------------------|
| MCB dead bus op. ON |
|------------------------|

[GCP-32]

Dead bus closing of the MCB **ON/OFF**

- ON**..... A dead bus closing of the MCB is performed in the event of a de-energized busbar and an open GCB. The subsequent screens of this function are displayed.
- OFF**..... A dead bus closing of the MCB will not be performed. The subsequent screens of this function are not displayed.

Breaker Monitoring

Upon CLOSING - The GCP monitors the GCB and/or the MCB to ensure that the respective breaker has closed if "GCB monitoring" (Parameter 130) and/or "MCB monitoring" (Parameter 131) have been configured "ON" unless the breaker logic is configured "EXTERNAL" (Parameter 111). If the breaker has not closed after five attempts, a class F1 alarm is issued. If a relay has been assigned relay manager functions 74 or 75, it will be energized. A breaker is considered as closed, if the reply is present for 5s. This resets the internal counter.

Upon OPENING - The GCP-30 monitors the GCB and/or the MCB to ensure that the respective breaker has opened if "GCB monitoring" (Parameter 130) and/or "MCB monitoring" (Parameter 131) have been configured "ON". If the GCP-30 does not receive a reply that the respective breaker has opened within 2 seconds of the open command being issued, an F1 class alarm is issued. If a relay has been assigned relay manager functions 76 or 77, it will be energized.

Parameter 130

| |
|-----------------------|
| Supervision GCB ON |
|-----------------------|

GCB monitoring **ON/OFF**

ON.....Monitoring of the GCB is performed except when the breaker logic is configured as "EXTERNAL". If the breaker cannot be closed after five attempts, an alarm message is issued and the relay assigned relay manager function 75 is energized. The GCP will continue to attempt to close the GCB after the alarm has been issued unless load sharing (Parameter 90) has been enabled. If load sharing has been enabled (Parameter 90) and several GCPs are connected to the CAN bus, the breaker close command is cancelled upon issuing of the alarm so that another GCP may start up and close its breaker. If a "Reply: GCB is open" message is not detected 2 seconds after a "Command: open GCB" pulse is issued, an alarm message is issued and the relay assigned relay manager function 77 is energized.

| |
|----------------------------------|
| Issuing of F1 class alarm |
|----------------------------------|

OFF.....No GCB monitoring is performed.

Parameter 131

| |
|-----------------------|
| Supervision MCB ON |
|-----------------------|

[GCP-32]

MCB monitoring **ON/OFF**

ON.....Monitoring of the MCB is performed except when the breaker logic is configured as "EXTERNAL". If the breaker cannot be closed after five attempts, an alarm message is issued and the relay assigned relay manager function 74 is energized. The GCP will continue to attempt to close the MCB after the alarm has been issued unless load sharing (Parameter 90) has been enabled. If load sharing has been enabled (Parameter 90) and several GCPs are connected to the CAN bus, the closing command to the breaker is cancelled if an alarm is issued so that another GCP may close its breaker. If a "Reply: MCB is open" message is not detected 2 seconds after a "Command: open MCB" pulse is issued, an alarm message is issued and the relay assigned relay manager function 76 is energized.

| |
|----------------------------------|
| Issuing of F1 class alarm |
|----------------------------------|

OFF.....No MCB monitoring is performed.

Mains Decoupling



NOTE

If the mains monitoring (frequency and voltage) is disabled, decoupling from the mains is not performed.

Parameter 132

Mains decoupling
via -----

[GCP-31]

Decoupling from the mains via ... GCB; GCB→EXT; EXTERNAL; EXT→GCB

GCB If a mains failure (Parameter 179 through Parameter 193) occurs the GCB will be opened. A mains failure is detected by means of the mains voltage (terminals 50/51/52).

GCB→EXT. If a mains failure (Parameter 179 through Parameter 193) occurs the GCB will be opened. A mains failure is detected by means of the mains voltage (terminals 50/51/52). If the GCP does not receive the reply that the GCB has opened (terminal 4 energizes) prior to the time configured in Parameter 134 expiring, an F1 alarm will be issued and the relay assigned relay manager function 76 will be energized. The "Command: open GCB" relay (terminal 41/42) will de-energize and the "Command: Open external CB" relay (terminals 39/40) will energize.

Issuing of F1 class alarm

EXTERNAL If a mains failure (Parameter 179 through Parameter 193) occurs the "Command: Open external CB" relay (terminals 39/40) will be energized. A mains failure is detected by means of the mains voltage (terminals 50/51/52).

EXT→GCB. If a mains failure (Parameter 179 through Parameter 193) occurs the "Command: Open external CB" relay (terminals 39/40) will be energized. A mains failure is detected by means of the mains voltage (terminals 50/51/52). If the GCP does not receive the reply that the external CB has opened (terminal 54 energizes) prior to the time configured in Parameter 134 expiring, an F1 alarm will be issued and the relay assigned relay manager function 77 will be energized. The "Command: Open external CB" relay (terminals 39/40) will de-energize and the "Command: open GCB" relay (terminals 41/42) will energize.

Issuing of F1 class alarm



NOTE

If the mains monitoring (frequency and voltage) is disabled, decoupling from the mains is not performed.

Parameter 133

Mains decoupling
via -----

[GCP-32]

Decoupling from the mains via ... **GCB; GCB→MCB; MCB; MCB→GCB**

GCBIf a mains failure (Parameter 179 through Parameter 193) occurs the GCB will be opened. A mains failure is detected by means of the mains voltage (terminals 50/51/52).

GCB→MCB If a mains failure (Parameter 179 through Parameter 193) occurs the "Command: Open GCB " relay (terminals 41/42) will be energized. A mains failure is detected by means of the mains voltage (terminals 50/51/52). If the GCP does not receive the reply that the GCB has opened (terminal 4 energizes) prior to the time configured in Parameter 134 expiring, an F1 alarm will be issued and the relay assigned relay manager function 76 will be energized. The "Command: Open GCB " relay (terminals 41/42) will de-energize and the "Command: open MCB" relay (terminals 39/40) will energize.

Issuing of F1 class alarm

MCB.....If a mains failure (Parameter 179 through Parameter 193) occurs the MCB will be opened. A mains failure is detected by means of the mains voltage (terminals 50/51/52).

MCB→GCB If a mains failure (Parameter 179 through Parameter 193) occurs the "Command: Open MCB " relay (terminals 39/40) will be energized. A mains failure is detected by means of the mains voltage (terminals 50/51/52). If the GCP does not receive the reply that the MCB has opened (terminal 54 energizes) prior to the time configured in Parameter 134 expiring, an F1 alarm will be issued and the relay assigned relay manager function 77 will be energized. The "Command: Open MCB " relay (terminals 39/40) will de-energize and the "Command: open GCB" relay (terminals 41/42) will energize.

Issuing of F1 class alarm

Parameter 134

Mains decoupling
-> after 0.00s

only accessible via **LeoPC1**

Mains decoupling after **0.10 to 5.00 s**

The maximum amount of time that the mains decoupling should be completed in.



WARNING

It is possible for the MCB to close after the mains settling time (Parameter 194) expires, causing the busbar to energize, while maintenance is being performed on the busbar if Parameter 135 is configured as "YES". Closing of the MCB can be disabled by configuring Parameter 1355 as "NO" or by blocking the MCB through other methods.

Parameter 135

Switch MCB in
STOP mode NO

[GCP-32]

Close MCB in STOP operation mode **YES/NO**

YESThe MCB will be closed by the GCP when the STOP mode is enabled. The breaker will not close unless the "Enable MCB" discrete input (terminal 54) is energized as well.

NO.....The GCP will not change the state of the MCB when the STOP mode is enabled The breaker will remain open or closed depending upon its state when the operation mode is changed to STOP.

Emergency Power (AMF) (GCP-32; GCP-31: XPD, XPQ)



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 136

| | |
|---------------------|-----|
| Configure emergency | YES |
|---------------------|-----|

Configuration of the emergency power (AMF)

YES/NO

The emergency power control functions are configured in this block of parameters. This parameter has the following effects:

YES..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NO..... The parameters in this block are not displayed, cannot be modified, and are skipped.



NOTE

Emergency power functionality is only possible with synchronous generators utilizing a minimum of a mains circuit breaker and a generator circuit breaker (i.e. GCP-32 or GCP-31 with LS 4 coupling).

Prerequisite: The emergency power function (AMF) may only be enabled with synchronous generators by configuring "Emergency power" (Parameter 136) as "ON". Emergency power operations are only performed in the AUTOMATIC or TEST operation modes regardless of the status of the "Automatic 1" and "Automatic 2" discrete inputs.



NOTE

If the "Engine enable" or "Engine block" function is assigned to terminal 6 (Parameter 212), emergency power operations can be prevented or interrupted from an external source through a discrete input. Refer to "Terminal 6" on page 116.

If Parameter 209 is configured ON and discrete input 11 (terminal 68) is energized, emergency power operation will also be prevented or interrupted (refer to Enable 'Emergency OFF' via terminal 68 on page 114).

Activation of emergency power: If a mains voltage fault (over-/undervoltage, -frequency or phase/vector jump) is detected on any single phase of terminals 50/51/52 continuously for the duration of the emergency power start delay time (Parameter 138), an emergency power operation is activated. A mains voltage fault is defined as follows: If the mains voltage and frequency monitoring (Parameter 179 and/or Parameter 184) are enabled and the configured limit has been exceeded. If either or both the mains voltage and frequency monitoring are not enabled, the internal default limits will be used for protective limits. The internal protective limits are defined as follows:

| Mains watchdogs | Voltage | Frequency |
|-----------------|---|---|
| ON | Monitoring values (see Parameter 179) | Monitoring values (see Parameter 184) |
| OFF | $V_{mains} < 85 \% V_{rated}$ $V_{mains} > 112 \% V_{rated}$ | $f_{mains} < 90 \% f_{rated}$ $f_{mains} > 110 \% f_{rated}$ |

Table 3-7: Limit values, Emergency power

An emergency power operation (AMF) may also be initiated through the detection of a breaker fault when the MCB is closed. This protection will only occur if "Emergency power" (Parameter 137) and "MCB monitoring" (Parameter 131) are configured as "ON".

The following actions occur in an emergency power operation:

- If emergency power operation is initiated, the engine is started provided the sequence is not interrupted by an alarm or the operation mode is not changed
- If the mains are restored during the start cycle, the MCB remains closed. The engine starts and continues running until the mains settling time (Parameter 194) expires. If another mains fault occurs during this time, the MCB is opened and the GCB is closed to the dead busbar. The engine shuts down following restoration of the main and the expiration of the mains settling time (Parameter 194) provided no additional mains faults occur.
- The GCB will be closed regardless of the engine delay time once the dead bus limits have been reached.
- If the mains are restored while an emergency power operation is being performed and the GCP will wait for the mains settling time (Parameter 194) to expire. After the mains settling time has expired, the MCB will be synchronized and closed.

Emergency power: In the event an emergency power operation is being performed, the message "Emergency power" is displayed on the screen of the GCP.

Emergency Power With Breaker Logic "PARALLEL"

Emergency power: After detecting a mains fault, the GCP-30 will wait until the "emergency power start delay" (Parameter 138) has expired before starting an engine. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the MCB is opened and the GCB is closed to the dead busbar. The generator is now supplying power to the load.

Return of the mains: Following the termination of the mains fault, the GCP will continue the emergency power operation until the mains settling time has expired (Parameter 194) before synchronization of the MCB is initiated. After closing the MCB, the control returns to its original operation mode. If the engine is to be shut down after the emergency power operation has terminate, a power reduction (soft unloading) is carried out provided the real power controller (Parameter 74) is configured as "ON".

If the GCP has initiated the start cycle and the mains are restored, the GCP completes the start cycle but the MCB is not opened. The engine remains in idle mode during the mains settling time (Parameter 194). The engine remains running while the mains settling time expires so the GCB can be closed and the MCB opened immediately in the event of another mains failure.

Emergency Power With Breaker Logic "OPEN TRANSIT."

Emergency power: After detecting a mains fault, the GCP will wait until the "emergency power start delay" (Parameter 138) has expired before starting an engine. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the MCB is opened and the GCB is closed to the dead busbar. The generator is now supplying power to the load.

Return of the mains: Following the termination of the mains fault, the GCP will continue the emergency power operation until the mains settling time has expired (Parameter 194) before the open transition back to main supply is performed. If an engine request is present following the expiration of the mains settling time (Parameter 194), the generator will maintain the isolated operation.

If the GCP has initiated the start cycle and the mains are restored, the GCP completes the start cycle but the MCB is not opened. The engine remains in idle mode during the mains settling time (Parameter 194). The engine remains running while the mains settling time expires so the GCB can be closed and the MCB opened immediately in the event of another mains failure.

Emergency Power With Breaker Logic "CLOSED TRANSIT."

Emergency power: After detecting a mains fault, the GCP will wait until the "emergency power start delay" (Parameter 138) has expired before starting an engine. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the MCB is opened and the GCB is closed to the dead busbar. The generator is now supplying power to the load.

Return of the mains: Following the termination of the mains fault, the GCP will continue the emergency power operation until the mains settling time has expired (Parameter 194) before synchronization of the MCB is initiated. After closing the MCB, a power reduction (soft unloading) is carried out provided the real power controller (Parameter 74) is configured as "ON", and the GCB is opened. After opening the GCB the engine continues to run for the amount of time configured in "Cool down time" (Parameter 270) and is then shut down. If an engine request is present following the expiration of the mains settling time (Parameter 194), the generator will maintain the isolated operation.

If the GCP has initiated the start cycle and the mains are restored, the GCP completes the start cycle but the MCB is not opened. The engine remains in idle mode during the mains settling time (Parameter 194). The engine remains running while the mains settling time expires so the GCB can be closed and the MCB opened immediately in the event of another mains failure.

Emergency Power With Breaker Logic "INTERCHANGE"

Emergency power: After detecting a mains fault, the GCP will wait until the "emergency power start delay" (Parameter 138) has expired before starting an engine. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the MCB is opened and the GCB is closed to the dead busbar. The generator is now supplying power to the load.

Return of the mains: Following the termination of the mains fault, the GCP will continue the emergency power operation until the mains settling time has expired (Parameter 194) before synchronization of the MCB is initiated. After closing the MCB, a power reduction (soft unloading) is carried out provided the real power controller (Parameter 74) is configured as "ON", and the GCB is opened. After opening the GCB the engine continues to run for the amount of time configured in "Cool down time" (Parameter 270) and is then shut down. If an engine request is present following the expiration of the mains settling time (Parameter 194), the generator will maintain the isolated operation.

If the GCP has initiated the start cycle and the mains are restored, the GCP completes the start cycle but the MCB is not opened. The engine remains in idle mode during the mains settling time (Parameter 194). The engine remains running while the mains settling time expires so the GCB can be closed and the MCB opened immediately in the event of another mains failure.

Emergency Power With Breaker Logic "EXTERNAL"



ATTENTION

This breaker logic will not permit emergency power in accordance with DIN VDE 0108!

Emergency power: After detecting a mains fault, the GCP will wait until the "emergency power start delay" (Parameter 138) has expired before starting an engine. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the MCB is opened and the GCB is closed to the dead busbar. The generator is now supplying power to the load. Further operations of the GCB and the MCB are not operated performed regardless if the mains are restored.

Emergency power With MCB Malfunction

MCB malfunction: If the MCB opens without an open command from the GCP while in the AUTOMATIC mode and the control is configured for emergency power standby, the GCP will attempt to reclose the breaker. If the MCB cannot be reclosed due to an MCB failure and "Emergency power" (Parameter 136) and "Supervision MCB" (Parameter 131) are configured "ON", the engine is started and the alarm message "MCB malfunction" is displayed. Once the engine has started and the monitored generator voltage and frequency have exceeded the dead bus start limits (Parameter 126 and Parameter 127), the GCB is closed to the dead busbar. After the condition that caused the MCB fault has been corrected and the "MCB malfunction" alarm has been acknowledged, the emergency power operation is terminated and the load is transferred to the mains in the manner prescribe by the configured circuit breaker logic detailed above.

Emergency Power Operation; Parameters

Parameter 137

Emergency power
ON

Emergency power **ON/OFF**

ON.....If the control is in AUTOMATIC or TEST mode and a mains failure occurs, the engine is started and an emergency power operation is performed. The subsequent parameters of this function are displayed. Emergency power operations may also be initiated by the detection of a breaker failure when the MCB is to be closed. In order to enable this, the Parameter 131 ("Supervision MCB") must be configured to "ON".

OFFEmergency power operation is not enabled and the subsequent parameters of this function are not displayed.

Parameter 138

Emergency power
start del. 00.0s

Start delay for emergency power **0.5 to 99.9 s**

In order to start the engine and to carry out an emergency power operation, the mains must fail for at least this delay time.

Protection



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 139

| | |
|----------------------|-----|
| Configure monitoring | YES |
|----------------------|-----|

Configuration of the protection

YES/NO

The generator and system protective functions are configured in this block of parameters. This parameter has the following effects:

- YES**..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).
- NO**..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Generator Power Monitoring

It is possible for the GCP to monitor two independently configured generator power limits. If one of these configured limits is surpassed, it is possible to energize a relay output by assigning a relay manager function (relay manager function 56 and 80) to one of the freely configurable relays. This functionality makes it possible to initiate external load shedding.



NOTE

This functionality does not initiate a centralized alarm or issue a message to be displayed. An external device must evaluate the relay output.



WARNING

This function does not provide generator protection.

Parameter 151 and Parameter 156 or an external protection device must be used if generator protection is required.

Parameter 140

| | |
|------------------|----|
| Gen.power monit. | ON |
|------------------|----|

Generator power monitoring

ON/OFF

- ON**..... Generator power monitoring is enabled. Relay manager function 56 must be assigned to one relay and relay manager function 80 must be assigned to a second relay. The subsequent screens of this function are displayed.
- OFF**..... Generator power monitoring is disabled. The subsequent screens of this function are not displayed.

Parameter 141

```
Gen.power monit.  
resp.val1 0000kW
```

Power monitoring threshold value, level 1 **0 to 9,999 kW**

If this threshold value has been exceeded for at least the delay time (Parameter 143), the relay assigned relay manager function 56 energizes.

Parameter 142

```
Gen.power monit.  
hyst.lv1 000kW
```

Power monitoring hysteresis, level 1 **0 to 999 kW**

To prevent the relay assigned relay manager function 56 from energizing and de-energizing continuously due to minor load swings, a hysteresis is configured in this parameter. The value configured here is the amount the monitored power must drop below the configured threshold in Parameter 141 before the corresponding relay output will de-energize.

Parameter 143

```
Gen.power monit.  
delay lv1 000s
```

Power monitoring delay, level 1 **0 to 650 s**

For the control unit to recognize that the level 1 power monitoring threshold has been exceed, the threshold value configured in Parameter 141 must be exceeded without interruption for this period of time.

Parameter 144

```
Gen.power monit.  
resp.val2 0000kW
```

Power monitoring threshold value, level 2 **0 to 9,999 kW**

If this threshold value has been exceeded for at least the delay time (Parameter 146), the relay assigned relay manager function 80 energizes.

Parameter 145

```
Gen.power monit.  
hyst.lv2 000kW
```

Power monitoring hysteresis, level 2 **0 to 999 kW**

To prevent the relay assigned relay manager function 80 from energizing and de-energizing continuously due to minor load swings, a hysteresis is configured in this parameter. The value configured here is the amount the monitored power must drop below the configured threshold in Parameter 144 before the corresponding relay output will de-energize.

Parameter 146

```
Gen.power monit.  
delay lv2 000s
```

Power monitoring delay, level 2 **0 to 650 s**

For the control unit to recognize that the level 2 power monitoring threshold has been exceedn, the threshold value configured in Parameter 144 must be exceeded without interruption for this period of time.

Mains Power Monitoring

It is possible for the GCP-30 to monitor a configured mains power limit. If this configured limit is surpassed, it is possible to energize a relay output by assigning a relay manager function (relay manager function 67) to one of the freely configurable relays. This functionality makes it possible to initiate external load shedding.



NOTE

This functionality does **not** initiate a centralized alarm or issue a message to be displayed. An external device must evaluate the relay output.



WARNING

This function does **not** provide mains protection.

Parameter 151 and Parameter 156 or an external protection device must be used if mains protection is required.

Parameter 147

| |
|------------------------|
| Mains power mon. ON |
|------------------------|

Mains power monitoring

ON/OFF

ON..... Mains power monitoring is enabled. Relay manager function 67 must be assigned to a relay. The subsequent screens of this function are displayed.

OFF..... Mains power monitoring is disabled. The subsequent screens of this function are not displayed.

Parameter 148

| |
|-------------------------------------|
| Mains power mon. res.val. I000kW |
|-------------------------------------|

Power monitoring threshold value

I/E 0 to 9,999 kW

If this threshold value has been exceeded for at least the delay time (Parameter 150), the relay assigned relay manager function 67 energizes. Imported power is entered with a " - " before the value, exported power is entered with a " + " before the value. If the value is confirmed, the " - " becomes an " I " and the " + " becomes an " E ".

Parameter 149

| |
|--------------------------------------|
| Mains power mon. hysteresis 000kW |
|--------------------------------------|

Power monitoring hysteresis

0 to 999 kW

To prevent the relay assigned relay manager function 67 from energizing and de-energizing continuously due to minor load swings, a hysteresis is configured in this parameter. The value configured here is the amount the monitored power must drop below the configured threshold in Parameter 148 before the corresponding relay output will de-energize.

Parameter 150

| |
|--------------------------------|
| Mains power mon. delay 000s |
|--------------------------------|

Power monitoring delay

0 to 650 s

For the control unit to recognize that the mains power monitoring threshold has been exceed, the threshold value configured in Parameter 148 must be exceeded without interruption for this period of time.

Generator Overload Monitoring



NOTE

All percentage values refer to a percentage of the generator rated power (Parameter 21; page 27).

Function: "Positive real power not within the permissible limits" - The single-phase or three-phase measured generator real power is above the configured limit value of the real power.

Parameter 151

Overload monit.
ON

Generator overload monitoring **ON/OFF**

- ON**Monitoring of the generator real power is enabled. The subsequent screens of this function are displayed.
- OFF**Monitoring of the generator real power is disabled. The subsequent screens of this function are not displayed.

Parameter 152

Gen.overload MOP
resp.value 000%

Generator overload monitoring threshold value MOP **80 to 150 %**

For the control unit to recognize that a generator overload fault while in a mains parallel operation (MOP) has occurred, the monitored generator power must exceed the configured percentage of the rated generator power without interruption for the delay time configured in Parameter 153. An F2 class alarm is issued when the delay time expires.

Issuing of F2 class alarm
without power reduction

Parameter 153

Gen.overload MOP
delay 00s

Generator overload monitoring delay MOP **0 to 99 s**

For the control unit to recognize that a generator overload fault has occurred while in a mains parallel operation (MOP) has occurred, the threshold value configured in Parameter 152 must be exceeded without interruption for this period of time.

Parameter 154

Gen.overload IOP
resp.value 000%

Generator overload monitoring threshold value IOP **80 to 150 %**

For the control unit to recognize that a generator overload fault has occurred while in an isolated parallel operation (IOP), the monitored generator power must exceed the configured percentage of the rated generator power without interruption for the delay time configured in Parameter 155. An F2 class alarm is issued when the delay time expires.

Issuing of F2 class alarm
without power reduction

Parameter 155

Gen.overload IOP
delay 00s

Generator overload monitoring delay **0 to 99 s**

For the control unit to recognize that a generator overload fault has occurred while in a mains parallel operation, the threshold value configured in Parameter 154 must be exceeded without interruption for this period of time.

Generator Reverse/Reduced Power Monitoring



NOTE

All percentage values refer to a percentage of the generator rated power (Parameter 21; page 27).

Function: "Real power not within the permissible limits" - The real power measured in a single-phase or in a three-phase system is below the configured limit value for the minimum load or below the configured value for reverse power. By setting positive threshold values (minimum load monitoring), a shutdown can be performed before the generator ends up in reverse power.

Parameter 156

| | |
|------------------------------|----|
| Rev./red.power monitoring | ON |
|------------------------------|----|

Reverse/reduced power monitoring **ON/OFF**

- ON**..... Monitoring of the generator reverse/reduced power is enabled. The subsequent screens of this function are displayed.
- OFF**..... Monitoring of the generator reverse/reduced power is disabled. The subsequent screens of this function are not displayed.

Parameter 157

| | |
|------------------------------|------|
| Rev./red.power resp.value | -00% |
|------------------------------|------|

Reverse/reduced power monitoring threshold value **-99 to 99 %**

Reverse power monitoring: If a negative threshold value is configured and the monitored power falls below the threshold value for at least the delay time (Parameter 158), an F3 class alarm is issued.

Reduced power monitoring: If a positive threshold value is configured and the monitored power falls below the threshold value for at least the delay time (Parameter 158), an F3 class alarm is issued

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Parameter 158

| | |
|-------------------------|------|
| Rev./red.power delay | 0.0s |
|-------------------------|------|

Reverse power monitoring delay **0.0 to 9.9 s**

For the control unit to recognize that a reverse or reduced power fault has occurred, the threshold value configured in Parameter 157 must be exceeded without interruption for this period of time.

Unbalanced Load Monitoring



NOTE

All percentage values refer to a percentage of the generator rated power (Parameter 22; page 27).

Function: "Generator load imbalance not within the permissible limits" - The percentage threshold value specifies the permissible deviation of any single phase current to the arithmetic mean value of all three phase currents.

Parameter 159

| |
|-------------------------------------|
| Load unbalanced monitoring ON |
|-------------------------------------|

Unbalanced load monitoring **ON/OFF**

- ON**Monitoring for unbalanced load of the generator real power is enabled. The subsequent screens of this function are displayed.
- OFF**Monitoring for unbalanced load of the generator real power is disabled. The subsequent screens of this function are not displayed.

Parameter 160

| |
|---|
| Load unbalanced max. 000% |
|---|

Maximum permissible unbalanced load **0 to 100 %**

For the control unit to recognize that an unbalanced load fault has occurred, the monitored phase load must exceed the configured load differential percentage without interruption for the delay time configured in Parameter 161. An F3 class alarm is issued when the delay time expires.

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Parameter 161

| |
|--|
| Load unbalanced delay 00.00s |
|--|

Unbalanced load monitoring delay **0.02 to 9.98 s**

For the control unit to recognize that an unbalanced load fault has occurred, the threshold value configured in Parameter 160 must be exceeded without interruption for this period of time.

Independent Time-Overcurrent Monitoring



NOTE

All percentage values refer to a percentage of the generator rated power (Parameter 22; page 27).

Function: The GCP utilizes a two tier independent time-overcurrent monitoring with separate adjustable time delays. The threshold values and delays can be selected so that the monitored current level is independent from the tripping time. The level 2 overcurrent is used as a fast-triggering high-current stage for protection against short circuits. The level 1 overcurrent reacts to overcurrent below level 2 but above permissible limits that are present over a longer period of time.

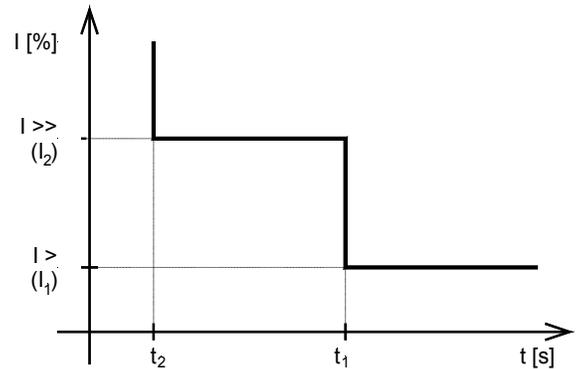


Figure 3-8: Characteristic of the time-overcurrent monitoring

Parameter 162

| | |
|-----------------------------|----|
| Gen. overcurrent monitoring | ON |
|-----------------------------|----|

Independent time-overcurrent monitoring

ON/OFF

ON.....Independent time-overcurrent monitoring of the generator is enabled. The subsequent screens of this function are displayed.

OFF.....Independent time-overcurrent monitoring of the generator is disabled. The subsequent screens of this function are not displayed.

Parameter 163

| | |
|--------------------------|------|
| Gen. overcurrent limit 1 | 000% |
|--------------------------|------|

Threshold value independent time-overcurrent limit 1

0 to 300 %

If the monitored generator current exceeds the configured percentage of the rated generator current for at least the delay time configured in Parameter 164, an F3 class alarm is issued.

| |
|---------------------------|
| Issuing of F3 class alarm |
|---------------------------|

Parameter 164

| | |
|--------------------------|--------|
| Gen. overcurrent delay 1 | 00.00s |
|--------------------------|--------|

Independent time-overcurrent, delay, limit 1

0.02 to 9.98 s

For the control unit to recognize that a time-overcurrent fault has occurred, the threshold value configured in Parameter 163 must be exceeded without interruption for this period of time.

Parameter 165

**Gen. overcurrent
limit 2 000%**

Independent time-overcurrent, threshold value, limit 2 **0 to 300 %**

If the monitored generator current exceeds the configured percentage of the rated generator current for at least the delay time configured in Parameter 166, an F3 class alarm is issued.

Issuing of F3 class alarm

Parameter 166

**Gen. overcurrent
delay 2 00.00s**

Independent time-overcurrent, delay, limit 2 **0.02 to 9.98 s**

For the control unit to recognize that a time-overcurrent fault has occurred, the threshold value configured in Parameter 165) must be exceeded without interruption for this period of time.

Parameter 167

**Gen. overcurrent
Cool down ON**

Open GCB with engine cool down due to overcurrent **ON/OFF**

ONIf the GCB is opened due to an overcurrent fault condition, an engine cool-down is performed prior to engine stop.

OFFThe engine is stopped without a cool-down.

Generator Frequency Monitoring

Function: "Generator frequency not within the permissible limits" - The generator frequency is outside of the limit values set for overfrequency or underfrequency. The engine is shut down immediately (class F3 alarm), and an alarm message is displayed. The activation of generator underfrequency monitoring is delayed by means of "Delayed engine monitoring" (Parameter 271) in order to enable correct generator start-up.

Parameter 168

| | |
|-------------------------------|----|
| Gen. frequency- monitoring | ON |
|-------------------------------|----|

Generator frequency monitoring **ON/OFF**

ON..... Monitoring of the generator frequency is enabled. The subsequent screens of this function are displayed.
OFF..... Monitoring of the generator frequency is disabled. The subsequent screens of this function are not displayed.

Parameter 169

| | |
|-----------------------|--------|
| Gen. overfreq. f > | 000.0% |
|-----------------------|--------|

Threshold value: generator overfrequency **50.0 to 140.0 %**

| ⓘ This value refers to the parameter "Rated freq. in system" (Parameter 9). |

If the monitored generator frequency exceeds the configured percentage of the rated generator frequency for at least the delay time configured in Parameter 170, an F3 class alarm is issued.

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Parameter 170

| | |
|-------------------------|-------|
| Gen. overfreq. delay | 0.00s |
|-------------------------|-------|

Generator overfrequency delay **0.02 to 9.98 s**

For the control unit to recognize that a generator overfrequency fault has occurred, the threshold value configured in Parameter 169 must be exceeded without interruption for this period of time.

Parameter 171

| | |
|------------------------|--------|
| Gen. underfreq. f < | 000.0% |
|------------------------|--------|

Generator underfrequency threshold value **50.0 to 140.0 %**

| ⓘ This value refers to the parameter "Rated freq. in system" (Parameter 9). |

If the monitored generator frequency falls below the configured percentage of the rated generator frequency for at least the delay time configured in Parameter 172, an F3 class alarm is issued.

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Parameter 172

| | |
|--------------------------|-------|
| Gen. underfreq. delay | 0.00s |
|--------------------------|-------|

Generator underfrequency delay **0.02 to 9.98 s**

For the control unit to recognize that a generator underfrequency fault has occurred, the threshold value configured in Parameter 171 must be exceeded without interruption for this period of time.

Engine Overspeed Monitoring

Parameter 173

| | |
|-----------------------|----------|
| Engine overspeed > | 0000 rpm |
|-----------------------|----------|

Engine overspeed monitoring **0 to 9,999 rpm**

If the monitored engine speed exceeds the generator rated speed (Parameter 276) for at 0.1 s, an F3 class alarm is issued. The engine overspeed monitoring is performed in addition to and independent of the generator frequency. The Magnetic Pickup Unit (MPU) must be enabled (Parameter 274) for engine speed monitoring to be performed. If the MPU input is disabled, engine speed monitoring is disabled. If the monitored engine speed exceeds the rated speed, an F3 class alarm is issued.

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Generator Voltage Monitoring

The line-to-line (wye) voltage is monitored.

Function: "Generator voltage not within the permissible limits" - If one or more phases of the generator voltage exceeds the limit values set for overvoltage or undervoltage, the engine is shut down immediately (F3 class alarm) and an alarm message is displayed. Monitoring of generator undervoltage is delayed by means of "Delayed engine monitoring" (Parameter 271) in order to enable generator start-up.

Parameter 174

Gen.voltage monitoring ON

Generator voltage monitoring ON/OFF

ON.....Monitoring of the generator voltage is enabled. The subsequent screens of this function are displayed.

OFF.....Monitoring of the generator voltage is disabled. The subsequent screens of this function are not displayed.

Parameter 175

Gen. overvoltage
V > 000.0%

Generator overvoltage threshold value 020,0 to 150,0 %

| ⓘ This value refers to the parameter "Rated volt. in system" (Parameter 17). |

If the monitored generator voltage exceeds the configured percentage of the rated generator frequency for at least the delay time configured in Parameter 176, an F3 class alarm is issued.

Issuing of F3 class alarm



NOTE

The threshold value for generator overvoltage may not exceed 149 V [1] or 495 V [4] for delta connections, because higher voltages cannot be detected.

Parameter 176

Gen. overvoltage
delay 0.00s

Generator overvoltage delay 0.02 to 9.98 s

For the control unit to recognize that a generator overvoltage fault has occurred, the threshold value configured in Parameter 175 must be exceeded without interruption for this period of time.

Parameter 177

Gen. undervoltage
V < 000.0%

Generator undervoltage threshold value 020,0 to 150,0 %

| ⓘ This value refers to the parameter "Rated volt. in system" (Parameter 17). |

If the monitored generator voltage falls below the configured percentage of the rated generator frequency for at least the delay time configured in Parameter 178, an F3 class alarm is issued.

Issuing of F3 class alarm

Parameter 178

Gen. undervoltage
delay 0.00s

Generator undervoltage delay 0.02 to 9.98 s

For the control unit to recognize that a generator undervoltage fault has occurred, the threshold value configured in Parameter 177 must be exceeded without interruption for this period of time.

Mains Frequency Monitoring

Monitoring the mains frequency is absolutely vital if a generator is operated in parallel with the infinite grid. In the event of a mains failure (e.g. utility power outage) the generator that is operating in parallel with the utility must be automatically disconnected from the mains. Decoupling from the mains only occurs when the MCB and GCB are closed.

If the following parameters are enabled, the limit values are used to assess if an emergency power operation should be initiated. The parameters below define if the mains are or aren't present. The breaker opening times do not affect these parameters.

Function: "Mains frequency not within the permissible limits" - If the mains frequency exceeds the limit values configured for overfrequency or underfrequency a mains failure is recognized. The circuit breaker configured to disconnect from the mains is immediately opened. The prerequisite of mains frequency monitoring is that the generator is operating in parallel with the mains (the MCB and GCB are both closed).

Parameter 179

| | |
|-----------------------------------|-----------|
| Mains frequency monitoring | ON |
|-----------------------------------|-----------|

Mains frequency monitoring **ON/OFF**

ON.....Monitoring of the mains frequency is enabled. The subsequent screens of this function are displayed.
OFF.....Monitoring of the mains frequency is disabled. The subsequent screens of this function are not displayed.

Parameter 180

| | |
|------------------------|---------------|
| Mains overfreq. | |
| f > | 000.0% |

Mains overfrequency threshold value **80.0 to 140.0 %**

ⓘ This value refers to the parameter "Rated freq. in system" ((Parameter 9).

If the monitored mains frequency exceeds the configured percentage of the rated system frequency for at least the delay time configured in Parameter 181, an F0 class alarm is issued. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Issuing of F0 class alarm

Parameter 181

| | |
|------------------------|--------------|
| Mains overfreq. | |
| delay | 0.00s |

Mains overfrequency delay **0.02 to 9.98 s**

For the control unit to recognize that a mains overfrequency fault has occurred, the threshold value configured in Parameter 180 must be exceeded without interruption for this period of time.

Parameter 182

| | |
|-------------------------|---------------|
| Mains underfreq. | |
| f < | 000.0% |

Mains underfrequency threshold value **80.0 to 140.0 %**

ⓘ This value refers to the parameter "Rated freq. in system" ((Parameter 9).

If the monitored mains frequency falls below the configured percentage of the rated system frequency for at least the delay time configured in Parameter 183, an F0 class alarm is issued. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Issuing of F0 class alarm

Parameter 183

| | |
|-------------------------|--------------|
| Mains underfreq. | |
| delay | 0.00s |

Mains underfrequency delay **0.02 to 9.98 s**

For the control unit to recognize that a mains underfrequency fault has occurred, the threshold value configured in Parameter 182 must be exceeded without interruption for this period of time.

Mains Voltage Monitoring

Monitoring the mains voltage is absolutely vital if a generator is operated in parallel with the infinite grid. In the event of mains failure (e.g. utility power outage) the generator that is operating in parallel with the utility must be automatically disconnected from the mains. Decoupling from the mains only occurs when the MCB and GCB are closed.

The phase-to-neutral (wye) voltage is always monitored.

If the following parameters are enabled, the limit values are used to assess if an emergency power operation should be initiated. The parameters below define if the mains are or aren't present. The breaker opening times do not affect these parameters.

Function: "Mains voltage not within the permissible limits" - If one or more phases of the generator voltage exceeds the limit values set for overvoltage or undervoltage, a mains failure is recognized. The circuit breaker configured to disconnect from the mains is immediately opened. The prerequisite of mains voltage monitoring is that the generator is operating in parallel with the mains (the MCB and GCB are both closed).

Parameter 184

Mains voltage monitoring ON

Mains voltage monitoring ON/OFF

ONMonitoring of the mains voltage is enabled. The subsequent screens of this function are displayed.
OFFMonitoring of the mains voltage is disabled. The subsequent screens of this function are not displayed.

Parameter 185

Mains overvolt. v > 000.0%

Mains overvoltage threshold value 20.0 to 150.0 %

ⓘ This value refers to the parameter "Rated volt. in system" (Parameter 17).

If the monitored mains voltage exceeds the configured percentage of the rated system frequency for at least the delay time configured in Parameter 186, an F0 class alarm is issued. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Issuing of F0 class alarm

Parameter 186

Mains overvolt. delay 0.00s

Mains overvoltage delay 0.02 to 9.98 s

For the control unit to recognize that a mains overvoltage fault has occurred, the threshold value configured in Parameter 185 must be exceeded without interruption for this period of time.

Parameter 187

Mains undervolt. v < 000.0%

Mains undervoltage threshold value 20.0 to 150.0 %

ⓘ This value refers to the parameter "Rated volt. in system" (Parameter 17).

If the monitored mains voltage falls below the configured percentage of the rated system frequency for at least the delay time configured in Parameter 189, an F0 class alarm is issued. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Issuing of F0 class alarm

Parameter 188

| |
|--|
| Mains undervolt. Hysteresis 00.0% |
|--|

Mains undervoltage hysteresis **0.0 to 50.0 %**

The value configured here is the amount the monitored voltage must exceed the configured threshold in Parameter 187 before the corresponding relay output will de-energize.

Parameter 189

| |
|---|
| Mains undervolt. delay 0.00s |
|---|

Mains undervoltage delay **0.02 to 9.98 s**

For the control unit to recognize that a mains undervoltage fault has occurred, the threshold value configured in Parameter 187 must be exceeded without interruption for this period of time.

Phase/Vector Shift Monitoring $d\phi/dt$

A phase/vector shift is a sudden change in the voltage curve that is caused by a large generator load change. The measuring circuit detects a change in a single sine wave. This sine wave is compared with a calculated mean value from previous measurements. Monitoring encompasses all three phases. The threshold value in degrees specifies the difference in time between the mean and the measured value in reference to a full cycle. Monitoring can be set in various manners. The phase/vector shift watchdog may be used as an additional means for decoupling from the mains. The minimum voltage that the phase shift is activated is 70 % of the rated secondary voltage.

Function: "Voltage cycle duration not within the permissible limits" - A fault is recognized if one or more phases of the generator voltage cycle duration exceeds the configured limit value for the phase/vector shift. The circuit breaker configured to disconnect from the mains is opened and an alarm message is displayed. The prerequisite for phase/vector shift monitoring is that the generator is operating in parallel with the mains operation (the MCB and GCB are both closed).

Parameter 190

| |
|--------------------------------------|
| Phase shift monitoring ON |
|--------------------------------------|

Phase/vector shift monitoring **ON/OFF**

- ON**..... Monitoring of the mains frequency for a phase/vector shift is enabled. The subsequent screens of this function are displayed.
- OFF**..... Monitoring of the mains frequency for a phase/vector shift is disabled. The subsequent screens of this function are not displayed.

Parameter 191

| |
|-----------------------------|
| Monitoring ----- |
|-----------------------------|

Phase/vector shift monitoring **one-/threephase / only threephase**

- one-/threephase**..During single-phase voltage phase/vector shift monitoring, tripping occurs if the phase/vector shift exceeds the configured threshold value (Parameter 192) in at least one of the three phases. Note: If a phase/vector shift occurs in one or two phases, the single-phase threshold value (Parameter 192) is taken into consideration; if a phase/vector shift occurs in all three phases, the three-phase threshold value (Parameter 193) is taken into consideration. Single phase monitoring is very sensitive and may lead to nuisance tripping if the selected phase angle settings are too small.
- only threephase**..During three-phase voltage phase/vector shift monitoring, tripping occurs only if the phase/vector shift exceeds the specified threshold value (Parameter 193) in all three phases within 2 cycles.

| |
|----------------------------------|
| Issuing of F0 class alarm |
|----------------------------------|



NOTE

If monitoring is configured to "threephase", only Parameter 192 is displayed; if monitoring is configured to "one-/threephase", Parameter 192 and Parameter 193 are displayed.

Parameter 192

Phase shift
one-phase 00°

This screen is visible only if monitoring is configured to "one/three-phase".

Phase/vector shift monitoring threshold value single-phase

3 to 30 °

If the monitored electrical angle of the mains voltage shifts more than this configured value in any single phase, an F0 class alarm is initiated. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Parameter 193

Phase shift
three-phase 00°

Phase/vector shift monitoring threshold value three-phase

3 to 30 °

If the monitored electrical angle of the mains voltage shifts more than this configured value in all three phases, an F0 class alarm is initiated. The MCB, GCB, or an external CB is opened depending on how the GCP is configured to decouple from the mains.

Mains Settling Time

Parameter 194

Mains settling
time 000s

Mains settling time

0 to 999 s

It is possible to delay the synchronization of the generator to the mains for the period of time configured here. This will permit the user to ensure that the mains voltage is stable while the generator continues to operate in an isolated (parallel) mode or idle offline.

Note

For devices with one circuit breaker, refer to Parameter 106.

If a GCP-32 has both the MCB and GCB open and the mains return, the mains settling time is reduced to 2 seconds when the mains return if the mains settling time is configured for longer.

Battery Voltage Monitoring

Parameter 195

| | |
|-------------------------|-------|
| Batt. undervolt. | |
| V < | 00.0V |

Battery voltage monitoring: Threshold value**9.5 to 30.0 V**

If the monitored battery voltage falls below the configured percentage of the configured threshold for at least the delay time configured in Parameter 196, an F1 class alarm is issued.

| |
|----------------------------------|
| Issuing of F1 class alarm |
|----------------------------------|

Parameter 196

| | |
|-------------------------|-----|
| Batt. undervolt. | |
| delay | 00s |

Battery undervoltage delay**0 to 99 s**

For the control unit to recognize a battery undervoltage fault condition, the threshold value configured in Parameter 195 must be exceeded without interruption for this period of time.

Note: Regardless of the configured battery voltage monitoring threshold, readiness for operation is withdrawn and an alarm message is issued if the power supply voltage falls below 9 Vdc during normal operation or if the power supply voltage falls below 11 Vdc during the start sequence.

Time Of Active Horn

Parameter 197

| | |
|------------------------|-------|
| Horn self reset | |
| | 0000s |

Horn acknowledgment after**1 to 9,999 s**

The horn (centralized alarm) will remain active for the time configured and then deactivate (acknowledged) automatically.

Discrete Inputs



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 198

| | |
|------------|-----|
| Configure | |
| dig.inputs | YES |

Configuration of discrete inputs

YES/NO

The discrete inputs functionality and logic are configured in this block of parameters. This parameter has the following effects:

YESThe parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NOThe parameters in this block are not displayed, cannot be modified, and are skipped.



NOTE

The discrete inputs can be used as alarm inputs or control inputs. If they were configured as alarm inputs (Parameter 204 to Parameter 210 are configured to "OFF") the parameters in "Alarm Inputs" (page 111) are valid. If they have been configured as control inputs (Parameter 204 to Parameter 210 are configured to "ON") the parameters in "Control Inputs" (page 113) are valid.

Alarm Inputs

| | | | | | | | | | | | | | | | | |
|----------------|----|----|----|----|-----|-----|-----|----|----|-----|----|----|-----|----|----|----|
| Discrete input | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| Name | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F | G |
| Terminal | 34 | 35 | 36 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 |
| Function | A | A | A | A | A/C | A/C | A/C | A | A | A/C | A | A | A/C | A | A | A |

A..Alarm input; A/C..Alarm or control input (dependent on the configuration)



NOTE

Normally Open (N.O.): Energizing the discrete input will enable the relay.
This does not provide wire break monitoring!

Normally Closed (N.C.): De-energizing the discrete input will enable the relay.
This may provide wire break monitoring.

Example: Discrete inputs 1 through 4 (use the same procedure for inputs 5 to 16)

Parameter 199

| | |
|------------|------|
| Dig. input | 1234 |
| function | EEEE |

Function of the discrete alarm inputs 1 to 4

E/D

The discrete inputs may be operated by a normally open contact or a normally closed contact. The normally closed contact input may be used to monitor for a wire break. A positive or negative voltage polarity may be utilized.

D..... The discrete input is normally de-energized and analyzed as "enabled" by energizing the input (N.O.; D = normally de-energized).

E..... The discrete input is normally energized and analyzed as "enabled" by de-energizing the input (N.C.; E = normally energized).

Parameter 200

| | |
|------------|------|
| Dig. input | 1234 |
| delay | 0000 |

Delay time of the discrete alarm inputs 1 to 4

0 to 9

A delay time can be assigned to each alarm input. The delay times are configured as stages. The individual stages are listed below. The discrete input must be energized/de-energized, depending on how it is configured, without interruption throughout the delay time in order to be "enabled".

| Delay stage | Delay stage |
|-------------|-------------|
| 0 | 100 ms |
| 1 | 200 ms |
| 2 | 500 ms |
| 3 | 1 s |
| 4 | 2 s |
| 5 | 5 s |
| 6 | 10 s |
| 7 | 20 s |
| 8 | 50 s |
| 9 | 100 s |

Table 3-9: Discrete alarm inputs - delay stages

Parameter 201

| | |
|------------|------|
| Delayed by | 1234 |
| eng. speed | YYYY |

Delayed by firing speed of the discrete alarm inputs 1 to 4

Y/N

It is possible to configure the GCP to ignore discrete inputs until the engine has achieved firing speed. This parameter defines if the discrete input, which is being used as an alarm input, is only to be monitored after the engine is running ("firing speed reached").

Y..... The discrete input is only monitored after the engine firing speed has been achieved and monitoring of the engine protections have been enabled.

N..... The discrete input is always monitored.

Parameter 202

| | |
|-------------|------|
| Dig.input | 1234 |
| error class | 0000 |

Alarm class of the discrete alarm inputs 1 to 4**F0 to F3**

The discrete inputs, which have been designated as alarm inputs, may be assigned an alarm class. This parameter defines what action is to be taken by the GCP when an alarm discrete input is enabled. The alarm classes are listed below.

The monitoring functions are divided into four alarm classes:

- F0 - Warning alarm** - This alarm does not lead to an interruption of the operation. An alarm message is displayed without a centralized alarm (horn)
→ Alarm text.
- F1 - Warning alarm** - This alarm does not lead to an interruption of the operation. A centralized alarm is issued.
→ Alarm text + flashing "alarm" LED + group alarm relay (horn).
- F2 - Triggering alarm** - This alarm leads to the shutdown of the engine. A power reduction is performed prior to the GCB being opened. An engine cool down is performed.
→ Alarm text + flashing "alarm" LED + group alarm relay (horn) + soft shutdown.
- F3 - Triggering alarm** - This alarm leads to the immediate opening of the GCB and shutdown of the engine.
→ Alarm text + flashing "alarm" LED + group alarm relay (horn) + hard shutdown.

Configuring The Text For The Discrete Inputs

 **NOTE**
If terminal 6 is configured to "Sprinkler operation" (override or critical mode; Parameter 211) or if a gas engine is selected (Parameter 254), the EMERGENCY STOP function must be assigned to terminal 34. If terminal 34 is not used as a discrete input, the EMERGENCY STOP function is assigned to the discrete input with the lowest terminal number (terminal 61).

 **NOTE**
Special characters, numbers, upper and lower case letters may be configured for the alarm text.

 **NOTE**
If the unit is equipped with a second communication interface (Option SB03 and Option SC10), the alarm texts can only be configured via LeoPC1.

Parameter 203

| |
|------------------|
| Errortxt.term.34 |
| EMERGENCY STOP |

Setting the alarm texts

These parameters are used to enter the alarm texts (in this example for terminal 34 the alarm text "EMERGENCY STOP"). The text for these parameters is user defined. Terminal 34 is the recommended terminal to assign EMERGENCY STOP functions to.

Control Inputs

Acknowledge firing speed via terminal 62

Parameter 204

| | |
|-------------------------------------|-----------|
| Firing speed by Term. 62 | ON |
|-------------------------------------|-----------|

only accessible via [LeoPC1](#)

Firing speed reached via terminal 62

ON/OFF

OFF..... This terminal is used as an alarm input.

ON..... Configuring the starting sequence logic:

If Parameter 199 is configured to "E", the discrete input utilizes "N.O." contacts and the starter disengages when this discrete input becomes TRUE/energized. Once the delayed engine monitoring time has expired, the discrete input changes to "N.C." logic internally even though "N.O." logic is still programmed. This permits the controller to generate an alarm condition in the event of a voltage loss (including a configured time delay).

This input will operate on the inverse of this principle as well. If Parameter 199 is configured to "D", the discrete input utilizes "N.C." logic to disengage the starter in the event of a voltage loss. Once the delayed engine monitoring has expired, the discrete input changes to "N.O." logic internally even though "N.C." logic is still programmed and will initiate an alarm as soon as voltage is applied.

Block operation mode selector switch via terminal 63

Parameter 205

| | |
|---------------------------------------|-----------|
| Op.mode blocked by Ter. 63 | ON |
|---------------------------------------|-----------|

only accessible via [LeoPC1](#)

Disabling the change of the mode using terminal 63

ON/OFF

OFF..... This terminal is used as an alarm input.

ON..... Terminal 63 is used as control input.

If terminal 63 is energized, the operation mode buttons of the face of the control are disabled and cannot be used to operating mode.

If this input is configured as control input **and** energized, it is possible for units with [XPD](#) or [XPQ Packages](#) from version 4.3010 to change the operation mode externally using terminals 127 and 128 as control inputs. The functionality is described in the following table:

| Operation mode blocked (terminal 63) | Input STOP (terminal 127) | Input AUTOMATIC (terminal 128) | Function |
|--------------------------------------|---------------------------|--------------------------------|--|
| de-energized | not applicable | not applicable | The operation mode can be selected using the buttons on the face of the GCP. (The terminals 127/128 have no effect.) |
| energized | energized | de-energized | The STOP operation mode is activated. After connecting the supply voltage, the unit is in STOP operation mode. The operation mode selection buttons on the face of the GCP are disabled. |
| energized | de-energized | energized | The AUTOMATIC operation mode is activated. After connecting the supply voltage, the unit changes to AUTOMATIC operation mode via STOP. The operation mode selection buttons on the face of the GCP are disabled. |
| energized | energized | energized | The STOP operation mode is activated. After connecting the supply voltage, the unit is in STOP operation mode. The operation mode selection buttons on the face of the GCP are disabled. |

Table 3-10: Function - external operation mode selection

Change breaker logic via terminal 64

Parameter 206

```
Breaker logic
by Term64   ON
```

only accessible via **LeoPCI**

Breaker logic via terminal 64 ON/OFF

- OFFThis terminal is used as an alarm input.
 ONThis terminal is used as control input.
- Energized When this terminal is energized, the breaker logic of Parameter 207 is used.
 - De-energized When this terminal is de-energized, the breaker logic of Parameter 111 is used.

Parameter 207

```
Breaker logic:
-----
```

Visible only if breaker logic via terminal 64 is configured to "ON".

Breaker logic via terminal 64 see page 74

Selection of the breaker logic that is to be used when terminal 64 is energized. This parameter is only displayed if Parameter 206 has been configured to ON (for the description of the breaker logic refer to the "Breaker logic" section on page 74).

Enable 'Close GCB without engine delay' via terminal 67

Parameter 208

```
Close GCB asap
by Ter.67   ON
```

Close GCB before the delayed engine monitoring expires via terminal 67 ON/OFF

- OFFThis terminal is used as an alarm input.
 ONThis terminal is used as control input.
- Energized When this terminal is energized, the GCB closes before the delayed engine monitoring expires.
 - De-energized When this terminal is de-energized, the GCB closes after the delayed engine monitoring has expired.

Enable 'Emergency OFF' via terminal 68

Parameter 209

```
Emergency OFF
by Ter.68   OFF
```

only version 4.3010 or later
only accessible via **LeoPCI**

Prevent an emergency power operation via terminal 68 ON/OFF

- OFFThis terminal is used as an alarm input.
 ONThis terminal is used as control input.
- Energized When this terminal is energized, an emergency power operation is prevented or terminated. The unit operates as if Parameter 137 "Emergency power" is disabled.
 - De-energized When this terminal is de-energized, an emergency power operation may be performed. The unit operates in the manner prescribed by Parameter 137 "Emergency power".

Enable 'Idle mode' via terminal 70

Parameter 210

| |
|---|
| Idle Mode by term.70 ON |
|---|

only accessible via **LeoPC1****Enable idle mode via terminal 70****ON/OFF****OFF**..... This terminal is used as an alarm input.**ON**..... This terminal is used as control input. The discrete output programmed with the relay manager function 133 ("idle mode active") enables/disables in accordance with the logical status of terminal 70 according to the configured NO/NC logic. Generally this discrete output from the GCP must be wired to the "idle input" of the speed governor normally.

- **Energized** Energizing the terminal 70 discrete input enables the idle mode. The message "Idle Mode" is displayed in all operational modes (except STOP mode) when a start request is initiated and during the post-run time so long as there are no other message with a higher display priority (i.e. pre-glow). The generator under-voltage and underfrequency protections are disabled and the warning limit value for the oil pressure input is suppressed while in the idle mode. These protections are enabled after terminal 70 is de-energized and the monitored frequency is measured within 1 Hz of the rated generator frequency or after 60 seconds, which ever occurs first.
- **De-energized** The idle mode is disabled and the protections are enabled again (refer to the description above).

Terminal 6 Function



ATTENTION

Specific terminal 6 functionality require different input signals!

Parameter 211

Function term.6

Function of terminal 6

This parameter is used to assign a function to the terminal 6 discrete input. The following functions may be selected for the discrete input:

- **Sprinkler operation** By **de-energizing** terminal 6, the sprinkler operation (critical mode) is enabled in accordance with the functional description. Energizing terminal 6 terminates the sprinkler operation. For a description of the sprinkler operation function refer to "Sprinkler (Critical) Operation" on page 117).

Note: Load-dependent starting and stopping is not possible in sprinkler operation.

Attention: This is a negative logic function!
- **Engine enabled** Terminal 6 has the same function as the STOP button: De-energizing terminal 6 prevents the engine from starting and stops the engine if it is already running. Energizing terminal 6 enables the starting of the engine

Attention: Use of this function makes it possible to abort or prevent an emergency power operation. An emergency power operation is not possible without enabling this function! The enable engine function only operates when the GCP is in the AUTOMATIC operation mode.
- **Engine blocked** Energizing terminal 6 can prevent starting of the engine. If the engine is running due to an active emergency power operation, energizing this discrete input will stop it. The engine-blocked functionality is only possible when the GCP is in the AUTOMATIC operation mode. The function of this mode is the opposite of the function of the "Engine enabled" mode.
- **Ext. acknowledgment** Alarms can be acknowledged externally by momentarily energizing terminal 6 in the STOP and AUTOMATIC operation modes. In order to achieve additional acknowledgements, terminal 6 must first be de-energized and then energized again. If terminal 6 is continuously re-energized, any alarm messages generated after terminal 6 was energized will not be acknowledged.
- **STOP mode** By energizing terminal 6 the STOP mode is activated. If terminal 6 is de-energized, the operation mode will revert back to the mode that was active prior to terminal 6 being energized.
- **Start without CB** If the terminal 6 is energized, the engine starts. Synchronization is not performed and the GCB is not closed (no closing to dead busbar). The GCB will only close if an emergency power operation is enabled. After the mains return, the load is transferred back to the mains according to the configured breaker logic. An engine start command from terminal 6 has a higher priority than a start command from terminals 3/5. If terminal 6 is energized, terminals 3/5 are ignored. If the generator is in a mains parallel operation mode with "Parallel" breaker logic and terminal 6 is energized, the GCB will be opened following a power reduction. The generator will continue to run without load and the GCB open.

Note: Load-dependent starting and stopping is not possible in sprinkler operation.

Starting Without Closing GCB

Parameter 212

| | |
|----------------------------|----|
| Start without CB cool down | ON |
|----------------------------|----|

Only if terminal 6 has been configured to "start without CB".

Perform engine cool down if starting without CB has been selected **ON/OFF**

- ON**..... After removing the start request (terminal 6 has been de-energized), an engine cool down is performed for the time configured in Parameter 270.
- OFF**..... After removing the start request (terminal 6 has been de-energized), the engine is stopped immediately without an engine cool down.

Alarm Classes Enabled During Sprinkler Coasting

Parameter 213

| | |
|----------------------------|----|
| Sprinkler shutd. F1 active | ON |
|----------------------------|----|

Only if terminal 6 has been configured to "Sprinkler operation".

Sprinkler alarm classes only active if terminal 6 is energized **ON/OFF**

- ON**..... If terminal 6 is configured as "Sprinkler operation", the alarm classes will be enabled after the sprinkler demand has been terminated and the coasting has expired (terminal 6 is energized and sprinkler coasting 10 minutes).
- OFF**..... If terminal 6 is configured as "Sprinkler operation", the alarm classes will be enabled after the sprinkler demand has been terminated (terminal 6 is energized).

Sprinkler (Critical) Operation



NOTE

Terminal 6 must be configured for the "Sprinkler operation" functionality.



ATTENTION

The sprinkler operation function is a **negative logic function**. Terminal 6 must remain energized to prevent a Sprinkler (critical) operation from being performed. De-energizing terminal 6 will initiate a Sprinkler (critical) operation.

Sprinkler "ON": If terminal 6 de-energizes, the Sprinkler (critical) operation ON command is initiated. The message "Sprinkler operation" is shown on the display. Up to 6 attempts are made to start the engine if it is not already in operation. All fault conditions or discrete inputs, which result in shutdown, become messages with the exceptions of terminals 34 or 61 and overspeed. The alarm input for terminal 34 will still shut the engine down. Terminal 61 is used for this if terminal 34 is not present on the control. It is recommended that EMERGENCY STOP be assigned to one of these terminals.


**NOTE**

If a "Sprinkler operation" (terminal 6) has been activated, F2 and F3 class alarms are converted to F1 class alarms (exception: terminal 34 or 61 and overspeed).

F2 and F3 class alarms ⇒ F1 class alarm

"Sprinkler shutdown F1 active": Parameter 213 permits the user to select if the F2 and F3 class alarms are enabled after the Sprinkler coasting has concluded or if the F2 and F3 alarm class will be enabled as soon as the Sprinkler (critical) mode request has terminated (terminal 6 energized).

A distinction is made between three operating conditions:

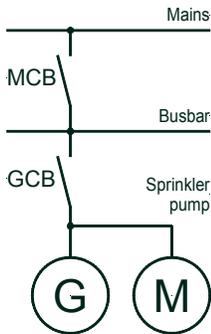

- 1.) MCB is closed (⇒ mains voltage available)
 - a) The engine is stopped: The engine will be started and the GCB will not be closed
 - b) The engine runs with the GCB open
- 2.) MCB is opened (⇒ mains voltage not available and the Parameter 137 "Emergency power" is ON)
 - a) The GCB will be closed or remains closed
 - b) In the event of a generator overload, the GCB will open
 - c) Following the alarm acknowledgement the GCB will be closed again

Figure 3-11: Sprinkler operation

- 3.) MCB is open (⇒ mains voltage available)
 - a) The MCB will be synchronized
 - b) Following the synchronization of the MCB, the GCB will be opened

Sprinkler "OFF": Energizing terminal 6 terminates the Sprinkler (critical) mode and the Sprinkler ON command. The message "Sprinkler coasting" appears on the display screen. The Sprinkler (critical mode) operation concludes after a 10-minute coasting period. Changing the GCP operation mode to STOP will result in the coasting period terminating immediately. When the Sprinkler (critical) mode operation has concluded, fault conditions that result in shutdowns are enabled again.

Analog Inputs (XPD, XPQ)



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 214

| | |
|-------------------------|-----|
| Configure analg.inp. | YES |
|-------------------------|-----|

Configuration of analog inputs

YES/NO

The analog inputs functionality and logic are configured in this block of parameters. This parameter has the following effects:

- YES**..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).
- NO**..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Setting The Analog Inputs

The analog inputs [T1] to [T7] are only available in the **XPD** and **XPQ** packages. The analog input types and specification are as follows:

- Scaleable analog input 0/4 to 20 mA (page 120)
- Pt100 input (page 119)
- VDO input (temperature, page 122 or pressure, page 123)

| Analog input | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|--------------|--------------|----------|------------|-------------|-------------|-------------|-------------|
| Assignment | 0/4 to 20 mA | | | Pt100 | | VDO #1 | VDO #2 |
| Terminal | 93/94/95 | 96/97/98 | 99/100/101 | 101/102/103 | 104/105/106 | 107/108/109 | 110/111/112 |

VDO #1 = 0 to 180 Ohm, VDO #2 = 0 to 380 Ohm



NOTE

If you want to visualize the analog inputs via the PC program LeoPC1 (Firmware Version 4.0.xxx or higher) the following must occur:

1. Establish a connection between LeoPC1 and the GCP.
2. Select in the menu "Devices" the topic "Refresh Configuration".
3. Restart LeoPC1 according to the requests.

Scaleable analog input 0/4 to 20 mA (analog input [T1] - [T3])



NOTE

The scalable analog inputs 0/4 to 20 mA can be configured alternatively for the following functions:

- Mains interchange (import/export) real power **actual** value (Parameter 24)
- Real power **set point** value (Parameter 78)

If one of the both functions is assigned to an available 0/4 to 20 mA input T{x} (refer to Parameter 24 and Parameter 78), that analog input T{x} **must be** configured to **OFF**. The analog input can no longer be used as an alarm input.

Priority of the analog input functions

The following priority is valid if more than one function has been assigned to a analog input:

- Highest priority: Mains interchange (import/export) real power **actual** value measurement
- Middle priority: Real power **set point** value
- Lowest priority: Measuring input as common analog value

0/4 to 20 mA sensors may be measured here. A description and the engineering unit may be assigned to the input. The analog input is displayed with its description. Two limit levels can be monitored. The first limit level initiates a class F1 alarm, the second limit level initiates a class F3 alarm.

Parameter 215

| |
|--|
| Analog input x scalable ON |
|--|

[x = 1 to 3]

0/4 to 20 mA input; enable/disable ON/OFF

- ON**The value of this input appears in the display and monitoring is enabled. The subsequent parameters of this function are displayed.
- OFF**The value of this input does not appear in the display and monitoring is disabled. The subsequent parameters of this function are not displayed.



NOTE

If the unit is equipped with a second communication interface (**Option SB03** and **Option SC10**), this parameter can only be configured via **LeoPC1**.

Parameter 216

| |
|------------------------|
| Name and unit ----- |
|------------------------|

0/4 to 20 mA input; description User defined text

The description of the analog input may be programmed using this parameter. A maximum of four zeros may be used as placeholders for the numerical measuring values. Characters may divide the placeholders (i.e. a comma). The measured values subsequently appear wherever the zeros are placed.

Parameter 217

Analog input x
0-00mA

[x = 1 to 3]

0/4 to 20 mA input; measuring range

0 to 20 mA / 4 to 20mA

The measuring range 0 to 20 mA or 4 to 20 mA is selected via this parameter. If 4 to 20 mA is configured and a current of less than 2 mA is measured, the controller assumes a wire break has occurred (see below).

Parameter 218

Value at
0% 0000

0/4 to 20 mA input; smallest input value

-9,999 to 9,999

The user must assign a numeric value to the scaleable analog input that corresponds to the smallest input value → Definition of the lower value (i.e. 0 % equals 0 kW, 0 V, etc.) at the minimum analog input value of 0 mA or 4 mA.

Parameter 219

Value at
100% 0000

0/4 to 20 mA input; largest input value

-9,999 to 9,999

The user must assign a numeric value to the scaleable analog input that corresponds to the largest input value → Definition of the upper value (i.e. 100 % equals 500 kW, 400 V, etc.) at the maximum analog input value of 20 mA.

Parameter 220

Limit warning
value -0000

0/4 to 20 mA input; limit value for class F1 alarm

-9,999 to 9,999

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 223) for at least the delay time (Parameter 222), the following alarm class is initiated.

Issuing of F1 class alarm

Parameter 221

Limit shutdown
value -0000

0/4 to 20 mA input; limit value for class F3 alarm

-9,999 to 9,999

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 223) for at least the delay time (Parameter 222), the following alarm class is initiated.

Issuing of F3 class alarm

Parameter 222

Delay
limit 1/2 000s

0/4 to 20 mA input; delay time for limit values of class F1 and F3 alarm

0 to 650 s

In order to initiate an alarm, the measured value must be over or under (dependent upon Parameter 223) the configured threshold value (Parameter 220 or Parameter 221) without interruption for at least this time.

Parameter 223

Monitoring for

0/4 to 20 mA input; monitoring for ...

high limit mon. / low limit mon.

A fault condition is recognized when the measured value has exceeded or fallen below the threshold value (Parameter 220 or Parameter 221).

high limit mon.: The measured value must exceed the threshold value.

low limit mon.: The measured value must fall below the threshold value.

Pt100 Input (Analog Input [T4] to [T5])

Pt100 inputs may be measured here. The analog input is displayed with its description. Two threshold limits can be monitored. The first level initiates a class F1 alarm, the second level initiates a class F3 alarm.

Parameter 224

```
Temperature x
Pt100          ON
```

[x = 4 to 5]

Pt100 input; enable/disable **ON/OFF**

ONThe value of this input appears in the display and monitoring is enabled. The subsequent parameters of this function are displayed.
OFFThe value of this input does not appear in the display and monitoring is disabled. The subsequent parameters of this function are not displayed.



NOTE

If the unit is equipped with a second communication interface (Option SB03 and Option SC10), the alarm texts can only be configured via LeoPC1.

Parameter 225

```
***name***
-----000°C
```

Pt100 input; description **User defined text**

The description of the analog input may be programmed using this parameter. A maximum of eleven characters may be used to describe the measured value. In the event of an alarm, the description and the monitored value are displayed with an exclamation mark before the temperature.

Parameter 226

```
Limit
warning      000°C
```

Pt100 input; limit value for class F1 alarm **0 to 200 °C**

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 229) for at least the delay time (Parameter 228), the following alarm class is initiated.

Issuing of F1 class alarm

Parameter 227

```
Limit
shutdown    000°C
```

Pt100 input; limit value for class F3 alarm **0 to 200 °C**

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 229) for at least the delay time (Parameter 228), the following alarm class is initiated.

Issuing of F3 class alarm

Parameter 228

```
Delay
limit 1/2    000s
```

Pt100 input; delay time for limit values of class F1 and F3 alarm **0 to 650 s**

In order to initiate an alarm, the measured value must exceed or fall below (dependent upon Parameter 229) the configured threshold value (Parameter 226 or Parameter 227) without interruption for at least this time.

Parameter 229

```
Monitoring for
-----
```

Pt100 input; monitoring for ... **high limit mon. / low limit mon.**

A fault condition is recognized when the measured value has exceeded or fallen below the threshold value (Parameter 226 or Parameter 227).

high limit mon.: The measured value must exceed the threshold value.

low limit mon.: The measured value must fall below the threshold value.



NOTE

If temperature limit monitoring is not required, a threshold value, which is higher than the expected monitored temperature, must be configured to the corresponding parameter (e.g. the ambient temperature is 100 °C).

VDO Input 'Pressure' (Analog Input [T6])



NOTE

The default threshold values are configured in "bar". If the engineering unit "psi" is configured (Parameter 144), the display of the measured values as well as the transmission via the interface appears in "psi".

VDO inputs for pressure may be monitored here. The analog input is displayed with its description. Two threshold levels can be monitored. The first level initiates a class F1 alarm, the second level initiates a class F3 alarm.

Parameter 230

| | |
|----------------|----|
| Analog input 6 | |
| VDO | ON |

VDO input, pressure; enable/disable **ON/OFF**

ON..... The value of this input appears in the display and monitoring is enabled. The subsequent parameters of this function are displayed.
OFF..... The value of this input does not appear in the display and monitoring is disabled. The subsequent parameters of this function are not displayed.



NOTE

If the unit is equipped with a second communication interface (Option SB03 and Option SC10), the alarm texts can only be configured via LeoPC1.

Parameter 231

| | |
|---------------|--|
| Name and unit | |
| ----- | |

VDO input, pressure; description **User defined text**

The description of the analog input may be programmed using this parameter. A maximum of four zeros may be used as placeholders for the numerical measured values. Characters may divide the placeholders (i.e. a comma). The measured values subsequently appear wherever the zeros are placed. The measured value will always be displayed and transmitted via the interface in bar [$\times 0.1$] or psi [$\times 0.1$].

Parameter 232

| | |
|----------------|---------|
| Analog input 6 | |
| VDO | 0-00bar |

VDO input, pressure; measuring range **0 to 5 / 0 to 10 bar**

The measuring range of the analog input can be selected.
0 to 5 bar Measuring range 0 to 180 Ohm
0 to 10 bar ... Measuring range 0 to 180 Ohm

Parameter 233

| | |
|---------------------|---------|
| Limit warning value | 00.0bar |
|---------------------|---------|

VDO input, pressure; limit value for class F1 alarm **0.0 to 10.0 bar**

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 236) for at least the delay time (Parameter 235), the following alarm class is initiated.

| |
|----------------------------------|
| Issuing of F1 class alarm |
|----------------------------------|

Parameter 234

| | |
|----------------------|---------|
| Limit shutdown value | 00.0bar |
|----------------------|---------|

VDO input, pressure; limit value for class F3 alarm **0.0 to 10.0 bar**

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 236) for at least the delay time (Parameter 235), the following alarm class is initiated.

| |
|----------------------------------|
| Issuing of F3 class alarm |
|----------------------------------|

Parameter 235

| | | |
|-----------|------|--|
| Delay | | |
| limit 1/2 | 000s | |

VDO input, pressure; delay time for limit values of class F1 and F3 alarm 0 to 650 s

In order to initiate an alarm, the measured value must exceed or fall below (dependent upon Parameter 236) the threshold value (Parameter 233 or Parameter 235) without interruption for at least this time.

Parameter 236

| | |
|----------------|--|
| Monitoring for | |
| ----- | |

VDO input, pressure; monitoring for ... high limit mon. / low limit mon.

A fault condition is recognized when the measured value has exceeded or fallen below the threshold value (Parameter 233 or Parameter 235).

high limit mon.: The measured value must exceed threshold.

low limit mon.: The measured actual value must fall below the threshold value.

VDO Input 'Temperature' (Analog Input [T7])

VDO inputs may be measured here (the input has been calibrated to the VDO sender 323.425 or 323.478 (0 to 380 ohm, 40 to 120 °C). The analog input is displayed with its description. Two threshold levels can be monitored. The first level initiates a F1 class alarm, the second level initiates a class F3 alarm.



NOTE

Prior to ordering any VDO sender, ensure that the proper thread (metric or SAE) is ordered for your application.

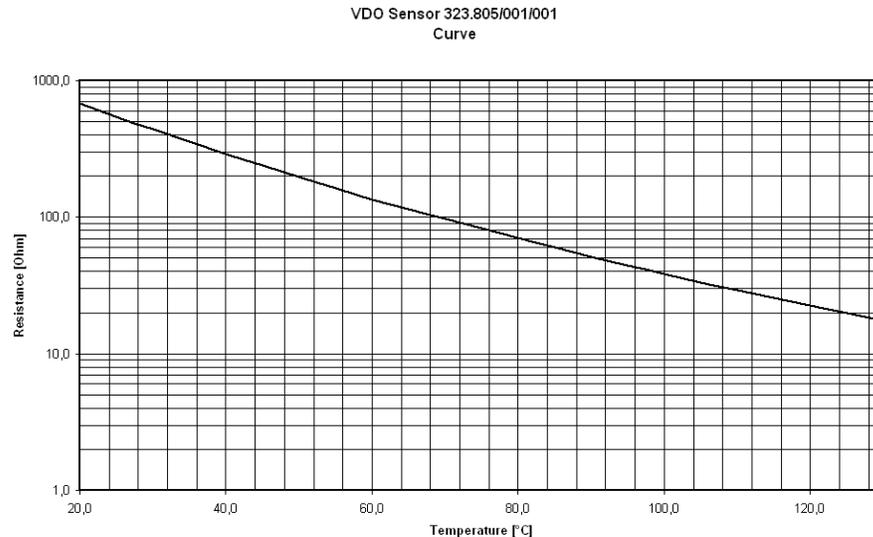


Figure 3-12: VDO transmitter 323.425 (slope)

Parameter 237

| | |
|----------------|----|
| Analog input 7 | ON |
| VDO | ON |

VDO input, temperature; enable/disable ON/OFF

ON.....The value of this input appears in the display and monitoring is enabled. The subsequent parameters of this function are displayed.

OFF.....The value of this input does not appear in the display and monitoring is disabled. The subsequent parameters of this function are not displayed.



NOTE

If the unit is equipped with a second communication interface (Option SB03 and Option SC10), the alarm texts can only be configured via LeoPC1.

Parameter 238

Name and unit

VDO input, temperature; description

User defined text

The description of the analog input may be programmed using this parameter. A maximum of four zeros may be used as placeholders for the numerical measured values. Characters may divide the placeholders (i.e. a comma). The measured values subsequently appear wherever the zeros are placed. The measured values subsequently appear wherever the zeros are placed.

Parameter 239

Limit warning
value 000°C

VDO input, temperature; limit value for class F1 alarm

40 to 120 °C

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 242) for at least the delay time (Parameter 241), the following alarm class is issued.

Issuing of F1 class alarm

Parameter 240

Limit
shutdown 000°C

VDO input, temperature; limit value for class F3 alarm

40 to 120 °C

If the measured value exceeds or falls below this configured threshold value (dependent upon Parameter 242) for at least the delay time (Parameter 241), the following alarm class is issued.

Issuing of F3 class alarm

Parameter 241

Delay
limit 1/2 000s

VDO input, temperature; delay time for limit values of class F1 and F3 alarm 0 to 650 s

In order to initiate an alarm, the measured value must exceed or fall below (dependent upon Parameter 242) the threshold value (Parameter 239 or Parameter 240) without interruption for at least this time.

Parameter 242

Monitoring for

VDO input, temperature; monitoring for ...

high limit mon. / low limit mon.

A fault condition is recognized when the measured value has exceeded or fallen below the threshold value (Parameter 239 or Parameter 240).

high limit mon.: The measured value must exceed threshold value.

low limit mon.: The measured value must fall below the threshold value.

Monitoring Of The Measuring Range (All Analog Inputs)

Ana. input ---

Analog inputs; monitoring of the measuring range

This message appears when the measured value exceeds or falls below the measuring range occurs. A fault condition is initiated depending on the values specified below.



NOTE

The GCP has the ability to monitor for possible wire break conditions if the measuring range has been exceeded. If the configured measuring range is exceeded, an alarm will be issued and the affected analog input will be deactivated.

Fault conditions are recognized when the measuring range exceeds the following values for each type of input:

| | |
|------------------------|------------------|
| 4 to 20 mA | 2 mA and below |
| Pt100 | 216 °C and above |
| 180 Ω VDO, 0 to 5 Bar | 305 Ω and above |
| 180 Ω VDO, 0 to 10 Bar | 305 Ω and above |

Engine Delayed Monitoring Of The Analog Inputs

Parameter 243

| | |
|---------|----------|
| Ana.in | 12345678 |
| SV.del. | NNNNNYNN |

Analog inputs; engine delayed monitoring Y/N

The analog inputs may be disabled until the engine has reached the configured firing speed (Parameter 272). This parameter specifies which analog inputs are to be constantly enabled or disabled until firing speed has been achieved by configuring a "Y" or an "N" below the input number.

- Y**Monitoring of the analog input is enabled after firing speed has been reached (the green LED "Protection" illuminates).
- N**The analog input is always monitored.

Note: If the controller is equipped with 5 or more analog inputs, the screen for this parameter will display 8 inputs. If the control is equipped with 4 or less analog inputs this parameter screen will display 4 inputs. If the control is equipped with fewer inputs than are displayed on the screen, only changes made to the valid inputs will have any effect on the control.

Analog Inputs Selectable as Control Inputs

Parameter 244

| | |
|---------|----------|
| Ana.in | 12345678 |
| control | NNNNNNNN |

Analog input as control input J/N

This parameter defines if specific analog inputs operate as control inputs or not.

- Y**The analog input operates as control input: The analog value is displayed and the configured relays are enabled when the configured limits has been reached. However, an alarm will not be issued and a message will not be transmitted on the CAN bus.
(A wire break will not effect the behavior of the control)
- N**The analog input operates as described for the above settings.

Note: If the controller is equipped with 5 or more analog inputs, the screen for this parameter will display 8 inputs. If the control is equipped with 4 or less analog inputs this parameter screen will display 4 inputs. If the control is equipped with fewer inputs than are displayed on the screen, only changes made to the valid inputs will have any effect on the control.

Outputs



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 245

| | |
|-------------------|-----|
| Configure outputs | YES |
|-------------------|-----|

Configuration of the outputs

YES/NO

The discrete outputs functionality and logic are configured in this block of parameters. This parameter has the following effects:

YES..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NO..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Analog Outputs (XPD, XPQ)

The analog output manager can be used to apply a specific measurement variable to the available analog outputs. The output may be carried out as a 0 to 20 mA or as a 4 to 20 mA value. A list of the possible functions is contained in Appendix A. Each variable is assigned a unique number. The variable may be scaled via an upper and a lower output value. The outputs may also be assigned with prefixes (for further details, see "Analog output manager" in Appendix A).



NOTE

The list of values and limits for the analog output manager is contained in Appendix A: "Analog Output Manager" starting on page 146.

Possible outputs: Analog outputs terminals 120/121 and 122/123

Example: Analog output terminals 120/121

Parameter 246

| | |
|------------------|----|
| Analg.out.120121 | |
| Parameter | 00 |

Function for analog output

0 to 22

The analog output function number of the desired function is configured here. A list of all selectable functions, together with output and limit value ranges, is contained in Appendix A.

Parameter 247

| | |
|------------------|--------|
| Analg.out.120121 | |
| | 0-00mA |

Analog output range

OFF / 0 to 20 / 4 to 20 mA

The output range 0 to 20 mA or 4 to 20 mA is selected using this parameter.

Parameter 248

| | |
|------------------|------|
| Analg.out.120121 | |
| 0% | 0000 |

Scaling the lower output value

0 to 9,990

The configurable limit for the 0% value is contained in Appendix A.

Parameter 249

| | |
|------------------|------|
| Analg.out.120121 | |
| 100% | 0000 |

Scaling the upper output value

0 to 9,990

The configurable limit for the 100% value is contained in Appendix A.

Relay Manager

The relay manager enables the assignment of a logical combination of functions to each relay. Each function has been assigned a number. The numbers for these functions are entered into the configuration screen and are combined to create a logical condition that energizes the assigned relay. Up to three function numbers may be combined in this link. The length of the text for the logical condition must not exceed 16 characters. The control can detect incorrect function numbers or formula constructions and will not accept these.



NOTE

The relay manager functions are listed in Appendix B: Relay Manager starting on page 149.

Permissible text/symbols for logic functions and their meaning include:

- +OR operator (logic function)
- *AND operator (logic function)
-NOT operator (logic function)
- 1, 2, 3,Function numbers
- +/*the following applies "*" has precedence over "+"

Example
of logical
conditions
and relevant
texts

| Function | Programmed text |
|--|-----------------|
| Relay is enabled, if ... | |
| ... function 22 is true. | 22 |
| ... function 22 is not true. | - 22 |
| ... both function 2 is true and function 27 is true. | 2 * 27 |
| ... function 2 is true or function 27 is true. | 2 + 27 |
| ... function 3 is true or function 5 is not true or function 13 is true. | 3 + -5 + 13 |
| ... function 4 or 7 or 11 is true. | 4 + 7 + 11 |
| ... function 4 is not true and function 7 is not true and function 11 is not true. | - 4 * -7 * -11 |
| ... function 4 and 7 and 11 are true. | 4 * 7 * 11 |
| ... function 7 and 11 are true or function 4 is true. | 4 + 7 * 11 |
| ... function 4 is not true or function 7 is not true or function 11 is not true. | -4 + -7 + -11 |



NOTE

Entering an illegal logical combination will delete the equation.

Parameter 250

Assignm.relay x
3+-8+13

[x = 1 to 7]

Programming relay outputs

The relay x [x = 1 to 7] energizes, if the logical equation is met.

Example: 3 + -8 + 13 (OR link)

- 3 a class F3 alarm has occurred
- 8 operation mode MANUAL has not been selected
- 13 "Generator underspeed" alarm is present

Engine



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 251

| | |
|-------------------------|------------|
| Configure engine | YES |
|-------------------------|------------|

Configuration of the engine YES/NO

The engine functionality and protection are configured in this block of parameters. This parameter has the following effects:

YES..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).

NO..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Parameter 252

| | |
|-----------------------------|-------------|
| Aux. services prerun | 000s |
|-----------------------------|-------------|

Engine; auxiliary prerun (start preparation) 0 to 999 s

Prior to each starting sequence, a relay output (relay manager function 52) can be enabled (i.e. pre-lube pumps run) for the time configured in this parameter. A message is displayed when the relay output is enabled. This relay output is automatically enabled in MANUAL operation mode. The relay output will remain enabled until the operation mode is changed from MANUAL.

CAUTION

This delay is ignored in the event of emergency power operation. The engine is started immediately.

Parameter 253

| | |
|------------------------------|-------------|
| Aux. services postrun | 000s |
|------------------------------|-------------|

Engine; auxiliary postrun 0 to 999 s

The relay output (relay manager function 52) can be enabled for this time following each engine cool down (i.e. operate a coolant pump). If the operation mode is changed from MANUAL to STOP or AUTOMATIC without an engine start request, the relay output remains enabled for the configured time and a message is displayed.

Parameter 254

| | |
|-------------------------|--------------|
| Start-stop-logic | ----- |
|-------------------------|--------------|

Engine; start/stop sequence for ... DIESEL/GAS/EXTERNAL

DIESEL..... Start/stop logic is performed for a diesel engine.

GAS Start/stop logic is performed for a gas engine.

EXTERNAL Start/stop logic is performed externally (the start/stop sequence is disabled).

Start/Stop Sequence 'Gas Engine'



NOTE

The configured number of start attempts (Parameter 258) will be performed.

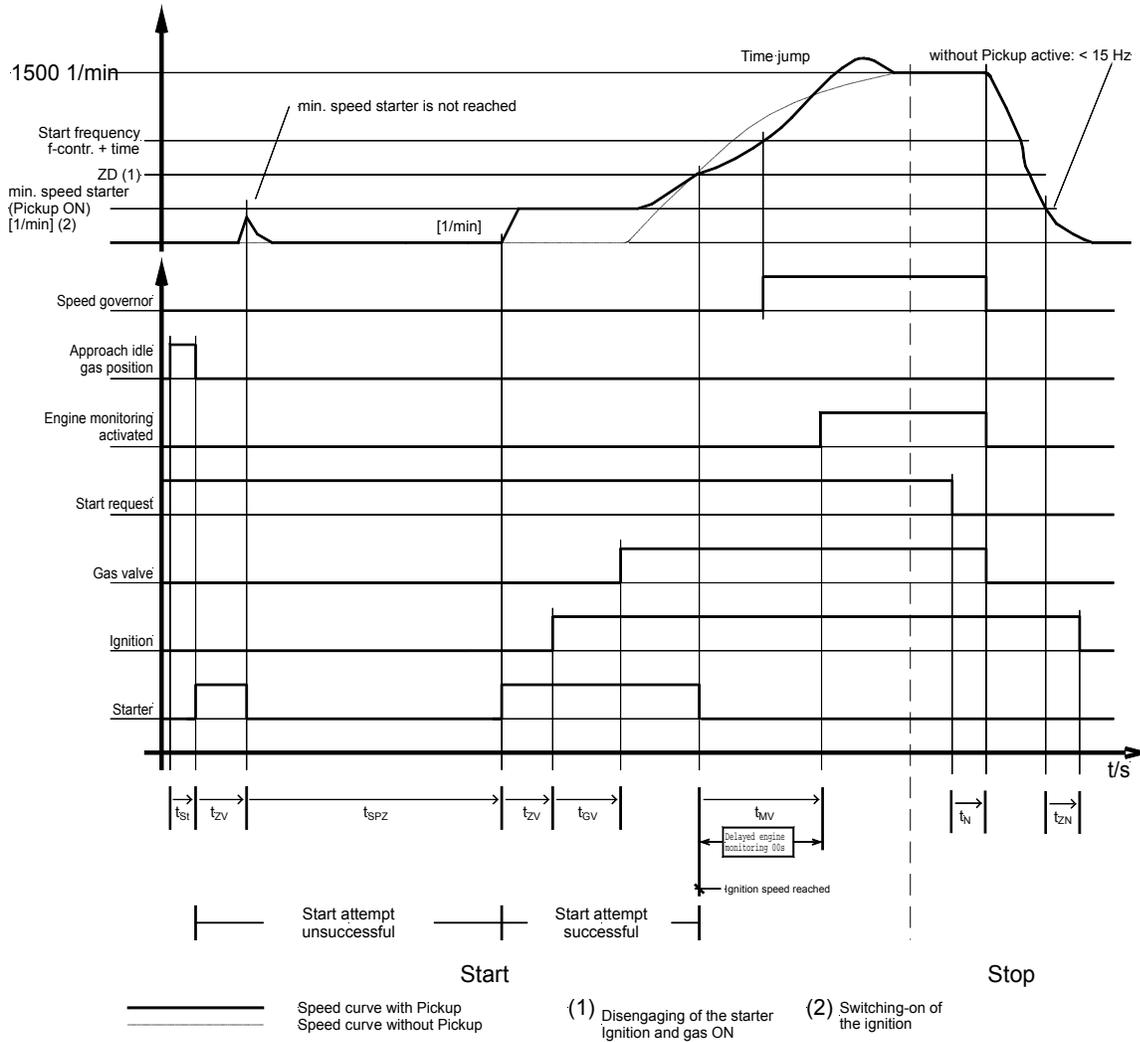


Figure 3-13: Start-Stop sequence: Gas engine

The signs and indices mean:

- t_{St} Approach idle gas position [s]
- t_{ZV} Firing delay [s]
- t_{GV} Gas valve delay [s]
- t_{SPZ} Time between two start attempts [s]
- t_{MV} Delayed engine monitoring [s]
- t_{ZN} Ignition coasting [s]; pre-specified: 5 s
- t_N Engine cool down time [s]
- (1) Disengagement of the starter; Ignition and gas also ON
- (2) Switching ON the ignition

Starting Sequence

If the control is equipped with a three-position frequency controller, a continuous "Frequency lower prior to start" signal (time adjustable via Parameter 262) is output before starting the engine. The starter is enabled after the time configured in parameter 262 expires. The ignition is enabled following the expiration of the ignition delay time (Parameter 256) and if the engine is rotating with at least the configured "minimum speed for ignit." (Parameter 255). Following the expiration of the gas valve delay (Parameter 257), the gas valve is enabled. If the starting sequence finishes successfully (the firing speed (Parameter 272) was exceeded) the starter is disengaged. The gas valve and the ignition remain enabled by means of the firing speed. After reaching the "f-controller: starting frequency" (Parameter 39) and the delayed engine monitoring has expired (Parameter 271), the speed controller is enabled.

Stopping Sequence

When the start request is terminated, a power reduction is performed (if the real power controller is enabled, Parameter 74). After the GCB has opened, an engine cool down is performed (Parameter 270). When the engine cool down period expires, the gas valve is closed, and the engine is stopped. When the engine speed falls below the firing speed (Parameter 272), the engine starting sequence is disabled for 10 seconds. If the engine fails to stop after 30 seconds, an alarm message is issued and a F3 class alarm is initiated.

After the engine speed has fallen below the firing speed, the ignition will remain enabled for an additional 5 seconds so that any gas remaining in the cylinders is able to combust.

Safety Instructions To Control Gas Valves

In order to ensure a safe shutdown of the gas valves, a separate shutdown circuit must be utilized. The following is recommended to prevent the gas valve from failing to close due to stuck relays.

Controlling gas valves with the GCP

The GCP relay manager from V4.1001 and on contains function 131 ("fuel valve ON"). This function exists in the GCP so that a relay configured with this function behaves like the "Gas valve" relay.

The wiring diagram shown below is an example of a recommended gas valve control system in the gas line.

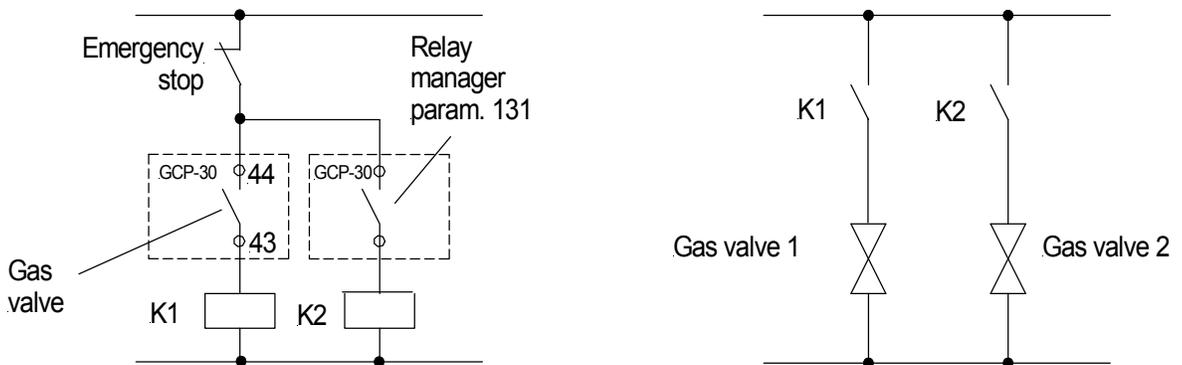


Figure 3-14: Wiring diagram for opening gas valves with the GCP-30 from V4.1001

Parameter

Parameter 255

Min. speed for
ignit. 000 rpm

This screen is only visible if the parameter "Pickup" is set "ON".

Gas engine; minimum start speed 0 to 999 rpm

i The minimum starter speed can only be detected if the magnetic pick-up has been enabled (Parameter 280).

Once the ignition delay (Parameter 256) has expired, the engine must exceed the speed configured with this parameter in order to enable the ignition relay (relay manager function 84).

Parameter 256

Ignition delay
00s

Gas engine; ignition delay 0 to 99 s

In gas engine applications a purging operation is frequently desired prior to starting. The ignition delay is initiated when the starter is engaged. If this time has expired and the "Minimum speed for ignition" (Parameter 255) has been exceeded, the ignition is enabled.

Parameter 257

Gasvalve delay
00s

Gas engine; gas valve delay 0 to 99 s

This timer is initiated once the ignition is enabled. Once this timer has expired and the engine speed is at least 150 rpm, the gas valve is opened. Upon reaching the firing speed (Parameter 272) the relay remains energized until the engine stops.

Parameter 258

Max. attempts to
start 0

Gas engine; maximum number of start attempts 1 to 6

The control will initiate up to this number of start attempts. If the engine cannot be started within this number of start attempts, an alarm message is issued.

Parameter 259

Starter time
00s

Gas engine; engagement time of the starter 2 to 99 s

The maximum amount of time the starter will crank the engine during a start sequence.

Parameter 260

Start pause time
00s

Gas engine; time between two start attempts 1 to 99 s

The delay time between the individual start attempts.

Parameter 261

f lower before
start ON

with three-step controllers only
only accessible via **LeoPCI**

Gas engine; frequency lower prior to start ON/OFF

If this function is enabled and the control is equipped with a three-step frequency controller, the command "lower engine speed" is issued for the time configured in Parameter 262 before the starter is engaged. The low-idle position must either be equipped with a limit switch or the engine potentiometer must be equipped with a slipping clutch to protect the device once the lowest possible setting has been achieved. A message is displayed while this function is active.

CAUTION

The engine starting is delay by means of the low-idle position in the event of emergency power operation.

Parameter 262

time f lower
bef.start 000s

with three-step controllers only
only accessible via **LeoPCI**

Gas engine; frequency lower prior to start (time) 0 to 999 s

The duration that the "lower engine speed" signal (Parameter 261) is output.

Start/Stop Sequence 'Diesel Engine'



NOTE

The configured number of start attempts (Parameter 264) will be performed.

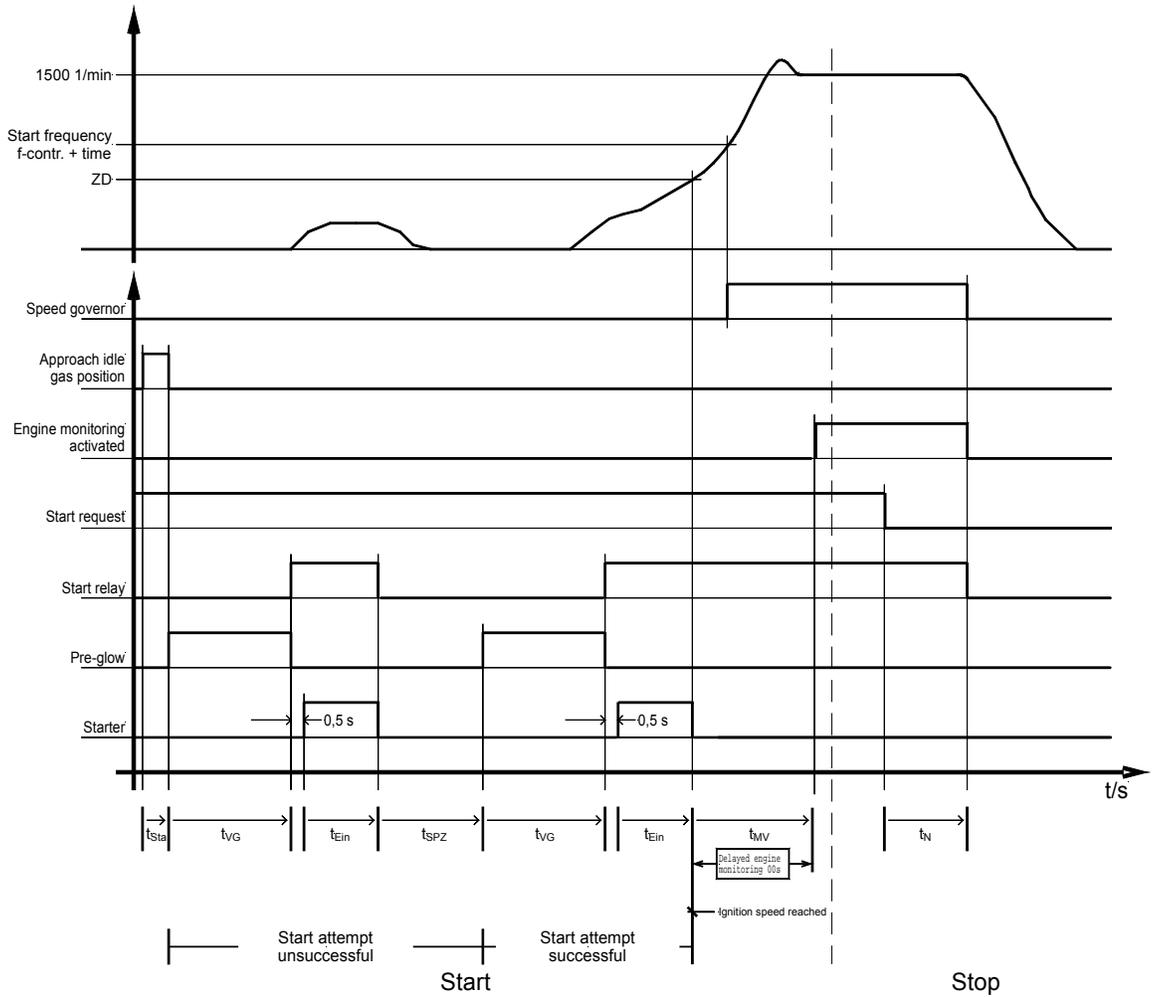


Figure 3-15: Start-stop sequence: Diesel engine

The signs and indices mean:

t_{Sta} Approach idle fuel position [s]

t_{vG} Pre-glow time [s]

t_{Ein} Crank time [s]

t_{SPZ} Time between two start attempts [s]

t_{MV} Delayed engine monitoring [s]

t_N Engine cool down time [s]

Starting Sequence

If the control is equipped with a three-position frequency controller, a continuous "Frequency lower prior to start" signal (time adjustable via Parameter 268) is output before starting the engine. The "Pre-glow" relay is enabled for the time configured in Parameter 263 after the frequency lower signal terminates. After the pre-glow cycle terminates, the fuel relay is enabled (Parameter 269), followed by the crank relay. Once the firing speed (Parameter 272) has been exceeded, the starter disengages, and the fuel relay remains enabled by means of the firing speed. After reaching the "f-controller: starting frequency" (Parameter 39) and the delayed engine monitoring has expired (Parameter 271), the speed controller is enabled.

Stopping Sequence

When the start request is terminated, a power reduction is performed (if the real power controller is enabled, Parameter 74). Once the GCB has opened, an engine cool down is performed (Parameter 270). When the engine cool down period expires, the fuel relay is de-energized and the engine is stopped. When the engine speed falls below the firing speed (Parameter 272), the engine starting sequence is disabled for 10 seconds. If the engine fails to stop after 30 seconds, an alarm message is issued and a F3 class alarm is initiated.

Parameter

Parameter 263

| | |
|---------------------|-----|
| Preglow time | 00s |
|---------------------|-----|

Diesel engine; pre-glow time **0 to 99 s**

Prior to each starting sequence, the engine glow plugs are energized for this time period.

Parameter 264

| | |
|-------------------------------|---|
| Max. attempts to start | 0 |
|-------------------------------|---|

Diesel engine; maximum number of start attempts **1 to 6**

The control will initiate up to this number of start attempts. If the engine cannot be started within this number of start attempts, an alarm message is issued.

Parameter 265

| | |
|---------------------|-----|
| Starter time | 00s |
|---------------------|-----|

Diesel engine; crank time **2 to 99 s**

The maximum amount of time the starter will crank the engine during a start sequence.

Parameter 266

| | |
|-------------------------|-----|
| Start pause time | 00s |
|-------------------------|-----|

Diesel engine; time between two start attempts **1 to 99 s**

The delay time between the individual start attempts.

Parameter 267

| | |
|-----------------------------|-----|
| f lower before start | OFF |
|-----------------------------|-----|

Diesel engine; frequency lower prior to start **ON/OFF**

If this function is enabled and the control is equipped with a three-step frequency controller, the command "lower engine speed" is issued for the time configured in Parameter 268 before the starter is engaged. The low-idle position must either be equipped with a limiting switch, or the engine potentiometer must be equipped with a slipping clutch to protect the devices. A message is displayed.

with three-step controllers only
only accessible via **LeoPC1**

CAUTION

The engine starting is delay by means of the low-idle position in the event of emergency power operation.

Parameter 268

| | |
|--------------|------|
| time f lower | |
| bef.start | 000s |

with three- step controllers only
only accessible via **LeoPCI**

Diesel engine; frequency lower prior to start (time)**0 to 999 s**

The duration that the "lower engine speed" signal (see Parameter 267) is output.

Parameter 269

| | |
|------------------|--|
| Fuel relay logic | |
| ----- | |

Diesel engine; fuel solenoid logic**open to stop / close to stop**

open to stop . The fuel solenoid is energized prior to each start sequence. In order to stop the engine, the fuel solenoid is de-energized.

close to stop In order to stop the engine, the fuel shutdown solenoid is energized. The fuel shutdown solenoid remains energized for an additional 30 seconds once the engine speed drops below firing speed (Parameter 272) **and** the generator voltage is less than 20 V.

Cool Down

Parameter 270

| | |
|----------------|------|
| Cool down time | |
| | 000s |

Engine; cool down time**0 to 999 s**

If the engine performs a normal shutdown (i.e. STOP mode initiated) or an F2 class alarm has been initiated, an engine cool down period with frequency control is performed for the time configured here after the GCB opens. The engine will shutdown following the conclusion of the engine cool down period. If the engine cool down has terminated (cool down time has been expired) and engine speed (Parameter 272) is still detected after 30 seconds, an engine failure to stop message is displayed.

Note

The GCP will not perform a cool down period unless the GCB reply (terminal 4) has been de-energized for at least 5 seconds, indicating that the breaker has been closed.

Delayed Engine Monitoring And Firing Speed

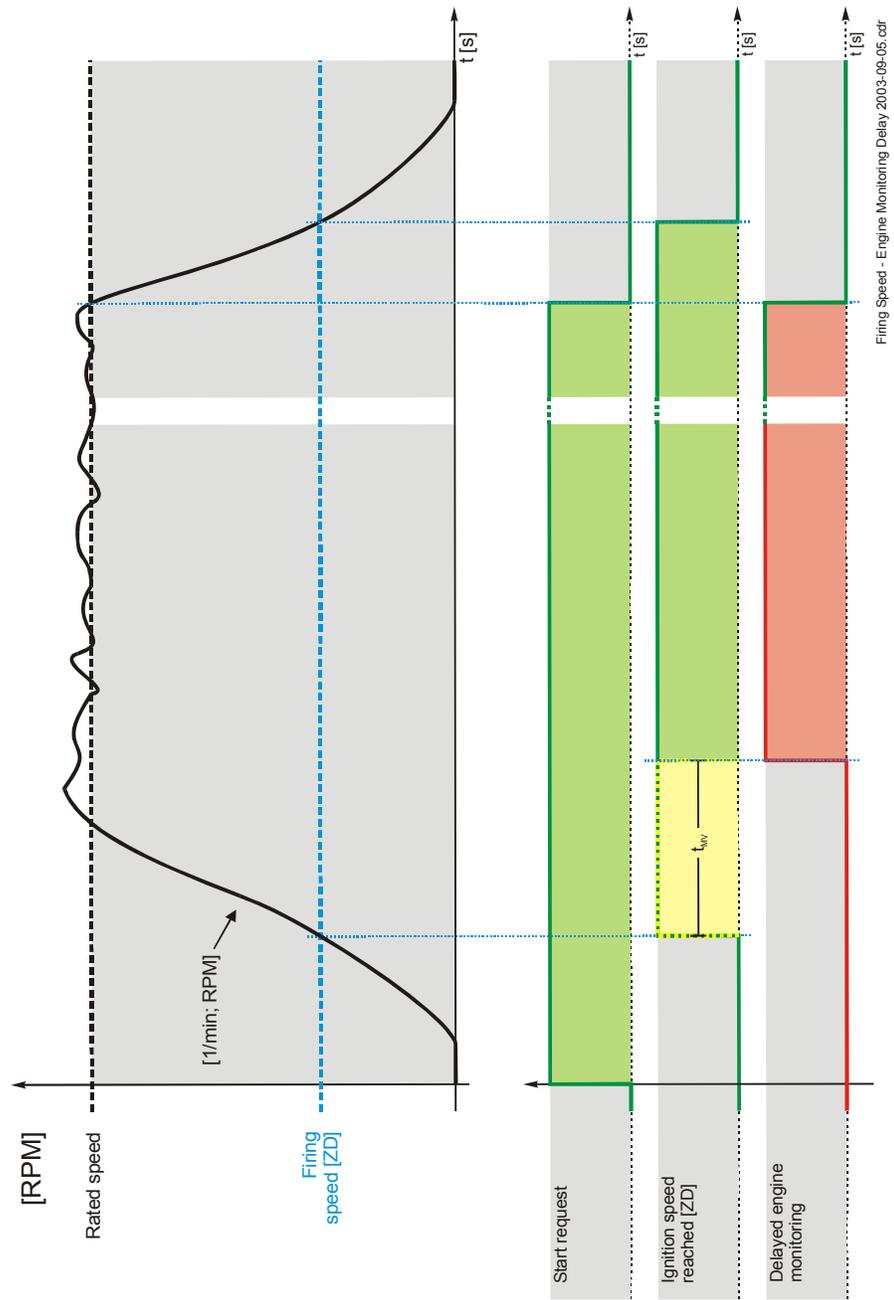


Figure 3-16: Delayed engine monitoring

Parameter 271

| |
|--|
| Delayed engine monitoring f > 00s |
|--|

Engine; delayed engine monitoring**1 to 99 s**

A delay may be configured to prevent the GCP from monitoring for selected alarms (e.g. oil pressure, generator underfrequency, etc.) for a specific time period after the engine has reached the firing speed.

Parameter 272

| |
|--|
| Firing speed reached f > 00Hz |
|--|

Engine; firing speed reached**5 to 70 Hz**

Once the engine has achieved this configured firing speed, the starter is disengaged (switched off) and the frequency controller is enabled.

Note

The GCP may be configured to monitor for firing speed via the MPU input or the frequency of the generated voltage. If the MPU input has been enabled, the GCP is able to monitor frequencies as low as 5Hz accurately. If the MPU input has not been enabled, the GCP will monitor that firing speed has been achieved when the monitored frequency has achieved 15Hz or greater depending upon the configured value.

Parameter 273

| |
|--|
| Speed detected V L1-L2 > 00.0% |
|--|

Engine; speed detected from**5.0 to 25.0 %**

When the monitored voltage surpasses the value configured for this parameter, the GCP will recognize that engine has achieved firing speed.

The configured value for this parameter is a percentage of the voltage rating configured for the voltage inputs (Parameter 17). Speed will only be detected when the monitored voltage between L1 and L2 (terminals 20/21) exceeds this configured percentage of the rated system voltage. If the configured threshold value for this parameter is too low, EMI induced voltages from other sources may cause the control to incorrectly detect speed and issue a nuisance fault condition resulting in a shutdown alarm.

Note

Regardless of the value configured for this parameter, speed will only be detected if the monitored voltage between L1 and L2 (terminals 20/21) is more than 5% of the configured rated voltage of the generator potential transformer secondary (Parameter 10).

Attention

The GCP may fail to detect speed or frequency on applications without an MPU if the threshold for this parameter is configured too high.

Magnetic Pick-Up Input

Measuring the engine speed may be performed by means of a Magnetic Pickup. The use of an alternator or a tacho generator to detect engine speed are alternate methods of monitoring if the engine has achieved firing speed. If an alternate means of detecting engine speed is utilized, then the GCP must receive a signal via terminal 62 (refer to Acknowledge firing speed via terminal 62 on page 113). Refer to the Installation Manual 37364 for the wiring diagram that pertains to your specific controller.

Parameter 274

Pickup input
ON

Magnetic pickup; measurement **ON/OFF**

- ON**.....The Magnetic Pickup input is enabled to monitor engine speed. The GCP utilizes the signal from the MPU to detect when firing speed has been achieved. The engine speed signal monitored via the MPU is used to disengage the starter.
- OFF**.....The MPU input is disabled. All speed and frequency monitoring/control is performed via generator frequency. The GCP utilizes the frequency of the monitored generator voltage to detect when firing speed has been achieved. The starter will disengage when the GCP detects that the frequency has exceeded 15Hz or higher (dependent upon how "Firing speed reached f> 00Hz" (Parameter 272) is configured).

Parameter 275

Number of pickup
teeth 000

only accessible via LeoPC1

Magnetic pickup; number of teeth on flywheel **30 to 280**

Number of pulses per revolution.

Plausibility monitoring:

The GCP performs plausibility checks to ensure that the frequency of the voltage and engine speed match. This is performed by comparing the frequency of the generated voltage and the mechanical speed of the engine as determined by the MPU signal. If the two frequencies are not identical, a F1 class alarm is issued. Plausibility monitoring is enabled after the delayed engine monitoring (Parameter 271) expires and is performed continuously while the generator is operating.

Parameter 276

Gen. rated speed
0000 rpm

only accessible via LeoPC1

Magnetic pickup; rated speed at rated frequency **0 to 3,000 rpm**

The number of revolutions per minute that the engine will turn at while the generator is producing voltage at the rated frequency.

Note

In normal direct drive applications the following are typical settings. These values will vary if a transmission is used.

60Hz = 1800 RPM

50Hz = 1500 RPM

Counter / Real Time Clock



NOTE

The parameters for this control are grouped together in blocks to permit navigation through the large number of configuration screens more rapidly. Selecting "YES" or "NO" has no effect whether or not control or monitoring is carried out for the parameters located in that block. Selecting "YES" or "NO" only determines if the individual parameters may be accessed and changed or are bypassed.

Parameter 277

| | |
|-------------------------------|------------|
| Configure counters | YES |
|-------------------------------|------------|

Configuration of the counters

YES/NO

The counters are configured in this block of parameters. This parameter has the following effects:

- YES**..... The parameters in this block are displayed and can either be viewed ("Select" button), or modifications can be made to the parameters ("Cursor→", "Digit↑" or "Select" buttons).
- NO**..... The parameters in this block are not displayed, cannot be modified, and are skipped.

Maintenance Call

Parameter 278

| | |
|--------------------------------|--------------|
| Service interval in | 0000h |
|--------------------------------|--------------|

Counter; maintenance call

0 to 9,999 h

A maintenance counter may be desired to alert the operator that the generator has run for a specified number of hours and preventive maintenance should be performed. This parameter defines the length of the time period for the maintenance call. This timer functions as a count down timer. When this time expires, a message is issued (F1 class alarm) to alert the operator.

Note

The maintenance call counter may be disabled, preventing the maintenance alarm from being issued, by configuring the time for 0000h.

Proceed as follows to acknowledge the maintenance call:

- After the maintenance interval has expired, the message "**Service**" is displayed, the alarm LED is flashing, and the horn (if present) is enabled.
- The horn may be silenced by pressing the RESET button. The maintenance call may not be acknowledged at this point in time.
- The maintenance will be performed now.
- After successful maintenance, acknowledge the message by navigating to the display screen "**Service in 000h**" using the "Select" button.
- Press and hold the "Digit" button for 10 seconds.
- The time remaining in the new maintenance interval is displayed, but the message "**Service**" remains active.
- Acknowledge the message by pressing the RESET button.



NOTE

If a maintenance is to be performed before the maintenance interval expires, the new maintenance interval may also be reset as described above.

Operating Hours Counter



NOTE

If the unit is equipped with **Option SC10**, and the MDEC or J1939 coupling is enabled as well, the operating hours will be taken over from the engine control unit. Please refer to manual 37382 for further information.

Parameter 279

| | |
|---------------------------|--------|
| Set oper.hours counter | 00000h |
|---------------------------|--------|

Counter; operating hours counter

0 to 65,000 h

This parameter can be used to specify the number of hours an engine has been in operation. This permits the user to display the correct number of engine hours if the controller is retrofitted to an older engine or the controller is replacing an older controller.



NOTE

If the operating hours counter is to be changed from the factory default value, the controller must be in code level CS2 before the change can be made. For safety reasons, the counter is set in a 2-step sequence.

The following sequence applies:

- Step 1:** **Configure new value**
 -- Set and store the desired operating hours
- Step 2:** **Integrate the new operating hours**
 -- Terminate the configuration mode and switch to AUTOMATIC mode
 -- Display the operating hours
 -- Press and hold the "Digit" button for at least 5 seconds.

Start Counter

Parameter 280

| | |
|----------------------|-------|
| Set start counter | 00000 |
|----------------------|-------|

Counter; number of engine starts

0 to 32,000

The start counter is used to display how many starts of the engine have been attempted. Following each starting attempt (successful or not) the start counter is increased by one. This parameter permits the user to display the correct number of starts if this controller is retrofitted to an older engine, a starter is replaced, or this controller is replacing an older controller.

Only maintenance personnel should configure the start counter!



NOTE

If the engine start counter is to be changed from the factory default value, the controller must be in code level CS2 before the change can be made. For safety reasons, the counter is set in a 2-step sequence.

The following sequence applies:

- Step 1:** **Configure new value**
 -- Set and store the desired number of starts
- Step 2:** **Integrate the new number of starts**
 -- Terminate the configuration mode and switch to AUTOMATIC mode
 -- Display the number of engine starts
 -- Press and hold the "Digit" button for at least 5 seconds

kWh Counter

Parameter 281

| | |
|-------------|-----|
| kWh counter | |
| set in | --- |

Counter; power measurement scaling**kWh/MWh**

The power produced may be measured in kWh or MWh. The user defined which scale is desired for the controller with this parameter.

Parameter 282

| | |
|-------------|---------|
| kWh counter | |
| set | 0000--- |

Counter; kWh**0 to 65,500 kWh/MWh**

The kWh/MWh counter (depending on Parameter 281) is used to display how much power the generator has produced. This parameter permits the user to display the correct kWh/MWh if this controller retrofitted to an older generator or this controller is replacing an older controller.



NOTE

If the kWh counter is to be changed from the factory default value, the controller must be in code level CS2 before the change can be made. The counter is set in a two-step procedure due to safety reasons.

The following proceeding is valid:

- Step 1:** **Configure new value**
 -- Set and store the desired counter values for the parameters 293 and 294
- Step 2:** **Integrate the new value**
 -- Terminate the configuration mode and change to AUTOMATIC mode
 -- Display the kWh counter
 -- Press and hold the "Digit" button for at least 5 seconds

Real Time Clock (XPD, XPQ)



NOTE

If multiple GCP control units are on a common CAN bus, all clocks are synchronized daily at 12:00 o'clock (noon) to the time of the control with the lowest CAN bus ID/generator number (Parameter 4). This makes it essential that each GCP has a different control number.

Parameter 283

| | |
|-------------|-------|
| Time | 00:00 |
|-------------|-------|

Real time clock; time

Setting of the hours and minutes of the internal real time clock.

| Hour | |
|--------|--|
| 00 | 0 th hour of the day (midnight) |
| 01 | 1 st hour of the day |
| ... | ... |
| 23 | 23 rd hour of the day |
| Minute | |
| 00 | 0 th minute of the hour |
| 01 | 1 st minute of the hour |
| ... | ... |
| 59 | 59 th minute of the hour |

Parameter 284

| | |
|--------------------|--------|
| Year, month | 00, 01 |
|--------------------|--------|

Real time clock; year/month

Setting the year and month of the internal real time clock.

| Year | |
|-------|-----------|
| 99 | Year 1999 |
| 00 | Year 2000 |
| 01 | Year 2001 |
| ... | ... |
| Month | |
| 01 | January |
| 02 | February |
| ... | ... |
| 12 | December |

Parameter 285

| | |
|--------------------|------|
| Day/weekday | 01/1 |
|--------------------|------|

Real time clock; day/day of week

Setting of the day and weekday of the internal real time clock.

| Day | |
|---------|---------------------------------|
| 01 | 1st of the month |
| 02 | 2nd of the month |
| ... | ... |
| 31 | 31st of the month, if available |
| Weekday | |
| 1 | Monday |
| 2 | Tuesday |
| ... | ... |
| 7 | Sunday |

Current Slave Pointer

A current slave pointer, which records and stores the maximum generator current, is implemented in the control. The display of the maximum generator current can be selected in the **Automatic mode** by pressing the "Message" button. The following screen appears in the display:

Parameter 286

| |
|-------------------------------------|
| 000 000 000 000 max. Gen.current |
|-------------------------------------|

Current slave pointer; display of the maximum generator current

The maximum generator current in each phase is displayed.

Reset: Pressing and holding the "reset" button for 3 seconds while the current slave pointer screen is being displayed will reset the memory.

Chapter 4. Commissioning



DANGER - HIGH VOLTAGE

When commissioning the control, please observe all safety rules that apply to the handling of live equipment. Ensure that you know how to provide first aid in the event of an uncontrolled release of energy and that you know where the first aid kit and the nearest telephone are. Never touch any live components of the system or on the back of the system:

LIFE THREATENING



WARNING

Only a qualified technician may commission the unit. The "EMERGENCY-STOP" function must be operational prior to commissioning of the system and must not depend on the unit for its operation.



WARNING

A discrete Input assigned to an "Emergency Stop" function is only a signaling input. This input may only be used to signal that an external emergency stop button has been actuated. According to EN 60204, this input is not approved to be used as the emergency stop function. The emergency stop function must be implemented external to the control and cannot rely on the control to function properly.



CAUTION

Prior to commissioning ensure that all measuring devices are connected in correct phase sequence. The connect command for the unit circuit breaker must be disconnected at the unit circuit breaker. The field rotation must be monitored for proper rotation. Any absence of or incorrect connection of voltage measuring devices or other signals may lead to malfunctions and damage the unit, the engine, and/or components connected to the unit!

Commissioning Procedure:

1. After wiring the unit and ensuring all voltage-measuring devices are phased correctly, apply the control system voltage (i.e. 12/24 Vdc). The "Operation" LED will illuminate.
2. Simultaneously pressing the "Digit↑" and "Cursor→" buttons will enable the configuration mode. After entering the proper access code number, the unit may be configured according to the application requirements (refer to the parameters section).
3. After applying the measuring variables, the unit will display the measured values. These values should be confirmed with a calibrated measuring instrument.
4. The initial start of the engine should be performed in the **MANUAL operation mode** (press the "MANUAL" button). Start the engine ("START" button) and then stop it ("STOP" button). All generator-measured values must be checked. Any alarm messages should be investigated as well.
5. Check the automatic start sequence by means of the **TEST operation mode** (press the "TEST" push-button). Test the protections that result in alarms with shutdowns.

6. "AUTO" operation mode (press the "AUTO" button): Applying the automatic control inputs and the engine start request can now carry out automatic starting with subsequent synchronization.

Check synchronization: Disable the GCB from being able to close onto the two systems. Check the generator and the generator busbar rotating fields. Check the connect command with a zero voltmeter (determination of the phase angle) at the generator power circuit breaker (GCB). If several correct synchronizing pulses have been output, switch the operation mode to "STOP" and re-enable the GCB closing circuit ("Command: close GCB") with the engine in "STOP" mode.

7. If steps 1 through 6 have been carried out successfully, parallel operations may be commenced. It is recommended to start with a constant power/baseload operation (approx. 25 % of the generator rated power) initially. While this operation is being carried out, the displayed measured values must be verified. Test the GCB shutdown. Check the real power controller and if necessary the power factor controller for proper operation. Enter various set point values and verify proper operation.
8. If the mains parallel operation performs in a satisfactory manner, the synchronization of the mains power circuit breaker (MCB) must be checked:

A power failure in the system must be simulated or observed by the controller. During a mains parallel operation, change the operation mode from AUTOMATIC to MANUAL. Open the MCB ("MCB ON" LED will turn off). Press the AUTOMATIC mode button to return the controller back to the AUTOMATIC operation mode.

Check the generator busbar and the mains rotating field. Disable the MCB from being able to close onto the two systems. Check the connect command with a zero voltmeter (determination of the phase angle) at the MCB. If several correct synchronizing pulses have been output, switch the operation mode to "STOP" and re-enable the GCB closing circuit ("Command: close MCB") with the engine in "STOP" mode.

9. Test the emergency power operation functions



NOTE

The MCB and GCB reply messages are processed as negative logic. When the breaker is open, the breaker reply (terminal 4/54) input should be energized (12/24Vdc). When the breaker is closed, the corresponding breaker reply input is de-energized (0Vdc). The circuit breaker auxiliary contacts should be configured as normally closed! The CB aux contacts should be configured as normally closed! Refer to the description of the auxiliary and control inputs starting on page 10. It is vital that these replies be connected!

Electrical insulation between voltage supply and discrete control and feedback inputs: By the use of corresponding external wiring, the common reference point of the discrete inputs can be electrically isolated from the supply voltage (0 V, terminal 2). This is necessary if the discrete inputs are not to be triggered with 24 Vdc and electrical isolation of the control voltage (e. g. 220 Vdc, 220 Vac) from the supply voltage must be insured.

Appendix A.

Analog output manager

(XPD, XPQ)



NOTE

The functions listed below can only be output correctly if the existing version of the control permits this.

| Function | Output | Value | Input of the two limit values |
|----------|--|----------------------|---|
| 0 | The analog output is disabled. | N/A | N/A |
| 1 | Actual generator real power | [dimensionless] | 0% Lower power limit (can also be negative) e.g. -0050 kW 100% Upper power limit (can also be negative) e.g. 0200 kW |
| 2 | Actual generator power factor ϕ [e.g. (-070 to +080) /100] (Definition at end of Table) | [dimensionless] | 0% Lower interval to power factor $\phi=1$ e.g. -0030 corresponds to c0.70 100% Upper interval to power factor $\phi=1$ e.g. 0030 corresponds to i0.70 |
| 3 | Actual generator frequency | [Hz*100] | 0% Lower frequency e.g. 0000 corresponds to 00.00 Hz. 100% Upper frequency e.g. 7000 corresponds to 70.00 Hz. |
| 4 | Actual generator reactive power | [kvar] | 0% capacitive reactive power (negative) e.g. -0100 kvar 100% inductive reactive power (positive) e.g. +0100 kvar |
| 5 | Rated power of all generators connected to generator busbar minus nominal actual power | [kW] | 0% Lower power (can also be negative) e.g. -0050 kW |
| 6 | Total actual power of all genera- tors connected to generator bus- bar | [kW] | 100% Upper power (can also be negative) e.g. 0200 kW |
| 7 | Generator apparent current in L1 | [A] | 0% Lower current output e.g. 0000 A 100% Upper current output e.g. 500 A |
| 8 | Generator apparent current in L2 | [A] | |
| 9 | Generator apparent current in L3 | [A] | |
| 10 | Speed via MPU | [min ⁻¹] | 0% Lower speed e.g. 0000 rpm 100% Upper speed e.g. 3000 rpm |

| Function | Output | Value | Input of the two limit values |
|----------|---|------------------------------------|---|
| 11 | Analog input [T1] | [°C] or [°F] or freely scaleable | 0% Lower measured value e.g. 0000 corresponds to 000 °C at temperature input 100% Upper measuring value e.g. 0255 corresponds to 255 °C at temperature input 0% Lower measured value e.g. 0000 corresponds to 00.0 bar oil pressure 100% Upper measured value e.g. 0100 corresponds to 10.0 bar oil pressure |
| 12 | Analog input [T2] | [°C] or [°F] or freely scaleable | |
| 13 | Analog input [T3] | [°C] or [°F] or freely scaleable | |
| 14 | Analog input [T4] | [°C] or [°F] or freely scaleable | |
| 15 | Analog input [T5] | [°C] or [°F] or freely scaleable | |
| 16 | Analog input [T6] | [Bar] or [PSI] or freely scaleable | |
| 17 | Analog input [T7] | [Bar] or [PSI] or freely scaleable | |
| 18 | --free-- | [°C] or [°F] or freely scaleable | |
| 19 | Actual mains interchange (import/export) real power | [kW] | 0% lower power e.g. -0800 kW 100% upper power e.g. 0800 kW |
| 20 | Mains apparent current in L1 | [A] | 0% Lower current output e.g. 0000 A 100% Upper current output e.g. 500 A |
| 21 | Mains power factor φ [e. g. (-070 to +080) /100] (Definition at end of Table) | [dimensionless] | 0% Lower interval to power factor $\varphi=1$ e.g. -0030 corresponds to k0,70 100% Upper interval to power factor $\varphi=1$ e.g. 0030 corresponds to i0,70 |
| 22 | Actual mains reactive power | [kvar] | 0% capacitive reactive power (negative) e.g. -0100 kvar 100% inductive reactive power (positive) e.g. +0100 kvar |
| 23 | --free-- | | |
| 24 | Generator real power set point, which is currently issued by the ramp of the real power controller (Parameter 75) The actual value of the generator real power is issued in isolated operation | [kW] | 0% lower set point e.g. 0000 kW 100% higher set point e.g. 0800 kW |

The designation 0 % stands for either 4 mA or 0 mA; the designation 100 % stands for 20 mA. The values may also be assigned with prefixes (see relay manager function 1).

Definition of power factor $\cos \phi$ scaling: According to the scaling of the analog output, the power factor can be output within the range from capacitive values ranging from $k0.00$ via power factor $\phi = 1$ to inductive values up to $i0.00$.

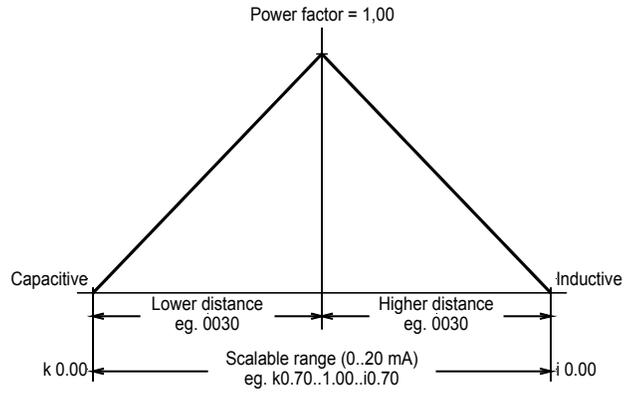


Figure 4-1: Analog outputs - power factor scaling

Appendix B. Relay Manager

| No. | Output | Explanation |
|------------------|--|---|
| 1 | Alarm class 1 | |
| 2 | Alarm class 2 | |
| 3 | Alarm class 3 | |
| 4 | Firing speed reached (engine running) | |
| 5 | Mains failure; undelayed | The function reacts according to the status of the breakers. The conditions described in chapter "Emergency power" apply. |
| 6 | Battery undervoltage | |
| 7 | AUTOMATIC operation mode | |
| 8 | MANUAL operation mode | |
| 9 | TEST operation mode | |
| 10 | STOP operation mode | |
| 11 | Generator undervoltage | |
| 12 | Generator overvoltage | |
| 13 | Generator underfrequency | |
| 14 | Generator overfrequency | |
| 15 | Generator overcurrent level 1 | |
| 16 | "Synchronization GCB" or "Connect GCB" time monitoring alarm | |
| 17 | Engine start failure | |
| 18 | Generator unbalanced load | |
| 19 | Generator overload | |
| 20 | Generator reverse/reduced power | |
| 21 | Readiness for operation | Output via relay manager |
| 22 ^{#1} | Analog input [T1], level 1 | |
| 23 ^{#1} | Analog input [T1], level 2 | |
| 24 ^{#1} | Analog input [T2], level 1 | |
| 25 ^{#1} | Analog input [T2], level 2 | |
| 26 ^{#1} | Analog input [T3], level 1 | |
| 27 ^{#1} | Analog input [T3], level 2 | |
| 28 ^{#1} | Analog input [T4], level 1 | |
| 29 ^{#1} | Analog input [T4], level 2 | |
| 30 ^{#1} | Analog input [T5], level 1 | |
| 33 ^{#1} | Analog input [T5], level 2 | |
| 32 ^{#1} | Analog input [T6], level 1 | |
| 33 ^{#1} | Analog input [T6], level 2 | |
| 34 ^{#1} | Analog input [T7], level 1 | |
| 35 ^{#1} | Analog input [T7], level 2 | |
| 36 | Discrete input [D01] | |
| 37 | Discrete input [D02] | |
| 38 | Discrete input [D03] | |
| 39 | Discrete input [D04] | |
| 40 | Discrete input [D05] | |
| 41 | Discrete input [D06] | |
| 42 | Discrete input [D07] | |
| 43 | Discrete input [D08] | |
| 44 | Discrete input [D09] | |
| 45 | Discrete input [D10] | |
| 46 | Discrete input [D11] | |
| 47 | Discrete input [D12] | |
| 48 | Discrete input [D13] | |
| 49 | Discrete input [D14] | |
| 50 | Discrete input [D15] | |

^{#1} (XPD, XPQ Packages only)

| No. | Output | Explanation |
|------------------|--|---|
| 51 | Discrete input [D16] | |
| 52 | Auxiliary services | i.e. prelube/cooling pumps |
| 53 ^{#1} | --Internal-- | |
| 54 | Centralized alarm (class F1, F2, or F3 alarm; enabled until acknowledgement) | |
| 55 | TEST or AUTOMATIC operation mode selected | |
| 56 | Generator power watchdog, level 1 | |
| 57 | MCB is closed | |
| 58 | GCB is closed | |
| 59 ^{#2} | Interface fault Y1/Y5 | |
| 60 | Mains parallel operation is desired: disable interlock of GCB <> MCB | |
| 61 | Overcurrent I/t or generator overcurrent, level 2 | |
| 62 | Introduce load-shedding: Connection / synchronization of GCB is carried out or circuit breaker is closed | Signal is enabled prior to connection / synchronization and remains enabled after circuit breaker is closed. |
| 63 | MCB connected / synchronization carried out or circuit breaker is closed | Signal is enabled prior to connection / synchronization and remains enabled after circuit breaker is closed. |
| 64 | Overspeed via Magnetic Pickup | |
| 65 | Emergency power is active | |
| 66 | Shutdown malfunction | |
| 67 | Power watchdog for power supplied by the mains | |
| 68 | Maintenance call | |
| 69 | MPU speed/generator frequency mismatch | The monitored generator frequency and the engine speed from the MPU are different |
| 70 | "Synchronization MCB" or "Connect MCB" time monitoring alarm. | |
| 71 | GCB synchronization will be performed | |
| 72 | MCB synchronization will be performed | |
| 73 | Lamp test active | |
| 74 | Malfunction "Reply: GCB is open" - fault on closing | The GCB cannot be closed after 5 attempts. |
| 75 | Malfunction "Reply: MCB is open" - fault on closing | The MCB cannot be closed after 5 attempts. |
| 76 | Malfunction "Reply: GCB is open" - fault on opening | 2 s following the "Command: open GCB" a reply continues to be detected. |
| 77 | Malfunction "Reply: MCB is open" - fault on opening | 2 s following the "Command: open MCB" a reply continues to be detected. |
| 78 | Power supplied by the mains not able to achieve zero power (P>0<P) | In the event of interchange synchronization, the zero incoming power cannot be attained. The MCB is prevented from opening as a result of this. Reset via acknowledgment. |
| 79 | Connect time for dead bus start exceeded | |
| 80 | Generator power watchdog, level 2 | |

^{#1} special versions only

^{#2} (Option SC10)

| No. | Output | Explanation |
|-------------------|--|--|
| 81 | CCW mains rotating field | |
| 82 | Engine enable | <p>Set engine enable As long as there is a start request for the engine and during cool down, the operation of the engine is enabled (i.e. AUTOMATIC operation mode and discrete input 3/5, emergency power, start via interface, manual start, etc. are energized/enabled).</p> <p>Reset engine enable The engine enable will be reset if a start request is no longer present due to a manual stop, an F3 alarm class, or during the engine stop time, and if "zero" speed is detected and a start request is not present or coasting is not taking place.</p> |
| 83 | "RESET" button pressed | |
| 84 | Preheating/firing ON (pre-assigned to relay [7]) | pre-assigned default value |
| 85 | Group alarm of class F1, F2, or F3 alarm (pre-assigned to relay [8]) | pre-assigned default value Horn: after 2 min independent shutoff |
| 86 ^{#1} | --Internal-- | |
| 87 ^{#1} | --Internal-- | |
| 88 | Generator voltage and/or frequency are not in range (undelayed) | |
| 89 | Busbar voltage and/or frequency are not in range (undelayed) | |
| 90 ^{#1} | --Internal-- | |
| 91 | MPU detects nominal speed (+/-6 %) | |
| 92 | Mains voltage fault via protection device | |
| 93 | Mains frequency fault via protection device | |
| 94 | Phase/vector shift fault via protection device | |
| 95 ^{#1} | --Internal-- | |
| 96 | Delayed engine monitoring time exceeded | |
| 97 | Sprinkler mode is active (included Sprinkler coasting) | |
| 98 ^{#2} | IKD1 discrete input 1 | |
| 99 ^{#2} | IKD1 discrete input 2 | |
| 100 ^{#2} | IKD1 discrete input 3 | |
| 101 ^{#2} | IKD1 discrete input 4 | |
| 102 ^{#2} | IKD1 discrete input 5 | |
| 103 ^{#2} | IKD1 discrete input 6 | |
| 104 ^{#2} | IKD1 discrete input 7 | |
| 105 ^{#2} | IKD1 discrete input 8 | |
| 106 ^{#2} | IKD2 discrete input 1 | |
| 107 ^{#2} | IKD2 discrete input 2 | |
| 108 ^{#2} | IKD2 discrete input 3 | |
| 109 ^{#2} | IKD2 discrete input 4 | |
| 110 ^{#2} | IKD2 discrete input 5 | |
| 111 ^{#2} | IKD2 discrete input 6 | |
| 112 ^{#2} | IKD2 discrete input 7 | |
| 113 ^{#2} | IKD2 discrete input 8 | |

^{#1} special versions only

^{#2} (Option SC10)

| No. | Output | Explanation |
|-------------------|---|---|
| 114 ^{#1} | Three-position controller: n+ / f+ / P+ | (use an external Resistive/Capacitive protection circuit) |
| 115 ^{#1} | Three-position controller: n- / f- / P- | |
| 116 ^{#1} | Three-position controller: V+ / Q+ | |
| 117 ^{#1} | Three-position controller: V- / Q- | |
| 118 ^{#2} | --Internal-- | |
| 119 ^{#3} | Wire break Analog input [T1] | |
| 120 ^{#3} | Wire break Analog input [T2] | |
| 121 ^{#3} | Wire break Analog input [T3] | |
| 122 ^{#3} | Wire break Analog input [T4] | |
| 123 ^{#3} | Wire break Analog input [T5] | |
| 124 ^{#3} | Wire break Analog input [T6] | |
| 125 ^{#3} | Wire break Analog input [T7] | |
| 126 ^{#2} | --Internal-- | |
| 127 ^{#2} | --Internal-- | |
| 128 ^{#2} | --Internal-- | |
| 129 ^{#4} | Failure lambda probe | |
| 130 ^{#4} | Lambda controller ON | |
| 131 | Fuel relay is ON / stop relay is ON / gas valve is ON | |
| 132 ^{#2} | --Internal-- | |
| 133 | Idle mode active | |
| 134 ^{#4} | IKD1 communication OK | |
| 135 ^{#4} | IKD2 communication OK | |
| 136 ^{#4} | ST3 communication OK | |
| 137 ^{#4} | MDEC communication OK | |
| 138 ^{#4} | J1939 communication OK | |
| 139 | Phase rotation generator and mains mismatch | |
| 140 | Direction of rotation, mains voltage: CW | |
| 141 | Direction of rotation, generator voltage: CCW | |
| 142 | Direction of rotation, generator voltage: CW | |
| 143 | Starter engaged (cranking) | |
| 144 | GCB is to be opened | |
| 145 ^{#2} | --Internal-- | |
| 146 | Parallel operation CB | from V4.3010 |
| 147 ^{#2} | --Internal-- | |
| 148 | Unintended stop | from V4.3010 |
| 149 | Interface error X1/X5 | from V4.3010 |
| 150 ^{#4} | ECU yellow alarm | from V4.3030 |
| 151 ^{#4} | ECU red alarm | from V4.3030 |
| 152 ^{#2} | --Internal-- | |
| 153 ^{#2} | --Internal-- | |
| 154 ^{#2} | --Internal-- | |
| 155 ^{#2} | --Internal-- | |
| 156 ^{#2} | --Internal-- | |
| 157 | Engine cool down | from V4.3046 |
| 158 | Mains settling time is running | from V4.3046 |

^{#1} (BPQ, XPQ Package)

^{#2} special versions only

^{#3} (XPD, XPQ Package)

^{#4} (Option SC10)



NOTE

Relay Manager functions with a number above 128 may only be configured with LeoPC1 Version 3.0.015 or later.

Appendix C. Interface Protocol



NOTE

Only selected parameters are transmitted via the interface depending on the Package configuration.

Transmission Telegram



| MUX | No. | Contents (words) | Unit | Note |
|-----|-----|------------------|------|------|
|-----|-----|------------------|------|------|

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|-----------------------------------|--|--------------------------|---|--------------|-------------------------|--------------|--------------|-------------------------|----------------------------------|--------------|--------------|---------------------|--------------|--------------------------|--------------|-------------|-----------------|-------------|----------------|----------------------------------|-------------|----------------|-----------------------------------|-------------|----------------|-------------------------|-------------|----------------|------------------------|-------------|-------------|----------------------------|-------------|
| 0/1 | 1 | Generator voltage delta V_{12} | $V \times 10^{UGNEXPO}$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0/2 | 2 | Generator frequency f | $Hz \times 100$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0/3 | 3 | Actual generator real power P | $W \times 10^{PGNEXPO}$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1/1 | 4 | Exponents | | High Byte: PGNEXPO Generator power Low Byte: UGNEXPO Generator voltage | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1/2 | 5 | Real power set point value | see note | $W \times \frac{PGNWD}{2.800} \times 10^{PGNEXPO}$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1/3 | 6 | Conversion factor Steps \rightarrow kW | | PGNWD (internal) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2/1 | 7 | Busbar voltage delta V_{12} | $V \times 10^{UGSSEXPO}$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2/2 | 8 | Mains voltage delta V_{12} | $V \times 10^{UNTEXPO}$ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2/3 | 9 | Currently present alarm class | | <table border="0" style="width: 100%;"> <tr><td>Bit 15 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 14 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 13 = 1 \</td><td rowspan="2">Alarm class F2 or alarm class F3</td></tr> <tr><td>Bit 12 = 1 /</td></tr> <tr><td>Bit 11 = 1 \</td><td rowspan="2">LED "Alarm" flashes</td></tr> <tr><td>Bit 10 = 1 /</td></tr> <tr><td>Bit 9 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 8 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 7 = 1 \</td><td rowspan="2">Alarm class F3</td></tr> <tr><td>Bit 6 = 1 /</td></tr> <tr><td>Bit 5 = 1 \</td><td rowspan="2">Alarm class F2</td></tr> <tr><td>Bit 4 = 1 /</td></tr> <tr><td>Bit 3 = 1 \</td><td rowspan="2">Alarm class F1</td></tr> <tr><td>Bit 2 = 1 /</td></tr> <tr><td>Bit 1 = 1 \</td><td rowspan="2">Alarm class F0</td></tr> <tr><td>Bit 0 = 1 /</td></tr> </table> <p><i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i></p> | Bit 15 = 1 | --Internal-- | Bit 14 = 1 | --Internal-- | Bit 13 = 1 \ | Alarm class F2 or alarm class F3 | Bit 12 = 1 / | Bit 11 = 1 \ | LED "Alarm" flashes | Bit 10 = 1 / | Bit 9 = 1 | --Internal-- | Bit 8 = 1 | --Internal-- | Bit 7 = 1 \ | Alarm class F3 | Bit 6 = 1 / | Bit 5 = 1 \ | Alarm class F2 | Bit 4 = 1 / | Bit 3 = 1 \ | Alarm class F1 | Bit 2 = 1 / | Bit 1 = 1 \ | Alarm class F0 | Bit 0 = 1 / | | | | |
| Bit 15 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 14 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 13 = 1 \ | Alarm class F2 or alarm class F3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 12 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 11 = 1 \ | LED "Alarm" flashes | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 10 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 9 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 8 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 7 = 1 \ | Alarm class F3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 6 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 5 = 1 \ | Alarm class F2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 4 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 3 = 1 \ | Alarm class F1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 2 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 1 \ | Alarm class F0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3/1 | 10 | Control register 2 | | <table border="0" style="width: 100%;"> <tr><td>Bit 15 = 1 \</td><td rowspan="2">Terminal 3 is energized</td></tr> <tr><td>Bit 14 = 1 /</td></tr> <tr><td>Bit 13 = 1 \</td><td rowspan="2">Terminal 5 is energized</td></tr> <tr><td>Bit 12 = 1 /</td></tr> <tr><td>Bit 11 = 1 \</td><td rowspan="2">--Internal--</td></tr> <tr><td>Bit 10 = 1 /</td></tr> <tr><td>Bit 9 = 1 \</td><td rowspan="2">Terminal 53 is energized</td></tr> <tr><td>Bit 8 = 1 /</td></tr> <tr><td>Bit 7 = 1 \</td><td rowspan="2">DI "Enable MCB"</td></tr> <tr><td>Bit 6 = 1 /</td></tr> <tr><td>Bit 5 = 1 \</td><td rowspan="2">Terminal 4, reply: GCB is closed</td></tr> <tr><td>Bit 4 = 1 /</td></tr> <tr><td>Bit 3 = 1 \</td><td rowspan="2">Terminal 54, reply: MCB is closed</td></tr> <tr><td>Bit 2 = 1 /</td></tr> <tr><td>Bit 1 = 1 \</td><td rowspan="2">Terminal 6 is energized</td></tr> <tr><td>Bit 0 = 0 /</td></tr> <tr><td>Bit 1 = 0 \</td><td rowspan="2">Shutdown power reached</td></tr> <tr><td>Bit 0 = 1 /</td></tr> <tr><td>Bit 1 = 0 \</td><td rowspan="2">Shutdown power not reached</td></tr> <tr><td>Bit 0 = 1 /</td></tr> </table> <p><i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i></p> | Bit 15 = 1 \ | Terminal 3 is energized | Bit 14 = 1 / | Bit 13 = 1 \ | Terminal 5 is energized | Bit 12 = 1 / | Bit 11 = 1 \ | --Internal-- | Bit 10 = 1 / | Bit 9 = 1 \ | Terminal 53 is energized | Bit 8 = 1 / | Bit 7 = 1 \ | DI "Enable MCB" | Bit 6 = 1 / | Bit 5 = 1 \ | Terminal 4, reply: GCB is closed | Bit 4 = 1 / | Bit 3 = 1 \ | Terminal 54, reply: MCB is closed | Bit 2 = 1 / | Bit 1 = 1 \ | Terminal 6 is energized | Bit 0 = 0 / | Bit 1 = 0 \ | Shutdown power reached | Bit 0 = 1 / | Bit 1 = 0 \ | Shutdown power not reached | Bit 0 = 1 / |
| Bit 15 = 1 \ | Terminal 3 is energized | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 14 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 13 = 1 \ | Terminal 5 is energized | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 12 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 11 = 1 \ | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 10 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 9 = 1 \ | Terminal 53 is energized | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 8 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 7 = 1 \ | DI "Enable MCB" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 6 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 5 = 1 \ | Terminal 4, reply: GCB is closed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 4 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 3 = 1 \ | Terminal 54, reply: MCB is closed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 2 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 1 \ | Terminal 6 is energized | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 0 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 0 \ | Shutdown power reached | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 0 \ | Shutdown power not reached | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 / | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| MUX | No. | Contents (words) | Unit | Note |
|-----|-----|--|--------------------------|---|
| 3/2 | 11 | Actual mains interchange (import/export) real power | $W \times 10^{PNTTEXPO}$ | |
| 3/3 | 12 | Control register 1 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ Starting enabled (in isolated operation or Bit 14 = 1 / mains parallel operation) Bit 13 = 1 \ --Internal-- Bit 12 = 1 / Bit 11 = 1 \ Execution of acknowledgment Bit 10 = 1 / of a class F2/F3 alarm Bit 9 = 1 \ Execution of acknowledgment Bit 8 = 1 / of a class F1 alarm Bit 7 = 1 \ --Internal-- Bit 6 = 1 / Bit 5 = 1 \ State of generator busbar 1 = OK Bit 4 = 1 / --Internal-- Bit 3 = 1 \ --Internal-- Bit 2 = 1 / Bit 1 = 1 \ --Internal-- Bit 0 = 0 / |
| 4/1 | 13 | Alarm message IKD (SC10) <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 Failure DI8 of the IKD1.1 Bit 14 = 1 Failure DI7 of the IKD1.1 Bit 13 = 1 Failure DI6 of the IKD1.1 Bit 12 = 1 Failure DI5 of the IKD1.1 Bit 11 = 1 Failure DI4 of the IKD1.1 Bit 10 = 1 Failure DI3 of the IKD1.1 Bit 9 = 1 Failure DI2 of the IKD1.1 Bit 8 = 1 Failure DI1 of the IKD1.1 Bit 7 = 1 --Internal-- Bit 6 = 1 --Internal-- Bit 5 = 1 --Internal-- Bit 4 = 1 --Internal-- Bit 3 = 1 --Internal-- Bit 2 = 1 --Internal-- Bit 1 = 1 --Internal-- Bit 0 = 1 --Internal-- |
| 4/2 | 14 | Internal alarm 6 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 MPU plausibility fault Bit 14 = 1 Engine shutdown malfunction Bit 13 = 1 Time overrun, GCB dead bus switching Bit 12 = 1 --Internal-- Bit 11 = 1 MCB open switch malfunction Bit 10 = 1 GCB open switch malfunction Bit 9 = 1 MCB synchronization time monitoring Bit 8 = 1 GCB synchronization time monitoring Bit 7 = 1 Range alarm analog input [T8] Bit 6 = 1 Range alarm analog input [T7] Bit 5 = 1 Range alarm analog input [T6] Bit 4 = 1 Range alarm analog input [T5] Bit 3 = 1 Range alarm analog input [T4] Bit 2 = 1 Range alarm analog input [T3] Bit 1 = 1 Range alarm analog input [T2] Bit 0 = 1 Range alarm analog input [T1] |
| 4/3 | 15 | Generator voltage delta V_{23} | $V \times 10^{UGNEXPO}$ | |
| 5/1 | 16 | Generator voltage delta V_{31} | $V \times 10^{UGNEXPO}$ | |
| 5/2 | 17 | Generator voltage wye V_{1N} | $V \times 10^{UGNEXPO}$ | |
| 5/3 | 18 | Generator voltage wye V_{2N} | $V \times 10^{UGNEXPO}$ | |
| 6/1 | 19 | Generator voltage wye V_{3N} | $V \times 10^{UGNEXPO}$ | |

| MUX | No. | Contents (words) | Unit | Note |
|------|-----|--|-----------------------------|---|
| 6/2 | 20 | Configuration [T1]-[T4] <i>#1#</i> : The analog input is not available or he has been configured either as real power set point value or as mains (import/export) real power value. <i>Note</i> – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte) ,the message is active (otherwise inactive). | Display in ... | #1# °C °F bar/10 psi/10 % no unit |
| | | | Analog input [T4] | |
| | | | Bit 15 = | 0 0 1 1 1 0 |
| | | | Bit 14 = | 0 1 1 0 0 1 0 |
| | | | Bit 13 = | 0 0 1 0 1 0 1 |
| | | | Bit 12 = | 0 1 0 1 0 0 1 |
| | | | Analog input [T3] | |
| | | | Bit 11 = | 0 0 0 1 1 1 0 |
| | | | Bit 10 = | 0 1 1 0 0 1 0 |
| | | | Bit 9 = | 0 0 1 0 1 0 1 |
| | | | Bit 8 = | 0 1 0 1 0 0 1 |
| | | | Analog input [T2] | |
| | | | Bit 7 = | 0 0 0 1 1 1 0 |
| | | | Bit 6 = | 0 1 1 0 0 1 0 |
| | | | Bit 5 = | 0 0 1 0 1 0 1 |
| | | | Bit 4 = | 0 1 0 1 0 0 1 |
| | | | Analog input [T1] | |
| | | | Bit 3 = | 0 0 0 1 1 1 0 |
| | | | Bit 2 = | 0 1 1 0 0 1 0 |
| | | | Bit 1 = | 0 0 1 0 1 0 1 |
| | | | Bit 0 = | 0 1 0 1 0 0 1 |
| 6/3 | 21 | Engine speed measured via the Pickup | min ⁻¹ | |
| 7/1 | 22 | Generator current in L1 | A × 10 ^{IGNEXPO} | |
| 7/2 | 23 | Generator current in L2 | A × 10 ^{IGNEXPO} | |
| 7/3 | 24 | Generator current in L3 | A × 10 ^{IGNEXPO} | |
| 8/1 | 25 | Actual generator reactive power | var × 10 ^{PGNEXPO} | positive = inductive |
| 8/2 | 26 | Generator power factor cos φ | | Example: FF9EH cos φ = c 0.98 (capacitive/lagging) FF9DH cos φ = c 0.99 (capacitive/lagging) 0064H cos φ = 1.00 0063H cos φ = i 0.99 (inductive/leading) 0062H cos φ = i 0.98 (inductive/leading) |
| 8/3 | 27 | Current reserve power in the system | kW | |
| 9/1 | 28 | Current actual real power in the system | kW | |
| 9/2 | 29 | Number of participants on the CAN bus | | |
| 9/3 | 30 | H . B . Mains status L . B . Generator status | | FFH Voltage and frequency available 00H Voltage and frequency not available |
| 10/1 | 31 | Exponents | | High Byte: IGNEXPO Generator current Low Byte: --- free |
| 10/2 | 32 | Busbar frequency | Hz × 100 | |

| MUX | No. | Contents (words) | Unit | Note | | | | | | |
|---------|-----|--|---|---|---|---|---|---|---|---|
| 10/3 | 33 | Configuration [T5]-[T8] <i>#1#</i> : The analog input is not available or he has been configured either as real power se tpoint value or as mains (import/export) real power value. <i>Note</i> – On double /fourfold bits the follow- ing is valid: If the indicated bit combination is fulfilled (high byte and low byte) ,the message is active (otherwise inactive). | Display in ... | #1# °C °F bar/10 psi/10 % no unit | | | | | | |
| | | | Analog input [T8] | | | | | | | |
| | | | Bit 15 = | 0 | 0 | 0 | 1 | 1 | 1 | 0 |
| | | | Bit 14 = | 0 | 1 | 1 | 0 | 0 | 1 | 0 |
| | | | Bit 13 = | 0 | 0 | 1 | 0 | 1 | 0 | 1 |
| | | | Bit 12 = | 0 | 1 | 0 | 1 | 0 | 0 | 1 |
| | | | Analog input [T7] | | | | | | | |
| | | | Bit 11 = | 0 | 0 | 0 | 1 | 1 | 1 | 0 |
| | | | Bit 10 = | 0 | 1 | 1 | 0 | 0 | 1 | 0 |
| | | | Bit 9 = | 0 | 0 | 1 | 0 | 1 | 0 | 1 |
| | | | Bit 8 = | 0 | 1 | 0 | 1 | 0 | 0 | 1 |
| | | | Analog input [T6] | | | | | | | |
| | | | Bit 7 = | 0 | 0 | 0 | 1 | 1 | 1 | 0 |
| | | | Bit 6 = | 0 | 1 | 1 | 0 | 0 | 1 | 0 |
| | | | Bit 5 = | 0 | 0 | 1 | 0 | 1 | 0 | 1 |
| | | | Bit 4 = | 0 | 1 | 0 | 1 | 0 | 0 | 1 |
| | | | Analog input [T5] | | | | | | | |
| Bit 3 = | 0 | 0 | 0 | 1 | 1 | 1 | 0 | | | |
| Bit 2 = | 0 | 1 | 1 | 0 | 0 | 1 | 0 | | | |
| Bit 1 = | 0 | 0 | 1 | 0 | 1 | 0 | 1 | | | |
| Bit 0 = | 0 | 1 | 0 | 1 | 0 | 0 | 1 | | | |
| 11/1 | 34 | Mains voltage delta V_{23} | $V \times 10^{\text{UNTEXPO}}$ | | | | | | | |
| 11/2 | 35 | Mains voltage delta V_{31} | $V \times 10^{\text{UNTEXPO}}$ | | | | | | | |
| 11/3 | 36 | Mains voltage wye V_{1N} | $V \times 10^{\text{UNTEXPO}}$ | | | | | | | |
| 12/1 | 37 | Mains voltage wye V_{2N} | $V \times 10^{\text{UNTEXPO}}$ | | | | | | | |
| 12/2 | 38 | Mains voltage wye V_{3N} | $V \times 10^{\text{UNTEXPO}}$ | | | | | | | |
| 12/3 | 39 | Mains frequency out off $V_{N12}/V_{N23}/V_{N31}$ | $\text{Hz} \times 100$ | | | | | | | |
| 13/1 | 40 | Mains current in L1 | $A \times 10^{\text{INTEXPO}}$ | | | | | | | |
| 13/2 | 41 | Mains reactive power | $\text{var} \times 10^{\text{PNTEXPO}}$ | | | | | | | |
| 13/3 | 42 | Mains power factor ϕ | | Example: FF9EH $\cos \phi = c 0.98$ (capacitive/lagging) FF9DH $\cos \phi = c 0.99$ (capacitive/lagging) 0064H $\cos \phi = 1.00$ 0063H $\cos \phi = i 0.99$ (inductive/leading) 0062H $\cos \phi = i 0.98$ (inductive/leading) | | | | | | |
| 14/1 | 43 | Exponents | | High Byte: PNTEXPO Mains power Low Byte: UNTEXPO Mains voltage | | | | | | |
| 14/2 | 44 | Exponents | | High Byte: INTEXPO Mains current Low Byte: USSEXPO Busbar voltage | | | | | | |
| 14/3 | 45 | Engine operating hours (H . W .) | $h \times 2^{16}$ | Double word | | | | | | |
| 15/1 | 46 | Engine operating hours (L . W .) | h | | | | | | | |
| 15/3 | 47 | Hours until next maintenance | h | | | | | | | |
| 15/3 | 48 | Engine start number | | | | | | | | |

| MUX | No. | Contents (words) | Unit | Note |
|--|-----|--|-----------------------|---|
| 16/1 | 49 | Operation mode <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 LOAD TEST operation mode |
| | | | | Bit 14 = 1 STOP operation mode |
| | | | | Bit 13 = 1 TEST operation mode |
| | | | | Bit 12 = 1 MANUAL operation mode |
| | | | | Bit 11 = 1 AUTOMATIC operation mode |
| | | | | Bit 10 = 1 --Internal-- |
| | | | | Bit 9 = 1 --Internal-- |
| | | | | Bit 8 = 1 --Internal-- |
| | | | | Bit 7 = 1 Emergency power is ON |
| | | | | Bit 6 = 0 Emergency power is OFF |
| | | | | Bit 7 = 0 Emergency power is OFF |
| | | | | Bit 6 = 1 Emergency power is OFF |
| | | | | Bit 5 = 1 Delayed engine monitoring is ON |
| | | | | Bit 4 = 1 Delayed engine monitoring is ON |
| | | | | Bit 3 = 1 Cool down expired |
| Bit 2 = 1 Cool down expired | | | | |
| Bit 1 = 1 --Internal-- | | | | |
| Bit 0 = 1 --Internal-- | | | | |
| 16/2 | 50 | Generator active energy (H . W .) | kWh × 2 ¹⁶ | Double word |
| 16/3 | 51 | Generator active energy (L . W .) | kWh | |
| 17/1 | 52 | Battery voltage | V × 10 | |
| 17/2 | 53 | Internal alarm 1 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ F3: Generator overfrequency 1 |
| | | | | Bit 14 = 1 / F3: Generator overfrequency 1 |
| | | | | Bit 13 = 1 \ F3: Generator underfrequency 1 |
| | | | | Bit 12 = 1 / F3: Generator underfrequency 1 |
| | | | | Bit 11 = 1 \ F3: Generator overvoltage 1 |
| | | | | Bit 10 = 1 / F3: Generator overvoltage 1 |
| | | | | Bit 9 = 1 \ F3: Generator undervoltage 1 |
| | | | | Bit 8 = 1 / F3: Generator undervoltage 1 |
| | | | | Bit 7 = 1 \ --Internal-- |
| | | | | Bit 6 = 1 / --Internal-- |
| Bit 5 = 1 \ F1: Battery undervoltage | | | | |
| Bit 4 = 1 / F1: Battery undervoltage | | | | |
| Bit 3 = 1 \ F3: Generator overload | | | | |
| Bit 2 = 1 / F3: Generator overload | | | | |
| Bit 1 = 1 \ F3: Generator reverse power | | | | |
| Bit 0 = 1 / F3: Generator reverse power | | | | |
| 17/3 | 54 | Internal alarm 2 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ F0: Mains overfrequency |
| | | | | Bit 14 = 1 / F0: Mains overfrequency |
| | | | | Bit 13 = 1 \ F0: Mains underfrequency |
| | | | | Bit 12 = 1 / F0: Mains underfrequency |
| | | | | Bit 11 = 1 \ F0: Mains overvoltage |
| | | | | Bit 10 = 1 / F0: Mains overvoltage |
| | | | | Bit 9 = 1 \ F0: Mains undervoltage |
| | | | | Bit 8 = 1 / F0: Mains undervoltage |
| | | | | Bit 7 = 1 \ Interface fault X1-X5 |
| | | | | Bit 6 = 1 / Interface fault X1-X5 |
| Bit 5 = 1 GCB opened; "Time add-on ramp" expired | | | | |
| Bit 4 = 1 --Internal-- | | | | |
| Bit 3 = 1 \ --Internal-- | | | | |
| Bit 2 = 1 / --Internal-- | | | | |
| Bit 1 = 1 \ F0: Mains phase/vector jump | | | | |
| Bit 0 = 1 / F0: Mains phase/vector jump | | | | |

| MUX | No. | Contents (words) | Unit | Note |
|---|-----|--|------|--|
| 18/1 | 55 | Internal alarm 3 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ F3: Time-overcurrent, level 2 or Bit 14 = 1 / inverse time-overcurrent, IEC255 |
| | | | | Bit 13 = 1 \ F3: Generator overspeed (Pickup) Bit 12 = 1 / |
| | | | | Bit 11 = 1 \ Import power 0 kW not reached Bit 10 = 1 / |
| | | | | Bit 9 = 1 \ F3: Generator unbalanced load Bit 8 = 1 / |
| | | | | Bit 7 = 1 \ F3: Time-overcurrent, level 1 Bit 6 = 1 / |
| | | | | Bit 5 = 1 \ Interface fault Y1-Y5 Bit 4 = 1 / |
| | | | | Bit 3 = 1 \ F1: Maintenance call Bit 2 = 1 / |
| | | | | Bit 1 = 1 \ Start failure Bit 0 = 1 / |
| | | | | 18/2 |
| Bit 13 = 1 \ F3: Analog input [T1], level 2 Bit 12 = 1 / | | | | |
| Bit 11 = 1 \ F1: Analog input [T2], level 1 Bit 10 = 1 / | | | | |
| Bit 9 = 1 \ F3: Analog input [T2], level 2 Bit 8 = 1 / | | | | |
| Bit 7 = 1 \ F1: Analog input [T3], level 1 Bit 6 = 1 / | | | | |
| Bit 5 = 1 \ F3: Analog input [T3], level 2 Bit 4 = 1 / | | | | |
| Bit 3 = 1 \ F1: Analog input [T4], level 1 Bit 2 = 1 / | | | | |
| Bit 1 = 1 \ F3: Analog input [T4], level 2 Bit 0 = 1 / | | | | |
| 18/3 | 57 | Internal alarm 5 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | |
| | | | | Bit 13 = 1 \ F3: Analog input [T5], level 2 Bit 12 = 1 / |
| | | | | Bit 11 = 1 \ F1: Analog input [T6], level 1 Bit 10 = 1 / |
| | | | | Bit 9 = 1 \ F3: Analog input [T6], level 2 Bit 8 = 1 / |
| | | | | Bit 7 = 1 \ F1: Analog input [T7], level 1 Bit 6 = 1 / |
| | | | | Bit 5 = 1 \ F3: Analog input [T7], level 2 Bit 4 = 1 / |
| | | | | Bit 3 = 1 \ --Internal-- Bit 2 = 1 / |
| | | | | Bit 1 = 1 \ --Internal-- Bit 0 = 1 / |

| MUX | No. | Contents (words) | Unit | Note |
|--------------------------|-----|--|------|--|
| 19/1 | 58 | External alarm 1 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte) ,the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ Bit 14 = 1 / Discrete input [D01] |
| | | | | Bit 13 = 1 \ Bit 12 = 1 / Discrete input [D02] |
| | | | | Bit 11 = 1 \ Bit 10 = 1 / Discrete input [D03] |
| | | | | Bit 9 = 1 \ Bit 8 = 1 / Discrete input [D04] |
| | | | | Bit 7 = 1 \ Bit 6 = 1 / Discrete input [D05] |
| | | | | Bit 5 = 1 \ Bit 4 = 1 / Discrete input [D06] |
| | | | | Bit 3 = 1 \ Bit 2 = 1 / Discrete input [D07] |
| | | | | Bit 1 = 1 \ Bit 0 = 1 / Discrete input [D08] |
| 19/2 | 59 | External alarm 2 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte) ,the message is active (otherwise inactive).</i> | | Bit 15 = 1 \ Bit 14 = 1 / Discrete input [D09] |
| | | | | Bit 13 = 1 \ Bit 12 = 1 / Discrete input [D10] |
| | | | | Bit 11 = 1 \ Bit 10 = 1 / Discrete input [D11] |
| | | | | Bit 9 = 1 \ Bit 8 = 1 / Discrete input [D12] |
| | | | | Bit 7 = 1 \ Bit 6 = 1 / Discrete input [D13] |
| | | | | Bit 5 = 1 \ Bit 4 = 1 / Discrete input [D14] |
| | | | | Bit 3 = 1 \ Bit 2 = 1 / Discrete input [D15] |
| | | | | Bit 1 = 1 \ Bit 0 = 1 / Discrete input [D16] |
| 19/3 | 60 | Internal alarm 7 <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte) ,the message is active (otherwise inactive).</i> | | Bit 15 = 1 --Internal-- |
| | | | | Bit 14 = 1 --Internal-- |
| | | | | Bit 13 = 1 --Internal-- |
| | | | | Bit 12 = 1 --Internal-- |
| | | | | Bit 11 = 1 --Internal-- |
| | | | | Bit 10 = 1 --Internal-- |
| | | | | Bit 9 = 1 --Internal-- |
| | | | | Bit 8 = 1 --Internal-- |
| | | | | Bit 7 = 1 MCB close malfunction |
| | | | | Bit 6 = 1 GCB close malfunction |
| | | | | Bit 5 = 1 --Internal-- |
| | | | | Bit 4 = 1 --Internal-- |
| | | | | Bit 3 = 1 --Internal-- |
| Bit 2 = 1 --Internal-- | | | | |
| Bit 1 = 1 --Internal-- | | | | |
| Bit 0 = 1 Immediate stop | | | | |
| 20/1 | 61 | Analog input [T1] | | The measured value is transmitted. |
| 20/2 | 62 | Analog input [T2] | | The measured value is transmitted. |
| 20/3 | 63 | Analog input [T3] | | The measured value is transmitted. |
| 21/1 | 64 | Analog input [T4] | | The measured value is transmitted. |
| 21/2 | 65 | Analog input [T5] | | The measured value is transmitted. |
| 21/3 | 66 | Analog input [T6] | | The measured value is transmitted. |
| 22/1 | 67 | Analog input [T7] | | The measured value is transmitted. |

| MUX | No. | Contents (words) | Unit | Note | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----------------------------------|--|--|------|--|----------------------------------|---------------------------|------------|--|------------|---------------------------|------------|---------------------------|------------|---------------------------|------------|---------------------------|-----------|---------------------------|---------------------------------------|---------------------------|-----------|--------------|---|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|
| 22/2 | 68 | Alarm messages IKD2 (SC10) | | <table border="1"> <tr><td>Bit 15 = 1</td><td>Failure DI8 of the IKD1.2</td></tr> <tr><td>Bit 14 = 1</td><td>Failure DI7 of the IKD1.2</td></tr> <tr><td>Bit 13 = 1</td><td>Failure DI6 of the IKD1.2</td></tr> <tr><td>Bit 12 = 1</td><td>Failure DI5 of the IKD1.2</td></tr> <tr><td>Bit 11 = 1</td><td>Failure DI4 of the IKD1.2</td></tr> <tr><td>Bit 10 = 1</td><td>Failure DI3 of the IKD1.2</td></tr> <tr><td>Bit 9 = 1</td><td>Failure DI2 of the IKD1.2</td></tr> <tr><td>Bit 8 = 1</td><td>Failure DI1 of the IKD1.2</td></tr> <tr><td>Bit 7 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 6 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 5 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 4 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 3 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 2 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 1 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 0 = 1</td><td>--Internal--</td></tr> </table> | Bit 15 = 1 | Failure DI8 of the IKD1.2 | Bit 14 = 1 | Failure DI7 of the IKD1.2 | Bit 13 = 1 | Failure DI6 of the IKD1.2 | Bit 12 = 1 | Failure DI5 of the IKD1.2 | Bit 11 = 1 | Failure DI4 of the IKD1.2 | Bit 10 = 1 | Failure DI3 of the IKD1.2 | Bit 9 = 1 | Failure DI2 of the IKD1.2 | Bit 8 = 1 | Failure DI1 of the IKD1.2 | Bit 7 = 1 | --Internal-- | Bit 6 = 1 | --Internal-- | Bit 5 = 1 | --Internal-- | Bit 4 = 1 | --Internal-- | Bit 3 = 1 | --Internal-- | Bit 2 = 1 | --Internal-- | Bit 1 = 1 | --Internal-- | Bit 0 = 1 | --Internal-- |
| Bit 15 = 1 | Failure DI8 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 14 = 1 | Failure DI7 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 13 = 1 | Failure DI6 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 12 = 1 | Failure DI5 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 11 = 1 | Failure DI4 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 10 = 1 | Failure DI3 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 9 = 1 | Failure DI2 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 8 = 1 | Failure DI1 of the IKD1.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 7 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 6 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 5 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 4 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 3 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 2 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | <i>Note – On double /fourfold bits the following is valid: If the indicated bit combination is fulfilled (high byte and low byte), the message is active (otherwise inactive).</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 22/3 | 69 | LCD-display / Pickup | | <table border="1"> <tr><td colspan="2">Currently active display message</td></tr> <tr><td>Bit 15 = x</td><td rowspan="7">A number is transmitted, please consult the table for the meaning of the number 69 of the telegram "Monitoring of the active display".</td></tr> <tr><td>Bit 14 = x</td></tr> <tr><td>Bit 13 = x</td></tr> <tr><td>Bit 12 = x</td></tr> <tr><td>Bit 11 = x</td></tr> <tr><td>Bit 10 = x</td></tr> <tr><td>Bit 9 = x</td></tr> <tr><td>Bit 8 = x</td></tr> <tr><td colspan="2">Pickup</td></tr> <tr><td>Bit 7 = 1</td><td rowspan="3">Firing speed reached f > parameter</td></tr> <tr><td>Bit 6 = 1</td></tr> <tr><td>Bit 5 = 1</td></tr> <tr><td>Bit 4 = 1</td><td rowspan="4">Speed existing without pickup (pickup = OFF): f > 15 Hz with pickup (pickup = ON): f > 5 Hz</td></tr> <tr><td>Bit 3 = 1</td></tr> <tr><td>Bit 2 = 1</td></tr> <tr><td>Bit 1 = 1</td></tr> <tr><td>Bit 0 = 1</td></tr> </table> | Currently active display message | | Bit 15 = x | A number is transmitted, please consult the table for the meaning of the number 69 of the telegram "Monitoring of the active display". | Bit 14 = x | Bit 13 = x | Bit 12 = x | Bit 11 = x | Bit 10 = x | Bit 9 = x | Bit 8 = x | Pickup | | Bit 7 = 1 | Firing speed reached f > parameter | Bit 6 = 1 | Bit 5 = 1 | Bit 4 = 1 | Speed existing without pickup (pickup = OFF): f > 15 Hz with pickup (pickup = ON): f > 5 Hz | Bit 3 = 1 | Bit 2 = 1 | Bit 1 = 1 | Bit 0 = 1 | | | | | | | | | |
| Currently active display message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 15 = x | A number is transmitted, please consult the table for the meaning of the number 69 of the telegram "Monitoring of the active display". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 14 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 13 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 12 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 11 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 10 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 9 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 8 = x | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Pickup | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 7 = 1 | Firing speed reached f > parameter | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 6 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 5 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 4 = 1 | Speed existing without pickup (pickup = OFF): f > 15 Hz with pickup (pickup = ON): f > 5 Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 3 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 2 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

UGNEXPO Exponent Generator voltage
IGNEXPO Exponent Generator current
PGNEXPO Exponent Generator power
PGNWD Step conversion factor → kW

USSEXPO Exponent Busbar voltage
UNTEXPO Exponent Mains voltage
PNTEXPO Exponent Mains power

Meaning of the number 69 of the telegram " Currently active display message":

| Number | Meaning |
|--------|--|
| 0 | GCB synchronization |
| 1 | MCB synchronization |
| 2 | GCB dead bus start |
| 3 | MCB dead bus start |
| 4 | Crank |
| 5 | Start pause |
| 6 | Cool down 000s (000s: the remaining time is displayed) |
| 7 | Engine stop! |
| 8 | Pre-glow |
| 9 | Purging operation |
| 10 | Initial state |
| 11 | Auxiliary prerun |
| 12 | Auxiliary post-run |
| 13 | Mains settling 000s (000s: the remaining time is displayed) |
| 14 | Lambda initial state |
| 15 | Sprinkler coasting |
| 16 | Ignition |
| 17 | --Internal-- |
| 18 | --Internal-- |
| 19 | --Internal-- |
| 20 | --Internal-- |
| 21 | --Internal-- |
| 22 | --Internal-- |
| 23 | --Internal-- |
| 24 | Phase rotation incorrect! |
| 25 | Start without closing GCB and simultaneous emergency power |
| 26 | Start without closing GCB |
| 27 | Sprinkler operation (critical mode) and simultaneous emergency power |
| 28 | Sprinkler operation (critical mode) |
| 29 | Emergency power |
| 30 | TEST |
| 31 | Load TEST |
| 32 | --Internal-- |
| 33 | --Internal-- |
| 34 | --Internal-- |
| 35 | --Internal-- |
| 36 | --Internal-- |
| 37 | --Internal-- |
| 38 | --Internal-- |
| 39 | --Internal-- |
| 40 | --Internal-- |
| 41 | --Internal-- |
| 42 | --Internal-- |
| 43 | --Internal-- |
| 44 | Idle run |
| 45 | --Internal-- |
| 46 | --Internal-- |
| 47 | Power reduction |
| ... | |
| 255 | No message on the display (basic screen) |

Receiving Telegram



A Gateway GW 4 may be used for remote starting the GCP. The following three data words can be received by the GCP. Refer to the GW 4 manual on how to control several GCP control units.

| MUX | No. | Contents (words) | Unit | Note | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|-----------------------------|--|------|--|------------|--------------|------------|--------------|------------|--------------|------------|--------------|------------|--------------|------------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|--------------|-----------|------------------------|-----------|------------|-----------|------------|-----------|-----------------------------|-----------|--------------|
| 1/1 | 1 | Set point value for the generator real power | kW | with control argument; see below | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1/2 | 2 | Set point value for the generator power factor cos φ | | Example: FF9EH cos φ = c 0.98 (capacitive/lagging) FF9DH cos φ = c 0.99 (capacitive/lagging) 0064H cos φ = 1.00 0063H cos φ = i 0.99 (inductive/leading) 0062H cos φ = i 0.98 (inductive/leading) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1/3 | 3 | Control word | | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Bit 15 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 14 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 13 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 12 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 11 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 10 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 9 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 8 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 7 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 6 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 5 = 1</td><td>--Internal--</td></tr> <tr><td>Bit 4 = 1</td><td>Remote acknowledgement</td></tr> <tr><td>Bit 3 = 1</td><td>Always "0"</td></tr> <tr><td>Bit 2 = 1</td><td>Always "0"</td></tr> <tr><td>Bit 1 = 1</td><td>Remote stop (high priority)</td></tr> <tr><td>Bit 0 = 1</td><td>Remote start</td></tr> </table> | Bit 15 = 1 | --Internal-- | Bit 14 = 1 | --Internal-- | Bit 13 = 1 | --Internal-- | Bit 12 = 1 | --Internal-- | Bit 11 = 1 | --Internal-- | Bit 10 = 1 | --Internal-- | Bit 9 = 1 | --Internal-- | Bit 8 = 1 | --Internal-- | Bit 7 = 1 | --Internal-- | Bit 6 = 1 | --Internal-- | Bit 5 = 1 | --Internal-- | Bit 4 = 1 | Remote acknowledgement | Bit 3 = 1 | Always "0" | Bit 2 = 1 | Always "0" | Bit 1 = 1 | Remote stop (high priority) | Bit 0 = 1 | Remote start |
| Bit 15 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 14 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 13 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 12 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 11 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 10 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 9 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 8 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 7 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 6 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 5 = 1 | --Internal-- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 4 = 1 | Remote acknowledgement | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 3 = 1 | Always "0" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 2 = 1 | Always "0" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 1 = 1 | Remote stop (high priority) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit 0 = 1 | Remote start | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

CAN Bus Structure



Transmission Telegram

The data of the following table can be handled by a Gateway GW 4 or a PLC and can be transferred to other communication busses. A GCP is sending the data via circular CAN messages.

The transmitting rate of this communication is 125 kBaud.

The CAN ID, on which the GCP is sending, is calculated as follows:

CAN ID = 800 + item/generator number (or 320 + ID/generator number)

(The ID number, Parameter 4, is adjustable and influences the CAN ID directly on which the item sends the visualization message).

A visualization message, which is sent out of a GCP, has 8 Bytes and is assembled as follows:

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|------------|--------------------------|-------------------------|--------------------------|-------------------------|--------------------------|-------------------------|
| H'DD | MUX number | data word 1 High-Byte | data word 1 Low Byte | data word 2 High-Byte | data word 2 Low Byte | data word 3 High-Byte | data word 3 Low Byte |

In a visualization message the byte 0 is always used to show the hexadecimal value DD. This one defines the message as a visualization message. As the complete transmission telegram of the GCP includes more than three words byte 1 sends an additional MUX number starting with 0. Therefore it is theoretically possible to send $(256 \times 3 = 768)$ words via the CAN ID. The whole telegram is built up as follows:

Line 1: MUX number 0, word 1
 Line 2: MUX number 0, word 2
 Line 3: MUX number 0, word 3
 Line 4: MUX number 1, word 1
 Line 5: MUX number 1, word 2
 Line 6: MUX number 1, word 3
 .
 .
 Line (n): MUX number (n-1/3), word 1
 Line (n+1): MUX number (n-1/2), word 2
 Line (n+2): MUX number (n-1/1), word 3

n depends on the total length of the item special telegram and cannot be larger than H'FF.

Current Direction Message

The current direction can be recognized via the prefix of the power. A positive transmitted value indicates exported power (power supplied to the mains, supply) and a negative transmitted value indicates imported power (power supplied by the mains, consumption).

Power Set Point Value Message

The following power values may be pre-specified: constant/baseload power (C power), outgoing/export power (E power) and incoming/import power (I power). The real power set point value is transmitted in binary form using bits 0-13. The control argument must be transmitted in the basis of bits 14 and 15. In this case, the following coding applies:

| Control argument | Bit 15 | Bit 14 |
|------------------|--------|--------|
| C power | 0 | 1 |
| E power | 0 | 0 |
| I power | 1 | 1 |

Example:

C power of 150 kW is to be compensated. The value transmitted is then:
 01/00 0000 1001 0110 B ⇒ 4096 H

E power of 300 kW is to be compensated. The value transmitted is then:
 00/00 0001 0010 1100 B ⇒ 012C H

I power of 600 kW is to be compensated. Negative power is transmitted. The value transmitted is then:
 11/11 1101 1010 1000 B ⇒ FDA8 H

CAN Bus Address Requirements

The IDs given in the following are reserved for the data exchange between GCPs and LS4s. If third-party devices are connected to the bus, third-party device addresses must not conflicts with these addresses.

| | CAN-ID in | | |
|--|-------------|-------------|--------------------------|
| | [hex] | [decimal] | |
| GCP sends | | | |
| Distribution message to other GCPs | 180 + GENNO | 384 + GENNO | |
| Control message to LS4 (the GCP with the lowest ID) | 311 | 785 | |
| Visualization | 320 + GENNO | 800 + GENNO | |
| GCP receives | | | |
| Distribution message from other GCP | 180 + GENNO | 384 + GENNO | |
| Control message from an LS4 | 300 + GENNO | 768 + GENNO | |
| Configuration messages from a higher control | 33F | 831 | |
| LS4 sends | | | |
| Logic message to other LS4s | 180 + LS4NO | 384 + LS4NO | |
| Control message to GCP (the LS4 with the lowest ID) | 300 + GENNO | 768 + GENNO | |
| LS4 receives | | | |
| Logic message from other LS4 | 180 + LS4NO | 384 + LS4NO | |
| Control message from a GCP | 311 | 785 | |
| Configuration messages and Configuration messages from a higher control | 33F | 831 | |
| | [hex] | [decimal] | |
| GENNO = | 1 to E | 1 to 14 | GENNO = Generator number |
| LS4NO = | 11 to 1E | 17 to 30 | LS4NO = LS4 number |

Appendix D. List of Parameters

Unit number P/N _____ Rev _____

Version GCP-30 _____

Project _____

Serial number S/N _____ Date _____

| Access | Parameter | Setting range | Default value | Customer setting |
|--|------------------------------|---|---------------|--|
| | Software version | - | V x.xxxx | - |
| | Enter code | 0 to 9,999 | XXXX | |
| | Direct para. | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Generator number | 1 to 14 | 1 | |
| | Language | first/second | first | <input type="checkbox"/> f <input type="checkbox"/> s |
| | Check event list | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N |
| GENERATOR AND MAINS ENVIRONMENT CONFIGURATION | | | | |
| | Configure measuring | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Generator freq. f set | 40.0 to 70.0 Hz | 50.0 Hz | |
| | Gen.volt.transf. secondary | 50 to 125/50 to 480 V | 400 V | |
| | Gen.volt.transf. primary | 0.05 to 65.0 kV | 0.4 kV | |
| | Bus.volt.transf. secondary | 50 to 125/50 to 480 V | 400 V | |
| | Bus.volt.transf. primary | 0.05 to 65.0 kV | 0.4 kV | |
| | mains volt.transf. secondary | 50 to 125/50 to 480 V | 400 V | |
| | mains volt.transf. primary | 0.05 to 65.0 kV | 0.4 kV | |
| | Gen.voltage U set | 50 to 125/50 to 530 V | 100/400 V | |
| | Rated voltage in system | 50 to 125/50 to 480 V | 100/400 V | |
| | Volt.meas./mon. | Ph-neut/Ph-Ph [4/3] Ph-Ph/Ph-Ph [3/3] Ph-neut/Ph-neut [4/4] | Ph-neut/Ph-Ph | <input type="checkbox"/> 4/3 <input type="checkbox"/> 3/3 <input type="checkbox"/> 4/4 |
| | Current transf. generator | 10 to 7,000/{X} A | 500/{X} A | |
| | Power measuring gen. | singlephase [1] threephase [3] | threephase | <input type="checkbox"/> 1 <input type="checkbox"/> 3 |
| | Rated power generator | 5 to 9,999 kW | 200 kW | |
| | Rated current generator | 10 to 7,000 A | 300 A | |
| | Current transf. mains | 5 to 7,000/{X} A | 500 {X} A | |
| XPD, XPQ | Analog in Pmains | OFF/T{x} | OFF | |
| XPD, XPQ | Analog in Pmains | 0 to 20 mA 4 to 20 mA | 4 to 20 mA | <input type="checkbox"/> 0-20 mA <input type="checkbox"/> 4-20 mA |
| XPD, XPQ | Analog in Pmains 0% | 0 to +/-9,990/0 to +/-6,900 kW | -200 kW | |
| XPD, XPQ | Analog in Pmains 100% | 0 to +/-9,990/0 to +/-6,900 kW | 200 kW | |
| GCP-31 | LS 4 mode | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| XPD, XPQ | Rated power in system | 0 to 16,000 kW | 1,600 kW | |
| XPD, XPQ | Temperature in | Celsius [°C] Fahrenheit [°F] | Celsius [°C] | <input type="checkbox"/> °C <input type="checkbox"/> °F |
| | Pressure in | bar psi | bar | <input type="checkbox"/> bar <input type="checkbox"/> psi |
| | Define level 1 code | 0 to 9999 | 0001 | |
| | Define level 2 code | 0 to 9999 | 0002 | |

| Access | Parameter | Setting range | Default value | Customer setting |
|---------------------------------|-----------------------------|-----------------------------|---------------|---|
| CONTROLLER CONFIGURATION | | | | |
| | Configure controller | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Power controller Pset1 | C/I/E 0 to 9,999 kW | C 50 kW | |
| | Power controller Pset2 | C/I/E 0 to 9,999 kW | C 80 kW | |
| BPQ, XPQ | Initial state Frequency | 0 to 100 % | 50 % | |
| | Freq.controller | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | f-contr. active at: | 0.0 to 70.0 Hz | 40.0 Hz | |
| | Delay time for f-contr. | 0 to 999 s | 5 s | |
| BPQ, XPQ | Freq.controller ramp | 1 to 50 Hz/s | 10 Hz/s | |
| | F/P contr.type | Three-step Analog PWM | Analog | <input type="checkbox"/> Three-st. <input type="checkbox"/> Three-st. <input type="checkbox"/> Analog <input type="checkbox"/> Analog <input type="checkbox"/> PWM <input type="checkbox"/> PWM |
| | Freq.controller deadband | 0.02 to 1.00 Hz | 0.03 Hz | |
| | Freq.controller time pulse> | 10 to 250 ms | 80 ms | |
| | Freq.controller gain Kp | 0.1 to 99.9 | 20.0 | |
| BPQ, XPQ | F/P contr.output | Refer to Parameter 46 | +/-10 V | |
| BPQ, XPQ | Level PWM | 3.0 to 10.0 V | 3.0 V | |
| BPQ, XPQ | Stepper sign.frq (min.) | 0 to 100 % | 0 % | |
| BPQ, XPQ | Stepper sign.frq (max.) | 0 to 100 % | 100 % | |
| BPQ, XPQ | Freq.controller gain Kpr | 1 to 240 | 20 | |
| BPQ, XPQ | Freq.controller reset Tn | 0.0 to 60.0 s | 1.0 s | |
| BPQ, XPQ | Freq.controller derivat.Tv | 0.00 to 6.00 s | 0.00 s | |
| BPQ, XPQ | Starting point voltage | 0 to 100 % | 50 % | |
| | Volt.controller | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Initial state U control. | 12.0 to 100.0 % | 75 % | |
| | Delayed. Start U contr. | 0 to 999 s | 3 s | |
| BPQ, XPQ | V/Q contr.type | Three-step Analog | Analog | <input type="checkbox"/> Three-st. <input type="checkbox"/> Three-st. <input type="checkbox"/> Analog <input type="checkbox"/> Analog |
| | Volt.controller dead band | 0.1 to 15.0 % | 0.9 % | |
| | Volt.controller time pulse> | 20 to 250 ms | 80 ms | |
| | Volt.controller gain Kp | 0.1 to 99.9 | 20.0 | |
| BPQ, XPQ | V/Q contr.output | Refer to Parameter 61 | +/-10 V | |
| BPQ, XPQ | Stepper sign.vol (min.) | 0 to 100 % | 0 % | |
| BPQ, XPQ | Stepper sign.vol (max.) | 0 to 100 % | 100 % | |
| BPQ, XPQ | Volt.controller gain Kpr | 1 to 240 | 20 | |
| BPQ, XPQ | Volt.controller reset Tn | 0.0 to 60.0 s | 1.0 s | |
| BPQ, XPQ | Volt.controller derivat.Tv | 0.00 to 6.00 s | 0.00 s | |

| Access | Parameter | Setting range | Default value | Customer setting |
|--------------------------------------|-----------------------------|--------------------------|---------------|---|
| CONTROLLER CONFIGURATION | | | | |
| | Pow.fact.contr. | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Pow.fact.contr. setpoint | i0.70 to 1.00 to k0.70 | 1.00 | |
| | Pow.fact.contr. dead band | 0.5 to 25.0 % | 0.5 % | |
| BPQ, XPQ | Pow.fact.contr. gain Kp | 0.1 to 99.9 | 20.0 | |
| BPQ, XPQ | Pow.fact.contr. gain Kpr | 1 to 240 | 20 | |
| BPQ, XPQ | Pow.fact.contr. reset Tn | 0.0 to 60.0 s | 1.0 s | |
| | Pow.fact.contr. derivat.Tv | 0.0 to 6.0 s | 0.0 s | |
| | Power controller | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | power controller ramp | 0.1 to 100.0 %/s | 20 %/s | |
| | Power limit P max. | 10 to 120 % | 100 % | |
| | Power limit P min. | 0 to 50 % | 0 % | |
| XPD, XPQ | Power setpoint external | OFF/ T1 / T2 / T3 | OFF | <input type="checkbox"/> OFF <input type="checkbox"/> T1 <input type="checkbox"/> T2 <input type="checkbox"/> T3 |
| XPD, XPQ | Analog input | 0 to 20 mA 4 to 20 mA | 4 to 20 mA | <input type="checkbox"/> 0-20 mA <input type="checkbox"/> 4-20 mA |
| XPD, XPQ | Ext.setpoint 0mA | C/I/E 0 to 9,999 kW | C 0 kW | |
| XPD, XPQ | Ext.setpoint 20mA | C/I/E 0 to 9,999 kW | C 200 kW | |
| | Power controller dead band | 0.1 to 25.0 % | 0.5 % | |
| | Power controller gain Kp | 0.1 to 99.9 | 20.0 | |
| XPD, XPQ | Powercontr. dead band ratio | 1.0 to 9.9 | 2.0 | |
| XPD, XPQ | Power controller gain Kpr | 1 to 240 | 20 | |
| XPD, XPQ | Power controller reset Tn | 0.0 to 60.0 s | 1.0 s | |
| XPD, XPQ | Power controller derivat.Tv | 0.0 to 6.0 s | 0.0 s | |
| | Warm up load derivat.Tv | 5 to 110 % | 15 % | |
| | Warm up load time | 0 to 600 s | 0 s | |
| | Active power load-share | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Act. load share factor | 10 to 99 % | 50 % | |
| | Reactive power load share | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | React.load share factor | 10 to 99% | 50 % | |
| LOAD MANAGEMENT CONFIGURATION | | | | |
| | Configure automatic | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Loadd.start/stop at ter.3 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Loadd.start/stop at ter.5 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Minimum load generator | 0 to 6,900 kW | 15 kW | |
| | Add-on delay mains oper. | 0 to 999 s | 1 s | |
| | Shed-off delay mains oper. | 0 to 999 s | 3 s | |
| | Hysteresis add-. on/off op. | 0 to 9,999 kW | 5 kW | |
| | Reserve power mains op. | 0 to 9,999 kW | 10 kW | |
| | Priority of generators | 0 to 14 | 0 | |
| | Reserve power isol.op. | 0 to 9,999 kW | 20 kW | |
| | Add-on delay isol.op. | 0 to 999 s | 1 s | |
| | Shed-off delay isol.op. | 0 to 999 s | 4 s | |
| GCP-31 | Mains error - stop eng. | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Control via COM X1X5 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Supervision COM X1X5 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Ackn. F2,F3 via COM interf | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off |

| Access | Parameter | Setting range | Default value | Customer setting |
|--------|-----------|---------------|---------------|------------------|
|--------|-----------|---------------|---------------|------------------|

| BREAKER CONFIGURATION | | | | |
|--------------------------------------|----------------------------|--|------------|---|
| | Configure breaker | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| L | Breaker logic: | EXTERNAL [EXT] PARALLEL [PAR] OPEN TRANSIT [OPEN] CLOSED TRANSIT [CLOSE] INTERCHANGE [CHANG] | PARALLEL | <input type="checkbox"/> EXT <input type="checkbox"/> EXT <input type="checkbox"/> PAR <input type="checkbox"/> PAR <input type="checkbox"/> OPEN <input type="checkbox"/> OPEN <input type="checkbox"/> CLOSE <input type="checkbox"/> CLOSE <input type="checkbox"/> CHANG <input type="checkbox"/> CHANG |
| | Add-on/off ramp max.time | 0 to 999 s | 20 s | |
| | Open GCB with F2 max.time | 0 to 999 s | 10 s | |
| | GCB close.relay | Impulse [I] Constant [C] | Constant | <input type="checkbox"/> I <input type="checkbox"/> I <input type="checkbox"/> C <input type="checkbox"/> D |
| | GCB open relay | NO-contact [NO] NC-contact [NC] | NO-contact | <input type="checkbox"/> NO <input type="checkbox"/> NO <input type="checkbox"/> NC <input type="checkbox"/> NC |
| | Synchronize df max | 0.02 to 0.49 Hz | 0.20 Hz | |
| | Synchronize df min | 0.0 to 0.49 Hz | -0.10 Hz | |
| | Synchronize dV max | 1.0 to 20.0 % | 2.0 % | |
| | Synchronize time pulse> | 0.02 to 0.26 s | 0.24 s | |
| | Closing time GCB | 40 to 300 ms | 80 ms | |
| GCP-32 | Closing time MCB | 40 to 300 ms | 80 ms | |
| | Automat.breaker deblocking | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Sync.time contr. | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Sync.time contr. delay | 10 to 999 s | 180 s | |
| | GCB dead bus op. | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | GCB dead bus op. df max | 0.05 to 5.00 Hz | 2.0 Hz | |
| | GCB dead bus op. dV max. | 1.0 to 15.0 % | 10.0 % | |
| | GCB dead bus op max.time | 0 to 999 s | 30 s | |
| GCP-32 | MCB dead bus op. | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Supervision GCB | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| GCP-32 | Supervision MCB | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| GCP-31 | Mains decoupling via | GCB [GCB] GCB->EXT [GCB>EX] EXT [EXT] EXT->GCB [EX>GCB] | GCB | <input type="checkbox"/> GCB <input type="checkbox"/> GCB <input type="checkbox"/> GCB>EX <input type="checkbox"/> GCB>EX <input type="checkbox"/> EXT <input type="checkbox"/> EXT <input type="checkbox"/> EX>GCB <input type="checkbox"/> EX>GCB |
| GCP-32 | Mains decoupling via | GCB [GCB] GCB->MCB [GCB>MC] MCB [MCB] MCB->GCB [MC>GCB] | GCB | <input type="checkbox"/> GCB <input type="checkbox"/> GCB <input type="checkbox"/> GCB>MC <input type="checkbox"/> GCB>MC <input type="checkbox"/> MCB <input type="checkbox"/> MCB <input type="checkbox"/> MC>GCB <input type="checkbox"/> MC>GCB |
| GCP-32 | Mains decoupling -> after | 0.10 to 5.00 s | 0.14 s | |
| L | Switch MCB in STOP mode | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| EMERGENCY POWER CONFIGURATION | | | | |
| GCP-32 | Configure emergency | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| GCP-31: XPD, XPQ | Emergency power | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| GCP-32 GCP-31: XPD, XPQ | Emergency power start del. | 0.5 to 99.9 s | 3.0 s | |

| Access | Parameter | Setting range | Default value | Customer setting |
|---------------------------------|-----------------------------|----------------------------------|---------------|---|
| MONITORING CONFIGURATION | | | | |
| | Configure monitoring | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Gen.power monit. | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.power monit. resp.val1 | 0 to 9,999 kW | 100 kW | |
| | Gen.power monit. hyst.lv1 | 0 to 999 kW | 10 kW | |
| | Gen.power monit. delay lv1 | 0 to 650 s | 1 s | |
| | Gen.power monit. resp.val2 | 0 to 9,999 kW | 120 kW | |
| | Gen.power monit. hyst.lv2 | 0 to 999 kW | 10 kW | |
| | Gen.power monit. delay lv2 | 0 to 650 s | 1 s | |
| | Mains power mon. | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Mains power mon. res.val. | I/E 0 to 9,999 kW | E100 kW | |
| | Mains power mon. hysteresis | 0 to 999 kW | 10 kW | |
| | Mains power mon. delay | 0 to 650 s | 1 s | |
| | Overload monit. | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.overload MOP resp.value | 80 to 150 % | 120 % | |
| | Gen.overload MOP delay | 0 to 99 s | 1 s | |
| | Gen.overload IOP resp.value | 80 to 150 % | 105 % | |
| | Gen.overload IOP delay | 0 to 99 s | 1 s | |
| | Rev./red.power monitoring | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Rev./red.power resp.value | -99 to +99 % | -10 % | |
| | Rev./red.power delay | 0.0 to 9.9 s | 1.0 s | |
| | Load unbalanced | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Load unbalanced max. | 0 to 100 % | 30 % | |
| | Load unbalanced delay | 0.02 to 9.98 s | 1.00 s | |
| | Gen.overcurrent monitoring | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.overcurrent limit 1 | 0 to 300 % | 110 % | |
| | Gen.overcurrent delay 1 | 0.02 to 9.98 s | 1.00 s | |
| | Gen.overcurrent limit 2 | 0 to 300 % | 120 % | |
| | Gen.overcurrent delay 2 | 0.02 to 9.98 s | 0.04 s | |
| | Gen.overcurrent Cool down | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.frequency- monitoring | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.overfreq. f > | 50.0 to 140.0 % | 110.0 % | |
| | Gen.overfreq. delay | 0.02 to 9.98 s | 0.30 s | |
| | Gen.underfreq. f < | 50.0 to 140.0 % | 90.0 % | |
| | Gen.underfreq. delay | 0.02 to 9.98 s | 0.30 s | |
| | Engine overspeed > | 0 to 9,999 rpm | 1,900 rpm | |
| | Gen.voltage monitoring | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Gen.overvoltage U > | 20.0 to 150.0 % | 110.0 % | |
| | Gen.overvoltage delay | 0.02 to 9.98 s | 0.30 s | |
| | Gen.undervoltage U < | 20.0 to 150.0 % | 90.0 % | |
| | Gen.undervoltage delay | 0.2 to 9.98 s | 0.30 s | |
| | Mains frequency monitoring | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Mains overfreq. f > | 80.0 to 140.0 % | 110.0 % | |
| | Mains overfreq. delay | 0.02 to 9.98 s | 0.06 s | |
| | Mains underfreq. f < | 80.0 to 140.0 % | 90.0 % | |
| | Mains underfreq. delay | 0.02 to 9.98 s | 0.06 s | |
| | Mains voltage monitoring | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Mains overvolt. U > | 20.0 to 150.0 % | 110.0 % | |
| | Mains overvolt. delay | 0.02 to 9.98 s | 0.06 s | |
| | Mains undervolt. U < | 20.0 to 150.0 % | 90.0 % | |
| | Mains undervolt. Hysteresis | 0.0 to 50.0 % | 0.8 % | |
| | Mains undervolt. delay | 0.02 to 9.98 s | 0.06 s | |
| | Phase shift monitoring | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Monitoring | one-phase [1] three-phase [3] | three-phase | <input type="checkbox"/> 1 <input type="checkbox"/> 3 <input type="checkbox"/> 1 <input type="checkbox"/> 3 |
| | Phase shift one-phase | 3 to 30 ° | 12 ° | |
| | Phase shift three-phase | 3 to 30 ° | 8 ° | |
| | Mains settling time | 0- to 999 s | 10 s | |
| | Batt.undervolt. U < | 9.5 to 30.0 V | 10.0 V | |
| | Batt.undervolt. delay | 0 to 99 s | 10 s | |
| | Horn self reset | 1 to 9,999 s | 180 s | |

| Access | Parameter | Setting range | Default value | Customer setting |
|--------|-----------|---------------|---------------|------------------|
|--------|-----------|---------------|---------------|------------------|

| DISCRETE INPUTS CONFIGURATION | | | | |
|-------------------------------|----------------------------|--|---------------|--|
| | Configure dig.inputs | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Dig.input 1234 function | E/D | DDDD | |
| | Dig.input 1234 delay | 0 to 9 | 0000 | |
| | Delayed by 1234 eng.speed | Y/N | NNNN | |
| | Dig.input 1234 error class | 0 to 3 | 3210 | |
| | Dig.input 5678 function | E/D | DDDD | |
| | Dig.input 5678 delay | 0 to 9 | 0000 | |
| | Delayed by 5678 eng.speed | Y/N | NNNN | |
| | Dig.input 5678 error class | 0 to 3 | 3111 | |
| | Dig.input 9ABC function | E/D | DDDD | |
| | Dig.input 9ABC delay | 0 to 9 | 0000 | |
| | Delayed by 9ABC eng.speed | Y/N | NNNN | |
| | Dig.input 9ABC error class | 0 to 3 | 1111 | |
| | Dig.input DEFG function | E/D | DDDD | |
| | Dig.input DEFG delay | 0 to 9 | 0000 | |
| | Delayed by DEFG eng.speed | Y/N | NNNN | |
| | Dig.input DEFG error class | 0 to 3 | 1111 | |
| L | Errortxt.term.34 | freely configurable | EMERGENCY OFF | |
| L | Errortxt.term.35 | freely configurable | terminal 35 | |
| L | Errortxt.term.36 | freely configurable | terminal 36 | |
| L | Errortxt.term.61 | freely configurable | terminal 61 | |
| L | Errortxt.term.62 | freely configurable | terminal 62 | |
| L | Firing speed by Term. 62 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Errortxt.term.63 | freely configurable | terminal 63 | |
| L | Op.mode blocked by Ter.63 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Errortxt.term.64 | freely configurable | terminal 64 | |
| L | Breaker logic by Term64 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Breaker logic: | EXTERNAL [EXT] PARALLEL [PAR] OPEN TRANSIT [OPEN] CLOSED TRANSIT [CLOSE] INTERCHANGE [INCHG] | EXTERNAL | <input type="checkbox"/> EXT <input type="checkbox"/> EXT <input type="checkbox"/> PAR <input type="checkbox"/> PAR <input type="checkbox"/> OPEN <input type="checkbox"/> OPEN <input type="checkbox"/> CLOSE <input type="checkbox"/> CLOSE <input type="checkbox"/> INCHG <input type="checkbox"/> INCHG |
| L | Errortxt.term.65 | freely configurable | terminal 65 | |
| L | Errortxt.term.66 | freely configurable | terminal 66 | |
| L | Errortxt.term.67 | freely configurable | terminal 67 | |
| | Close GCB asap by Ter.67 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Errortxt.term.68 | freely configurable | terminal 68 | |
| GCP-32 GCP-31: XPD, XPQ | Emergency OFF by Ter.68 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Errortxt.term.69 | freely configurable | terminal 69 | |
| L | Errortxt.term.70 | freely configurable | terminal 70 | |
| L | Idle mode by Term.70 | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Errortxt.term.71 | freely configurable | terminal 71 | |
| L | Errortxt.term.72 | freely configurable | terminal 72 | |
| L | Errortxt.term.73 | freely configurable | terminal 73 | |
| | Function term.6 | Sprinkler operation [SO] Engine enabled [EE] ext.acknowledgment [ExA] STOP mode [SM] Engine blocked [EB] Start without CB [SwB] | ExA | <input type="checkbox"/> SO <input type="checkbox"/> SO <input type="checkbox"/> EE <input type="checkbox"/> EE <input type="checkbox"/> ExA <input type="checkbox"/> ExA <input type="checkbox"/> SM <input type="checkbox"/> SM <input type="checkbox"/> EB <input type="checkbox"/> EB <input type="checkbox"/> SwB <input type="checkbox"/> SwB |
| | Start withno GCB cool down | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| | Sprinkler shutd. F1 active | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |

| Access | Parameter | Setting range | Default value | Customer setting |
|------------------------------------|--|--|---|--|
| ANALOG INPUTS CONFIGURATION | | | | |
| L | Configure analg.inp. | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Analog input 1 scalable | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Name and unit | freely configurable | Analog 1 | |
| | Analog input 1 | 0 to 20 mA 4-20 mA | 4 to 20 mA | <input type="checkbox"/> 0-20 mA <input type="checkbox"/> 4-20 mA |
| | Value at 0% | -9999 to +9999 | 0 | |
| | Value at 100% | -9999 to +9999 | 100 | |
| | Limit warning value | -9999 to +9999 | 80 | |
| | Limit shutdown value | -9999 to +9999 | 90 | |
| | Delay limit 1/2 | 0 to 650 s | 1 s | |
| | Monitoring for | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low |
| | Analog input 2 scalable | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Name and unit | freely configurable | Analog 2 | |
| | Analog input 2 | 0 to 20 mA 4 to 20 mA | 4 to 20 mA | <input type="checkbox"/> 0-20 mA <input type="checkbox"/> 4-20 mA |
| | Value at 0% | -9999 to +9999 | 0 | |
| Value at 100% | -9999 to +9999 | 100 | | |
| Limit warning value | -9999 to +9999 | 80 | | |
| Limit shutdown value | -9999 to +9999 | 90 | | |
| Delay limit 1/2 | 0 to 650 s | 1 s | | |
| Monitoring for | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low | |
| L | Analog input 3 scalable | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Name and unit | freely configurable | Analog 3 | |
| | Analog input 3 | 0 to 20 mA 4 to 20 mA | 4 to 20 mA | <input type="checkbox"/> 0-20 mA <input type="checkbox"/> 4-20 mA |
| | Value at 0% | -9999 to +9999 | 0 | |
| | Value at 100% | -9999 to +9999 | 100 | |
| | Limit warning value | -9999 to +9999 | 80 | |
| | Limit shutdown value | -9999 to +9999 | 90 | |
| | Delay limit 1/2 | 0 to 650 s | 1 s | |
| | Monitoring for | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low |
| | Temperature 4 Pt100 | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | ***name*** 000°C | freely configurable | Analog 4 | |
| | Limit warning | 0 to 200 °C | 80 °C | |
| | Limit shutdown | 0 to 200 °C | 90 °C | |
| | Delay limit 1/2 | 0 to 650 s | 1 s | |
| Monitoring for | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low | |
| L | Temperature 5 Pt100 | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off |
| | ***name*** 000°C | freely configurable | Analog 5 | |
| | Limit warning | 0 to 200 °C | 80 °C | |
| | Limit shutdown | 0 to 200 °C | 90 °C | |
| | Delay limit 1/2 | 0 to 650 s | 1 s | |
| | Monitoring for | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low |

| Access | Parameter | Setting range | Default value | Customer setting | | |
|------------------------------------|-------------------|--|--|---|---|---|
| ANALOG INPUTS CONFIGURATION | | | | | | |
| L | Analog input 6 | VDO | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Name and unit | | freely configurable | Analog 6 | | |
| | Analog input 6 | VDO | 0 to 5 bar 0 to 10 bar | 0 to 5 bar | <input type="checkbox"/> 0-5 bar <input type="checkbox"/> 0-10 bar | <input type="checkbox"/> 0-5 bar <input type="checkbox"/> 0-10 bar |
| | Limit warning | value | 0.0 to 10.0 bar | 2.0 bar | | |
| | Limit shutdown | value | 0.0 to 10.0 bar | 1.0 bar | | |
| | Delay | limit 1/2 | 0 to 650 s | 1 s | | |
| | Monitoring for | | High limit mon. [high] low limit mon. [low] | low limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low | <input type="checkbox"/> high <input type="checkbox"/> low |
| | Analog input 7 | VDO | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off | <input type="checkbox"/> on <input type="checkbox"/> off |
| | Name and unit | | freely configurable | Analog 7 | | |
| | Limit warning | value | 40 to 120 °C | 80 °C | | |
| | Limit shutdown | value | 40 to 120 °C | 90 °C | | |
| | Delay | limit 1/2 | 0 to 650 s | 1 s | | |
| Monitoring for | | High limit mon. [high] low limit mon. [low] | High limit mon. | <input type="checkbox"/> high <input type="checkbox"/> low | <input type="checkbox"/> high <input type="checkbox"/> low | |
| Ana.in 12345678 | SV.del. | | Y/N | NNNNNYYN | | |
| Ana.in 12345678 | control | | Y/N | NNNNNNNN | | |
| OUTPUT CONFIGURATION | | | | | | |
| | Configure outputs | | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N | <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Analg.out.120121 | Parameter | 0 to 22 | 1 | | |
| | Analg.out.120121 | 0-00 mA | OFF 0 to 20 mA 4 to 20 mA | 0 to 20 mA | <input type="checkbox"/> OFF <input type="checkbox"/> 0-20mA <input type="checkbox"/> 4-20 mA | <input type="checkbox"/> OFF <input type="checkbox"/> 0-20mA <input type="checkbox"/> 4-20 mA |
| | Analg.out.120121 | 0% | 0 to 9,990 | 0 | | |
| | Analg.out.120121 | 100% | 0 to 9,990 | 200 | | |
| | Analg.out.122123 | Parameter | 0 to 22 | 1 | | |
| | Analg.out.122123 | 0-00 mA | OFF 0 to 20 mA 4 to 20 mA | 0 to 20 mA | <input type="checkbox"/> OFF <input type="checkbox"/> 0-20mA <input type="checkbox"/> 4-20 mA | <input type="checkbox"/> OFF <input type="checkbox"/> 0-20mA <input type="checkbox"/> 4-20 mA |
| | Analg.out.122123 | 0% | 0 to 9,990 | 0 | | |
| | Analg.out.122123 | 100% | 0 to 9,990 | 200 | | |
| | Assignm.relay 1 | | refer to page 128 for more info | 1 | | |
| | Assignm.relay 2 | | refer to page 128 for more info | 2 | | |
| | Assignm.relay 3 | | refer to page 128 for more info | 3 | | |
| | Assignm.relay 4 | | refer to page 128 for more info | 4 | | |
| | Assignm.relay 5 | | refer to page 128 for more info | 5 | | |
| | Assignm.relay 6 | | refer to page 128 for more info | 84 | | |
| | Assignm.relay 7 | | refer to page 128 for more info | 85 | | |

| Access | Parameter | Setting range | Default value | Customer setting |
|------------------------------|--------------------------------|---|---------------|---|
| ENGINE CONFIGURATION | | | | |
| | Configure engine | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Aux.services prerun | 0 to 999 s | 0 s | |
| | Aux.services postrun | 0 to 999 s | 0 s | |
| | Start-stop-logic for | DIESEL GAS EXTERNAL [EXT] | DIESEL | <input type="checkbox"/> DIESEL <input type="checkbox"/> GAS <input type="checkbox"/> EXT <input type="checkbox"/> DIESEL <input type="checkbox"/> GAS <input type="checkbox"/> EXT |
| | Min.speed for ignit. | 0 to 999 rpm | 100 rpm | |
| | Ignition delay | 0 to 99 s | 3 s | |
| | Preglow time | 0 to 99 s | 3 s | |
| | Gasvalve delay | 0 to 99 s | 5 s | |
| | Max. attempts to start | 1 to 6 | 3 | |
| | Starter time | 2 to 99 s | 10 s | |
| | Start pause time | 1 to 99 s | 8 s | |
| L | f lower before start | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | time f lower bef.start | 0 to 999 s | 5 s | |
| L | f lower before start | ON/OFF | OFF | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | time f lower bef.start | 0 to 999 s | 5 s | |
| | Fuel relay logic | Open to stop [OPEN] Close to stop [STOP] | Open to stop | <input type="checkbox"/> OPEN <input type="checkbox"/> STOP <input type="checkbox"/> OPEN <input type="checkbox"/> STOP |
| | Cool down time | 0 to 999 s | 15 s | |
| | Delayed engine monitoring | 1 to 99 s | 8 s | |
| | Firing speed reached f> | 5 to 70 Hz | 15 Hz | |
| | Speed detected V L1-L2 > 00.0% | 5.0 to 25.0 % | 5.0 % | |
| | Pickup input | ON/OFF | ON | <input type="checkbox"/> on <input type="checkbox"/> off <input type="checkbox"/> on <input type="checkbox"/> off |
| L | Number of pickup teeth | 30 to 280 | 160 | |
| L | Gen.rated speed | 0 to 3,000 rpm | 1,500 rpm | |
| COUNTER CONFIGURATION | | | | |
| | Configure counters | YES/NO | NO | <input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N |
| | Service interval in | 0 to 9,999 h | 300 h | |
| | Set oper.hours counter | 0 to 65,000 h | 0 h | |
| | Set start counter | 0 to 32,000 | 0 | |
| | kWh counter set in | kWh MWh | kWh | <input type="checkbox"/> kWh <input type="checkbox"/> MWh <input type="checkbox"/> kWh <input type="checkbox"/> MWh |
| | kWh counter set | 0 to 65,500 kWh/MWh | 0 kWh | |
| XPD, XPQ | Time | 00:00 to 23:59 | 00:00 | |
| XPD, XPQ | Year,month | 00 to 99,01 to 12 | 00.00 | |
| XPD, XPQ | Day/weekday | 01 to 31/1 to 7 | 00.0 | |

BPQ This parameter is only available in the BPQ Package

XPQ This parameter is only available in the XPQ Package

XPQ This parameter is only available in the XPQ Package

L This parameter may only be accessed via LeoPC1 depending on the unit

GCP-31 This parameter is only available in the GCP-31 Packages

GCP-32 This parameter is only available in the GCP-32 Packages

Appendix E. Service Options



Product Service Options



The following factory options are available for servicing Woodward equipment, based on the standard Woodward Product and Service Warranty (5-01-1205) that is in effect at the time the product is purchased from Woodward or the service is performed. If you are experiencing problems with installation or unsatisfactory performance of an installed system, the following options are available:

- Consult the troubleshooting guide in the manual.
- Contact Woodward technical assistance (see "How to Contact Woodward" later in this chapter) and discuss your problem. In most cases, your problem can be resolved over the phone. If not, you can select which course of action you wish to pursue based on the available services listed in this section.

Returning Equipment For Repair



If a control (or any part of an electronic control) is to be returned to Woodward for repair, please contact Woodward in advance to obtain a Return Authorization Number. When shipping the unit(s), attach a tag with the following information:

- Name and location where the control is installed
- Name and phone number of contact person
- Complete Woodward part numbers (P/N) and serial number (S/N)
- Description of the problem
- Instructions describing the desired repair



CAUTION

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Packing A Control

Use the following materials when returning a complete control:

- Protective caps on any connectors
- Antistatic protective bags on all electronic modules
- Packing materials that will not damage the surface of the unit
- At least 100 mm (4 inches) of tightly packed, industry-approved packing material
- A packing carton with double walls
- A strong tape around the outside of the carton for increased strength

Return Authorization Number RAN

When returning equipment to Woodward, please telephone and ask for the Customer Service Department in Stuttgart, Germany [+49 (0) 711 789 54-0]. They will help expedite the processing of your order through our distributors or local service facility. To expedite the repair process, contact Woodward in advance to obtain a Return Authorization Number, and arrange for issue of a purchase order for the unit(s) to be repaired. No work will be started until a purchase order is received.



NOTE

We highly recommend that you make arrangement in advance for return shipments. Contact a Woodward customer service representative at +49 (0) 711 789 54-0 for instructions and for a Return Authorization Number.

Replacement Parts



When ordering replacement parts for controls, include the following information:

- The part numbers P/N (XXXX-XXX) that is on the enclosure nameplate
- The unit serial number S/N, which is also on the nameplate

How To Contact Woodward



Please contact following address if you have questions or if you want to send a product for repair:

Woodward GmbH
Handwerkstrasse 29
70565 Stuttgart - Germany

Phone: +49 (0) 711 789 54-0 (8.00 - 16.30 German time)
Fax: +49 (0) 711 789 54-100
e-Mail: sales-stuttgart@woodward.com

For assistance outside Germany, call one of the following international Woodward facilities to obtain the address and phone number of the facility nearest your location where you will be able to get information and service.

| Facility | Phone number |
|-----------------|---------------------|
| USA | +1 (970) 482 5811 |
| India | +91 (129) 409 7100 |
| Brazil | +55 (19) 3708 4800 |
| Japan | +81 (476) 93 4661 |
| The Netherlands | +31 (23) 566 1111 |

You can also contact the Woodward Customer Service Department or consult our worldwide directory on Woodward's website (www.woodward.com) for the name of your nearest Woodward distributor or service facility. [For worldwide directory information, go to www.woodward.com/ic/locations.]

Engineering Services



Woodward Industrial Controls Engineering Services offers the following after-sales support for Woodward products. For these services, you can contact us by telephone, by e-mail, or through the Woodward website.

- Technical support
- Product training
- Field service during commissioning

Technical Support is available through our many worldwide locations, through our authorized distributors, or through GE Global Controls Services, depending on the product. This service can assist you with technical questions or problem solving during normal business hours. Emergency assistance is also available during non-business hours by phoning our toll-free number and stating the urgency of your problem. For technical engineering support, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference technical support.

Product Training is available on-site from several of our worldwide facilities, at your location, or from GE Global Controls Services, depending on the product. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability. For information concerning training, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference *customer training*.

Field Service engineering on-site support is available, depending on the product and location, from our facility in Colorado, or from one of many worldwide Woodward offices or authorized distributors. Field engineers are experienced on both Woodward products as well as on much of the non-Woodward equipment with which our products interface. For field service engineering assistance, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference *field service*.

Technical Assistance



If you need to telephone for technical assistance, you will need to provide the following information. Please write it down here before phoning:

Contact

Your company _____

Your name _____

Phone number _____

Fax number _____

Control (see name plate)

Unit no. and revision: P/N: _____ REV: _____

Unit type GCP- _____

Serial number S/N _____

Description of your problem

Please be sure you have a list of all parameters available. You can print this using LeoPC1. Additionally you can save the complete set of parameters (standard values) and send them to our Service department via e-mail.

We appreciate your comments about the content of our publications.
Please send comments to: stgt-documentation@woodward.com
Please include the manual number from the front cover of this publication.



Woodward
Handwerkstrasse 29 - 70565 Stuttgart - Germany
Phone +49 (0) 711 789 54-0 • Fax +49 (0) 711 789 54-100
sales-stuttgart@woodward.com

Homepage

<http://www.woodward.com/power>

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address/phone/fax/e-mail information for all locations is available on our website (www.woodward.com).